



**Count on it.**

**Parts Catalog**

**Commercial Walk-Behind Mower**

**Fixed Deck, T-Bar, Gear Drive with 36in  
TURBO FORCE® Cutting Unit**

**Model No. 30674—Serial No. 310000001 and Up**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CCW:** counter clock wise

**CW:** clockwise

**CW:** clockwise

**DEG:** degrees

**ECM:** electronic control module

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head


**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents

Engine and Exhaust Assembly.....	4
Fuel System Assembly .....	5
Frame and Transmission Assembly .....	6
Drive Wheel and Brake Assembly .....	7
Handle and Control Assembly .....	9
Wire Harness Assembly .....	10
Deck Assembly.....	11
Deck Assembly No. 110-4907 .....	12
Deflector Assembly No. 119-6530.....	13
Sheave, Spindle and Blade Assembly .....	14
Idler Assembly .....	15
Caster Assembly .....	16
Attachments and Accessories .....	17

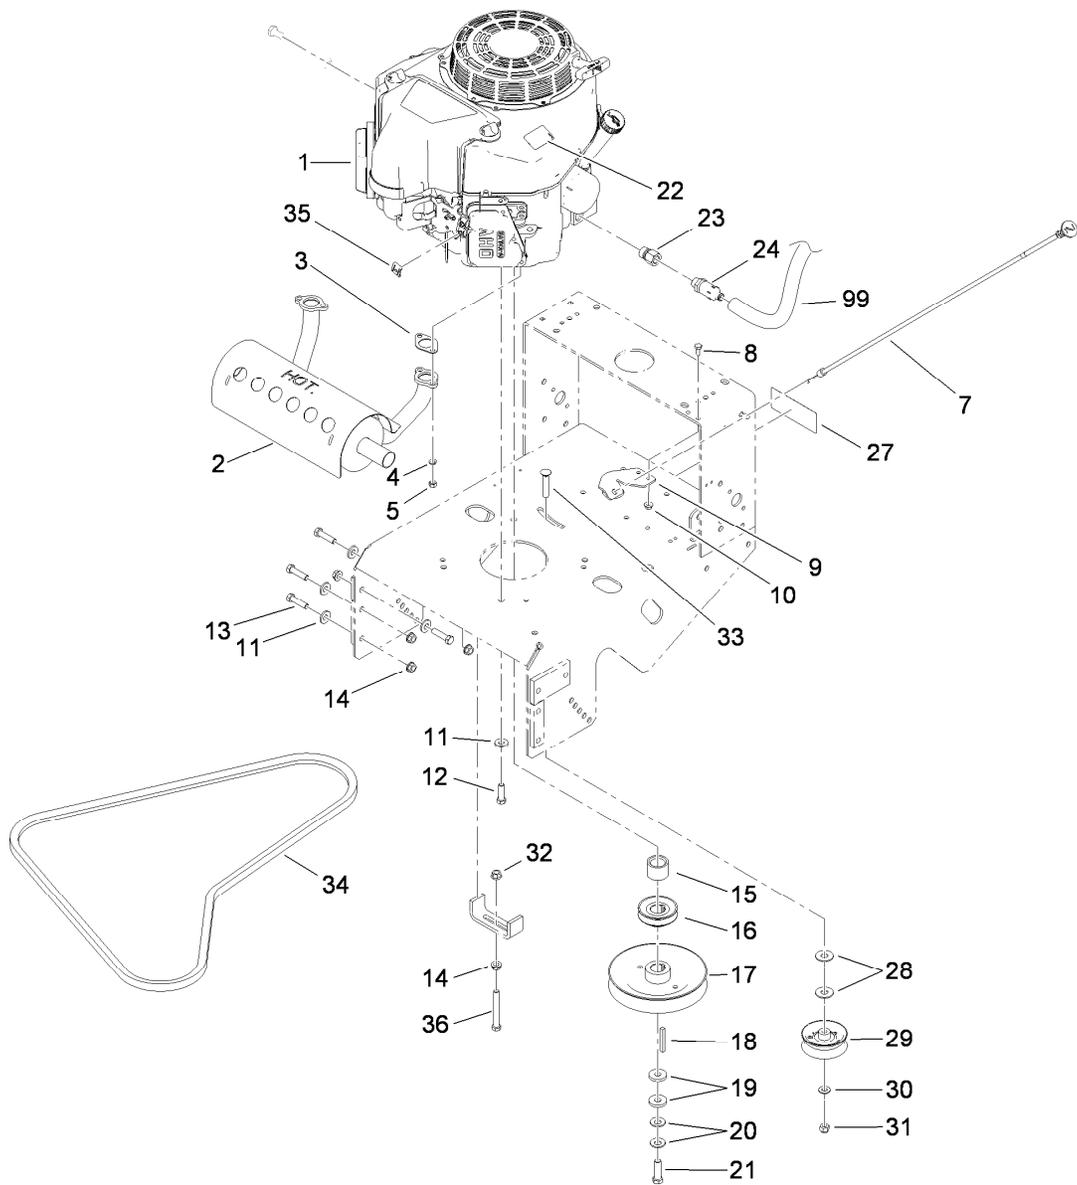


## Engine and Exhaust Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs481V-As05 ●■	19	1-373034	2	Washer
2	116-2970	1	Muffler-Horizontal, Offset	20	1-603610	2	Washer-Spring
3	1-653313	2	Gasket-Exhaust	21	3212-6	1	Screw-HH
4	114-3550	4	Washer-Lock, Spring	22	106-0699	1	Decal-Warning
5	114-3549	4	Nut	23	103-1966	1	Adapter
7	103-1796	1	Cable-Choke	24	92-6877	1	Valve-Drain, Oil
8	321-3	2	Screw-HH	27	98-0776	1	Decal-Caution
9	103-1797-01	1	Bracket-Cable, Choke	28	3256-5	2	Washer-Flat
10	32128-33	2	Nut-HF	29	1-323285	1	Pulley-Idler, Flat
11	98-5975	12	Washer-Belleville	30	3256-24	1	Washer-Flat
12	323-7	4	Screw-HH	31	3296-39	1	Nut-Lock, NI
13	323-8	8	Screw-HH	32	32128-21	1	Nut-HF
14	3290-357	9	Nut-HHF, Whiz	33	3231-6	1	Screw-CARR
15	1-633453	1	Spacer-Clutch	34	110-4886	1	Belt-V
16	103-1666	1	Sheave-Transmission	35	81-1690	1	Clamp-Cable
17	110-4891	1	Pulley ASM	36	323-14	1	Screw-HH
18	103-4177	1	Key	99	103-1964	1	Hose-Drain, Oil


● Not serviced separately

■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

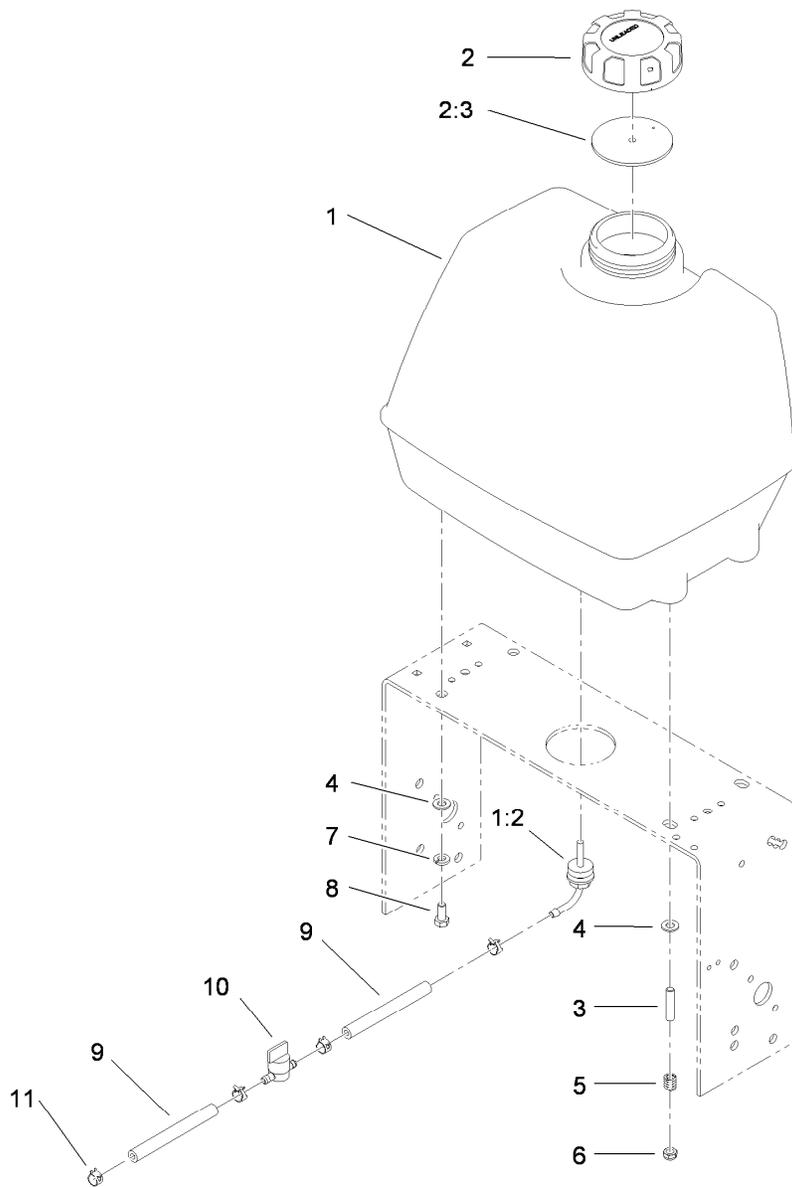


## Fuel System Assembly

Ref.	Part Number	Qty.	Description
1	106-0730	1	Fuel Tank ASM
1:2	103-2605	1	Fitting-Fuel, Bulkhead
2	88-3980	1	Gas Cap ASM
2:3	88-4010	1	Gasket-Cap, Gas
3	1-633023	2	Stud
4	3256-23	4	Washer-Flat
5	1-633349	2	Spring-Tank, Fuel
6	3296-47	2	Nut-Lock, NI
7	1-805005	2	Washer-Lock
8	322-3	2	Screw-HH
9	109-0650	2	Hose-Fuel
10	1-603770	1	Valve-Fuel
11	2412-98	4	Clamp

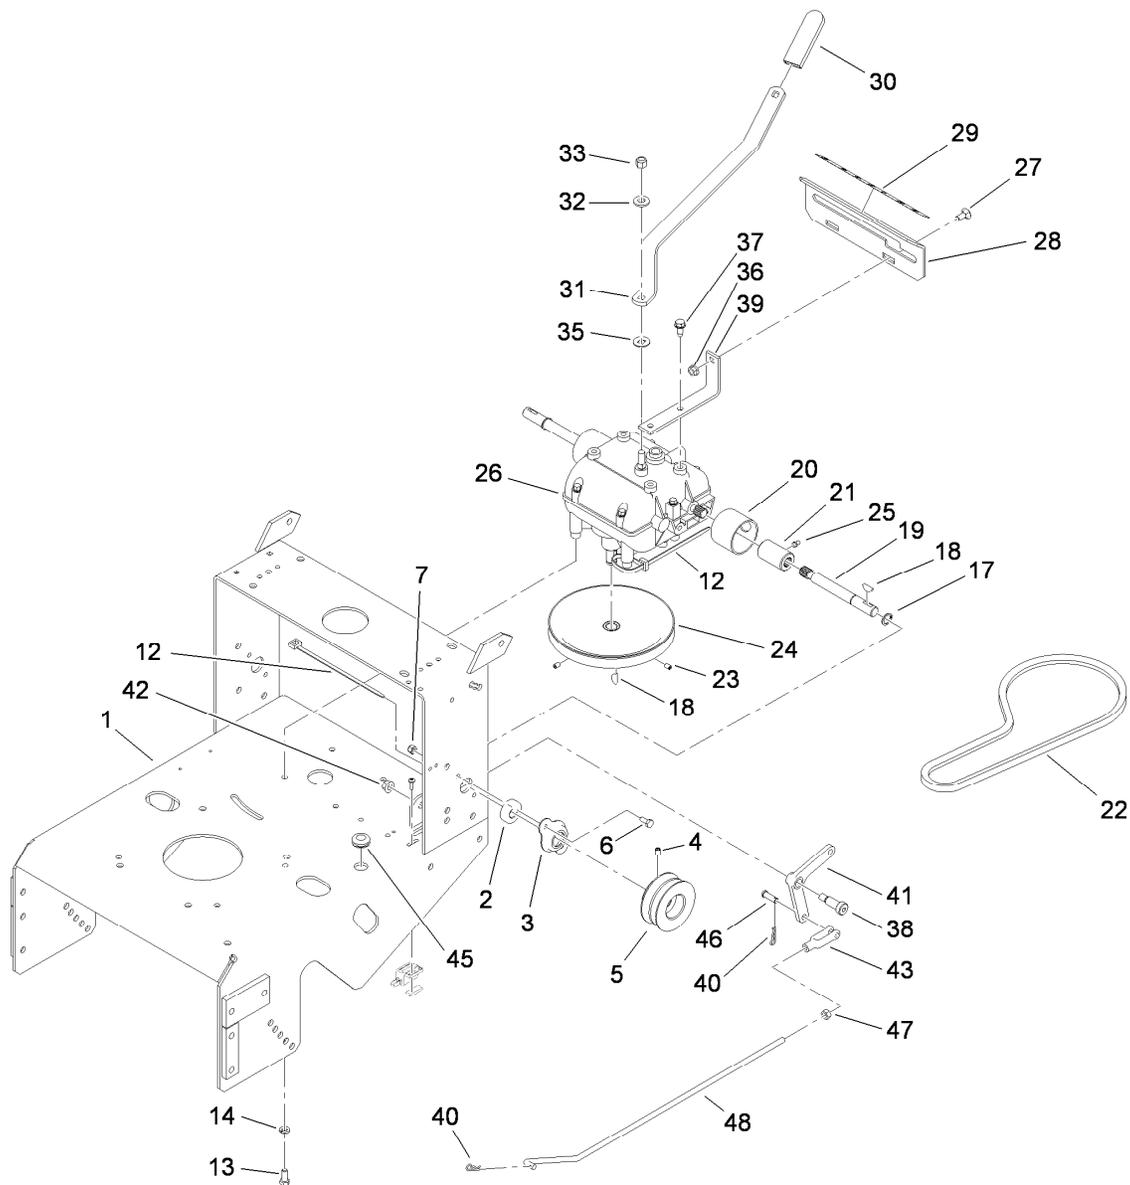

## Frame and Transmission Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	117-3521-01	1	Gear Frame ASM	27	3230-1	2	Bolt-CARR
2	1-323252	2	Bearing-Shaft	28	1-323387-03	1	Plate-Shift
3	1-323254	2	Flange-Output	29	98-3256	1	Decal-Speed, Ground
4	1-803310	2	Screw-Set	30	1-303020	1	Grip-Lever
5	103-6511	2	Sheave-Transmission	31	98-3274-03	1	Lever-Shift
6	321-3	4	Screw-HH	32	98-5975	1	Washer-Belleville
7	3296-42	4	Nut-Lock, NI	33	3296-6	1	Nut-Lock
12	1-303335	2	Tie-Plastic	35	1-323379	1	Washer
13	322-3	4	Screw-HH	36	32128-20	2	Nut-HF
14	1-805005	4	Washer-Lock	37	9264964	4	Screw-HWH, Thread Cut
17	32151-62	2	Ring-Retaining	38	1-603403	1	Bolt-Shoulder
18	3257-5	3	Key-Woodruff	39	1-323389-03	2	Bracket-Plate, Shift
19	1-323502	2	Shaft-Transmission	40	1-806003	2	Pin-Cotter, Hair
20	51-4220	2	Guard-Coupler	41	1-303186	1	Bellcrank
21	1-323680	2	Coupler	42	32128-21	1	Nut-HF
22	1-323630	1	V-Belt	43	1-303105	1	Yoke-Adjustable
23	3245-41	2	Screw-HSH	45	1-543296	1	Grommet
24	1-323278	1	Sheave-Transmission	46	1-808280	1	Pin-Clevis
25	302-19	2	Fitting-Grease	47	3219-2	1	Nut-Hex
26	1-323500	1	Transmission	48	1-323303	1	Linkage-Arm

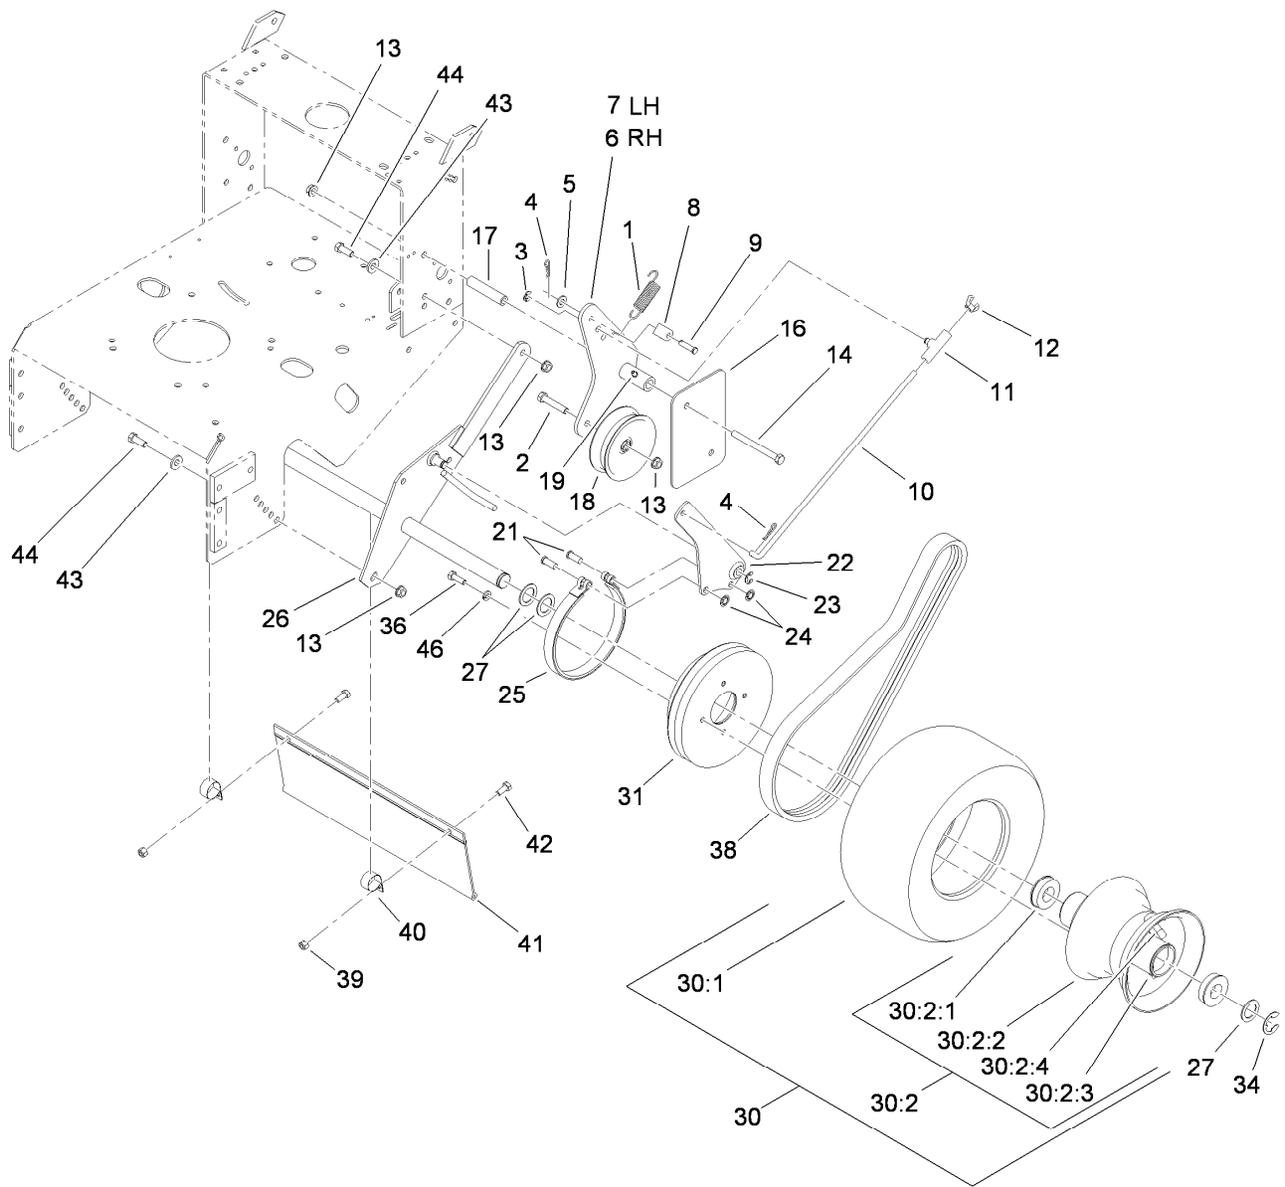

## Drive Wheel and Brake Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	98-3273	2	Spring-Extension	22	1-322209-03	2	Brake Arm ASM
2	323-10	2	Screw-HH	23	32120-47	2	Ring-Retaining, External
3	32151-47	2	Ring-Retaining	24	1-803051	4	Nut-Push
4	1-806003	4	Pin-Cotter, Hair	25	1-323595	2	Band-Brake
5	3256-23	2	Washer-Flat	26	1-322212-03	1	Axle ASM
6	110-4925-03	1	RH Idler Arm ASM	27	1-543436	8	Washer-Spacer
7	110-4926-03	1	LH Idler Arm ASM	27	1-523157	6	Washer-Spacer
8	74-0521	2	Fitting-Rod	30	1-323719	2	Wheel And Tire ASM
9	283-6	2	Pin-Clevis	30:1	1-323720	1	Tire-Turfmaster
10	1-323296	2	Rod-Brake	30:2	1-323328	1	Wheel And Hub ASM
11	110-5866	2	Swivel-Brake	30:2:1	1-323329	2	Bearing-Flanged
12	1-513959	2	Wingnut-Nylock	30:2:2		1	Rim ASM ●
13	3290-357	10	Nut-HHF, Whiz	30:2:3		1	Fitting-Grease ●
14	323-16	4	Screw-HH	30:2:4		1	Stem-Valve ●
16	98-5131-01	2	Shield-Wheel, Drive	31	109-4359	2	Drum And Sheave ASM
17	1-323694	4	Spacer-Shield	34	1-808519	2	Ring-Snap
18	1-323634	2	Idler-Drive, Wheel	36	322-5	8	Screw-HH
19	302-19	2	Fitting-Grease	38	1-323631	2	V-Belt
21	1-323307	4	Pin-Clevis	39	3296-29	2	Nut-Lock, NI

● Not serviced separately

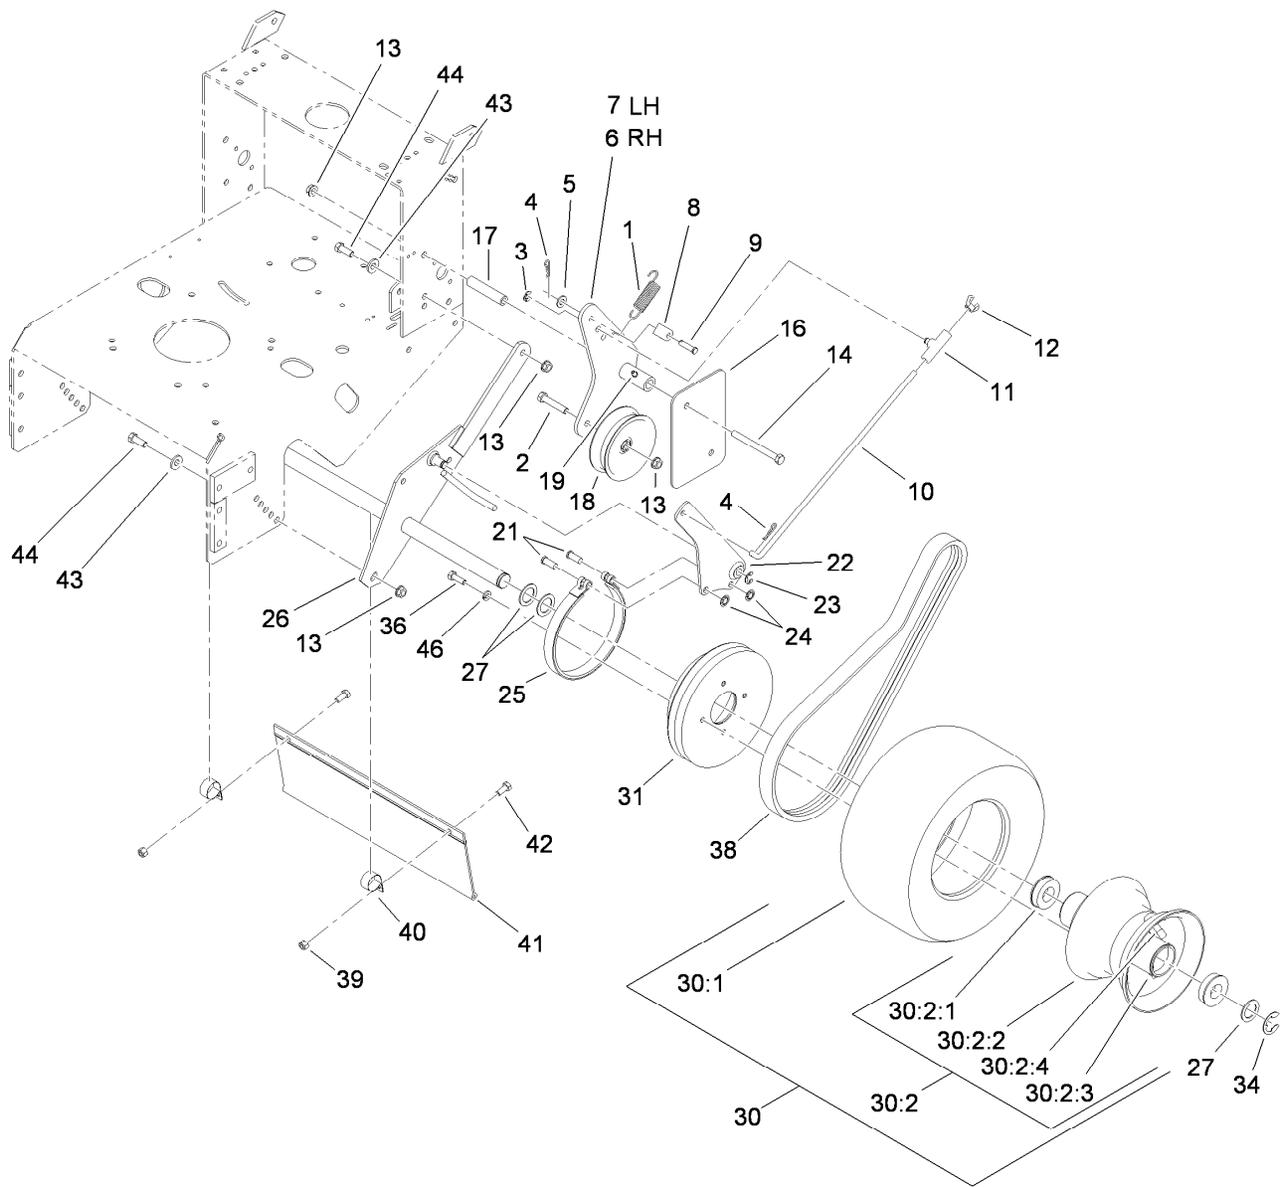


## Drive Wheel and Brake Assembly (continued)

Ref.	Part Number	Qty.	Description
40	2412-104	2	R-Clamp
41	98-3259	1	Shield-Trailing
42	322-3	2	Screw-HH


Ref.	Part Number	Qty.	Description
43	98-5975	4	Washer-Belleville
44	323-6	4	Screw-HH
46	1-805005	8	Washer-Lock

● Not serviced separately

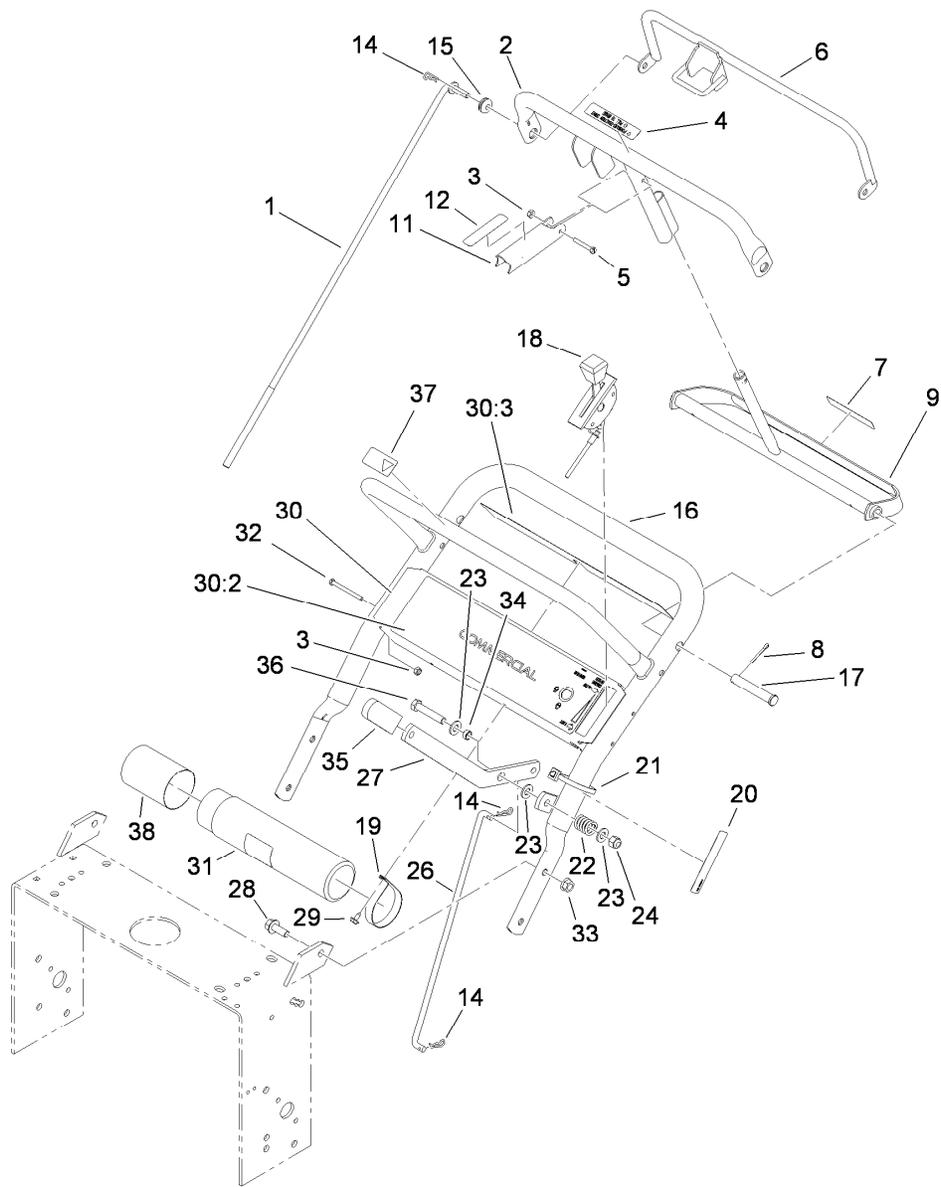


## Handle and Control Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	98-3282	2	Rod-Control	22	1-303160	1	Spring-Compression
2	95-5522-03	1	Control Bar ASM	23	3256-24	3	Washer-Flat
3	3296-2	5	Nut-Lock, NI	24	3296-39	1	Nut-Lock, NI
4	82-2290	1	Decal	26	98-3279	1	Linkage-Drive, Blade
5	32105-1	1	Screw-SHH	27	98-3287-03	1	Lever-Engagement, Blade
6	82-7680-03	1	Bail ASM	28	3234-11	4	Screw-HHF
7	82-2280	1	Decal	29	32104-76	2	Screw
8	3272-11	2	Pin-Cotter	30	110-6905	1	Control Panel ASM
9	99-8501-03	1	Control-Pivot	30:2	110-6916	1	Decal-Panel, Control
11	98-3261-03	1	Lever-Brake, Parking	30:3	105-0884	1	Decal-Danger
12	98-3266	1	Decal	31	104-7050	1	Tube-Manual
14	1-806003	3	Pin-Cotter, Hair	32	32105-14	4	Screw-SHH
15	237-141	2	Grommet-Rubber	33	32128-21	4	Nut-HF
16	98-3267-03	1	Upper Handle ASM	34	99-8509	1	Spacer
17	283-55	2	Pin-Clevis	35	1-303020	1	Grip-Lever
18	119-6539	1	Cable-Throttle	36	323-10	1	Screw-HH
19	2412-120	2	R-Clamp	37	98-4387	1	Decal-Protection, Ear
20	95-5537	1	Decal-Engage, Deck	38	104-7048	1	Cap-Housing
21	1-303335	1	Tie-Plastic				

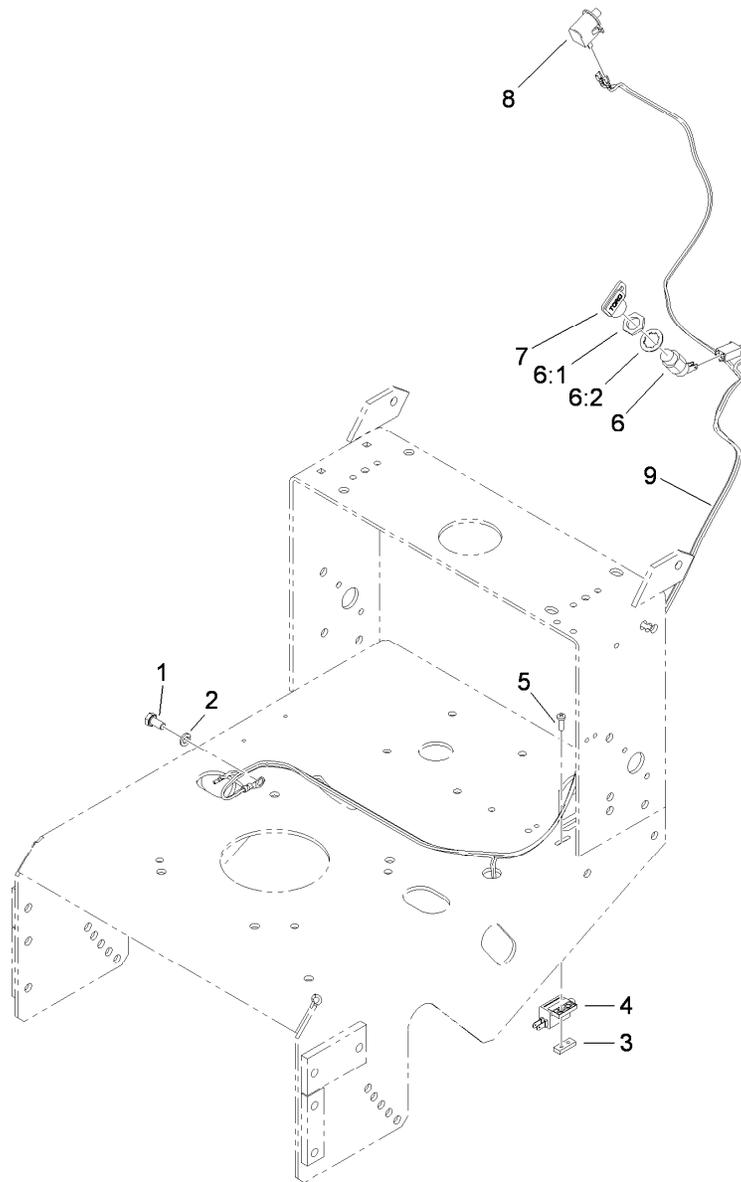


## Wire Harness Assembly

Ref.	Part Number	Qty.	Description
1	33114-016	1	Screw-HH
2	3253-4	1	Washer-Lock
3	1-633181	1	Plate-Tapped
4	1-513152	1	Switch-Closed, Normally
5	3290-500	2	Screw-PPH
6	29-5560	1	Switch-On / Off
6:1	218-461	1	Nut-HH
6:2	3254-5	1	Washer-Tooth, Internal
7	63-8360	1	Key-Ignition
8	740275	1	Switch-Seat
9	119-6535	1	Harness-Wire

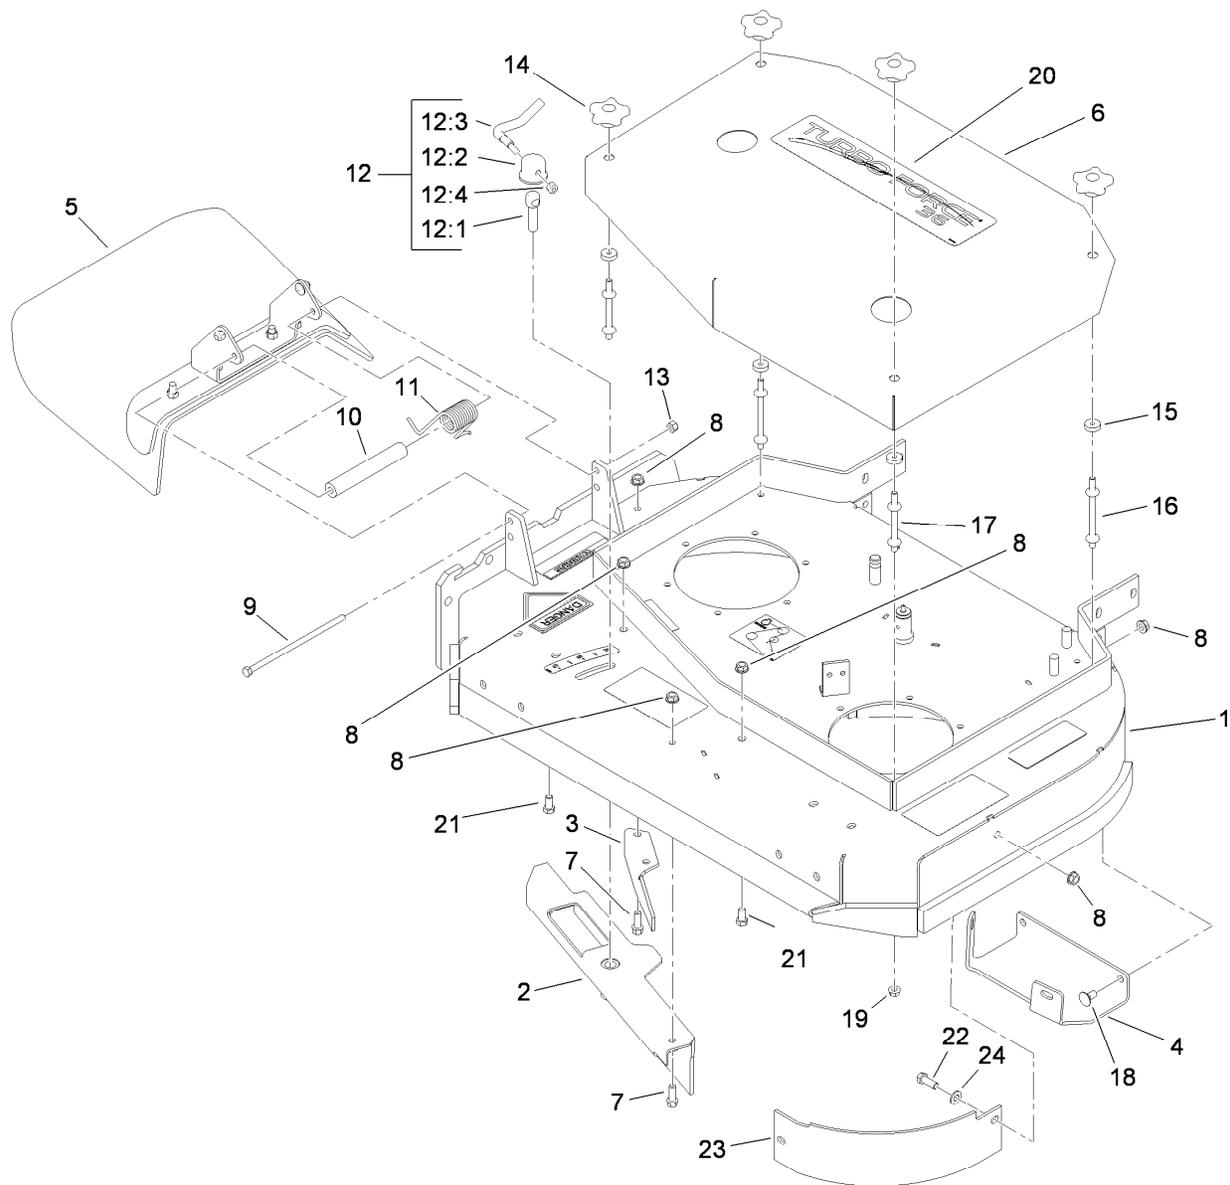

## Deck Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	110-4907	1	Deck ASM	12:3	106-3241	1	Lever-Lock
2	110-2031-03	1	Baffle-Adjustable	12:4	3296-29	1	Nut-Lock, NI
3	110-0754-01	1	Baffle-Discharge	13	3296-29	1	Nut-Lock, NI
4	110-2037-01	1	Plate-Skid	14	106-4161	4	Knob-Handle
5	119-6530	1	Deflector ASM	15	1-323417	4	Washer
6	110-2036-01	1	Cover-Deck	16	1-303536	2	Stud-Shield, Belt (Long)
7	92-1624	3	Screw-HWH	17	1-303537	2	Stud-Shield, Belt (Short)
8	3290-357	10	Nut-HHF, Whiz	18	3231-1	4	Screw-CARR
9	322-50	1	Screw-HH	19	32128-20	4	Nut-HF
10	105-4622	1	Spacer	20	112-9710	1	Decal
11	104-8554	1	Spring-Torsion	21	323-4	2	Screw-HH
12	107-1664	1	Lever ASM	22	323-6	1	Screw-HH
12:1	106-3239	1	Screw-Lock	23	110-6903-03	1	Baffle-Front, LH
12:2	107-1644	1	Cap-Lock	24	3256-24	1	Washer-Flat

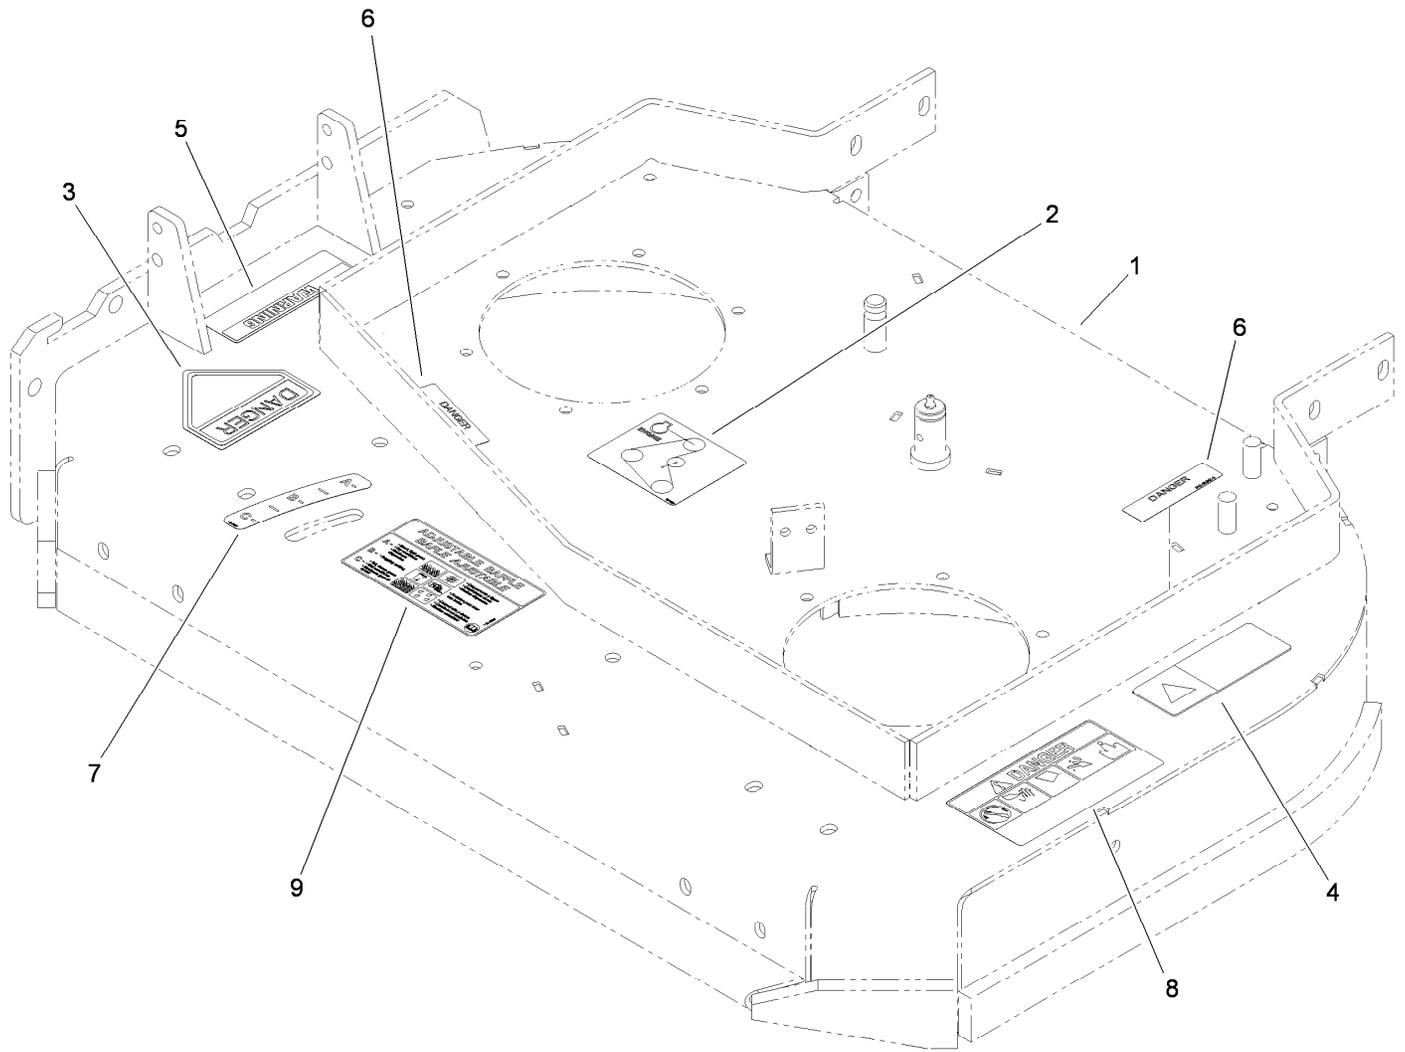

## Deck Assembly No. 110-4907


Ref.	Part Number	Qty.	Description
1		1	36 Inch Deck ASM ●
2	98-3296	1	Decal-Routing, Belt
3	43-8480	1	Decal-Danger
4	98-5130	1	Decal-Torque, Bolt
5	104-8569	1	Decal-Warning
6	98-5954	2	Decal-Cover, Missing
7	110-2067	1	Decal-Setting, Baffle
8	66-1340	1	Decal-Danger, Thrown Object
9	110-2068	1	Decal-Adjustment, Baffle

● Not serviced separately

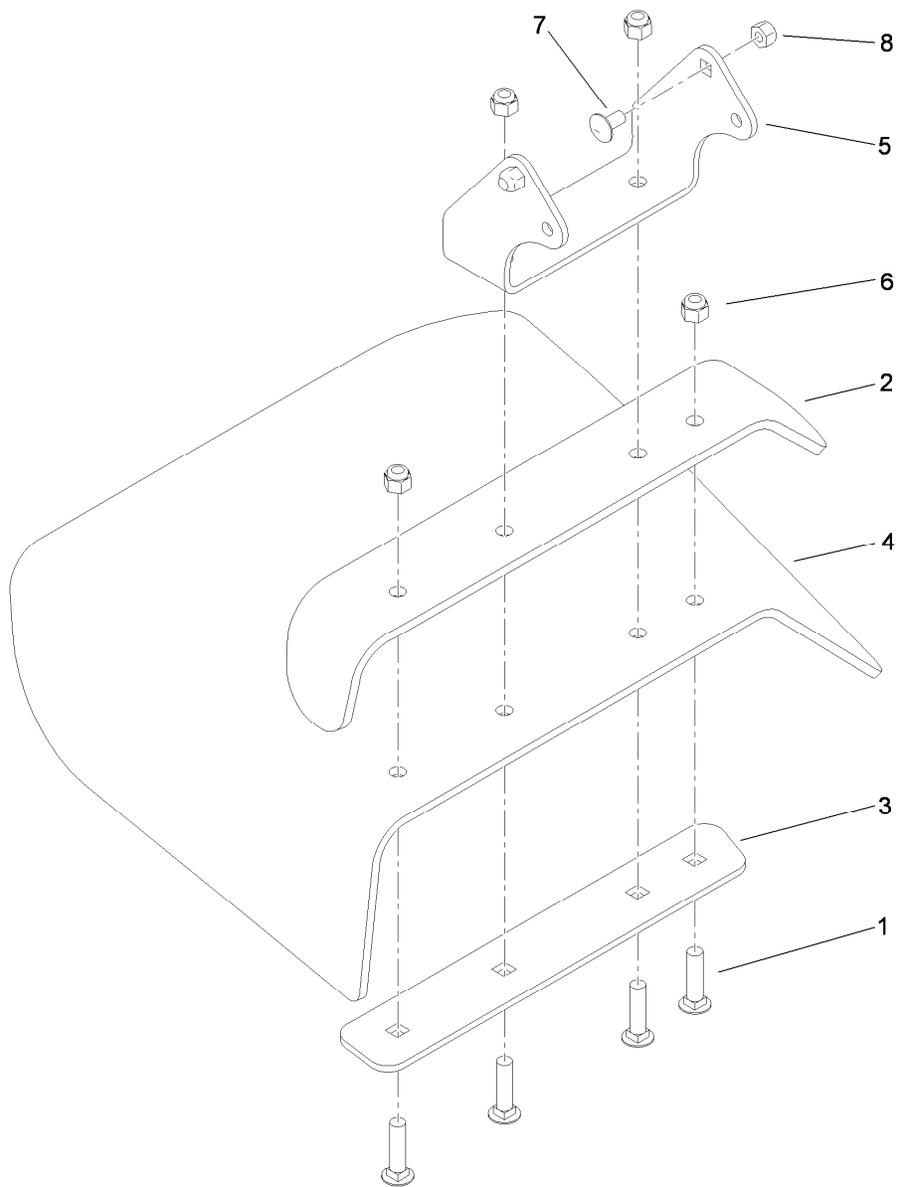

## Deflector Assembly No. 119-6530


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-4	4	Screw-CARR
2	110-0792-01	1	Deflector
3	110-0793-03	1	Strap-Discharge
4	110-0791	1	Deflector-Rubber
5	119-6532-01	1	Bracket-Mounting, Deflector
6	3296-39	4	Nut-Lock, NI
7	3230-18	2	Screw-CARR
8	3296-29	2	Nut-Lock, NI

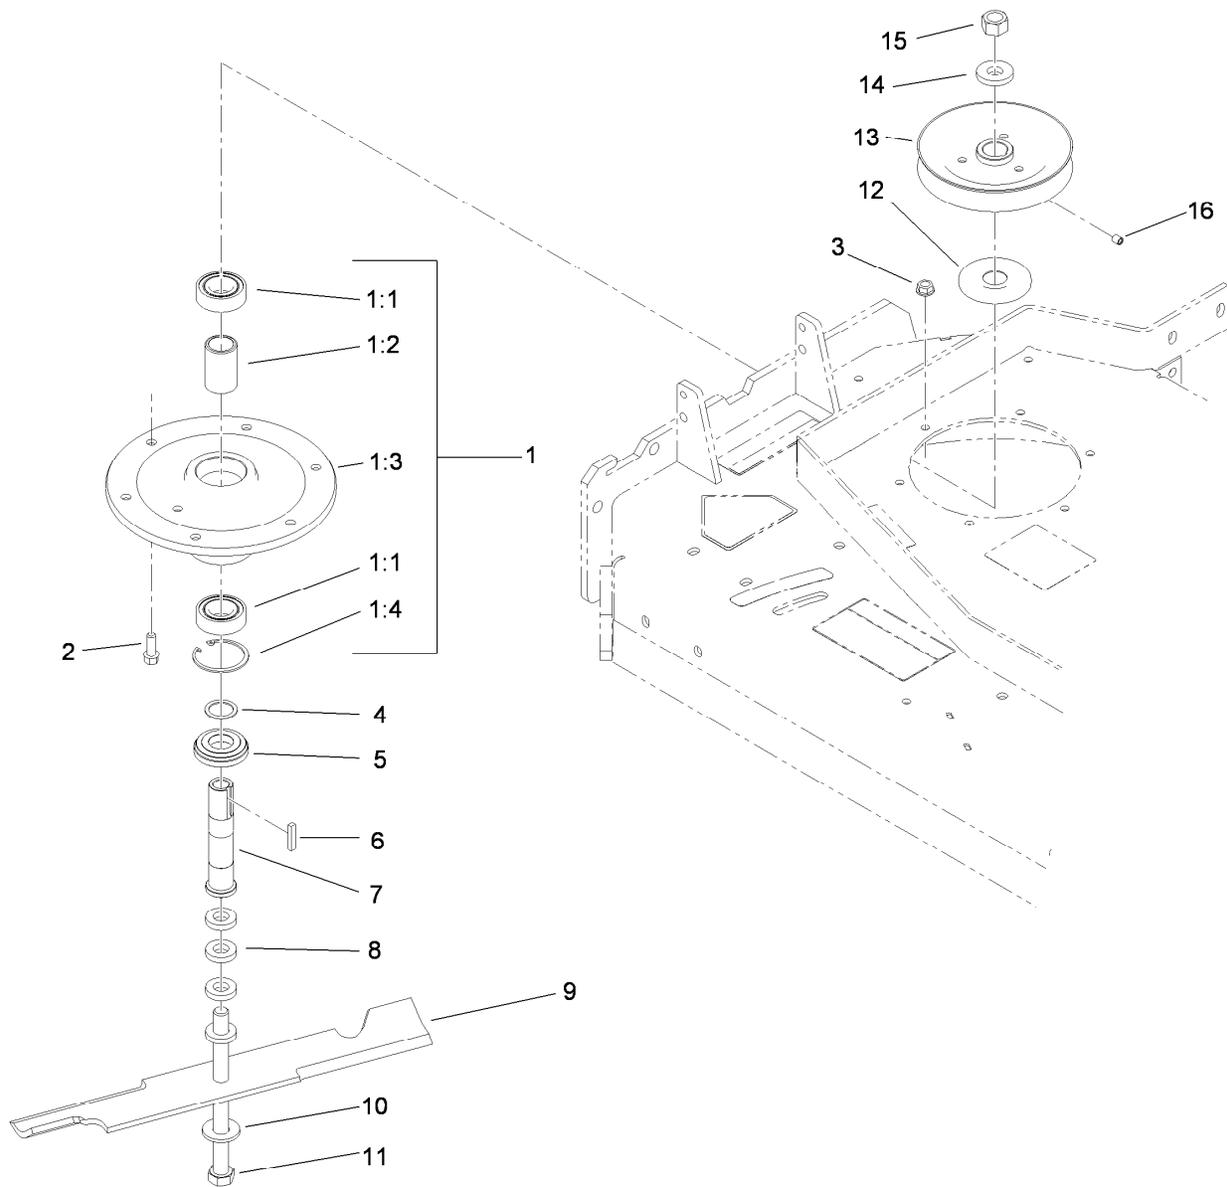

## Sheave, Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	108-6697	2	Spindle Housing ASM
1:1	110-2118	2	Bearing
1:2	110-2116	1	Spacer-Bearing
1:3	108-6694	1	Housing-Spindle
1:4	32120-8	1	Ring-Snap
2	92-1624	12	Screw-HWH
3	3290-357	12	Nut-HHF, Whiz
4	110-4888	2	Washer-Spacer
5	103-2535	2	Spacer-Guard, Bottom
6	1-807267	2	Key

Ref.	Part Number	Qty.	Description
7	1-323529	2	Tube-Spindle, Short
8	1-323539	8	Spacer
9	105-7781-03	2	Blade-18 Inch (Hi Flow)
10	1-513208	2	Washer-Spring
11	1-800861	2	Screw-Cap, HH
12	103-1330	2	Guard-Bearing, Top
13	1-403183	2	Sheave
14	1-323339	2	Washer-Retainer, Sheave
15	3219-6	2	Nut-Hex
16	1-803310	2	Screw-Set

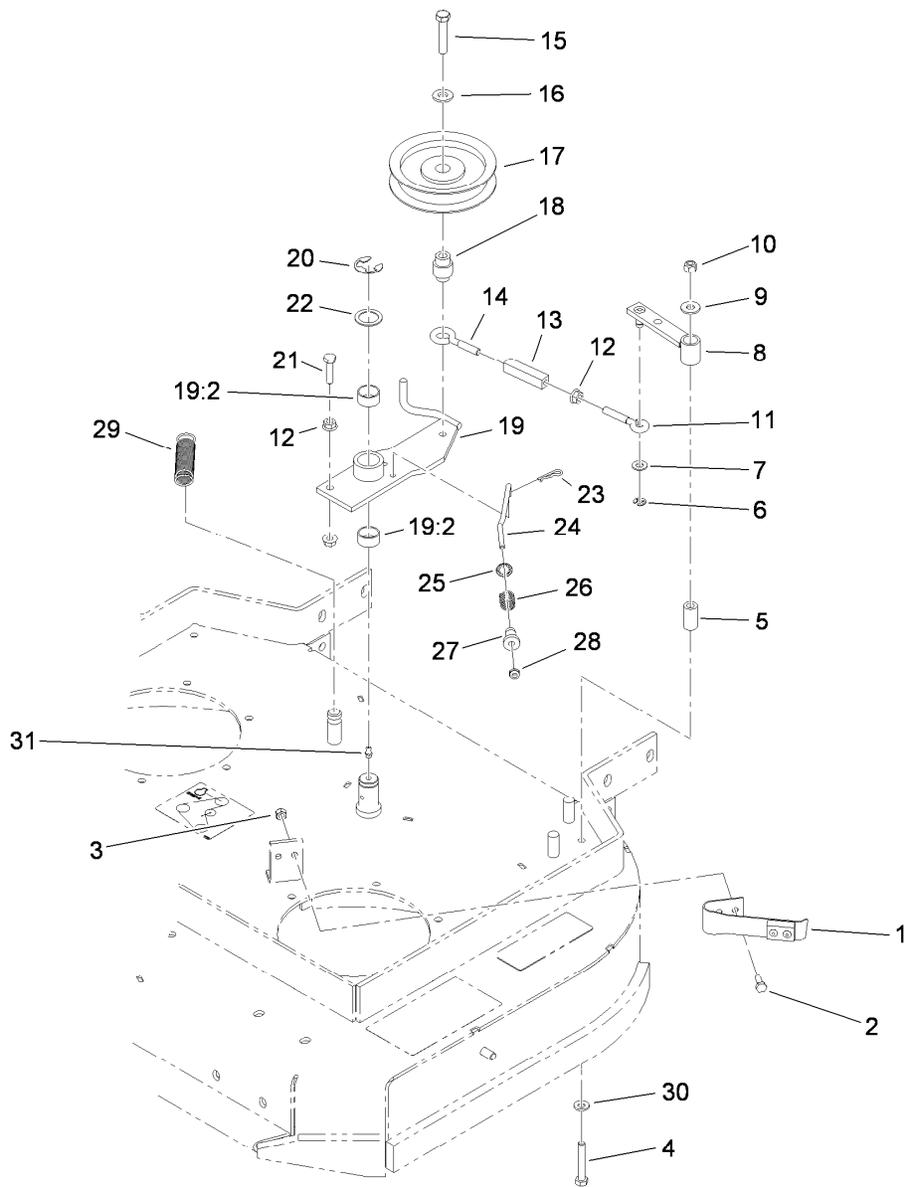

## Idler Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-324372	1	Pad And Spring ASM	17	1-603843	1	Pulley-Idler
2	321-4	2	Screw-HH	18	1-303434	1	Bushing-Engagement
3	3296-42	2	Nut-Lock, NI	19	103-3600	1	Idler Arm ASM
4	322-10	1	Screw-HH	19:2	1-323729	2	Sleeve-Bearing
5	1-403179	1	Tube-Pivot	20	32151-103	1	Ring-Retaining, EXT
6	32120-35	1	Ring-Retaining, EXT	21	322-6	1	Screw-HH
7	3256-23	1	Washer-Flat	22	1-303352	1	Washer-Spindle
8	1-322235	1	Arm-Assist	23	1-806003	1	Pin-Cotter, Hair
9	3256-3	1	Washer-Flat	24	1-323715	1	Rod-Brake
10	3296-29	1	Nut-Lock, NI	25	1-323748	1	Ring-Push On
11	1-303238	1	Eyebolt-Thread, RH	26	1-323747	1	Spring-Compression
12	32128-20	3	Nut-HF	27	1-323746	1	Spacer-Flanged
13	1-303236	1	Body-Turnbuckle	28	3296-56	1	Nut-Lock, NI
14	1-303348	1	Eyebolt-Thread, LH	29	1-323071	1	Spring-Extension
15	702809	1	Screw-HH	30	1-303334	1	Washer-Spring
16	98-5975	1	Washer-Belleville	31	302-19	2	Fitting-Grease

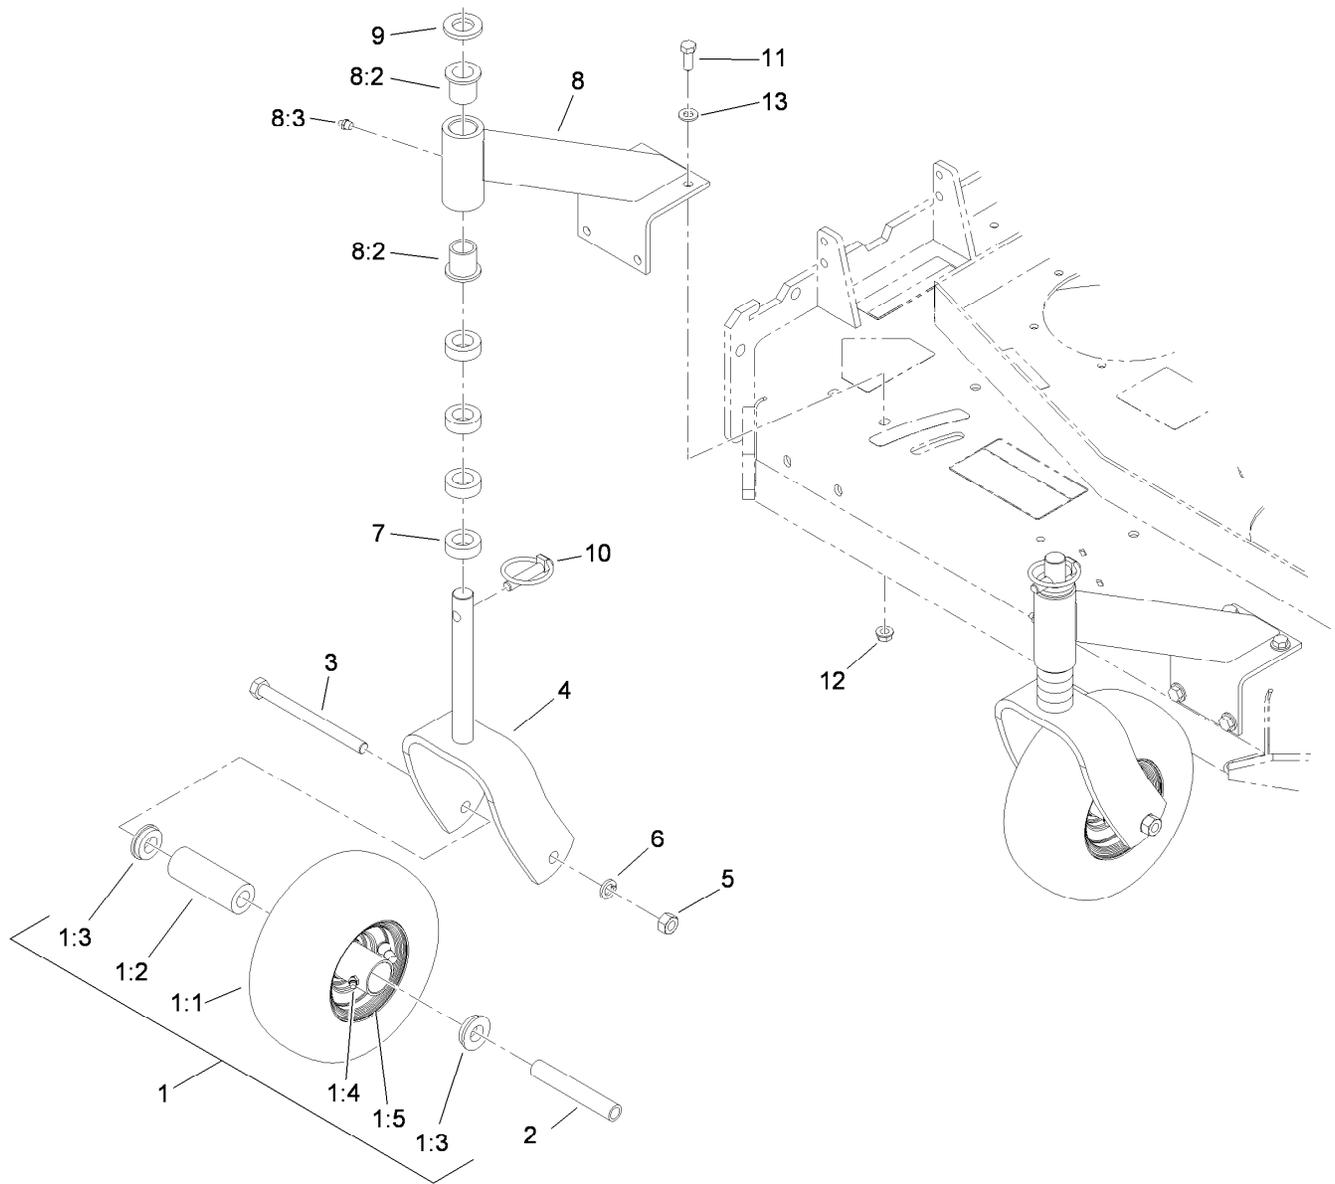

## Caster Assembly

Ref.	Part Number	Qty.	Description
1	110-5023	2	Wheel And Tire ASM
1:1		1	Tire ●
1:2	1-513809	1	Bearing
1:3	1-513810	2	Bushing
1:4	302-61	1	Zerk
1:5		1	Wheel ●
2	1-513547	2	Spacer
3	325-20	2	Screw-HH
4	1-322145-01	2	Fork
5	3217-9	2	Nut-HH

Ref.	Part Number	Qty.	Description
6	3253-7	2	Washer-Lock
7	1-303314	8	Spacer-Caster
8	110-2130	2	Support ASM
8:2	1-303514	2	Bearing-Flanged
8:3	302-52	1	Fitting-Grease
9	1-513338	2	Washer-Flat
10	1-809020	2	Pin
11	323-6	8	Screw-HH
12	3290-357	8	Nut-HHF, Whiz
13	3256-24	8	Washer-Flat

● Not serviced separately

# Attachments and Accessories

## For 30674 Commercial Walk-Behind Mower, Fixed Deck, T-Bar, Gear Drive with 36in TURBO FORCE Cutting Unit

<b>Product Name</b>	<b>Model/Part</b>
Blade-Recycler, 18 Inch.....	105-7779-03
Blade-Med Flow, 18 Inch .....	105-7794-03
Blade-Low Flow, 18 Inch.....	105-7795-03
Blade-Atomic, 18 Inch.....	105-7796-03
Blade-Hi-Flow, 18 Inch (6 Pack).....	108-1117
Blade-Atomic, 18 Inch (6 Pack).....	108-1118
Blade-Lo-Flow, 18 Inch (6 Pack).....	110-0406
Blade-Recycler, 18 Inch (6 Pack).....	110-0408
Blade-Med-Flow, 18 Inch (6 Pack).....	110-0409
36 Inch Bagger Enhancement Kit .....	110-2026
36 Inch Recycler Kit.....	110-2080
Weight Kit .....	110-2085
Operator-Controlled Discharge Chute Kit .....	115-4190
Soft Bag (3 Bushel).....	30104
Sulky.....	30109

**Notes:**

**Notes:**



**Count on it.**