Form No. 3364-521 Rev A

TORO®

Count on it.

Parts Catalog

# Commercial Walk-Behind Mower, Floating Deck, T-Bar, Gear Drive

## with 48in TURBO FORCE® Cutting Unit

**Model No. 39078—Serial No. 310000001 and Up**

# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

**Understanding Reference Numbers**

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

**Service Assembly Reference Numbers**

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

**Reference Numbers Indicating Quantity**

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head

**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head


© 2010—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420



Contact us at www.Toro.com.
Printed in the USA.
All Rights Reserved

# Contents

Engine and Clutch Assembly . . . . . 4
Power-Take-Off Idler and Weight Assembly . . . . . 5
Fuel System Assembly . . . . . 6
Lower Control Assembly . . . . . 7
Transmission Drive Assembly . . . . . 8
Wheel Drive and Brake Assembly . . . . . 9
Handle Assembly . . . . . 10
Control Panel Assembly . . . . . 11
Carrier Frame Assembly . . . . . 12
Deck Drive and Baffle Assembly . . . . . 13
Deck Assembly No. 112-7082 . . . . . 15
Spindle Assembly No. 110-0728 . . . . . 16
Spindle Assembly No. 110-0729 . . . . . 17
Deck Assembly . . . . . 18
Deflector Assembly No. 110-0758 . . . . . 19
Attachments and Accessories . . . . . 20

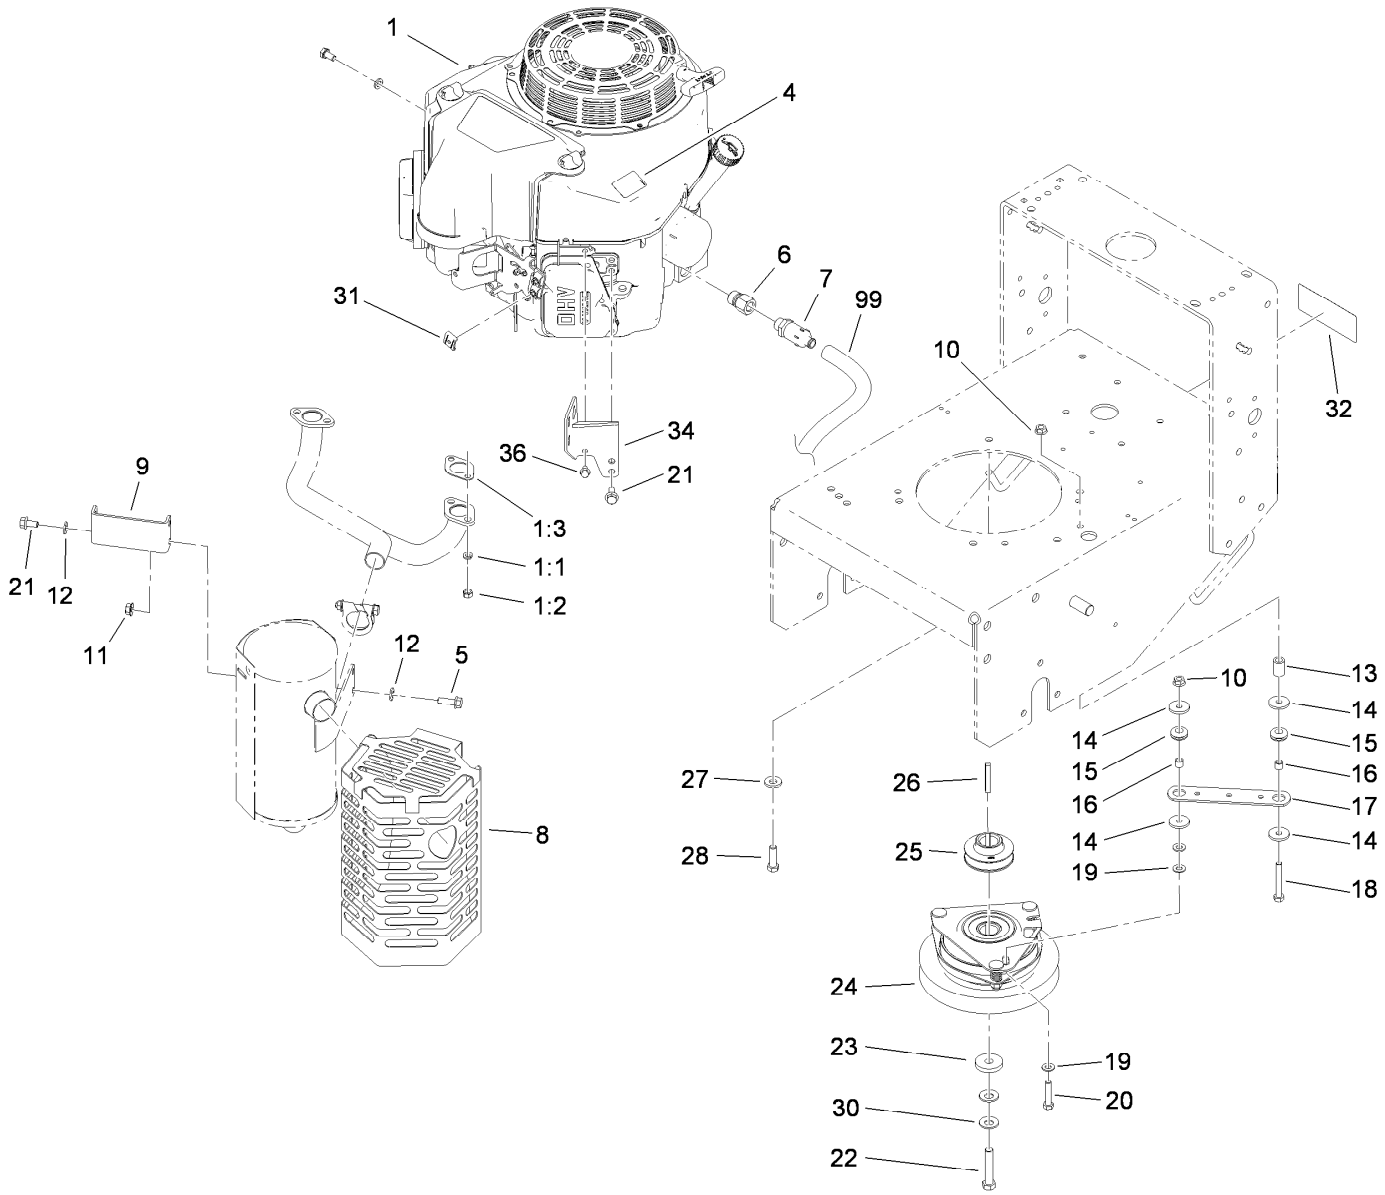



# Engine and Clutch Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | | 1 | Engine-Kawasaki, Fs541V-As11 ●■ |
| 1:1 | 114-3550 | 4 | Washer-Lock, Spring |
| 1:2 | 114-3549 | 4 | Nut |
| 1:3 | 1-653313 | 2 | Gasket-Exhaust |
| 4 | 106-0699 | 1 | Decal-Warning |
| 5 | 33104-025 | 2 | Screw-HHF |
| 6 | 103-1966 | 1 | Adapter |
| 7 | 92-6877 | 1 | Valve-Drain, Oil |
| 8 | 119-3629-03 | 1 | Muffler Shield ASM |
| 9 | 119-3635-03 | 1 | Bracket-Shield, Muffler |
| 10 | 32128-20 | 2 | Nut-HF |
| 11 | 117-1350 | 4 | Nut-HF, Lock |
| 12 | 1-303334 | 4 | Washer-Spring |
| 13 | 104-6373 | 1 | Tube-Retainer |
| 14 | 1-613235 | 4 | Washer |
| 15 | 1-633630 | 2 | Grommet-Brake |
| 16 | 1-633545 | 2 | Spacer |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 1-633543-03 | 1 | Strap-Clutch, Brake |
| 18 | 322-11 | 1 | Screw-HH |
| 19 | 3256-23 | 3 | Washer-Flat |
| 20 | 322-7 | 1 | Screw-HH |
| 21 | 33104-016 | 4 | Screw-HHF |
| 22 | 3212-9 | 1 | Screw-HH |
| 23 | 107-4136 | 1 | Washer |
| 24 | 105-2635 | 1 | Clutch / Brake ASM |
| 25 | 107-4112 | 1 | Pulley-Drive |
| 26 | 608006 | 1 | Key-Square |
| 27 | 98-5975 | 4 | Washer-Belleville |
| 28 | 323-7 | 4 | Screw-HH |
| 30 | 1-603610 | 2 | Washer-Spring |
| 31 | 81-1690 | 1 | Clamp-Cable |
| 32 | 98-0776 | 1 | Decal-Caution |
| 34 | 117-8561-03 | 1 | Bracket-Muffler |
| 36 | 33103-012 | 1 | Screw-HHF |
| 99 | 103-1964 | 1 | Hose-Drain, Oil |

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

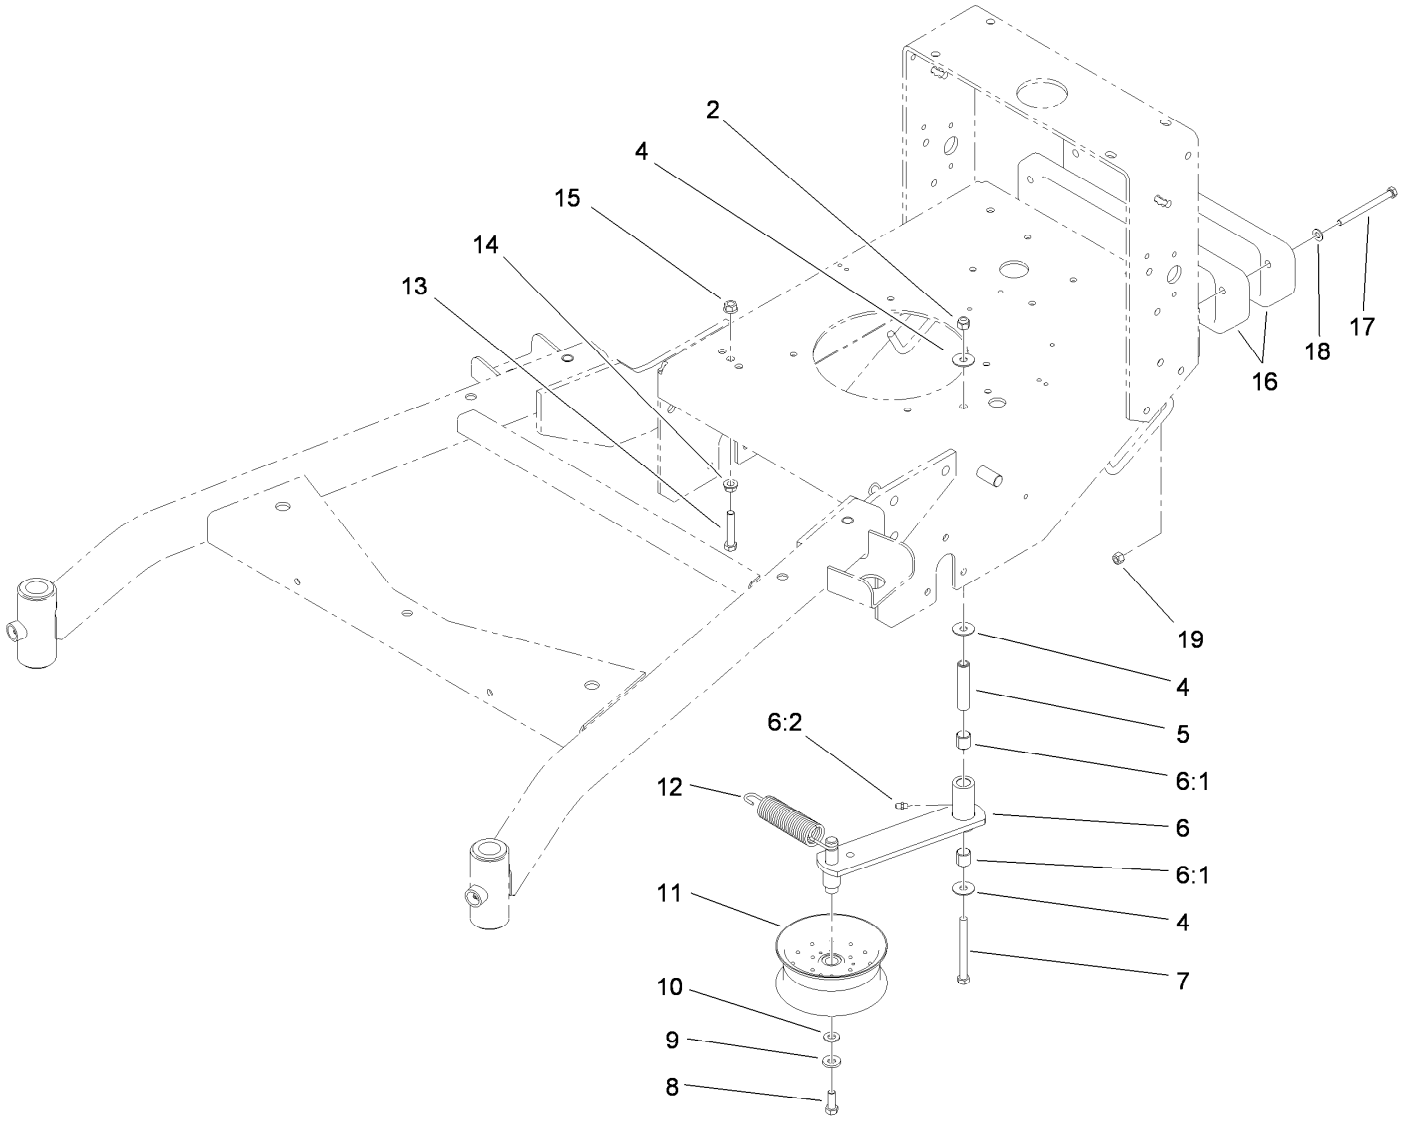


# Power-Take-Off Idler and Weight Assembly

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 2 | 3296-39 | 1 | Nut-Lock, NI |
| 4 | 52-2860 | 3 | Washer |
| 5 | 104-6377 | 1 | Tube-Idler |
| 6 | 108-2734 | 1 | Idler Arm ASM |
| 6:1 | 1-513034 | 2 | Sleeve-Bearing |
| 6:2 | 302-5 | 1 | Fitting-Grease |
| 7 | 323-42 | 1 | Screw-HH |
| 8 | 323-6 | 1 | Screw-HH |
| 9 | 98-5975 | 1 | Washer-Belleville |
| 10 | 3256-24 | 1 | Washer-Flat |


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 11 | 1-413099 | 1 | Pulley-Idler |
| 12 | 105-8443 | 1 | Spring-Extension |
| 13 | 323-10 | 1 | Screw-HH |
| 14 | 3290-357 | 1 | Nut-HHF, Whiz |
| 15 | 32128-21 | 1 | Nut-HF |
| 16 | 112-7059-01 | 2 | Weight-Cast |
| 17 | 322-13 | 2 | Screw-HH |
| 18 | 3256-23 | 2 | Washer-Flat |
| 19 | 3296-29 | 2 | Nut-Lock, NI |

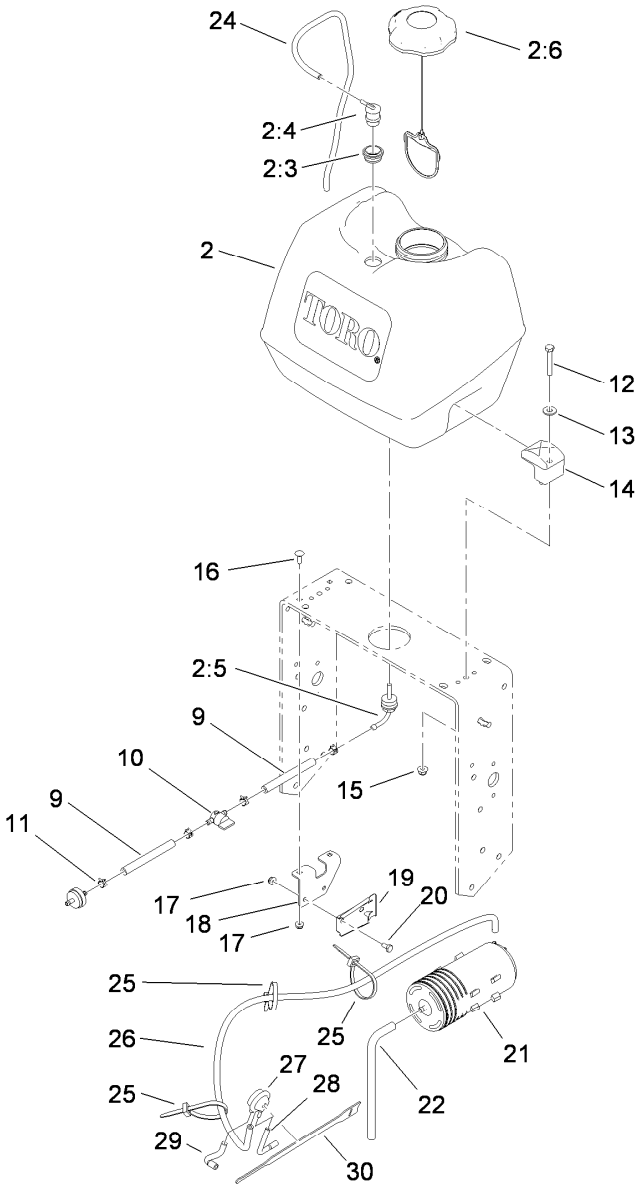


# Fuel System Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 2 | 114-0299 | 1 | Fuel Tank ASM |
| 2:3 | 119-6549 | 1 | Grommet-Valve, Roll Over |
| 2:4 | 114-0285 | 1 | Valve-Rollover |
| 2:5 | 103-2605 | 1 | Fitting-Fuel, Bulkhead |
| 2:6 | 115-4465 | 1 | Cap-Fuel, Ratcheting |
| 9 | 109-0650 | 2 | Hose-Fuel |
| 10 | 1-603770 | 1 | Valve-Fuel |
| 11 | 2412-98 | 4 | Clamp |
| 12 | 322-10 | 2 | Screw-HH |
| 13 | 3256-3 | 2 | Washer-Flat |
| 14 | 107-4543 | 2 | Clamp |
| 15 | 104-8300 | 2 | Nut-Flange, NI |
| 16 | 3229-1 | 2 | Screw-CARR |
| 17 | 104-7201 | 4 | Nut-HF |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 18 | 115-4486-01 | 1 | Bracket-Canister, Carbon |
| 19 | 114-0292 | 1 | Bracket-Canister, Carbon |
| 20 | 321-2 | 2 | Screw-HH |
| 21 | 117-1221 | 1 | Canister-Carbon, 800Cc |
| 22 | 115-0962 | 1 | Hose-Vent, Canister |
| 24 | 114-0286 | 1 | Hose-Vent |
| 25 | 3290-378 | 3 | Tie-Cable |
| 26 | 116-2231 | 1 | Formed-Hose |
| 27 | 116-2232 | 1 | Valve-Control, Vacuum |
| 28 | 119-8501 | 1 | Hose-Formed, High Vacuum Port |
| 29 | 119-8502 | 1 | Hose-Formed, Low Vacuum Port |
| 30 | 116-2469 | 1 | Strap-Velcro Cable Tie |

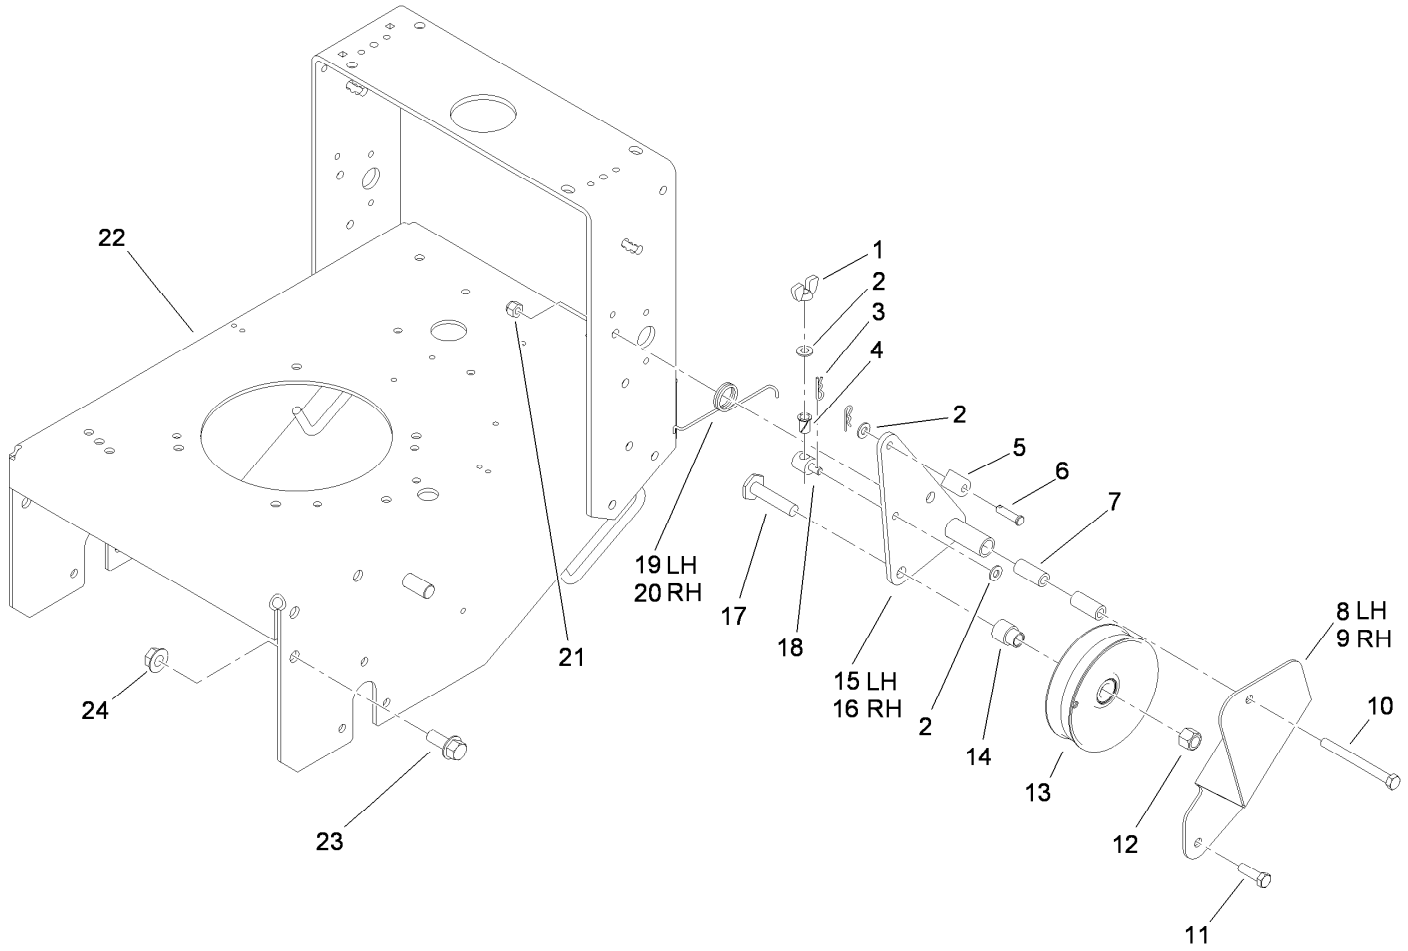


# Lower Control Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 32103-25 | 2 | Nut-Wing |
| 2 | 3256-23 | 6 | Washer-Flat |
| 3 | 3290-307 | 4 | Pin-Hair |
| 4 | 52-2890 | 2 | Bushing-Nylon |
| 5 | 74-0521 | 2 | Fitting-Rod |
| 6 | 283-6 | 2 | Pin-Clevis |
| 7 | 74-0040 | 4 | Spacer-Pivot, Idler |
| 8 | 108-2725-01 | 1 | Support-Idler, LH |
| 9 | 108-2724-01 | 1 | Support-Idler, RH |
| 10 | 323-16 | 2 | Screw-HH |
| 11 | 323-7 | 4 | Screw-HH |
| 12 | 3296-23 | 2 | Nut-Lock, NI |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 95-2800 | 2 | Pulley-Idler |
| 14 | 95-2801 | 2 | Spacer-Pulley |
| 15 | 108-2740-01 | 1 | LH Idler Arm ASM |
| 16 | 108-2741-01 | 1 | RH Idler Arm ASM |
| 17 | 51-4450 | 2 | Screw-Leveler |
| 18 | 68-9690 | 2 | Fitting-Rod |
| 19 | 51-4380 | 1 | Spring-Torsion, LH |
| 20 | 51-4370 | 1 | Spring-Torsion, RH |
| 21 | 3296-39 | 6 | Nut-Lock, NI |
| 22 | 117-5236-01 | 1 | Gear Frame ASM |
| 23 | 3234-32 | 6 | Screw-HHF |
| 24 | 32128-23 | 6 | Nut-HF |

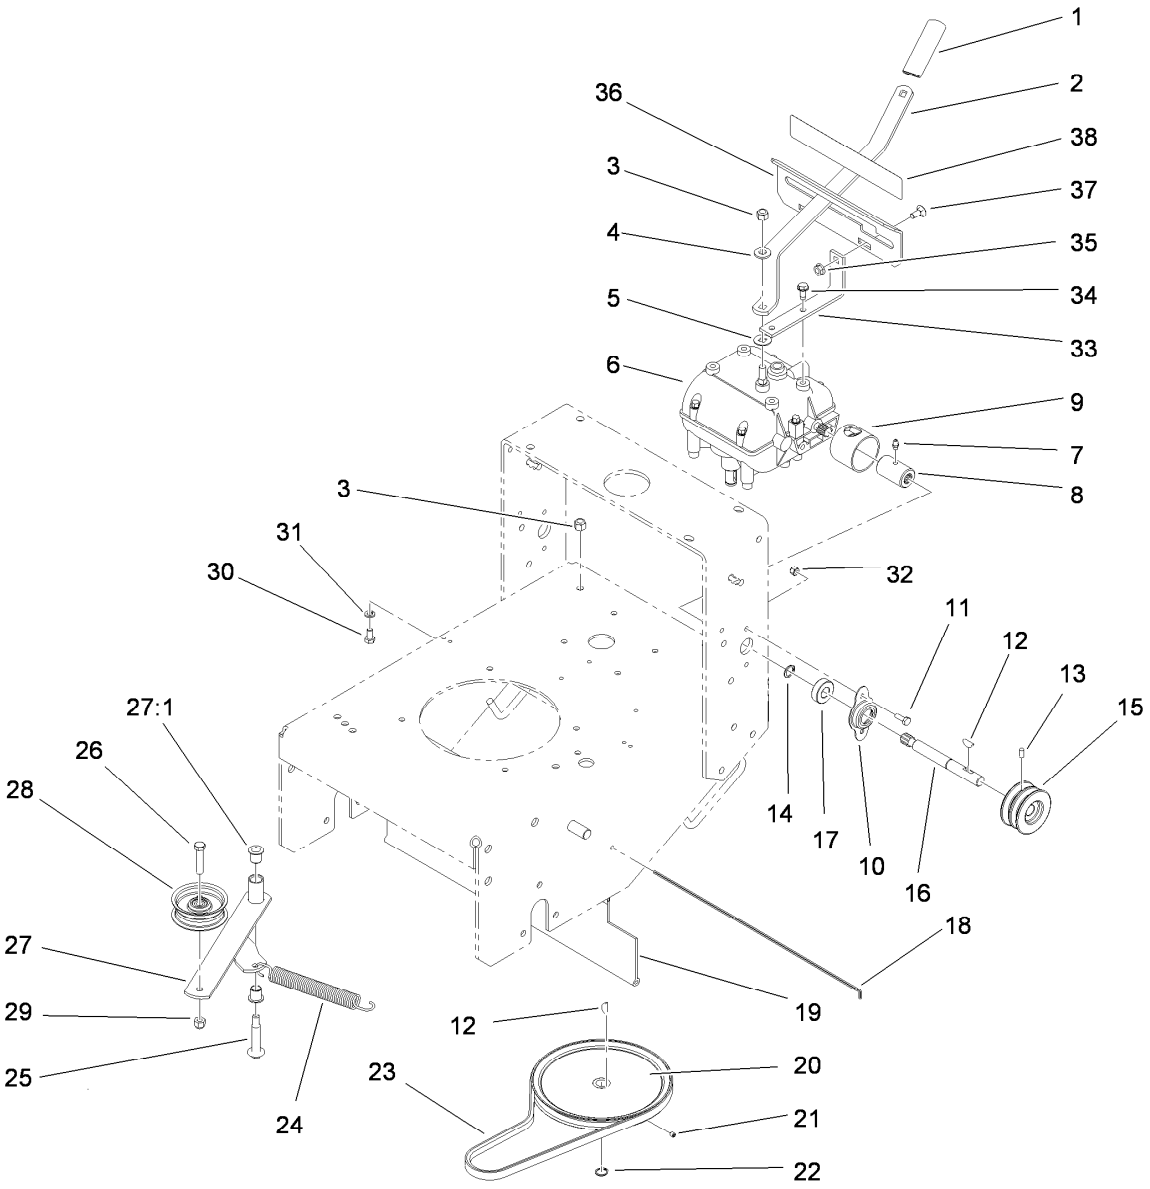


# Transmission Drive Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 47-1970 | 1 | Grip |
| 2 | 98-3274-03 | 1 | Lever-Shift |
| 3 | 3296-6 | 2 | Nut-Lock |
| 4 | 98-5975 | 1 | Washer-Belleville |
| 5 | 1-323379 | 1 | Washer |
| 6 | 1-323500 | 1 | Transmission |
| 7 | 302-5 | 2 | Fitting-Grease |
| 8 | 1-323680 | 2 | Coupler |
| 9 | 51-4220 | 2 | Guard-Coupler |
| 10 | 1-323254 | 2 | Flange-Output |
| 11 | 321-4 | 4 | Screw-HH |
| 12 | 3257-5 | 3 | Key-Woodruff |
| 13 | 3245-9 | 2 | Screw-Set |
| 14 | 32151-62 | 2 | Ring-Retaining |
| 15 | 105-2698 | 2 | Pulley-Transmission |
| 16 | 104-1102 | 2 | Shaft-Output |
| 17 | 1-323252 | 2 | Bearing-Shaft |
| 18 | 95-1529 | 1 | Rod-Shield |
| 19 | 95-1526 | 1 | Shield-Trailing |
| 20 | 105-5646 | 1 | Pulley-Driven |
| 21 | 3245-1 | 1 | Screw-Set, HSH |
| 22 | 32120-64 | 1 | Ring-Snap, External |
| 23 | 105-5668 | 1 | V-Belt |
| 24 | 80-6610 | 1 | Spring-Extension |
| 25 | 27-6230 | 1 | Bolt-Wheel |
| 26 | 323-9 | 1 | Screw-HH |
| 27 | 16-7509 | 1 | Lever-Idler |
| 27:1 | 256-155 | 2 | Bushing-Flange |
| 28 | 62-4540 | 1 | Pulley |
| 29 | 3296-39 | 1 | Nut-Lock, NI |
| 30 | 322-2 | 4 | Screw-HH |
| 31 | 3253-4 | 4 | Washer-Lock |
| 32 | 3296-42 | 4 | Nut-Lock, NI |
| 33 | 1-323389-03 | 2 | Bracket-Plate, Shift |
| 34 | 9264964 | 4 | Screw-HWH, Thread Cut |
| 35 | 32128-20 | 2 | Nut-HF |
| 36 | 1-323387-03 | 1 | Plate-Shift |
| 37 | 3230-1 | 2 | Bolt-CARR |
| 38 | 98-3256 | 1 | Decal-Speed, Ground |

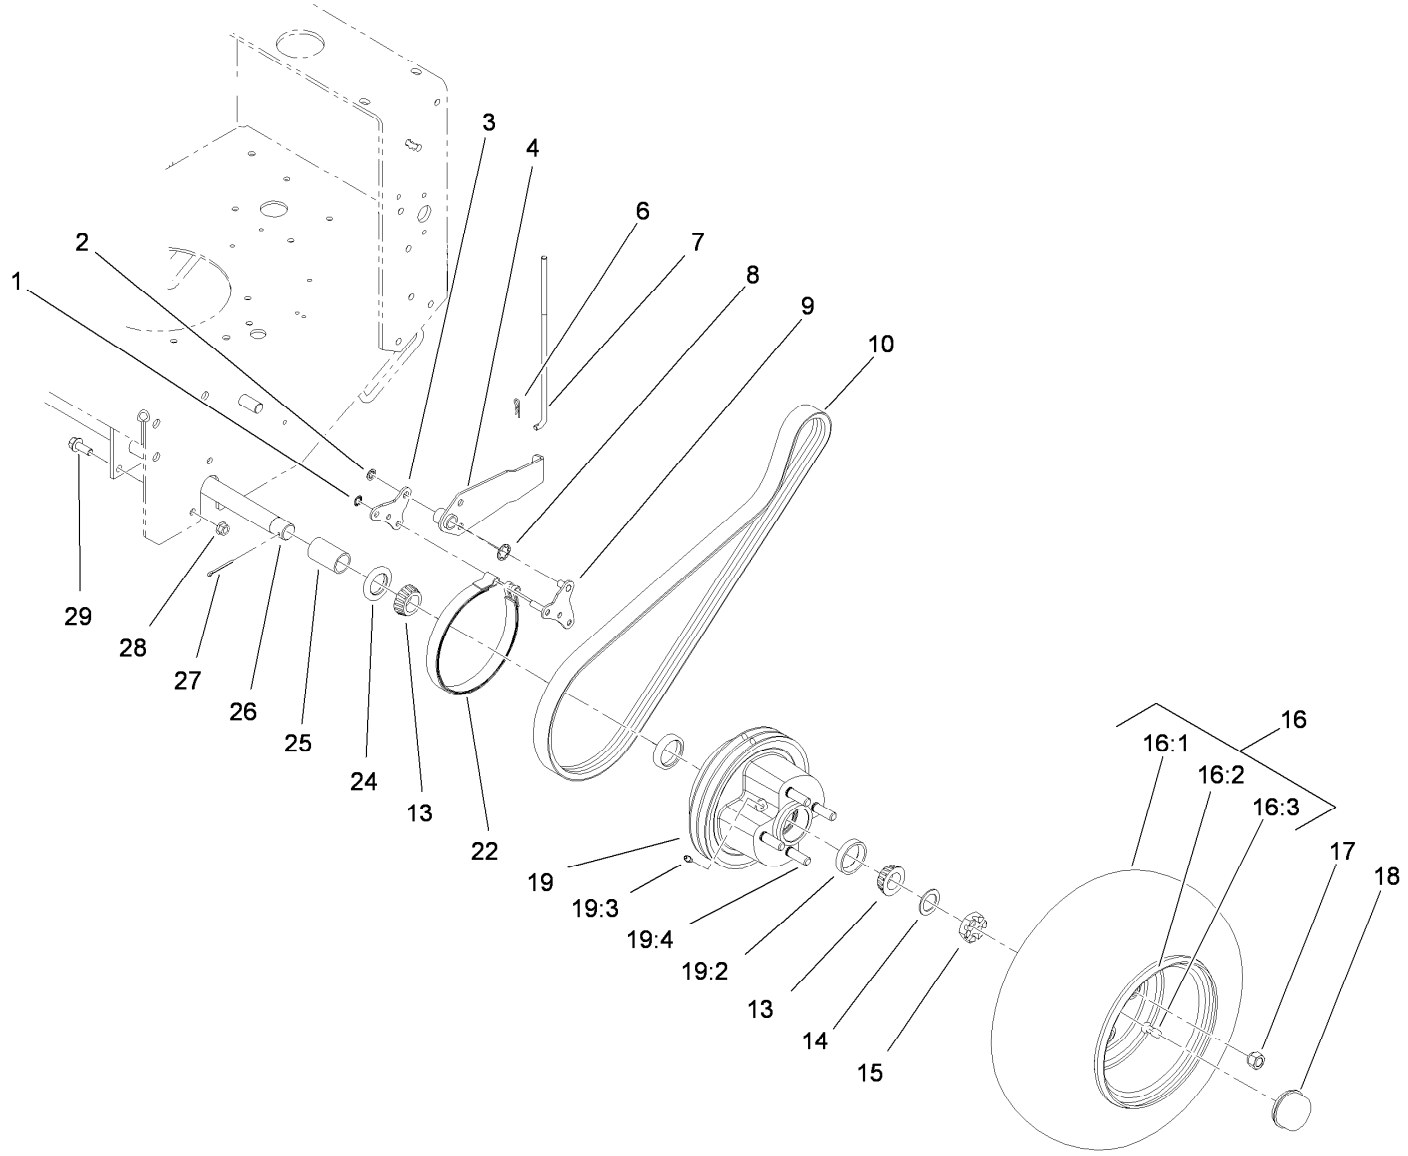


# Wheel Drive and Brake Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 32151-72 | 4 | Ring-Retaining |
| 2 | 32151-56 | 2 | Ring-Retaining, External |
| 3 | 106-8792 | 2 | Plate-Link, Brake |
| 4 | 110-5010-01 | 2 | Brake Arm ASM |
| 6 | 3290-307 | 2 | Pin-Hair |
| 7 | 108-2730 | 2 | Rod-Brake |
| 8 | 32151-40 | 2 | Ring-Retaining |
| 9 | 106-8773 | 2 | Brake Link ASM |
| 10 | 108-2723 | 2 | Belt-V, Banded |
| 13 | 1-543509 | 4 | Bearing-Roller, Tapered |
| 14 | 1-523157 | 2 | Washer-Spacer |
| 15 | 1-809082 | 2 | Nut-SHH |
| 16 | 106-0892 | 2 | Wheel And Tire ASM |
| 16:1 | 104-6322 | 1 | Tire |
| 16:2 | 106-0893 | 1 | Wheel |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16:3 | 232-27 | 1 | Stem-Valve |
| 17 | 242-50 | 8 | Nut-Lug |
| 18 | 241-119 | 2 | Cap-Dust |
| 19 | 107-4090 | 2 | Wheel Hub ASM |
| 19:2 | 1-543508 | 2 | Cup-Bearing |
| 19:3 | 302-5 | 1 | Fitting-Grease |
| 19:4 | 10-6830 | 4 | Stud-Type, Drive |
| 22 | 1-323262 | 2 | Band-Brake |
| 24 | 1-543511 | 2 | Seal-Grease |
| 25 | 110-5006 | 2 | Spacer-Wheel |
| 26 | 110-4983-01 | 1 | Axle ASM |
| 27 | 1-806800 | 2 | Pin-Cotter |
| 28 | 32128-21 | 6 | Nut-HF |
| 29 | 3234-11 | 6 | Screw-HHF |

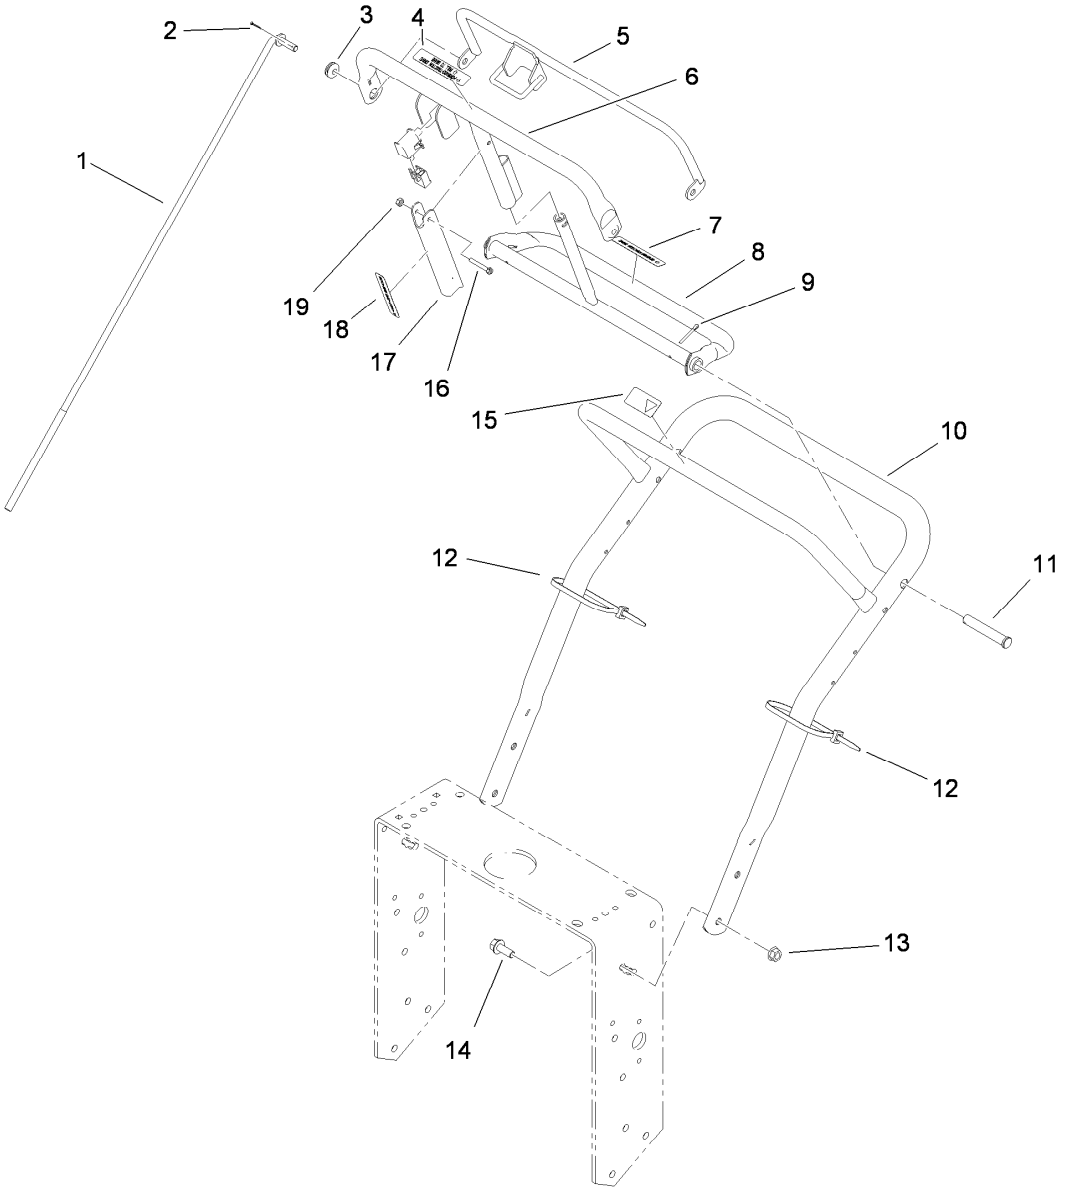


# Handle Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 105-4677 | 2 | Rod-Control |
| 2 | 3272-4 | 2 | Pin-Cotter |
| 3 | 237-141 | 2 | Grommet-Rubber |
| 4 | 82-2290 | 1 | Decal |
| 5 | 82-7680-03 | 1 | Bail ASM |
| 6 | 82-7690-03 | 1 | Bar-Control |
| 7 | 82-2280 | 1 | Decal |
| 8 | 106-5477-03 | 1 | Control Pivot ASM |
| 9 | 3272-11 | 2 | Pin-Cotter |
| 10 | 105-3158-03 | 1 | Upper Handle ASM |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 11 | 283-55 | 2 | Pin-Clevis |
| 12 | 3290-378 | 2 | Tie-Cable |
| 13 | 32128-21 | 4 | Nut-HF |
| 14 | 3234-11 | 4 | Screw-HHF |
| 15 | 98-4387 | 1 | Decal-Protection, Ear |
| 16 | 32105-1 | 1 | Screw-SHH |
| 17 | 51-4850-03 | 1 | Lever-Brake, Parking |
| 18 | 52-2010 | 1 | Decal-Lever, Parking |
| 19 | 3296-2 | 1 | Nut-Lock, NI |

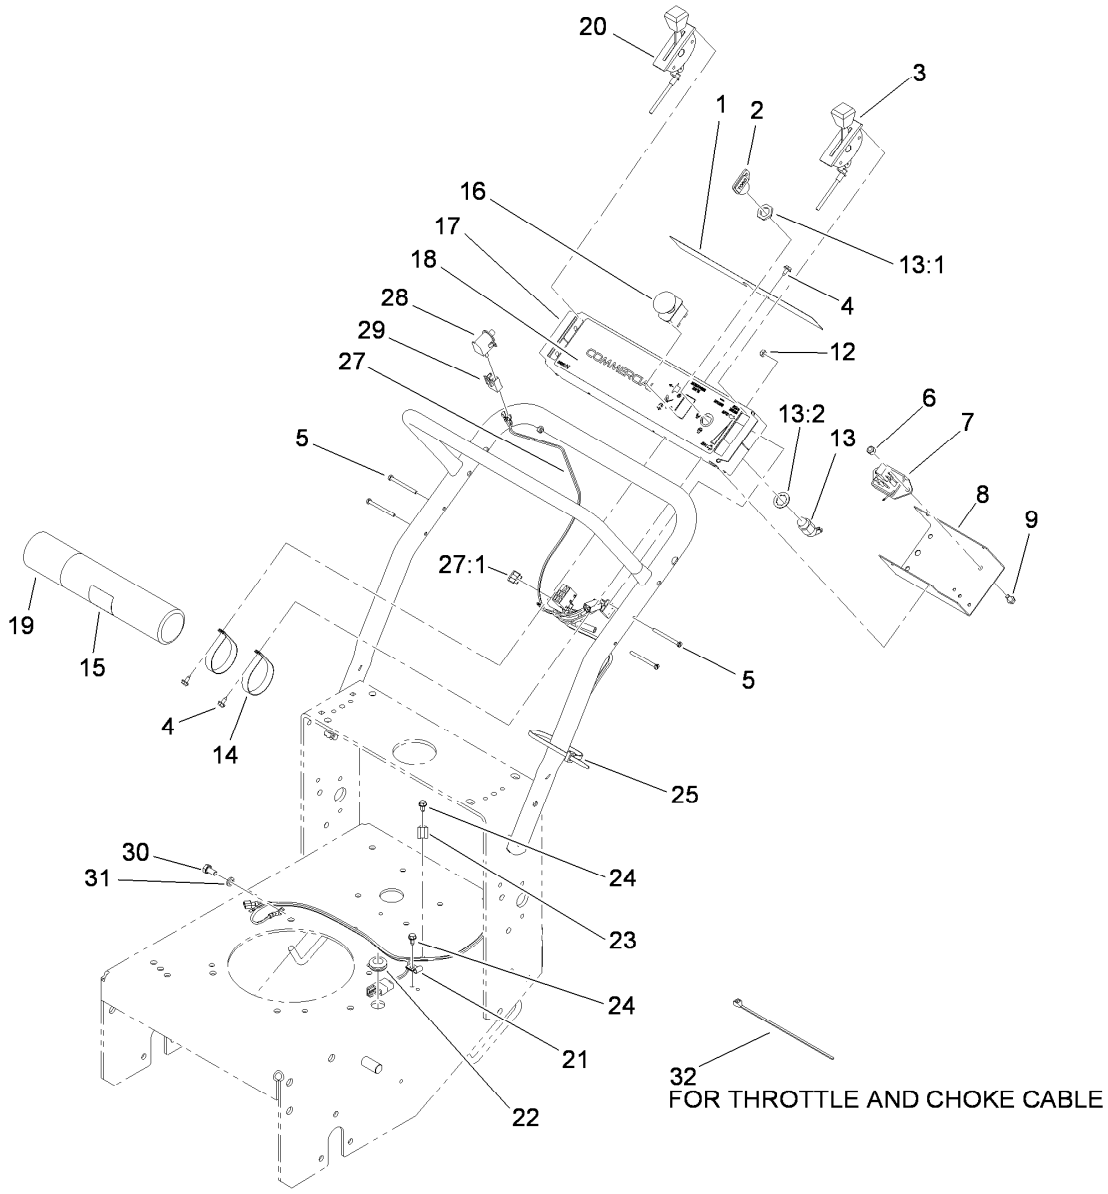


# Control Panel Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 105-0884 | 1 | Decal-Danger |
| 2 | 63-8360 | 1 | Key-Ignition |
| 3 | 119-6539 | 1 | Cable-Throttle |
| 4 | 32104-76 | 4 | Screw |
| 5 | 32105-14 | 4 | Screw-SHH |
| 6 | 3296-42 | 1 | Nut-Lock, NI |
| 7 | 104-8141 | 1 | Module-Delay |
| 8 | 93-1187-03 | 1 | Panel-Bottom |
| 9 | 321-2 | 1 | Screw-HH |
| 12 | 3296-2 | 4 | Nut-Lock, NI |
| 13 | 29-5560 | 1 | Switch-On / Off |
| 13:1 | 218-461 | 1 | Nut-HH |
| 13:2 | 3254-5 | 1 | Washer-Tooth, Internal |
| 14 | 2412-120 | 2 | R-Clamp |
| 15 | 104-7050 | 1 | Tube-Manual |
| 16 | 104-8140 | 1 | Switch-PTO |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 17 | 110-4982-03 | 1 | Panel-Control |
| 18 | 110-4971 | 1 | Decal-Control Panel |
| 19 | 104-7048 | 1 | Cap-Housing |
| 20 | 110-4995 | 1 | Cable-Choke |
| 21 | 2412-72 | 1 | Clip-Closed, Insulated |
| 22 | 112-7069 | 1 | Grommet |
| 23 | 2412-134 | 1 | Clamp-R |
| 24 | 12-3270 | 2 | Screw |
| 25 | 3290-378 | 1 | Tie-Cable |
| 27 | 119-6508 | 1 | Harness-Wire |
| 27:1 | 114241 | 1 | Fuse-7.5 Amp |
| 28 | 82-2190 | 1 | Switch-Bail |
| 29 | 218-595 | 1 | Connector-Body |
| 30 | 33114-016 | 1 | Screw-HH |
| 31 | 3253-4 | 1 | Washer-Lock |
| 32 | 1-303287 | 1 | Tie-Plastic |

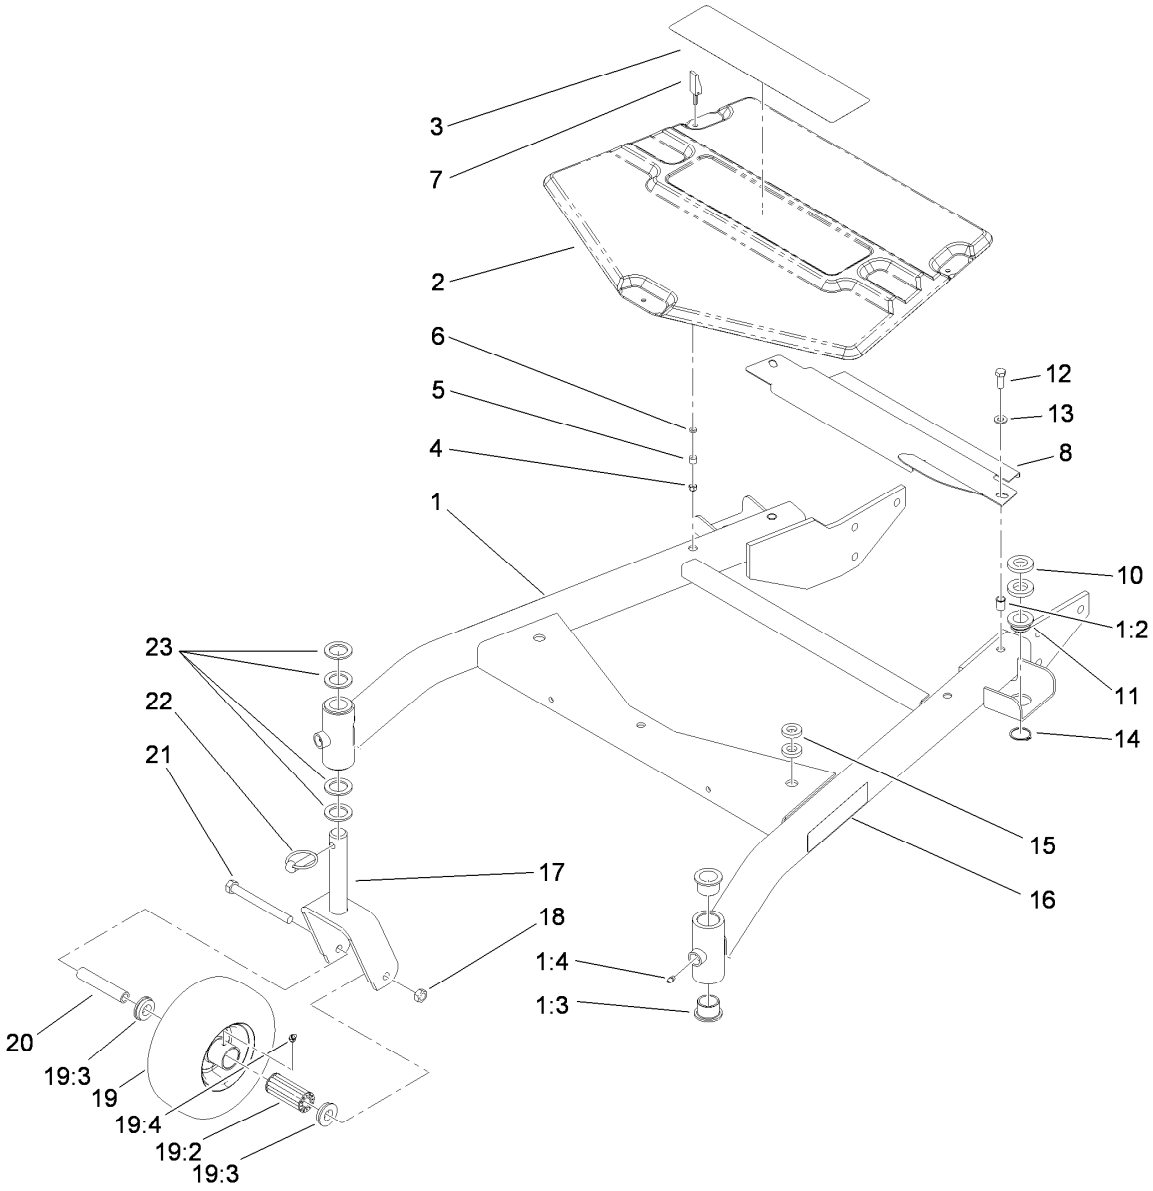


# Carrier Frame Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 108-2665 | 1 | Carrier Frame ASM |
| 1:2 | 32148-9 | 2 | Insert-Nut |
| 1:3 | 94-1291 | 4 | Bushing |
| 1:4 | 302-5 | 2 | Fitting-Grease |
| 2 | 108-6625 | 1 | Cover-Frame, Carrier |
| 3 | 112-9712 | 1 | Decal |
| 4 | 1-804254 | 3 | Nut |
| 5 | 106-6778 | 3 | Bushing-Latch, Swell |
| 6 | 99-3058 | 3 | Washer |
| 7 | 106-6777 | 3 | Handle-Latch, Swell |
| 8 | 119-6534-01 | 1 | Shield-Belt |
| 10 | 104-1105 | 4 | Spacer-Support, Deck |
| 11 | 1-513336 | 2 | Bushing-Deck |
| 12 | 323-6 | 2 | Screw-HH |


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 13 | 3256-24 | 2 | Washer-Flat |
| 14 | 32120-33 | 2 | Ring-Retaining |
| 15 | 1-323539 | 4 | Spacer |
| 16 | 106-0635 | 2 | Decal-HOC |
| 17 | 105-3159-01 | 2 | Castor Fork ASM |
| 18 | 32153-5 | 2 | Nut-Hex |
| 19 | 110-5024 | 2 | Wheel And Tire ASM |
| 19:2 | 112-7066 | 1 | Bearing-Roller |
| 19:3 | 1-513810 | 2 | Bushing |
| 19:4 | 302-61 | 1 | Zerk |
| 20 | 100-6453 | 2 | Bushing-Spanner |
| 21 | 325-19 | 2 | Screw-HH |
| 22 | 283-71 | 2 | Pin-Lynch |
| 23 | 3-6781 | 8 | Washer-Thrust |

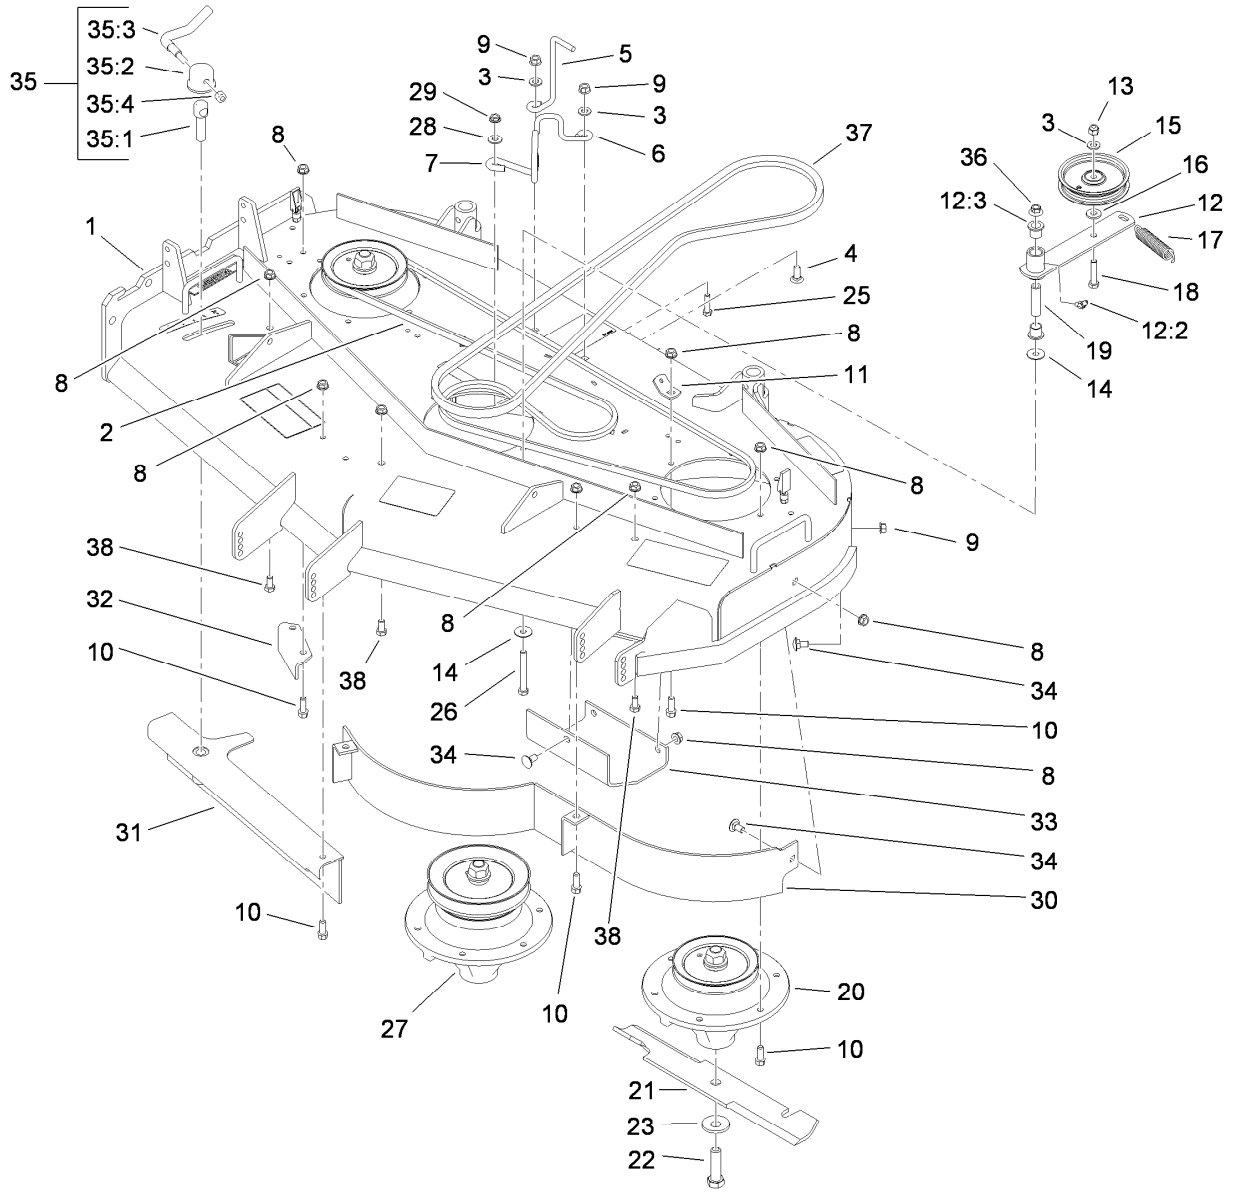


# Deck Drive and Baffle Assembly


| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 112-7082 | 1 | Deck ASM |
| 2 | 108-2716 | 1 | Belt-V |
| 3 | 3256-24 | 3 | Washer-Flat |
| 4 | 3231-22 | 2 | Screw-CARR |
| 5 | 98-5980 | 1 | Guide-Belt |
| 6 | 110-6975 | 1 | Guide-Belt |
| 7 | 105-0850 | 1 | Guide-Belt |
| 8 | 3290-357 | 29 | Nut-HHF, Whiz |
| 9 | 32128-21 | 5 | Nut-HF |
| 10 | 92-1624 | 22 | Screw-HWH |
| 11 | 104-6374 | 1 | Plate-Spring |
| 12 | 108-2728 | 1 | Idler Arm ASM |
| 12:2 | 302-11 | 1 | Fitting-Lube, 45 DEG |
| 12:3 | 256-90 | 2 | Bushing-Flange |
| 13 | 3296-39 | 1 | Nut-Lock, NI |
| 14 | 52-2860 | 2 | Washer |
| 15 | 93-1622 | 1 | Pulley-Idler |
| 16 | 9202414 | 1 | Washer-Spacer |
| 17 | 51-3650 | 1 | Spring-Extension |
| 18 | 323-9 | 1 | Screw-HH |
| 19 | 112-7091 | 1 | Spacer |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 20 | 110-0728 | 2 | Spindle ASM |
| 21 | 107-3192-03 | 3 | Blade-16.5 Inch (High Flow) |
| 22 | 51-4060 | 3 | Screw-Blade |
| 23 | 103-0865 | 3 | Washer-Blade Bolt, Heavy |
| 25 | 322-6 | 1 | Screw-HH |
| 26 | 323-14 | 1 | Screw-HH |
| 27 | 110-0729 | 1 | Spindle ASM |
| 28 | 3256-3 | 1 | Washer-Flat |
| 29 | 32128-13 | 1 | Nut-HF |
| 30 | 110-0735-03 | 1 | Baffle ASM |
| 31 | 108-6698-03 | 1 | Adjustable Baffle ASM |
| 32 | 110-0744-01 | 1 | Baffle-Discharge |
| 33 | 107-3166-01 | 1 | Skid |
| 34 | 3231-1 | 7 | Screw-CARR |
| 35 | 107-1664 | 1 | Lever ASM |
| 35:1 | 106-3239 | 1 | Screw-Lock |
| 35:2 | 107-1644 | 1 | Cap-Lock |
| 35:3 | 106-3241 | 1 | Lever-Lock |
| 35:4 | 3296-29 | 1 | Nut-Lock, NI |
| 36 | 32128-19 | 1 | Nut-HF |

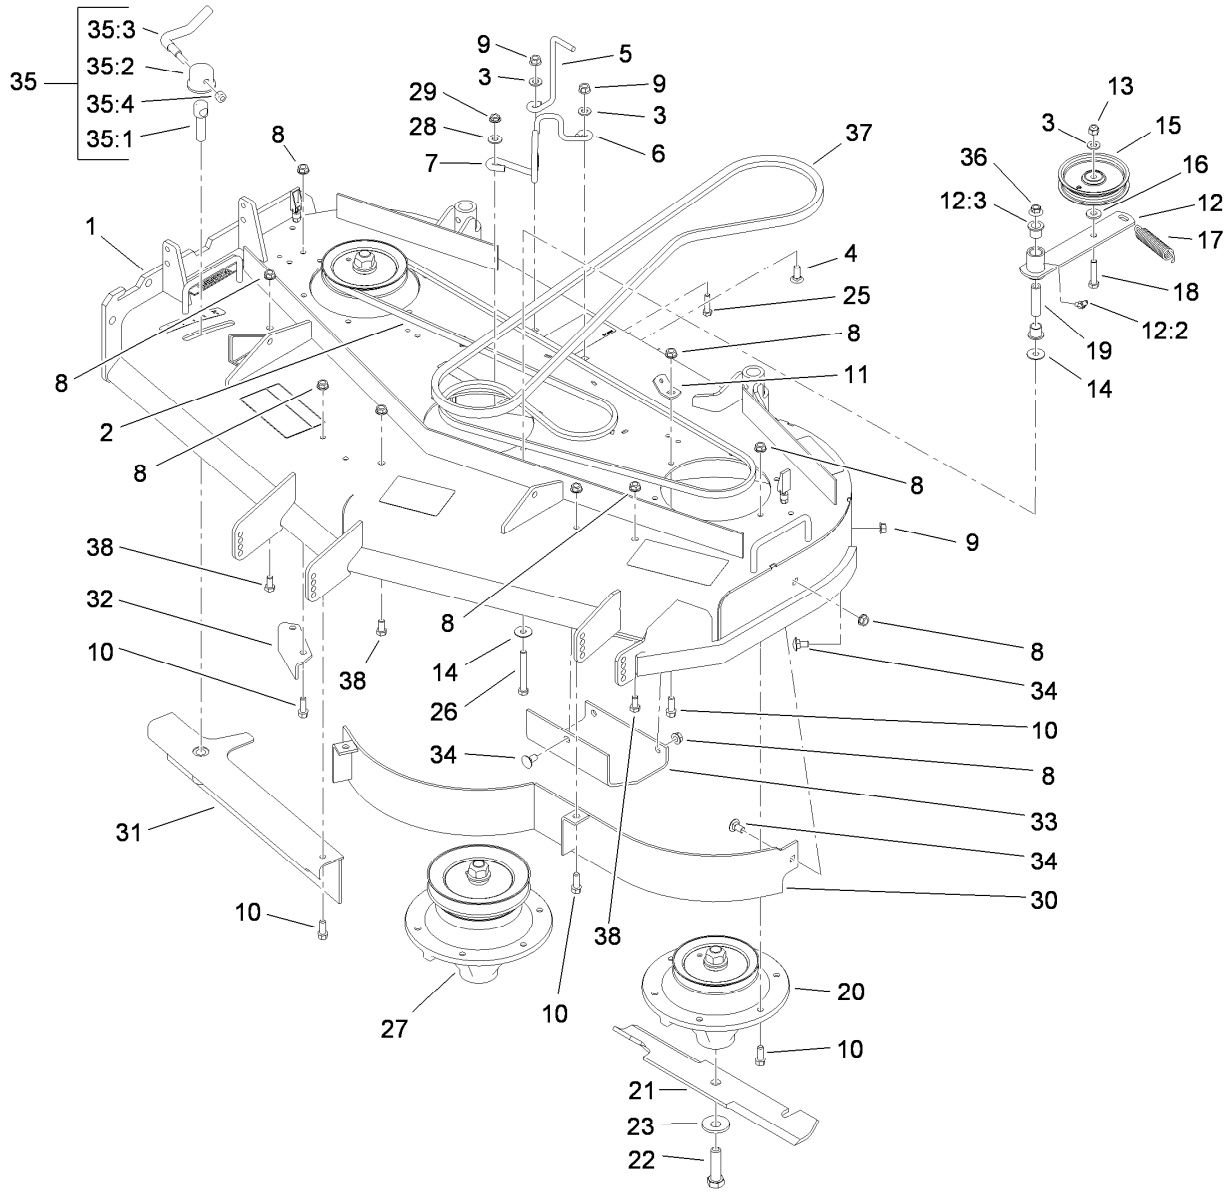


# Deck Drive and Baffle Assembly (continued)


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 37 | 108-2715 | 1 | Belt-V |
| 38 | 323-4 | 3 | Screw-HH |

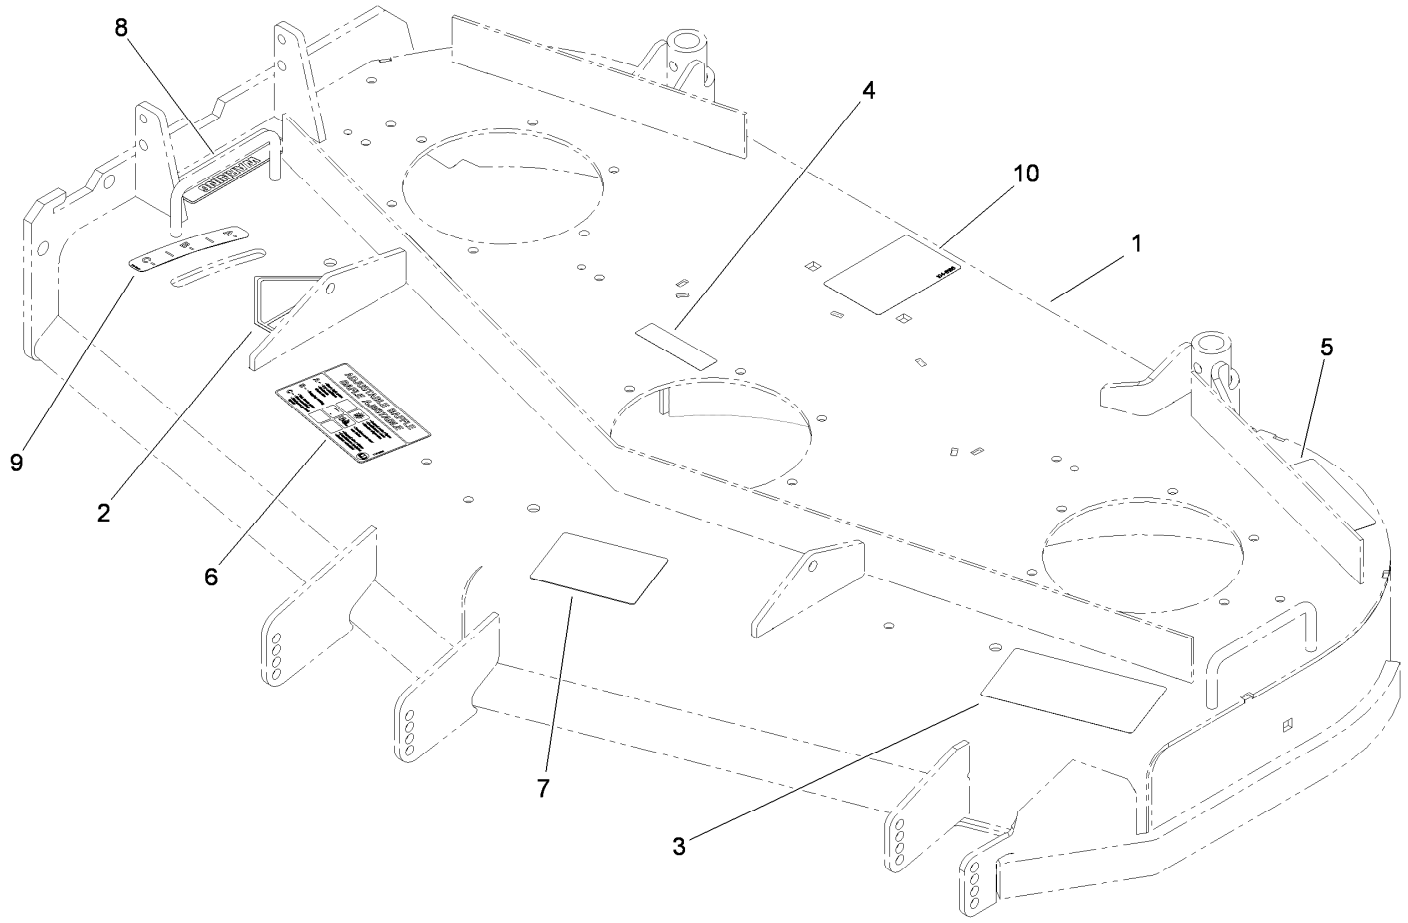


# Deck Assembly No. 112-7082


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | | 1 | 48 Inch Deck ASM ● |
| 2 | 43-8480 | 1 | Decal-Danger |
| 3 | 66-1340 | 1 | Decal-Danger, Thrown Object |
| 4 | 98-5954 | 3 | Decal-Cover, Missing |
| 5 | 68-8340 | 1 | Decal-Torque |
| 6 | 110-2068 | 1 | Decal-Adjustment, Baffle |
| 7 | 105-7798 | 1 | Decal-Scalp, Anti |
| 8 | 104-8569 | 1 | Decal-Warning |
| 9 | 110-2067 | 1 | Decal-Setting, Baffle |
| 10 | 104-8186 | 1 | Decal-Routing, Belt |

● Not serviced separately

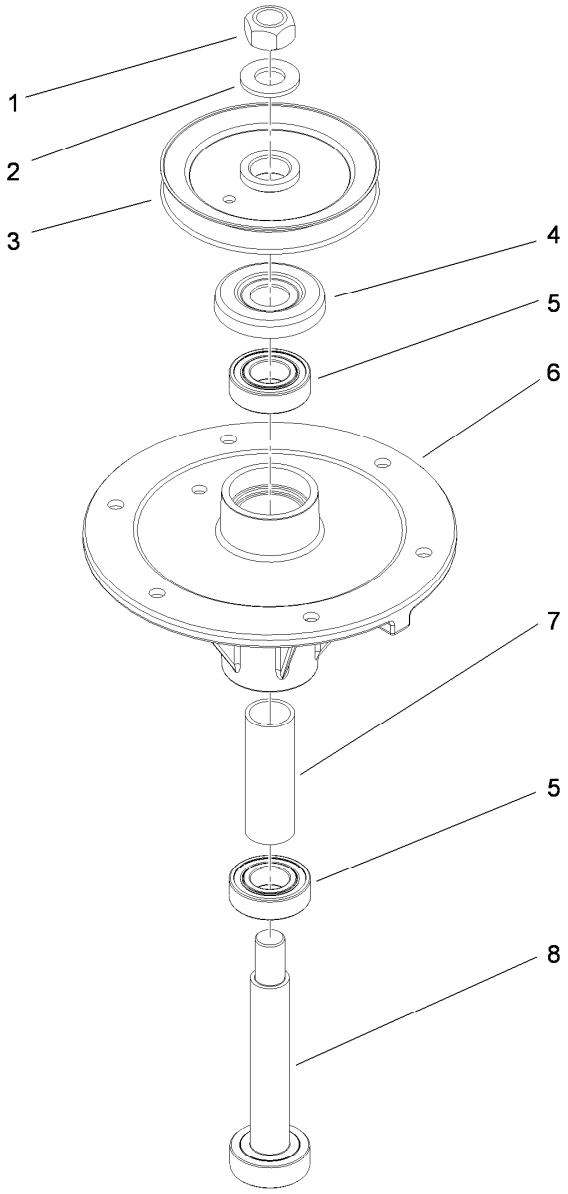



# Spindle Assembly No. 110-0728

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 3219-7 | 1 | Nut-Hex |
| 2 | 7-4150 | 1 | Washer |
| 3 | 104-1181 | 1 | Pulley ASM |
| 4 | 106-0873 | 1 | Shield-Bearing |
| 5 | 104-6325 | 2 | Bearing-Ball |
| 6 | 108-6696 | 1 | Housing-Spindle |
| 7 | 110-0727 | 1 | Spacer-Bearing |
| 8 | 110-0726 | 1 | Shaft-Spindle |

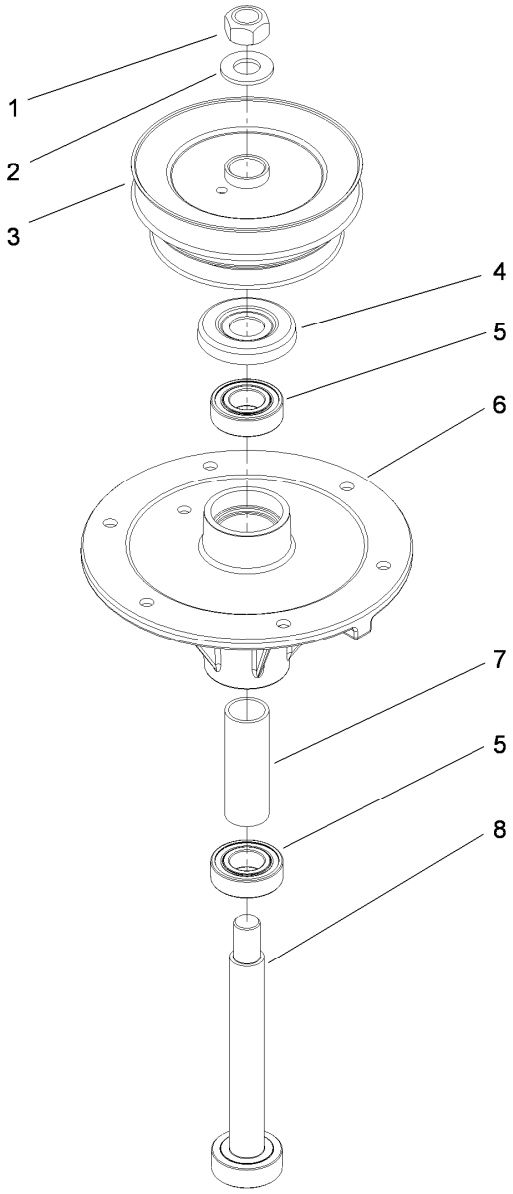


# Spindle Assembly No. 110-0729


| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 3219-7 | 1 | Nut-Hex |
| 2 | 7-4150 | 1 | Washer |
| 3 | 108-2713 | 1 | Pulley And Hub ASM |
| 4 | 106-0873 | 1 | Shield-Bearing |
| 5 | 104-6325 | 2 | Bearing-Ball |
| 6 | 108-6696 | 1 | Housing-Spindle |
| 7 | 110-0727 | 1 | Spacer-Bearing |
| 8 | 110-0725 | 1 | Shaft-Spindle |

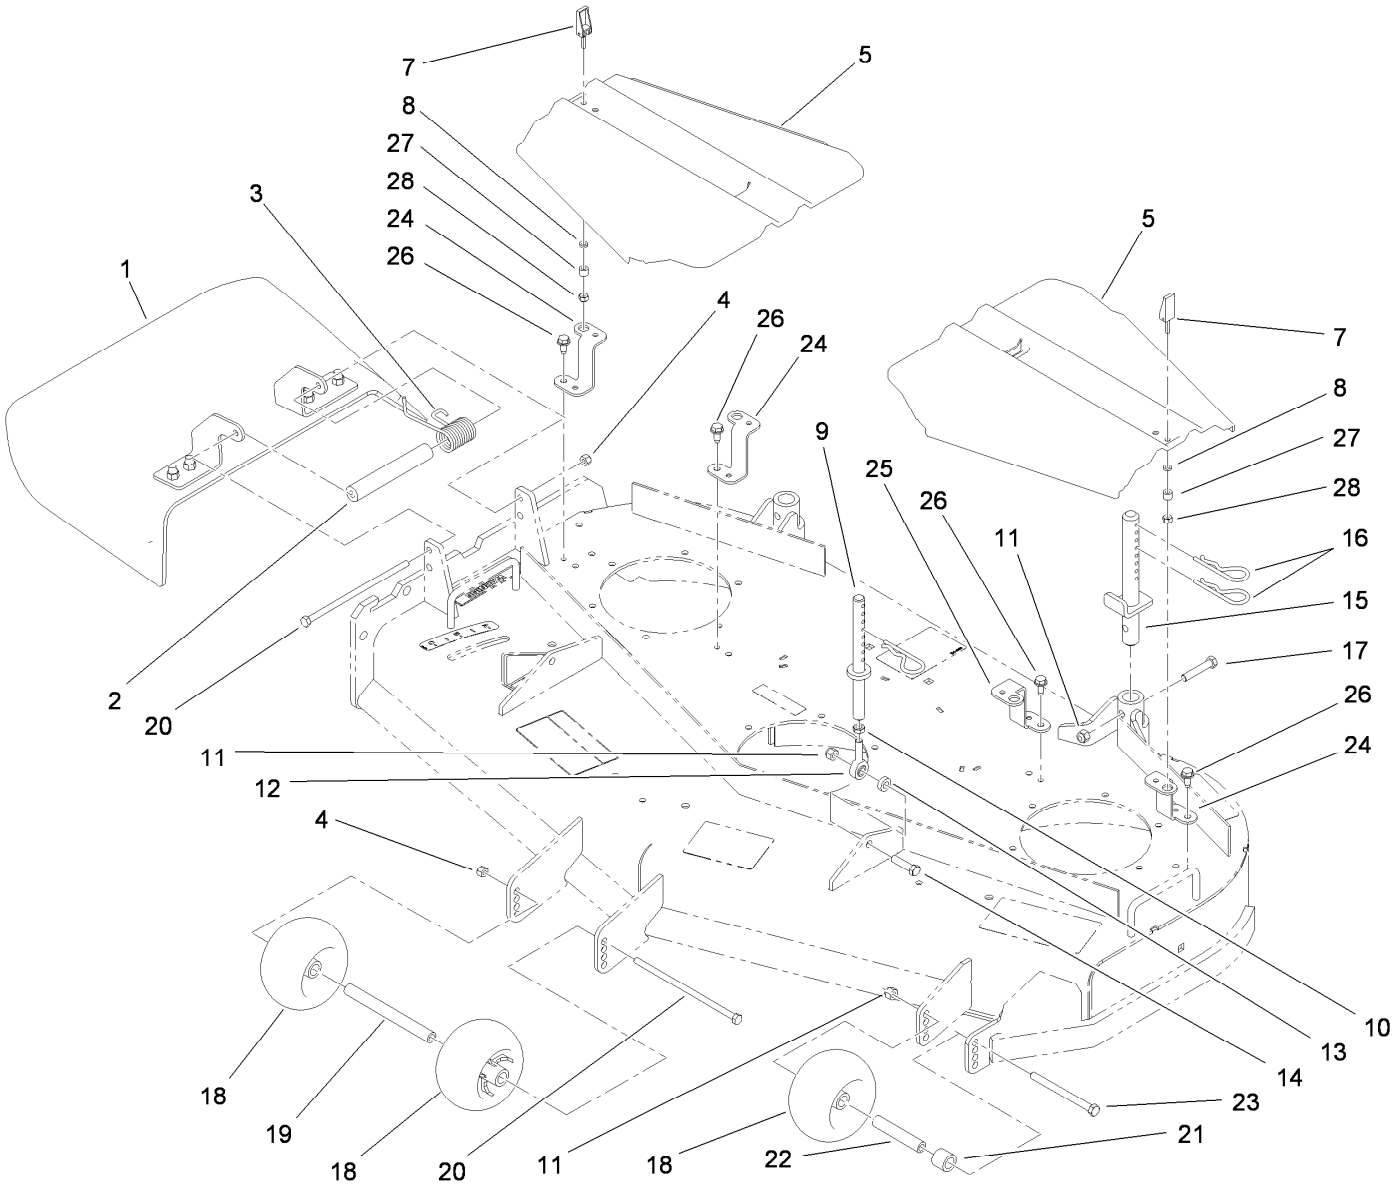


# Deck Assembly

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 1 | 110-0758 | 1 | Deflector ASM |
| 2 | 105-4622 | 1 | Spacer |
| 3 | 104-8554 | 1 | Spring-Torsion |
| 4 | 3296-29 | 2 | Nut-Lock, NI |
| 5 | 107-8536 | 2 | Cover-Belt |
| 7 | 106-6777 | 2 | Handle-Latch, Swell |
| 8 | 99-3058 | 2 | Washer |
| 9 | 108-2674 | 2 | Front Pin ASM |
| 10 | 3220-3 | 2 | Nut-HJ |
| 11 | 3296-39 | 5 | Nut-Lock, NI |
| 12 | 1-613204 | 2 | Balljoint |
| 13 | 104-1156 | 2 | Spacer |
| 14 | 323-8 | 2 | Screw-HH |
| 15 | 110-2086 | 2 | Rear Pin ASM |

| Ref. | Part Number | Qty. | Description |
|---|---|---|---|
| 16 | 3290-256 | 6 | Pin-Hair |
| 17 | 323-10 | 2 | Screw-HH |
| 18 | 1-603299 | 3 | Roller-Scalp, Anti |
| 19 | 98-5967 | 1 | Spacer-Wheel |
| 20 | 322-50 | 2 | Screw-HH |
| 21 | 98-7913 | 1 | Tube-Spacer |
| 22 | 98-7912 | 1 | Tube-Spanner |
| 23 | 323-23 | 1 | Screw-HH |
| 24 | 108-2698-01 | 3 | Bracket-Cover |
| 25 | 108-2699-01 | 1 | Bracket-Cover |
| 26 | 32144-70 | 4 | Screw-HWHTF |
| 27 | 106-6778 | 2 | Bushing-Latch, Swell |
| 28 | 1-804254 | 2 | Nut |

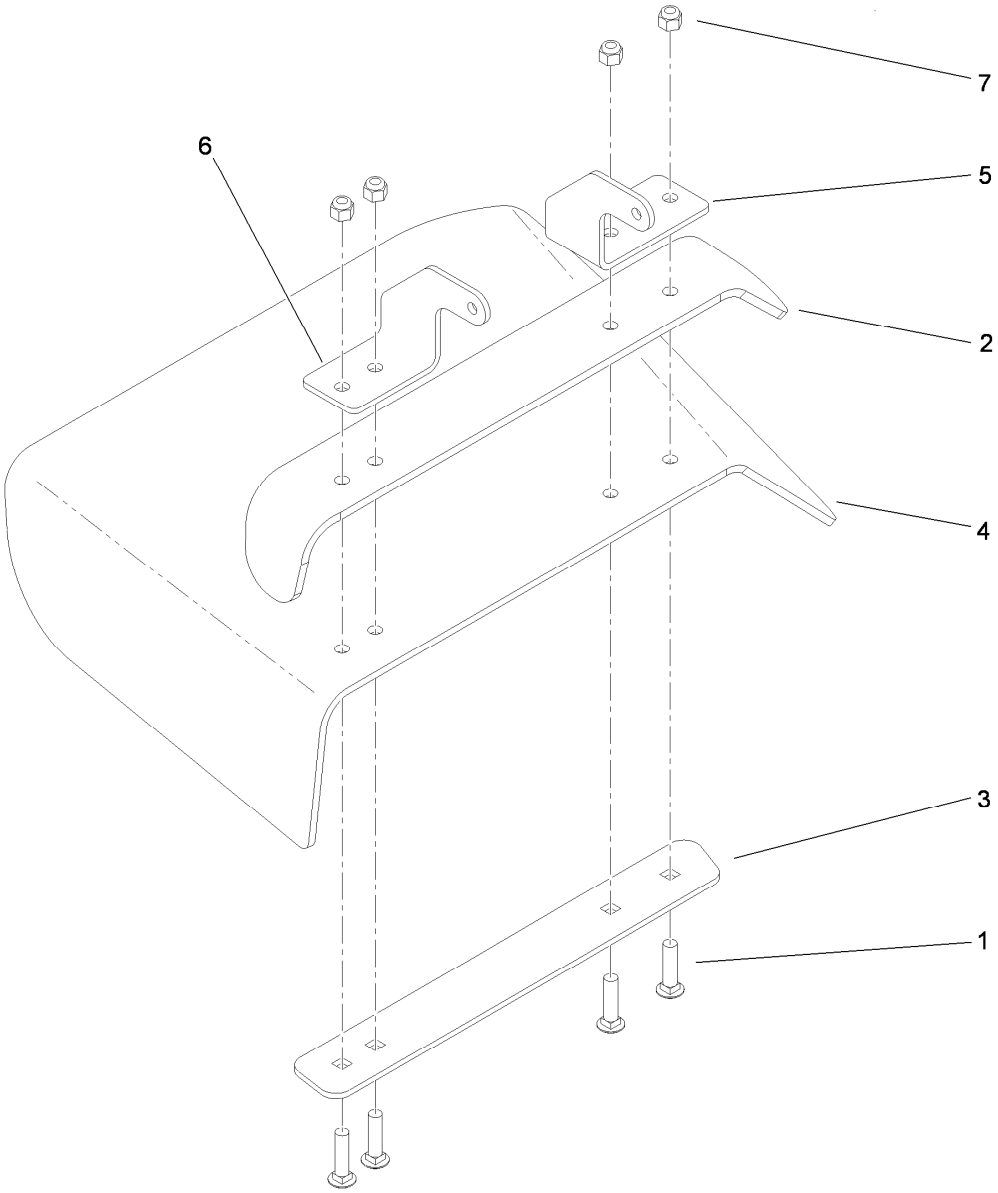


# Deflector Assembly No. 110-0758

| *Ref.* | *Part Number* | *Qty.* | *Description* |
|---|---|---|---|
| 1 | 3231-4 | 4 | Screw-CARR |
| 2 | 106-3246-01 | 1 | Deflector |
| 3 | 106-3248-03 | 1 | Strap-Discharge |
| 4 | 110-0759 | 1 | Deflector-Rubber |
| 5 | 107-4197-01 | 1 | Bracket-Hinge, Rear |
| 6 | 107-4196-01 | 1 | Bracket-Hinge, Front |
| 7 | 3296-39 | 4 | Nut-Lock, NI |

# Attachments and Accessories

## For 39078 Commercial Walk-Behind Mower, Floating Deck, T-Bar, Gear Drive with 48in TURBO FORCE Cutting Unit

| Product Name | Model/Part |
|---|---|
| Blade-Low Flow, 16.5 inch | 107-3193-03 |
| Blade-Mid Flow, 16.5 inch | 107-3194-03 |
| Blade-Atomic, 16.5 inch | 107-3195-03 |
| Blade-Recycling, 16.5 inch | 107-3196-03 |
| Bagging Enhancement Kit | 108-4091 |
| Blade-Hi Flow, 16.5 inch (6 Pack) | 110-0414 |
| Blade-Lo Flow, 16.5 inch (6 Pack) | 110-0415 |
| Blade-Recycler, 16.5 inch (6 Pack) | 110-0416 |
| Blade-Atomic, 16.5 inch (6 Pack) | 110-0417 |
| Blade-Mid Flow, 16.5 inch (6 Pack) | 110-0418 |
| 48 inch Recycler Kit | 110-2060 |
| Weight-Cast | 112-7059-01 |
| Weight Kit | 112-9971 |
| Trim Side Anti-Scalp Roller Kit | 115-1015 |
| Discharge Side Anti-Scalp Roller Kit | 115-1016 |
| Soft Bag (3 Bushel) | 30104 |
| Tru Trak Sulky | 30110 |

## Notes:

## Notes:

## Notes:




**Count on it.**