FORM NO. 3318–634

TORO®

Lawn & Garden Tractor

Model No. 72042 — 5900797 & Up
Model No. 72062 — 5900228 & Up
Model No. 72043 — 5901476 & Up
Model No. 72063 — 5900499 & Up
Model No. 72103 — 5900601 & Up

PROTOTYPE

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page
Hood and Grill	1
Hood and Grill	2
Dash	3
Dash	4
Steering Wheel and Tilt	5
Steering Wheel and Tilt	6
Lower Steering	7
Front Axle	8
Front Axle	9
Seat	10
Fuel Tank and Hydro Reservoir	11
Fender and Footrest	12
Fender and Footrest	13
Hoodstand and Firewall	14
Hoodstand and Firewall	15
Lift Lever and Height of Cut	16
Lift Lever and Height of Cut	17
Frame	18
Hydro Drive Components	19
Gear Drive Components	20
Gear Drive Components	21
Twin Cylinder Engine, Muffler, and P.T.O.	22
Single Cylinder Engine, Muffler, and P.T.O.	23
Clutch 92–6885	24
Battery	25
Hydro Brake	26
Hydro Control	27
Hydro Transaxle	28
Cruise Control	29
Transaxle — Gear	30
Gear Shift Linkage	31
Gear Shift Linkage	32
Clutch and Brake — Gear	33
Rear Wheel	34
Kohler Engine CV14S–PS1472	
Crankshaft	35
Crankcase	36
Crankcase	37
Oil Pan / Lubrication	38
Cylinder Head / Valve / Breather	39
Ignition / Electrical	40
Blower Housing & Baffles	41
Starting System	42
Fuel System	43
Fuel System	44
Engine Controls	45
Air Intake / Filtration	46
Exhaust	47
Kohler Engine CV16S–PS61514	
Crankshaft	48
Crankcase	49
Crankcase	50
Oil Pan / Lubrication	51
Head / Valve / Breather	52
Head / Valve / Breather	53
Ignition / Electrical	54
Blower Housing & Baffles	55
Starting System	56
Fuel System	57
Fuel System	58
Engine Controls	59
Air Intake / Filtration	60
Exhaust	61
Peerless Transaxle 820–024	62
Peerless Transaxle 820–024	63
Peerless Transaxle 820–024	64
Peerless Transaxle 820–024	65
Tuff Torq Transmission K61 (Toro)	
Transaxle Case	66
Center Case	67
Pump Shaft	68
Motor Shaft	69
Range Shift	70
Bypass Return	71
Lever Damper	72
N-Centering	73
Brake Interlock	74
Differential Gear	75
Final Pinion	76
Axle Shaft	77
Brake	78
Electric Schematic Single Cylinder Hydro Drive	79
Electric Schematic Single Cylinder Gear Drive	80
Electric Schematic Twin Cylinder Hydro Drive	81
Electric Schematic Hydro Drive Cruise Control	82
Electric Schematic Twin Cylinder Gear Drive	83
Wire Harness Routing — Twin Cylinder Engine	84
Wire Harness Routing — Cruise Control	85
Wire Harness Routing — Single Cylinder Engine	86

PROTOTYPE

© The TORO Company — 1994 / 1996 Rev.
All Rights Reserved

Accessories

Description	Model / Part No.
38″ Side Discharge Mower	78216
38″ Recycler®	78226
42″ Side Discharge Mower	78231
48″ Side Discharge Mower	78260
38″ Twin Bagger	79202
42″/48″ Vacuum Bagger	79203
48″ Snow Blade	79252
42″ Snow Thrower	79262
36″ Tiller	29271

Description	Model / Part No.
Snowthrower Adaptor Kit adapts model 79261 snowthrower to fit YGT	92–6829
Snow Blade Adaptor Kit adapts model 79251 snow blade to fit YGT	92–6828
38″ Recycler® Kit converts model 78216 38″ side discharge mower to Recycler®	79710
Indicator Light	92–6831

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HFW	hex flange washer
HH	hex head
HHF	hex head flange
HHST	hex head self tapping
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
INCL	includes
LH	left hand
PH	pan head
PPH	Phillips pan head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
STD	standard
TAP	self tapping
TH	truss head
TTH	Torx truss head
WH	wing head

Important Format Explanations

PROTOTYPE

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form *X:Y. X* is the reference number of the service assembly and *Y* is a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.


Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form *X (Y). X* is the reference number. *Y* in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

PROTOTYPE

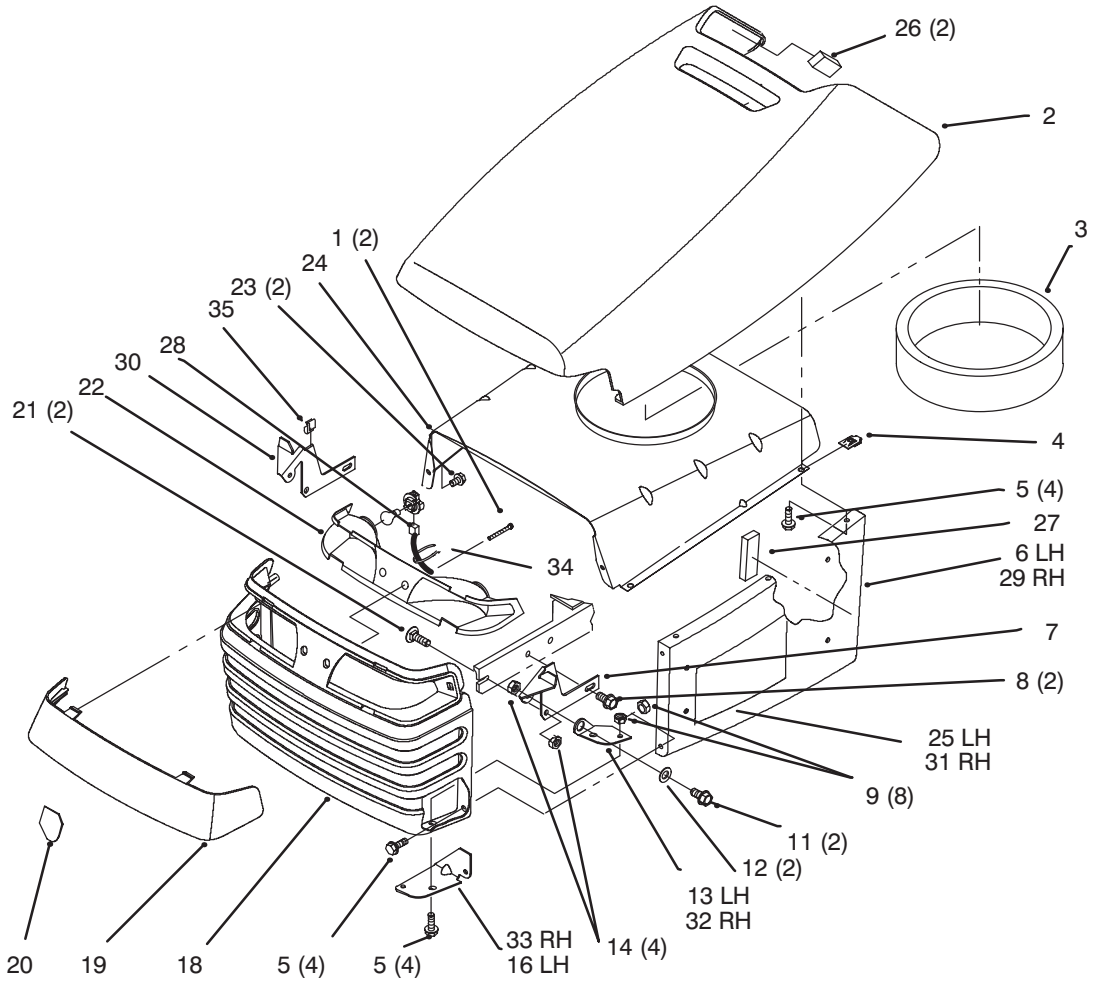


Sheet No.: 2

Hood and Grill

Ref. No.	Part No.	Qty.	Description
1	32144−32	2	Screw−Plastic
2	93−0490	1	Hood
3	92−7076	1	Inlet−Seal Air (Only On: 72103)
3	92−7077	1	Inlet−Seal Air (Only On: 72042, 72043, 72062, 72063)
4	92−7006	4	Nut
5	32105−15	12	Screw−HH
6	93−0491	1	Sidepanel−LH Hood
7	92−6918−03	1	Bracket−Hinge LH
8	32144−14	2	Screw−HH
9	32128−10	8	Nut−Lock HHF
11	322−3	2	Screw−HH
12	105503	2	Bushing
13	92−6997−03	1	Hinge−Hood LH
14	3296−29	4	Nut−Lock
16	92−7049−03	1	Bracket−Hood Hinge LH
18	93−0494	1	Grille & Screen ASM
19	92−6656	1	Lens−Headlight
20	92−6987	1	Decal−Horsehead
21	3230−1	2	Screw−CARR
22	88−3970	1	Reflector−Lamp
23	46−8093	2	Screw−TAP
24	92−6914−03	1	Baffle−Hood Upper
25	92−6728	1	Decal−Hood LH
26	92−7147	2	Foam−Hood
27	92−7148	2	Foam−Sidepanel
28	88−4320	1	Harness−Wire

PROTOTYPE

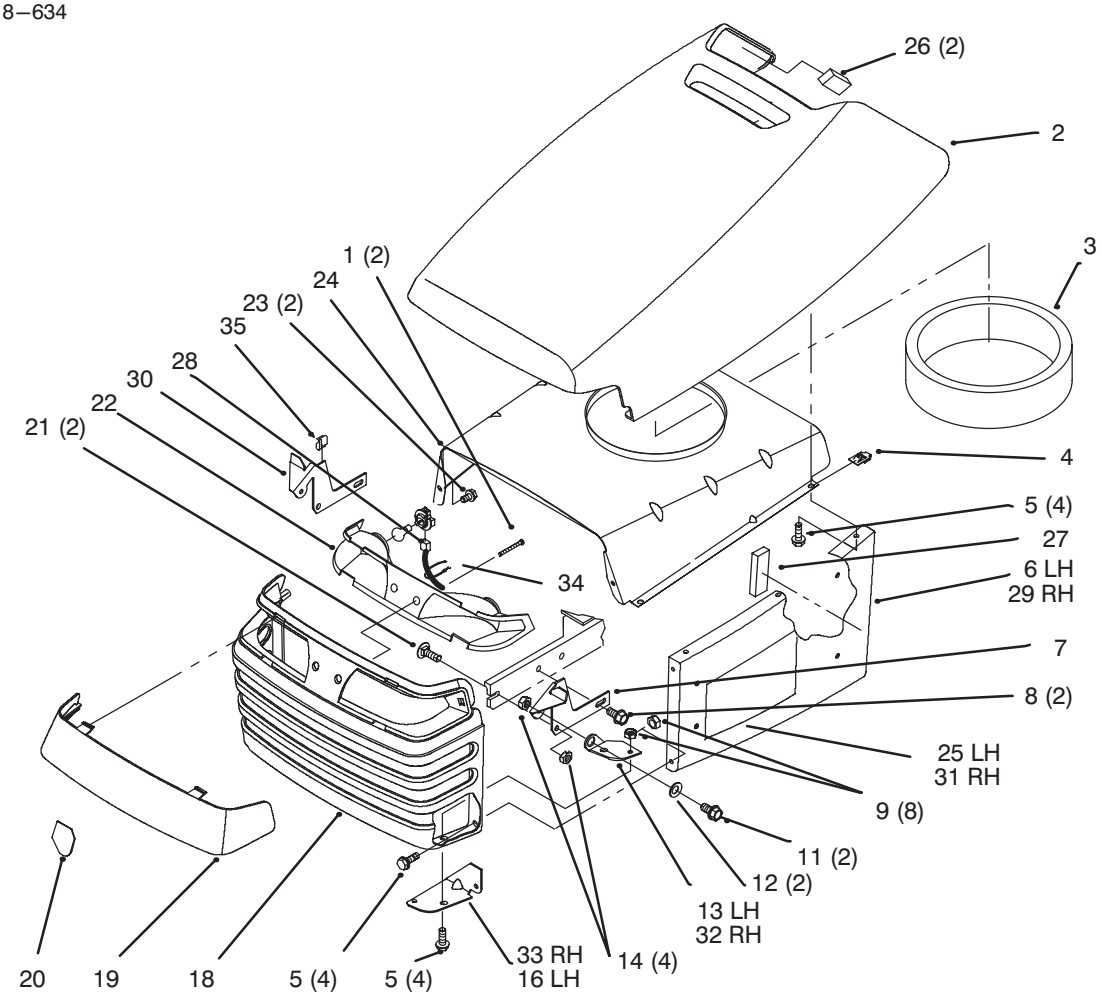


Sheet No.: 2

Hood and Grill

Ref. No.	Part No.	Qty.	Description
29	93–0492	1	Sidepanel–RH Hood
30	92–6917–03	1	Bracket–Hinge RH
31	92–6729	1	Decal–Hood RH
32	92–6996–03	1	Hinge–Hood RH
33	92–7048–03	1	Bracket–Hood Hinge RH
34	614249	1	Tie Strap
35	702366	1	Clip–Wire Retainer


PROTOTYPE

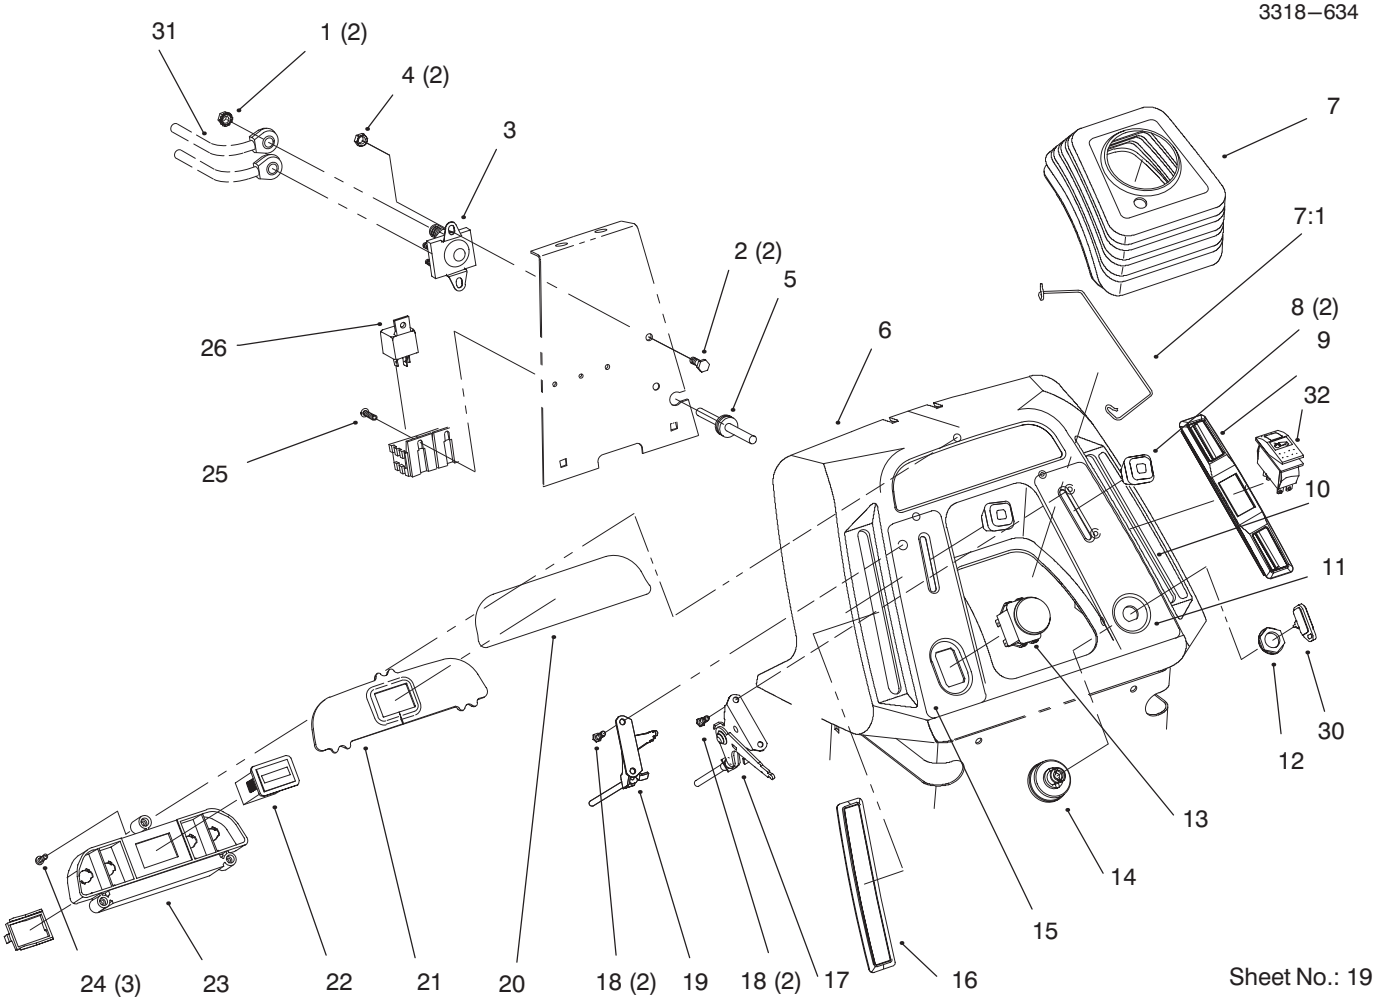

Dash

Ref. No.	Part No.	Qty.	Description
1	32149–2	2	Nut–Hex Lock (Only On: 72042, 72043, 72062, 72063)
2	321–4	2	Screw–HH (Only On: 72042, 72043, 72062, 72063)
3	92–9845	1	Solenoid (Only On: 72042, 72043, 72062, 72063)
4	3296–42	2	Nut–Lock (Only On: 72042, 72043, 72062, 72063)
5	237–141	1	Grommet
6	92–6510	1	Dash (Only On: 72042, 72062)
6	93–0519	1	Dash (Only On: 72043, 72063, 72103)
7	92–6680	1	Boot–Steering
7:1	94–2966	1	Clip–Boot
8	66–0120	2	Knob
9	92–6796	1	Cover–Slot RH (Only On: 72043, 72063)
9	93–0533	1	Cover–Cruise (Only On: 72103)
10	92–6722	1	Decal–Shift (Only On: 72042, 72062)
11	92–6721	1	Decal–Throttle/Ignition (Only On: 72042, 72043)
11	92–7087	1	Decal–Throttle/Ignition (Only On: 72062, 72063, 72103)
12	700919	1	Nut
13	93–9998	1	Switch–PTO
14	92–6785	1	Switch INCL 12 & 30
15	92–6720	1	Decal–Choke/PTO (Only On: 72042, 72043)
15	92–7086	1	Decal–PTO/Choke (Only On: 72062, 72063, 72103)
16	92–6797	1	Cover–Slot LH
17	92–6782	1	Control–Throttle (Only On: 72042, 72043, 72062, 72063)
17	92–6784	1	Control–Throttle (Only On: 72103)
18	32144–32	4	Screw–Plastic
19	92–6781	1	Control–Choke (Only On: 72042, 72043, 72062, 72063)


PROTOTYPE

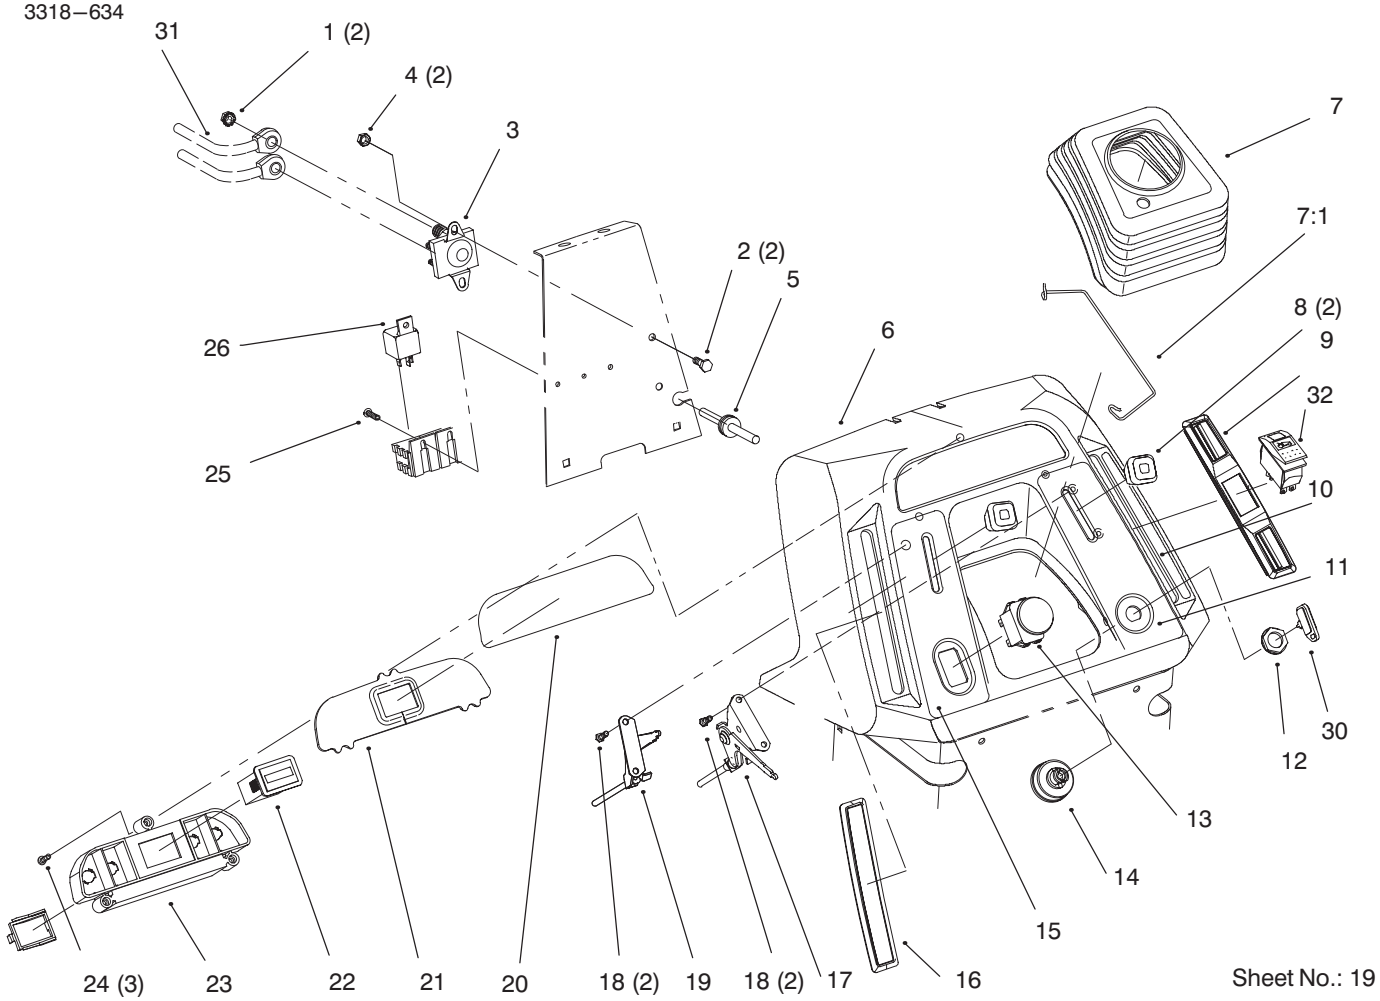

Dash

Ref. No.	Part No.	Qty.	Description
19	92−6783	1	Control−Choke (Only On: 72103)
20	92−6973	1	Decal−Dash Lens (Only On: 72043, 72103)
20	92−6975	1	Decal−Dash Lens (Only On: 72042, 72062, 72063)
21	92−6705	1	Lens−Dash
22	92−6715	1	Hourmeter
23	92−6709	1	Light−Indicator (Only On: 72043, 72103)
23	92−6732	1	Housing−Indicator Light (Only On: 72042, 72062, 72063)
24	32104−118	3	Screw−PH
25	32144−8	2	Screw−PPH (Only On: 72042, 72043, 72062, 72063)
25	32144−8	3	Screw−PPH (Only On: 72103)
26	116397	2	Relay (Only On: 72042, 72043, 72062, 72063)
26	116397	4	Relay (Only On: 72103)
30	62−7770	1	Key−Ignition
31	92−6989	1	Cable−Battery Red (Only On: 72042, 72043, 72062, 72063)
32	93−0527	1	Switch−Cruise (Only On: 72103)

PROTOTYPE

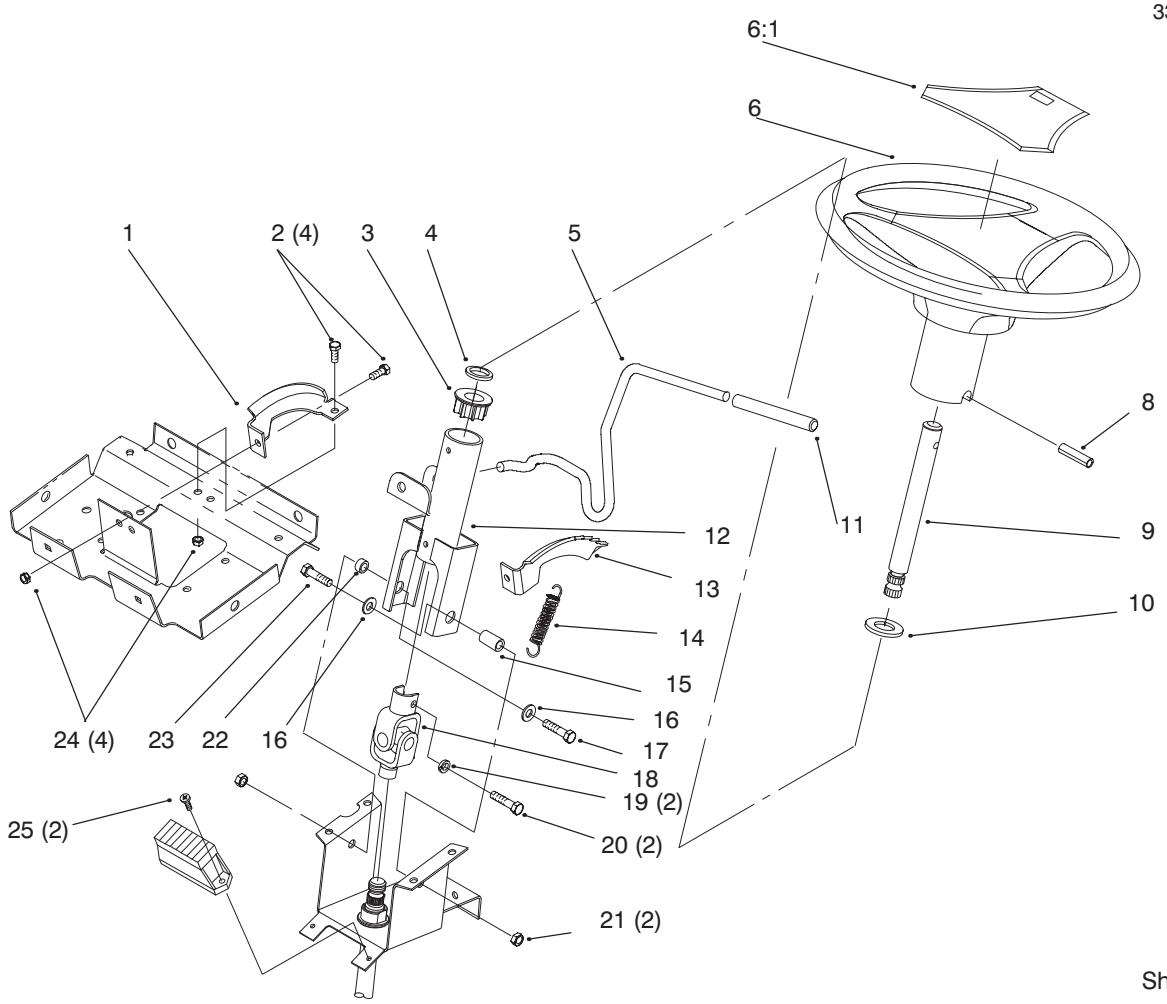


Sheet No.: 9

Steering Wheel and Tilt

Ref. No.	Part No.	Qty.	Description
1	92–6777–03	1	Bracket–Support
2	321–4	4	Screw–HH
3	93–1146	1	Bushing–Steering
4	7896	1	Washer–Bowed
5	92–6971	1	Lever–Tilt
6	88–3850	1	Steering Wheel (Only On: 72042, 72043, 72062)
6	92–6657	1	Steering Wheel (Only On: 72063, 72103)
6:1	88–3870	1	Cover–Steering Wheel (Only On: 72063, 72103)
6:2	88–3870	1	Cover–Steering Wheel (Only On: 72043, 72062)
8	32121–111	1	Pin–Spiral
9	92–6704	1	Shaft–Steering
10	3256–28	1	Washer–Flat
11	92–6798	1	Cap–Rod
12	93–1148–03	1	Column
13	92–6776	1	Bracket–Detent
14	93–1357	1	Spring–Extension
15	92–6999	1	Spacer–Yoke
16	3256–23	2	Washer–Flat
17	322–3	1	Screw–HH
18	92–6717	1	U–Joint–Steering
19	3253–4	2	Washer–Lock
20	48–7730	2	Screw–HH
21	3296–29	2	Nut–Lock
22	92–6998	1	Spacer–Yoke
23	322–17	1	Screw–HH
24	3296–8	4	Nut–Lock

PROTOTYPE

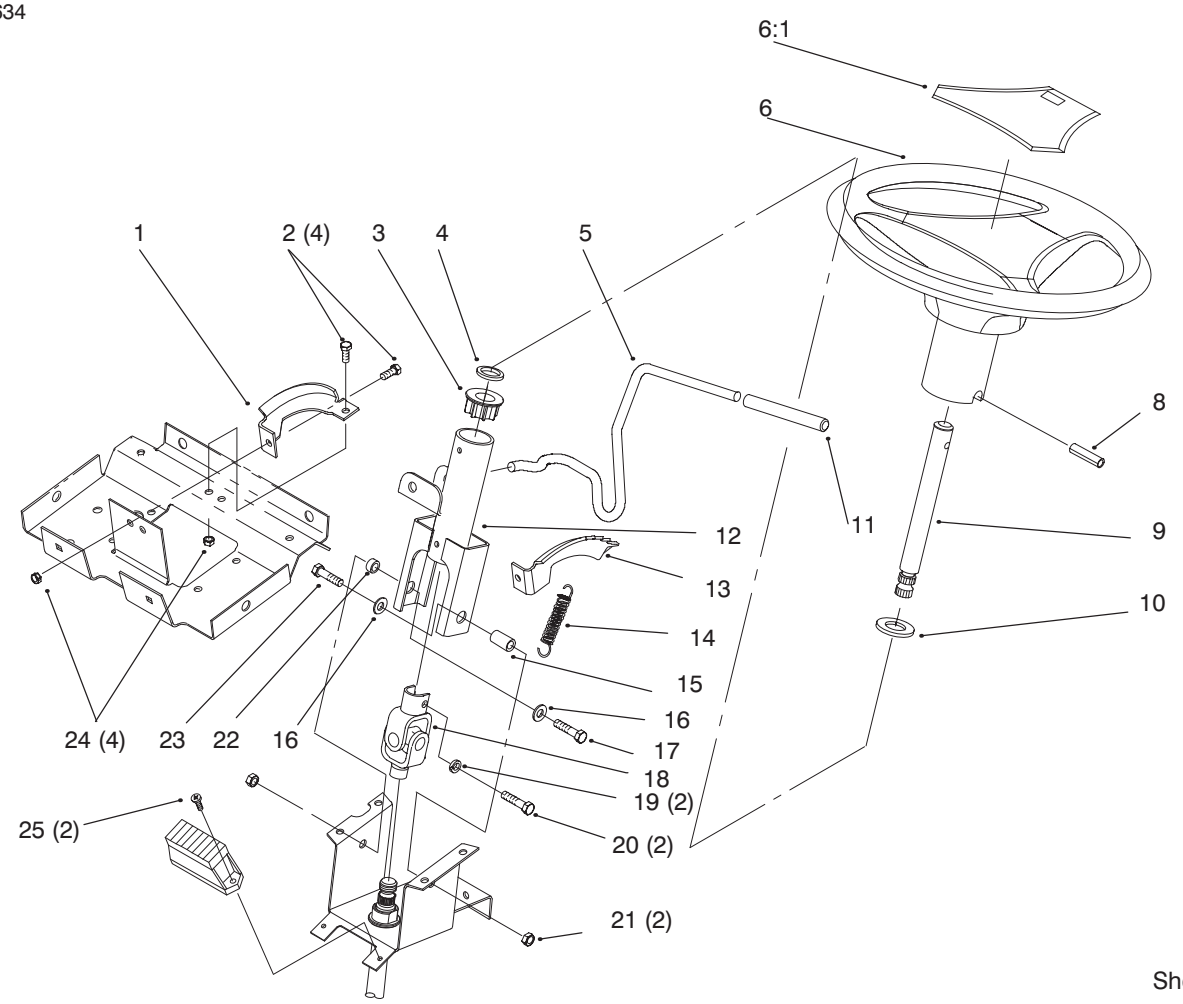


Sheet No.: 9

Steering Wheel and Tilt

Ref. No.	Part No.	Qty.	Description
25	32144–8	2	Screw–PPH

PROTOTYPE

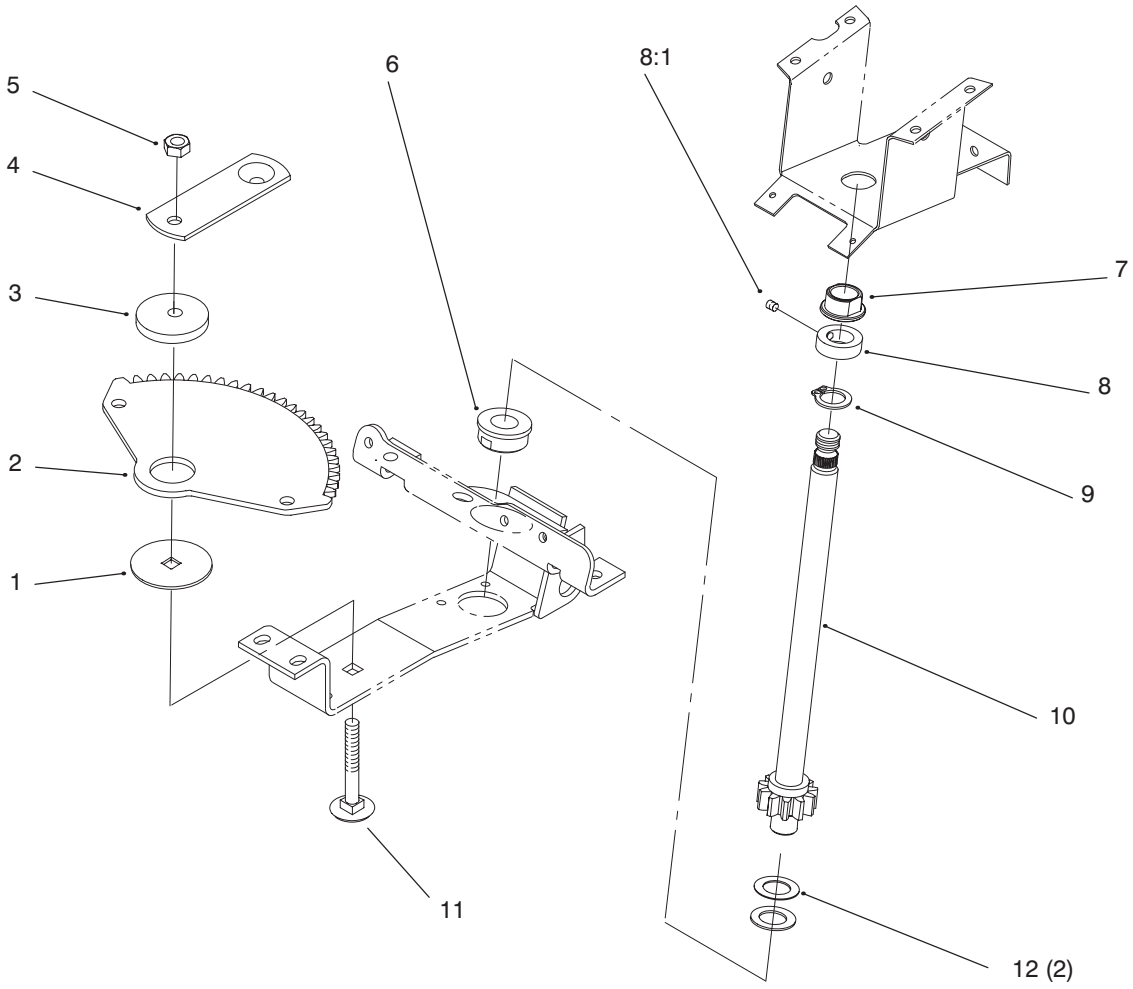


Sheet No.: 8

Lower Steering

Ref. No.	Part No.	Qty.	Description
1	111419	1	Washer–Bearing
2	78–2610	1	Gear–Sector
3	111418	1	Bushing
4	78–9150–03	1	Plate
5	108881	1	Nut–Hex
6	110391	1	Bearing–Wheel
7	109189	1	Bearing–Flange
8	111383	1	Collar W/Set Screw
8:1	3245–32	1	Screw–Set
9	111646	1	Grip Ring
10	92–6702	1	Shaft–Steering Lower
11	3231–4	1	Bolt–CARR
12	1278	2	Washer–Shim

PROTOTYPE

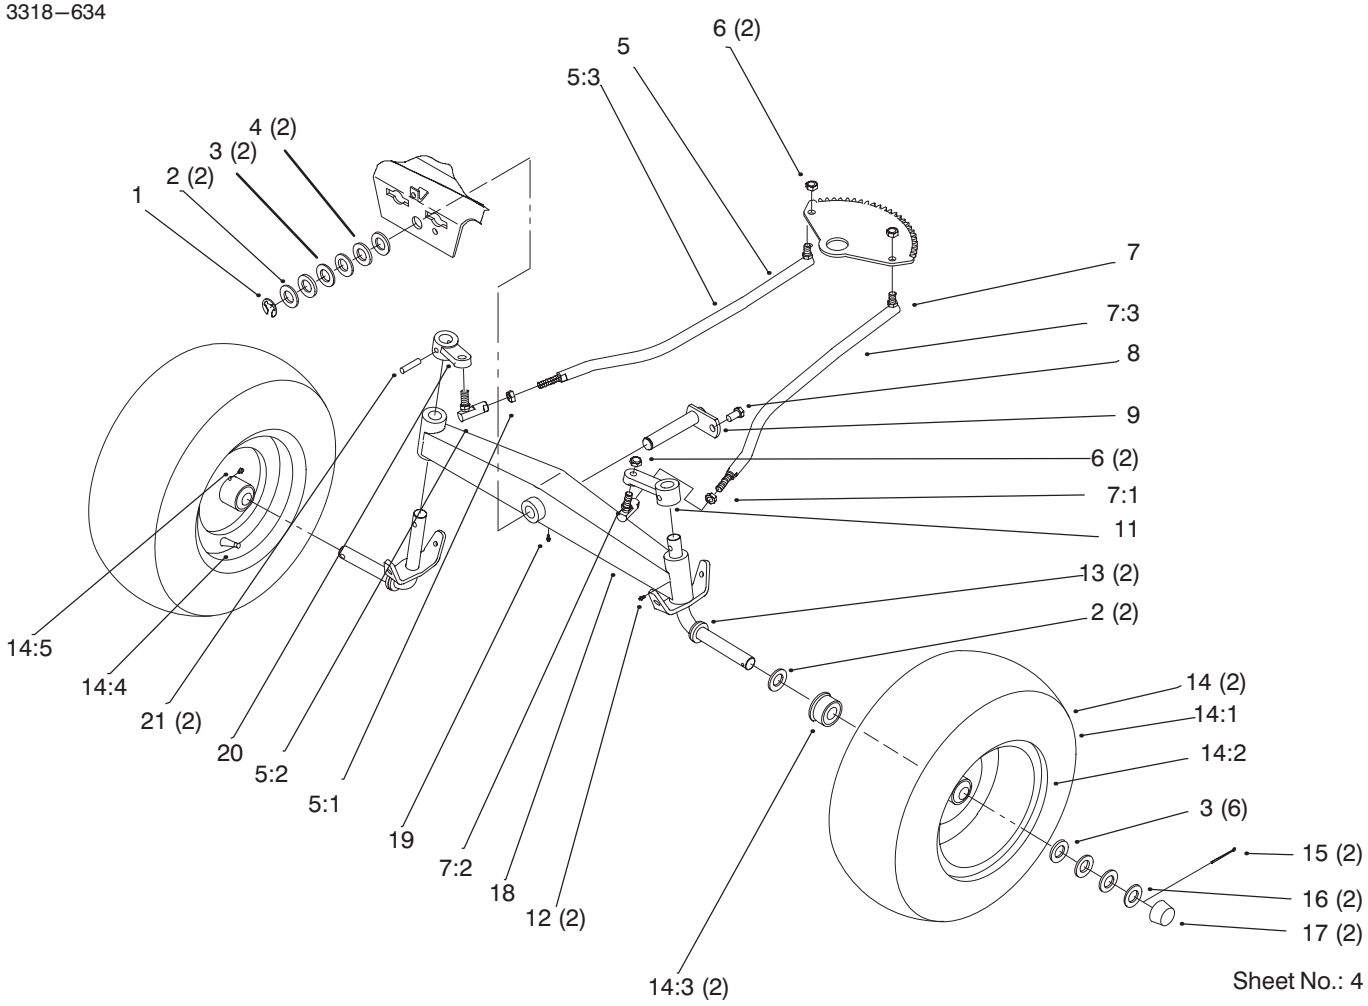


Sheet No.: 4

Front Axle

Ref. No.	Part No.	Qty.	Description
1	5618	1	Ring–Retaining
2	5210	4	Washer–Shim
3	1278	4	Washer–Shim
4	9202324	2	Washer
5	92–6883	1	Steering Link RH
☆5:1		1	Nut–HJ
5:2	78–2920	1	Joint–Ball
5:3	78–5801	1	Joint–Ball RH W/ Jam Nut
6	9150026	4	Nut–Lock
7	92–6884	1	Steering Link LH
☆7:1		1	Nut–HJ
7:2	78–2920	1	Joint–Ball
7:3	78–5811	1	Joint–Ball LH
8	9267154	1	Screw
9	92–7057–03	1	Pin–Front
11	78–1940–01	1	Arm–Front Spindle RH
12	302–5	2	Fitting–Grease
13	78–2601–01	2	Spindle
☆14		2	Wheel & Tire ASM
14:1	117127	2	Tire
14:2	78–1680	2	Wheel
14:3	110513	4	Bearing–Wheel
14:4	5108	2	Valve–Tire Tubeless
14:5	109500	2	Fitting–Grease
15	3272–17	2	Pin–Cotter
16	28–2480	2	Washer–Flat
17	61–9780	2	Hubcap

☆ Not serviced

PROTOTYPE

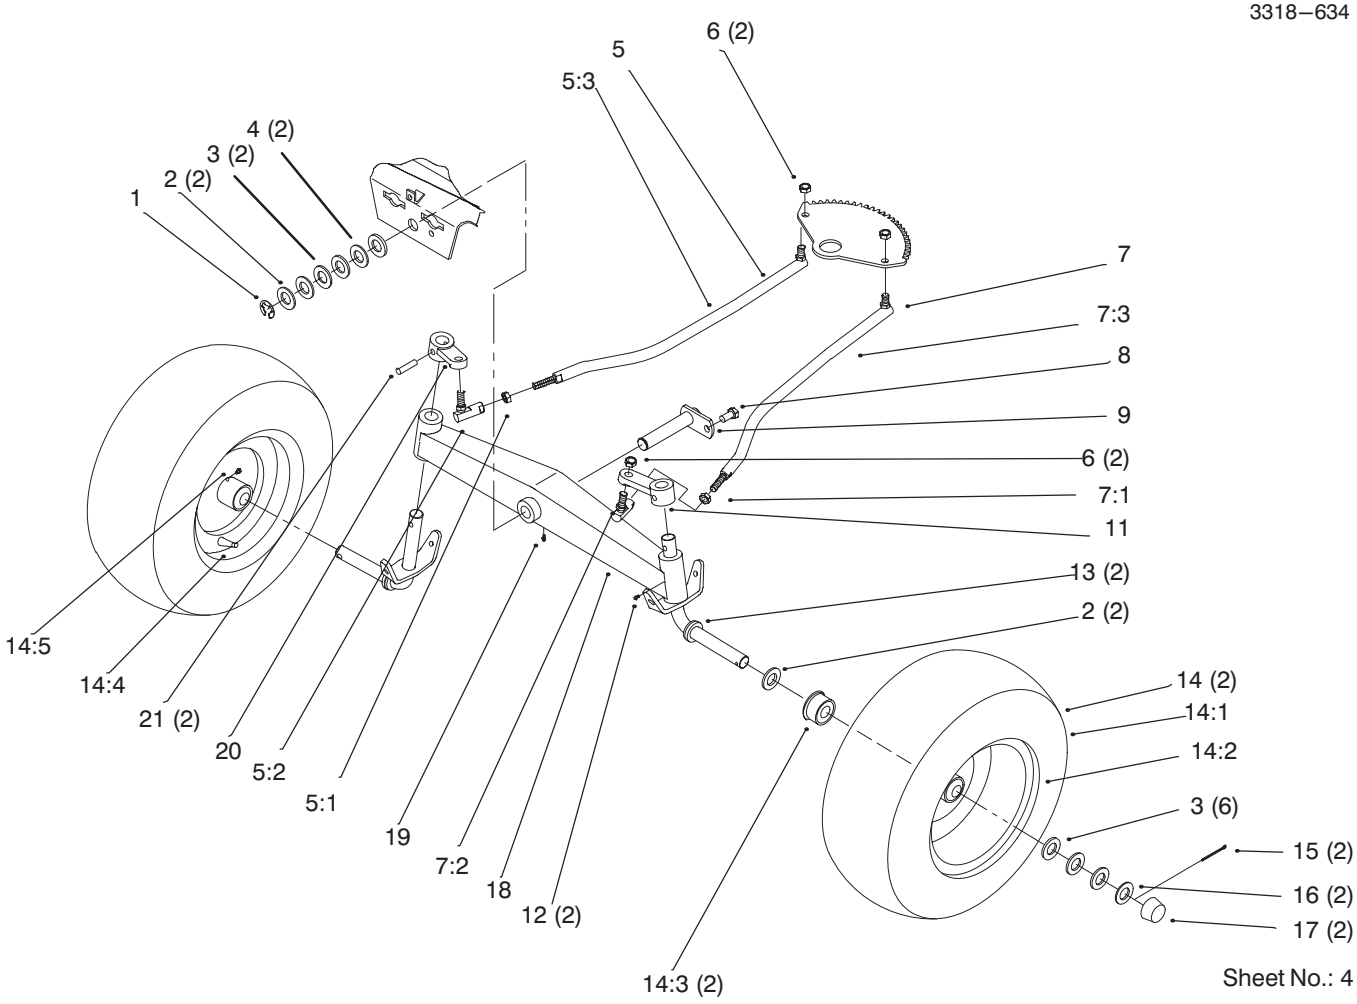


Sheet No.: 4

Front Axle

Ref. No.	Part No.	Qty.	Description
18	78–7960–01	1	Axle–Front
19	302–11	1	Fitting–Grease
20	78–1950–01	1	Arm–Front Spindle LH
21	933270	2	Pin–Roll

PROTOTYPE

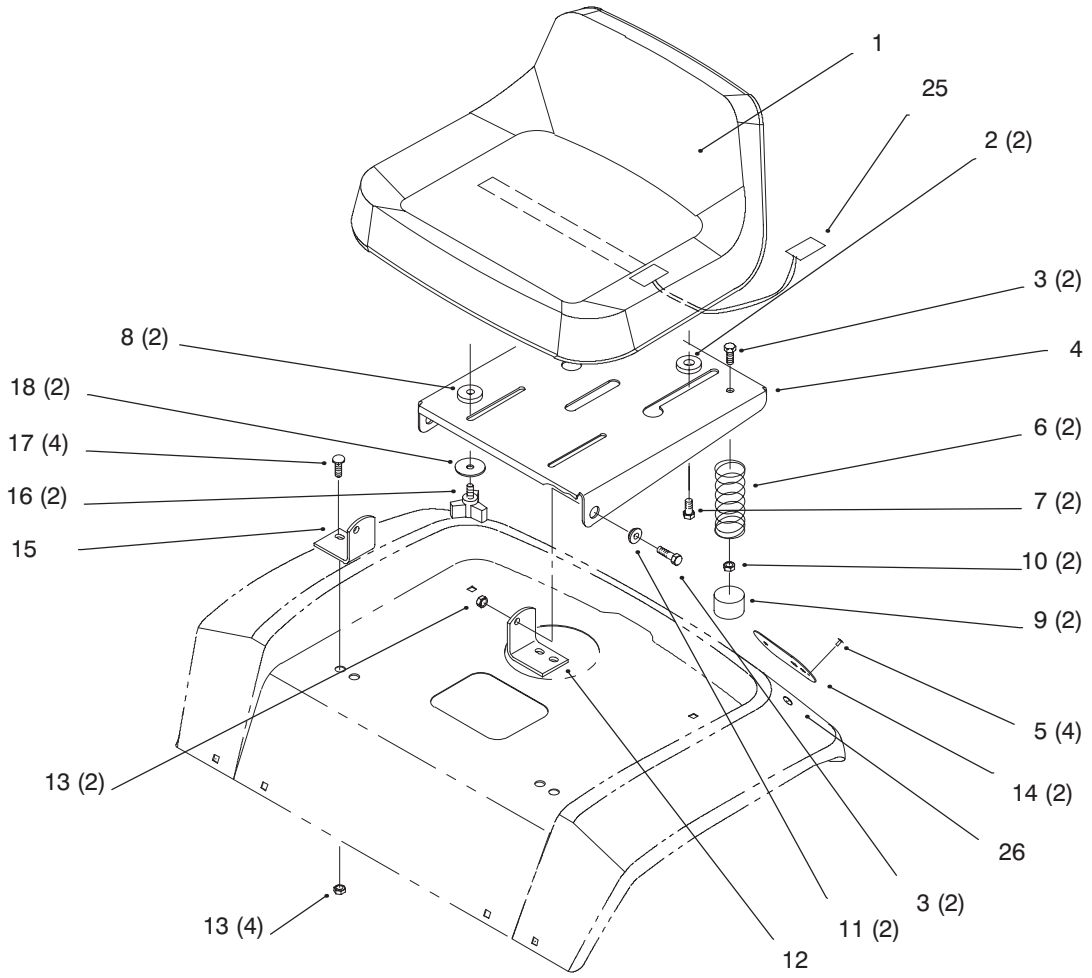


Sheet No.: 18

Seat

Ref. No.	Part No.	Qty.	Description
1	88–3950	1	Seat (Only On: 72042, 72043)
1	92–6511	1	Seat (Only On: 72062, 72063, 72103)
2	92–6750	2	Spacer–Nylon
3	322–5	4	Screw–HH
4	92–6972–03	1	Support–Seat
5	3290–282	4	Pop Rivet
6	92–7054	2	Spring–Compression
7	92–6986	2	Bolt–Shoulder
8	109989	2	Spacer
9	701178	2	Cap–Protector
10	3296–58	2	Nut–Flange
11	105503	2	Bushing
12	79–0970–03	1	Bracket–Pivot LH
13	3296–29	6	Nut–Lock
14	106557	2	Reflector
15	79–0950–03	1	Bracket–Pivot RH
16	700806	2	Knob
17	3230–2	4	Screw–CARR
18	5–4460	2	Washer–Fender
25	38–1420	1	Switch–Seat
26	3256–49	2	Washer–Flat

PROTOTYPE

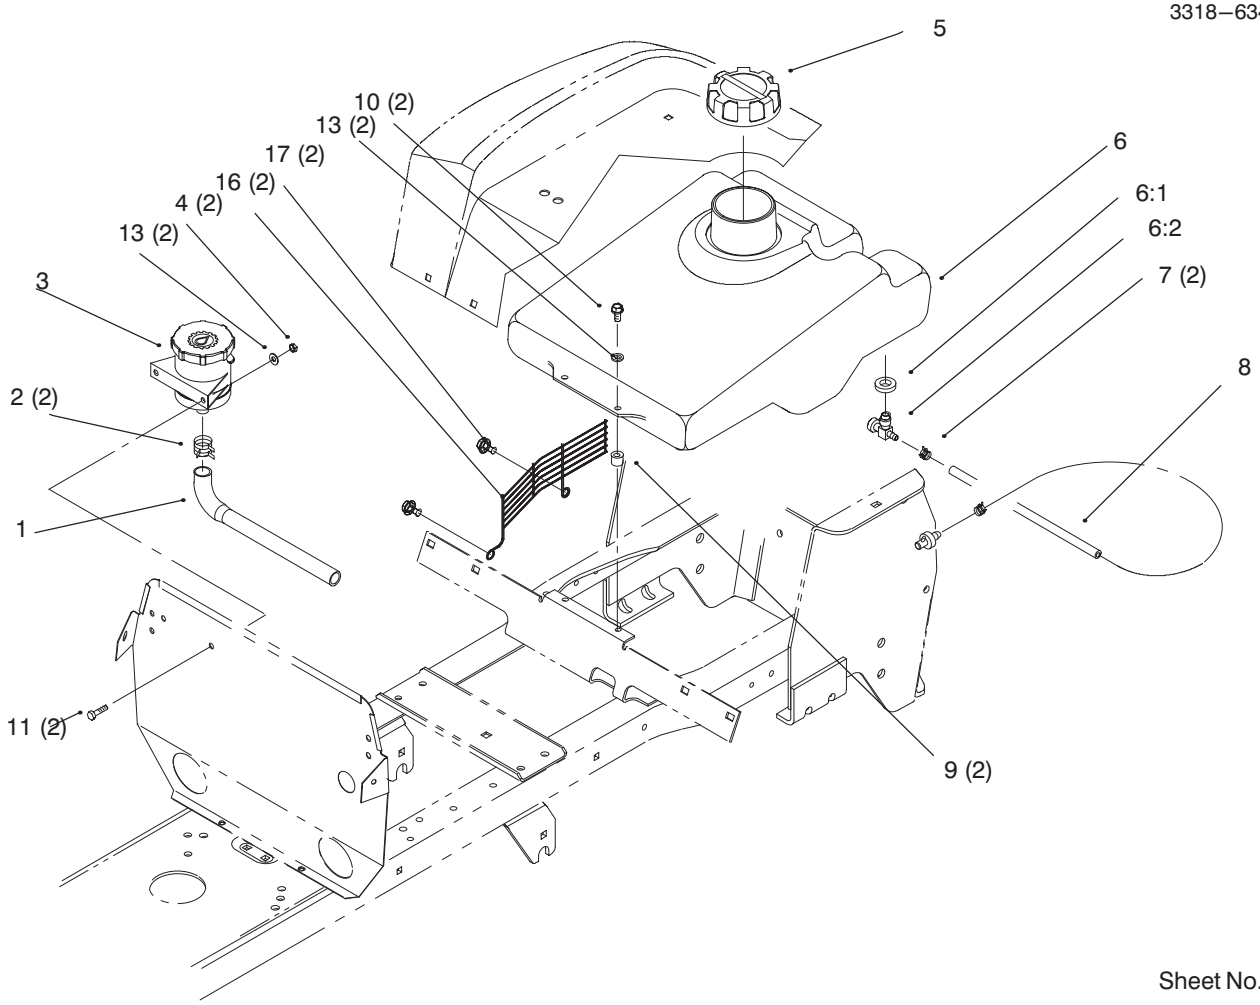


Sheet No.: 7

Fuel Tank and Hydro Reservoir

Ref. No.	Part No.	Qty.	Description
1	92–6737	1	Hose (Only On: 72043, 72063, 72103)
2	2412–129	2	Clamp–Hose (Only On: 72043, 72063, 72103)
3	79–3500	1	Reservoir (Only On: 72043, 72063, 72103)
4	3296–42	2	Nut–Lock (Only On: 72043, 72063, 72103)
5	88–3980	1	Gas Cap ASM
6	92–6506	1	Tank–Gas
6:1	104047	1	Bushing
6:2	104048	1	Assembly–Valve
7	2412–98	2	Clamp–Hose
8	92–6754	1	Hose–Fuel Line (Only On: 72042, 72043, 72062, 72063)
8	93–1627	1	Hose–Fuel Line (Only On: 72103)
9	93–1144	2	Spacer–Fuel Tank (Only On: 72043, 72063, 72103)
10	32104–96	2	Screw–HHST (Only On: 72043, 72063, 72103)
10	32144–4	2	Screw–TAP (Only On: 72042, 72062)
11	321–4	2	Screw–HH (Only On: 72043, 72063, 72103)
13	3256–22	4	Washer–Flat (Only On: 72043, 72063, 72103)
16	93–9275	1	Guard–Fan (Only On: 72063, 72103)
17	32144–14	2	Screw–HWHTF (Only On: 72063, 72103)

PROTOTYPE

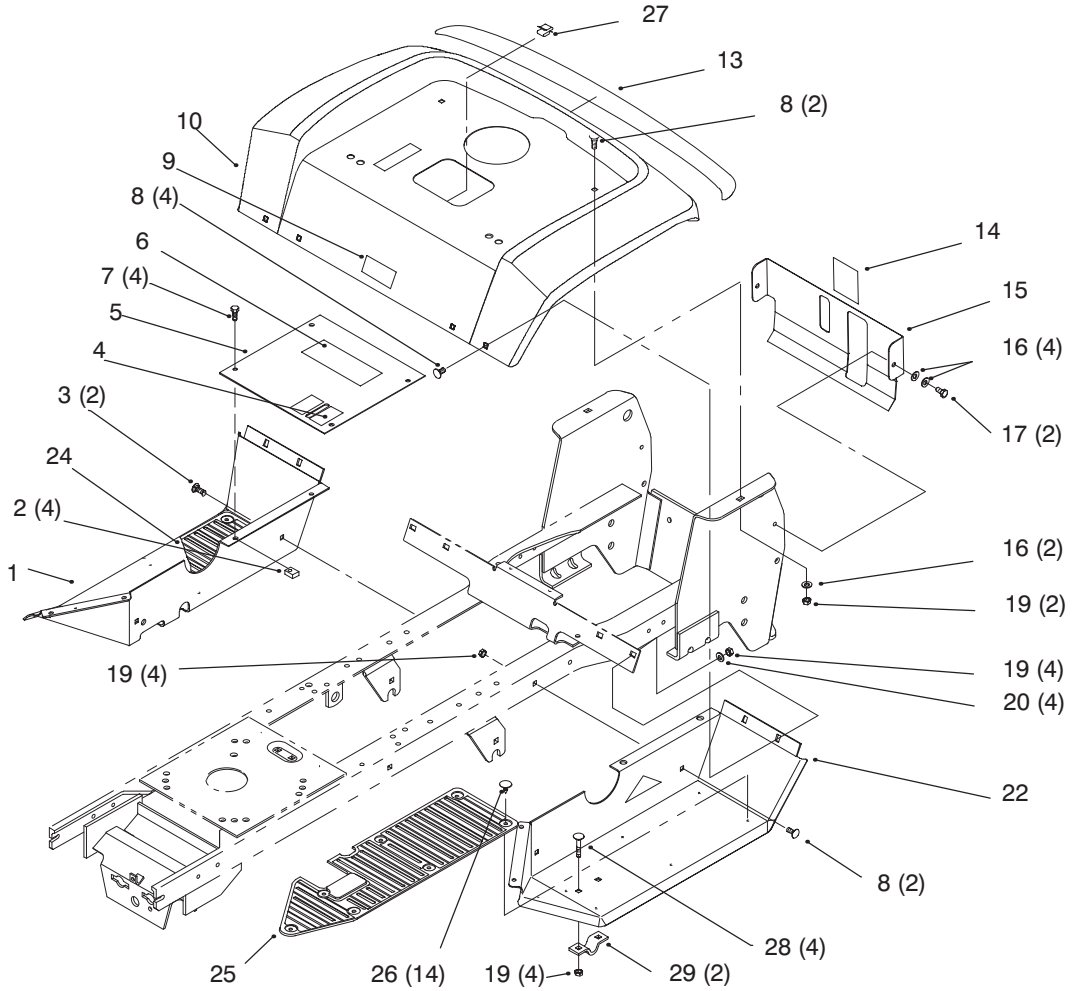


Sheet No.: 17

Fender and Footrest

Ref. No.	Part No.	Qty.	Description
1	92−6744−01	1	Footrest−RH (Only On: 72042, 72062)
1	92−6747−01	1	Footrest−RH (Only On: 72043, 72063, 72103)
2	92−6876	4	Nut−Retainer
3	3230−23	2	Screw−CARR
4	92−6725	1	Decal−HOC (Only On: 72042, 72043)
4	92−7092	1	Decal−HOC (Only On: 72062, 72063, 72103)
5	93−0489−01	1	Plate−Footrest W/Decal
6	92−8946	1	Decal−Danger
7	92−7020	4	Screw−TTH
8	3230−2	8	Screw−CARR
9	76−1340	1	Decal−USA (Only On: 72042, 72043)
10	92−6795−01	1	Fender
13	92−6730	1	Decal−Rear Fender
14	92−6727	1	Decal−Fuel Level
15	92−6713−03	1	Cover−Rear
16	3256−23	6	Washer−Flat
17	9266934	2	Screw−HWHTF
19	3296−29	14	Nut−Lock
20	3256−71	4	Washer−Flat
22	92−6745−01	1	Footrest−LH (Only On: 72042, 72062)
22	92−6746−01	1	Footrest−LH (Only On: 72043, 72063, 72103)
24	92−6687	1	Mat−Foot RH (Only On: 72043, 72063, 72103)
24	92−6689	1	Mat−Foot RH (Only On: 72042, 72062)
25	92−6688	1	Mat−Foot LH (Only On: 72043, 72063, 72103)
25	92−6690	1	Mat−Foot LH (Only On: 72042, 72062)
26	3290−479	14	Fastener−Panel

PROTOTYPE

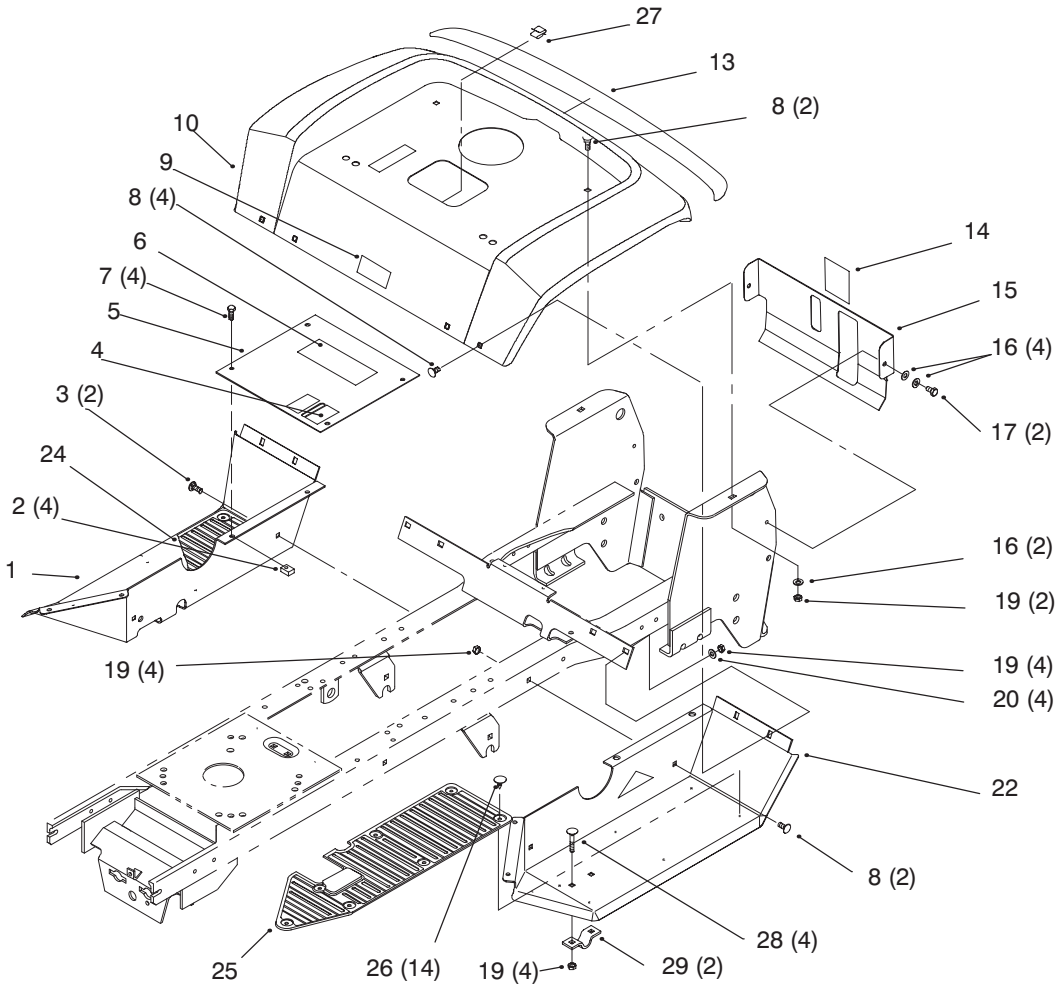


Sheet No.: 17

Fender and Footrest

Ref. No.	Part No.	Qty.	Description
27	702366	1	Clip−Wire Retainer
28	3230−20	4	Bolt−CARR
29	106288	2	Clamp

PROTOTYPE

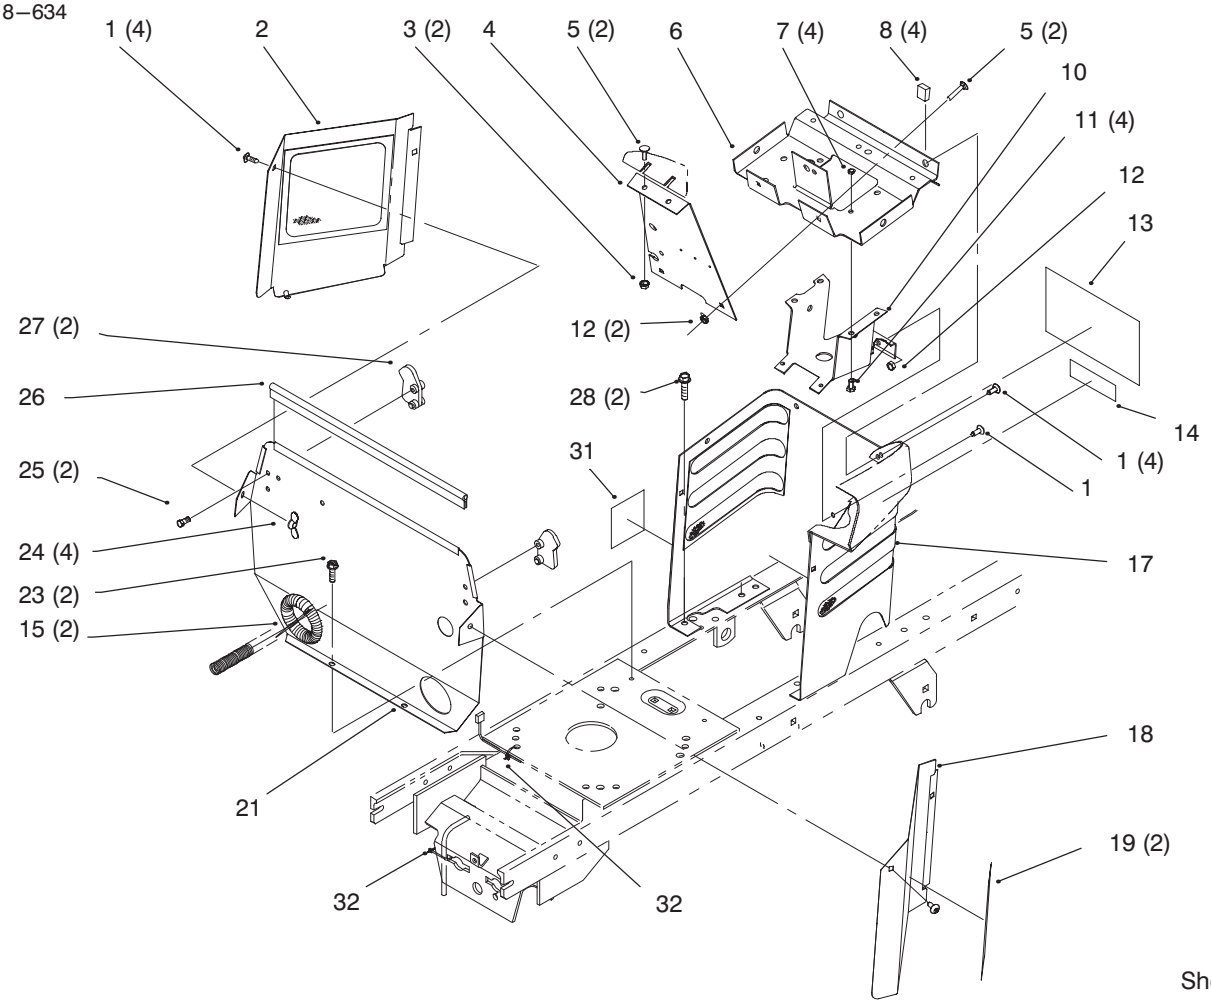


Sheet No.: 10

Hoodstand and Firewall

Ref. No.	Part No.	Qty.	Description
1	92−7020	9	Screw−TTH
2	92−6937−03	1	Cover−Side RH
3	32149−2	2	Nut−Hex Lock
4	94−1712	1	Panel−Support Dash
5	3229−11	4	Bolt−CARR
6	92−6859−03	1	Support−Dash
7	3296−8	4	Nut−Lock
8	92−6860	4	Nut−Retainer
10	92−6778−03	1	Support−Column
11	321−4	4	Screw−HH
12	3296−42	3	Nut−Lock
13	92−7089	1	Decal−Slope/Park Brake (Only On: 72062)
13	92−7091	1	Decal−Slope/Park Brake (Only On: 72063, 72103)
13	93−0301	1	Decal−Slope/Park Brake (Only On: 72042)
13	93−0302	1	Decal−Slope/Park Brake (Only On: 72043)
14	83−6620	1	Decal−Instruction
15	24−7924	2	Cover−Drive Shaft
17	93−0485−03	1	Hoodstand W/Decals (Only On: 72042)
17	93−0486−03	1	Hoodstand W/Decals (Only On: 72043)
17	93−0487−03	1	Hoodstand W/Decals (Only On: 72062)
17	93−0488−03	1	Hoodstand W/Decals (Only On: 72063, 72103)
18	92−6936−03	1	Cover−Side LH
19	92−6733	2	Decal−264−6 (Only On: 72042, 72062)
19	92−6734	2	Decal−264−H (Only On: 72043, 72063)
19	92−6736	2	Decal−268−H (Only On: 72103)
21	92−6771−03	1	Baffle−Rear

PROTOTYPE

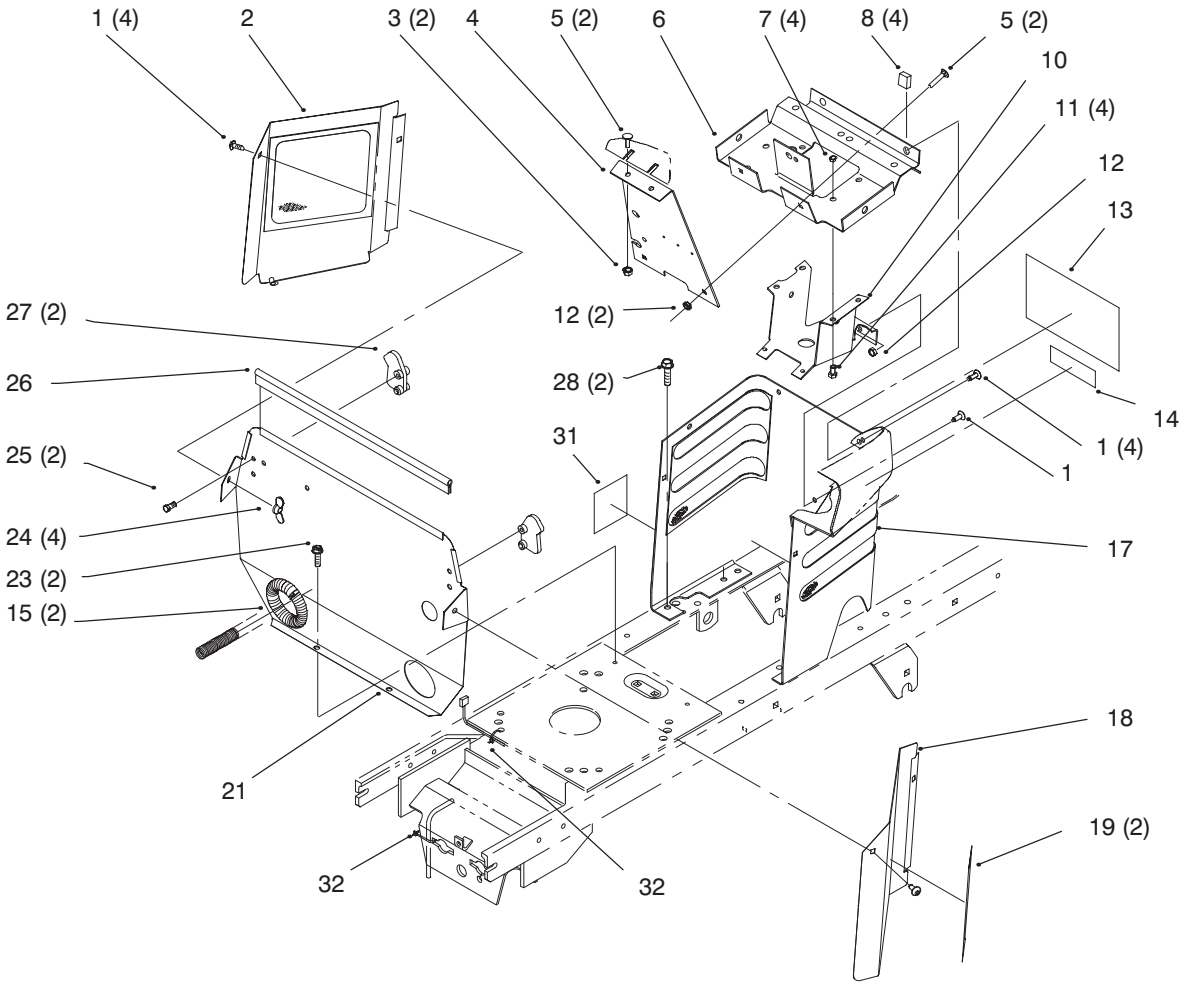


Sheet No.: 10

Hoodstand and Firewall

Ref. No.	Part No.	Qty.	Description
23	32144–4	2	Screw–TAP
24	32103–22	4	Nut–Wing
25	46–8093	2	Screw–TAP
26	93–1131	1	Trim–Seal
27	92–6960	2	Latch–Hood
28	32144–14	2	Screw–HH
31	114621	1	Decal–Noise (Only On: 72062, 72063, 72103)
32	614249	2	Tie Strap

PROTOTYPE


3318–634

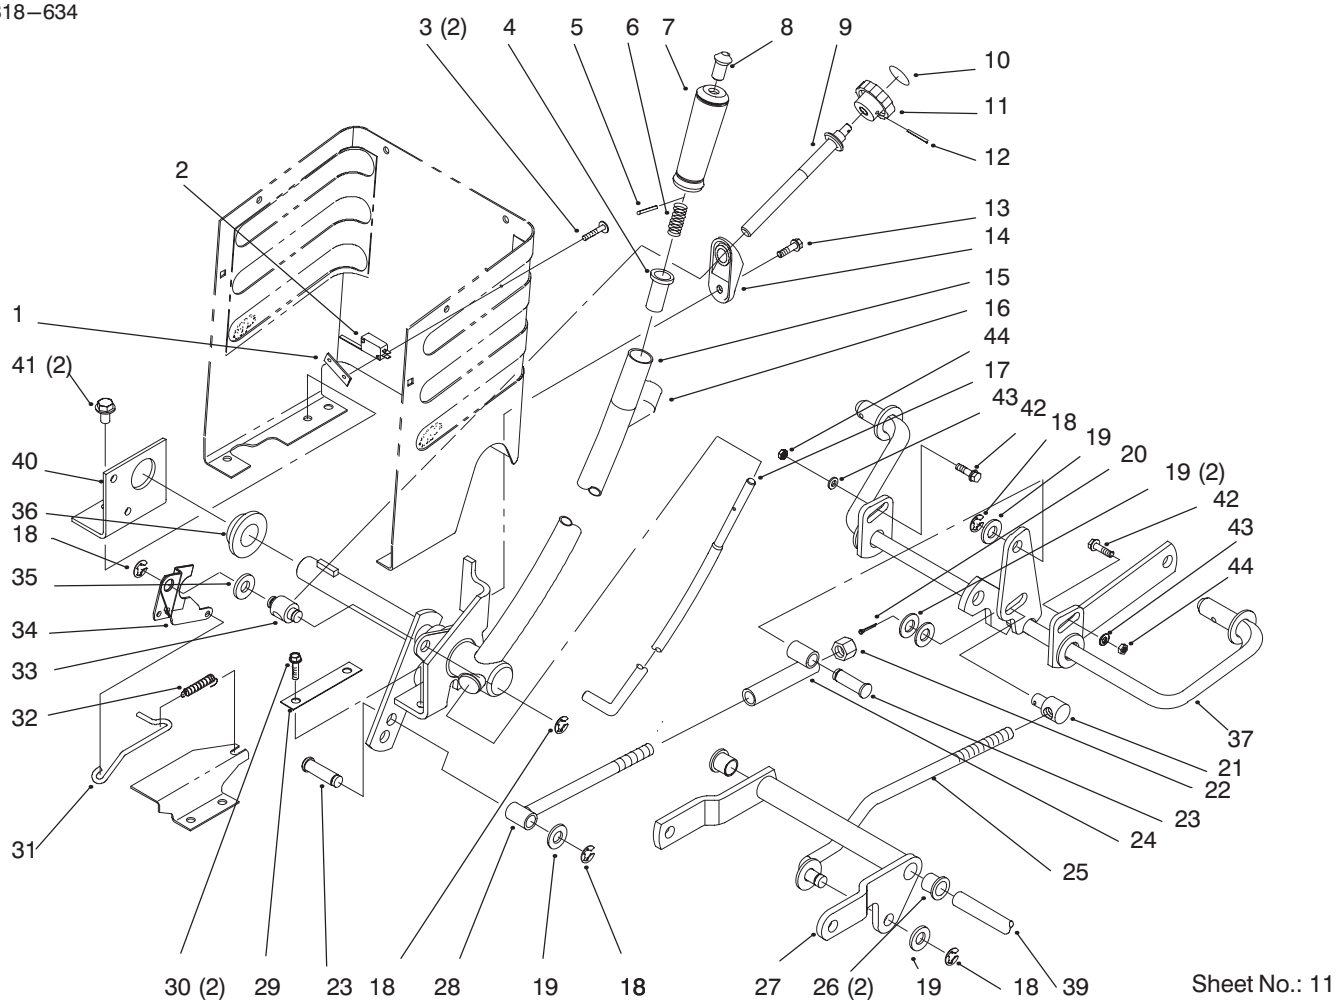

Lift Lever and Height of Cut

Ref. No.	Part No.	Qty.	Description
1	3290–354	1	Nut–Speed
2	88–9930	1	Switch–Micro
3	147665	2	Screw
4	8130	1	Retainer–Spring
5	933148	1	Pin–Spirol
6	3624	1	Spring–Compression
7	92–6710	1	Grip–Handle
8	92–6711	1	Tip–Rod
9	92–6965	1	Rod–HOC
10	78–9740	1	Decal–HOC Knob
11	115593	1	Knob
12	933141	1	Pin–Spirol
13	32144–4	1	Screw–TAP
14	92–6794	1	Wedge–HOC Adjust
15	92–6874–03	1	Lever–Lift
16	112168	1	Decal–Lift (Only On: 72042, 72043)
16	93–7323	1	Decal–Lift (Only On: 72062, 72063, 72103)
17	92–6977–03	1	Rod–Lift Lever
18	32120–47	5	Ring–Retaining
19	3256–26	5	Washer–Flat
20	3272–6	1	Pin–Cotter
21	8870	1	Trunnion
22	3296–23	1	Nut–Lock
23	79–1250	2	Pin
24	78–7390	1	Link
25	78–2431	1	Rod

PROTOTYPE

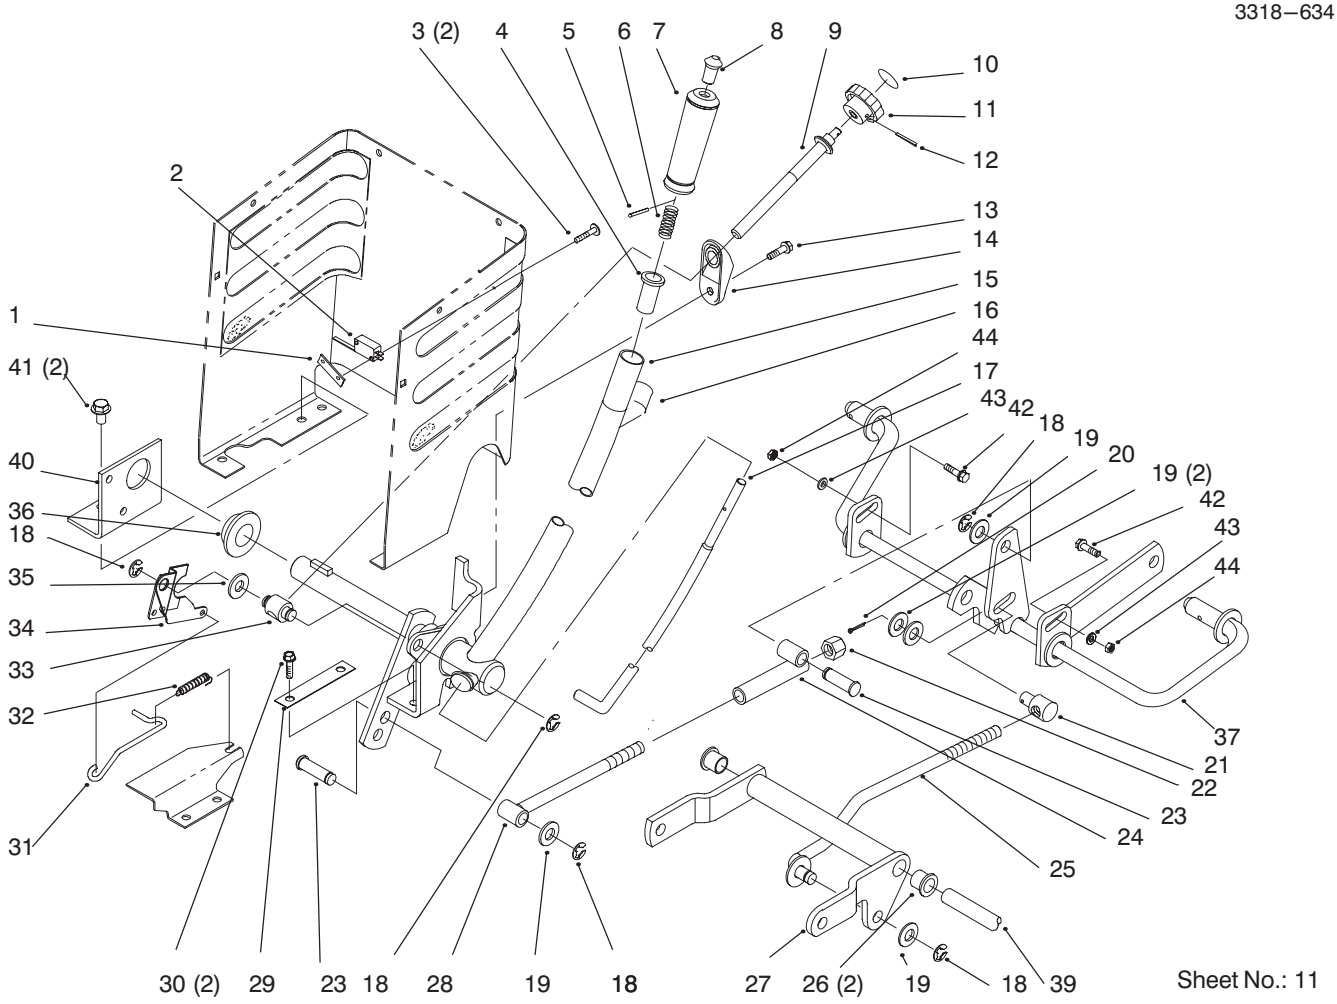


Sheet No.: 11

Lift Lever and Height of Cut

Ref. No.	Part No.	Qty.	Description
26	256–90	2	Bushing–Flange
27	92–6855–03	1	Arm
28	78–7360	1	Rod
29	78–6810–03	1	Plate
30	32144–14	2	Screw–HH
31	92–6978	1	Rod–HOC Indicator
32	92–7007	1	Spring–Extension
33	78–2140	1	Trunnion
34	92–6979	1	Plate–HOC Gage
35	9202634	1	Washer–Flat
36	106269	1	Bearing–Flange
37	79–3401–03	1	Gage Shaft
39	78–6831	1	Shaft
40	93–0523	1	Bracket–Pivot Linkage
41	32144–14	2	Screw–HH (Only On: 72043, 72063, 72103)
41	32144–70	2	Screw–TAP (Only On: 72042, 72062)
42	3231–25	2	Screw–CARR
43	3256–24	2	Washer–Flat
44	3296–39	2	Nut–Lock

PROTOTYPE

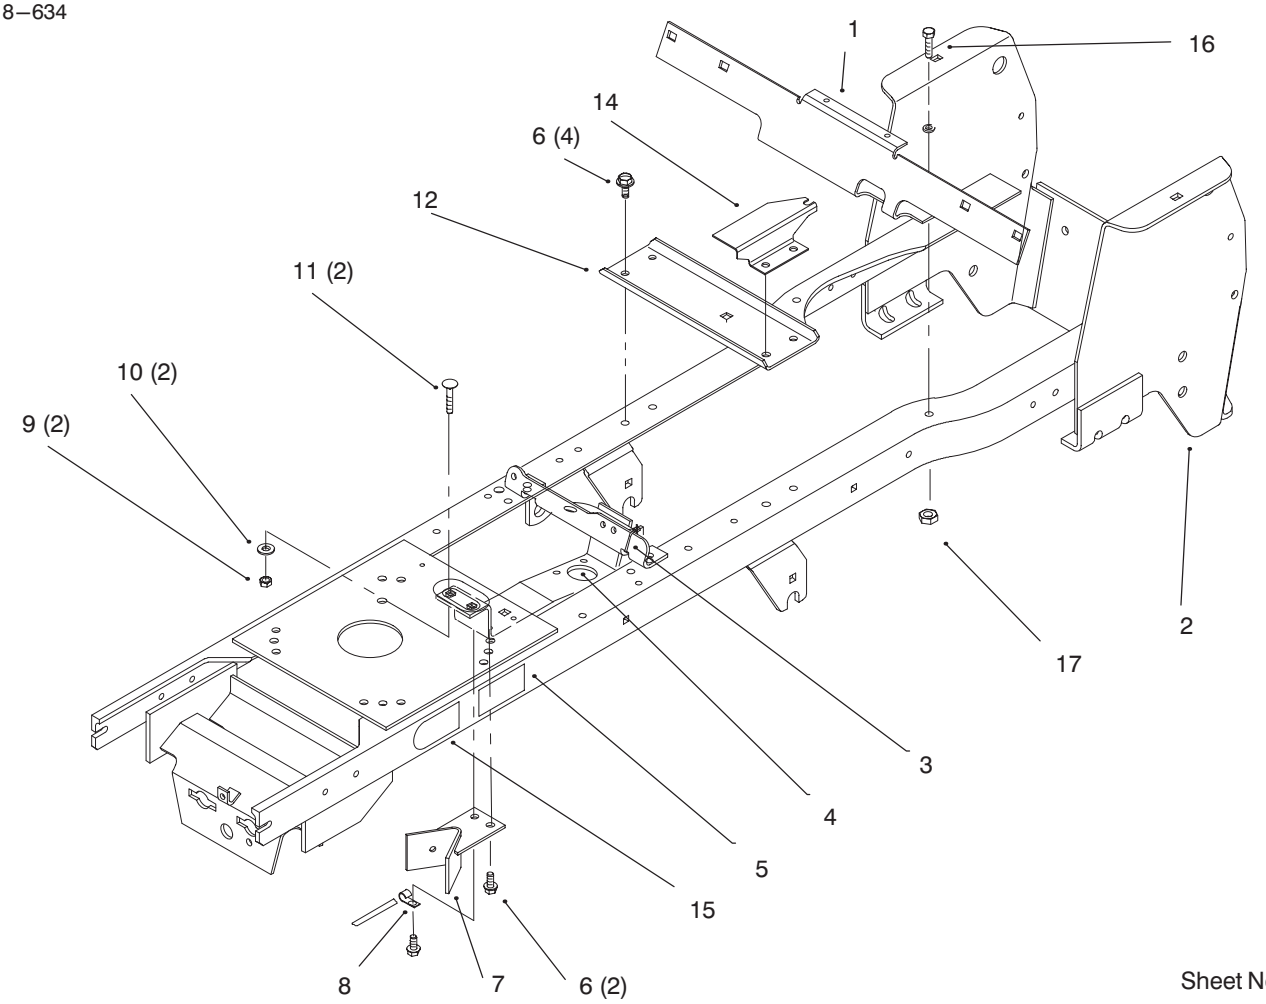


Sheet No.: 14

Frame

Ref. No.	Part No.	Qty.	Description
1	92–6674–03	1	Support–Fender
2	93–0522	1	Frame W.a.
3	614249	1	Tie Strap
4	92–6992–03	1	Bracket–Steering
5	79–6730	2	Decal–Belt Install (Only On: 72042, 72043)
5	93–7324	2	Decal–Belt Install (Only On: 72062, 72063, 72103)
6	32144–14	6	Screw–HH
7	78–2491–03	1	Stop–PTO
8	8830	1	Retainer–"J"
9	3296–29	2	Nut–Lock
10	3256–23	2	Washer–Flat
11	3230–2	2	Screw–CARR
12	92–6868–03	1	Bracket–Idler
14	92–6964–03	1	Bracket–HOC
15	322–5	1	Screw–HH (Only On: 72043, 72063, 72103)
15	92–8747	2	Decal–Attach–A–Matic
16	322–5	1	Screw–HH (Only On: 72043, 72063, 72103)
17	3296–29	1	Nut–Lock (Only On: 72043, 72063, 72103)

PROTOTYPE

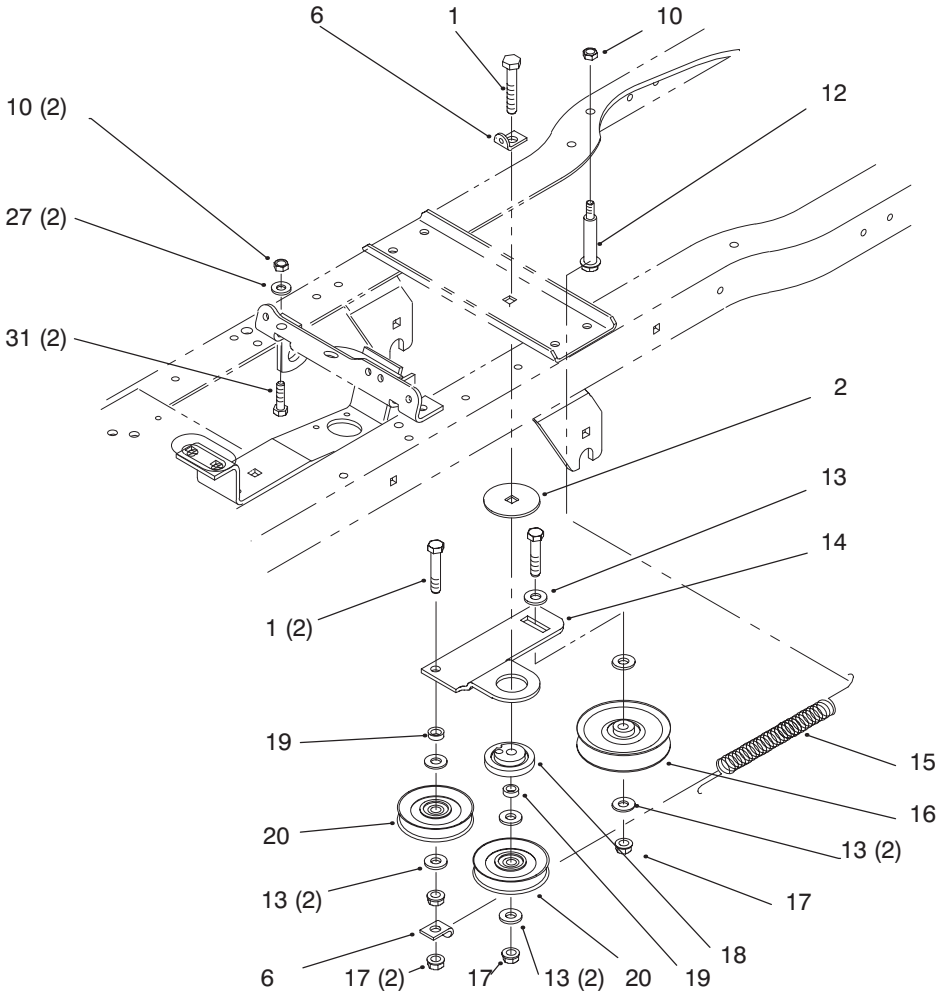


Sheet No.: 3

Hydro Drive Components

Ref. No.	Part No.	Qty.	Description
1	323–10	3	Screw–HH (Only On: 72043, 72063, 72103)
2	111419	1	Washer–Bearing (Only On: 72043, 72063, 72103)
6	2534	2	Clip–Spring (Only On: 72043, 72063, 72103)
10	3296–29	3	Nut–Lock (Only On: 72043, 72063, 72103)
12	88–4590	1	Bolt–Shoulder (Only On: 72043, 72063, 72103)
13	3256–24	7	Washer–Flat (Only On: 72043, 72063, 72103)
14	92–6900	1	Arm–Idler (Only On: 72043, 72063, 72103)
15	79–7530	1	Spring–Extension (Only On: 72043, 72063, 72103)
16	92–7101	1	Pulley–Flat (Only On: 72043, 72063, 72103)
17	3296–59	4	Nut–Lock (Only On: 72043, 72063, 72103)
18	111418	1	Bushing (Only On: 72043, 72063, 72103)
19	93–3658	2	Spacer (Only On: 72043, 72063, 72103)
20	92–7102	2	Pulley–Idler (Only On: 72043, 72063, 72103)
27	3256–23	2	Washer–Flat (Only On: 72043, 72063, 72103)
31	322–5	2	Screw–HH (Only On: 72043, 72063, 72103)

PROTOTYPE

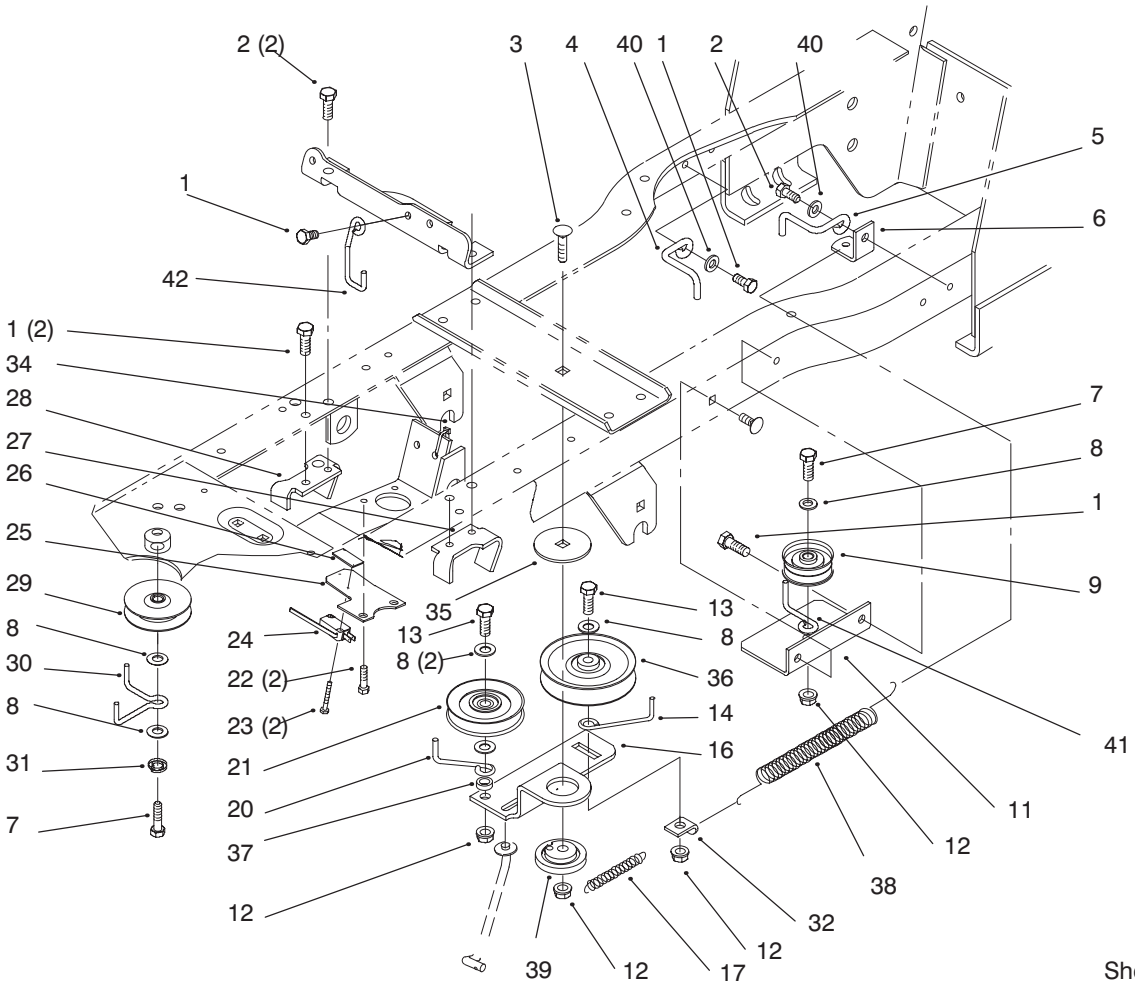


Sheet No.: 21

Gear Drive Components

Ref. No.	Part No.	Qty.	Description
1	32144–14	4	Screw–HH (Only On: 72042, 72062)
2	32144–70	3	Screw–TAP (Only On: 72042, 72062)
3	3231–25	1	Screw–CARR (Only On: 72042, 72062)
4	92–7001	1	Guide–Belt RH (Only On: 72042, 72062)
5	92–7002	1	Guide–Belt LH (Only On: 72042, 72062)
6	92–6891–03	1	Bracket–Idler Spring (Only On: 72042, 72062)
7	323–9	2	Screw–HH (Only On: 72042, 72062)
8	3256–24	6	Washer–Flat (Only On: 72042, 72062)
9	607978	1	Pulley–Idler (Only On: 72042, 72062)
11	92–6894–03	1	Bracket–Idler Rear (Only On: 72042, 72062)
12	3296–39	4	Nut–Lock (Only On: 72042, 72062)
13	323–10	2	Screw–HH (Only On: 72042, 72062)
14	79–0390	1	Guide–Belt (Only On: 72042, 72062)
16	78–6771	1	Arm–Idler (Only On: 72042, 72062)
17	107788	1	Spring–Extension (Only On: 72042, 72062)
20	79–0400	1	Guide–Belt (Only On: 72042, 72062)
21	92–7102	1	Pulley–Idler (Only On: 72042, 72062)
22	32144–4	2	Screw–TAP (Only On: 72042, 72062)
23	147665	2	Screw (Only On: 72042, 72062)
24	88–9930	1	Switch–Micro (Only On: 72042, 72062)
25	93–0526–03	1	Bracket–Micro Switch (Only On: 72042, 72062)
26	3290–354	1	Nut–Speed (Only On: 72042, 72062)
27	92–6670	1	Bracket–Clutch (Only On: 72042, 72062)
28	92–6671	1	Bracket–Brake (Only On: 72042, 72062)
29	93–0320	1	Pulley–Idler (Only On: 72042, 72062)
30	93–0547	1	Guide–Belt (Only On: 72042, 72062)

PROTOTYPE

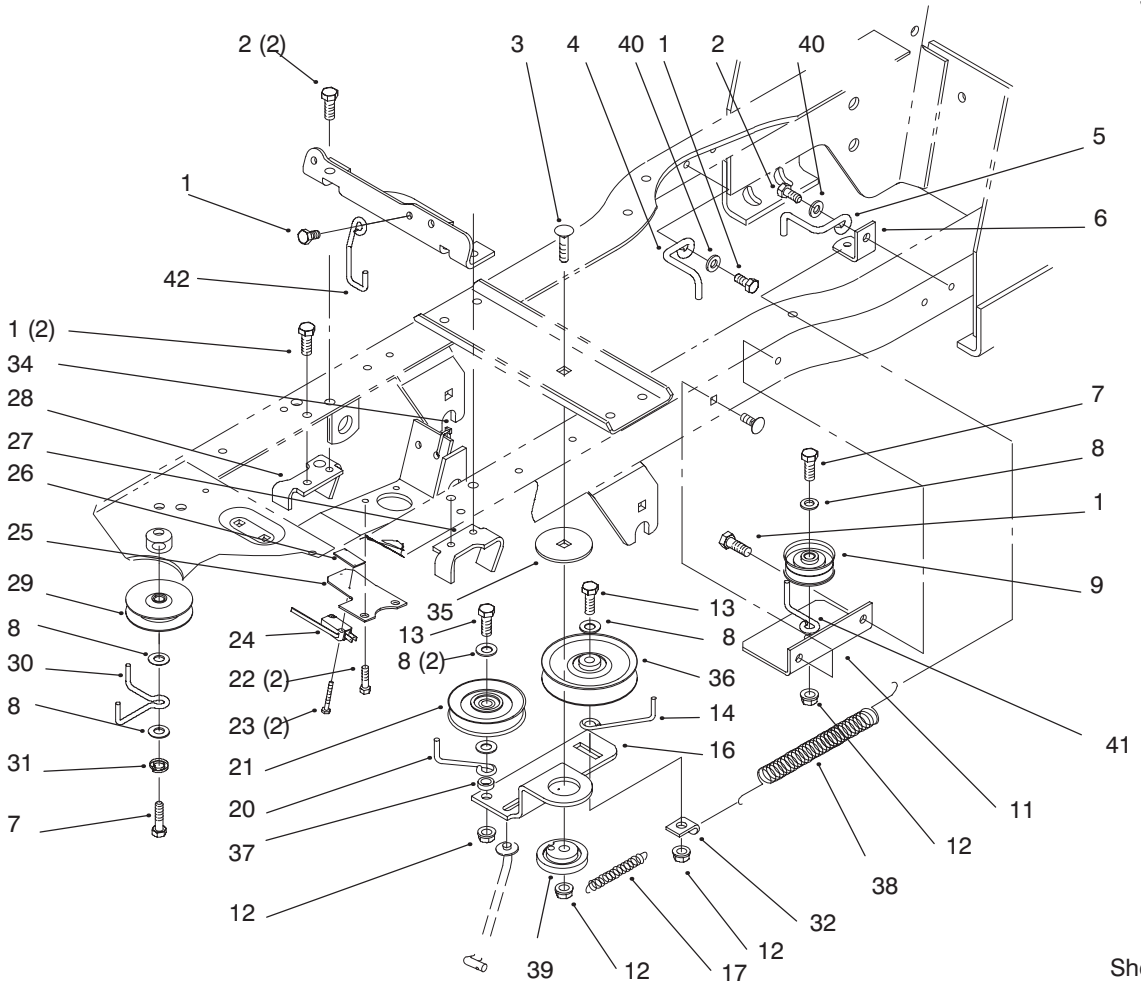


Sheet No.: 21

Gear Drive Components

Ref. No.	Part No.	Qty.	Description
31	3253–5	1	Washer–Lock (Only On: 72042, 72062)
32	2534	1	Clip–Spring (Only On: 72042, 72062)
34	614249	1	Tie Strap (Only On: 72042, 72062)
35	111419	1	Washer–Bearing (Only On: 72042, 72062)
36	92–7101	1	Pulley–Flat (Only On: 72042, 72062)
37	93–3658	2	Spacer (Only On: 72042, 72062)
38	79–7530	1	Spring–Extension (Only On: 72042, 72062)
39	111418	1	Bushing (Only On: 72042, 72062)
40	3256–23	2	Washer–Flat (Only On: 72042, 72062)
41	93–0549	1	Belt–Guide
42	93–0548	1	Belt–Guide

PROTOTYPE

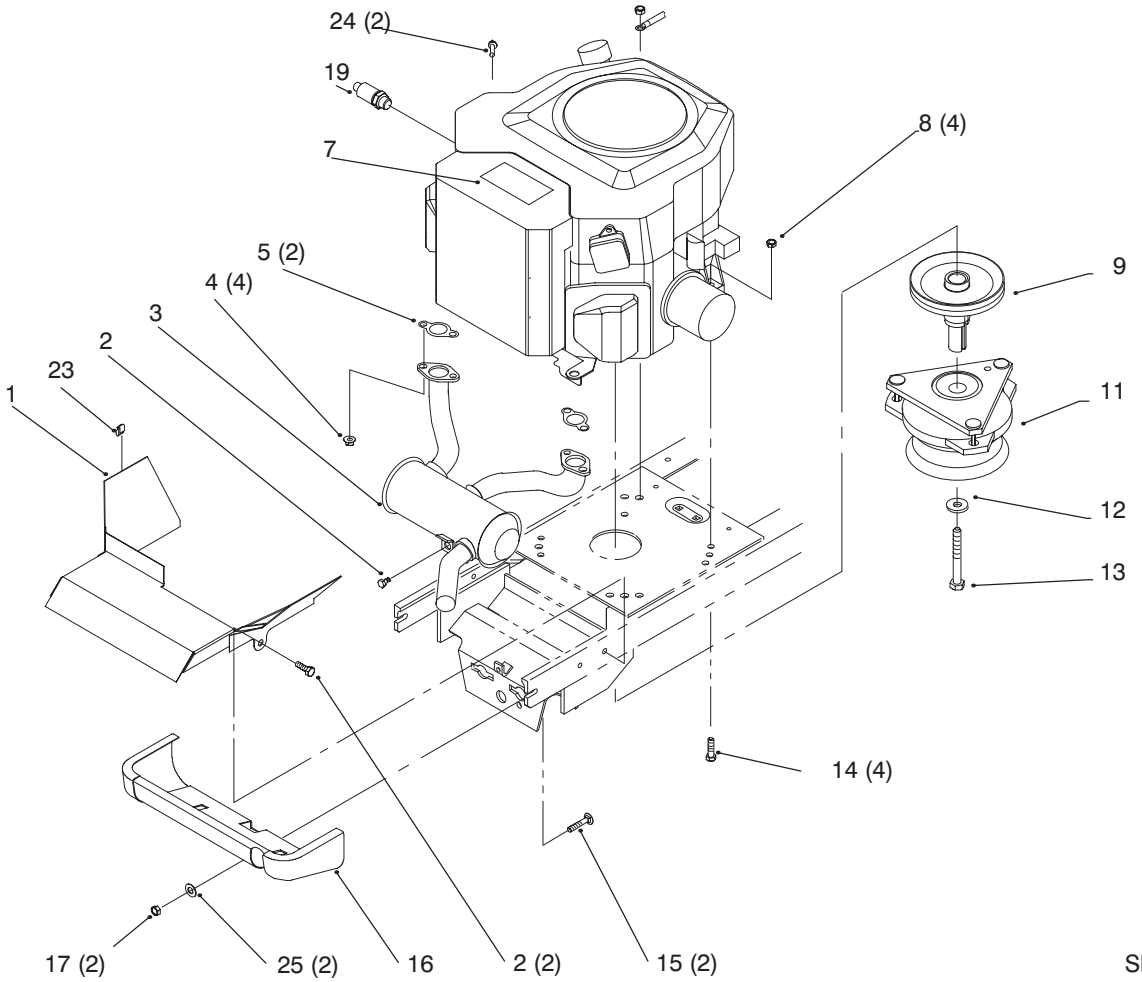


Sheet No.: 5

Twin Cylinder Engine, Muffler, and P.T.O.

Ref. No.	Part No.	Qty.	Description
1	92−6879−03	1	Baffle−Muffler (Only On: 72103)
2	32144−14	3	Screw−HWHTF (Only On: 72103)
3	92−6861	1	Muffler (Only On: 72103)
4	92−6780	4	Nut−HHF (Only On: 72103)
5	93−0350	2	Gasket−Exhaust (Only On: 72103)
7	93−0535	1	Decal−Toro Power Plus 18 (Only On: 72103)
8	3296−29	4	Nut−Lock (Only On: 72103)
9	92−6888	1	Pulley (Only On: 72103)
11	92−6885	1	Clutch−PTO (Only On: 72103)
12	112843	1	Washer−PTO (Only On: 72103)
13	9114466	1	Screw HH (Only On: 72103)
14	322−9	4	Screw−HH (Only On: 72103)
15	3231−22	2	Bolt−CARR (Only On: 72103)
16	92−6867−01	1	Shield−Muffler (Only On: 72103)
17	3296−39	2	Nut−Lock (Only On: 72103)
19	92−6877	1	Valve−Oil Drain (Only On: 72103)
23	702366	1	Clip−Wire Retainer (Only On: 72103)
24	32144−118	2	Screw−PPH (Only On: 72103)
25	3256−24	2	Washer−Flat (Only On: 72103)

PROTOTYPE

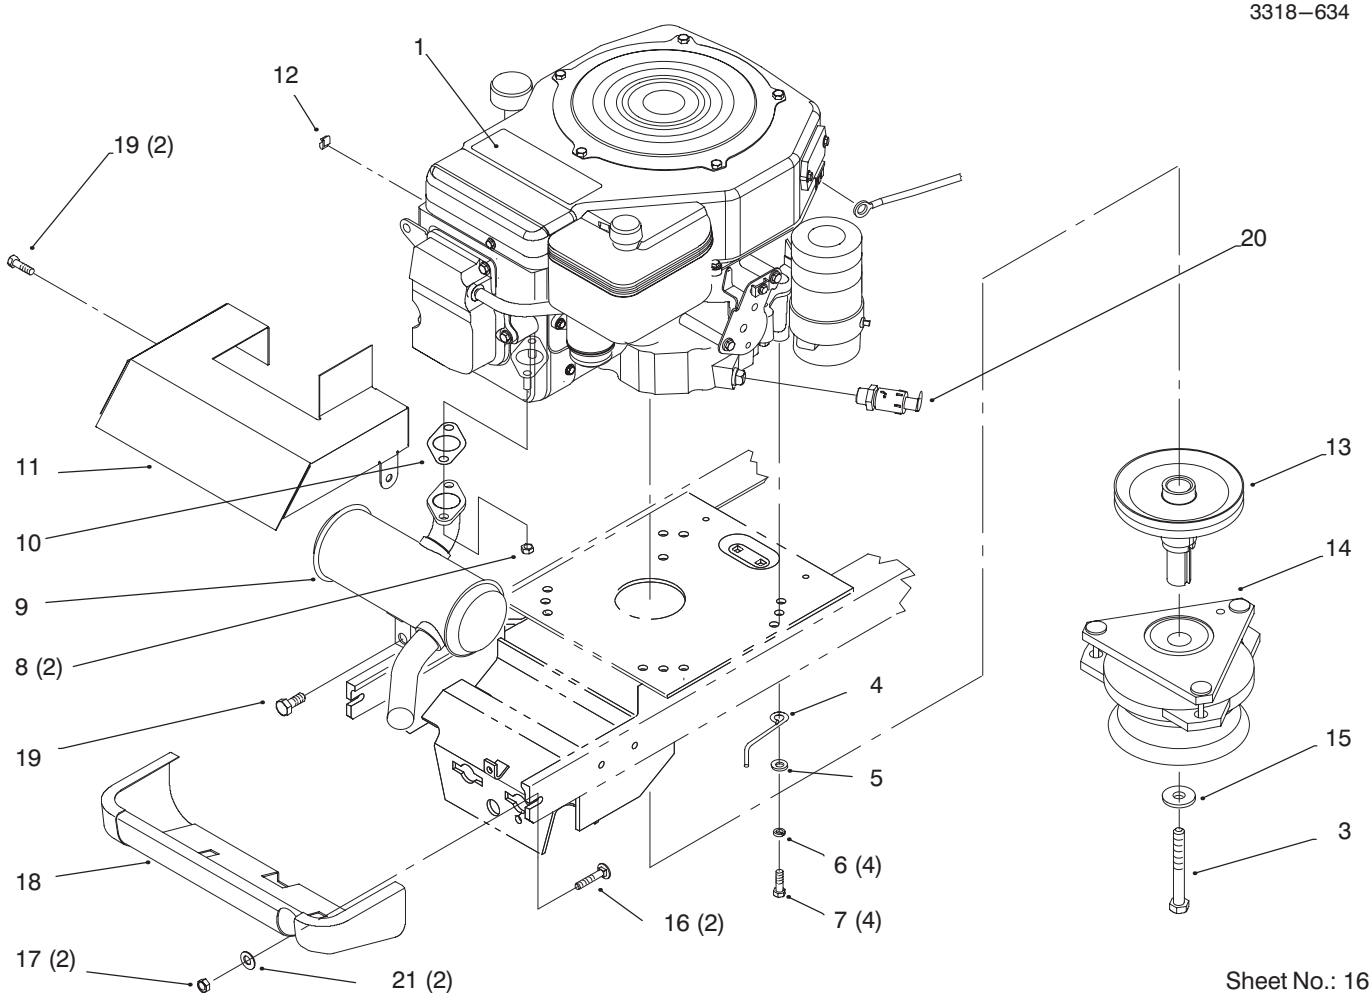


Sheet No.: 16

Single Cylinder Engine, Muffler, and P.T.O.

Ref. No.	Part No.	Qty.	Description
1	92−6764	1	Decal−Toro Power Plus 14 (Only On: 72042, 72043, 72062, 72063)
3	115203	1	Screw−HH (Only On: 72042, 72043, 72062, 72063)
4	79−0390	1	Guide−Belt (Only On: 72042, 72062)
5	3256−23	1	Washer−Flat (Only On: 72042, 72062)
6	3253−4	4	Washer−Lock (Only On: 72042, 72043, 72062, 72063)
7	48−7730	4	Screw−HH (Only On: 72042, 72043, 72062, 72063)
8	92−6780	2	Nut−HHF (Only On: 72042, 72043, 72062, 72063)
9	92−6862	1	Muffler (Only On: 72042, 72043, 72062, 72063)
10	92−6716	1	Gasket−Exhaust (Only On: 72042, 72043, 72062, 72063)
11	92−6878−03	1	Baffle−Muffler (Only On: 72042, 72043, 72062, 72063)
12	702366	1	Clip−Wire Retainer (Only On: 72042, 72043, 72062, 72063)
13	92−6888	1	Pulley (Only On: 72043, 72063)
13	93−0321	1	Pulley−Engine (Only On: 72042, 72062)
14	92−6885	1	Clutch−PTO (Only On: 72042, 72043, 72062, 72063)
15	112843	1	Washer−PTO (Only On: 72042, 72043, 72062, 72063)
16	3231−22	2	Bolt−CARR (Only On: 72042, 72043, 72062, 72063)
17	3296−39	2	Nut−Lock (Only On: 72042, 72043, 72062, 72063)
18	92−6867−01	1	Shield−Muffler (Only On: 72042, 72043, 72062, 72063)
19	9266934	3	Screw−HWHTF (Only On: 72042, 72043, 72062, 72063)
20	92−6877	1	Valve−Oil Drain (Only On: 72042, 72043, 72062, 72063)
21	3256−24	2	Washer−Flat (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

3318–634

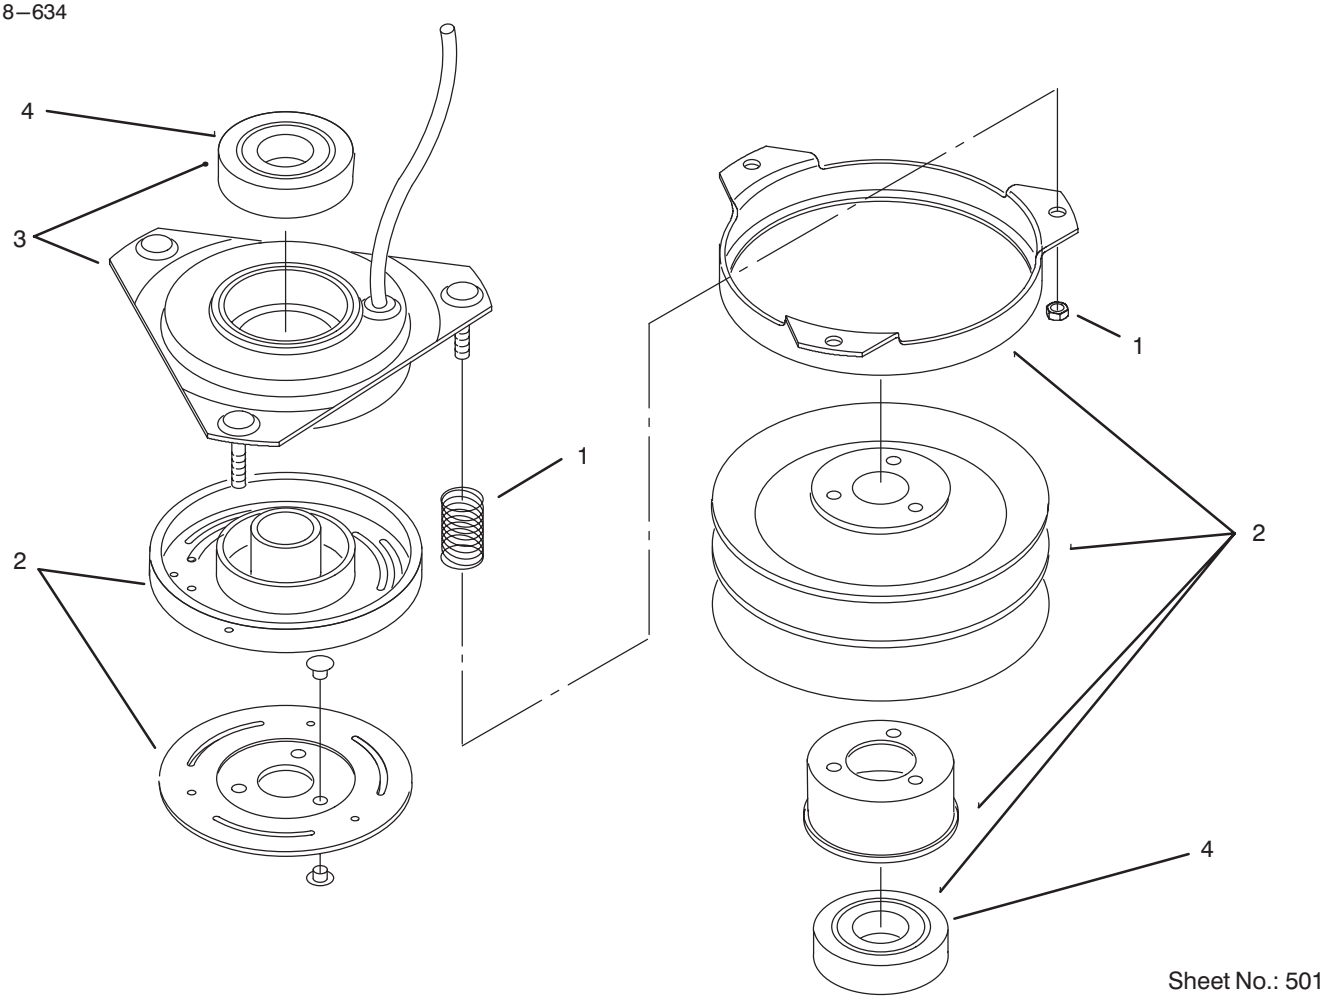


Sheet No.: 501

Clutch 92–6885

Ref. No.	Part No.	Qty.	Description
1	92–3014	3	Nut & Spring ASM
2	92–3015	1	Rotor ASM W/Bearing
3	92–3016	1	Field ASM W/Bearing
4	114064	2	Bearing–Elec Clutch

PROTOTYPE

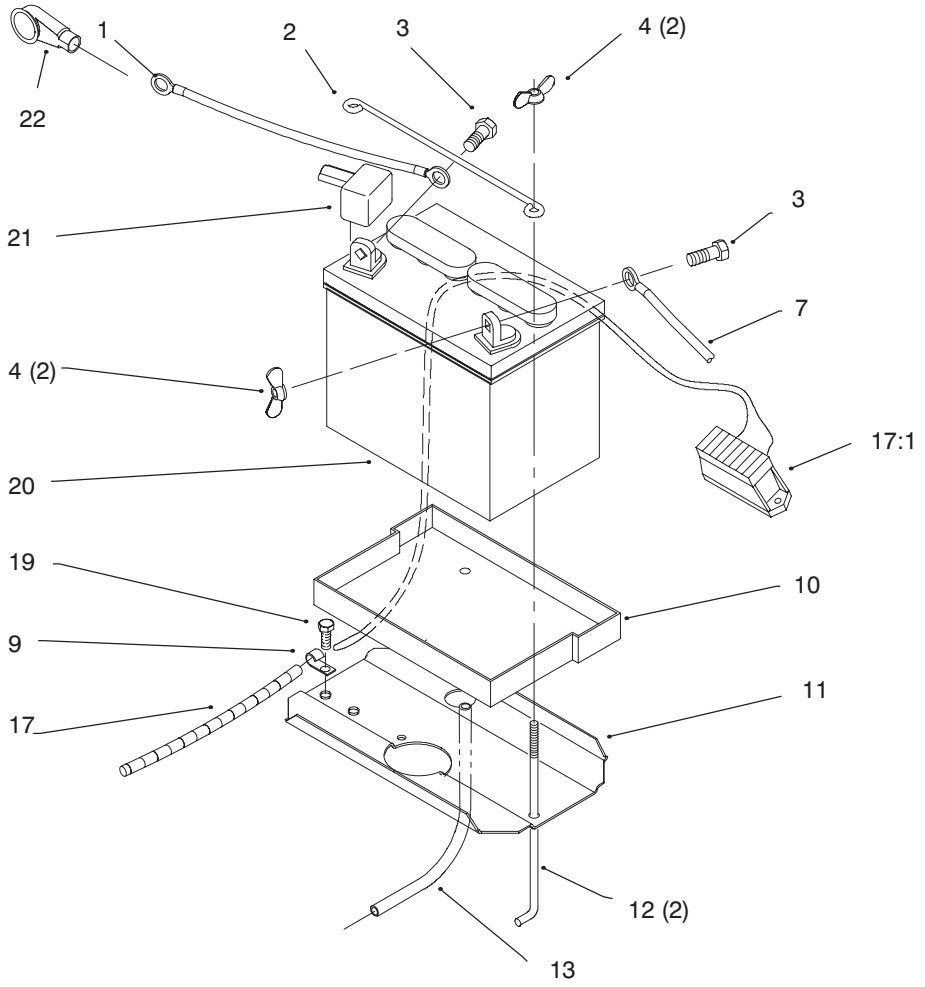


Sheet No.: 6

Battery

Ref. No.	Part No.	Qty.	Description
1	92–6989	1	Cable–Battery Red (Only On: 72103)
1	92–6990	1	Cable–Battery Red (Only On: 72042, 72043, 72062, 72063)
2	117316	1	Rod–Battery Hold Down
3	321–4	2	Screw–HH
4	32103–22	4	Nut–Wing
7	111078	1	Cable–Battery Black (Only On: 72042, 72043, 72062, 72063)
7	93–0324	1	Cable–Battery Black (Only On: 72103)
9	8830	1	Retainer–”j”
10	106948	1	Tray–Battery
11	78–6820–03	1	Plate–Battery
12	109547	2	Hook–Battery
13	114720	1	Tube–Battery Drain
17	92–6904	1	Harness–Wire (Only On: 72103)
17	92–6905	1	Harness–Wire (Only On: 72043, 72063)
17	92–6907	1	Harness–Wire (Only On: 72042, 72062)
17:1	120930	1	Fuse Holder
19	32144–14	1	Screw–HH
20	94–1866	1	Battery (Only On: 72042, 72043, 72062, 72063)
20	94–1867	1	Battery (Only On: 72103)
20	94–1865	1	Battery (Only On: 72042, 72062)
21	109553	1	Boot–Battery Cable
22	93–3190	1	Boot–Terminal Insulator (Only On: 72103)

PROTOTYPE

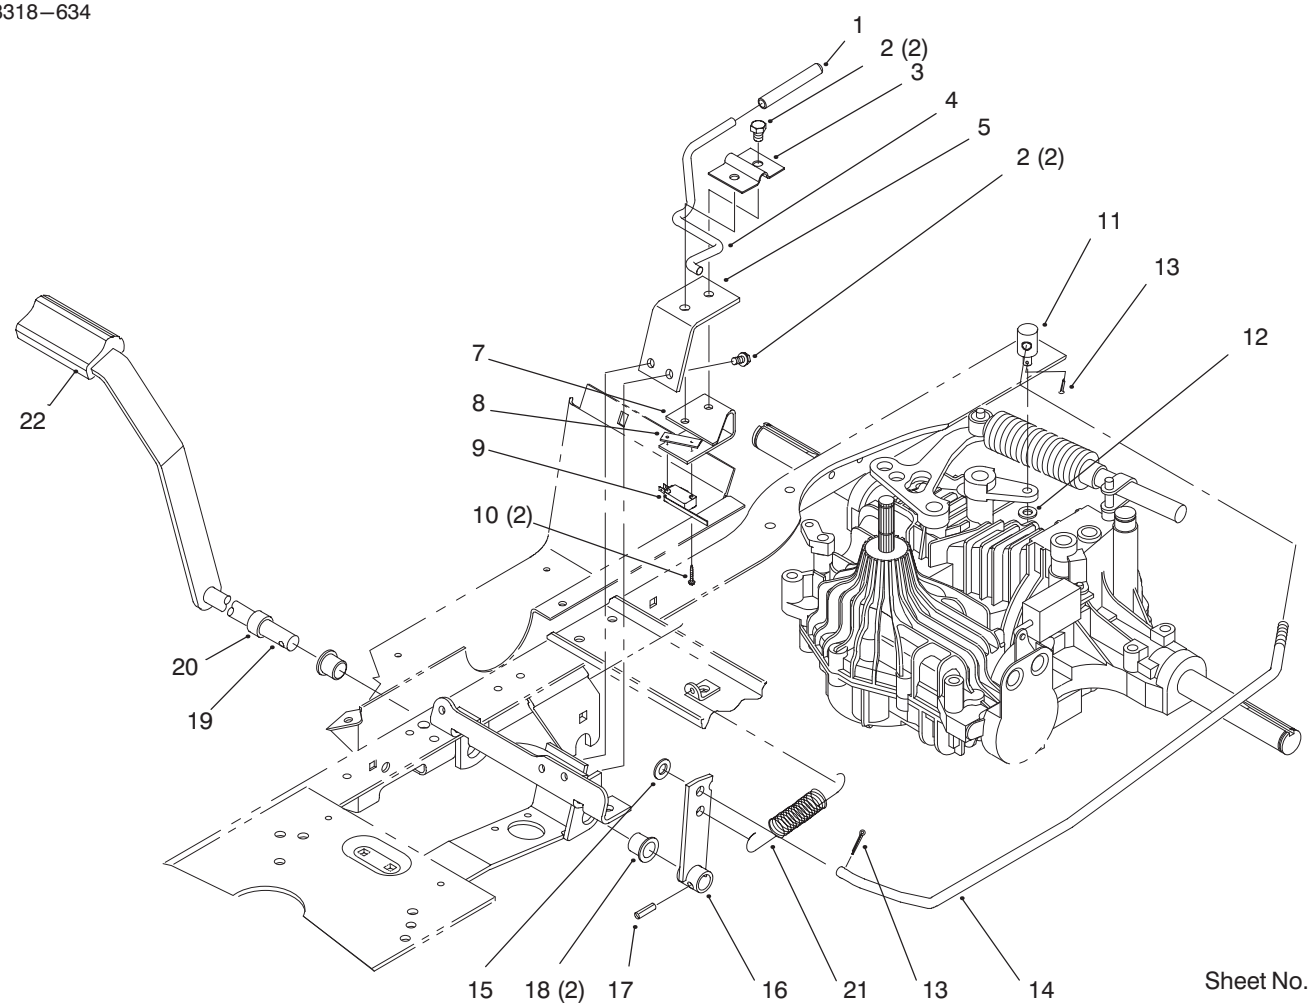


Sheet No.: 12

Hydro Brake

Ref. No.	Part No.	Qty.	Description
1	92–7009	1	Grip–Parking Brake (Only On: 72043, 72063, 72103)
2	32144–14	4	Screw–HH (Only On: 72043, 72063, 72103)
3	92–7000–03	1	Bracket–Park Brake (Only On: 72043, 72063, 72103)
4	93–3167	1	Rod–Park Brake (Only On: 72043, 72063, 72103)
5	92–7004–03	1	Support–Park Brake (Only On: 72043, 72063, 72103)
7	93–0520–03	1	Bracket–Micro Sw (Only On: 72043, 72063)
8	3290–354	1	Nut–Speed (Only On: 72043, 72063)
9	88–9930	1	Switch–Micro (Only On: 72043, 72063)
10	147665	2	Screw (Only On: 72043, 72063)
11	92–6968	1	Trunnion–Brake (Only On: 72043, 72063, 72103)
12	3256–23	1	Washer–Flat (Only On: 72043, 72063, 72103)
13	3272–6	2	Pin–Cotter (Only On: 72043, 72063, 72103)
14	92–6988	1	Rod–Brake (Only On: 72043, 72063, 72103)
15	3256–24	1	Washer–Flat (Only On: 72043, 72063, 72103)
16	94–1722	1	Lever–Brake (Only On: 72043, 72063, 72103)
17	32121–69	1	Pin–Spring (Only On: 72043, 72063, 72103)
18	256–90	2	Bushing–Flange (Only On: 72043, 72063, 72103)
19	92–6951–03	1	Pedal–Brake (Only On: 72043, 72063, 72103)
20	92–6982	1	Spacer–Brake (Only On: 72043, 72063, 72103)
21	93–0540	1	Spring–Extension (Only On: 72043, 72063, 72103)
22	65–2920	1	Pad–Pedal (Only On: 72043, 72063, 72103)

PROTOTYPE

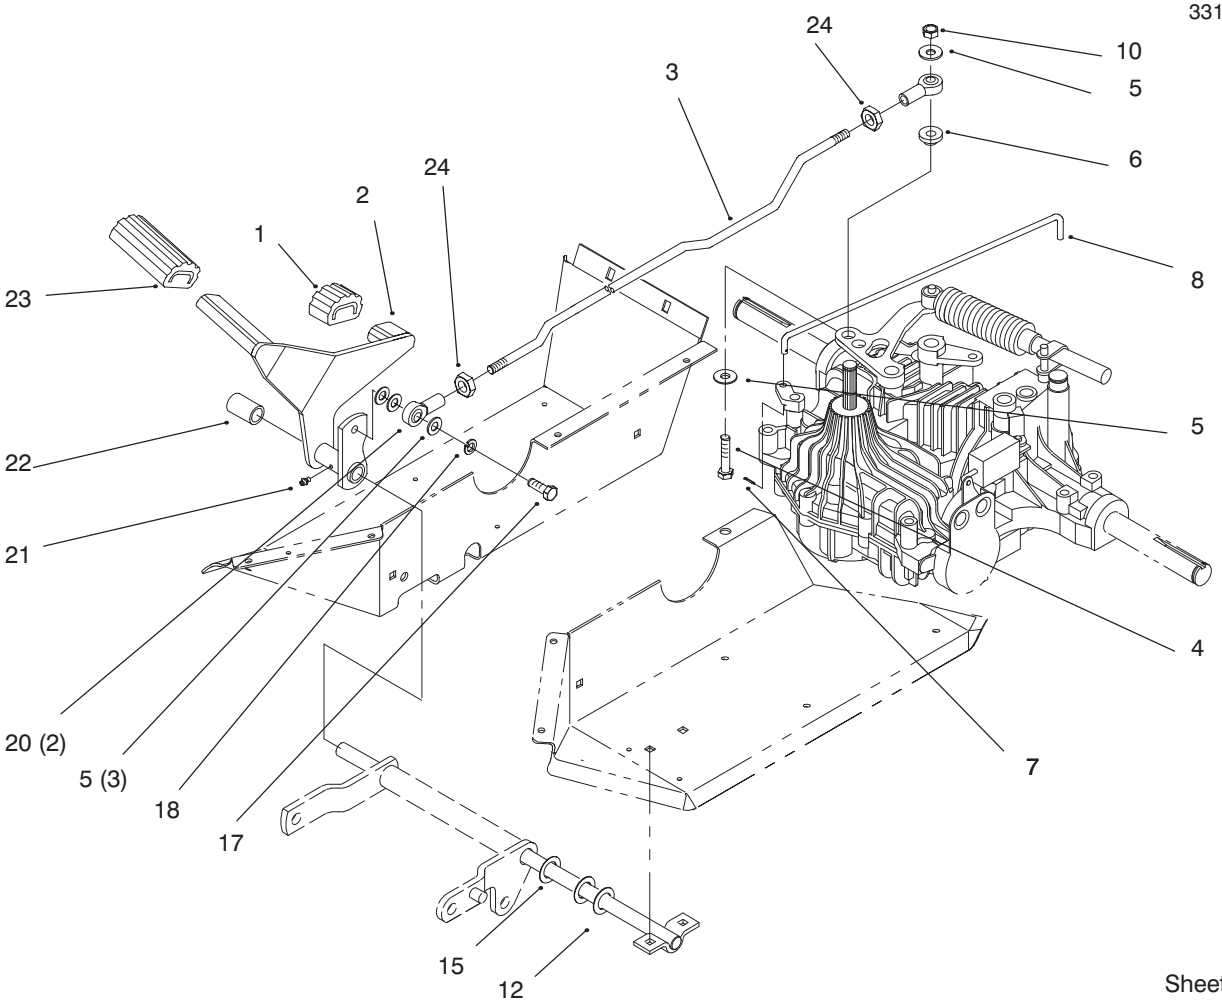


Sheet No.: 13

Hydro Control

Ref. No.	Part No.	Qty.	Description
1	92−6903	1	Pad−Pedal Reverse (Only On: 72043, 72063, 72103)
2	92−6913−03	1	Pedal−Hydro (Only On: 72043, 72063, 72103)
3	92−7018	1	Rod (Only On: 72043, 72063, 72103)
4	323−10	1	Screw−HH (Only On: 72043, 72063, 72103)
5	3256−24	4	Washer−Flat (Only On: 72103)
5	3256−24	5	Washer−Flat
6	92−6962	1	Bushing (Only On: 72043, 72063, 72103)
7	3272−2	1	Pin−Cotter (Only On: 72043, 72063, 72103)
8	92−6970	1	Rod−Bypass (Only On: 72043, 72063, 72103)
10	3296−39	1	Nut−Lock (Only On: 72043, 72063, 72103)
12	9202154	2	Washer−Flat (Only On: 72043, 72063, 72103)
15	94−4945	1	Spacer (Only On: 72043, 72063, 72103)
17	323−7	1	Screw−HH (Only On: 72043, 72063, 72103)
18	3253−5	1	Washer−Lock (Only On: 72043, 72063, 72103)
20	92−7008	2	Rod End (Only On: 72043, 72063, 72103)
21	302−26	1	Fitting−Grease (Only On: 72043, 72063, 72103)
22	92−6966	1	Spacer−Hydro Pedal (Only On: 72043, 72063, 72103)
23	92−6902	1	Pad−Pedal Forward (Only On: 72043, 72063, 72103)
24	3220−3	2	Nut−HJ (Only On: 72043, 72063, 72103)

PROTOTYPE

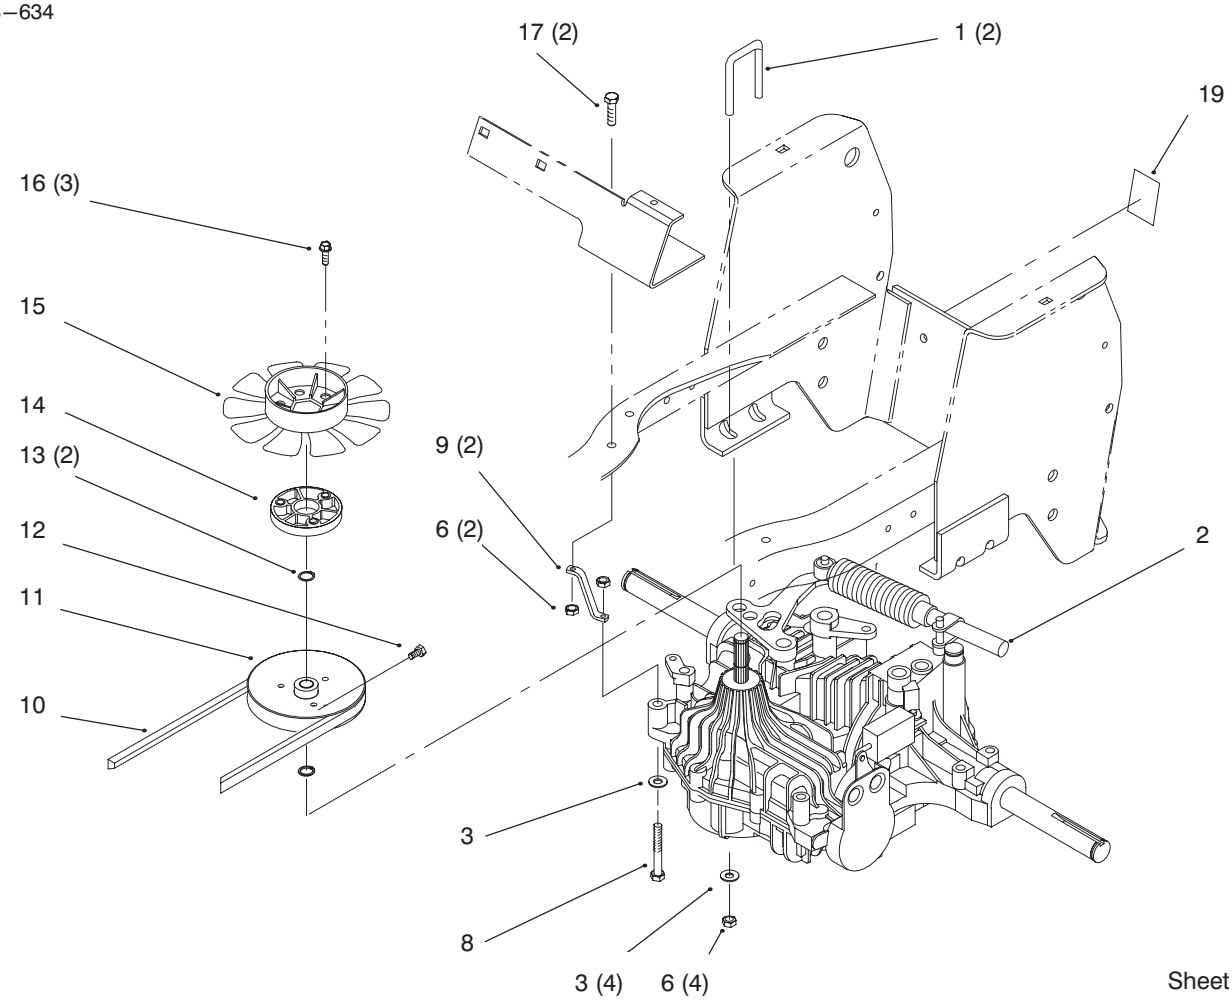


Sheet No.: 15

Hydro Transaxle

Ref. No.	Part No.	Qty.	Description
1	92−6769	2	U−Bolt (Only On: 72043, 72063, 72103)
2	92−6762	1	Transaxle−Tuff Torq K61 (Only On: 72043, 72063, 72103)
3	3256−23	5	Washer−Flat (Only On: 72043, 72063, 72103)
6	3296−29	6	Nut−Lock (Only On: 72043, 72063, 72103)
8	322−12	1	Screw HH (Only On: 72043, 72063, 72103)
9	93−0525−03	1	Strap−Torque (Only On: 72043, 72063, 72103)
10	92−6718	1	Belt−Hydro (Only On: 72043, 72063, 72103)
11	92−6686	1	Pulley (Only On: 72043, 72063, 72103)
12	3245−32	1	Screw−Set (Only On: 72043, 72063, 72103)
13	936118	2	Snap Ring (Only On: 72043, 72063, 72103)
14	92−6943	1	Spacer−Fan (Only On: 72043, 72063, 72103)
15	92−6742	1	Fan (Only On: 72043, 72063, 72103)
16	49−2040	3	Screw−HH (Only On: 72043, 72063, 72103)
17	322−6	1	Screw−HH (Only On: 72043, 72063, 72103)
19	92−6726	1	Decal−Hydro Valve (Only On: 72043)
19	92−7090	1	Decal−Bypass (Only On: 72063, 72103)

PROTOTYPE

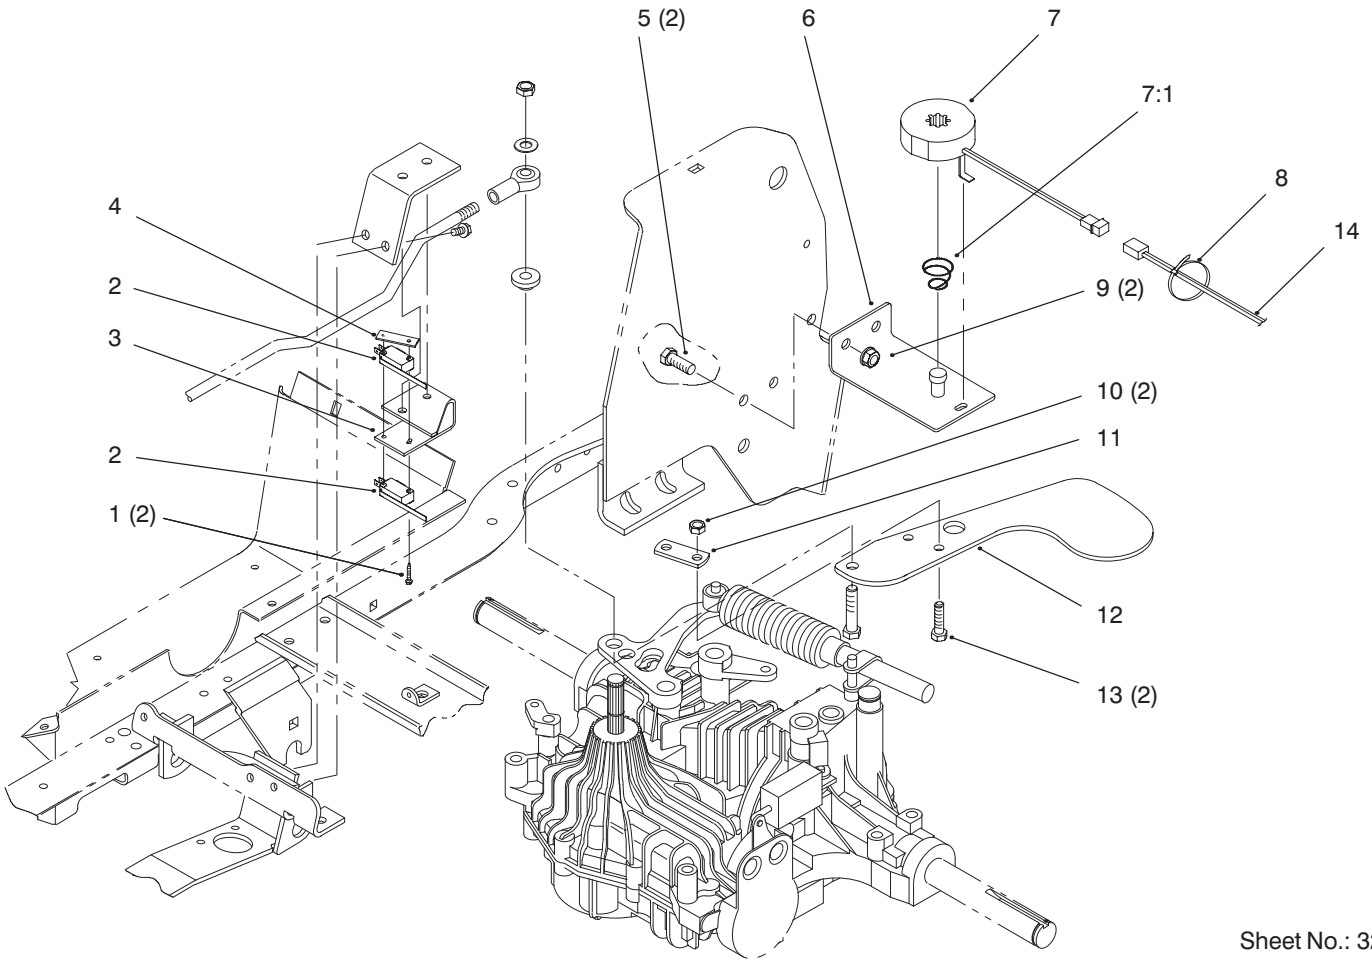


Sheet No.: 32

Cruise Control

Ref. No.	Part No.	Qty.	Description
1	93−0539	2	Screw (Only On: 72103)
2	88−9930	2	Switch−Micro (Only On: 72103)
3	93−0520−03	1	Bracket−Micro Sw (Only On: 72103)
4	3290−354	1	Nut−Speed (Only On: 72103)
5	323−6	2	Screw−HH (Only On: 72103)
6	93−0512−03	1	Cruise Bracket (Only On: 72103)
7	93−4366	1	Magnet Assembly (INCL 7: Only On: 72103)
7:1	93−6601	1	Spring−Conical (Only On: 72103)
8	614249	1	Tie Strap (Only On: 72103)
9	3296−39	2	Nut−Lock (Only On: 72103)
10	3296−29	2	Nut−Lock (Only On: 72103)
11	93−0515	1	Clamp−Cruise (Only On: 72103)
12	93−0511	1	Arm−Cruise (Only On: 72103)
13	322−16	2	Screw−HH (Only On: 72103)
14	93−4364	1	Harness−Wire (Only On: 72103)

PROTOTYPE

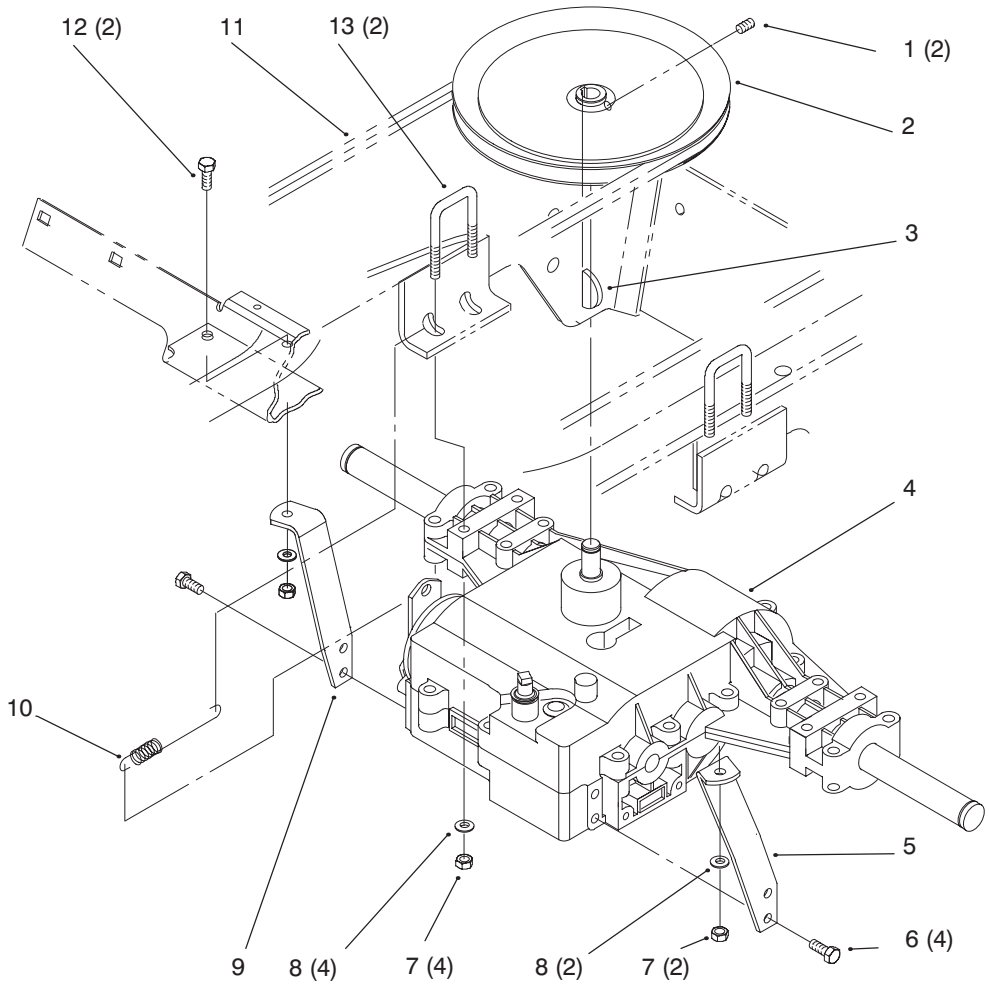


Sheet No.: 23

Transaxle — Gear

Ref. No.	Part No.	Qty.	Description
1	909543	2	Screw–Set (Only On: 72042, 72062)
2	92–6887	1	Pulley (Only On: 72042, 72062)
3	937225	1	Key (Only On: 72042, 72062)
4	92–6761	1	Transaxle–Peerless 820 (Only On: 72042, 72062)
5	92–6889–03	1	Strap–Torque LH (Only On: 72042, 72062)
6	32144–70	4	Screw–TAP (Only On: 72042, 72062)
7	3296–29	6	Nut–Lock (Only On: 72042, 72062)
8	3256–23	6	Washer–Flat (Only On: 72042, 72062)
9	92–6890–03	1	Strap–Torque RH (Only On: 72042, 72062)
10	92–6945	1	Spring–Extension (Only On: 72042, 72062)
11	92–6719	1	Belt–Gear (Only On: 72042, 72062)
12	322–6	2	Screw–HH (Only On: 72042, 72062)
13	92–6769	2	U–Bolt (Only On: 72042, 72062)

PROTOTYPE

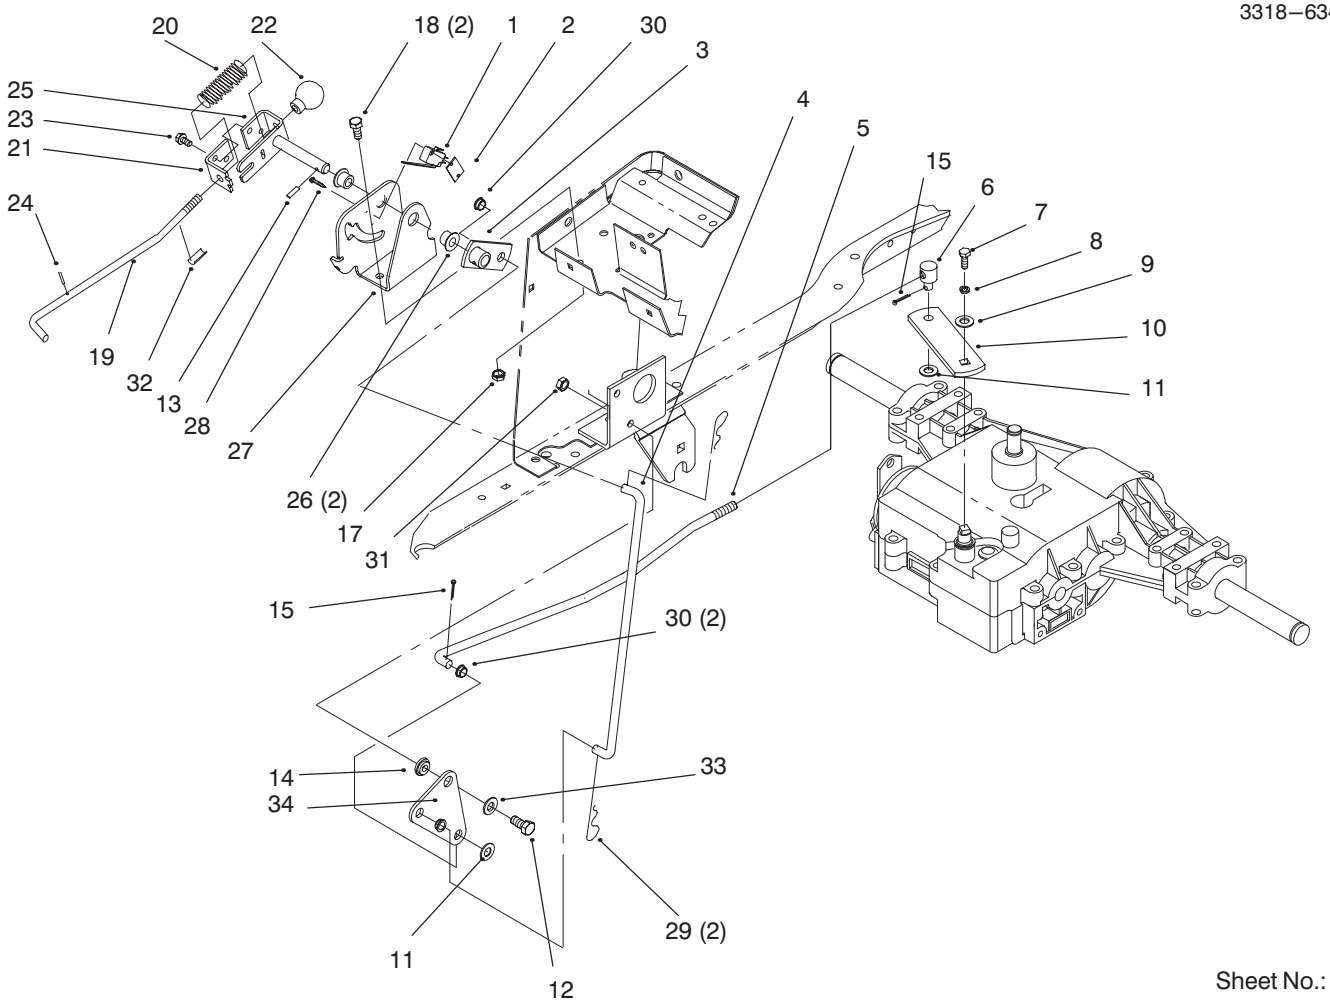


Sheet No.: 20

Gear Shift Linkage

Ref. No.	Part No.	Qty.	Description
⁎1	115230	1	Switch−Clutch (Only On: 72042, 72062)
2	3290−354	1	Nut−Speed (Only On: 72042, 72062)
3	92−6926−03	1	Tube−Linkage (Only On: 72042, 72062)
4	92−7005	1	Rod (Only On: 72042, 72062)
5	92−6896	1	Rod−Shift Transaxle (Only On: 72042, 72062)
6	110656	1	Trunnion (Only On: 72042, 72062)
7	329−23	1	Screw (Only On: 72042, 72062)
8	3253−3	1	Washer−Lock (Only On: 72042, 72062)
9	7−5461	1	Spacer−Transmission (Only On: 72042, 72062)
10	92−6886	1	Arm−Shift (Only On: 72042, 72062)
11	3256−24	2	Washer−Flat (Only On: 72042, 72062)
12	322−5	1	Screw−HH (Only On: 72042, 72062)
13	32121−4	1	Pin−Roll (Only On: 72042, 72062)
14	105503	1	Bushing (Only On: 72042, 72062)
15	3272−6	2	Pin−Cotter (Only On: 72042, 72062)
17	3296−29	2	Nut−Lock (Only On: 72042, 72062)
18	322−3	2	Screw−HH (Only On: 72042, 72062)
19	92−6920	1	Rod−Shift (Only On: 72042, 72062)
20	3624	2	Spring−Compression (Only On: 72042, 72062)
21	92−6921	1	Bracket−Shaft (Only On: 72042, 72062)
22	233−42	1	Knob (Only On: 72042, 72062)
23	32144−4	2	Screw−TAP (Only On: 72042, 72062)
24	32121−97	1	Pin−Roll (Only On: 72042, 72062)
25	92−6919	1	Pivot−Shift (Only On: 72042, 72062)
26	256−219	2	Bushing (Only On: 72042, 72062)
27	93−0503−03	1	Bracket−Pivot Mount (Only On: 72042, 72062)

PROTOTYPE

⁎ Refer to Lawn/Yard Tractor Service Bulletin for early models with black switches (P/N, Removal, Installation).

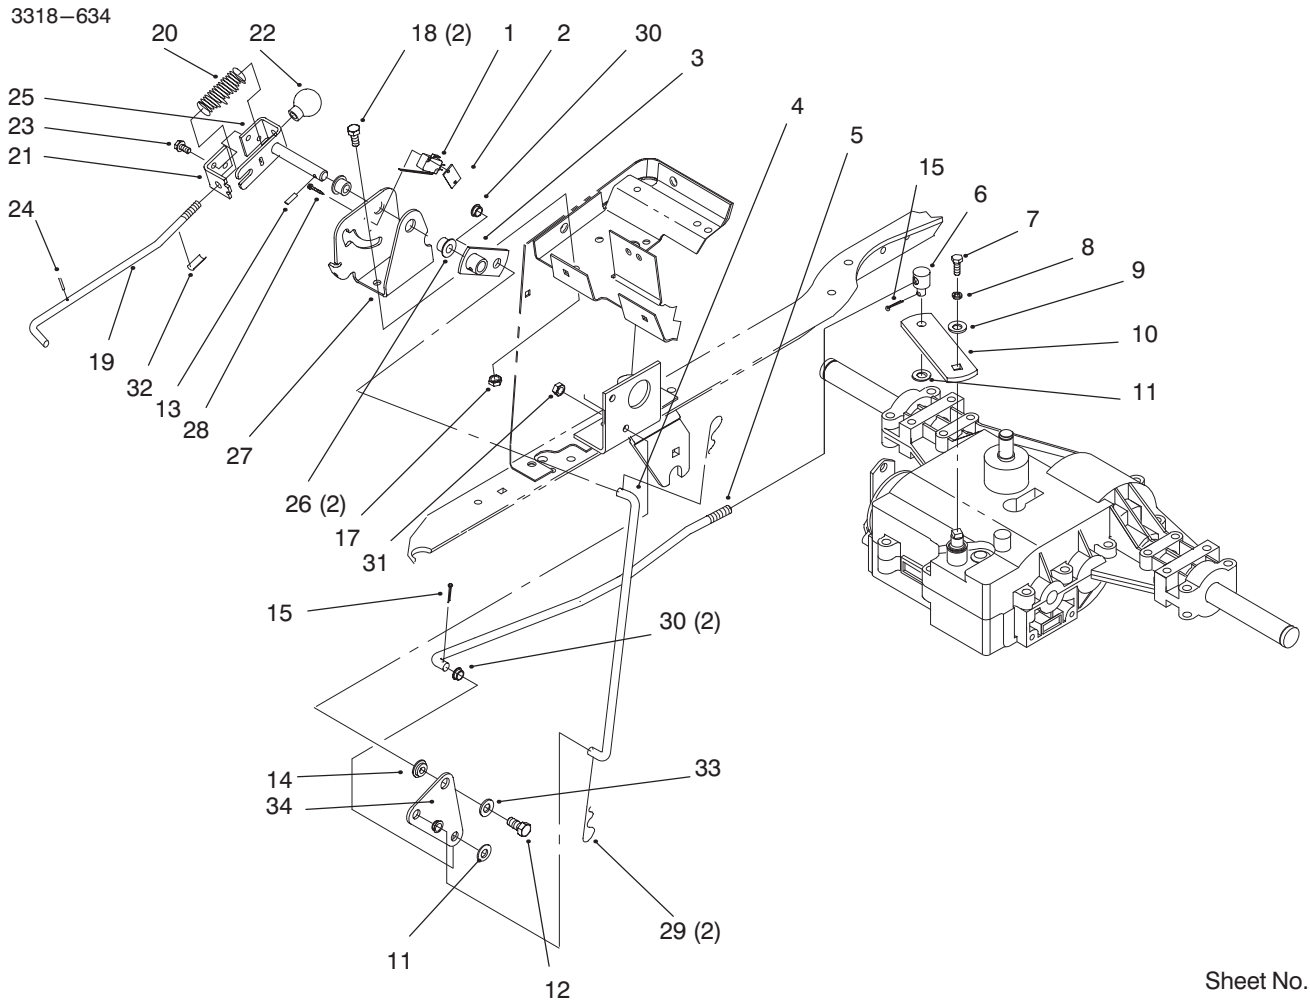


Sheet No.: 20

Gear Shift Linkage

Ref. No.	Part No.	Qty.	Description
28	147665	2	Screw (Only On: 72042, 72062)
29	3290−307	2	Pin−Cotter (Only On: 72042, 72062)
30	92−6875	3	Bearing−Shift Link (Only On: 72042, 72062)
31	3296−29	1	Nut−Lock (Only On: 72042, 72062)
32	93−3141	1	Decal−Reverse Shift (Only On: 72042)
32	93−3144	1	Decal−Reverse Shift (Only On: 72062)
33	3256−71	1	Washer−Flat (Only On: 72042, 72062)
34	93−0524	1	Bracket−Pivot (Only On: 72042, 72062)

PROTOTYPE

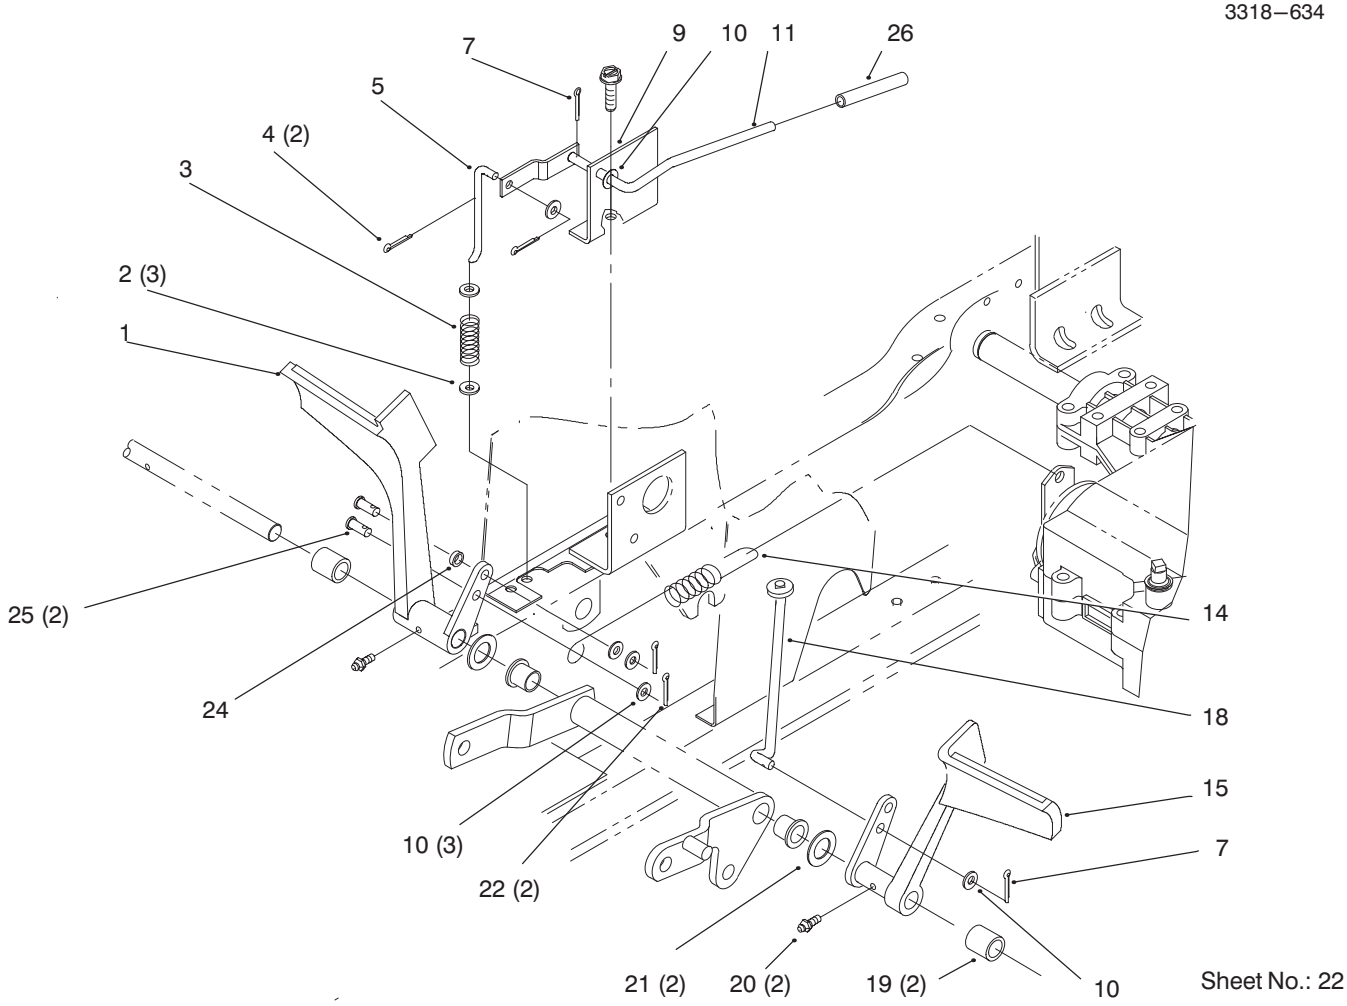


Sheet No.: 22

Clutch and Brake — Gear

Ref. No.	Part No.	Qty.	Description
1	93–3228–03	1	Pedal–Brake (Only On: 72042, 72062)
2	3256–22	3	Washer–Flat (Only On: 72042, 72062)
3	92–7116	1	Spring–Compression (Only On: 72042, 72062)
4	3272–2	2	Pin–Cotter (Only On: 72042, 72062)
5	92–7019	1	Rod–Park Brake (Only On: 72042, 72062)
7	3272–6	2	Pin–Cotter (Only On: 72042, 72062)
9	92–6929–03	1	Bracket–Parking Brake (Only On: 72042, 72062)
10	3256–23	5	Washer–Flat (Only On: 72042, 72062)
11	92–6931	1	Lever–Parking Brake (Only On: 72042, 72062)
14	92–6944	1	Spring–Extension (Only On: 72042, 72062)
15	78–8180–03	1	Pedal–Clutch (Only On: 72042, 72062)
18	92–6924	1	Rod–Clutch (Only On: 72042, 72062)
19	110015	2	Spacer (Only On: 72042, 72062)
20	302–5	2	Fitting–Grease (Only On: 72042, 72062)
21	111712	1	Washer–Wave (Only On: 72042, 72062)
22	3272–10	2	Pin–Cotter (Only On: 72042, 72062)
24	92–7115–03	1	Spacer (Only On: 72042, 72062)
25	283–62	2	Pin–Clevis (Only On: 72042, 72062)
26	92–7009	1	Grip–Parking Brake (Only On: 72042, 72062)

PROTOTYPE

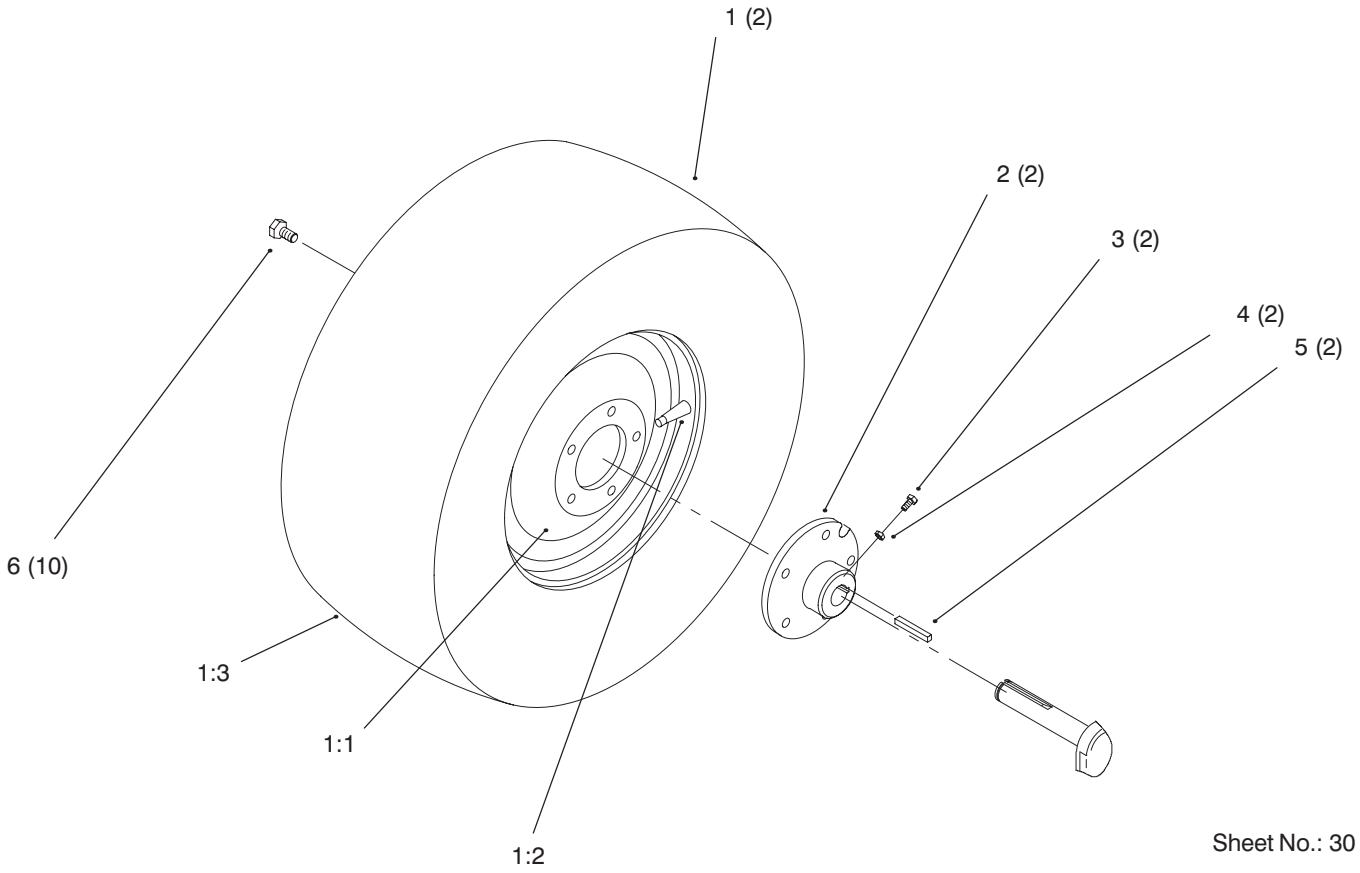


Sheet No.: 30

Rear Wheel

Ref. No.	Part No.	Qty.	Description
☆1		2	Wheel & Tire ASM (Only On: 72042, 72043, 72062, 72063)
☆1		2	Wheel & Tire ASM Rear (Only On: 72103)
1:1	78−1221	2	Wheel
1:2	5108	2	Valve−Tire Tubeless
1:3	116744	2	Tire (Only On: 72042, 72043, 72062, 72063)
1:3	116971	2	Tire (Only On: 72103)
2	93−3659−03	2	Hub−Wheel
3	3243−5	2	Screw−Set
4	3218−3	2	Nut−HJ
5	5−1336	2	Key
6	83−2720	10	Bolt−Lug

PROTOTYPE

☆ Not serviced

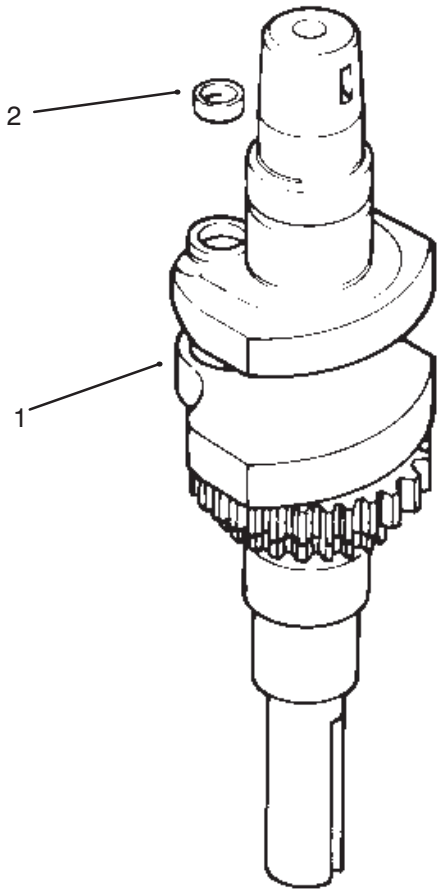


Sheet No.: 101
C–1948

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	12 014 02	1	Crankshaft (Only On: 72042, 72043, 72062, 72063)
2	12 139 01	1	Plug–Cup (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

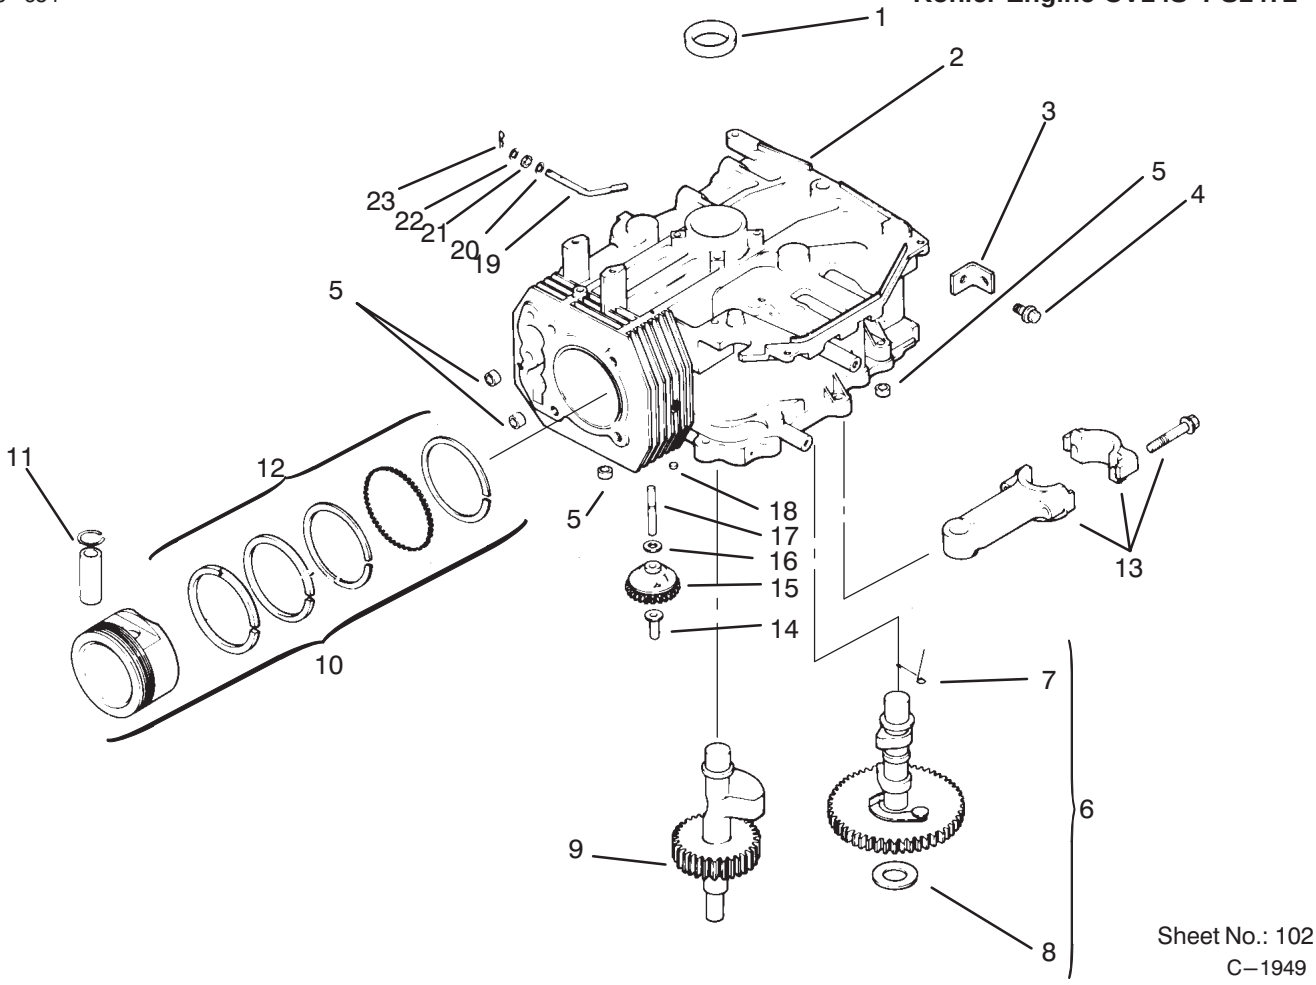


Sheet No.: 102
C−1949

Crankcase

Ref. No.	Part No.	Qty.	Description
1	12 032 03	1	Seal−Crankshaft (Only On: 72042, 72043, 72062, 72063)
*2	12 522 01	1	Block−Short (Only On: 72042, 72043, 72062, 72063)
3	12 445 02	1	Strap−Lifting (Only On: 72042, 72043, 72062, 72063)
4	M−0839025	1	Screw M8x1.25x22 (Only On: 72042, 72043, 72062, 72063)
5	12 380 03	4	Dowel−Locating (Only On: 72042, 72043, 72062, 72063)
6	12 755 49	1	Kit−Camshaft INCL 7−8 (Only On: 72042, 72043, 72062, 72063)
†7	12 089 18	1	Spring−Actuating (Only On: 72042, 72043, 72062, 72063)
8	12 422 07	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
†8	12 422 08	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
†8	12 422 09	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
†8	12 422 10	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
†8	12 422 11	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
†8	12 422 12	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
†8	12 422 13	1	Shim−Camshaft A/R (Only On: 72042, 72043, 72062, 72063)
9	12 144 19	1	Shaft−Balance (Only On: 72042, 72043, 72062, 72063)
10	12 874 01	1	Piston ASM STD INCL 11−12 (Only On: 72042, 72043, 72062, 72063)
10	12 874 02	1	Piston ASM .25 INCL 11−12 (Only On: 72042, 72043, 72062, 72063)
10	12 874 03	1	Piston ASM .50 INCL 11−12 (Only On: 72042, 72043, 72062, 72063)
†11	12 018 02	2	Retainer−Piston Pin (Only On: 72042, 72043, 72062, 72063)
†12	12 108 01	1	Ring Set STD (Only On: 72042, 72043, 72062, 72063)
†12	12 108 02	1	Ring Set .25 (Only On: 72042, 72043, 72062, 72063)
†12	12 108 03	1	Ring Set .50 (Only On: 72042, 72043, 72062, 72063)
13	12 067 01	1	Connecting Rod STD (Only On: 72042, 72043, 72062, 72063)
13	12 067 02	1	Connecting Rod .25 (Only On: 72042, 72043, 72062, 72063)
14	12 380 01	1	Pin−Governor Regulating (Only On: 72042, 72043, 72062, 72063)
15	12 043 05	1	Gear−Governor ASM (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

* Not illustrated
† Included in a service kit or in an assembly

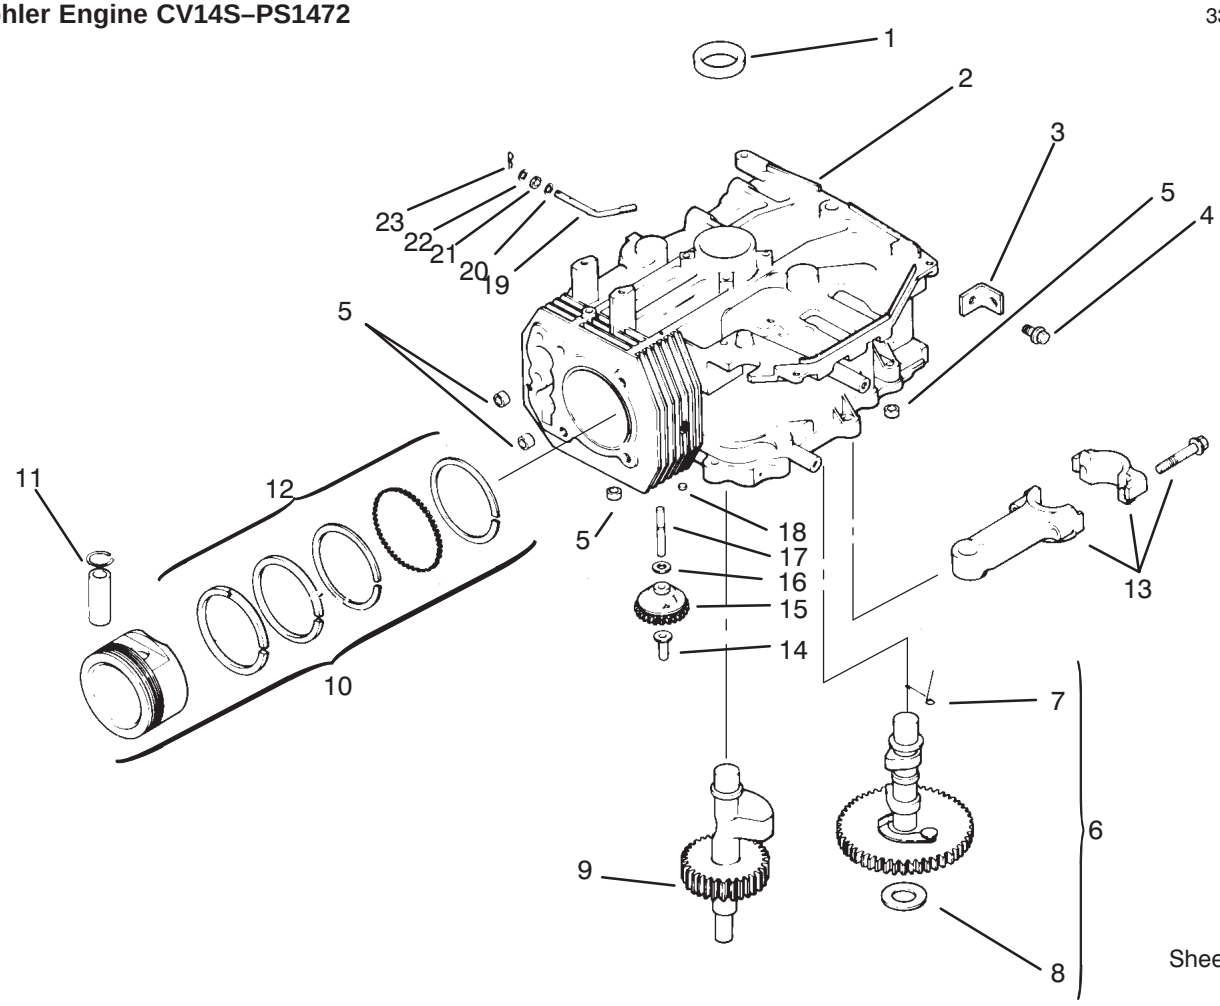


Sheet No.: 102
C–1949

Crankcase

Ref. No.	Part No.	Qty.	Description
16	Sm–0631005	1	Washer–Governor (Only On: 72042, 72043, 72062, 72063)
17	12 144 02	1	Shaft–Governor Gear (Only On: 72042, 72043, 72062, 72063)
18	52 139 09	1	Plug–Cup (Only On: 72042, 72043, 72062, 72063)
19	12 144 01	1	Shaft–Governor Cross (Only On: 72042, 72043, 72062, 72063)
20	Sm–0631015	1	Washer–Governor Shaft (Only On: 72042, 72043, 72062, 72063)
21	12 032 01	1	Seal–Governor Shaft (Only On: 72042, 72043, 72062, 72063)
22	X–25–102	1	Washer–Flat (Only On: 72042, 72043, 72062, 72063)
23	12 380 04	1	Pin–Governor Hitch (Only On: 72042, 72043, 72062, 72063)
*	12 722 01	1	Gasket Set (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

* Not illustrated

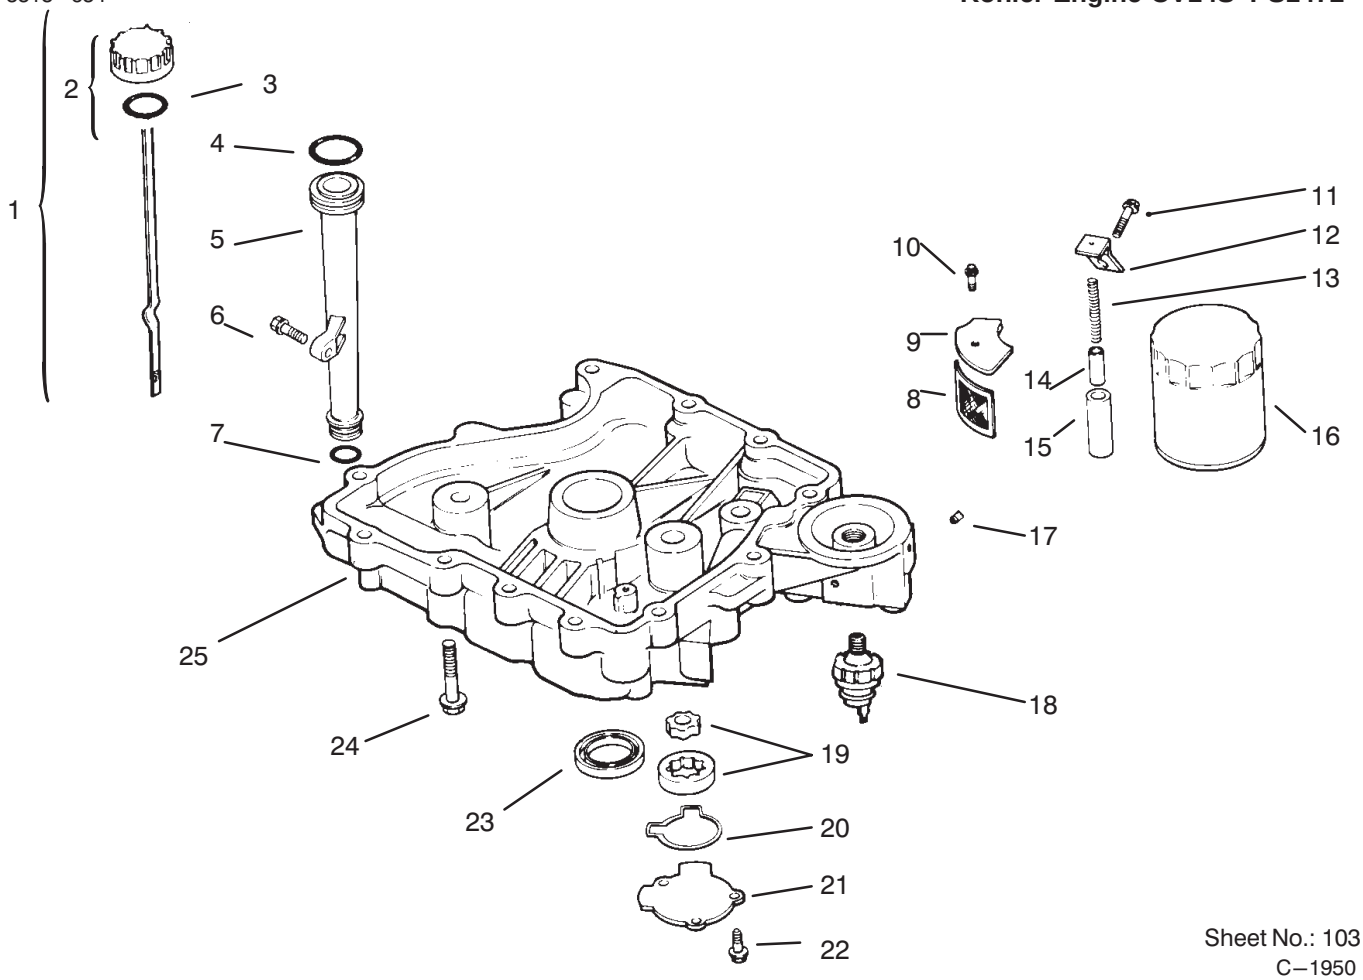


Sheet No.: 103
C−1950

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	12 038 01	1	Dipstick INCL 2−3 (Only On: 72042, 72043, 72062, 72063)
†2	25 755 13	1	Kit−Oil Cap INCL 3 (Only On: 72042, 72043, 72062, 72063)
†3	12 153 03	1	O Ring−Fill Cap (Only On: 72042, 72043, 72062, 72063)
4	12 153 02	1	O Ring−Upper Fill Tube (Only On: 72042, 72043, 72062, 72063)
5	12 123 04	1	Tube−Oil Fill (Only On: 72042, 72043, 72062, 72063)
6	Sm−0545020	1	Screw M5x0.8x20 (Only On: 72042, 72043, 72062, 72063)
7	12 153 01	1	O Ring−Lower Fill Tube (Only On: 72042, 72043, 72062, 72063)
8	12 162 02	1	Screen−Oil Pickup (Only On: 72042, 72043, 72062, 72063)
9	12 096 03	1	Cover−Oil Pickup Screen (Only On: 72042, 72043, 72062, 72063)
10	M−0545016	1	Screw M5x0.8x16 (Only On: 72042, 72043, 72062, 72063)
11	M−1039025	1	Screw M10x1.5x25 (Only On: 72042, 72043, 72062, 72063)
12	12 126 02	1	Bracket−Oil Pump Relief (Only On: 72042, 72043, 72062, 72063)
13	12 089 03	1	Spring−Oil Relief Valve (Only On: 72042, 72043, 72062, 72063)
14	12 462 01	1	Piston−Oil Relief Valve (Only On: 72042, 72043, 72062, 72063)
15	12 208 01	1	Body−Oil Relief Valve (Only On: 72042, 72043, 72062, 72063)
16	12 050 01	1	Filter−Oil (Only On: 72042, 72043, 72062, 72063)
17	X−75−10	2	Plug−SH 3/8 NPTF (Only On: 72042, 72043, 72062, 72063)
18	52 099 06	1	Switch−Oil Pressure (Only On: 72042, 72043, 72062, 72063)
19	12 393 01	1	Pump−Oil (Only On: 72042, 72043, 72062, 72063)
20	12 032 04	1	O Ring−Oil Pump Cover (Only On: 72042, 72043, 72062, 72063)
21	12 096 02	1	Cover−Oil Pump (Only On: 72042, 72043, 72062, 72063)
22	M−0545016	3	Screw M5x0.8x16 (Only On: 72042, 72043, 72062, 72063)
23	12 032 03	1	Seal−Crankshaft (Only On: 72042, 72043, 72062, 72063)
24	Sm−0838045	12	Screw M8x1.25x45 (Only On: 72042, 72043, 72062, 72063)
25	12 199 21	1	Pan−Oil (Only On: 72042, 72043, 72062, 72063)
*	52 518 21	1	Lead−Oil Switch W/Tabs (Only On: 72042, 72043, 72062, 72063)

† Included in a service kit or in an assembly
* Not illustrated

PROTOTYPE

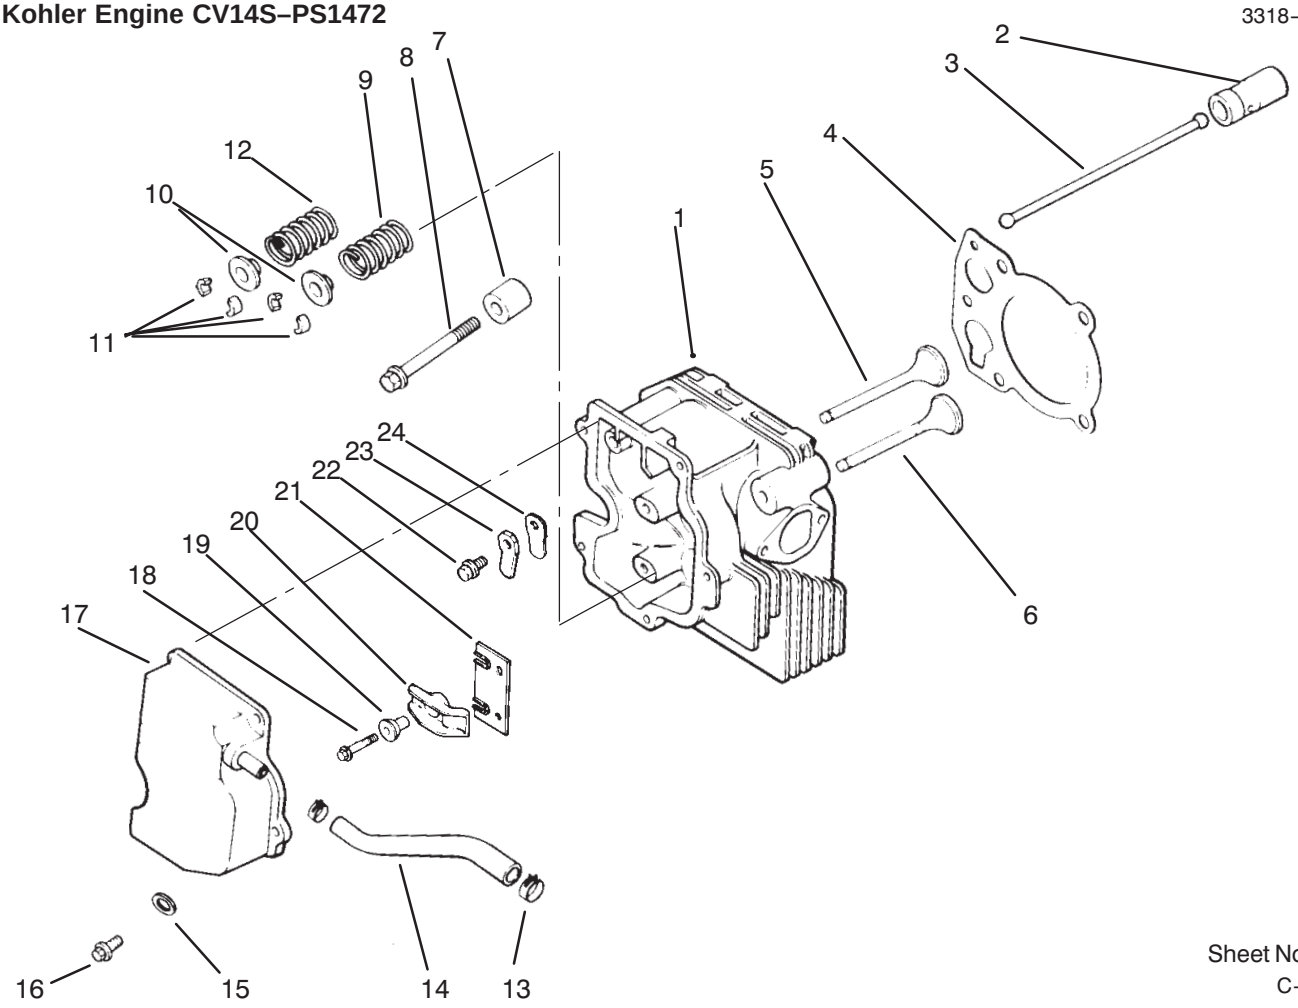


Sheet No.: 104
C–1951

Cylinder Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	12 318 02	1	Cylinder Head (Only On: 72042, 72043, 72062, 72063)
2	12 351 01	2	Lifter–Valve (Only On: 72042, 72043, 72062, 72063)
3	12 411 01	2	Rod–Push (Only On: 72042, 72043, 72062, 72063)
4	12 041 08	1	Gasket–Cylinder Head (Only On: 72042, 72043, 72062, 72063)
5	12 017 01	1	Valve–Intake STD (Only On: 72042, 72043, 72062, 72063)
5	12 017 02	1	Valve–Intake .25 (Only On: 72042, 72043, 72062, 72063)
6	12 016 01	1	Valve–Exhaust STD (Only On: 72042, 72043, 72062, 72063)
6	12 016 02	1	Valve–Exhaust .25 (Only On: 72042, 72043, 72062, 72063)
7	12 112 13	1	Spacer–Head Bolt Exhaust (Only On: 72042, 72043, 72062, 72063)
8	12 086 15	5	Screw M10x1.5x80 (Only On: 72042, 72043, 72062, 72063)
9	12 089 15	1	Spring–Valve Exhaust (Only On: 72042, 72043, 72062, 72063)
10	12 173 01	2	Cap–Valve Spring (Only On: 72042, 72043, 72062, 72063)
11	12 755 03	2	Kit–Retainer (Only On: 72042, 72043, 72062, 72063)
12	12 089 01	1	Spring–Valve Intake (Only On: 72042, 72043, 72062, 72063)
13	X–426–9	2	Clamp–Hose (Only On: 72042, 72043, 72062, 72063)
14	12 326 03	1	Hose–Breather (Only On: 72042, 72043, 72062, 72063)
15	12 468 05	1	Washer–Flat (Only On: 72042, 72043, 72062, 72063)
16	Sm–0645020	5	Screw M6x1.0x20 (Only On: 72042, 72043, 72062, 72063)
17	12 096 07	1	Cover–Valve W/Nipple (Only On: 72042, 72043, 72062, 72063)
18	M–0640034	2	Screw M6x1.0x34 (Only On: 72042, 72043, 72062, 72063)
19	24 194 01	2	Ball–Rocker Pivot (Only On: 72042, 72043, 72062, 72063)
20	24 186 01	2	Arm–Rocker (Only On: 72042, 72043, 72062, 72063)
21	12 146 13	1	Plate–Guide (Only On: 72042, 72043, 72062, 72063)
22	M–0545010	1	Screw M5x0.8x10 (Only On: 72042, 72043, 72062, 72063)
23	12 018 01	1	Retainer–Breather Reed (Only On: 72042, 72043, 72062, 72063)
24	24 402 03	1	Reed–Breather (Only On: 72042, 72043, 72062, 72063)

BUYOUTBOATYPE

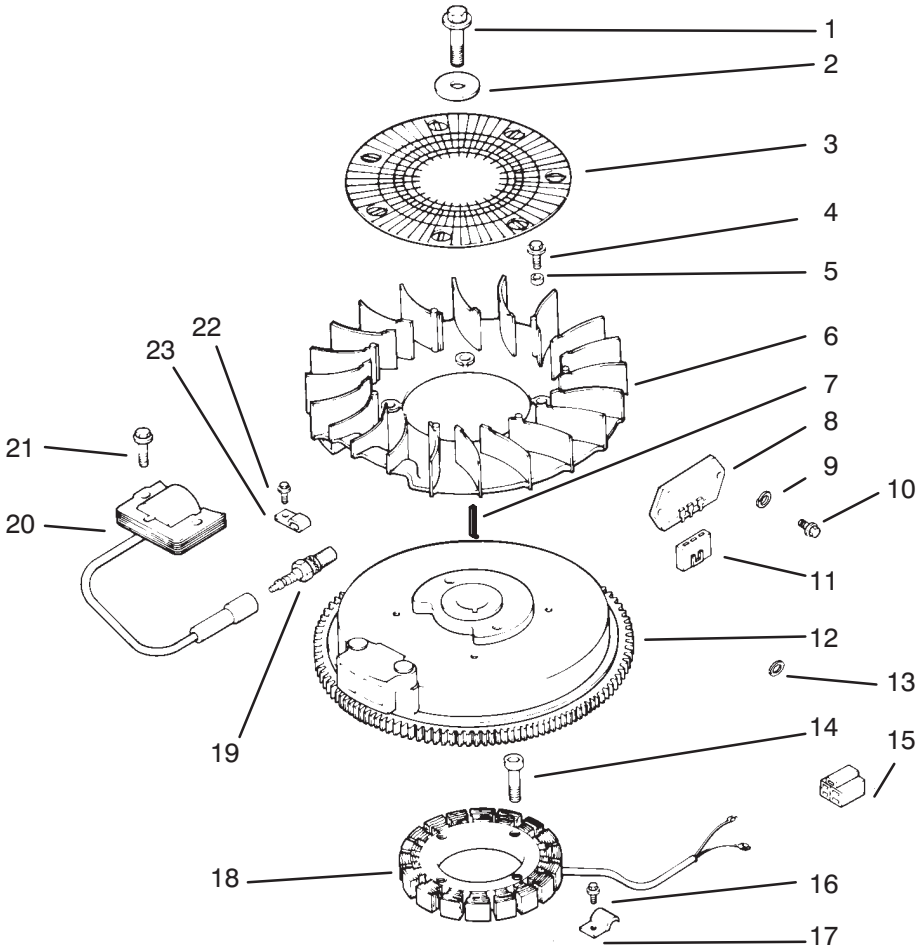


Sheet No.: 105
C−1952

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	12 086 14	1	Screw−Flywheel Mounting (Only On: 72042, 72043, 72062, 72063)
2	12 468 03	1	Washer−Flywheel Screw (Only On: 72042, 72043, 72062, 72063)
3	24 162 03	1	Screen−Grass (Only On: 72042, 72043, 72062, 72063)
4	M−0639016	4	Screw M6x1.0x16 (Only On: 72042, 72043, 72062, 72063)
5	12 112 01	4	Spacer−Fan (Only On: 72042, 72043, 72062, 72063)
6	12 157 02	1	Fan (Only On: 72042, 72043, 72062, 72063)
7	X−42−15	1	Key (Only On: 72042, 72043, 72062, 72063)
8	41 403 09	1	Rectifier−Regulator (Only On: 72042, 72043, 72062, 72063)
9	X−22−11	1	Washer−Lock (Only On: 72042, 72043, 72062, 72063)
10	M−0639016	2	Screw M6x1.0x16 (Only On: 72042, 72043, 72062, 72063)
11	236602	1	Connector−Regulator (Only On: 72042, 72043, 72062, 72063)
12	12 025 16	1	Flywheel ASM (Only On: 72042, 72043, 72062, 72063)
13	X−25−5	1	Washer−Flat (Only On: 72042, 72043, 72062, 72063)
14	M−0548025	4	Screw M5x0.8x25 (Only On: 72042, 72043, 72062, 72063)
15	48 155 01	1	Connector−5 Contact (Only On: 72042, 72043, 72062, 72063)
16	M−0545010	1	Screw M5x0.8x10 (Only On: 72042, 72043, 72062, 72063)
17	12 154 02	1	Clip−Stator Harness (Only On: 72042, 72043, 72062, 72063)
18	24 085 01	1	Stator−15 Amp (Only On: 72042, 72043, 72062, 72063)
19	12 132 02	1	Spark Plug (Only On: 72042, 72043, 72062, 72063)
20	12 584 01	1	Module−Ignition (Only On: 72042, 72043, 72062, 72063)
21	Sm−0545020	2	Screw M5x0.8x20 (Only On: 72042, 72043, 72062, 72063)
22	M−0545010	1	Screw M5x0.8x10 (Only On: 72042, 72043, 72062, 72063)
23	X−728−1	1	Clip−Kill Lead (Only On: 72042, 72043, 72062, 72063)
*	12 518 01	1	Lead−White (Only On: 72042, 72043, 72062, 72063)
*	15 518 09	1	Lead−Green (Only On: 72042, 72043, 72062, 72063)
*	25 518 05	1	Lead−Black (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

* Not illustrated

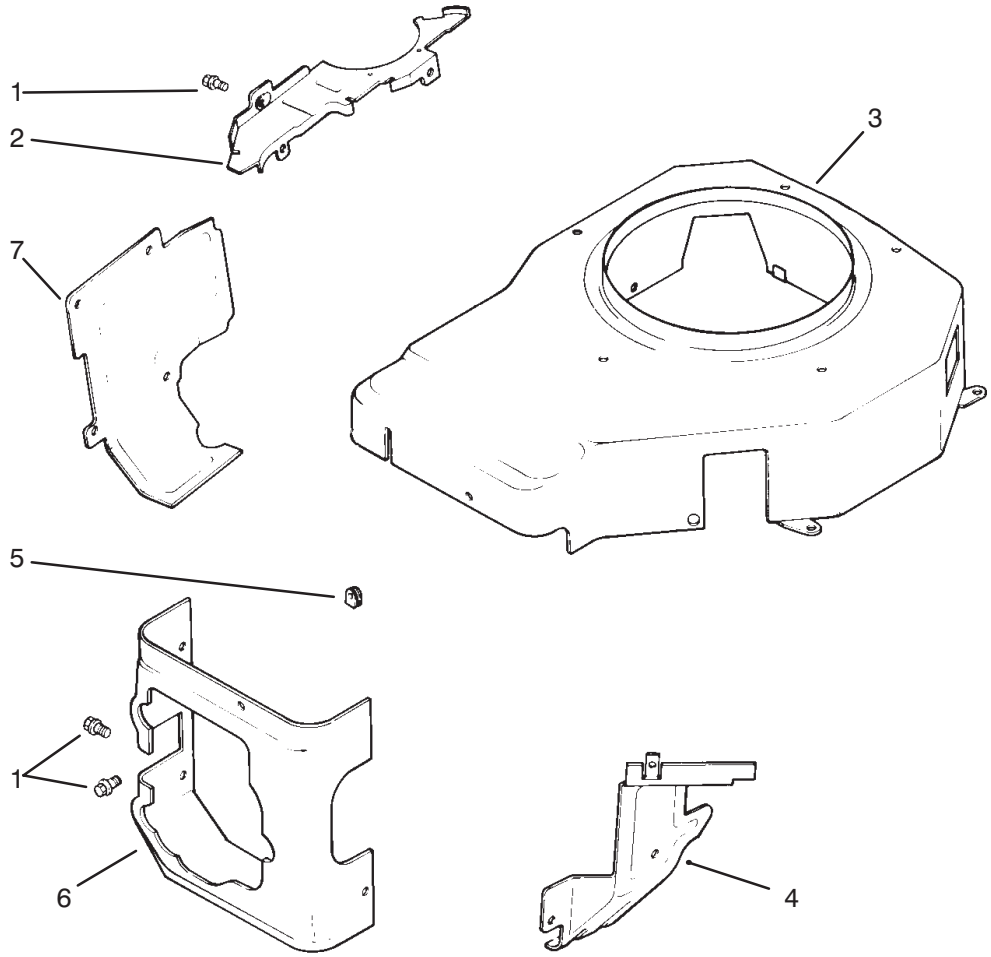


Sheet No.: 106
C–1953

Blower Housing & Baffles

Ref. No.	Part No.	Qty.	Description
1	M–0545010	13	Screw M5x0.8x10 (Only On: 72042, 72043, 72062, 72063)
2	12 146 07	1	Plate–Blower Housing (Only On: 72042, 72043, 72062, 72063)
3	12 027 18	1	Housing–Blower (Only On: 72042, 72043, 72062, 72063)
4	12 063 05	1	Baffle–Carburetor (Only On: 72042, 72043, 72062, 72063)
5	12 313 03	1	Grommet–Blower Housing (Only On: 72042, 72043, 72062, 72063)
6	12 063 08	1	Baffle–Cylinder Head (Only On: 72042, 72043, 72062, 72063)
7	12 063 01	1	Baffle–Cylinder Barrel (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

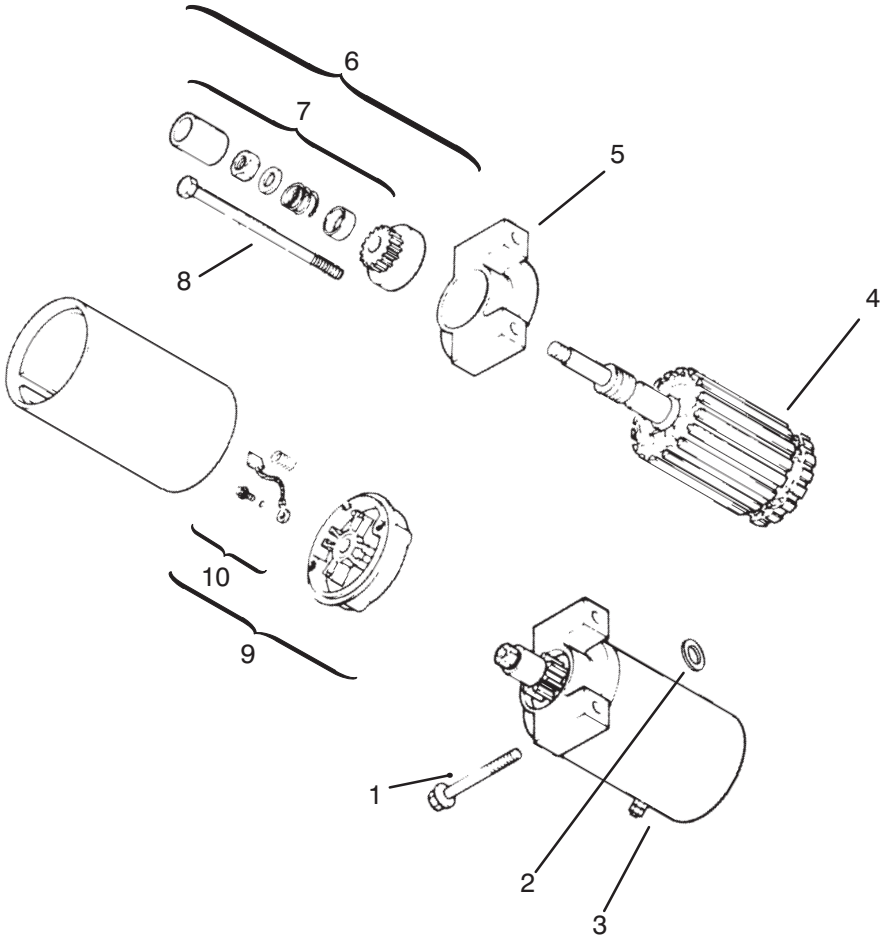


Sheet No.: 107
C−1954

Starting System

Ref. No.	Part No.	Qty.	Description
1	M0839070	2	Screw M8x1.25x70 (Only On: 72042, 72043, 72062, 72063)
2	12 468 01	2	Washer (Only On: 72042, 72043, 72062, 72063)
3	12 098 05	1	Starter ASM INCL 4−10 (Only On: 72042, 72043, 72062, 72063)
†4	12 170 02	1	Armature (Only On: 72042, 72043, 72062, 72063)
†5	12 227 01	1	Cap−Drive End (Only On: 72042, 72043, 72062, 72063)
†6	12 755 12	1	Kit−Drive INCL 7 (Only On: 72042, 72043, 72062, 72063)
†7	12 755 06	1	Kit−Drive Parts (Only On: 72042, 72043, 72062, 72063)
†8	12 086 02	1	Screw−HF (Only On: 72042, 72043, 72062, 72063)
†9	12 243 01	1	Cap−Commutator INCL 10 (Only On: 72042, 72043, 72062, 72063)
†10	82 755 28	1	Kit−Brush And Spring (Only On: 72042, 72043, 72062, 72063)
*	52 357 01	1	Lubricant−Starter (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

† Included in a service kit or in an assembly
* Not illustrated

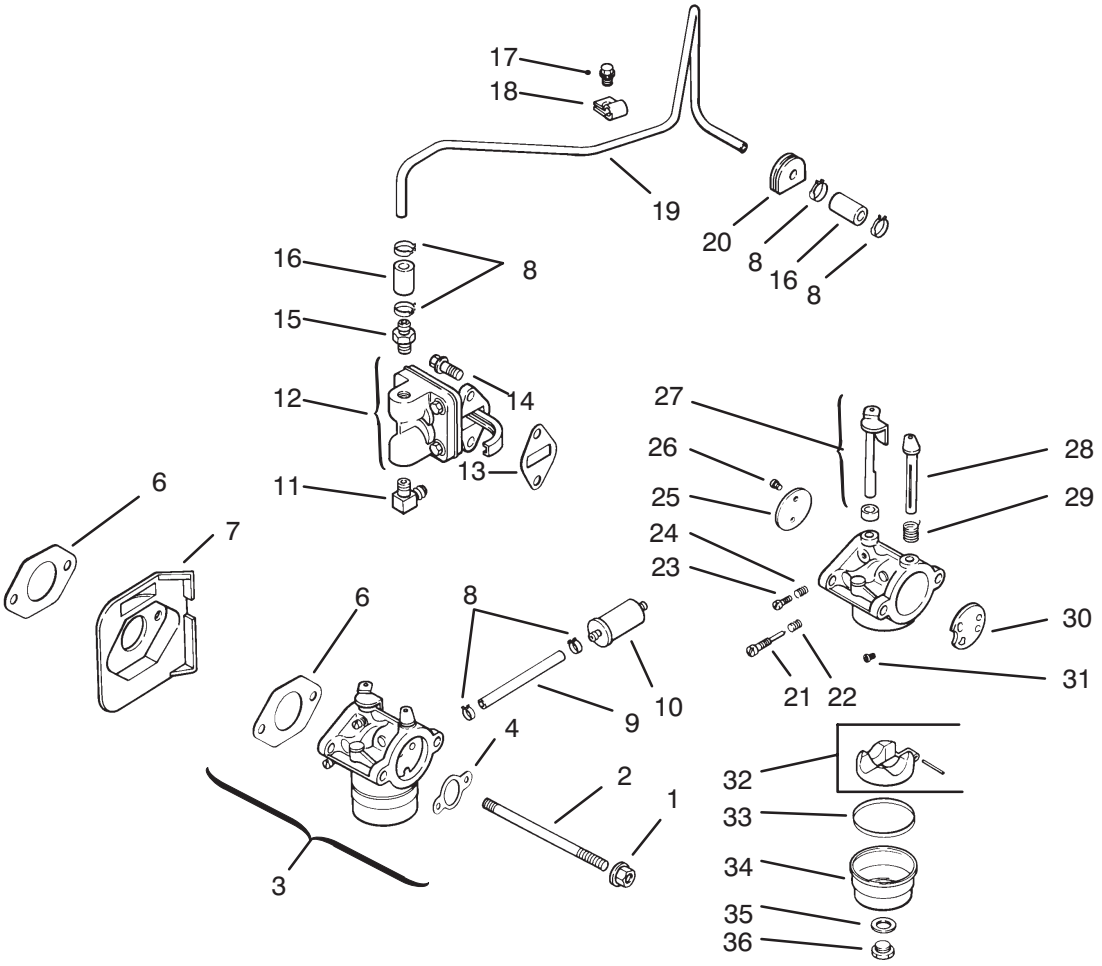


Sheet No.: 108
C–1955

Fuel System

Ref. No.	Part No.	Qty.	Description
1	Sm–0641060	2	Nut M6x1.0 (Only On: 72042, 72043, 72062, 72063)
2	M–0629122	2	Stud M6x1.0x110 (Only On: 72042, 72043, 72062, 72063)
3	12 853 01	1	Kit–Carb INCL 4/6/21–36 (Only On: 72042, 72043, 72062, 72063)
†4	12 041 02	1	Gasket–Air Cleaner (Only On: 72042, 72043, 72062, 72063)
†6	12 041 01	2	Gasket–Carburetor (Only On: 72042, 72043, 72062, 72063)
7	12 265 01	1	Deflector–Heat (Only On: 72042, 72043, 72062, 72063)
8	X–426–9	1	Clamp–Hose (Only On: 72042, 72043, 72062, 72063)
9	25 353 02	1	Line–Fuel 3” (Only On: 72042, 72043, 72062, 72063)
10	25 050 02	1	Filter–Fuel (Only On: 72042, 72043, 72062, 72063)
11	25 155 02	1	Connector–90 DEG (Only On: 72042, 72043, 72062, 72063)
12	12 559 01	1	Kit–Pump INCL 13–14 (Only On: 72042, 72043, 72062, 72063)
†13	25 041 09	1	Gasket–Fuel Pump (Only On: 72042, 72043, 72062, 72063)
†14	Sm–0645020	2	Screw M6x1.0x20 (Only On: 72042, 72043, 72062, 72063)
15	X–380–1	1	Connector–Straight (Only On: 72042, 72043, 72062, 72063)
16	12 353 01	2	Line–Fuel 1.25 Inch (Only On: 72042, 72043, 72062, 72063)
17	M–0545010	1	Screw M5x0.8x10 (Only On: 72042, 72043, 72062, 72063)
18	12 154 01	1	Clamp–Fuel Line (Only On: 72042, 72043, 72062, 72063)
19	12 123 01	1	Line–Fuel (Only On: 72042, 72043, 72062, 72063)
20	12 313 01	1	Grommet (Only On: 72042, 72043, 72062, 72063)
†21	12 368 01	1	Needle–Idle Fuel Adjust (Only On: 72042, 72043, 72062, 72063)
†22	12 089 09	1	Spring–Idle Fuel (Only On: 72042, 72043, 72062, 72063)
†23	12 086 04	1	Screw–Idle Speed Adjust (Only On: 72042, 72043, 72062, 72063)
†24	12 089 09	1	Spring–Idle Fuel (Only On: 72042, 72043, 72062, 72063)
†25	12 146 03	1	Plate–Throttle (Only On: 72042, 72043, 72062, 72063)
†26	25 086 27	1	Screw–Throttle Plate (Only On: 72042, 72043, 72062, 72063)
†27	12 144 09	1	Shaft–W/Lever & Seal (Only On: 72042, 72043, 72062, 72063)

† Included in a service kit or in an assembly

PROTOTYPE

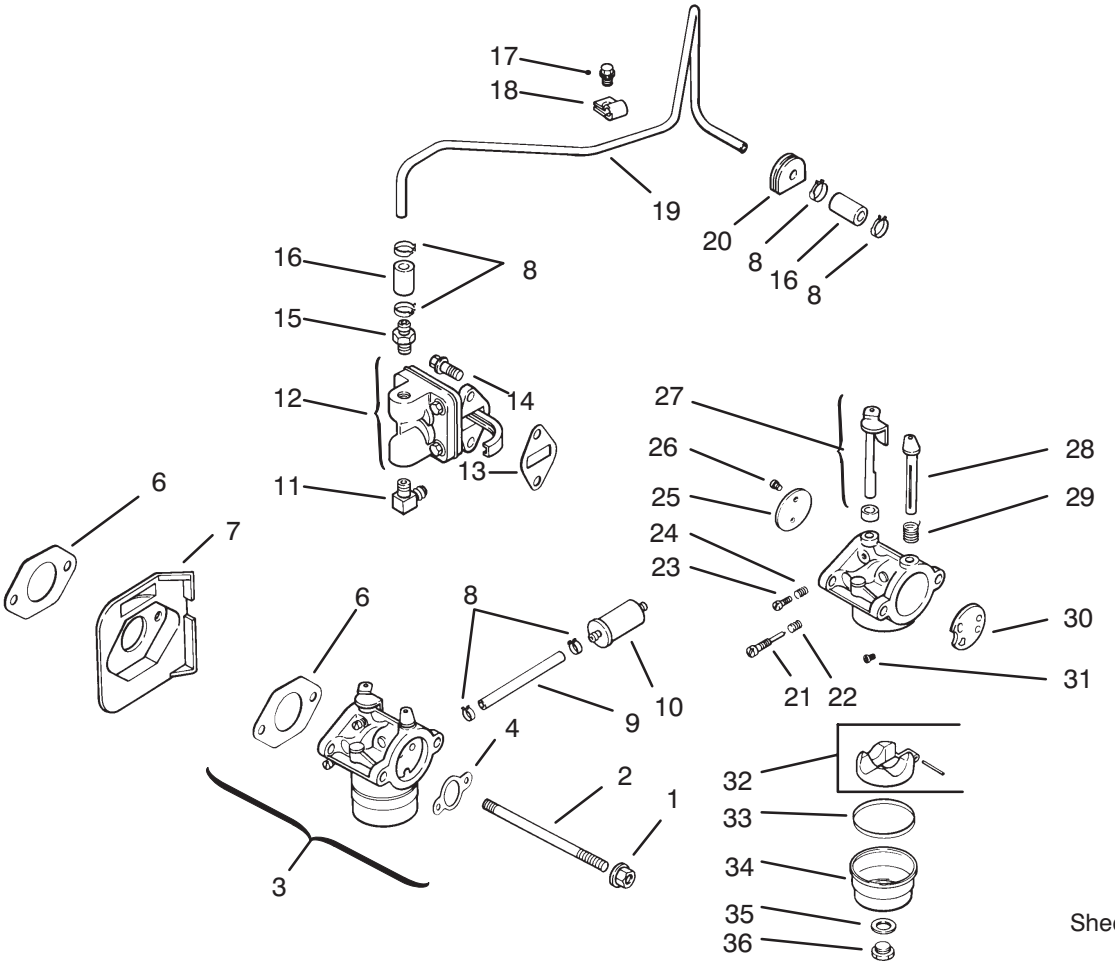


Sheet No.: 108
C−1955

Fuel System

Ref. No.	Part No.	Qty.	Description
†28	12 144 08	1	Shaft−Choke (Only On: 72042, 72043, 72062, 72063)
†29	12 089 10	1	Spring−Choke Return (Only On: 72042, 72043, 72062, 72063)
†30	12 146 02	1	Plate−Choke (Only On: 72042, 72043, 72062, 72063)
†31	12 337 09	1	Jet−Main (Only On: 72042, 72043, 72062, 72063)
†32	12 757 02	1	Kit−Float (Only On: 72042, 72043, 72062, 72063)
†33	12 041 05	1	Gasket−Bowl (Only On: 72042, 72043, 72062, 72063)
†34	12 104 01	1	Bowl−Fuel (Only On: 72042, 72043, 72062, 72063)
†35	12 041 06	1	Gasket−Bowl Screw (Only On: 72042, 72043, 72062, 72063)
†36	12 086 05	1	Screw−Fuel Bowl (Only On: 72042, 72043, 72062, 72063)
*	12 041 01	1	Gasket−Carburetor (Only On: 72042, 72043, 72062, 72063)
*	12 755 09	1	Kit−High Altitude (Only On: 72042, 72043, 72062, 72063)
*	12 757 01	1	Kit−Carburetor Repair (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

† Included in a service kit or in an assembly
* Not illustrated

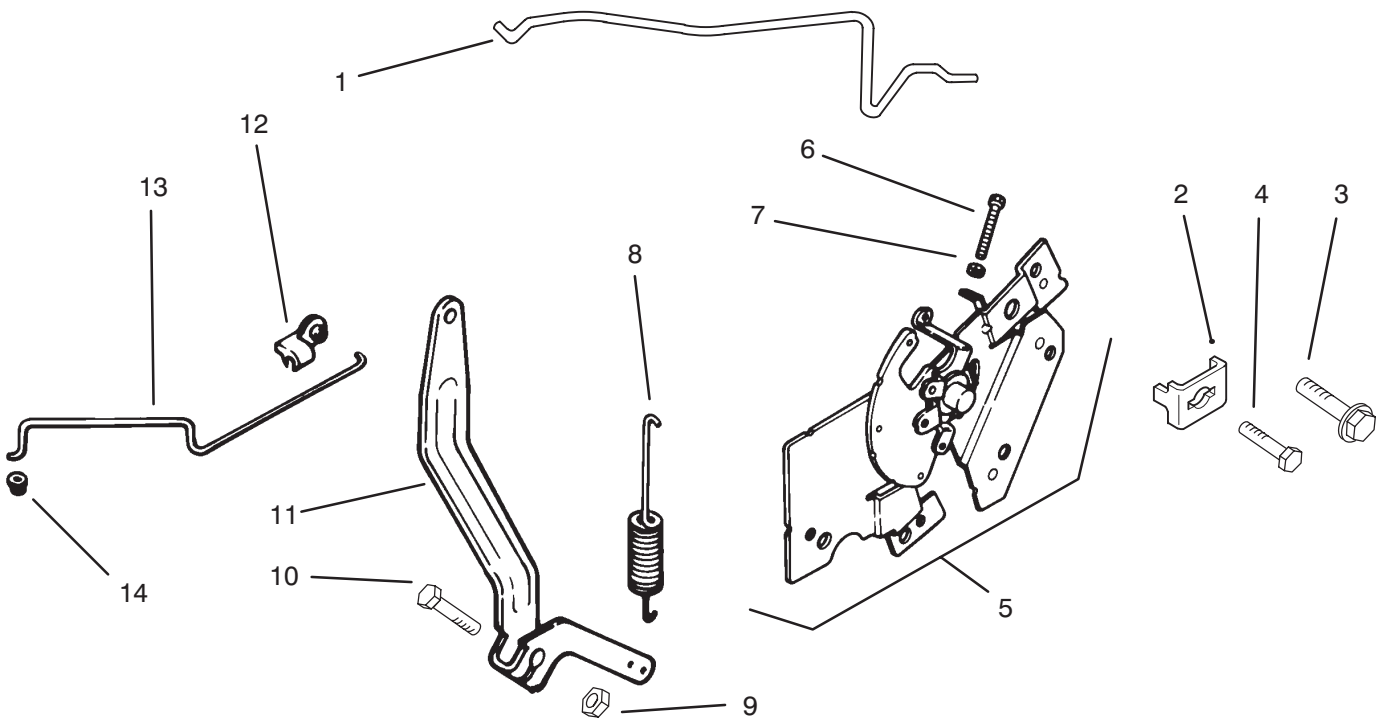


Sheet No.: 109
C–1956

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	12 079 07	1	Linkage–Choke (Only On: 72042, 72043, 72062, 72063)
2	12 237 01	2	Clamp–Cable (Only On: 72042, 72043, 72062, 72063)
3	M–0645016	2	Screw–HH M6x1.0x16 (Only On: 72042, 72043, 72062, 72063)
4	M–0545016	2	Screw M5x0.8x16 (Only On: 72042, 72043, 72062, 72063)
5	12 536 02	1	Control–ASM INCL 6–7 (Only On: 72042, 72043, 72062, 72063)
†6	M–0401030	1	Screw–HHF M4x0.7x28 (Only On: 72042, 72043, 72062, 72063)
†7	M–0446030	1	Nut–Hex M4x0.7 (Only On: 72042, 72043, 72062, 72063)
8	52 089 07	1	Spring–Governor (Only On: 72042, 72043, 72062, 72063)
9	Sm–0641060	1	Nut M6x1.0 (Only On: 72042, 72043, 72062, 72063)
10	Sm–0642025	1	Screw M6x1.0x25 (Only On: 72042, 72043, 72062, 72063)
11	12 090 05	1	Lever–Governor (Only On: 72042, 72043, 72062, 72063)
12	25 158 11	1	Bushing–Linkage (Only On: 72042, 72043, 72062, 72063)
13	12 079 01	1	Linkage–Throttle (Only On: 72042, 72043, 72062, 72063)
14	25 158 08	1	Bushing–Linkage (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

† Included in a service kit or in an assembly

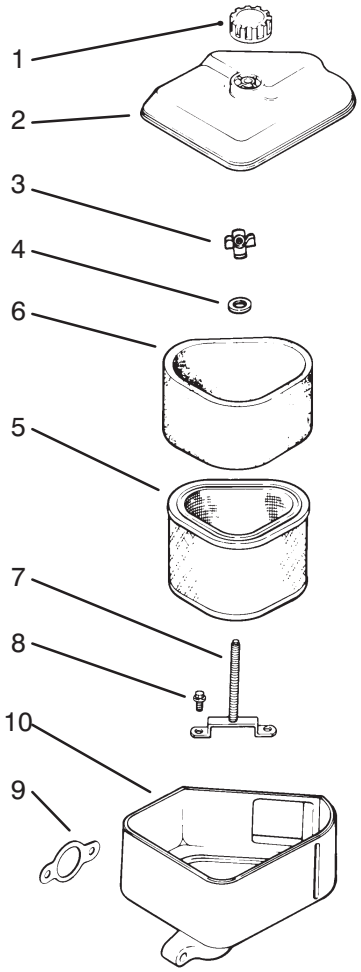


Sheet No.: 110
C−1957

Air Intake / Filtration

Ref. No.	Part No.	Qty.	Description
1	12 341 01	1	Knob−Air Cleaner Cover (Only On: 72042, 72043, 72062, 72063)
2	12 096 06	1	Cover−Air Cleaner (Only On: 72042, 72043, 72062, 72063)
3	12 100 01	1	Nut−Wing (Only On: 72042, 72043, 72062, 72063)
4	X−25−63	1	Washer−Flat (Only On: 72042, 72043, 72062, 72063)
5	12 083 05	1	Element−Air Cleaner (Only On: 72042, 72043, 72062, 72063)
6	12 083 08	1	Precleaner−Element (Only On: 72042, 72043, 72062, 72063)
7	12 072 03	1	Stud−Mounting Plate (Only On: 72042, 72043, 72062, 72063)
8	12 086 01	1	Screw−Mounting Plate (Only On: 72042, 72043, 72062, 72063)
9	12 041 02	1	Gasket−Air Cleaner (Only On: 72042, 72043, 72062, 72063)
10	12 094 01	1	Base−Air Cleaner (Only On: 72042, 72043, 72062, 72063)
*	12 113 04	1	Decal−Air Cleaner (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

* Not illustrated

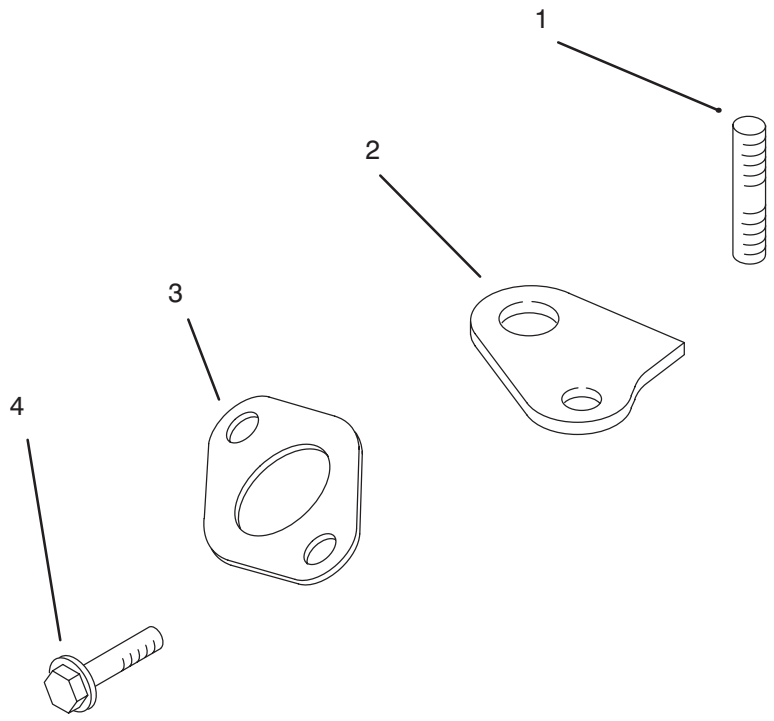


Sheet No.: 111
C–1958

Exhaust

Ref. No.	Part No.	Qty.	Description
1	M–0829033	2	Stud M8x1.25x20 (Only On: 72042, 72043, 72062, 72063)
2	12 445 01	1	Strap–Lifting (Only On: 72042, 72043, 72062, 72063)
3	12 041 03	1	Gasket–Exhaust Manifold (Only On: 72042, 72043, 72062, 72063)
4	M–0645025	1	Screw–Valve Cover (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

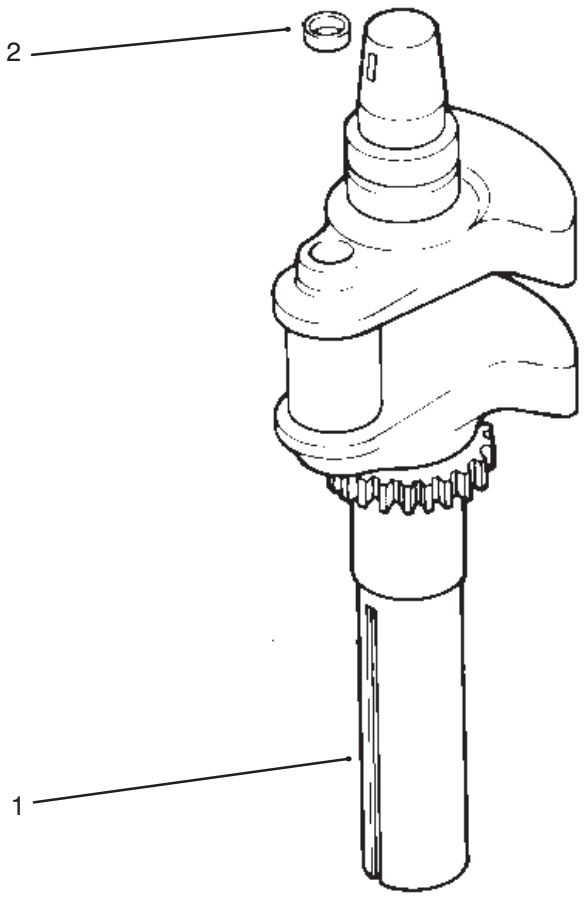


Sheet No.: 201
C−1959

Crankshaft

Ref. No.	Part No.	Qty.	Description
1	24 014 42	1	Crankshaft (Only On: 72103)
2	52 139 09	1	Plug−Cup (Only On: 72103)

PROTOTYPE

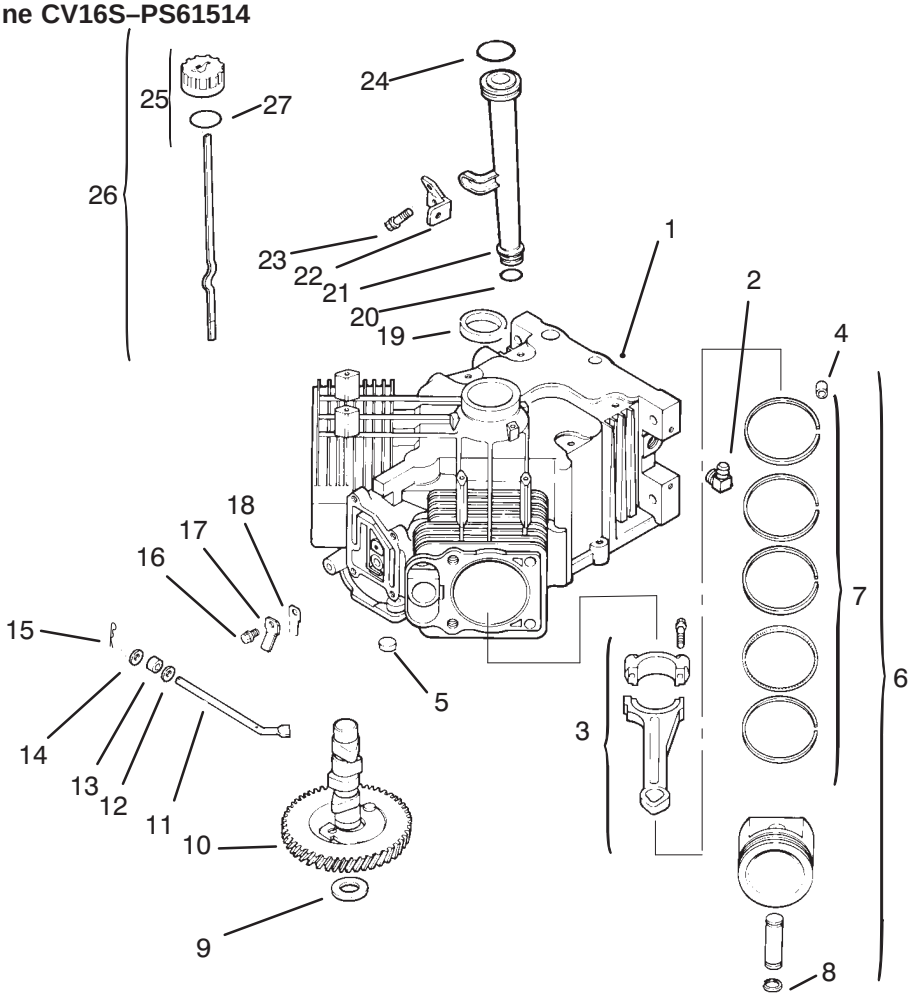


Sheet No.: 202
C–1960

Crankcase

Ref. No.	Part No.	Qty.	Description
1	24 522 09	1	Short Block (Only On: 72103)
2	25 155 02	1	Connector–90 DEG (Only On: 72103)
3	24 067 01	2	Connecting Rod STD (Only On: 72103)
3	24 067 02	2	Connecting Rod .25 (Only On: 72103)
†4	12 380 03	6	Dowel–Locating (Only On: 72103)
5	52 139 09	1	Plug–Cup (Only On: 72103)
6	24 874 01	2	Piston ASM STD INCL 4/7/8 (Only On: 72103)
6	24 874 02	2	Piston ASM .25 INCL 4/7/8 (Only On: 72103)
6	24 874 03	2	Piston ASM .50 INCL 4/7/8 (Only On: 72103)
†7	24 108 01	2	Ring Set STD INCL 4/8 (Only On: 72103)
7	24 108 02	2	Ring Set .25 INCL 4/8 (Only On: 72103)
7	24 108 03	2	Ring Set .50 INCL 4/8 (Only On: 72103)
†8	24 018 01	4	Retainer–Piston Pin (Only On: 72103)
9	12 422 07	1	Shim–Camshaft A/R (Only On: 72103)
9	12 422 08	1	Shim–Camshaft A/R (Only On: 72103)
9	12 422 09	1	Shim–Camshaft A/R (Only On: 72103)
9	12 422 10	1	Shim–Camshaft A/R (Only On: 72103)
9	12 422 11	1	Shim–Camshaft A/R (Only On: 72103)
9	12 422 12	1	Shim–Camshaft A/R (Only On: 72103)
9	12 422 13	1	Shim–Camshaft A/R (Only On: 72103)
10	24 012 05	1	Camshaft (Only On: 72103)
11	24 144 01	1	Shaft–Governor Cross (Only On: 72103)
12	X–25–63	1	Washer–Flat (Only On: 72103)
13	12 032 01	1	Seal–Governor Shaft (Only On: 72103)
14	X–25–102	1	Washer–Flat (Only On: 72103)
15	12 380 04	1	Pin–Governor Hitch (Only On: 72103)

PROTOTYPE

† Included in a service kit or in an assembly

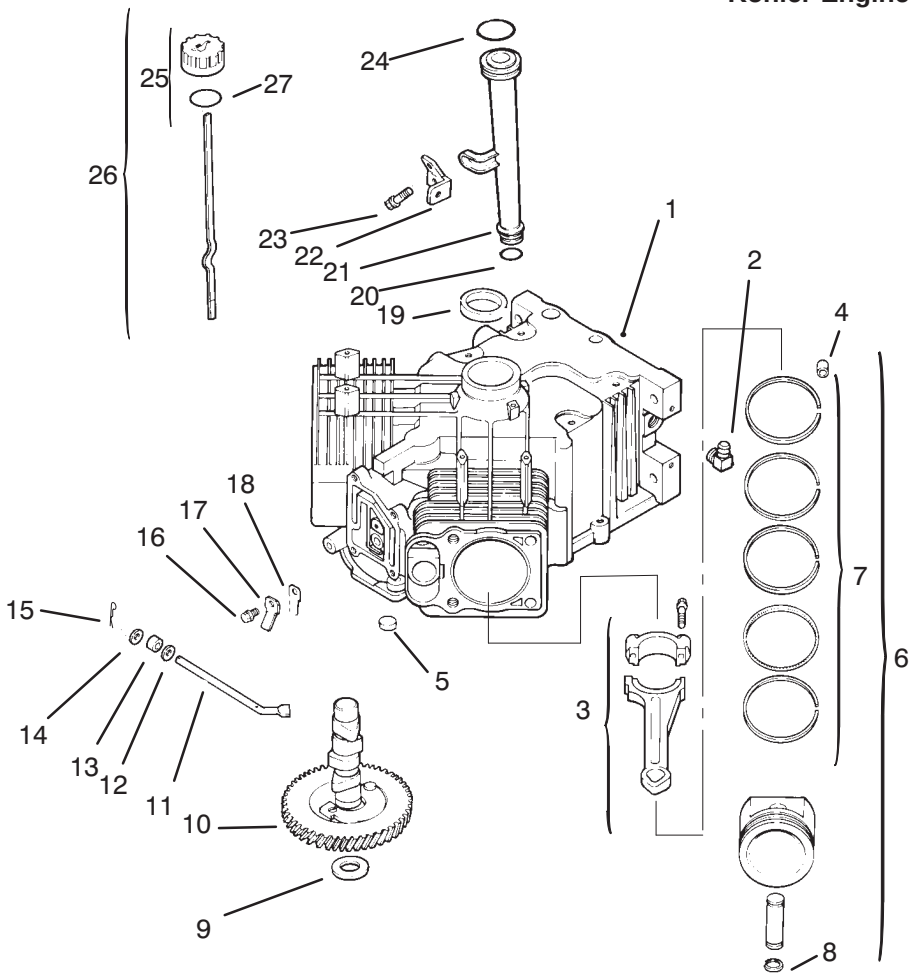


Sheet No.: 202
C−1960

Crankcase

Ref. No.	Part No.	Qty.	Description
16	M−0545010	2	Screw M5x0.8x10 (Only On: 72103)
17	24 018 04	2	Retainer−Reed (Only On: 72103)
18	24 402 01	2	Beed−Breather (Only On: 72103)
19	24 032 01	1	Seal−Oil (Only On: 72103)
20	12 153 01	1	O Ring−Lower Fill Tube (Only On: 72103)
21	12 123 04	1	Tube−Oil Fill (Only On: 72103)
22	24 126 19	1	Bracket−Oil Fill Tube (Only On: 72103)
23	M−0549016	1	Screw M5x0.8x16 (Only On: 72103)
24	12 153 02	1	O Ring−Upper Fill Tube (Only On: 72103)
25	24 038 04	1	Dipstick INCL 26−27 (Only On: 72103)
†26	25 755 13	1	Kit−Oil Cap INCL 3 (Only On: 72103)
†27	12 153 03	1	O Ring−Fill Cap (Only On: 72103)
*	24 755 03	1	Gasket Set (Only On: 72103)

PROTOTYPE

† Included in a service kit or in an assembly
* Not illustrated

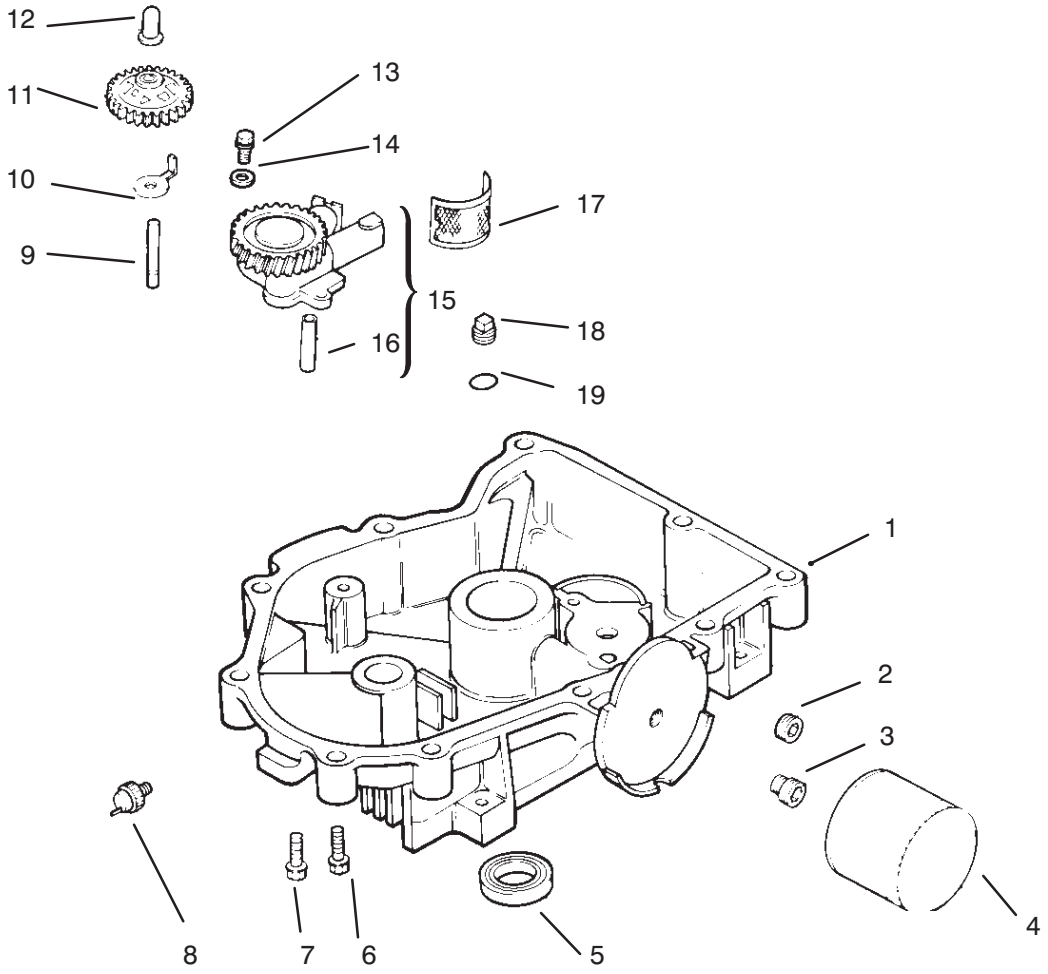


Sheet No.: 203
C–1961

Oil Pan / Lubrication

Ref. No.	Part No.	Qty.	Description
1	24 199 01	1	Oil Pan (Only On: 72103)
2	X–75–32	1	Plug–HS 3/8 NPTF (Only On: 72103)
3	24 136 01	1	Nipple–Oil Filter (Only On: 72103)
4	12 050 01	1	Filter–Oil (Only On: 72103)
5	52 032 08	1	Seal–Oil (Only On: 72103)
6	24 086 17	1	Screw M8x1.25x45 (Only On: 72103)
7	24 086 16	9	Screw M8x1.25x45 (Only On: 72103)
8	52 099 06	1	Switch–Oil Pressure (Only On: 72103)
9	12 144 02	1	Shaft–Governor Gear (Only On: 72103)
10	52 448 02	1	Tab–Locking (Only On: 72103)
11	24 043 11	1	Governor Gear ASM (Only On: 72103)
12	12 380 01	1	Pin–Governor Regulating (Only On: 72103)
13	M–0645025	2	Screw–Valve Cover (Only On: 72103)
14	Sm–0631005	2	Washer–Governor (Only On: 72103)
15	24 393 05	1	Oil Pump ASM INCL 16 (Only On: 72103)
†16	24 123 05	1	Tube–Oil Pickup (Only On: 72103)
17	12 162 02	1	Screen–Oil Pickup (Only On: 72103)
18	X–75–10	1	Plug–SH 3/8 NPTF (Only On: 72103)
19	24 153 08	1	O Ring (Only On: 72103)
*	25 113 05	1	Decal–Oil Sentry (Only On: 72103)

PROTOTYPE

† Included in a service kit or in an assembly
* Not illustrated

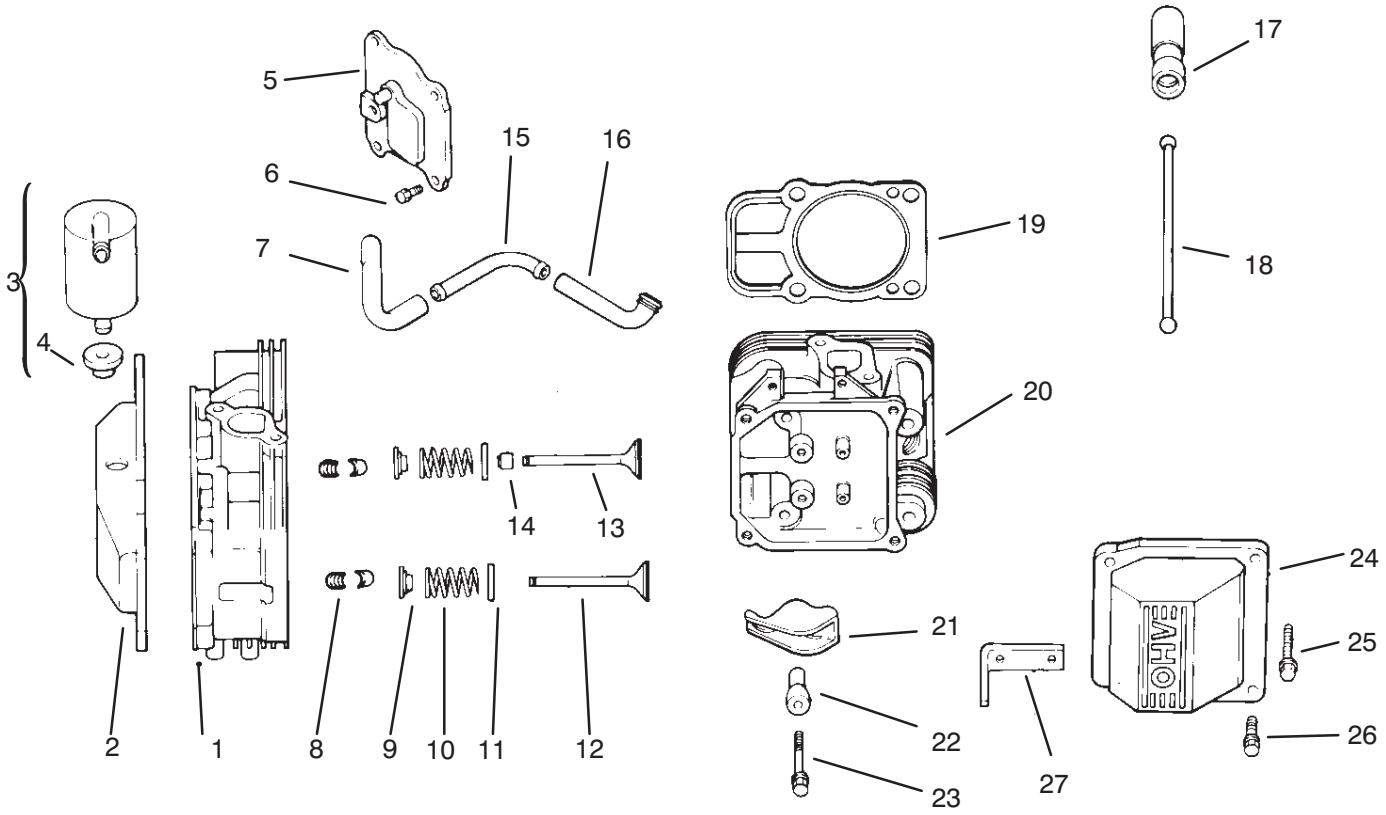


Sheet No.: 204
C−1962

Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
1	24 318 11	1	Head ASM−#1 Cylinder (Only On: 72103)
2	24 096 16	1	Cover−Rocker (Only On: 72103)
3	24 755 20	1	Kit−Breather INCL 4 (Only On: 72103)
†4	25 313 02	1	Grommet−Rubber (Only On: 72103)
5	24 096 15	1	Cover−Breather (Only On: 72103)
6	Sm−0645020	4	Screw M6x1.0x20 (Only On: 72103)
7	24 326 05	1	Hose−Breather (Only On: 72103)
8	12 755 03	4	Kit−Retainer (Only On: 72103)
9	12 173 01	4	Cap−Valve Spring (Only On: 72103)
10	24 089 02	4	Spring−Valve (Only On: 72103)
11	52 018 01	4	Retainer−Spring (Only On: 72103)
12	24 016 01	2	Valve−Exhaust (Only On: 72103)
13	24 017 01	2	Valve−Intake (Only On: 72103)
14	24 032 05	2	Seal−Valve Stem (Only On: 72103)
15	24 294 02	1	Fitting (Only On: 72103)
16	24 326 04	1	Hose−Breather (Only On: 72103)
17	12 351 01	4	Lifter−Valve (Only On: 72103)
18	24 411 02	4	Rod−Push (Only On: 72103)
19	24 041 08	2	Gasket−Cylinder Head (Only On: 72103)
20	24 318 12	1	Head ASM−#2 Cylinder (Only On: 72103)
21	24 186 02	4	Arm−Rocker (Only On: 72103)
22	24 194 01	4	Ball−Rocker Pivot (Only On: 72103)
23	M−0640034	4	Screw M6x1.0x34 (Only On: 72103)
24	24 096 12	1	Cover−Rocker (Only On: 72103)
25	12 086 16	8	Screw M10x1.5x91 (Only On: 72103)
26	M−0651030	8	Screw M6x1.0x30 (Only On: 72103)

† Included in a service kit or in an assembly

PROTOTYPE

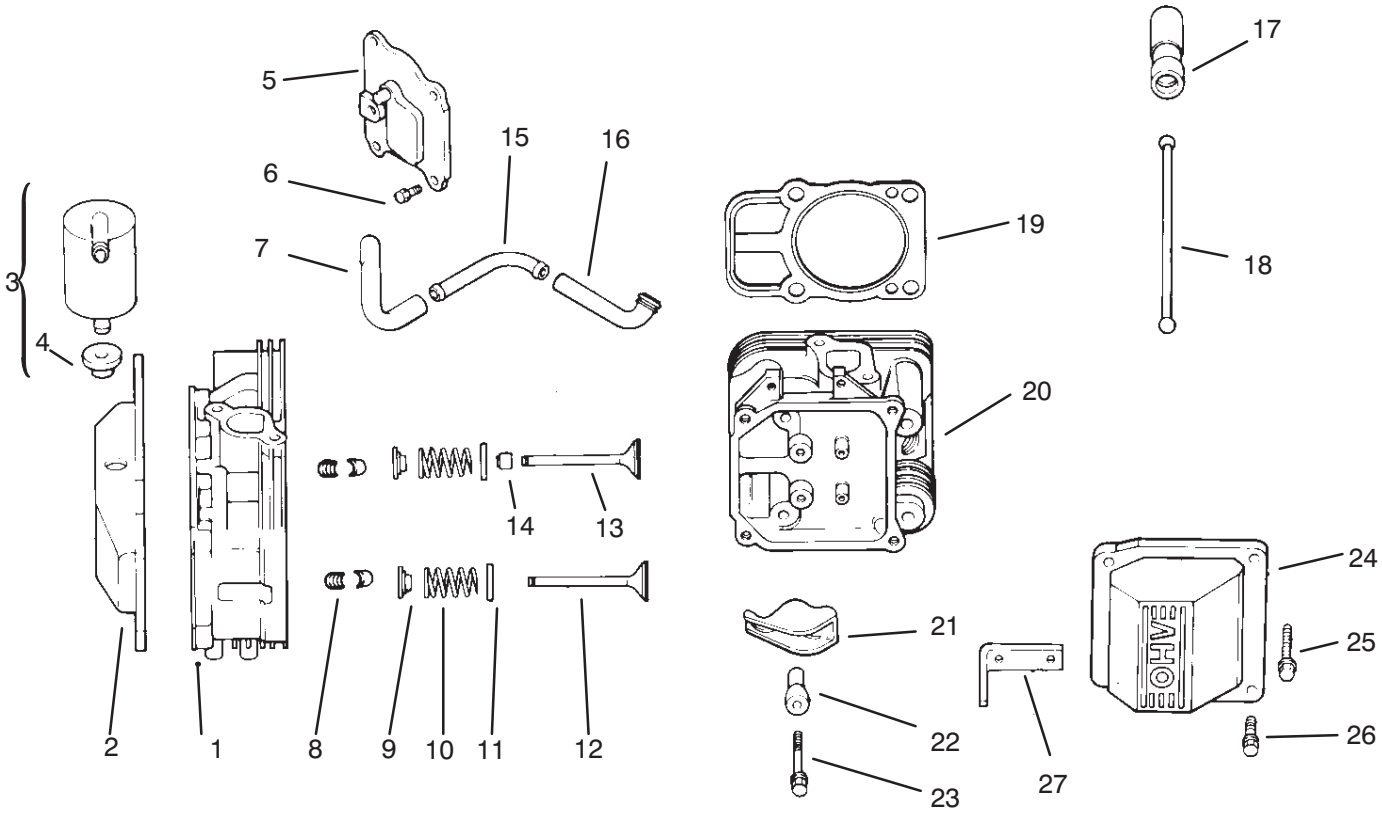


Sheet No.: 204
C–1962

Head / Valve / Breather

Ref. No.	Part No.	Qty.	Description
27	24 445 01	1	Strap–Lifting (Only On: 72103)

PROTOTYPE

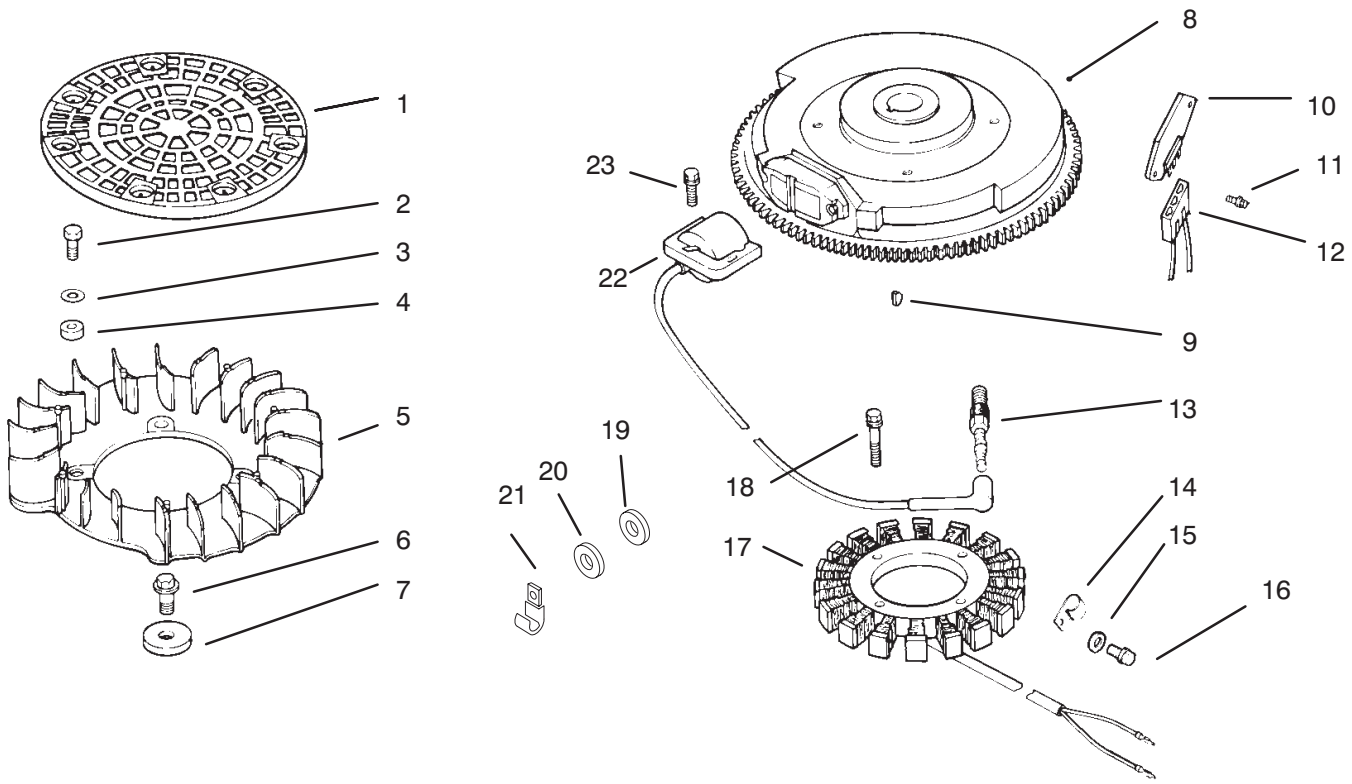


Sheet No.: 205
C−1963

Ignition / Electrical

Ref. No.	Part No.	Qty.	Description
1	24 162 17	1	Screen−Grass (Only On: 72103)
2	M−0401025	4	Screw M4x0.7x24 (Only On: 72103)
3	X−25−92	4	Washer−Flat (Only On: 72103)
4	24 112 04	1	Spacer−Fan (Only On: 72103)
5	24 157 03	1	Fan (Only On: 72103)
6	M−0639016	4	Screw M6x1.0x16 (Only On: 72103)
7	12 112 01	4	Spacer−Fan (Only On: 72103)
8	24 025 04	1	Flywheel ASM (Only On: 72103)
9	X−42−15	1	Key (Only On: 72103)
10	25 403 03	1	Rectifier−Regulator (Only On: 72103)
11	24 086 06	2	Screw−Phillips (Only On: 72103)
12	236602	1	Connector−Regulator (Only On: 72103)
13	12 132 02	2	Spark Plug (Only On: 72103)
14	48 154 02	1	Clip−Stator Harness (Only On: 72103)
15	12 468 03	1	Washer−Flywheel Screw (Only On: 72103)
16	12 086 14	1	Screw−Flywheel Mounting (Only On: 72103)
17	24 085 01	1	Stator−15 Amp (Only On: 72103)
18	M−0548025	2	Screw M5x0.8x25 (Only On: 72103)
19	X−25−63	2	Washer−Flat (Only On: 72103)
20	X−25−92	2	Washer−Flat (Only On: 72103)
21	235173	1	Clip−Cable (Only On: 72103)
22	24 584 01	1	Module−Ignition (Only On: 72103)
23	M−0545020	4	Screw M5x0.8x20 (Only On: 72103)
*	24 113 18	1	Decal−Grass Screen (Only On: 72103)
*	24 176 06	1	Harness−Wire (Only On: 72103)
*	24 518 04	1	Lead−Green (Only On: 72103)

* Not illustrated

PROTOTYPE

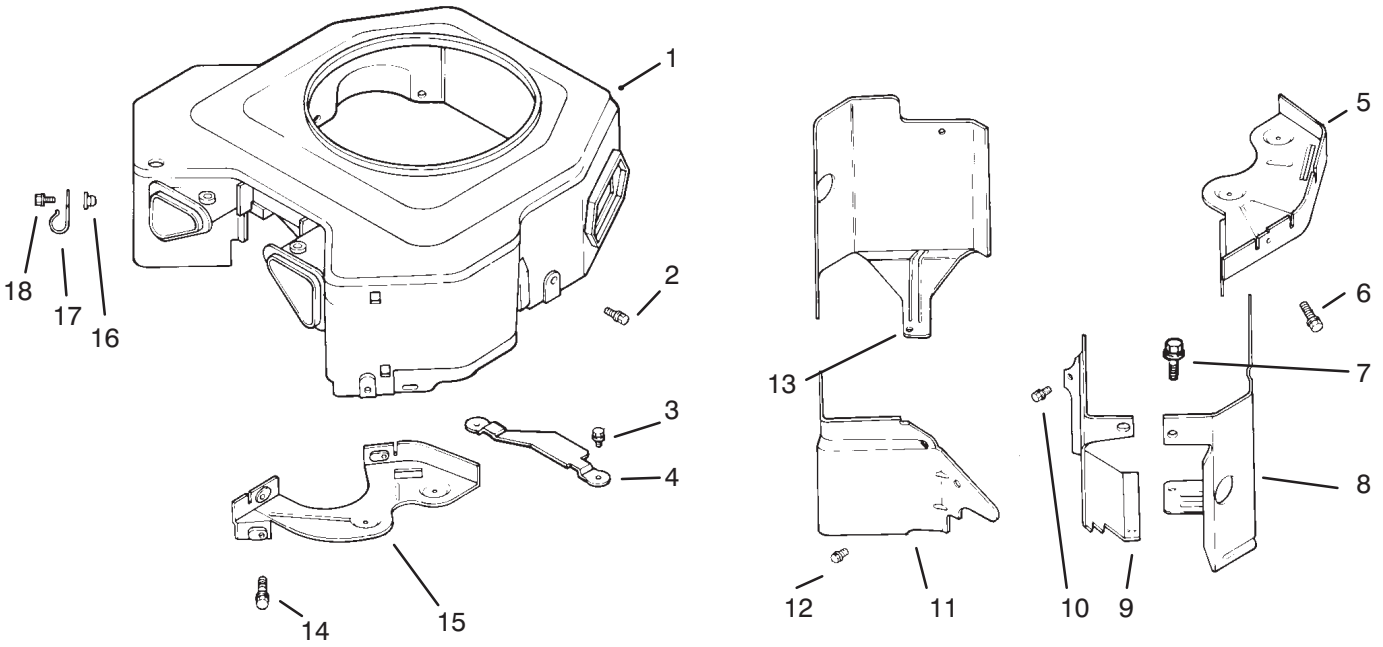


Sheet No.: 206
C–1964

Blower Housing & Baffles

Ref. No.	Part No.	Qty.	Description
1	24 027 20	1	Housing–Blower ASM (Only On: 72103)
2	M–0549016	3	Screw M5x0.8x16 (Only On: 72103)
3	Sm–0645016	4	Screw M6x1.0x16 (Only On: 72103)
4	24 314 05	1	Guard–Flywheel (Only On: 72103)
5	24 146 02	1	Plate–Backing #2 Side (Only On: 72103)
6	M–0545020	2	Screw M5x0.8x20 (Only On: 72103)
7	M–0551016	1	Screw M5x0.8x14 (Only On: 72103)
8	24 063 20	1	Baffle–Cylinder #2 Side (Only On: 72103)
9	24 063 15	1	Baffle–Valley #1 Side (Only On: 72103)
10	M–0549010	2	Screw M5x0.8x10 (Only On: 72103)
11	24 063 14	1	Baffle–Valley #2 Side (Only On: 72103)
12	M–0549016	2	Screw M5x0.8x16 (Only On: 72103)
13	24 063 06	1	Baffle–Cylinder #1 Side (Only On: 72103)
14	M–0649016	2	Screw M6x1.0x16 (Only On: 72103)
15	24 146 14	1	Plate–Backing #1 Side (Only On: 72103)
16	24 100 01	4	Nut–Plastic (Only On: 72103)
17	47 154 01	1	Clip–Cable (Only On: 72103)
18	24 086 12	1	Screw–Cable Clip (Only On: 72103)
*	24 100 02	2	Nut INCL W/Blower Hsng (Only On: 72103)
*	24 113 10	1	Decal–Horsepower (Only On: 72103)
*	25 139 16	1	Plug INCL W/Blower Hsng (Only On: 72103)

PROTOTYPE

* Not illustrated

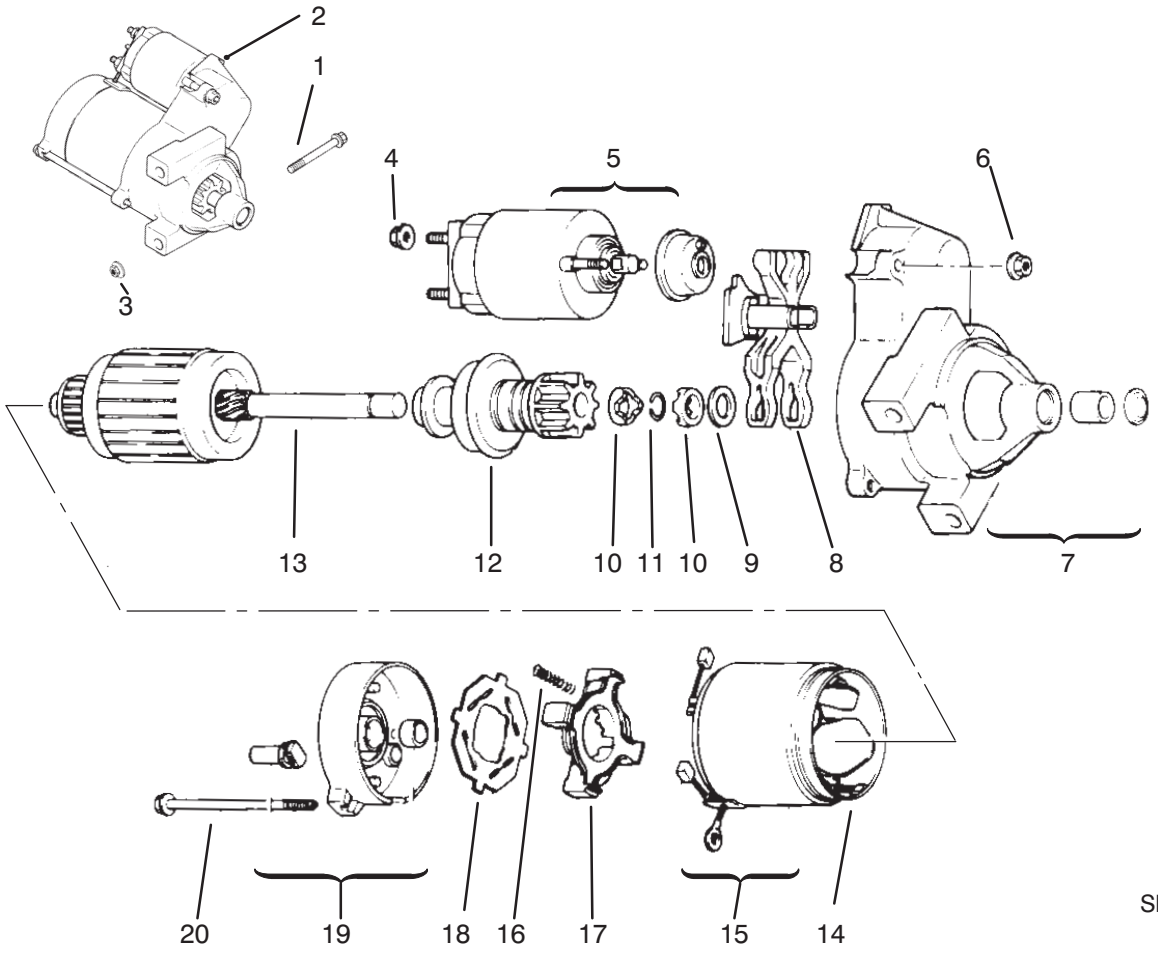


Sheet No.: 207
C−1965

Starting System

Ref. No.	Part No.	Qty.	Description
1	M−0839080	2	Screw M8x1.25x80 (Only On: 72103)
2	12 098 03	1	Starter INCL 4−20 (Only On: 72103)
3	M−0841080	1	Nut M8x1.25 (Only On: 72103)
†4	52 100 09	1	Nut−Starter (Only On: 72103)
†5	52 435 02	1	Solenoid (Only On: 72103)
†6	52 100 10	2	Nut Starter (Only On: 72103)
†7	12 081 02	1	Cap−Drive End (Only On: 72103)
†8	12 090 10	1	Lever Starter Drive (Only On: 72103)
†9	42 468 14	1	Washer−Thrust (Only On: 72103)
†10	52 100 08	2	Nut−Stop Collar (Only On: 72103)
†11	52 141 03	1	Ring−Retainer (Only On: 72103)
†12	12 239 01	1	Drive−Pinion (Only On: 72103)
†13	12 170 03	1	Armature−Starter (Only On: 72103)
†14	12 471 01	1	Frame (Only On: 72103)
†15	52 221 01	1	Kit−Brush INCL 16 (Only On: 72103)
†16	52 089 09	4	Spring−Brush (Only On: 72103)
†17	52 323 03	1	Holder−Brush (Only On: 72103)
†18	52 168 01	1	Insulator (Only On: 72103)
†19	12 301 01	1	Cap−Commutator End (Only On: 72103)
†20	52 211 05	2	Bolt (Only On: 72103)

PROTOTYPE

† Included in a service kit or in an assembly

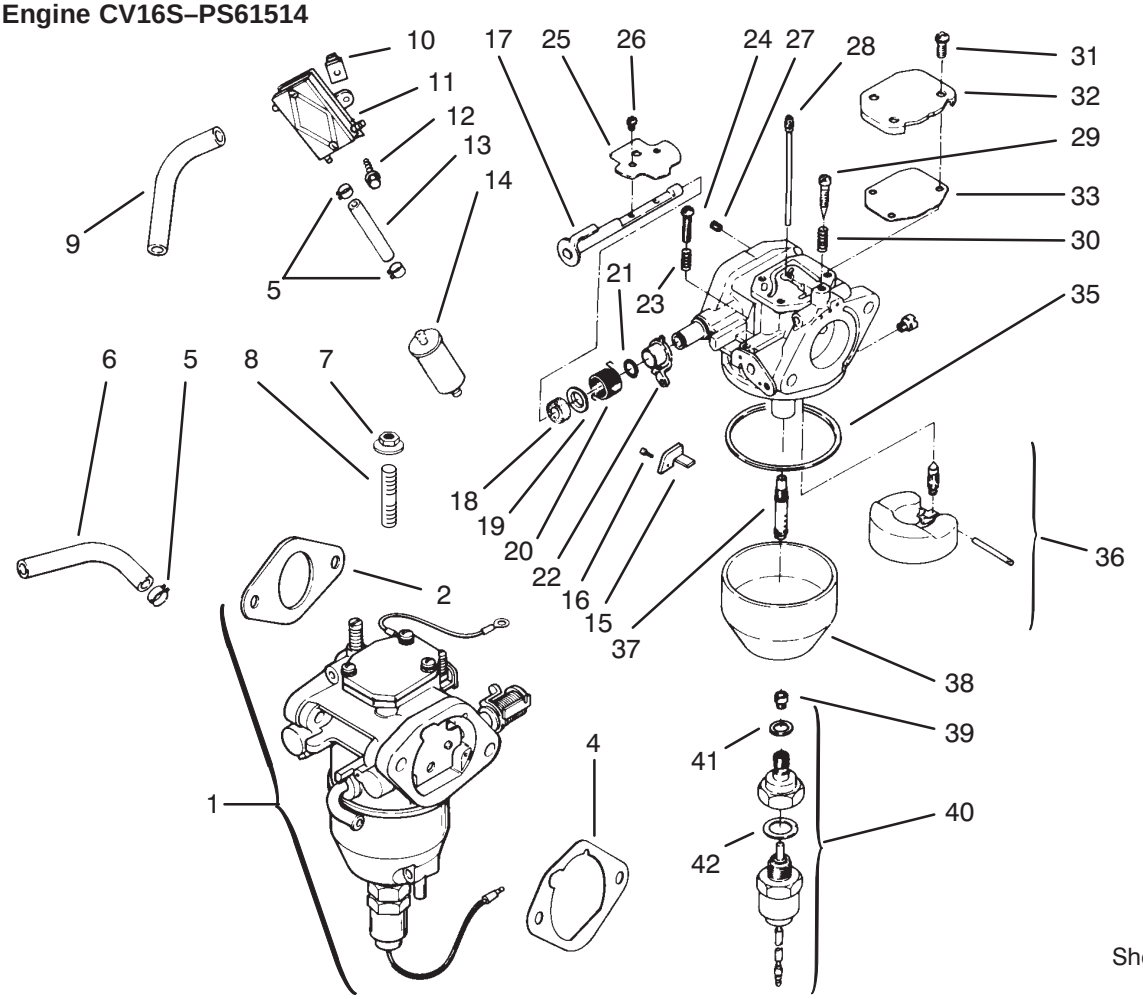


Sheet No.: 208
C–1966

Fuel System

Ref. No.	Part No.	Qty.	Description
1	24 853 24	1	Kit–Carb INCL 2/4/15–42 (Only On: 72103)
†2	24 041 15	1	Gasket–Carburetor (Only On: 72103)
†4	24 041 14	1	Gasket–A/C Base (Only On: 72103)
5	X–426–9	6	Clamp–Hose (Only On: 72103)
6	24 353 03	1	Line–Fuel 10 1/2” (Only On: 72103)
7	Sm–0641060	2	Nut M6x1.0 (Only On: 72103)
8	M–0629095	2	Stud M6x1.0x95 (Only On: 72103)
9	52 353 22	1	Line–Fuel 12” (Only On: 72103)
10	24 100 01	2	Nut–Plastic (Only On: 72103)
11	24 393 04	1	Pump–Fuel (Only On: 72103)
12	24 086 12	2	Screw–Cable Clip (Only On: 72103)
13	25 353 15	1	Line–Fuel 3 1/2” (Only On: 72103)
14	25 050 02	1	Filter–Fuel (Only On: 72103)
†15	24 126 29	1	Bracket–Throttle Stop (Only On: 72103)
†16	M–0259006	1	Screw M2.5x45x5.5 (Only On: 72103)
†17	24 144 15	1	Shaft–Choke (Only On: 72103)
†18	24 468 05	1	Washer (Only On: 72103)
†19	24 241 01	1	Collar–Choke (Only On: 72103)
†20	24 089 22	1	Spring–Choke Return (Only On: 72103)
†21	24 141 04	1	Ring–Choke Lever (Only On: 72103)
†22	24 090 10	1	Lever–Choke (Only On: 72103)
†23	24 089 24	1	Spring–Throttle Screw (Only On: 72103)
†24	24 086 19	1	Screw–Throttle Adjust (Only On: 72103)
†25	24 462 02	1	Valve–Choke (Only On: 72103)
†26	24 086 20	4	Screw–Throttle Shaft (Only On: 72103)
†27	24 337 27	1	Jet–Air Bleed (Only On: 72103)

† Included in a service kit or in an assembly

PROTOTYPE

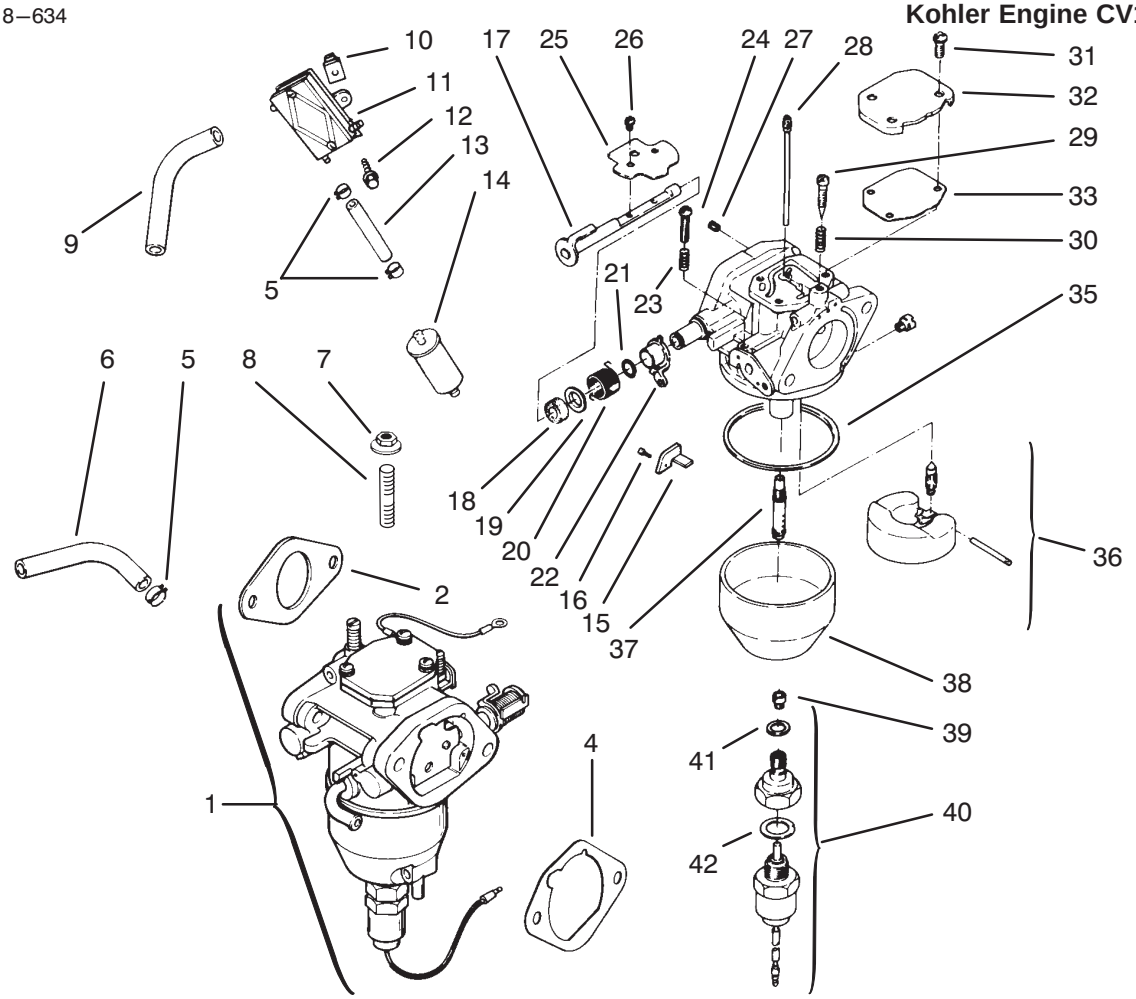


Sheet No.: 208
C–1966

Fuel System

Ref. No.	Part No.	Qty.	Description
†28	24 337 11	1	Jet–Slow (Only On: 72103)
†29	24 086 22	1	Screw–Idle Adjust (Only On: 72103)
†30	24 089 23	1	Spring–Idle Adjust Screw (Only On: 72103)
†31	24 086 21	3	Screw (Only On: 72103)
†32	24 096 13	1	Cover–Passage (Only On: 72103)
†33	24 041 18	1	Gasket–Passage Cover (Only On: 72103)
†35	24 041 19	1	Gasket–Float Chamber (Only On: 72103)
†36	24 757 05	1	Kit–Float Repair (Only On: 72103)
†37	24 369 01	1	Nozzle–Main (Only On: 72103)
†38	24 234 01	1	Chamber–Float (Only On: 72103)
†39	24 337 20	1	Jet–Main (Only On: 72103)
†40	24 755 15	1	Kit–Solenoid INCL 41–42 (Only On: 72103)
†41	24 041 21	1	Gasket–Chamber Screw (Only On: 72103)
†42	24 041 20	1	Gasket–Solenoid (Only On: 72103)
*	24 041 15	1	Gasket–Carburetor (Only On: 72103)
*	24 063 22	1	Baffle–Carburetor (Only On: 72103)
*	24 755 25	1	Kit–Hi Alt 1500–3000 M (Only On: 72103)
*	24 755 26	1	Kit–Hi Alt Over 3000 M (Only On: 72103)
*	24 757 06	1	Kit–Carburetor Repair (Only On: 72103)

PROTOTYPE

† Included in a service kit or in an assembly
* Not illustrated

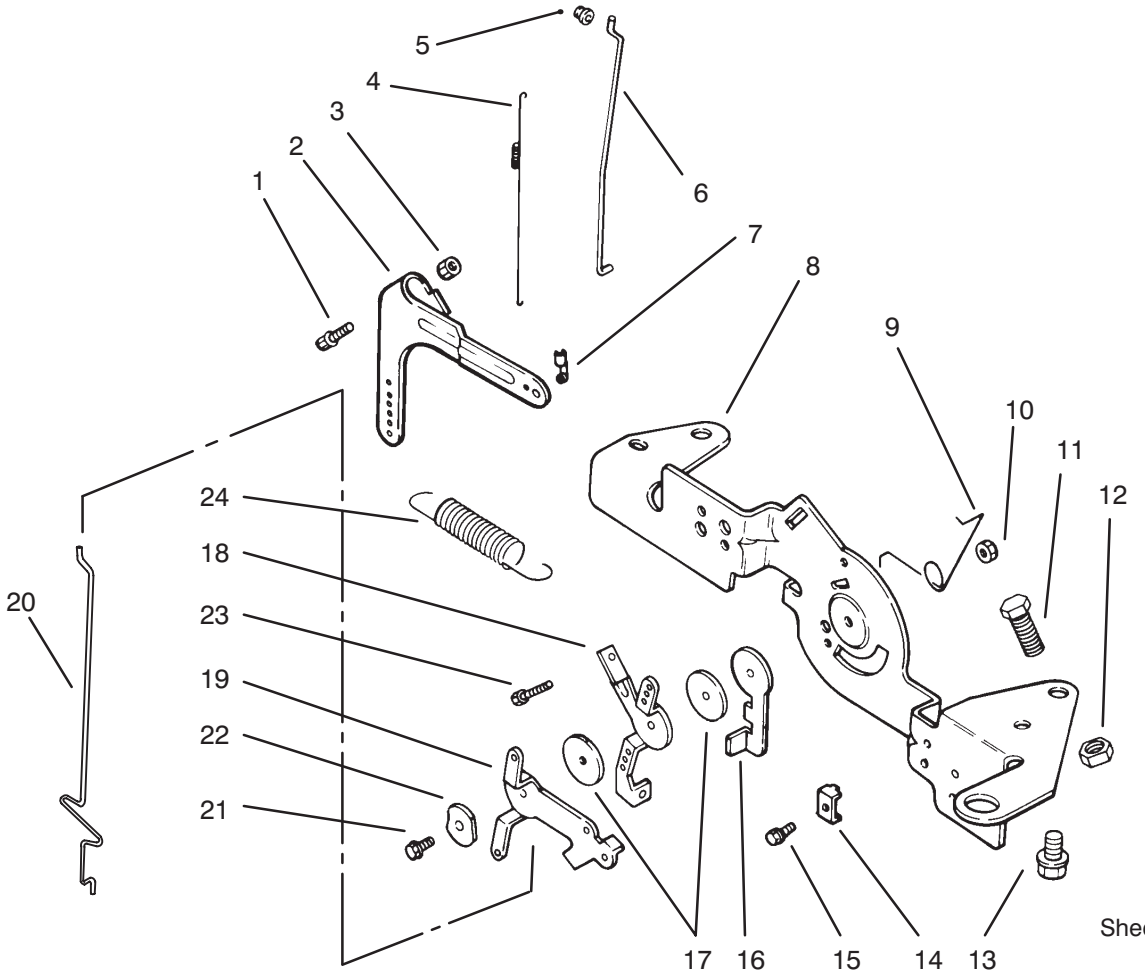


Sheet No.: 209
C–1967

Engine Controls

Ref. No.	Part No.	Qty.	Description
1	Sm–0642025	1	Screw M6x1.0x25 (Only On: 72103)
2	24 090 11	1	Lever–Governor (Only On: 72103)
3	Sm–0641060	1	Nut M6x1.0 (Only On: 72103)
4	24 089 01	1	Spring–Linkage (Only On: 72103)
5	25 158 08	1	Bushing–Linkage (Only On: 72103)
6	24 079 04	1	Linkage–Throttle (Only On: 72103)
7	25 158 11	1	Bushing–Linkage (Only On: 72103)
8	24 126 13	1	Bracket–Control (Only On: 72103)
9	24 089 03	1	Spring–Choke Return (Only On: 72103)
10	M–0547o50	1	Nut M5x0.8 (Only On: 72103)
11	Sm–0545016	1	Screw M5x0.8x16 (Only On: 72103)
12	M–0446030	1	Nut–Hex M4x0.7 (Only On: 72103)
13	Sm–0645016	4	Screw M6x1.0x16 (Only On: 72103)
14	12 237 01	2	Clamp–Cable (Only On: 72103)
15	Sm–0545016	2	Screw M5x0.8x16 (Only On: 72103)
16	24 090 07	1	Lever–Throttle Actuator (Only On: 72103)
17	24 468 01	3	Washer (Only On: 72103)
18	24 090 03	1	Lever–Throttle Control (Only On: 72103)
19	24 090 05	1	Lever–Choke (Only On: 72103)
20	24 079 05	1	Linkage–Choke (Only On: 72103)
21	M–0545020	1	Screw M5x0.8x20 (Only On: 72103)
22	41 468 03	1	Washer–Wave (Only On: 72103)
23	M–0401025	1	Screw M4x0.7x24 (Only On: 72103)
24	24 089 18	1	Spring–Governor (Only On: 72103)

PROTOTYPE

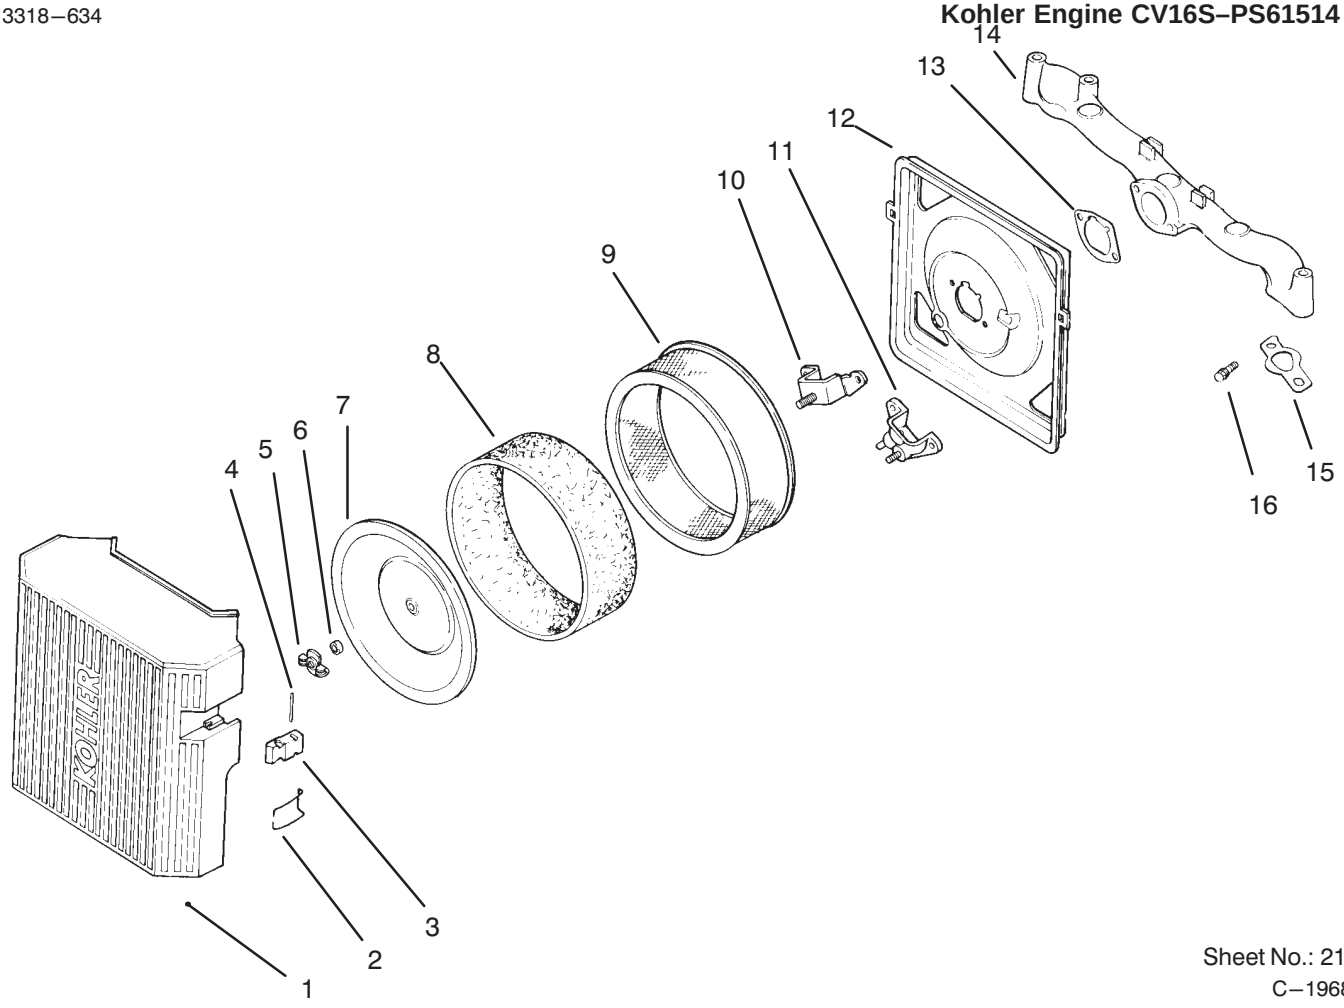


Sheet No.: 210
C–1968

Air Intake / Filtration

Ref. No.	Part No.	Qty.	Description
1	24 743 01	1	Kit–A/C Cover INCL 2–4 (Only On: 72103)
†2	24 089 04	2	Spring–Latch (Only On: 72103)
†3	24 344 01	2	Latch–Lever (Only On: 72103)
†4	24 380 03	2	Pin–Latch Lever (Only On: 72103)
5	12 100 01	1	Nut–Wing (Only On: 72103)
6	24 032 03	1	Seal–Air Intake (Only On: 72103)
7	24 096 01	1	Cover–Inner Air Cleaner (Only On: 72103)
8	24 083 02	1	Element–Precleaner (Only On: 72103)
9	47 083 03	1	Element–Air Cleaner (Only On: 72103)
10	24 109 01	1	Cup–Fuel Spitback (Only On: 72103)
11	24 041 13	1	Gasket–Fuel Spitback Cup (Only On: 72103)
12	24 094 02	1	Base–Air Cleaner (Only On: 72103)
13	24 041 14	1	Gasket–A/C Base (Only On: 72103)
14	24 164 06	1	Manifold–Intake (Only On: 72103)
15	24 041 01	2	Gasket–Intake Manifold (Only On: 72103)
16	M–0639055	4	Screw M6x1.0x18 (Only On: 72103)

PROTOTYPE

† Included in a service kit or in an assembly

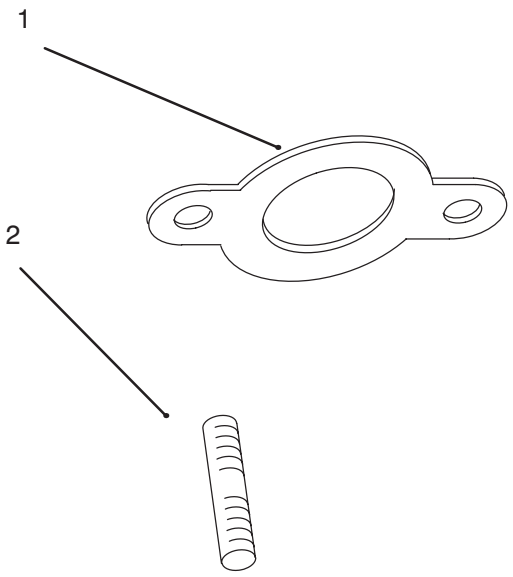


Sheet No.: 211
C–1969

Exhaust

Ref. No.	Part No.	Qty.	Description
1	24 041 02	2	Gasket–Exhaust (Only On: 72103)
2	M–0829033	4	Stud M8x1.25x20 (Only On: 72103)

PROTOTYPE

Peerless Transaxle 820–024

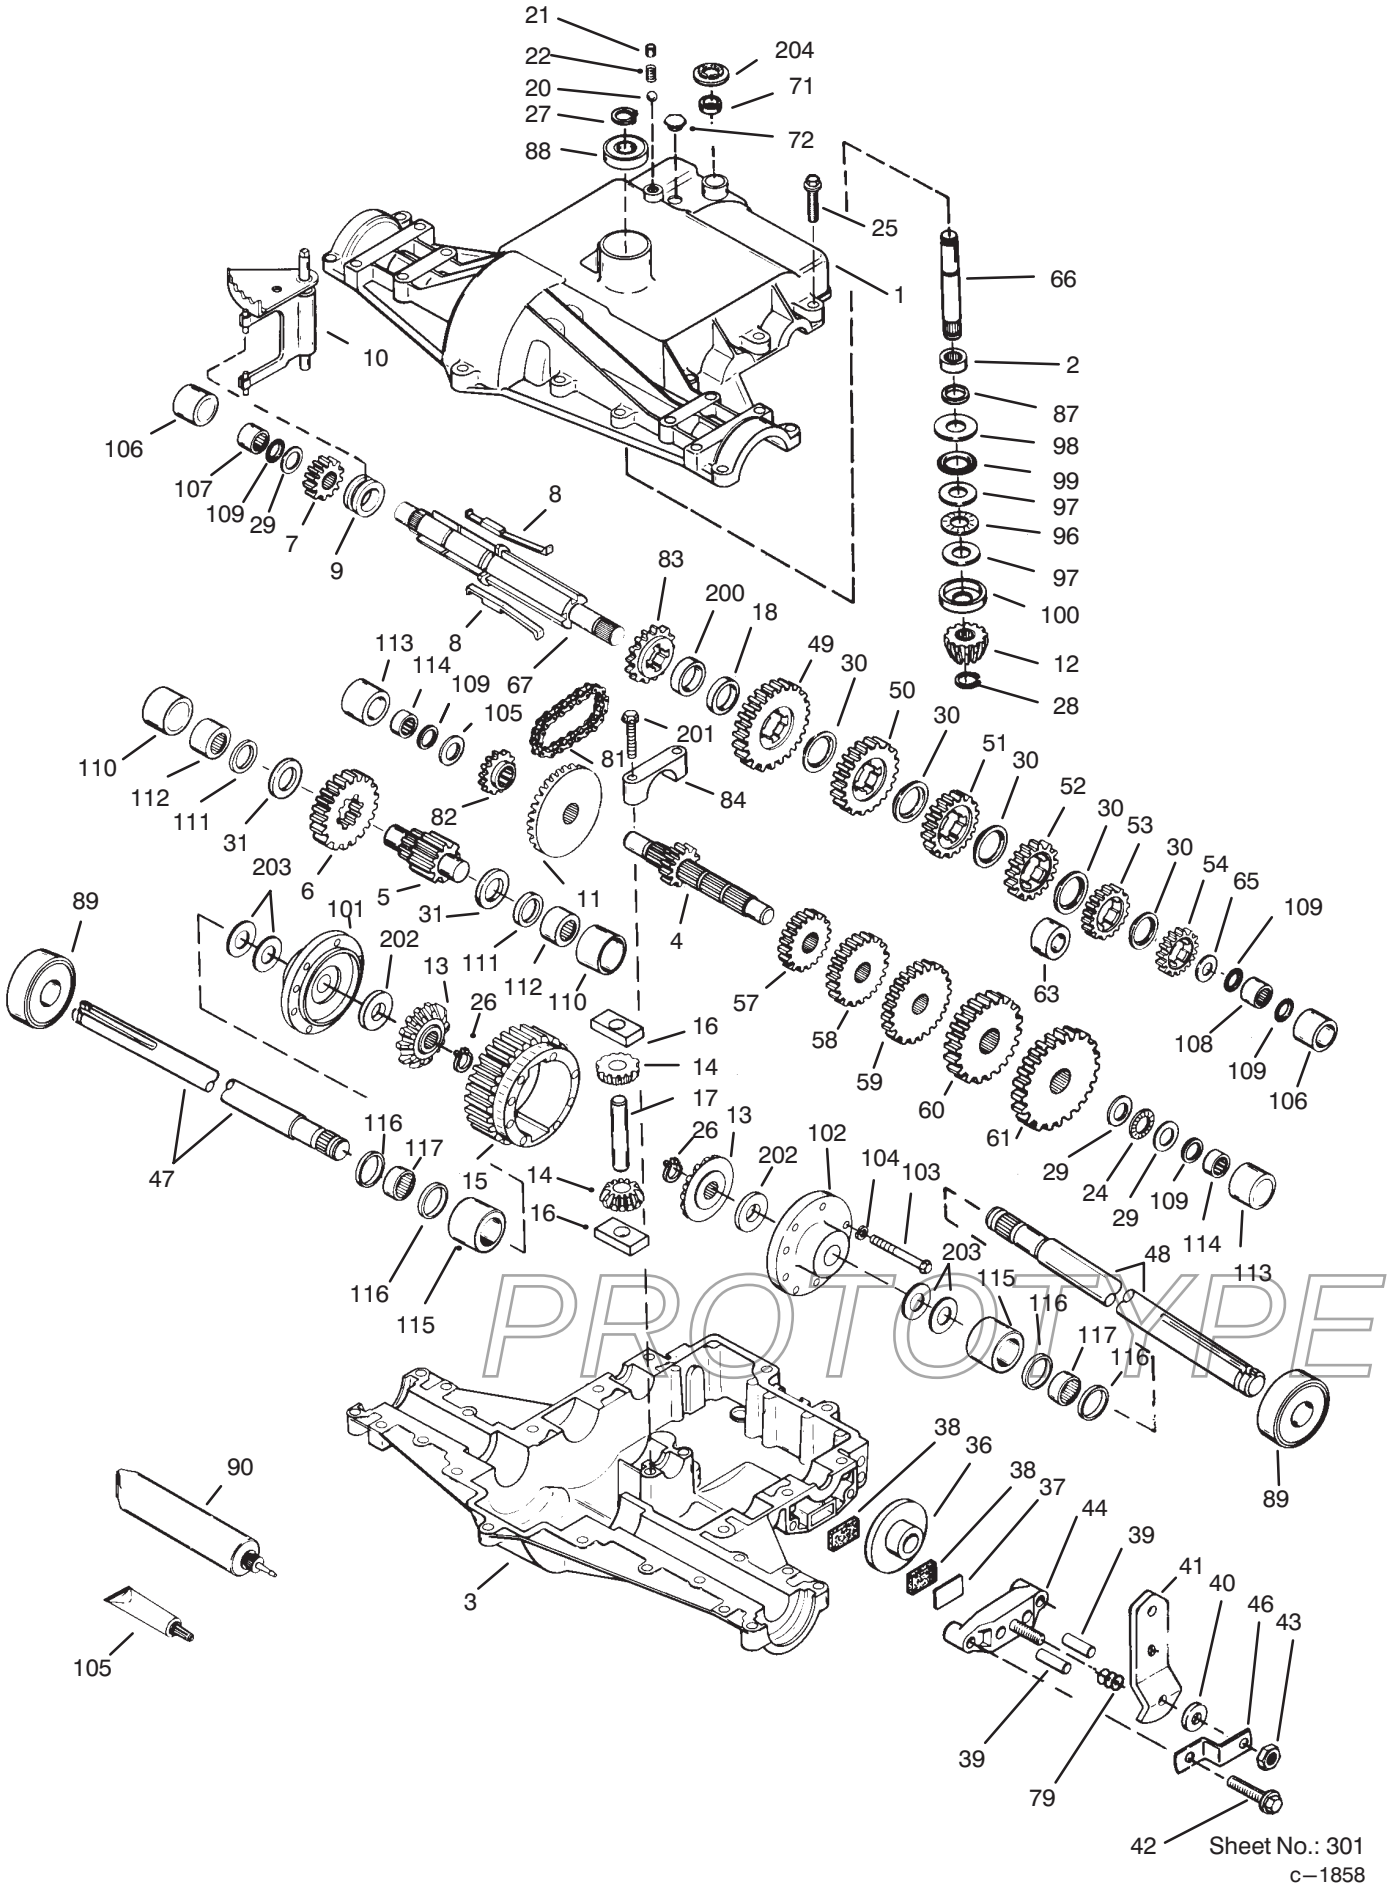


Peerless Transaxle 820—024

Ref. No.	Part No.	Qty.	Description
1	772098a	1	Cover—Transaxle (Only On: 72042, 72062)
2	780155	1	Bearing—Needle (Only On: 72042, 72062)
3	770088	1	Case—Transaxle (Only On: 72042, 72062)
4	776291	1	Countershaft—Gear 9t (Only On: 72042, 72062)
5	776275	1	Shaft—Output (Only On: 72042, 72062)
6	778247	1	Gear—Output 35t (Only On: 72042, 72062)
7	778253	1	Gear—Spur 15t (Only On: 72042, 72062)
8	792138	4	Key—Shift (Only On: 72042, 72062)
9	784216	1	Collar—Shift (Only On: 72042, 72062)
10	784342	1	Fork—Shift (Only On: 72042, 72062)
11	778246	1	Gear—Bevel 33t (Only On: 72042, 72062)
12	778245	1	Pinion—Input Bevel 13t (Only On: 72042, 72062)
13	778198	2	Gear—Bevel 16t (Only On: 72042, 72062)
14	778197	2	Pinion—Bevel 10t (Only On: 72042, 72062)
15	778248	1	Gear—Ring (Only On: 72042, 72062)
16	786027	2	Block—Drive (Only On: 72042, 72062)
17	786019	1	Pin—Drive (Only On: 72042, 72062)
18	786121	1	Spacer .350—.340 Thick (Only On: 72042, 72062)
20	792077	1	Ball—Steel (Only On: 72042, 72062)
21	792078	1	Screw—Set 3/8—16x3/8 (Only On: 72042, 72062)
22	792079	1	Spring (Only On: 72042, 72062)
24	780071	1	Bearing—Thrust (Only On: 72042, 72062)
25	792129	17	Screw 5/16—18x1 1/4 (Only On: 72042, 72062)
26	792018	2	Ring—Retaining (Only On: 72042, 72062)
27	792018	1	Ring—Retaining (Only On: 72042, 72062)
28	788040	1	Ring—Retaining (Only On: 72042, 72062)
29	780072	3	Washer (Only On: 72042, 72062)
30	780108	5	Washer (Only On: 72042, 72062)
31	780128	2	Washer (Only On: 72042, 72062)
36	790043	1	Disk—Brake (Only On: 72042, 72062)
37	790007	1	Plate—Brake Pad (Only On: 72042, 72062)
38	799021	1	Pad—Brake 2/Pkg (Only On: 72042, 72062)
39	786026	2	Pin—Dowel (Only On: 72042, 72062)
40	792076a	1	Washer (Only On: 72042, 72062)
41	790013	1	Lever—Brake (Only On: 72042, 72062)
42	792073	2	Screw 1/4—20x1 1/4 (Only On: 72042, 72062)
43	792075	1	Nut—Lock 5/16x24 (Only On: 72042, 72062)
44	790025	1	Holder—Brake Pad (Only On: 72042, 72062)
46	786086	1	Bracket—Brake Lever (Only On: 72042, 72062)
47	774958	1	Axle 12 9/16” Long (Only On: 72042, 72062)
48	774959	1	Axle 16 7/16” Long (Only On: 72042, 72062)
49	778216a	1	Gear—Spur 41t (Only On: 72042, 72062)
50	778206a	1	Gear—Spur 35t (Only On: 72042, 72062)
51	778205a	1	Gear—Spur 30t (Only On: 72042, 72062)
52	778204a	1	Gear Spur 25t (Only On: 72042, 72062)
53	778203a	1	Gear Spur 22t (Only On: 72042, 72062)
54	778273	1	Gear Spur 19t (Only On: 72042, 72062)
57	778199	1	Gear Spur 15t (Only On: 72042, 72062)
58	778200	1	Gear Spur 20t (Only On: 72042, 72062)
59	778201	1	Gear Spur 25t (Only On: 72042, 72062)
60	778202	1	Gear Spur 28t (Only On: 72042, 72062)
61	778222	1	Gear Spur 30t (Only On: 72042, 72062)
65	780109	1	Washer (Only On: 72042, 72062)
66	776293	1	Shaft—Input 30.910” Lg (Only On: 72042, 72062)
67	776313	1	Shaft—Shifter/Brake (Only On: 72042, 72062)
71	788069	1	Ring—Square Cut (Only On: 72042, 72062)
72	792074	1	Plug—Threaded 9/16—18 (Only On: 72042, 72062)
79	792144	1	Spring (Only On: 72042, 72062)
81	786062a	1	Chain—Roller #41 22” Lg (Only On: 72042, 72062)
82	786061	1	Sprocket 10t (Only On: 72042, 72062)

PROTOTYPE


Peerless Transaxle 820–024

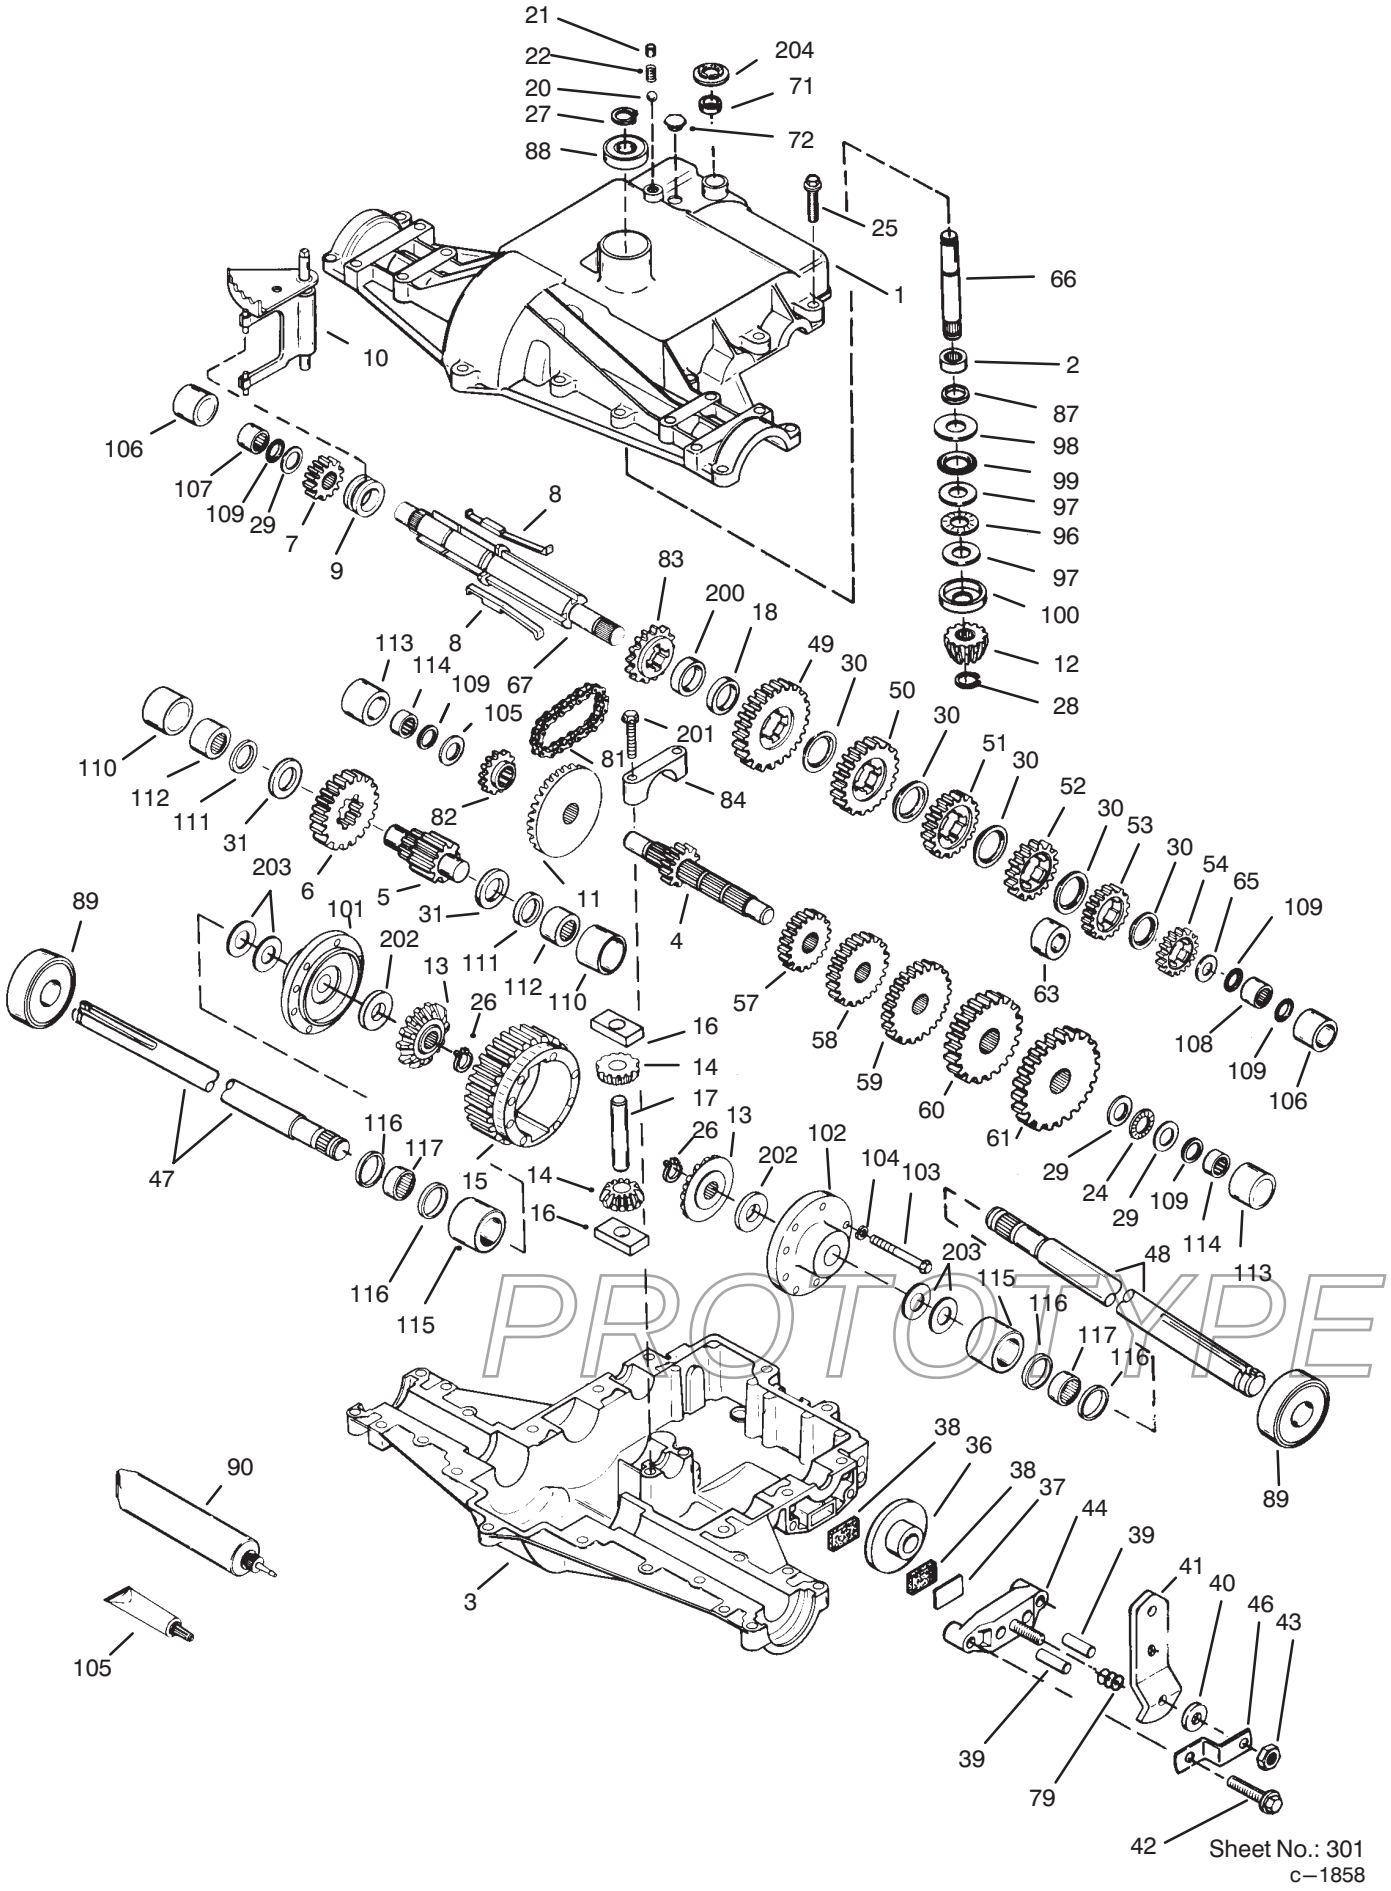

Peerless Transaxle 820—024

Ref. No.	Part No.	Qty.	Description
83	786124	1	Sprocket—Reverse 14t (Only On: 72042, 72062)
84	786131	1	Cap—Bearing (Only On: 72042, 72062)
87	788042	1	Seal—Oil 3/4” (Only On: 72042, 72062)
88	780119	1	Bearing—Ball (Only On: 72042, 72062)
89	780050	2	Bearing—Ball (Only On: 72042, 72062)
90	788067b	1	Grease 32 Oz Bentonite (Only On: 72042, 72062)
96	780084	1	Bearing—Thrust (Only On: 72042, 72062)
97	780051	2	Washer (Only On: 72042, 72062)
98	780165	1	Washer (Only On: 72042, 72062)
99	788077	1	O Ring (Only On: 72042, 72062)
100	780166	1	Washer—Cupped (Only On: 72042, 72062)
101	774833	1	Carrier—Differential (Only On: 72042, 72062)
102	774834	1	Carrier—Differential (Only On: 72042, 72062)
103	792020	8	Screw 14—20x2 1/4 (Only On: 72042, 72062)
104	792006	8	Washer—Lock (Only On: 72042, 72062)
105	780153	1	Washer (Only On: 72042, 72062)
106	786144	1	Sleeve (Only On: 72042, 72062)
107	780152	1	Bearing—Needle (Only On: 72042, 72062)
108	780150	1	Bearing—Needle (Only On: 72042, 72062)
109	792001	5	O Ring (Only On: 72042, 72062)
110	786142	2	Sleeve (Only On: 72042, 72062)
111	788071	2	Ring—Square Cut (Only On: 72042, 72062)
112	780168	2	Bearing—Needle (Only On: 72042, 72062)
113	786143	2	Sleeve (Only On: 72042, 72062)
114	780151	2	Bearing—Needle (Only On: 72042, 72062)
115	786145	2	Sleeve (Only On: 72042, 72062)
116	788070	4	Ring—Square Cut (Only On: 72042, 72062)
117	780031	2	Bearing—Needle (Only On: 72042, 72062)
150	510334	1	Gasket Loctite #515 (Only On: 72042, 72062)
200	786122	1	Spacer .276—.268 Thick (Only On: 72042, 72062)
201	792073	2	Screw 1/4—20x1 1/4 (Only On: 72042, 72062)
202	780107	2	Washer (Only On: 72042, 72062)
203	780042	4	Washer (Only On: 72042, 72062)
204	792145	1	Nut—Push (Only On: 72042, 72062)

PROTOTYPE

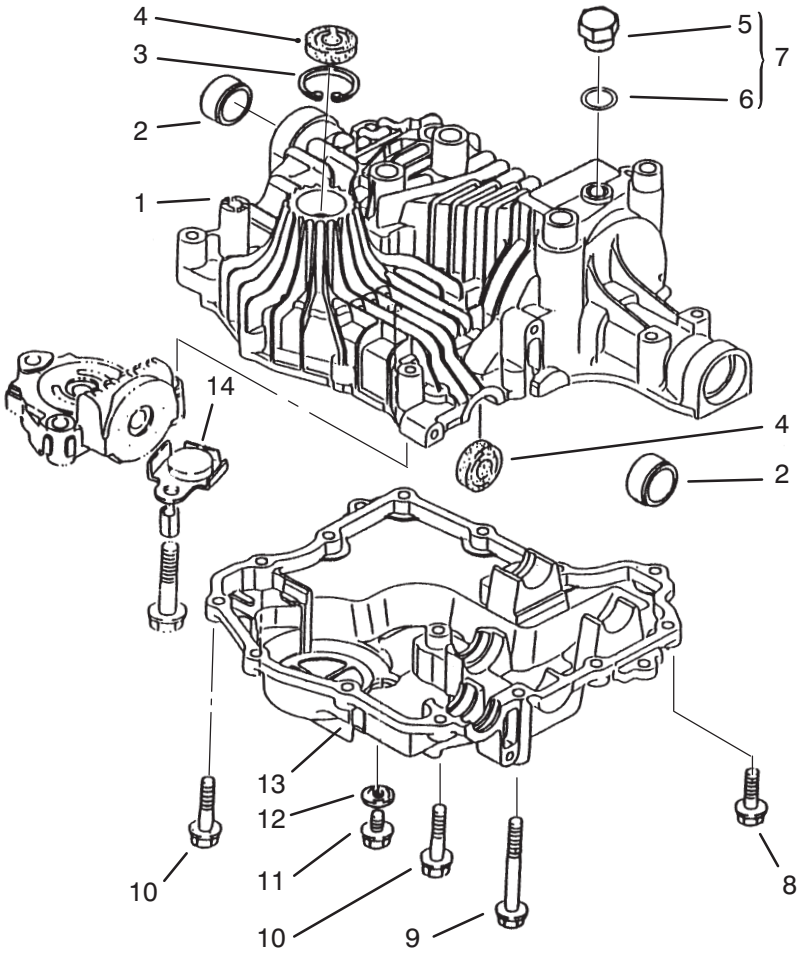


Sheet No.: 401
c−1860

Transaxle Case

Ref. No.	Part No.	Qty.	Description
1	93−0351	1	Upper Case ASM INCL 2−6 (Only On: 72043, 72063, 72103)
†2		2	Bushing (Only On: 72043, 72063, 72103)
†3	93−0360	1	Ring (Only On: 72043, 72063, 72103)
†4	93−0361	2	Seal (Only On: 72043, 72063, 72103)
†5		1	Plug (Only On: 72043, 72063, 72103)
†6		1	Packing (Only On: 72043, 72063, 72103)
7	93−0356	1	Plug/Packing INCL 5−6 (Only On: 72043, 72063, 72103)
8	93−0363	11	Screw−TAP (Only On: 72043, 72063, 72103)
9	93−0354	1	Bolt (Only On: 72043, 72063, 72103)
10	93−0364	2	Screw−TAP (Only On: 72043, 72063, 72103)
11	93−0362	1	Bolt (Only On: 72043, 72063, 72103)
13	93−0353	1	Case−Lower (Only On: 72043, 72063, 72103)
14	93−0355	1	Magnet (Only On: 72043, 72063, 72103)

PROTOTYPE

† Included in a service kit or in an assembly

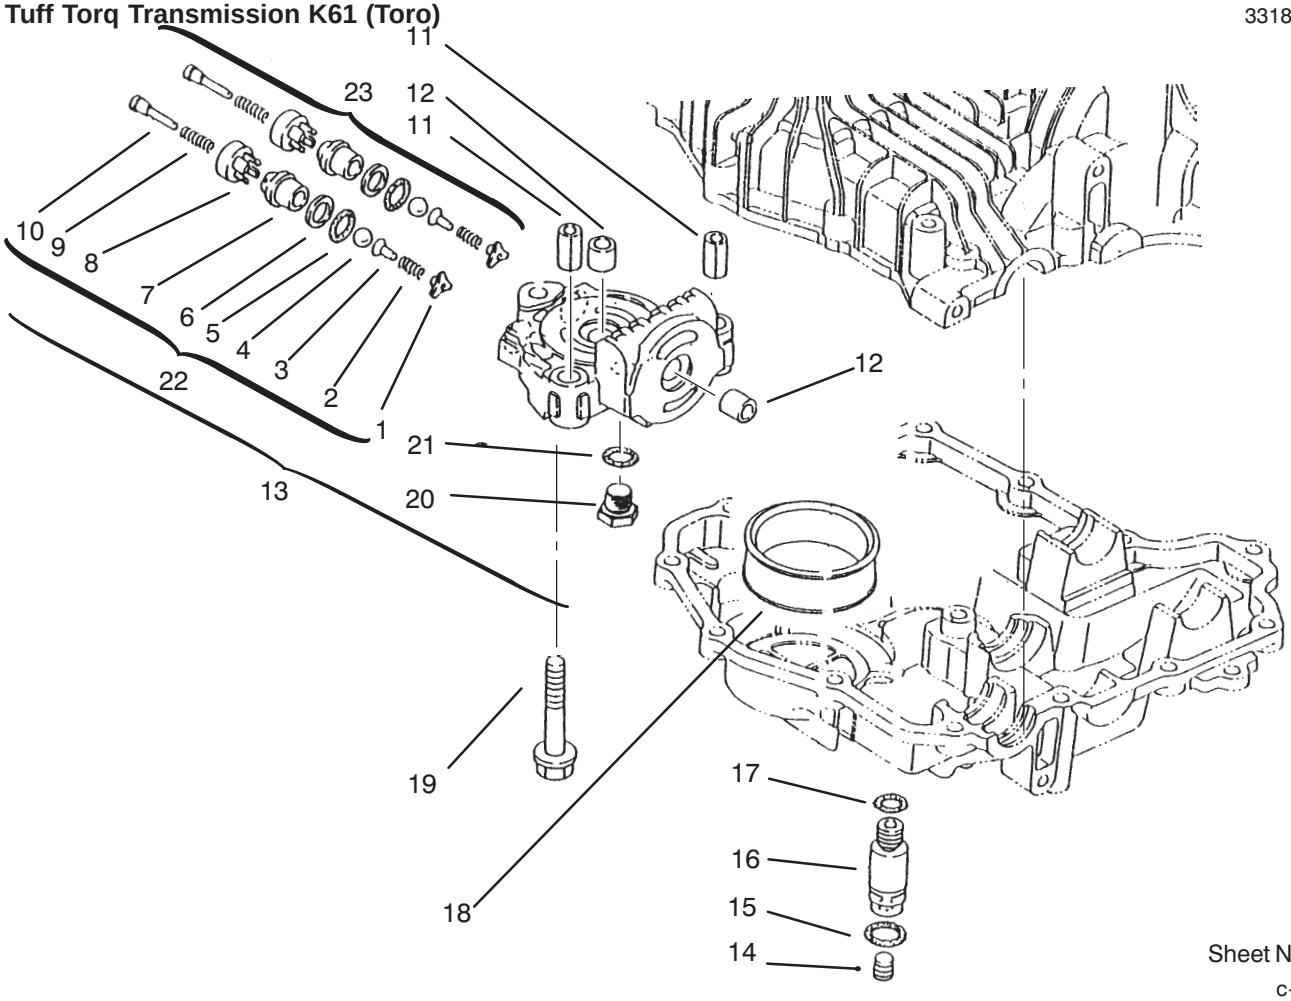


Sheet No.: 402
c−1877

Center Case

Ref. No.	Part No.	Qty.	Description
†1	93−0461	2	Holder−Bypass (Only On: 72043, 72063, 72103)
†2		2	Spring (Only On: 72043, 72063, 72103)
†3		2	Holder−Ball (Only On: 72043, 72063, 72103)
†4		1	Ball (Only On: 72043, 72063, 72103)
†5	93−0465	2	Packing (Only On: 72043, 72063, 72103)
†6	93−0466	2	Ring−Back Up (Only On: 72043, 72063, 72103)
†7		1	Sleeve A1 (Only On: 72043, 72063, 72103)
†8		2	Valve B (Only On: 72043, 72063, 72103)
†9		2	Spring (Only On: 72043, 72063, 72103)
†10		2	Pin−Push (Only On: 72043, 72063, 72103)
†11	93−0471	2	Pin−Knock (Only On: 72043, 72063, 72103)
†12	93−0472	2	Bushing (Only On: 72043, 72063, 72103)
13	93−0484	1	Case INCL 11−12 & 20−23 (Only On: 72043, 72063, 72103)
14	93−0474	1	Plug (Only On: 72043, 72063, 72103)
15	93−0475	1	Packing (Only On: 72043, 72063, 72103)
16	93−0476	1	Connector (Only On: 72043, 72063, 72103)
17	93−0481	1	Packing (Only On: 72043, 72063, 72103)
18	93−0478	1	Filter (Only On: 72043, 72063, 72103)
19	93−0479	3	Bolt (Only On: 72043, 72063, 72103)
20	93−0480	1	Plug (Only On: 72043, 72063, 72103)
21	93−0481	1	Packing (Only On: 72043, 72063, 72103)
22	93−0482	1	Valve ASM A1 INCL 1−10 (Only On: 72043, 72063, 72103)
23	93−0483	1	Valve ASM A2 (Only On: 72043, 72063, 72103)

PROTOTYPE

† Included in a service kit or in an assembly

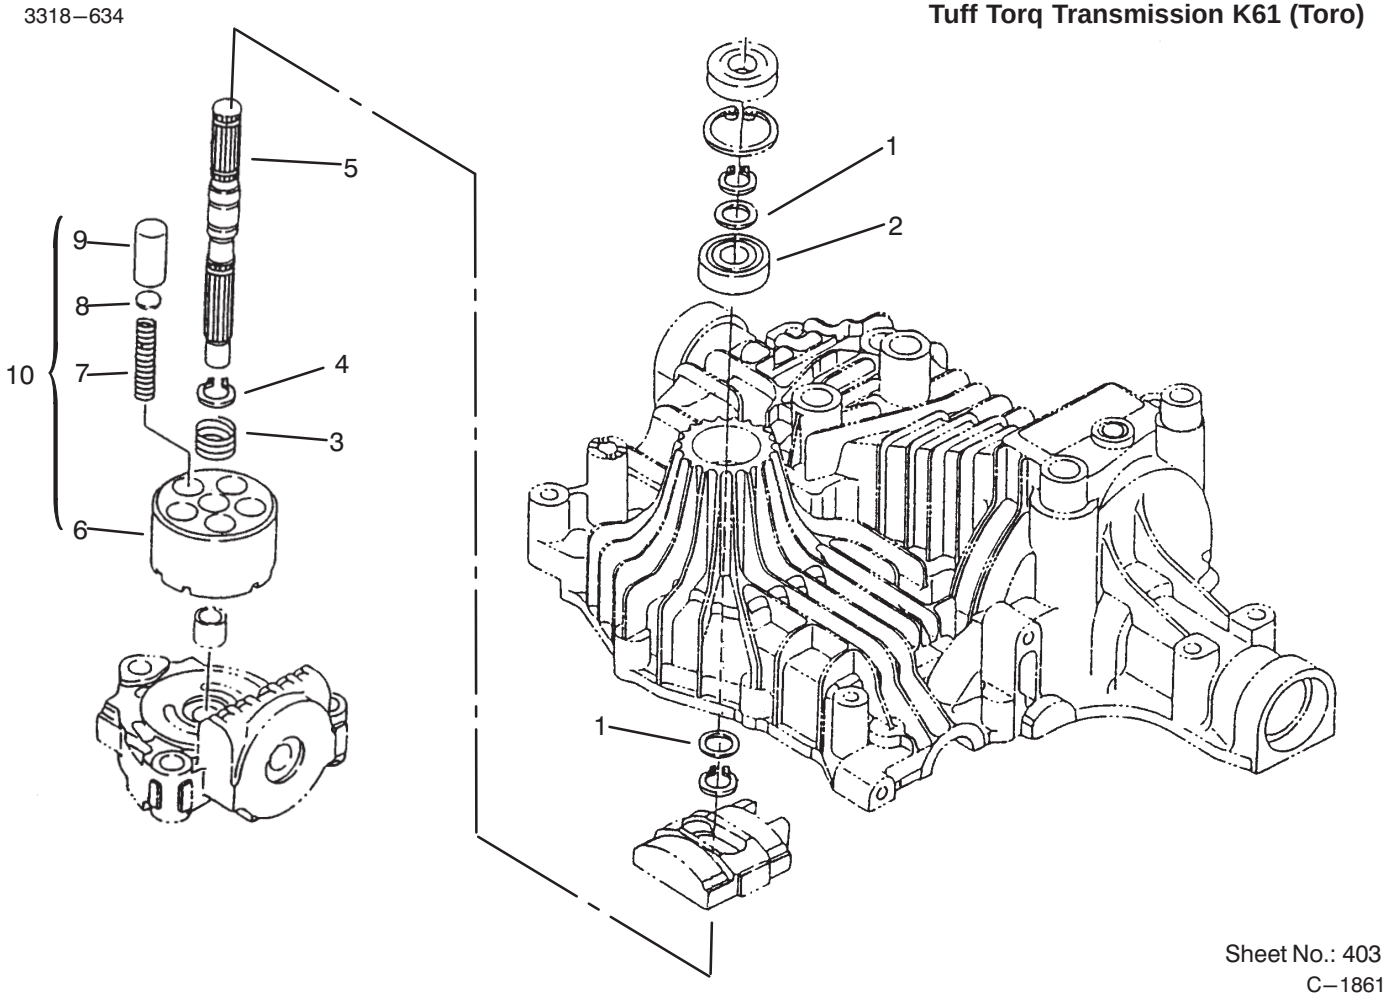

Sheet No.: 403
C–1861


Pump Shaft

Ref. No.	Part No.	Qty.	Description
1	93–0371	2	Washer (Only On: 72043, 72063, 72103)
2	93–0374	1	Bearing–Ball (Only On: 72043, 72063, 72103)
3	93–0370	1	Spring (Only On: 72043, 72063, 72103)
4	93–0373	3	Ring–Snap (Only On: 72043, 72063, 72103)
5	93–0372	1	Shaft–Pump (Only On: 72043, 72063, 72103)
†6		1	Block–Cylinder (Only On: 72043, 72063, 72103)
†7		5	Spring (Only On: 72043, 72063, 72103)
†8		5	Washer (Only On: 72043, 72063, 72103)
†9		5	Piston (Only On: 72043, 72063, 72103)
10	93–0365	1	Cylinder ASM INCL 6–9 (Only On: 72043, 72063, 72103)

PROTOTYPE

† Included in a service kit or in an assembly

3318–634

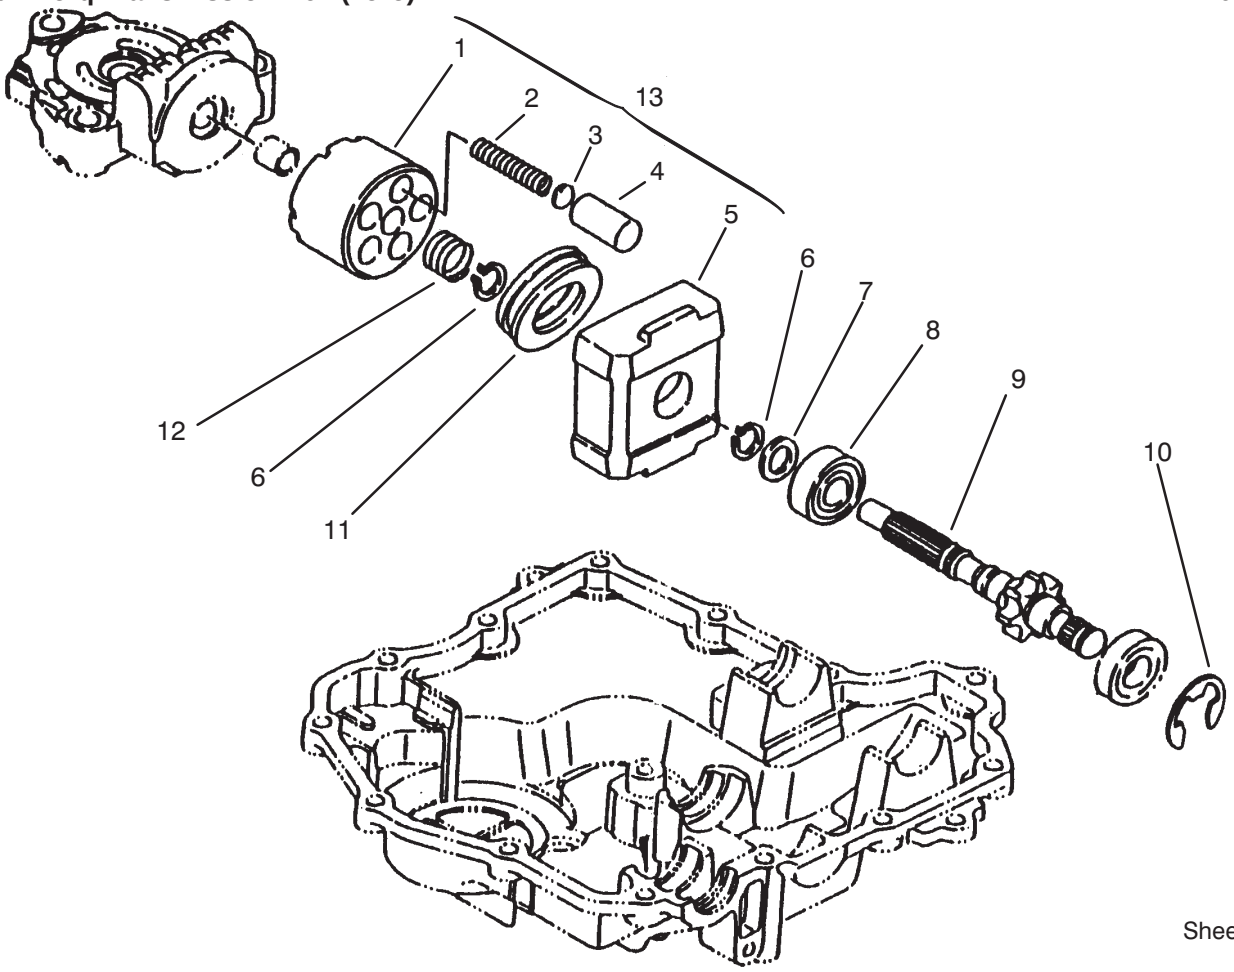


Sheet No.: 404

c–1862

Motor Shaft

Ref. No.	Part No.	Qty.	Description
1		1	Block–Cylinder (Only On: 72043, 72063, 72103)
2		1	Spring (Only On: 72043, 72063, 72103)
3		5	Washer (Only On: 72043, 72063, 72103)
4		5	Piston (Only On: 72043, 72063, 72103)
5	93–0375	1	Housing (Only On: 72043, 72063, 72103)
6	93–0373	2	Ring–Snap (Only On: 72043, 72063, 72103)
7	93–0371	1	Washer (Only On: 72043, 72063, 72103)
8	93–0374	1	Bearing–Ball (Only On: 72043, 72063, 72103)
9	93–0386	1	Shaft–Motor (Only On: 72043, 72063, 72103)
10	93–0387	1	E Ring (Only On: 72043, 72063, 72103)
11	93–0376	1	Bearing–Thrust (Only On: 72043, 72063, 72103)
12		1	Spring (Only On: 72043, 72063, 72103)
13	93–0365	1	Cylinder ASM INCL 1–4 (Only On: 72043, 72063, 72103)

PROTOTYPE

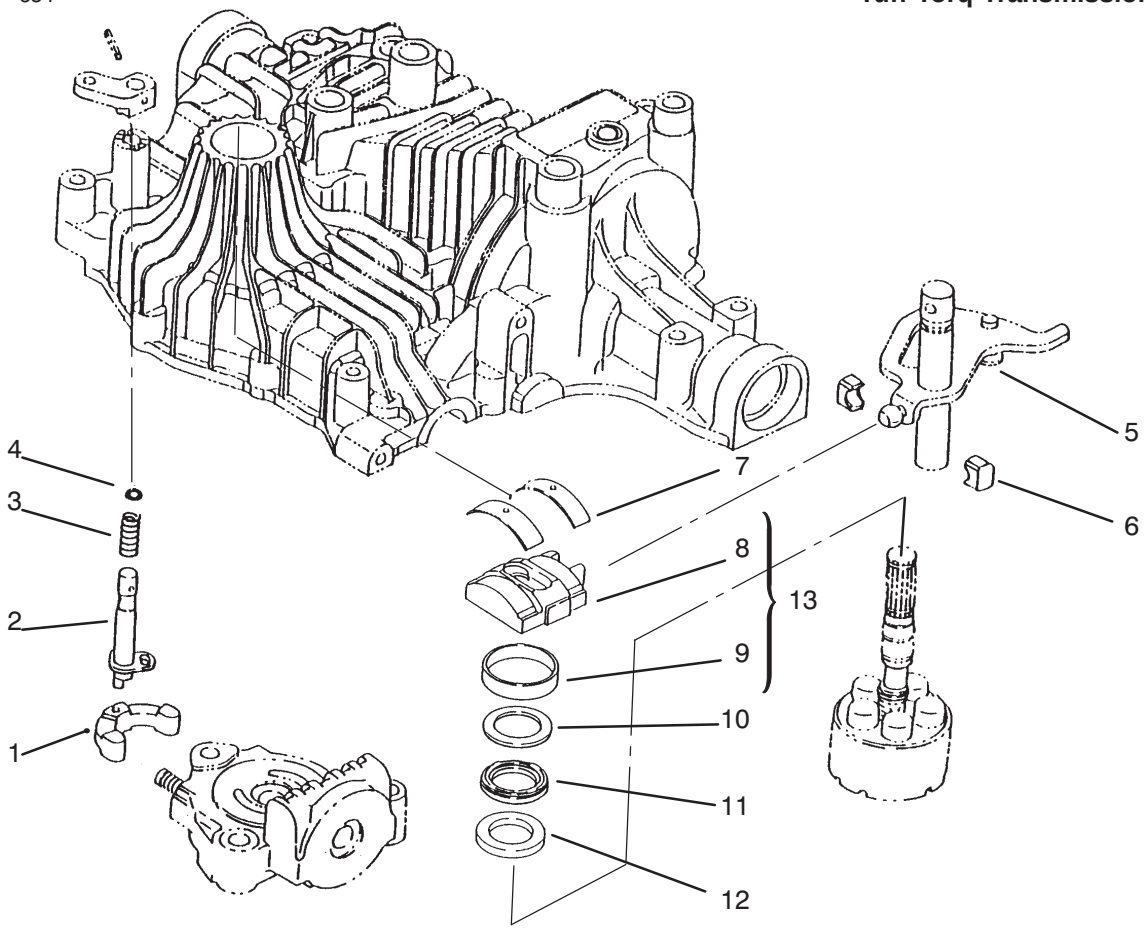


Sheet No.: 405
c−1863

Range Shift

Ref. No.	Part No.	Qty.	Description
1	93−0395	1	Arm (Only On: 72043, 72063, 72103)
2	93−0397	1	Shaft−Bypass (Only On: 72043, 72063, 72103)
3	93−0396	1	Spring (Only On: 72043, 72063, 72103)
4	93−0400	1	Packing (Only On: 72043, 72063, 72103)
5	93−0398	1	Block Set INCL 6 (Only On: 72043, 72063, 72103)
†6		1	Block−Shift (Only On: 72043, 72063, 72103)
7	93−0388	2	Thrust Metal (Only On: 72043, 72063, 72103)
†8		1	Plate−Swash (Only On: 72043, 72063, 72103)
†9		1	Bushing−Swashplate (Only On: 72043, 72063, 72103)
10	93−0394	1	Plate−Thrust (Only On: 72043, 72063, 72103)
11	93−0392	1	Bearing (Only On: 72043, 72063, 72103)
12	93−0393	1	Plate−Thrust (Only On: 72043, 72063, 72103)
13	93−0389	1	Swash Plate INCL 8−9 (Only On: 72043, 72063, 72103)

PROTOTYPE

† Included in a service kit or in an assembly

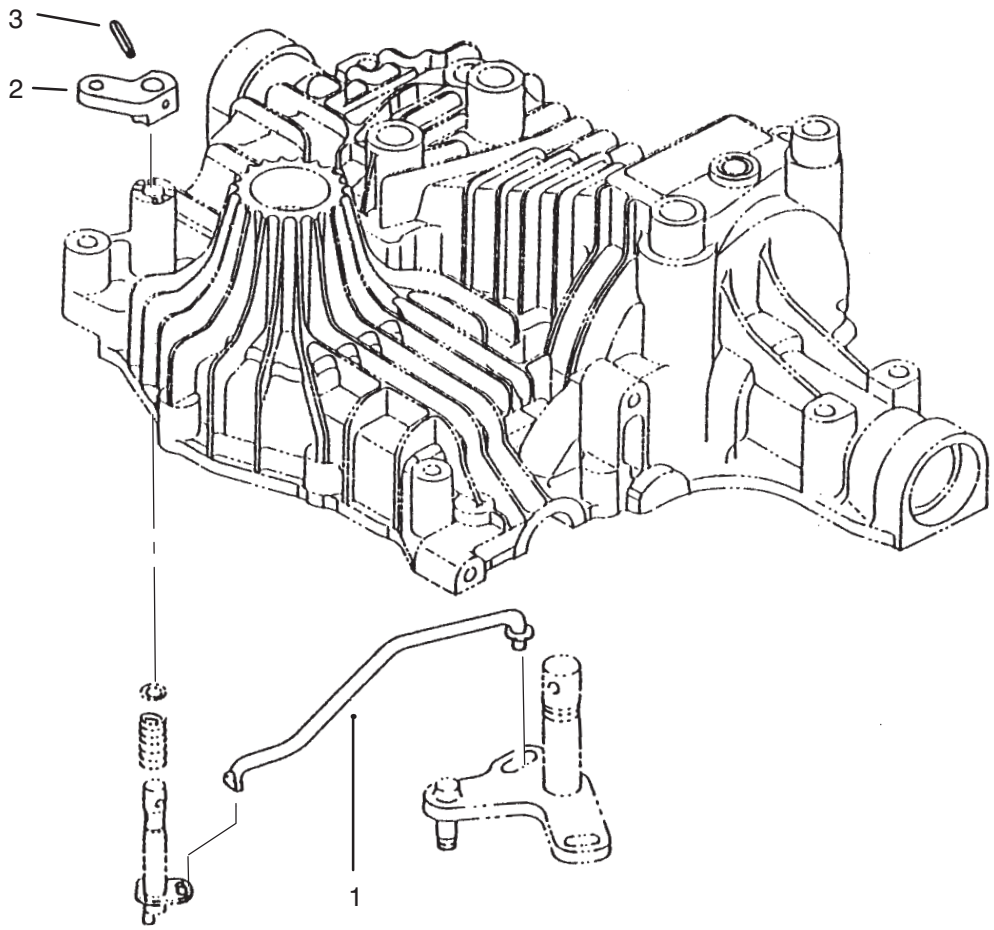


Sheet No.: 406
c−1864

Bypass Return

Ref. No.	Part No.	Qty.	Description
1	93−0401	1	Rod−Bypass (Only On: 72043, 72063, 72103)
2	93−0402	1	Arm−Valve Release (Only On: 72043, 72063, 72103)
3	93−0403	1	Pin−Roll (Only On: 72043, 72063, 72103)

PROTOTYPE

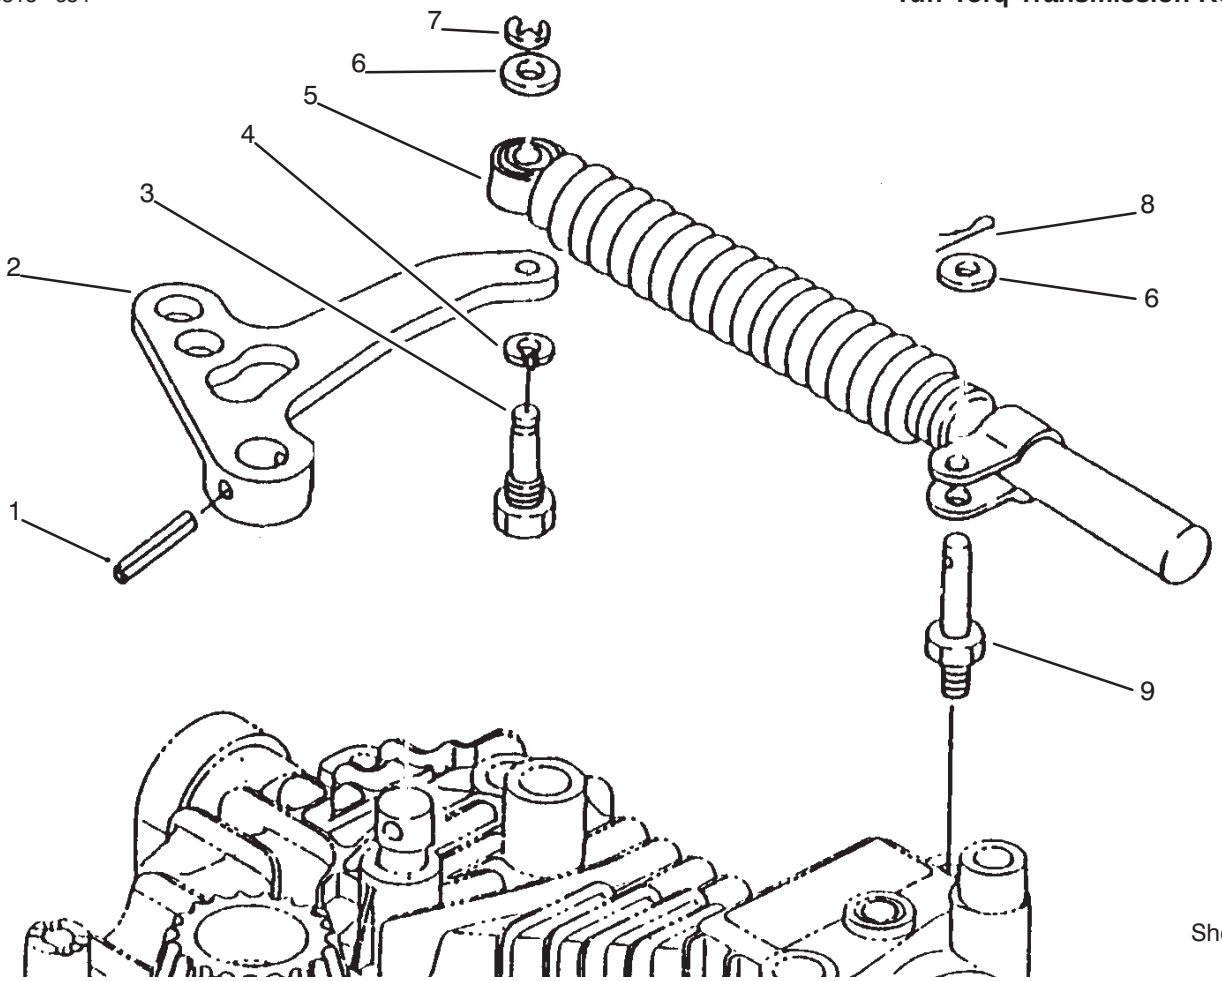


Sheet No.: 407
C−1865

Lever Damper

Ref. No.	Part No.	Qty.	Description
1	93−0411	1	Pin−Roll (Only On: 72043, 72063, 72103)
2	93−0404	1	Arm (Only On: 72043, 72063, 72103)
3	93−0407	1	Bolt (Only On: 72043, 72063, 72103)
4	93−0409	1	Washer (Only On: 72043, 72063, 72103)
5	93−0405	1	Shock Absorber (Only On: 72043, 72063, 72103)
6	93−0408	2	Washer (Only On: 72043, 72063, 72103)
7	93−0410	1	Ring (Only On: 72043, 72063, 72103)
8	93−0412	1	Pin−Cotter (Only On: 72043, 72063, 72103)
9	93−0406	1	Stud (Only On: 72043, 72063, 72103)

PROTOTYPE

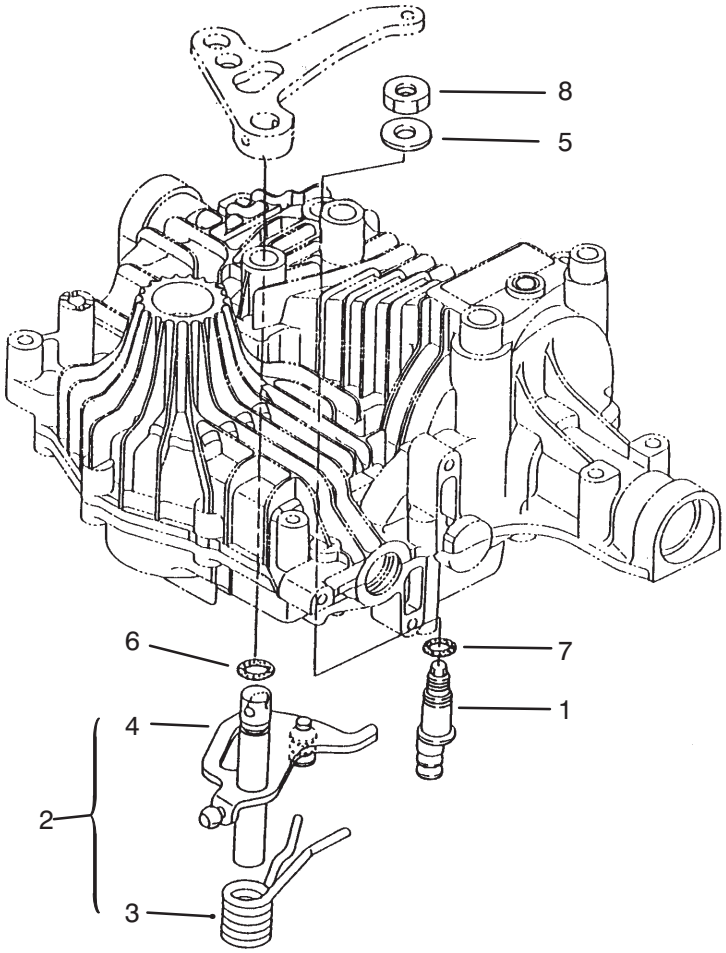


Sheet No.: 408
C−1866

N-Centering

Ref. No.	Part No.	Qty.	Description
1	93−0413	1	Fulcrum (Only On: 72043, 72063, 72103)
2	93−0414	1	Shaft ASM INCL 3−4 (Only On: 72043, 72063, 72103)
†3		1	Spring (Only On: 72043, 72063, 72103)
†4		1	Shaft−Control (Only On: 72043, 72063, 72103)
5	93−0417	1	Washer (Only On: 72043, 72063, 72103)
6	93−0418	1	Packing (Only On: 72043, 72063, 72103)
7	93−0419	1	Packing (Only On: 72043, 72063, 72103)
8	93−0420	1	Nut (Only On: 72043, 72063, 72103)

PROTOTYPE

† Included in a service kit or in an assembly

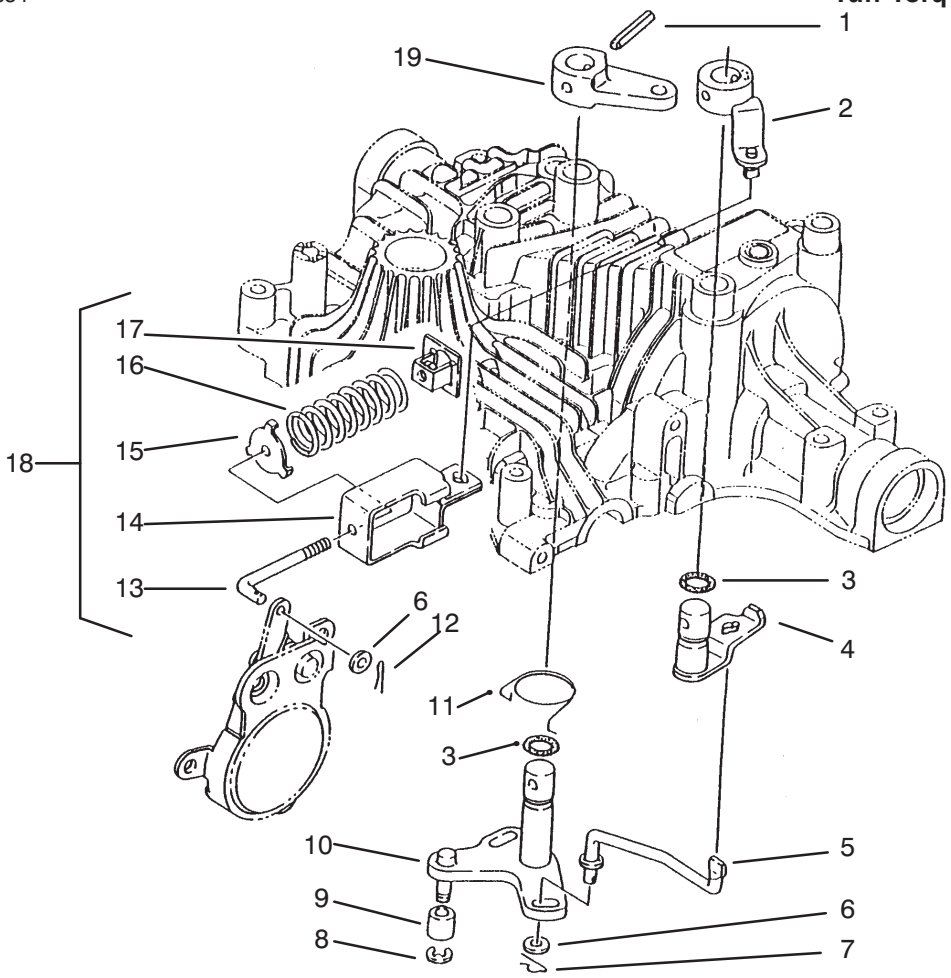

Sheet No.: 409


C−1867

Brake Interlock

Ref. No.	Part No.	Qty.	Description
1	93−0411	2	Pin−Roll (Only On: 72043, 72063, 72103)
2	93−0433	1	Arm−Brake B (Only On: 72043, 72063, 72103)
3	93−0418	2	Packing (Only On: 72043, 72063, 72103)
4	93−0432	1	Arm−Brake A (Only On: 72043, 72063, 72103)
5	93−0431	1	Rod−Brake (Only On: 72043, 72063, 72103)
6	93−0435	2	Washer (Only On: 72043, 72063, 72103)
7	93−0434	1	Pin−Snap (Only On: 72043, 72063, 72103)
8	93−0410	1	Ring (Only On: 72043, 72063, 72103)
9	93−0421	1	Bushing (Only On: 72043, 72063, 72103)
10	93−0430	1	Shaft−Brake (Only On: 72043, 72063, 72103)
11	93−0422	1	Return−Brake (Only On: 72043, 72063, 72103)
12	93−0412	1	Pin−Cotter (Only On: 72043, 72063, 72103)
†13	93−0428	1	Rod−Adjuster (Only On: 72043, 72063, 72103)
†14	93−0426	1	Holder−Spring (Only On: 72043, 72063, 72103)
†15	93−0425	1	Guide−Spring (Only On: 72043, 72063, 72103)
†16	93−0427	1	Spring (Only On: 72043, 72063, 72103)
†17	93−0424	1	Adjuster (Only On: 72043, 72063, 72103)
18	93−0423	1	Rod ASM INCL 13−17 (Only On: 72043, 72063, 72103)
19	93−0429	1	Arm−Brake (Only On: 72043, 72063, 72103)

PROTOTYPE

† Included in a service kit or in an assembly

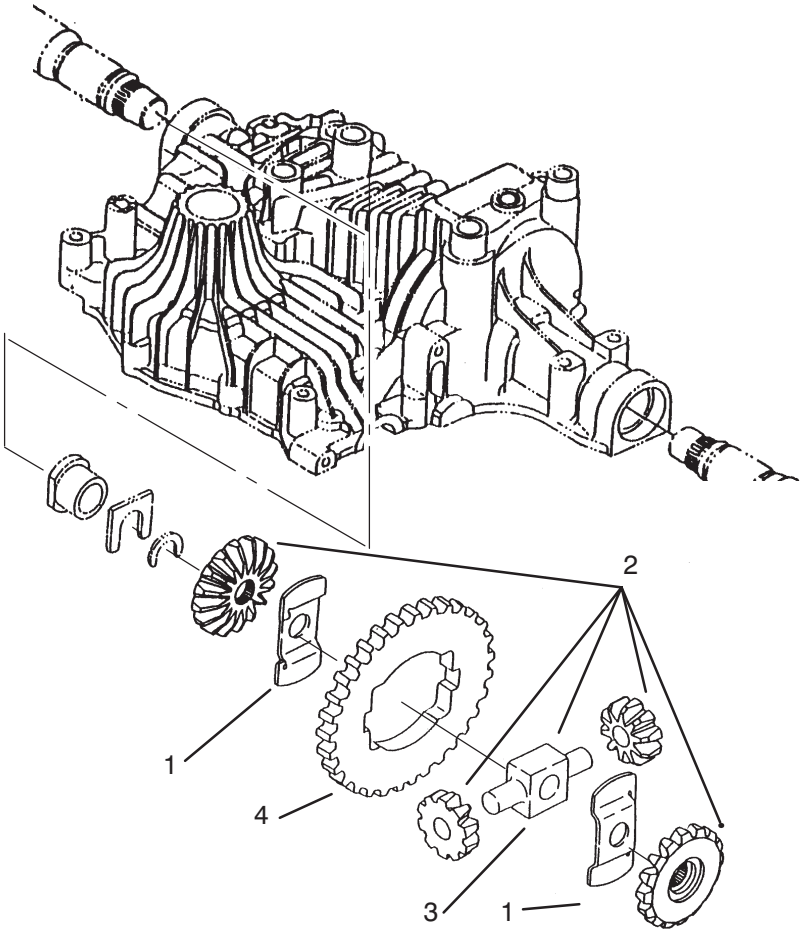


Sheet No.: 410
c−1868

Differential Gear

Ref. No.	Part No.	Qty.	Description
1	93−0444	2	Washer−Thrust (Only On: 72043, 72063, 72103)
2	93−0440	1	Differential Gear ASM (Only On: 72043, 72063, 72103)
3	93−0443	1	Shaft−Pinion (Only On: 72043, 72063, 72103)
4	93−0445	1	Gear−Final (Only On: 72043, 72063, 72103)

PROTOTYPE

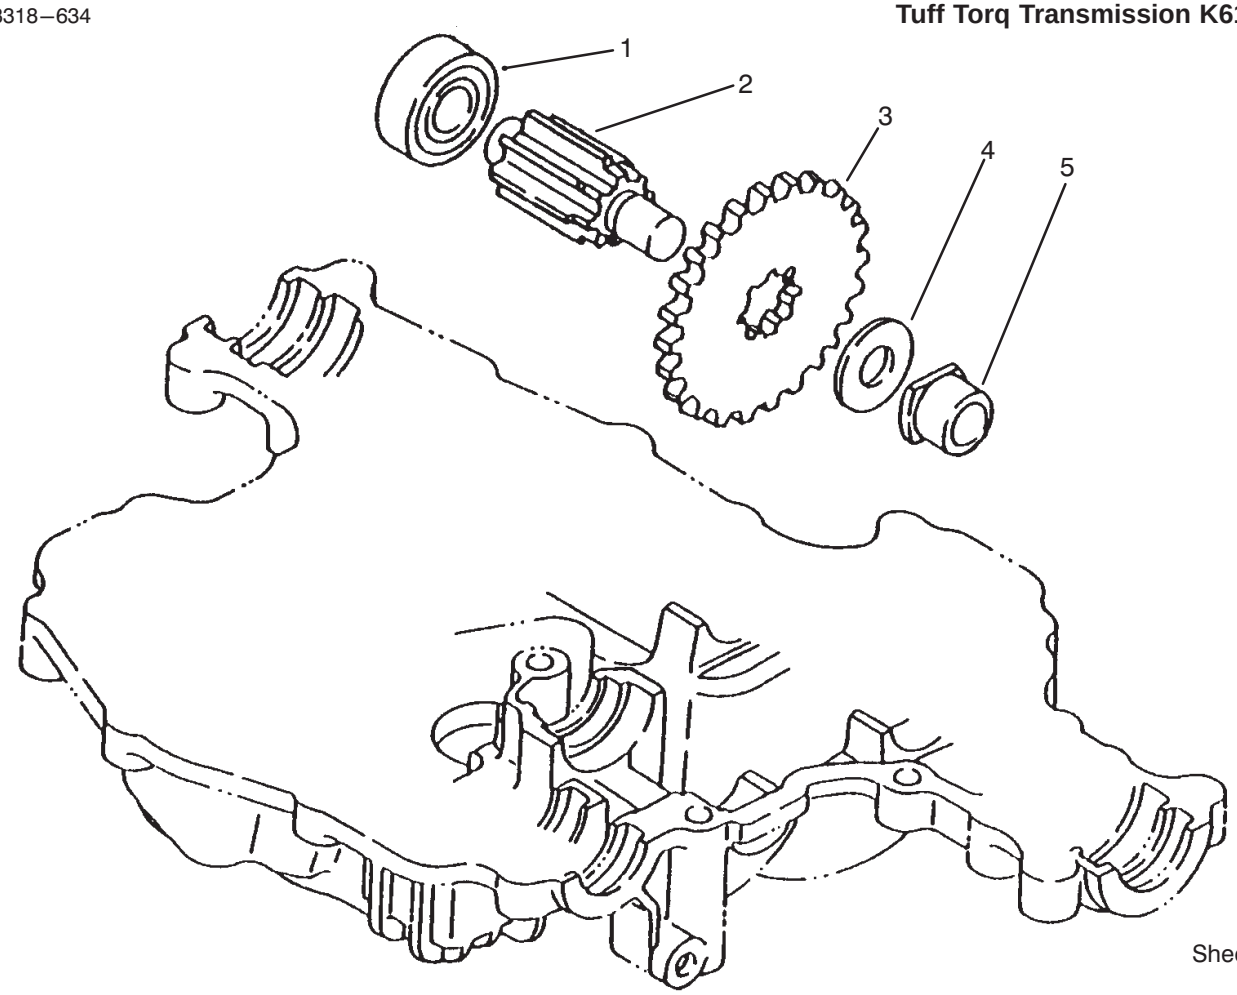


Sheet No.: 411
C–1869

Final Pinion

Ref. No.	Part No.	Qty.	Description
1	93–0446	1	Bearing (Only On: 72043, 72063, 72103)
2	93–0447	1	Shaft–Final Pinion (Only On: 72043, 72063, 72103)
3	93–0448	1	Gear–Final Shaft (Only On: 72043, 72063, 72103)
4	93–0449	1	Washer (Only On: 72043, 72063, 72103)
5	93–0450	1	Bushing (Only On: 72043, 72063, 72103)

PROTOTYPE

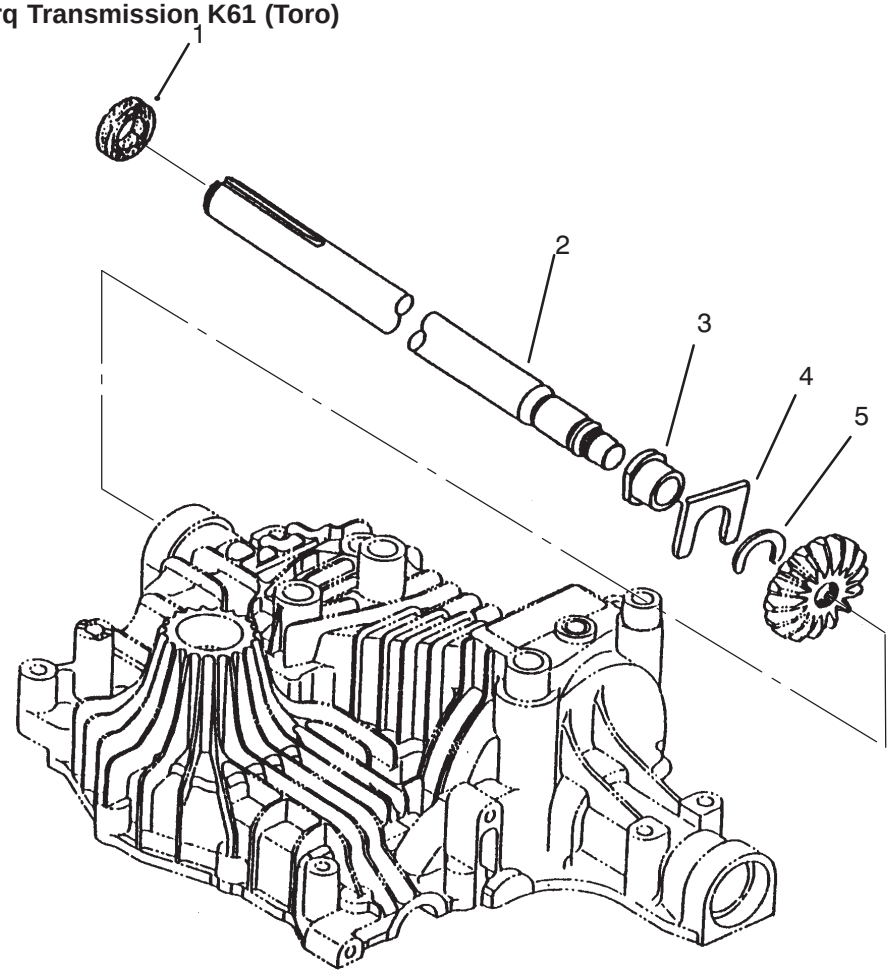

Sheet No.: 412


C−1870

Axle Shaft

Ref. No.	Part No.	Qty.	Description
1	93−0451	2	Seal (Only On: 72043, 72063, 72103)
2	93−0452	1	Shaft−Axle Right (Only On: 72043, 72063, 72103)
3	93−0454	2	Bushing (Only On: 72043, 72063, 72103)
4	93−0455	2	Washer−Thrust (Only On: 72043, 72063, 72103)
5	93−0456	2	Ring (Only On: 72043, 72063, 72103)
*	93−0453	1	Shaft−Axle Left (Only On: 72043, 72063, 72103)

PROTOTYPE

* Not illustrated

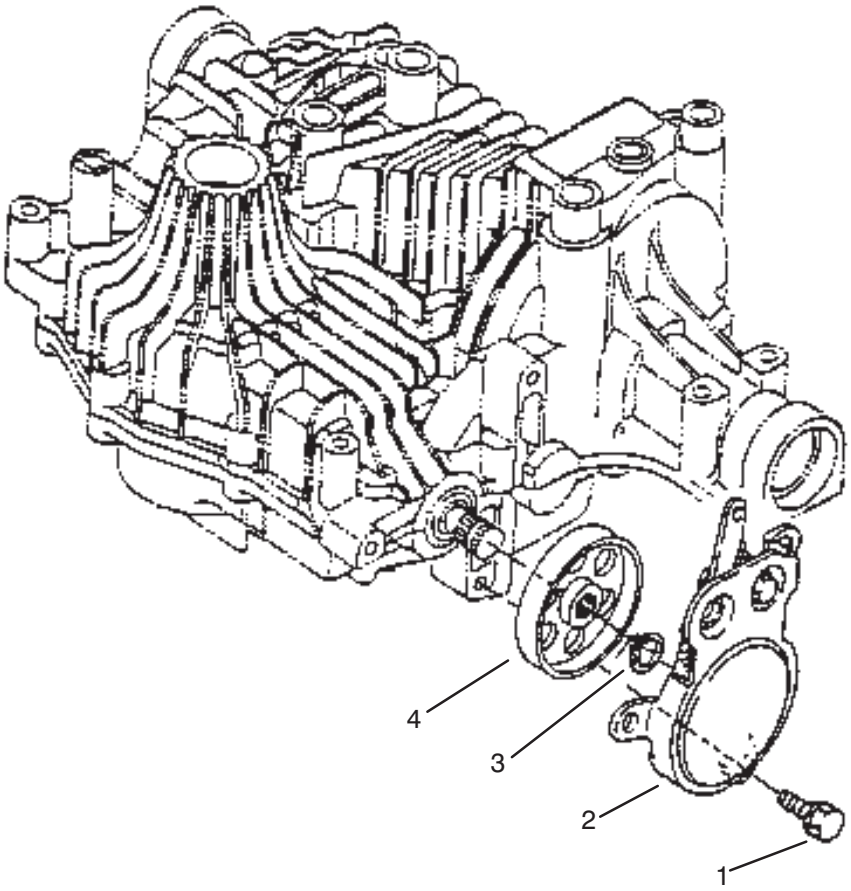


Sheet No.: 413
C−1871

Brake


Ref. No.	Part No.	Qty.	Description
1	93−0457	3	Bolt W/Washer (Only On: 72043, 72063, 72103)
2	93−0458	1	Band−Brake Interlock (Only On: 72043, 72063, 72103)
3	93−0373	1	Ring−Snap (Only On: 72043, 72063, 72103)
4	93−0460	1	Drum−Brake (Only On: 72043, 72063, 72103)

PROTOTYPE

Electric Schematic Single Cylinder Hydro Drive

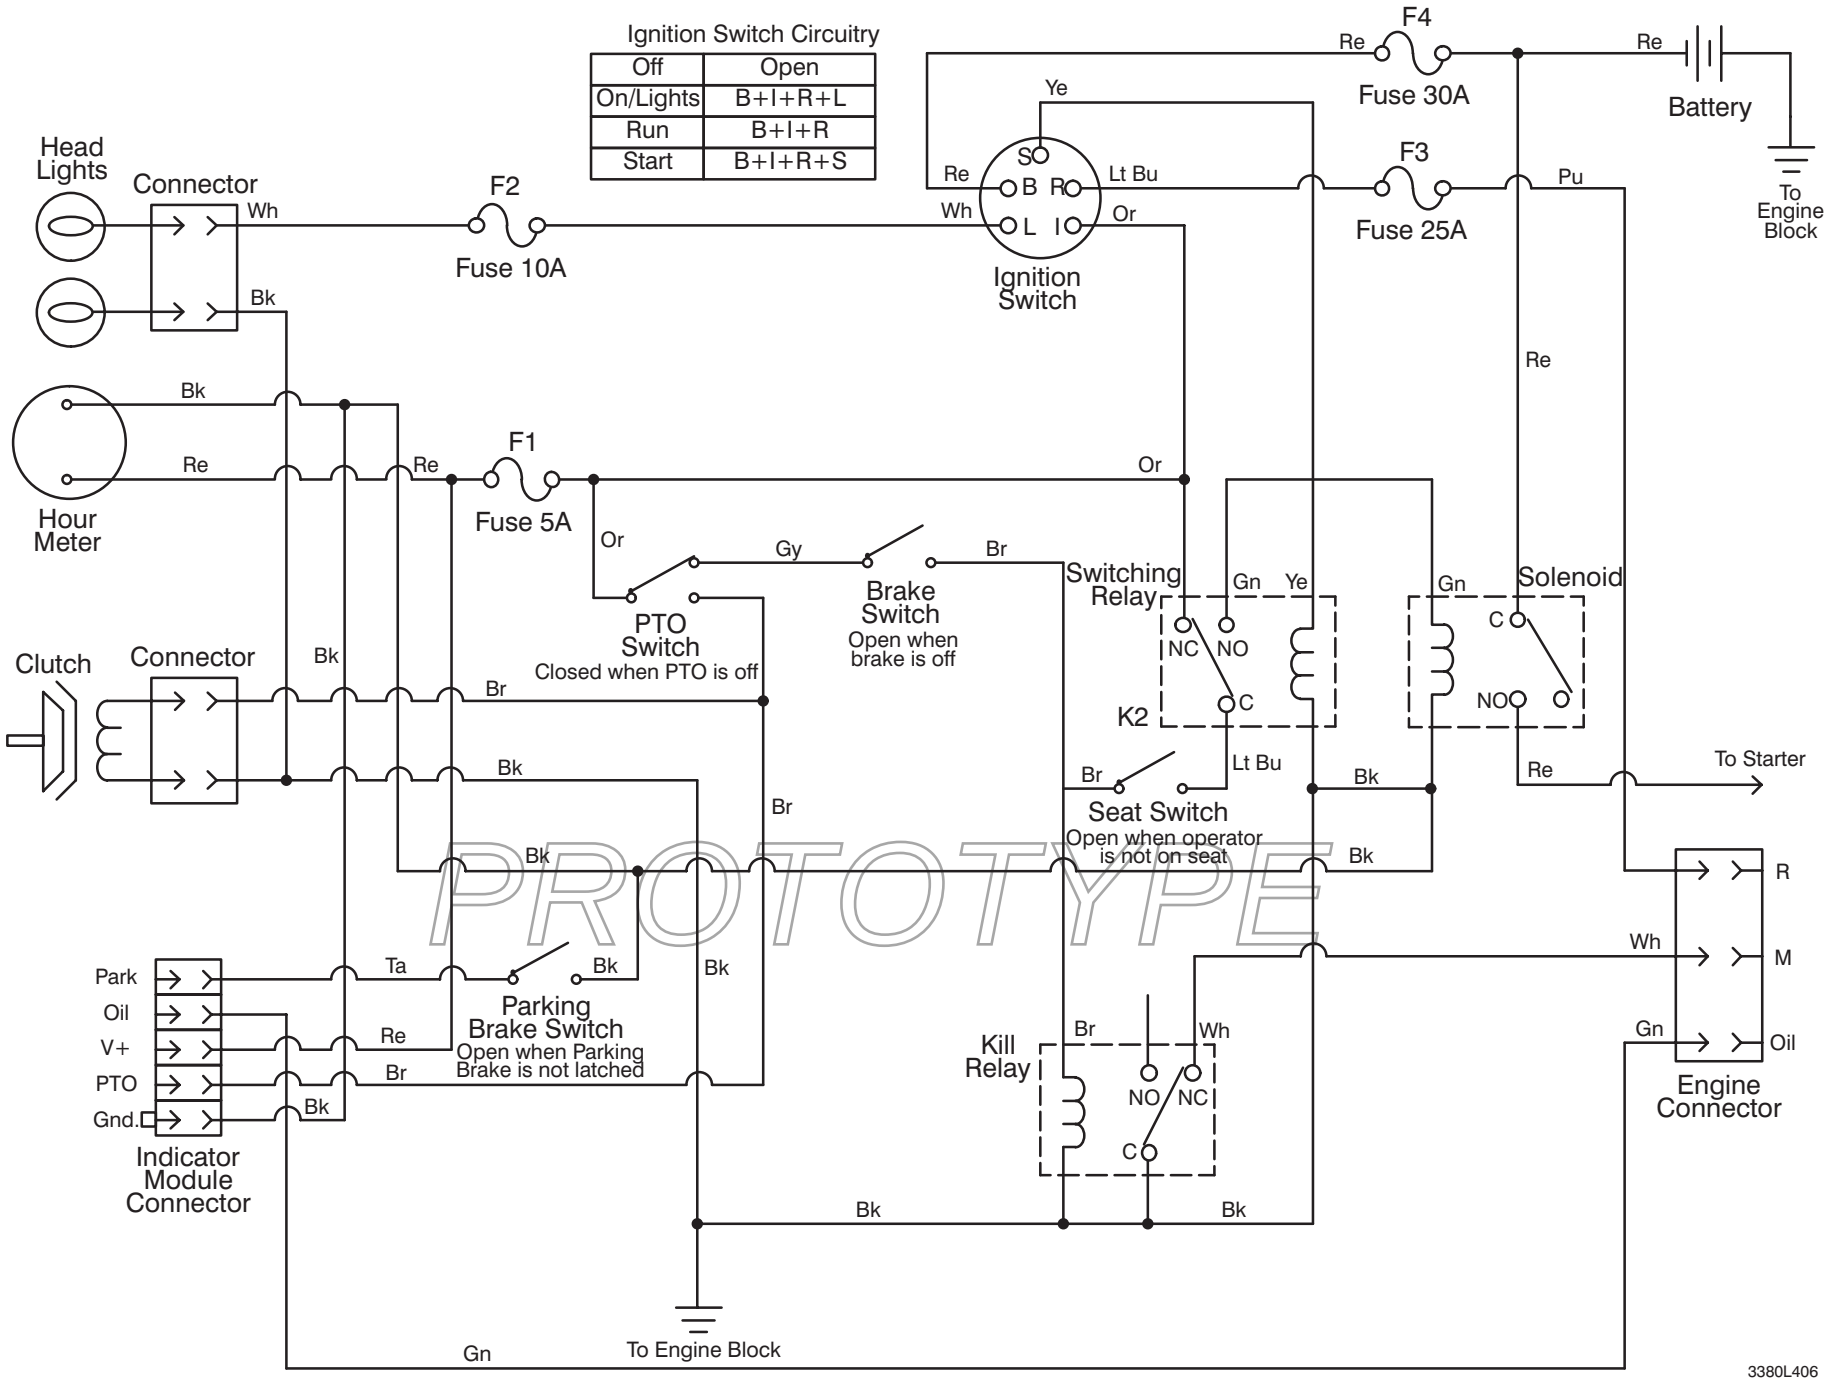


Electric Schematic Single Cylinder Gear Drive

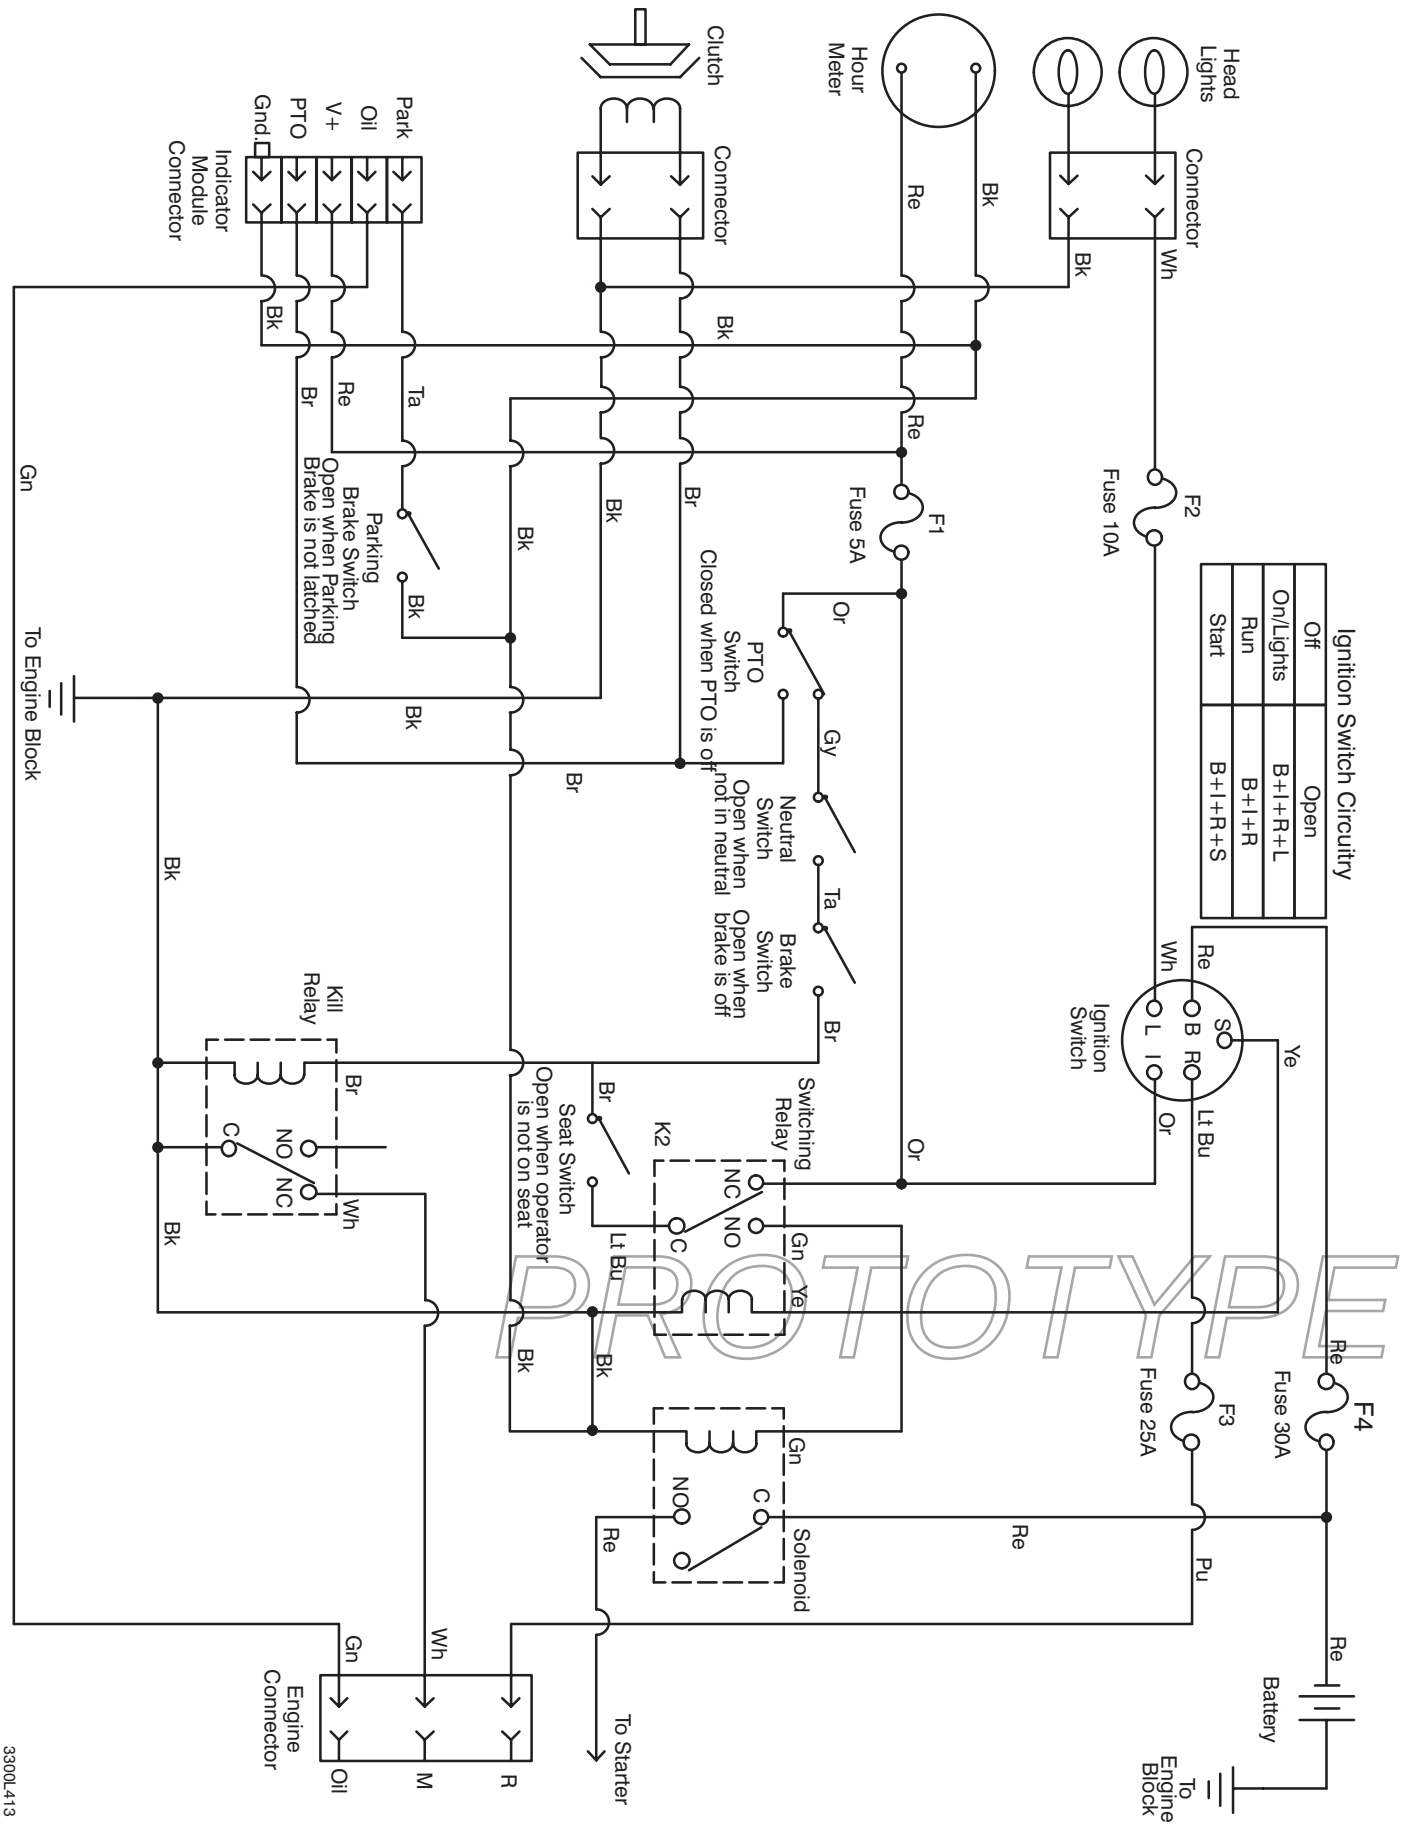


PROTOTYPE

Electric Schematic Twin Cylinder Hydro Drive

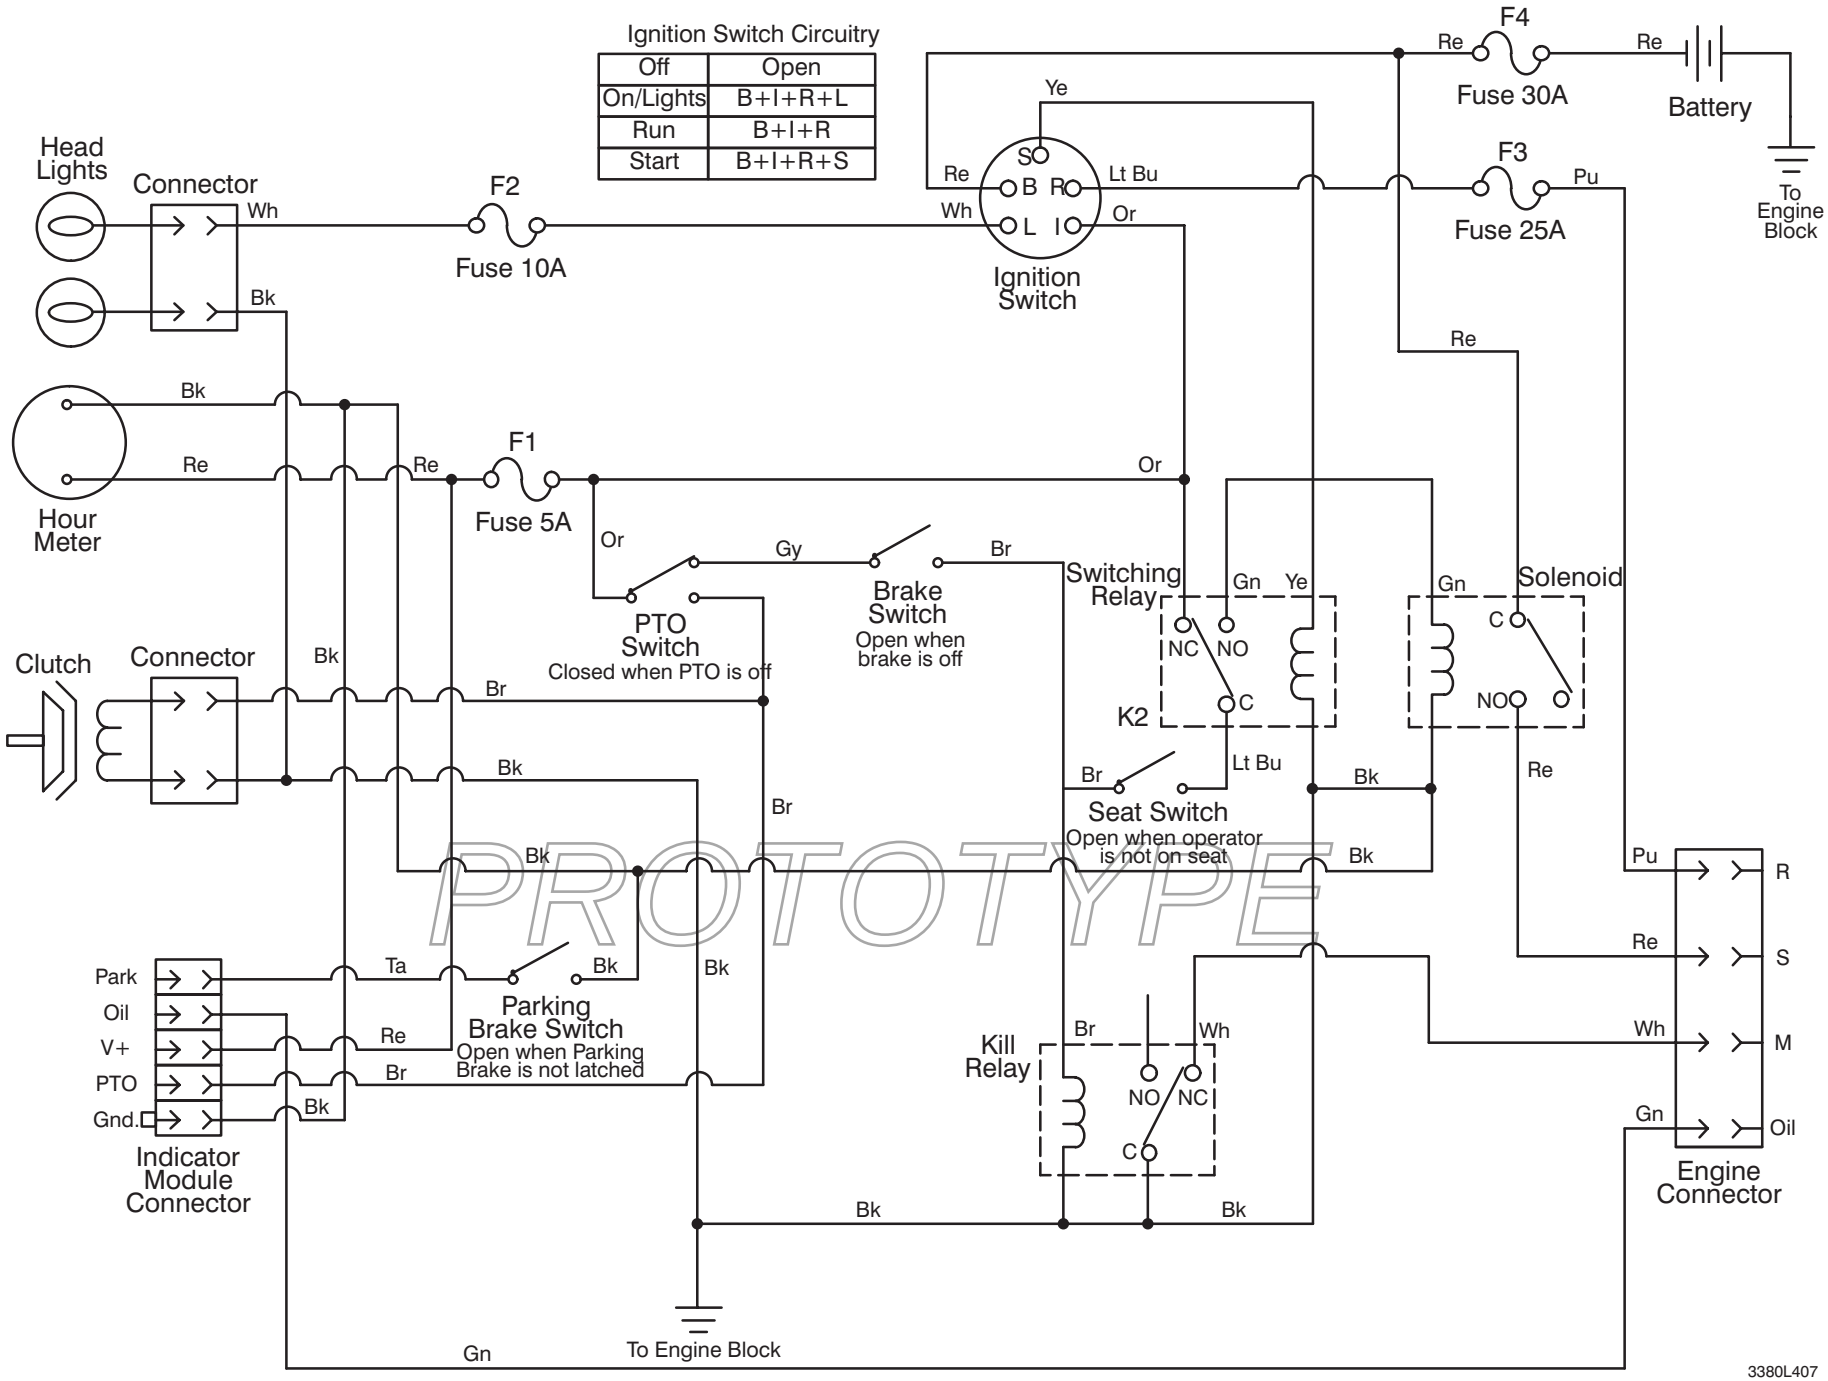


Electric Schematic Hydro Drive Cruise Control

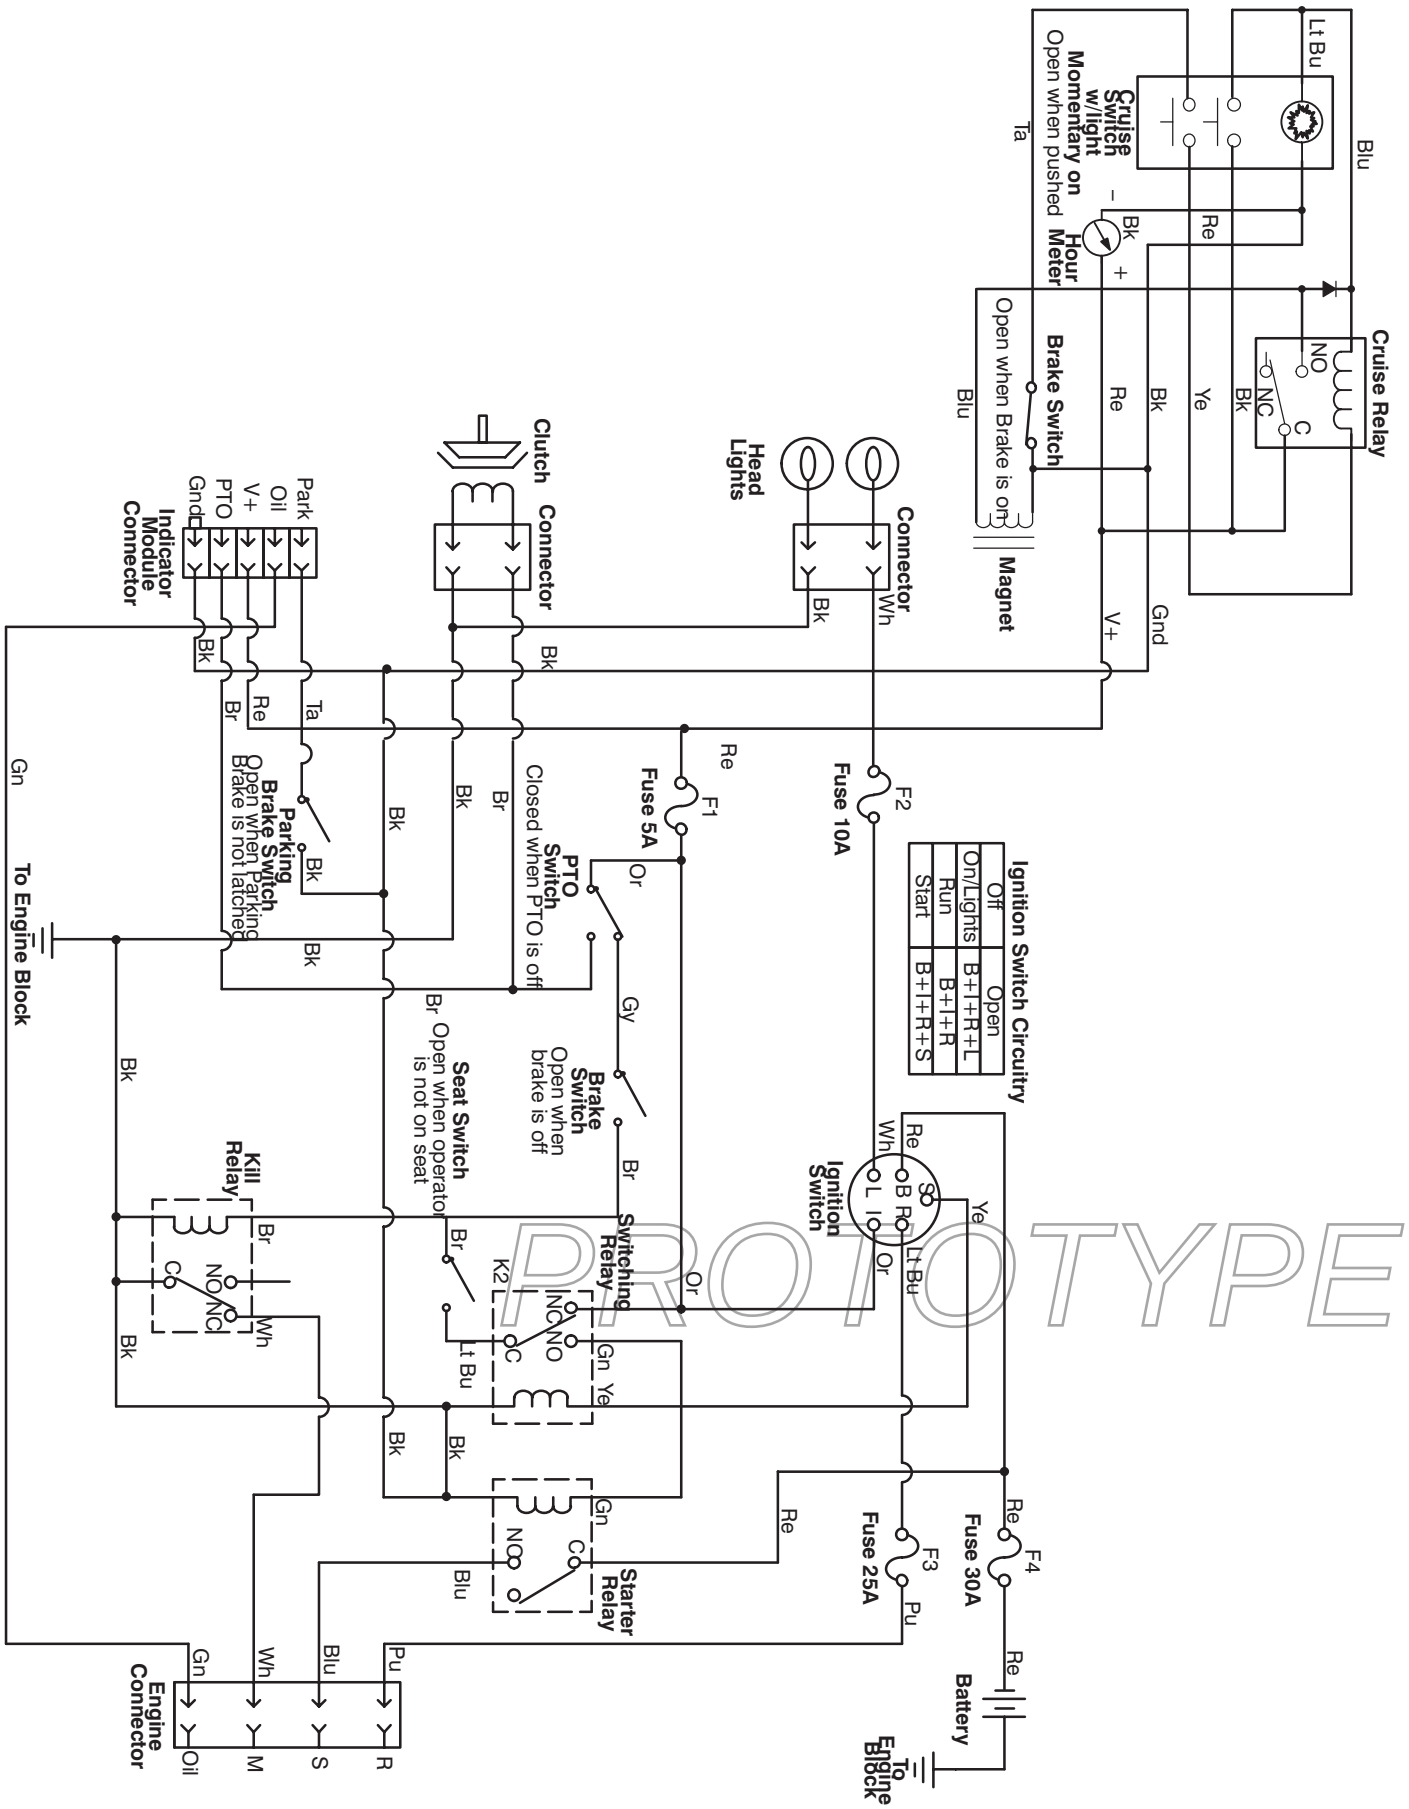


PROTOTYPE

Electric Schematic Twin Cylinder Gear Drive

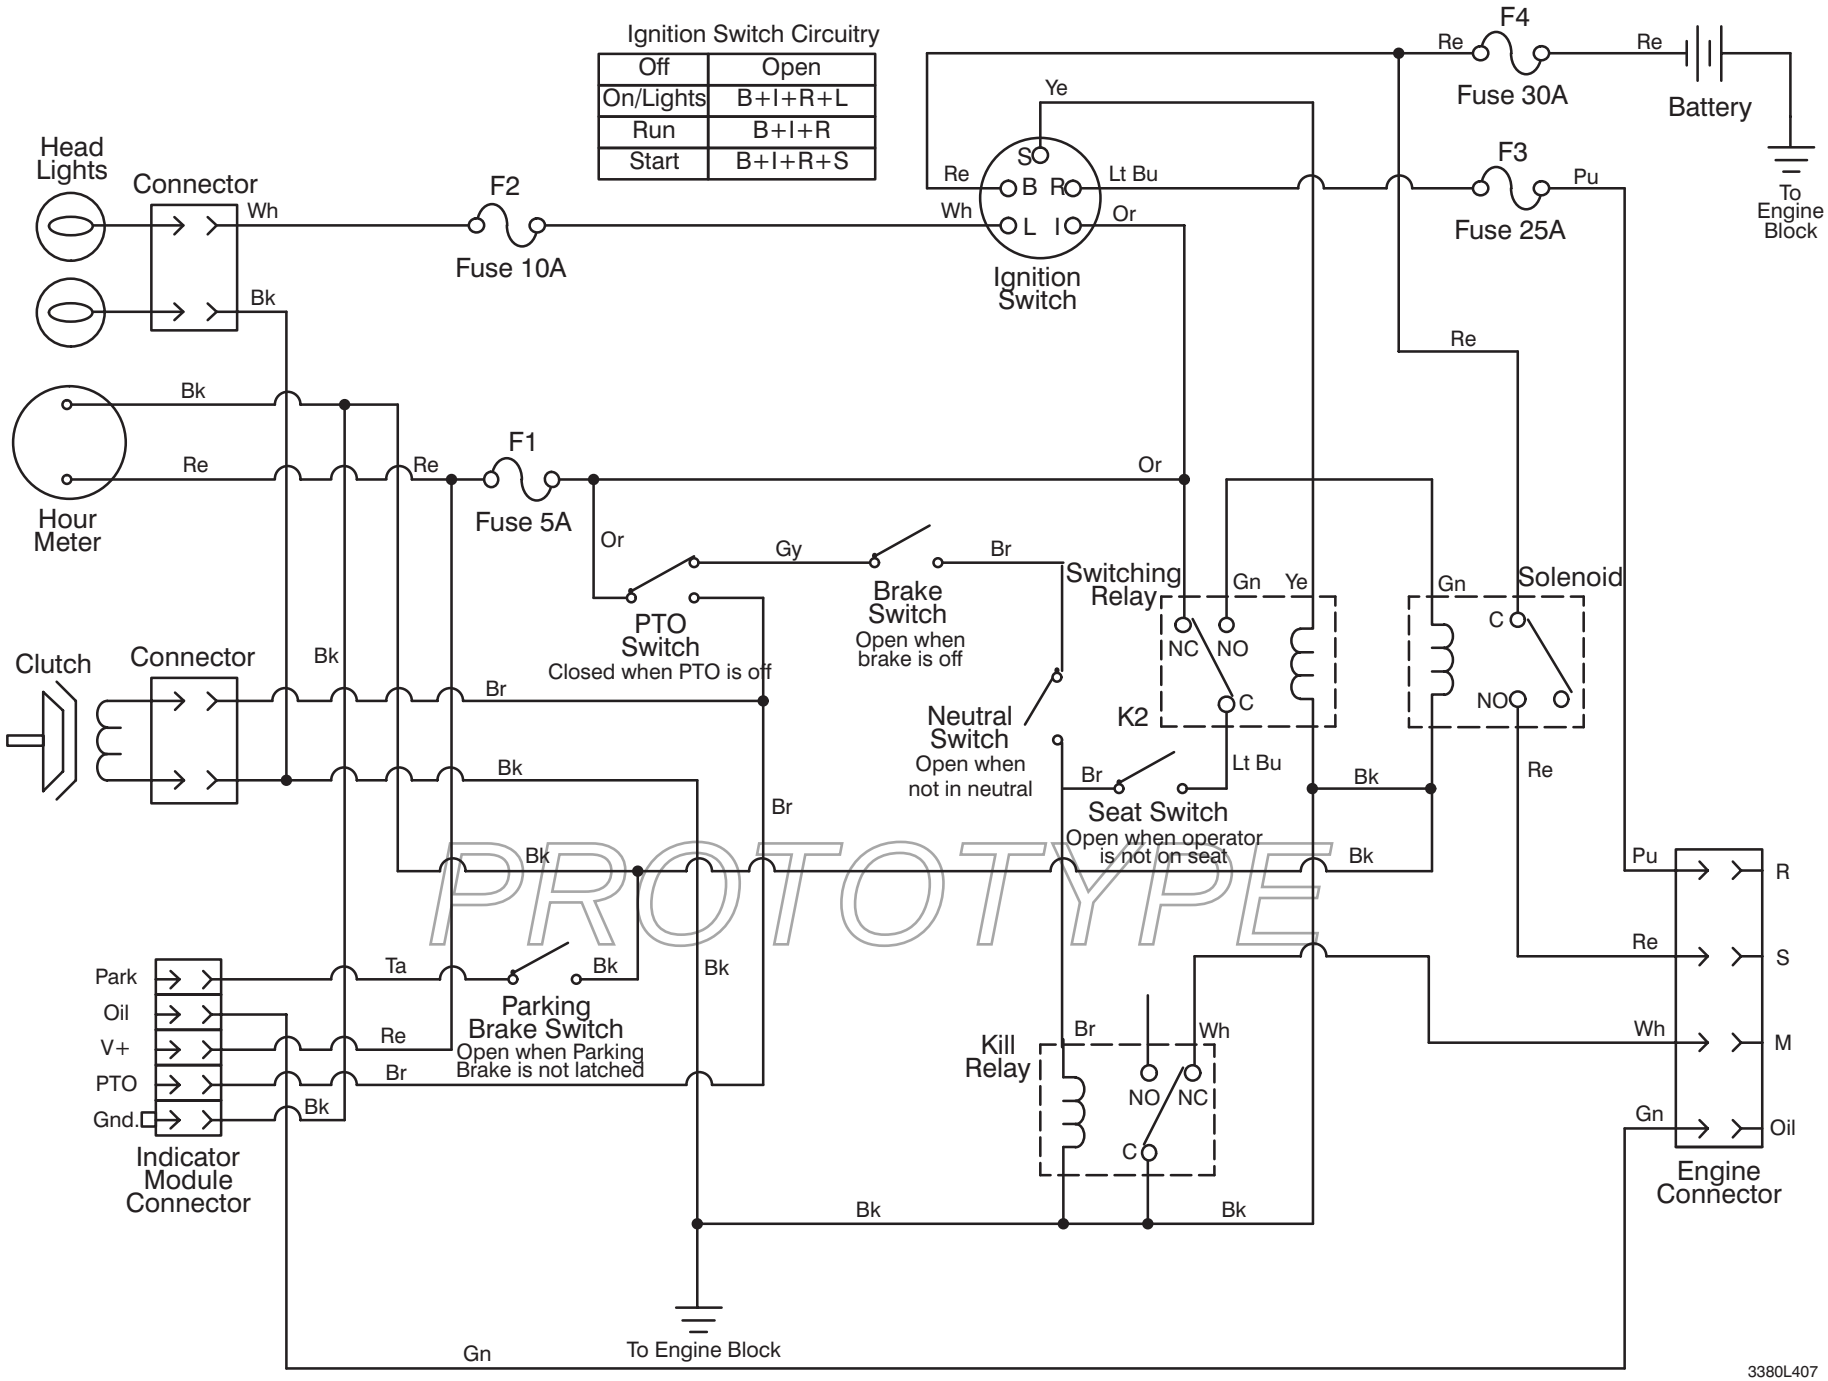

Wire Harness Routing — Twin Cylinder Engine

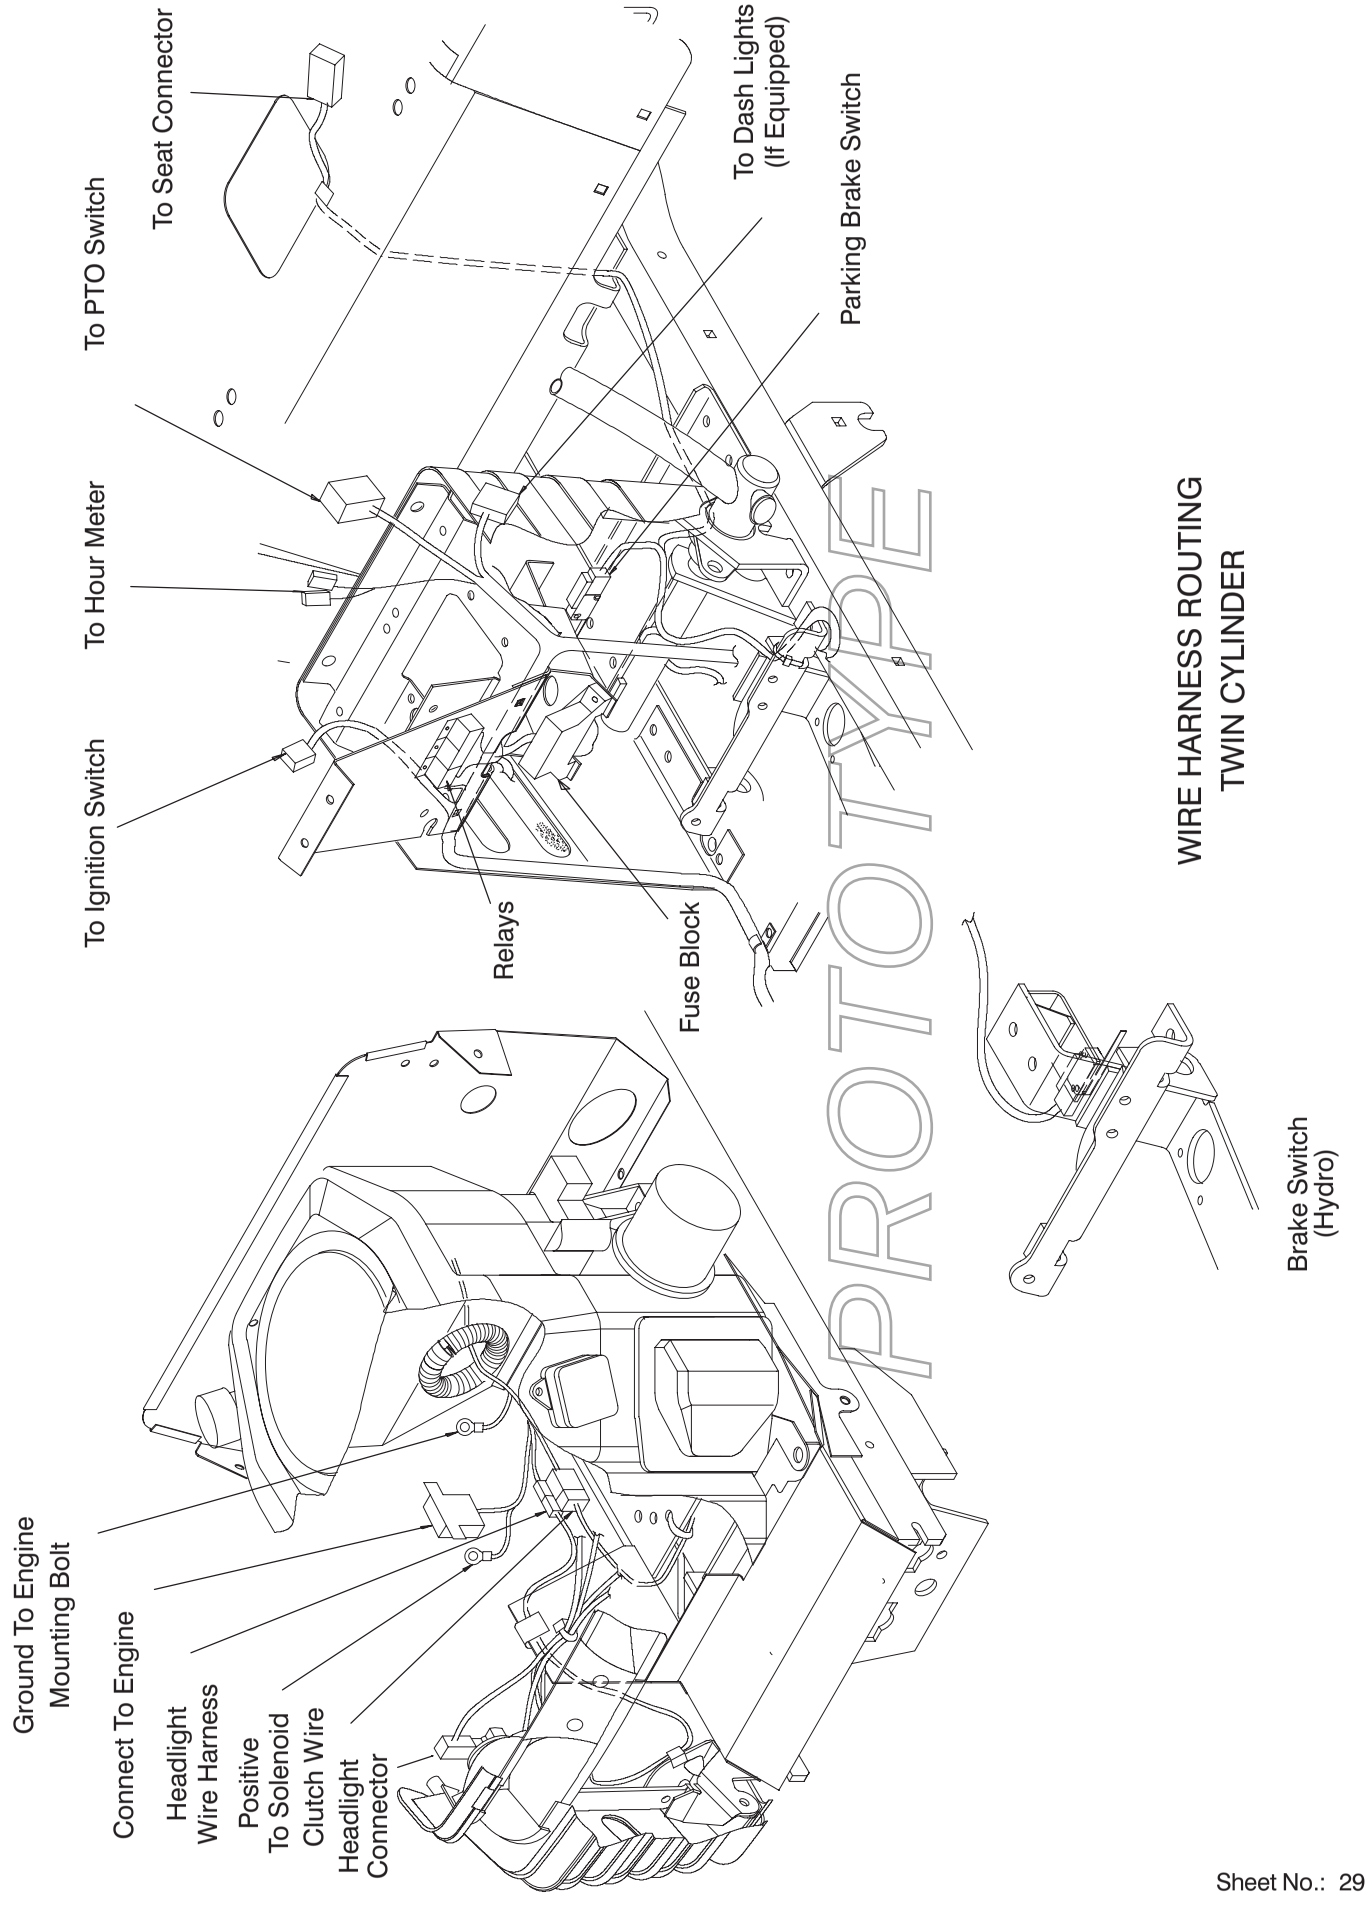

Sheet No.: 29


VIEW A

BRAKE SWITCH—HYDRO
WITH CRUISE CONTROL

PROTOTYPE

WIRE HARNESS ROUTING
TWIN CYLINDER

Wire Harness Routing — Single Cylinder Engine

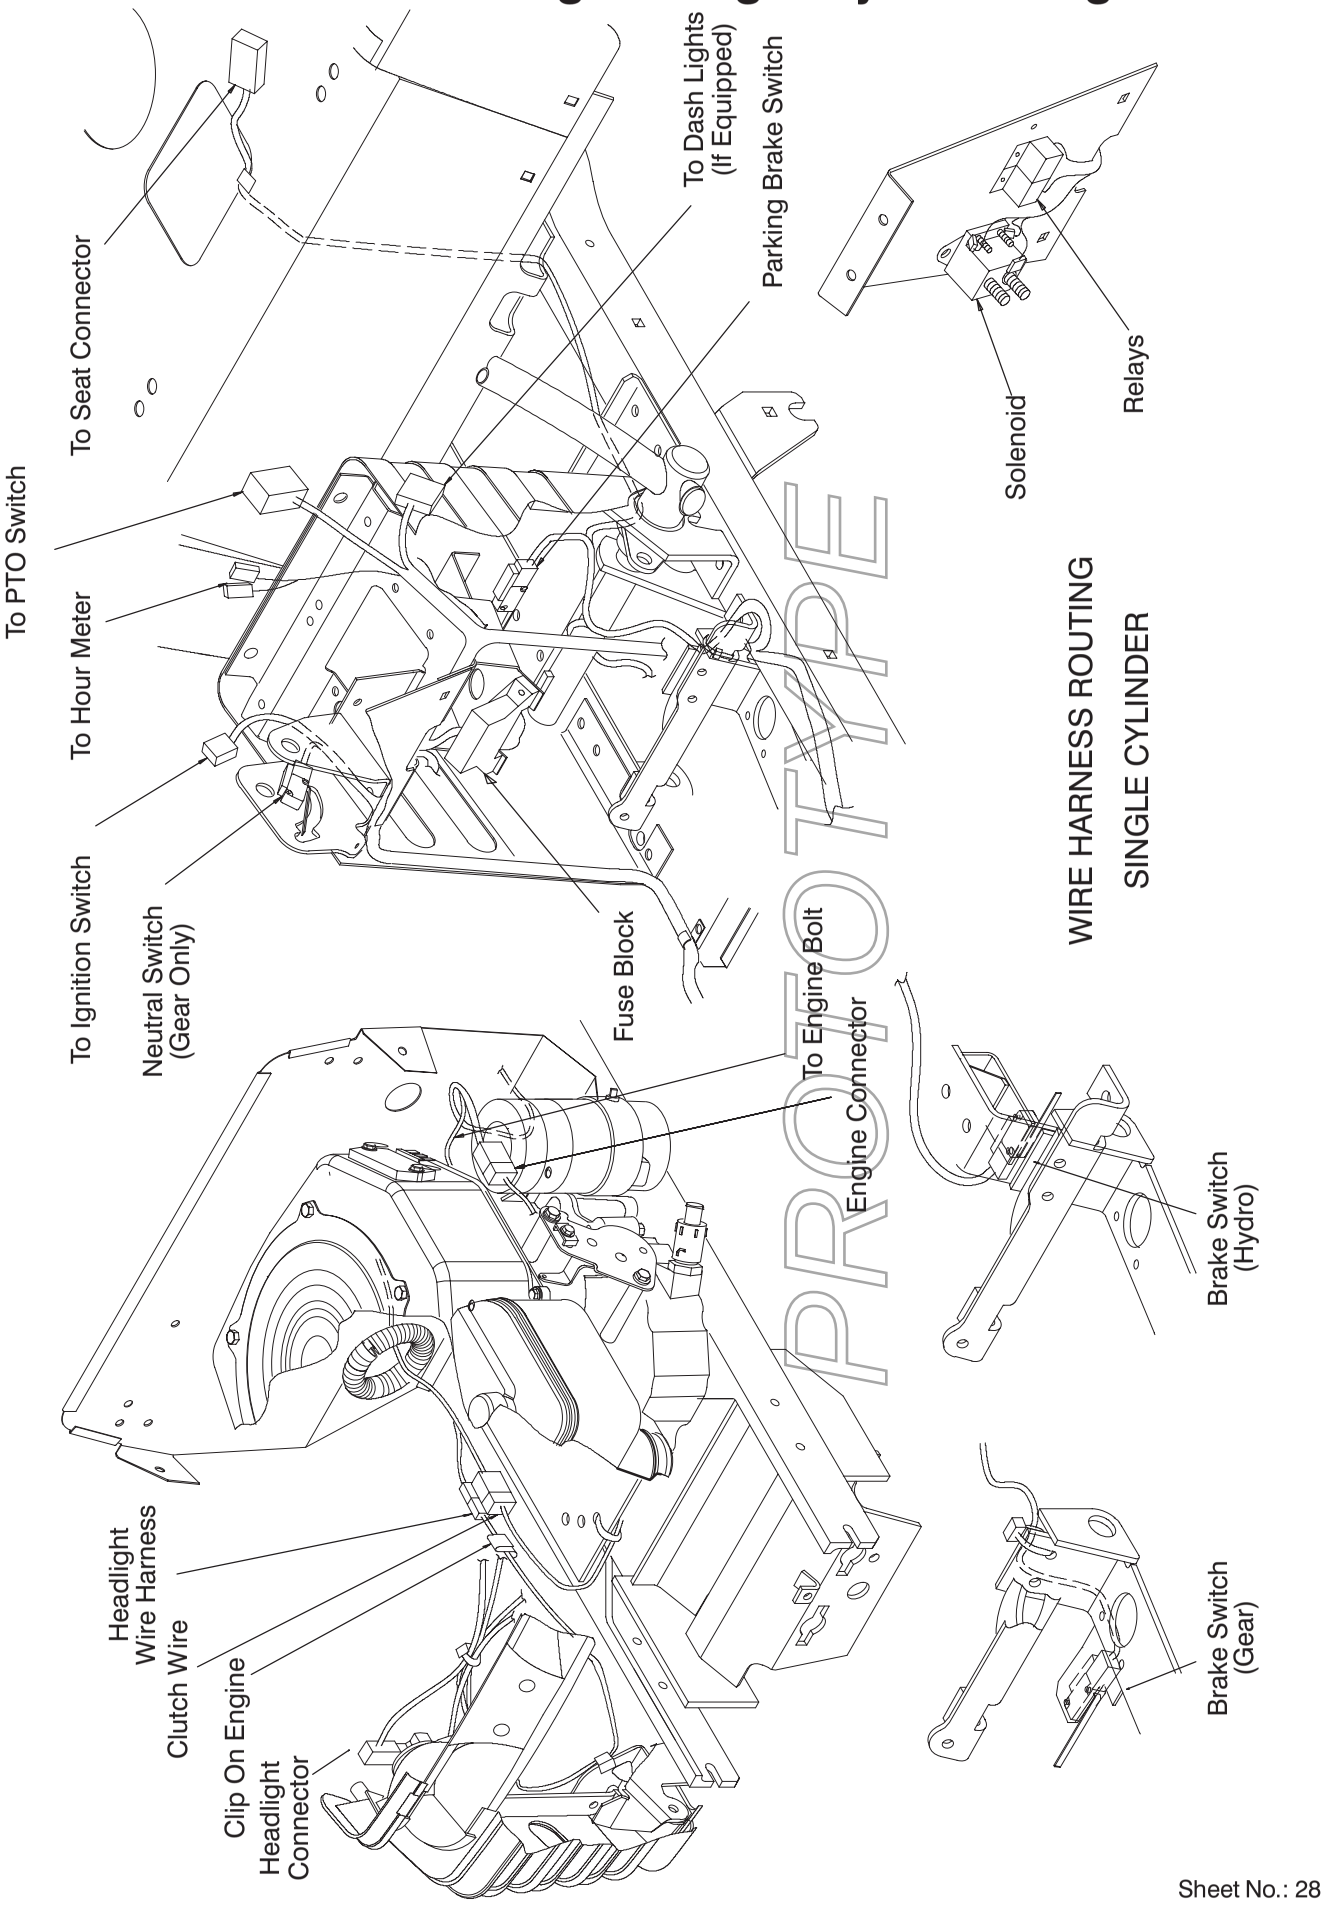

Sheet No.: 28

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
1278	7	12	2	Washer–Shim
1278	8	3	4	Washer–Shim
2534	21	32	1	Clip–Spring (Only On: 72042, 72062)
2534	19	6	2	Clip–Spring (Only On: 72043, 72063, 72103)
3624	16	6	1	Spring–Compression
3624	31	20	2	Spring–Compression (Only On: 72042, 72062)
5108	8	14:4	2	Valve–Tire Tubeless
5108	34	1:2	2	Valve–Tire Tubeless
5210	8	2	4	Washer–Shim
5618	8	1	1	Ring–Retaining
7896	5	4	1	Washer–Bowed
8130	16	4	1	Retainer–Spring
8830	18	8	1	Retainer–”j”
8830	25	9	1	Retainer–”j”
8870	16	21	1	Trunnion
105503	1	12	2	Bushing
105503	10	11	2	Bushing
105503	31	14	1	Bushing (Only On: 72042, 72062)
106269	17	36	1	Bearing–Flange
106288	13	29	2	Clamp
106557	10	14	2	Reflector
106948	25	10	1	Tray–Battery
107788	20	17	1	Spring–Extension (Only On: 72042, 72062)
108881	7	5	1	Nut–Hex
109189	7	7	1	Bearing–Flange
109547	25	12	2	Hook–Battery
109553	25	21	1	Boot–Battery Cable
109989	10	8	2	Spacer
110015	33	19	2	Spacer (Only On: 72042, 72062)
110391	7	6	1	Bearing–Wheel
110513	8	14:3	4	Bearing–Wheel
110656	31	6	1	Trunnion (Only On: 72042, 72062)
111078	25	7	1	Cable–Battery Black (Only On: 72042, 72043, 72062, 72063)
111383	7	8	1	Collar W/Set Screw
111418	7	3	1	Bushing
111418	21	39	1	Bushing (Only On: 72042, 72062)
111418	19	18	1	Bushing (Only On: 72043, 72063, 72103)
111419	7	1	1	Washer–Bearing
111419	21	35	1	Washer–Bearing (Only On: 72042, 72062)
111419	19	2	1	Washer–Bearing (Only On: 72043, 72063, 72103)
111646	7	9	1	Grip Ring
111712	33	21	1	Washer–Wave (Only On: 72042, 72062)
112168	16	16	1	Decal–Lift (Only On: 72042, 72043)
112843	23	15	1	Washer–PTO (Only On: 72042, 72043, 72062, 72063)
112843	22	12	1	Washer–PTO (Only On: 72103)
114064	24	4	2	Bearing–Elec Clutch
114621	15	31	1	Decal–Noise (Only On: 72062, 72063, 72103)
114720	25	13	1	Tube–Battery Drain
115203	23	3	1	Screw–HH (Only On: 72042, 72043, 72062, 72063)
115230	31	1	1	Switch–Clutch (Only On: 72042, 72062)
115593	16	11	1	Knob
116397	4	26	2	Relay (Only On: 72042, 72043, 72062, 72063)
116397	4	26	1	Relay (Only On: 72103)
116397	4	26	3	Relay (Only On: 72103)
116744	34	1:3	2	Tire (Only On: 72042, 72043, 72062, 72063)
116971	34	1:3	2	Tire (Only On: 72103)
117127	8	14:1	2	Tire
117316	25	2	1	Rod–Battery Hold Down
120930	25	17:1	1	Fuse Holder
147665	16	3	2	Screw
147665	20	23	2	Screw (Only On: 72042, 72062)
147665	32	28	2	Screw (Only On: 72042, 72062)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
147665	26	10	2	Screw (Only On: 72043, 72063)
607978	20	9	1	Pulley–Idler (Only On: 72042, 72062)
614249	2	34	1	Tie Strap
614249	15	32	2	Tie Strap
614249	18	3	1	Tie Strap
614249	21	34	1	Tie Strap (Only On: 72042, 72062)
614249	29	8	1	Tie Strap (Only On: 72103)
700806	10	16	2	Knob
700919	3	12	1	Nut
701178	10	9	2	Cap–Protector
702366	2	35	1	Clip–Wire Retainer
702366	13	27	1	Clip–Wire Retainer
702366	23	12	1	Clip–Wire Retainer (Only On: 72042, 72043, 72062, 72063)
702366	22	23	1	Clip–Wire Retainer (Only On: 72103)
909543	30	1	2	Screw–Set (Only On: 72042, 72062)
933141	16	12	1	Pin–Spirol
933148	16	5	1	Pin–Spirol
933270	9	21	2	Pin–Roll
936118	28	13	2	Snap Ring (Only On: 72043, 72063, 72103)
9114466	22	13	1	Screw HH (Only On: 72103)
9150026	8	6	4	Nut–Lock
9202154	27	12	1	Washer–Flat (Only On: 72043, 72063, 72103)
9202324	8	4	2	Washer–10 GA
9202634	17	35	1	Washer–Flat
9266934	12	17	2	Screw–HWHTF
9266934	23	19	3	Screw–HWHTF (Only On: 72042, 72043, 72062, 72063)
9266934	22	2	3	Screw–HWHTF (Only On: 72103)
9267154	8	8	1	Screw
5–1336	34	5	2	Key
5–4460	10	18	2	Washer–Fender
7–5461	31	9	1	Spacer–Transmission (Only On: 72042, 72062)
24–7924	14	15	2	Cover–Drive Shaft
28–2480	8	16	2	Washer–Flat
38–1420	10	25	1	Switch–Seat
46–8093	1	23	2	Screw–TAP
46–8093	15	25	2	Screw–TAP
48–7730	5	20	2	Screw–HH
48–7730	23	7	4	Screw–HH (Only On: 72042, 72043, 72062, 72063)
49–2040	28	16	3	Screw–HH (Only On: 72043, 72063, 72103)
61–9780	8	17	2	Hubcap
62–7770	4	30	1	Key–Ignition
65–2920	26	22	1	Pad–Pedal (Only On: 72043, 72063, 72103)
66–0120	3	8	2	Knob
76–1340	12	9	1	Decal–USA (Only On: 72042, 72043)
78–1221	34	1:1	2	Wheel
78–1680	8	14:2	2	Wheel
78–1940–01	8	11	1	Arm–Front Spindle RH
78–1950–01	9	20	1	Arm–Front Spindle LH
78–2140	17	33	1	Trunnion
78–2431	16	25	1	Rod
78–2491–03	18	7	1	Stop–PTO
78–2601–01	8	13	2	Spindle
78–2610	7	2	1	Gear–Sector
78–2920	8	5:2	1	Joint–Ball
78–2920	8	7:2	1	Joint–Ball
78–5801	8	5:3	1	Joint–Ball RH W/ Jam Nut
78–5811	8	7:3	1	Joint–Ball LH
78–6771	20	16	1	Arm–Idler (Only On: 72042, 72062)
78–6810–03	17	29	1	Plate
78–6820–03	25	11	1	Plate–Battery
78–6831	17	39	1	Shaft
78–7360	17	28	1	Rod

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
78–7390	16	24	1	Link
78–7960–01	9	18	1	Axle–Front
78–8180–03	33	15	1	Pedal–Clutch (Only On: 72042, 72062)
78–9150–03	7	4	1	Plate
78–9740	16	10	1	Decal–HOC Knob
79–0390	20	14	1	Guide–Belt (Only On: 72042, 72062)
79–0390	23	4	1	Guide–Belt (Only On: 72042, 72062)
79–0400	20	20	1	Guide–Belt (Only On: 72042, 72062)
79–0950–03	10	15	1	Bracket–Pivot RH
79–0970–03	10	12	1	Bracket–Pivot LH
79–1250	16	23	2	Pin
79–1790	20	30	1	Guide–Belt (Only On: 72042, 72062)
79–3401–03	17	37	1	Gage Shaft
79–3500	11	3	1	Reservoir (Only On: 72043, 72063, 72103)
79–6730	18	5	2	Decal–Belt Install (Only On: 72042, 72043)
79–7530	21	38	1	Spring–Extension (Only On: 72042, 72062)
79–7530	19	15	1	Spring–Extension (Only On: 72043, 72063, 72103)
83–2720	34	6	10	Bolt–Lug
83–6620	14	14	1	Decal–Instruction
88–3850	5	6	1	Steering Wheel (Only On: 72042, 72043, 72062)
88–3870	5	6:2	1	Cover–Steering Wheel (Only On: 72043, 72062)
88–3870	5	6:1	1	Cover–Steering Wheel (Only On: 72063, 72103)
88–3950	10	1	1	Seat (Only On: 72042, 72043)
88–3970	1	22	1	Reflector–Lamp
88–3980	11	5	1	Gas Cap ASM
88–4320	1	28	1	Harness–Wire
88–4590	19	12	1	Bolt–Shoulder (Only On: 72043, 72063, 72103)
88–9930	16	2	1	Switch–Micro
88–9930	20	24	1	Switch–Micro (Only On: 72042, 72062)
88–9930	26	9	1	Switch–Micro (Only On: 72043, 72063)
88–9930	29	2	2	Switch–Micro (Only On: 72103)
92–3014	24	1	3	Nut & Spring Asm
92–3015	24	2	1	Rotor ASM W/Bearing
92–3016	24	3	1	Field ASM W/Bearing
92–6506	11	6	1	Tank–Gas
92–6510	3	6	1	Dash (Only On: 72042, 72062)
92–6511	10	1	1	Seat (Only On: 72062, 72063, 72103)
92–6656	1	19	1	Lens–Headlight
92–6657	5	6	1	Steering Wheel (Only On: 72063, 72103)
92–6670	20	27	1	Bracket–Clutch (Only On: 72042, 72062)
92–6671	20	28	1	Bracket–Brake (Only On: 72042, 72062)
92–6674–03	18	1	1	Support–Fender
92–6680	3	7	1	Boot–Steering
92–6686	28	11	1	Pulley (Only On: 72043, 72063, 72103)
92–6687	12	24	1	Mat–Foot RH (Only On: 72043, 72063, 72103)
92–6688	12	25	1	Mat–Foot LH (Only On: 72043, 72063, 72103)
92–6689	12	24	1	Mat–Foot RH (Only On: 72042, 72062)
92–6690	12	25	1	Mat–Foot LH (Only On: 72042, 72062)
92–6702	7	10	1	Shaft–Steering Lower
92–6704	5	9	1	Shaft–Steering
92–6705	4	21	1	Lens–Dash
92–6709	4	23	1	Light–Indicator (Only On: 72043, 72103)
92–6710	16	7	1	Grip–Handle
92–6711	16	8	1	Tip–Rod
92–6713–03	12	15	1	Cover–Rear
92–6715	4	22	1	Hourmeter
92–6716	23	10	1	Gasket–Exhaust (Only On: 72042, 72043, 72062, 72063)
92–6717	5	18	1	U–Joint–Steering
92–6718	28	10	1	Belt–Hydro (Only On: 72043, 72063, 72103)
92–6719	30	11	1	Belt–Gear (Only On: 72042, 72062)
92–6720	3	15	1	Decal–Choke/PTO (Only On: 72042, 72043)
92–6721	3	11	1	Decal–Throttle/Ignition (Only On: 72042, 72043)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–6722	3	10	1	Decal–Shift (Only On: 72042, 72062)
92–6725	12	4	1	Decal–HOC (Only On: 72042, 72043)
92–6726	28	19	1	Decal–Hydro Valve (Only On: 72043)
92–6727	12	14	1	Decal–Fuel Level
92–6728	1	25	1	Decal–Hood LH
92–6729	2	31	1	Decal–Hood RH
92–6730	12	13	1	Decal–Rear Fender
92–6732	4	23	1	Housing–Indicator Light (Only On: 72042, 72062, 72063)
92–6733	14	19	2	Decal–264–6 (Only On: 72042, 72062)
92–6734	14	19	2	Decal–264–H (Only On: 72043, 72063)
92–6736	14	19	2	Decal–268–H (Only On: 72103)
92–6737	11	1	1	Hose (Only On: 72043, 72063, 72103)
92–6742	28	15	1	Fan (Only On: 72043, 72063, 72103)
92–6744–01	12	1	1	Footrest–RH (Only On: 72042, 72062)
92–6745–01	12	22	1	Footrest–LH (Only On: 72042, 72062)
92–6746–01	12	22	1	Footrest–LH (Only On: 72043, 72063, 72103)
92–6747–01	12	1	1	Footrest–RH (Only On: 72043, 72063, 72103)
92–6750	10	2	2	Spacer–Nylon
92–6754	11	8	1	Hose–Fuel Line (Only On: 72042, 72043, 72062, 72063)
92–6761	30	4	1	Transaxle–Peerless 820 (Only On: 72042, 72062)
92–6762	28	2	1	Transaxle–Tuff Torq K61 (Only On: 72043, 72063, 72103)
92–6764	23	1	1	Decal–Toro Power Plus 14 (Only On: 72042, 72043, 72062, 72063)
92–6769	30	13	2	U–Bolt (Only On: 72042, 72062)
92–6769	28	1	2	U–Bolt (Only On: 72043, 72063, 72103)
92–6771–03	14	21	1	Baffle–Rear
92–6776	5	13	1	Bracket–Detent
92–6777–03	5	1	1	Bracket–Support
92–6778–03	14	10	1	Support–Column
92–6780	23	8	2	Nut–HHF (Only On: 72042, 72043, 72062, 72063)
92–6780	22	4	4	Nut–HHF (Only On: 72103)
92–6781	3	19	1	Control–Choke (Only On: 72042, 72043, 72062, 72063)
92–6782	3	17	1	Control–Throttle (Only On: 72042, 72043, 72062, 72063)
92–6783	3	19	1	Control–Choke (Only On: 72103)
92–6784	3	17	1	Control–Throttle (Only On: 72103)
92–6785	3	14	1	Switch
92–6787	3	13	1	Switch–PTO
92–6794	16	14	1	Wedge–HOC Adjust
92–6795–01	12	10	1	Fender
92–6796	3	9	1	Cover–Slot RH (Only On: 72043, 72063)
92–6797	3	16	1	Cover–Slot LH
92–6798	5	11	1	Cap–Rod
92–6855–03	17	27	1	Arm
92–6859–03	14	6	1	Support–Dash
92–6860	14	8	4	Nut–Retainer
92–6861	22	3	1	Muffler (Only On: 72103)
92–6862	23	9	1	Muffler (Only On: 72042, 72043, 72062, 72063)
92–6867–01	23	18	1	Shield–Muffler (Only On: 72042, 72043, 72062, 72063)
92–6867–01	22	16	1	Shield–Muffler (Only On: 72103)
92–6868–03	18	12	1	Bracket–Idler
92–6874–03	16	15	1	Lever–Lift
92–6875	32	30	3	Bearing–Shift Link (Only On: 72042, 72062)
92–6876	12	2	4	Nut–Retainer
92–6877	23	20	1	Valve–Oil Drain (Only On: 72042, 72043, 72062, 72063)
92–6877	22	19	1	Valve–Oil Drain (Only On: 72103)
92–6878–03	23	11	1	Baffle–Muffler (Only On: 72042, 72043, 72062, 72063)
92–6879–03	22	1	1	Baffle–Muffler (Only On: 72103)
92–6883	8	5	1	Steering Link RH
92–6884	8	7	1	Steering Link LH
92–6885	23	14	1	Clutch–PTO (Only On: 72042, 72043, 72062, 72063)
92–6885	22	11	1	Clutch–PTO (Only On: 72103)
92–6886	31	10	1	Arm–Shift (Only On: 72042, 72062)
92–6887	30	2	1	Pulley (Only On: 72042, 72062)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–6888	23	13	1	Pulley (Only On: 72043, 72063)
92–6888	22	9	1	Pulley (Only On: 72103)
92–6889–03	30	5	1	Strap–Torque LH (Only On: 72042, 72062)
92–6890–03	30	9	1	Strap–Torque RH (Only On: 72042, 72062)
92–6891–03	20	6	1	Bracket–Idler Spring (Only On: 72042, 72062)
92–6894–03	20	11	1	Bracket–Idler Rear (Only On: 72042, 72062)
92–6896	31	5	1	Rod–Shift Transaxle (Only On: 72042, 72062)
92–6900	19	14	1	Arm–Idler (Only On: 72043, 72063, 72103)
92–6902	27	23	1	Pad–Pedal Forward (Only On: 72043, 72063, 72103)
92–6903	27	1	1	Pad–Pedal Reverse (Only On: 72043, 72063, 72103)
92–6904	25	17	1	Harness–Wire (Only On: 72103)
92–6905	25	17	1	Harness–Wire (Only On: 72043, 72063)
92–6907	25	17	1	Harness–Wire (Only On: 72042, 72062)
92–6913–03	27	2	1	Pedal–Hydro (Only On: 72043, 72063, 72103)
92–6914–03	1	24	1	Baffle–Hood Upper
92–6917–03	2	30	1	Bracket–Hinge RH
92–6918–03	1	7	1	Bracket–Hinge LH
92–6919	31	25	1	Pivot–Shift (Only On: 72042, 72062)
92–6920	31	19	1	Rod–Shift (Only On: 72042, 72062)
92–6921	31	21	1	Bracket–Shaft (Only On: 72042, 72062)
92–6924	33	18	1	Rod–Clutch (Only On: 72042, 72062)
92–6926–03	31	3	1	Tube–Linkage (Only On: 72042, 72062)
92–6929–03	33	9	1	Bracket–Parking Brake (Only On: 72042, 72062)
92–6931	33	11	1	Lever–Parking Brake (Only On: 72042, 72062)
92–6936–03	14	18	1	Cover–Side LH
92–6937–03	14	2	1	Cover–Side RH
92–6943	28	14	1	Spacer–Fan (Only On: 72043, 72063, 72103)
92–6944	33	14	1	Spring–Extension (Only On: 72042, 72062)
92–6945	30	10	1	Spring–Extension (Only On: 72042, 72062)
92–6948–03	26	16	1	Lever–Brake (Only On: 72043, 72063, 72103)
92–6951–03	26	19	1	Pedal–Brake (Only On: 72043, 72063, 72103)
92–6960	15	27	2	Latch–Hood
92–6962	27	6	1	Bushing (Only On: 72043, 72063, 72103)
92–6964–03	18	14	1	Bracket–HOC
92–6965	16	9	1	Rod–HOC
92–6966	27	22	1	Spacer–Hydro Pedal (Only On: 72043, 72063, 72103)
92–6968	26	11	1	Trunnion–Brake (Only On: 72043, 72063, 72103)
92–6970	27	8	1	Rod–Bypass (Only On: 72043, 72063, 72103)
92–6971	5	5	1	Lever–Tilt
92–6972–03	10	4	1	Support–Seat
92–6973	3	20	1	Decal–Dash Lens (Only On: 72043, 72103)
92–6975	4	20	1	Decal–Dash Lens (Only On: 72042, 72062, 72063)
92–6977–03	16	17	1	Rod–Lift Lever
92–6978	17	31	1	Rod–HOC Indicator
92–6979	17	34	1	Plate–HOC Gage
92–6982	26	20	1	Spacer–Brake (Only On: 72043, 72063, 72103)
92–6986	10	7	2	Bolt–Shoulder
92–6987	1	20	1	Decal–Horsehead
92–6988	26	14	1	Rod–Brake (Only On: 72043, 72063, 72103)
92–6989	4	31	1	Cable–Battery Red (Only On: 72042, 72043, 72062, 72063)
92–6989	25	1	1	Cable–Battery Red (Only On: 72103)
92–6990	25	1	1	Cable–Battery Red (Only On: 72042, 72043, 72062, 72063)
92–6992–03	18	4	1	Bracket–Steering
92–6996–03	2	32	1	Hinge–Hood RH
92–6997–03	1	13	1	Hinge–Hood LH
92–6998	5	22	1	Spacer–Yoke
92–6999	5	15	1	Spacer–Yoke
92–7000–03	26	3	1	Bracket–Park Brake (Only On: 72043, 72063, 72103)
92–7001	20	4	1	Guide–Belt RH (Only On: 72042, 72062)
92–7002	20	5	1	Guide–Belt LH (Only On: 72042, 72062)
92–7004–03	26	5	1	Support–Park Brake (Only On: 72043, 72063, 72103)
92–7005	31	4	1	Rod (Only On: 72042, 72062)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
92–7006	1	4	4	Nut
92–7007	17	32	1	Spring–Extension
92–7008	27	20	2	Rod End (Only On: 72043, 72063, 72103)
92–7009	33	26	1	Grip–Parking Brake (Only On: 72042, 72062)
92–7009	26	1	1	Grip–Parking Brake (Only On: 72043, 72063, 72103)
92–7018	27	3	1	Rod (Only On: 72043, 72063, 72103)
92–7019	33	5	1	Rod–Park Brake (Only On: 72042, 72062)
92–7020	12	7	4	Screw–TTH
92–7020	14	1	9	Screw–TTH
92–7048–03	2	33	1	Bracket–Hood Hinge RH
92–7049–03	1	16	1	Bracket–Hood Hinge LH
92–7054	10	6	2	Spring–Compression
92–7057–03	8	9	1	Pin–Front
92–7076	1	3	1	Inlet–Seal Air (Only On: 72103)
92–7077	1	3	1	Inlet–Seal Air (Only On: 72042, 72043, 72062, 72063)
92–7085	16	16	1	Decal–Lift (Only On: 72062, 72063, 72103)
92–7086	3	15	1	Decal–PTO/Choke (Only On: 72062, 72063, 72103)
92–7087	3	11	1	Decal–Throttle/Ignition (Only On: 72062, 72063, 72103)
92–7089	14	13	1	Decal–Slope/Park Brake (Only On: 72062)
92–7090	28	19	1	Decal–Bypass (Only On: 72063, 72103)
92–7091	14	13	1	Decal–Slope/Park Brake (Only On: 72063, 72103)
92–7092	12	4	1	Decal–HOC (Only On: 72062, 72063, 72103)
92–7101	21	36	1	Pulley–Flat (Only On: 72042, 72062)
92–7101	19	16	1	Pulley–Flat (Only On: 72043, 72063, 72103)
92–7102	20	21	1	Pulley–Idler (Only On: 72042, 72062)
92–7102	19	20	2	Pulley–Idler (Only On: 72043, 72063, 72103)
92–7115–03	33	24	1	Spacer (Only On: 72042, 72062)
92–7116	33	3	1	Spring–Compression (Only On: 72042, 72062)
92–7147	1	26	2	Foam–Hood
92–7148	1	27	2	Foam–Sidepanel
92–8747	18	15	2	Decal–Attach–A–Matic
92–8946	12	6	1	Decal–Danger
92–9845	3	3	1	Solenoid (Only On: 72042, 72043, 72062, 72063)
93–0301	14	13	1	Decal–Slope/Park Brake (Only On: 72042)
93–0302	14	13	1	Decal–Slope/Park Brake (Only On: 72043)
93–0320	20	29	1	Pulley–Idler (Only On: 72042, 72062)
93–0321	23	13	1	Pulley–Engine (Only On: 72042, 72062)
93–0324	25	7	1	Cable–Battery Black (Only On: 72103)
93–0350	22	5	2	Gasket–Exhaust (Only On: 72103)
93–0351	66	1	1	Upper Case ASM (Only On: 72043, 72063, 72103)
93–0353	66	13	1	Case–Lower (Only On: 72043, 72063, 72103)
93–0354	66	9	1	Bolt (Only On: 72043, 72063, 72103)
93–0355	66	14	1	Magnet (Only On: 72043, 72063, 72103)
93–0356	66	7	1	Plug/Packing (Only On: 72043, 72063, 72103)
93–0360	66	3	1	Ring (Only On: 72043, 72063, 72103)
93–0361	66	4	2	Seal (Only On: 72043, 72063, 72103)
93–0362	66	11	1	Bolt (Only On: 72043, 72063, 72103)
93–0363	66	8	11	Screw–TAP (Only On: 72043, 72063, 72103)
93–0364	66	10	2	Screw–TAP (Only On: 72043, 72063, 72103)
93–0365	68	10	1	Cylinder ASM (Only On: 72043, 72063, 72103)
93–0365	69	13	1	Cylinder ASM (Only On: 72043, 72063, 72103)
93–0370	68	3	1	Spring (Only On: 72043, 72063, 72103)
93–0371	68	1	2	Washer (Only On: 72043, 72063, 72103)
93–0371	69	7	1	Washer (Only On: 72043, 72063, 72103)
93–0372	68	5	1	Shaft–Pump (Only On: 72043, 72063, 72103)
93–0373	68	4	3	Ring–Snap (Only On: 72043, 72063, 72103)
93–0373	69	6	2	Ring–Snap (Only On: 72043, 72063, 72103)
93–0373	78	3	1	Ring–Snap (Only On: 72043, 72063, 72103)
93–0374	68	2	1	Bearing–Ball (Only On: 72043, 72063, 72103)
93–0374	69	8	1	Bearing–Ball (Only On: 72043, 72063, 72103)
93–0375	69	5	1	Housing (Only On: 72043, 72063, 72103)
93–0376	69	11	1	Bearing–Thrust (Only On: 72043, 72063, 72103)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–0386	69	9	1	Shaft–Motor (Only On: 72043, 72063, 72103)
93–0387	69	10	1	E Ring (Only On: 72043, 72063, 72103)
93–0388	70	7	2	Thrust Metal (Only On: 72043, 72063, 72103)
93–0389	70	13	1	Swash Plate (Only On: 72043, 72063, 72103)
93–0392	70	11	1	Bearing (Only On: 72043, 72063, 72103)
93–0393	70	12	1	Plate–Thrust (Only On: 72043, 72063, 72103)
93–0394	70	10	1	Plate–Thrust (Only On: 72043, 72063, 72103)
93–0395	70	1	1	Arm (Only On: 72043, 72063, 72103)
93–0396	70	3	1	Spring (Only On: 72043, 72063, 72103)
93–0397	70	2	1	Shaft–Bypass (Only On: 72043, 72063, 72103)
93–0398	70	5	1	Block Set (Only On: 72043, 72063, 72103)
93–0400	70	4	1	Packing (Only On: 72043, 72063, 72103)
93–0401	71	1	1	Rod–Bypass (Only On: 72043, 72063, 72103)
93–0402	71	2	1	Arm–Valve Release (Only On: 72043, 72063, 72103)
93–0403	71	3	1	Pin–Roll (Only On: 72043, 72063, 72103)
93–0404	72	2	1	Arm (Only On: 72043, 72063, 72103)
93–0405	72	5	1	Shock Absorber (Only On: 72043, 72063, 72103)
93–0406	72	9	1	Stud (Only On: 72043, 72063, 72103)
93–0407	72	3	1	Bolt (Only On: 72043, 72063, 72103)
93–0408	72	6	2	Washer (Only On: 72043, 72063, 72103)
93–0409	72	4	1	Washer (Only On: 72043, 72063, 72103)
93–0410	72	7	1	Ring (Only On: 72043, 72063, 72103)
93–0410	74	8	1	Ring (Only On: 72043, 72063, 72103)
93–0411	72	1	1	Pin–Roll (Only On: 72043, 72063, 72103)
93–0411	74	1	2	Pin–Roll (Only On: 72043, 72063, 72103)
93–0412	72	8	1	Pin–Cotter (Only On: 72043, 72063, 72103)
93–0412	74	12	1	Pin–Cotter (Only On: 72043, 72063, 72103)
93–0413	73	1	1	Fulcrum (Only On: 72043, 72063, 72103)
93–0414	73	2	1	Shaft ASM (Only On: 72043, 72063, 72103)
93–0417	73	5	1	Washer (Only On: 72043, 72063, 72103)
93–0418	73	6	1	Packing (Only On: 72043, 72063, 72103)
93–0418	74	3	2	Packing (Only On: 72043, 72063, 72103)
93–0419	73	7	1	Packing (Only On: 72043, 72063, 72103)
93–0420	73	8	1	Nut (Only On: 72043, 72063, 72103)
93–0421	74	9	1	Bushing (Only On: 72043, 72063, 72103)
93–0422	74	11	1	Return–Brake (Only On: 72043, 72063, 72103)
93–0423	74	18	1	Rod ASM (Only On: 72043, 72063, 72103)
93–0424	74	17	1	Adjuster (Only On: 72043, 72063, 72103)
93–0425	74	15	1	Guide–Spring (Only On: 72043, 72063, 72103)
93–0426	74	14	1	Holder–Spring (Only On: 72043, 72063, 72103)
93–0427	74	16	1	Spring (Only On: 72043, 72063, 72103)
93–0428	74	13	1	Rod–Adjuster (Only On: 72043, 72063, 72103)
93–0429	74	19	1	Arm–Brake (Only On: 72043, 72063, 72103)
93–0430	74	10	1	Shaft–Brake (Only On: 72043, 72063, 72103)
93–0431	74	5	1	Rod–Brake (Only On: 72043, 72063, 72103)
93–0432	74	4	1	Arm–Brake A (Only On: 72043, 72063, 72103)
93–0433	74	2	1	Arm–Brake B (Only On: 72043, 72063, 72103)
93–0434	74	7	1	Pin–Snap (Only On: 72043, 72063, 72103)
93–0435	74	6	2	Washer (Only On: 72043, 72063, 72103)
93–0440	75	2	1	Differential Gear ASM (Only On: 72043, 72063, 72103)
93–0443	75	3	1	Shaft–Pinion (Only On: 72043, 72063, 72103)
93–0444	75	1	2	Washer–Thrust (Only On: 72043, 72063, 72103)
93–0445	75	4	1	Gear–Final (Only On: 72043, 72063, 72103)
93–0446	76	1	1	Bearing (Only On: 72043, 72063, 72103)
93–0447	76	2	1	Shaft–Final Pinion (Only On: 72043, 72063, 72103)
93–0448	76	3	1	Gear–Final Shaft (Only On: 72043, 72063, 72103)
93–0449	76	4	1	Washer (Only On: 72043, 72063, 72103)
93–0450	76	5	1	Bushing (Only On: 72043, 72063, 72103)
93–0451	77	1	2	Seal (Only On: 72043, 72063, 72103)
93–0452	77	2	1	Shaft–Axle Right (Only On: 72043, 72063, 72103)
93–0453	77		1	Shaft–Axle Left (Only On: 72043, 72063, 72103)
93–0454	77	3	2	Bushing (Only On: 72043, 72063, 72103)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–0455	77	4	2	Washer–Thrust (Only On: 72043, 72063, 72103)
93–0456	77	5	2	Ring (Only On: 72043, 72063, 72103)
93–0457	78	1	3	Bolt W/Washer (Only On: 72043, 72063, 72103)
93–0458	78	2	1	Band–Brake Interlock (Only On: 72043, 72063, 72103)
93–0460	78	4	1	Drum–Brake (Only On: 72043, 72063, 72103)
93–0461	67	1	2	Holder–Bypass (Only On: 72043, 72063, 72103)
93–0465	67	5	2	Packing (Only On: 72043, 72063, 72103)
93–0466	67	6	2	Ring–Back Up (Only On: 72043, 72063, 72103)
93–0471	67	11	2	Pin–Knock (Only On: 72043, 72063, 72103)
93–0472	67	12	2	Bushing (Only On: 72043, 72063, 72103)
93–0474	67	14	1	Plug (Only On: 72043, 72063, 72103)
93–0475	67	15	1	Packing (Only On: 72043, 72063, 72103)
93–0476	67	16	1	Connector (Only On: 72043, 72063, 72103)
93–0478	67	18	1	Filter (Only On: 72043, 72063, 72103)
93–0479	67	19	3	Bolt (Only On: 72043, 72063, 72103)
93–0480	67	20	1	Plug (Only On: 72043, 72063, 72103)
93–0481	67	17	1	Packing (Only On: 72043, 72063, 72103)
93–0481	67	21	1	Packing (Only On: 72043, 72063, 72103)
93–0482	67	22	1	Valve ASM A1 (Only On: 72043, 72063, 72103)
93–0483	67	23	1	Valve ASM A2 (Only On: 72043, 72063, 72103)
93–0484	67	13	1	Case (Only On: 72043, 72063, 72103)
93–0485–03	14	17	1	Hoodstand W/Decals (Only On: 72042)
93–0486–03	14	17	1	Hoodstand W/Decals (Only On: 72043)
93–0487–03	14	17	1	Hoodstand W/Decals (Only On: 72062)
93–0488–03	14	17	1	Hoodstand W/Decals (Only On: 72063, 72103)
93–0489–01	12	5	1	Plate–Footrest W/Decal
93–0490	1	2	1	Hood
93–0491	1	6	1	Sidepanel–LH Hood
93–0492	2	29	1	Sidepanel–RH Hood
93–0494	1	18	1	Grille & Screen ASM
93–0503–03	31	27	1	Bracket–Pivot Mount (Only On: 72042, 72062)
93–0511	29	12	1	Arm–Cruise (Only On: 72103)
93–0512–03	29	6	1	Cruise Bracket W.a. (Only On: 72103)
93–0515	29	11	1	Clamp–Cruise (Only On: 72103)
93–0519	3	6	1	Dash (Only On: 72043, 72063, 72103)
93–0520–03	26	7	1	Bracket–Micro Sw (Only On: 72043, 72063)
93–0520–03	29	3	1	Bracket–Micro Sw (Only On: 72103)
93–0522	18	2	1	Frame W.a.
93–0523	17	40	1	Bracket–Pivot Linkage
93–0524	32	34	1	Bracket–Pivot (Only On: 72042, 72062)
93–0525–03	28	9	1	Strap–Torque (Only On: 72043, 72063, 72103)
93–0526–03	20	25	1	Bracket–Micro Switch (Only On: 72042, 72062)
93–0527	4	32	1	Switch–Cruise (Only On: 72103)
93–0533	3	9	1	Cover–Cruise (Only On: 72103)
93–0535	22	7	1	Decal–Toro Power Plus 18 (Only On: 72103)
93–0539	29	1	2	Screw #4 – 40 Nc X 1.25 (Only On: 72103)
93–0540	26	21	1	Spring–Extension (Only On: 72043, 72063, 72103)
93–0548	21	41	1	Guide–Belt
93–0549	21	42	1	Guide–Belt
93–1131	15	26	1	Trim–Seal
93–1144	11	9	2	Spacer–Fuel Tank (Only On: 72043, 72063, 72103)
93–1146	5	3	1	Bushing–Steering
93–1148–03	5	12	1	Column
93–1357	5	14	1	Spring–Extension
93–1627	11	8	1	Hose–Fuel Line (Only On: 72103)
93–1712	14	4	1	Panel–Support Dash
93–3141	32	32	1	Decal–Reverse Shift (Only On: 72042)
93–3144	32	32	1	Decal–Reverse Shift (Only On: 72062)
93–3167	26	4	1	Rod–Park Brake (Only On: 72043, 72063, 72103)
93–3190	25	22	1	Boot–Terminal Insulator (Only On: 72103)
93–3228–03	33	1	1	Pedal–Brake (Only On: 72042, 72062)
93–3658	21	37	2	Spacer (Only On: 72042, 72062)

PROTOTYPE

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
93–3658	19	19	2	Spacer (Only On: 72043, 72063, 72103)
93–3659–03	34	2	2	Hub–Wheel
93–4364	29	14	1	Harness–Wire (Only On: 72103)
93–4366	29	7	1	Magnet Assembly (Only On: 72103)
93–7225	30	3	1	Key (Only On: 72042, 72062)
93–7324	18	5	2	Decal–Belt Install (Only On: 72062, 72063, 72103)
93–9274	11	16	1	Guard–Fan (Only On: 72063, 72103)
94–1865	25	20	1	Battery (Only On: 72042, 72062)
94–1866	25	20	1	Battery (Only On: 72042, 72043, 72062, 72063)
94–1867	25	20	1	Battery (Only On: 72103)
233–42	31	22	1	Knob (Only On: 72042, 72062)
237–141	3	5	1	Grommet
2356–22	11	15	2	Washer–Flat (Only On: 72043, 72063, 72103)
2412–98	11	7	2	Clamp–Hose
2412–129	11	2	2	Clamp–Hose (Only On: 72043, 72063, 72103)
256–90	17	26	2	Bushing–Flange
256–90	26	18	2	Bushing–Flange (Only On: 72043, 72063, 72103)
256–219	31	26	2	Bushing (Only On: 72042, 72062)
283–62	33	25	2	Pin–Clevis (Only On: 72042, 72062)
302–5	8	12	2	Fitting–Grease
302–5	33	20	2	Fitting–Grease (Only On: 72042, 72062)
302–11	9	19	1	Fitting–Grease 1/4–28x45
302–26	27	21	1	Fitting–Grease (Only On: 72043, 72063, 72103)
321–4	5	2	4	Screw–HH
321–4	14	11	4	Screw–HH
321–4	25	3	2	Screw–HH
321–4	3	2	2	Screw–HH (Only On: 72042, 72043, 72062, 72063)
321–4	11	11	2	Screw–HH (Only On: 72043, 72063, 72103)
322–3	1	11	2	Screw–HH
322–3	5	17	1	Screw–HH
322–3	31	18	2	Screw–HH (Only On: 72042, 72062)
322–5	10	3	4	Screw–HH
322–5	31	12	1	Screw–HH (Only On: 72042, 72062)
322–5	18	15	1	Screw–HH (Only On: 72043, 72063, 72103)
322–5	19	31	2	Screw–HH (Only On: 72043, 72063, 72103)
322–6	30	12	2	Screw–HH (Only On: 72042, 72062)
322–6	28	17	1	Screw–HH (Only On: 72043, 72063, 72103)
322–9	22	14	4	Screw–HH (Only On: 72103)
322–12	28	8	1	Screw HH (Only On: 72043, 72063, 72103)
322–16	29	13	2	Screw–HH (Only On: 72103)
322–17	5	23	1	Screw–HH
323–6	29	5	2	Screw–HH (Only On: 72103)
323–7	27	17	1	Screw–HH (Only On: 72043, 72063, 72103)
323–9	20	7	2	Screw–HH (Only On: 72042, 72062)
323–10	20	13	2	Screw–HH (Only On: 72042, 72062)
323–10	19	1	3	Screw–HH (Only On: 72043, 72063, 72103)
323–10	27	4	1	Screw–HH (Only On: 72043, 72063, 72103)
329–23	31	7	1	Screw (Only On: 72042, 72062)
3218–3	34	4	2	Nut–HJ
3220–3	27	24	2	Nut–HJ (Only On: 72043, 72063, 72103)
3229–11	14	5	4	Bolt–CARR
3230–1	1	21	2	Screw–CARR
3230–2	10	17	4	Screw–CARR
3230–2	12	8	8	Screw–CARR
3230–2	18	11	2	Screw–CARR
3230–20	13	28	4	Bolt–CARR
3230–23	12	3	2	Screw–CARR
3231–4	7	11	1	Bolt–CARR
3231–22	23	16	2	Bolt–CARR (Only On: 72042, 72043, 72062, 72063)
3231–22	22	15	2	Bolt–CARR (Only On: 72103)
3231–25	17	42	2	Screw–CARR
3231–25	20	3	1	Screw–CARR (Only On: 72042, 72062)

*Not Illustrated

PROTOTYPE

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3243−5	34	3	2	Screw−Set
3245−32	7	8:1	1	Screw−Set
3245−32	28	12	1	Screw−Set (Only On: 72043, 72063, 72103)
3253−3	31	8	1	Washer−Lock (Only On: 72042, 72062)
3253−4	5	19	2	Washer−Lock
3253−4	23	6	4	Washer−Lock (Only On: 72042, 72043, 72062, 72063)
3253−5	21	31	1	Washer−Lock (Only On: 72042, 72062)
3253−5	27	18	1	Washer−Lock (Only On: 72043, 72063, 72103)
3256−22	33	2	3	Washer−Flat (Only On: 72042, 72062)
3256−22	11	13	2	Washer−Flat (Only On: 72043, 72063, 72103)
3256−23	5	16	2	Washer−Flat
3256−23	12	16	6	Washer−Flat
3256−23	18	10	2	Washer−Flat
3256−23	21	40	2	Washer−Flat (Only On: 72042, 72062)
3256−23	23	5	1	Washer−Flat (Only On: 72042, 72062)
3256−23	30	8	6	Washer−Flat (Only On: 72042, 72062)
3256−23	33	10	5	Washer−Flat (Only On: 72042, 72062)
3256−23	19	27	2	Washer−Flat (Only On: 72043, 72063, 72103)
3256−23	26	12	1	Washer−Flat (Only On: 72043, 72063, 72103)
3256−23	28	3	5	Washer−Flat (Only On: 72043, 72063, 72103)
3256−24	17	43	2	Washer−Flat
3256−24	27	5	5	Washer−Flat
3256−24	23	21	2	Washer−Flat (Only On: 72042, 72043, 72062, 72063)
3256−24	20	8	6	Washer−Flat (Only On: 72042, 72062)
3256−24	31	11	2	Washer−Flat (Only On: 72042, 72062)
3256−24	19	13	7	Washer−Flat (Only On: 72043, 72063, 72103)
3256−24	26	15	1	Washer−Flat (Only On: 72043, 72063, 72103)
3256−24	22	25	2	Washer−Flat (Only On: 72103)
3256−24	27	5	4	Washer−Flat (Only On: 72103)
3256−26	16	19	5	Washer−Flat
3256−28	5	10	1	Washer−Flat
3256−49	10	26	4	Washer−Flat
3256−71	12	20	4	Washer−Flat
3256−71	32	33	1	Washer−Flat (Only On: 72042, 72062)
3272−2	33	4	2	Pin−Cotter (Only On: 72042, 72062)
3272−2	27	7	1	Pin−Cotter (Only On: 72043, 72063, 72103)
3272−6	16	20	1	Pin−Cotter
3272−6	31	15	2	Pin−Cotter (Only On: 72042, 72062)
3272−6	33	7	2	Pin−Cotter (Only On: 72042, 72062)
3272−6	26	13	2	Pin−Cotter (Only On: 72043, 72063, 72103)
3272−10	33	22	2	Pin−Cotter (Only On: 72042, 72062)
3272−16	27	15	1	Pin−Cotter (Only On: 72043, 72063, 72103)
3272−17	8	15	2	Pin−Cotter
3290−282	10	5	4	Pop Rivet
3290−307	32	29	2	Pin−Cotter (Only On: 72042, 72062)
3290−354	16	1	1	Nut−Speed
3290−354	20	26	1	Nut−Speed (Only On: 72042, 72062)
3290−354	31	2	1	Nut−Speed (Only On: 72042, 72062)
3290−354	26	8	1	Nut−Speed (Only On: 72043, 72063)
3290−354	29	4	1	Nut−Speed (Only On: 72103)
3290−479	12	26	14	Fastener−Panel
3296−8	5	24	4	Nut−Lock
3296−8	14	7	4	Nut−Lock
3296−23	16	22	1	Nut−Lock
3296−29	1	14	4	Nut−Lock
3296−29	5	21	2	Nut−Lock
3296−29	10	13	6	Nut−Lock
3296−29	12	19	14	Nut−Lock
3296−29	18	9	2	Nut−Lock
3296−29	30	7	6	Nut−Lock (Only On: 72042, 72062)
3296−29	31	17	2	Nut−Lock (Only On: 72042, 72062)
3296−29	32	31	1	Nut−Lock (Only On: 72042, 72062)

PROTOTYPE

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
3296–29	18	16	1	Nut–Lock (Only On: 72043, 72063, 72103)
3296–29	19	10	3	Nut–Lock (Only On: 72043, 72063, 72103)
3296–29	28	6	6	Nut–Lock (Only On: 72043, 72063, 72103)
3296–29	22	8	4	Nut–Lock (Only On: 72103)
3296–29	29	10	2	Nut–Lock (Only On: 72103)
3296–39	17	44	2	Nut–Lock
3296–39	23	17	2	Nut–Lock (Only On: 72042, 72043, 72062, 72063)
3296–39	20	12	4	Nut–Lock (Only On: 72042, 72062)
3296–39	27	10	1	Nut–Lock (Only On: 72043, 72063, 72103)
3296–39	22	17	2	Nut–Lock (Only On: 72103)
3296–39	29	9	2	Nut–Lock (Only On: 72103)
3296–42	14	12	3	Nut–Lock
3296–42	3	4	2	Nut–Lock (Only On: 72042, 72043, 72062, 72063)
3296–42	11	4	2	Nut–Lock (Only On: 72043, 72063, 72103)
3296–58	10	10	2	Nut–Flange
3296–59	19	17	4	Nut–Lock .375–16 (Only On: 72043, 72063, 72103)
32103–22	15	24	4	Nut–Wing
32103–22	25	4	4	Nut–Wing
32104–96	11	10	2	Screw–HHST (Only On: 72043, 72063, 72103)
32104–118	4	24	3	Screw–PH
32105–15	1	5	12	Screw–HH
32120–47	16	18	5	Ring–Retaining
32121–4	31	13	1	Pin–Roll (Only On: 72042, 72062)
32121–69	26	17	1	Pin–Spring (Only On: 72043, 72063, 72103)
32121–97	31	24	1	Pin–Roll (Only On: 72042, 72062)
32121–111	5	8	1	Pin–Spiral
32128–10	1	9	8	Nut–Lock HHF
32144–4	15	23	2	Screw–TAP
32144–4	16	13	1	Screw–TAP
32144–4	11	10	2	Screw–TAP (Only On: 72042, 72062)
32144–4	20	22	2	Screw–TAP (Only On: 72042, 72062)
32144–4	31	23	2	Screw–TAP (Only On: 72042, 72062)
32144–8	6	25	2	Screw–PPH
32144–8	4	25	2	Screw–PPH (Only On: 72042, 72043, 72062, 72063)
32144–8	4	25	3	Screw–PPH (Only On: 72103)
32144–14	1	8	2	Screw–HH
32144–14	11	17	2	Screw–HH
32144–14	15	28	2	Screw–HH
32144–14	17	30	2	Screw–HH
32144–14	18	6	6	Screw–HH
32144–14	25	19	1	Screw–HH
32144–14	20	1	4	Screw–HH (Only On: 72042, 72062)
32144–14	17	41	2	Screw–HH (Only On: 72043, 72063, 72103)
32144–14	26	2	4	Screw–HH (Only On: 72043, 72063, 72103)
32144–32	1	1	2	Screw–Plastic
32144–32	3	18	4	Screw–Plastic
32144–70	17	41	2	Screw–TAP (Only On: 72042, 72062)
32144–70	20	2	3	Screw–TAP (Only On: 72042, 72062)
32144–70	30	6	4	Screw–TAP (Only On: 72042, 72062)
32144–118	22	24	2	Screw–PPH (Only On: 72103)
32149–2	14	3	2	Nut–Hex Lock
32149–2	3	1	2	Nut–Hex Lock (Only On: 72042, 72043, 72062, 72063)

PROTOTYPE

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD

Date								

PROTOTYPE

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.

MAINTENANCE RECORD

Date								

PROTOTYPE

Date								

PROTOTYPE