




QUEST™

Model No. QT22KA421—Serial No. 920000 and Up

Picture below may not reflect actual product.

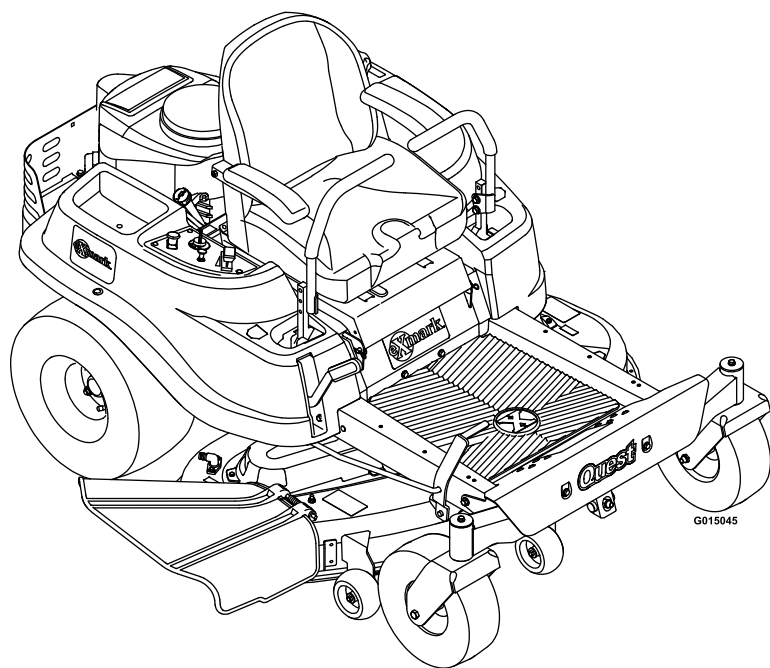

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

EXMARK PARTS PLUS

PARTS


OVERNIGHT

OR *FREE**

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents


42 Inch Deck Assembly	5
42 Inch Deck Assembly No. 119-8840	6
42 Inch Deck Belt, Spindle and Blade Assembly	7
Main Frame and Front Axle Assembly	8
Caster Wheel Assembly No. 110-6785	9
Caster Wheel Assembly No. 120-5515	10
Deck Lift Assembly	11
Motion Control Assembly	12
Seat Assembly	13
Engine, Muffler and Clutch Assembly	14
Controls and Fuel Tank Assembly	15
Fuel Delivery Assembly	16
Hydro Transaxle Drive and Rear Wheel Assembly	17
Wheel and Tire Assembly No. 119-3465	18
Wheel and Tire Assembly No. 120-5523	19
Right Hand Hydro Transaxle Assembly No. 119-3331	20
Left Hand Hydro Transaxle Assembly No. 119-3330	22
Electrical Assembly	24

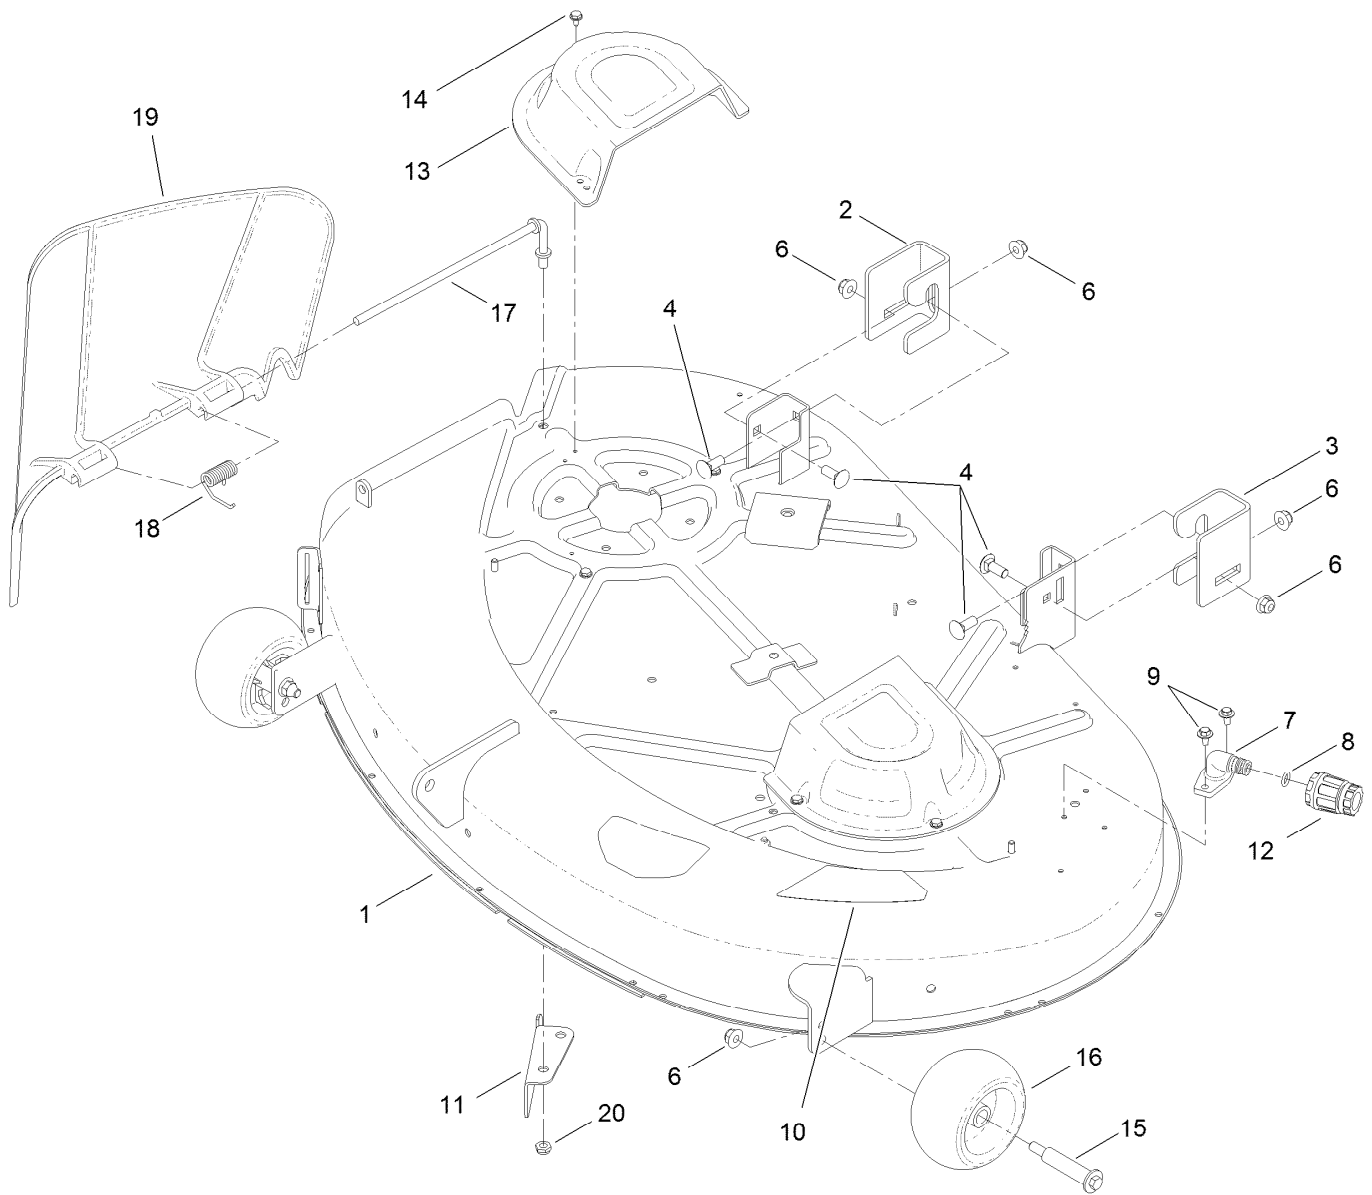

42 Inch Deck Assembly


Ref.	Part Number	Qty.	Description
1	119-8840	1	42 Inch Deck And Decal ASM
2	119-3494	1	Bracket-Hanger, RH
3	119-3496	1	Bracket-Hanger, LH
4	3231-2	4	Screw-CARR
6	104-8301	6	Nut-Flange, NI
7	95-2747	1	Fitting-Washout
8	46-6290	1	O-Ring, Seal
9	46-8560	2	Screw-HHFTF
10	117-1222	1	Decal

Ref.	Part Number	Qty.	Description
11	112-3983-03	1	Baffle-Cutoff
12	95-3270	1	Connector-Hose
13	108-7889	2	Cover-Belt
14	32104-76	6	Screw
15	112-3977	2	Bolt-Shoulder
16	1-603299	2	Roller-Scalp, Anti
17	112-4026	1	Rod-Pivot
18	110-6694	1	Spring-Torsion
19	112-3951	1	Deflector
20	3296-59	1	Nut-Lock, NI

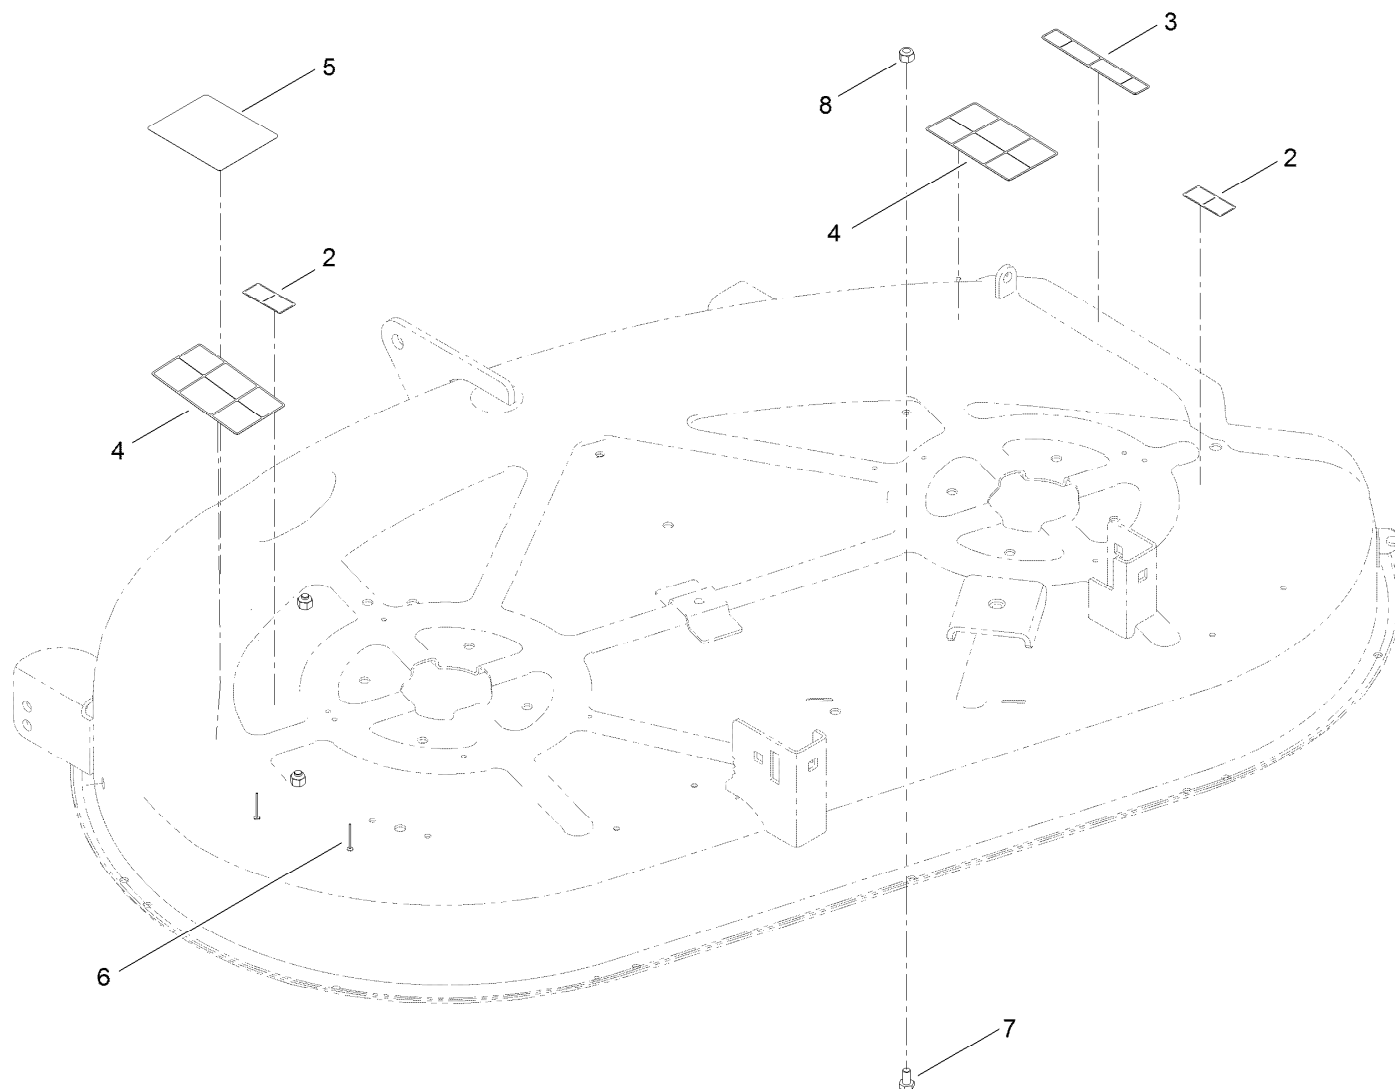

42 Inch Deck Assembly No. 119-8840


Ref.	Part Number	Qty.	Description
2	114-1606	2	Decal-Danger, Pulley
3	93-7009	1	Decal-Danger, Deflector
4	110-6691	2	Decal-Danger
5	105-7015	1	Decal-Routing, Belt
6	3290-282	2	Rivet-Blind
7	321-2	3	Screw-HH
8	3296-42	3	Nut-Lock, NI

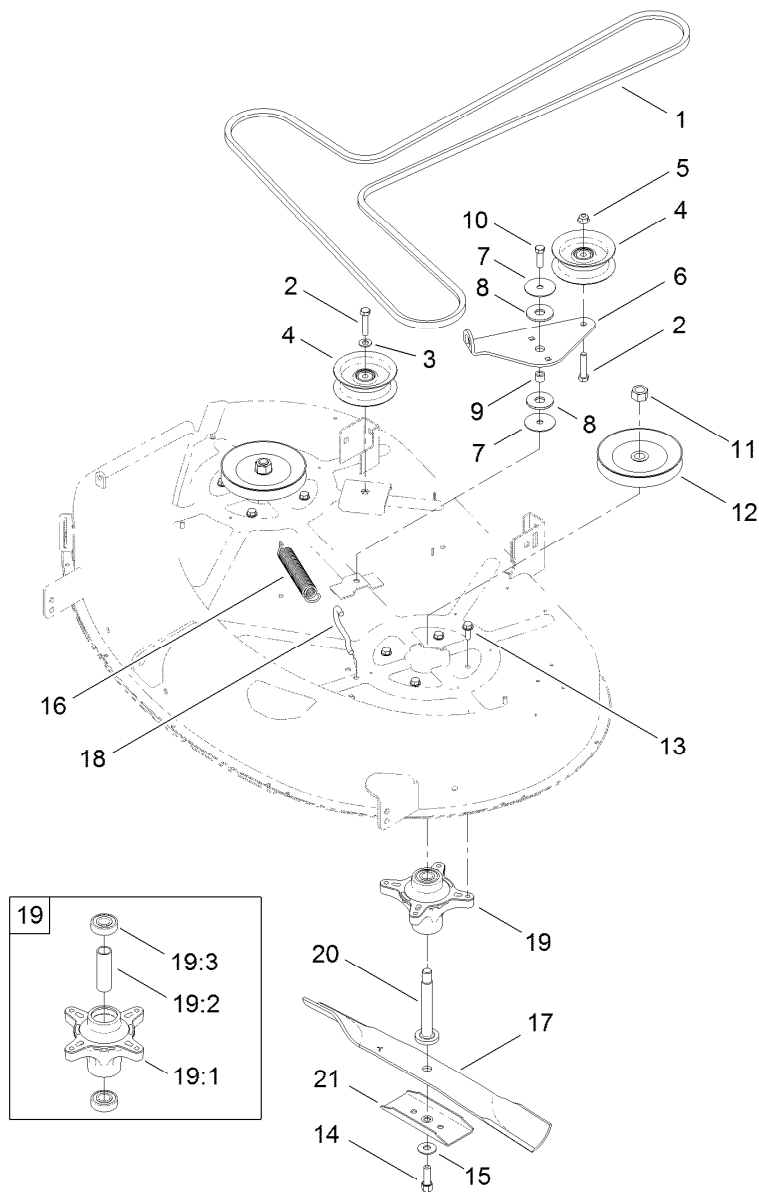

42 Inch Deck Belt, Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description
1	119-8819	1	V-Belt
2	323-9	2	Screw-HH
3	3256-24	1	Washer-Flat
4	106-2175	2	Pulley-Idler, Flat
5	104-8301	1	Nut-Flange, NI
6	114-8540	1	Arm-Idler
7	120-2229	2	Washer-Idler Pivot
8	114-0463	2	Washer-Friction, Composite
9	115-4986	1	Spacer
10	323-7	1	Screw-HH
11	3219-6	2	Nut-Hex
12	110-6864	2	Pulley


Ref.	Part Number	Qty.	Description
13	32144-41	8	Screw-Taptite
14	26-0671	2	Screw-HH
15	3290-465	2	Washer-Belleville
16	106-2177	1	Spring-Extension
17	110-6568-03	2	Blade-21.6 Inch
18	88-5970	1	Hook-Return, Spring
19	117-7439	2	Spindle ASM
19:1	117-7267	1	Spindle
19:2	117-7269	1	Spacer
19:3	100-1048	2	Bearing-Ball
20	117-7268	2	Shaft-Spindle
21	106-2248-03	2	Stiffener-Blade

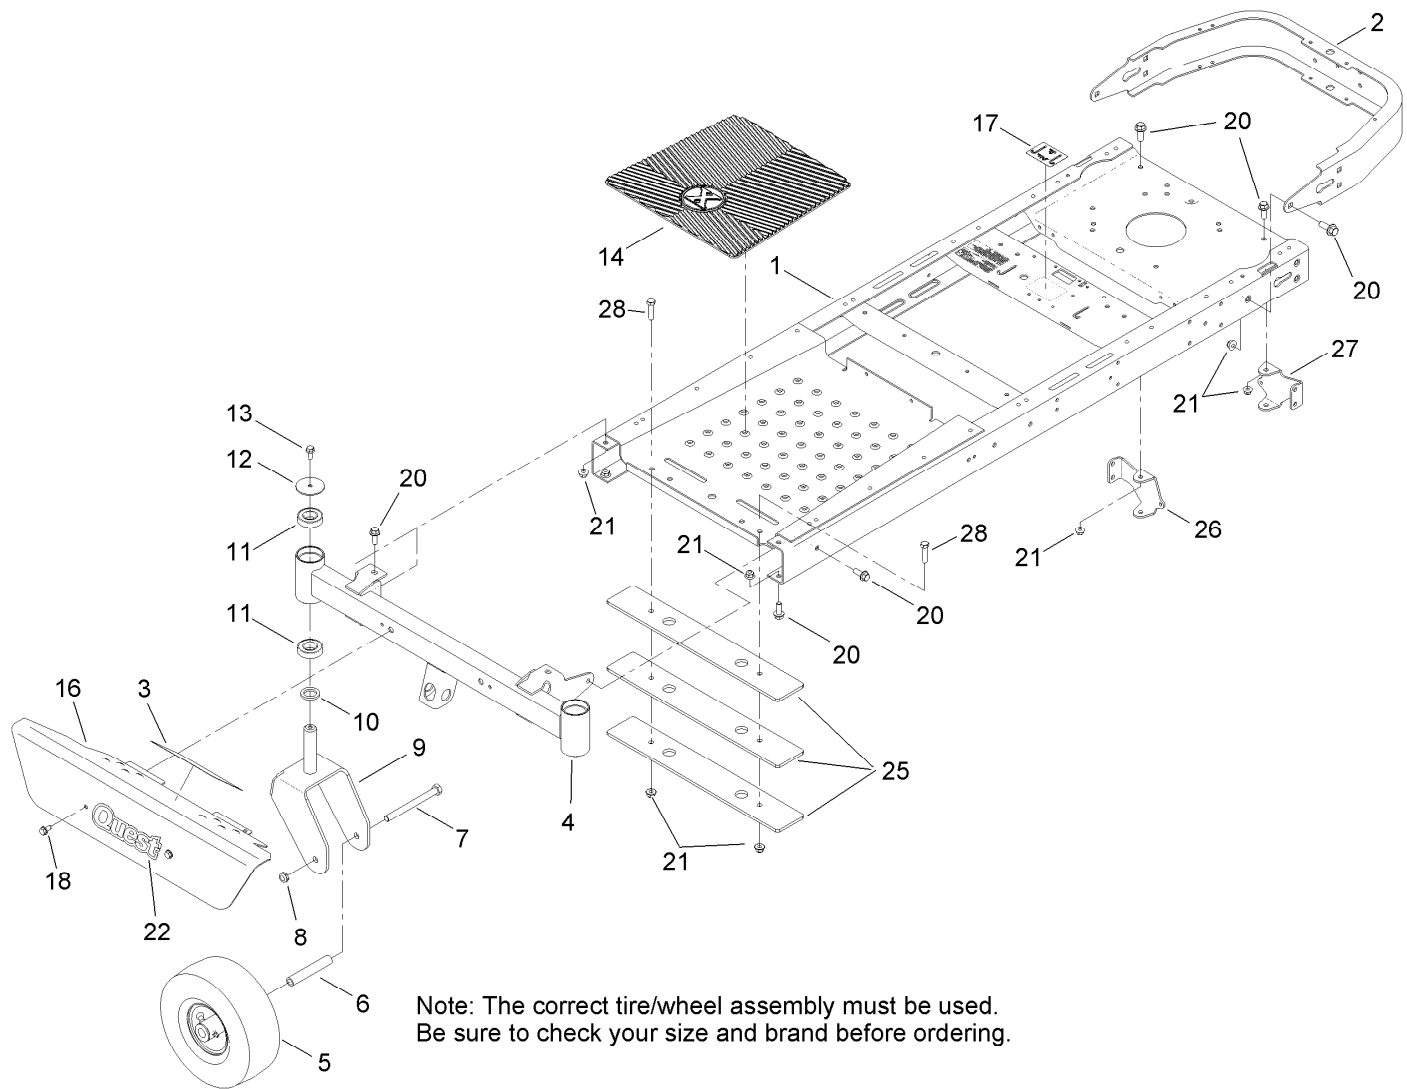

Main Frame and Front Axle Assembly


Ref.	Part Number	Qty.	Description
1	117-7260-01	1	Frame ASM
2	110-1920-01	1	Bumper-Rear
3	120-2239	1	Decal-Danger
4	120-5516-01	1	Axle-Front
5	110-6785	2	Caster Wheel ASM (Kenda)
5	120-5515	2	Caster Wheel ASM (Cst)
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH 1/2-13 X 5 1/2
8	3296-45	2	Nut-Nyloc 1/2-13 Thin
9	120-2266-01	2	Fork-Caster
10	117-7394	2	Washer-Thrust
11	109-3678	4	Bearing-Ball
12	119-8915	2	Washer

Ref.	Part Number	Qty.	Description
13	3234-47	2	Screw-HH Flg 5/16-18 X 3/4
14	120-5457	1	Mat-Floor
16	117-7332-01	1	Footrest
17	120-5465	1	Decal-Transport
18	32144-70	2	Screw-HWH 5/16-18 X 3/4 Tf
20	3234-42	14	Screw HHH 3/8-16 X 1
21	104-8301	16	Nut-Nyloc 3/8-16 Flg
22	116-4218	1	Decal
25	120-2267-01	3	Plate-Weight
26	117-7459-01	1	Mount-Hydro, Rear (RH)
27	117-7460-01	1	Mount-Hydro, Rear (LH)
28	323-8	2	Screw-HH 3/8-16 X 1 1/2

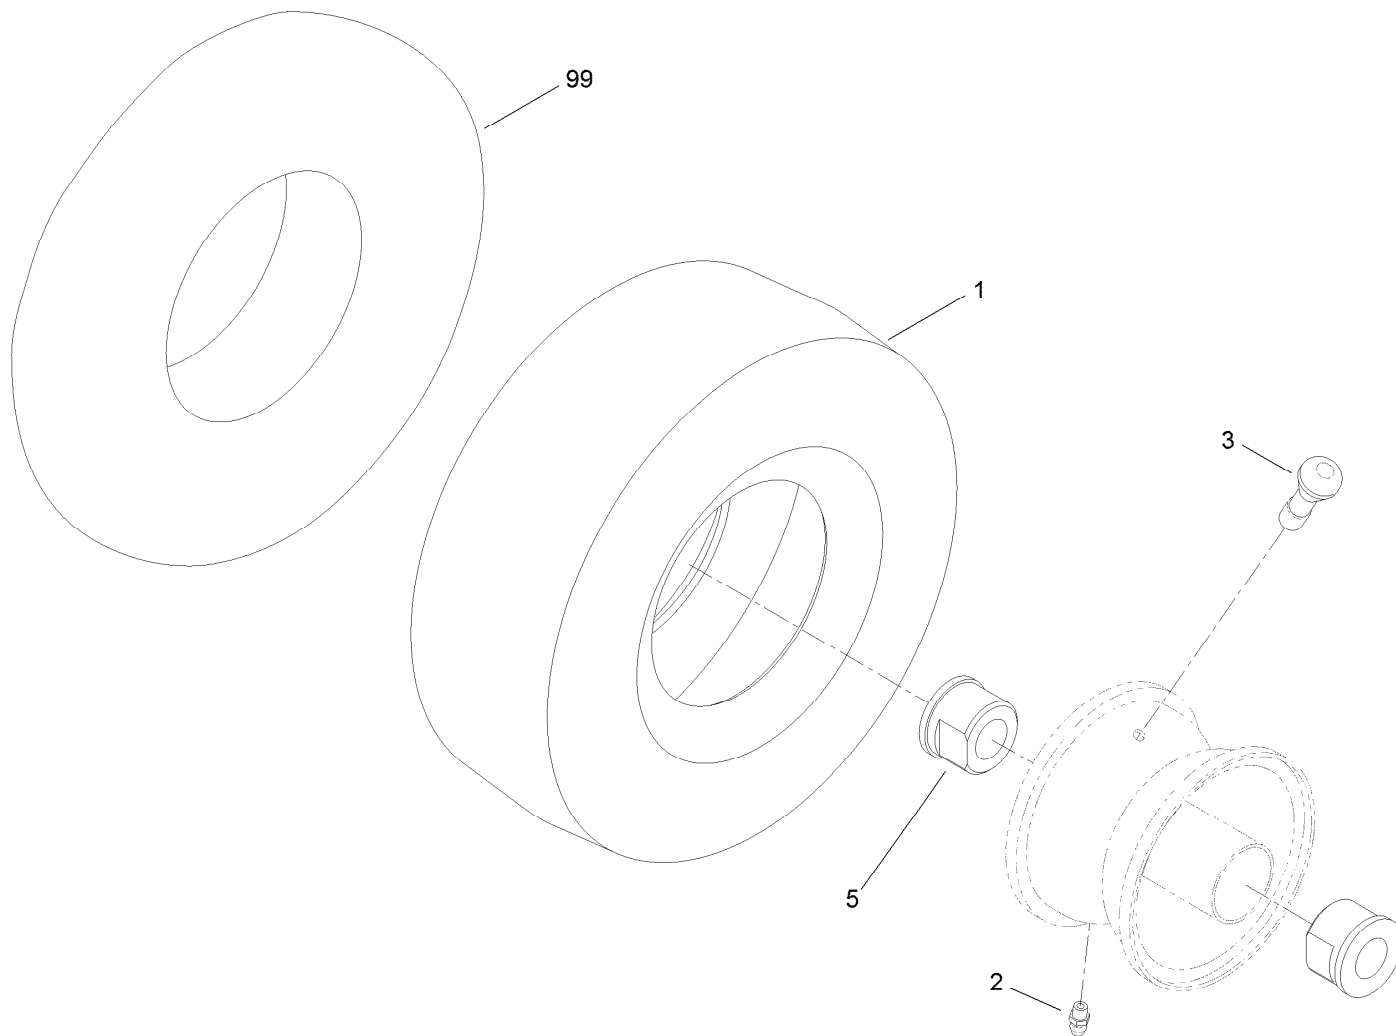


Caster Wheel Assembly No. 110-6785

Ref.	Part Number	Qty.	Description
1	110-6791	1	Tire-Smooth (Kenda)
2	302-5	1	Fitting-Grease
3	232-27	1	Stem-Valve
5	114-1640	2	Bushing-Flange
99	93-4244	1	Tube-Inner (W/Valve)

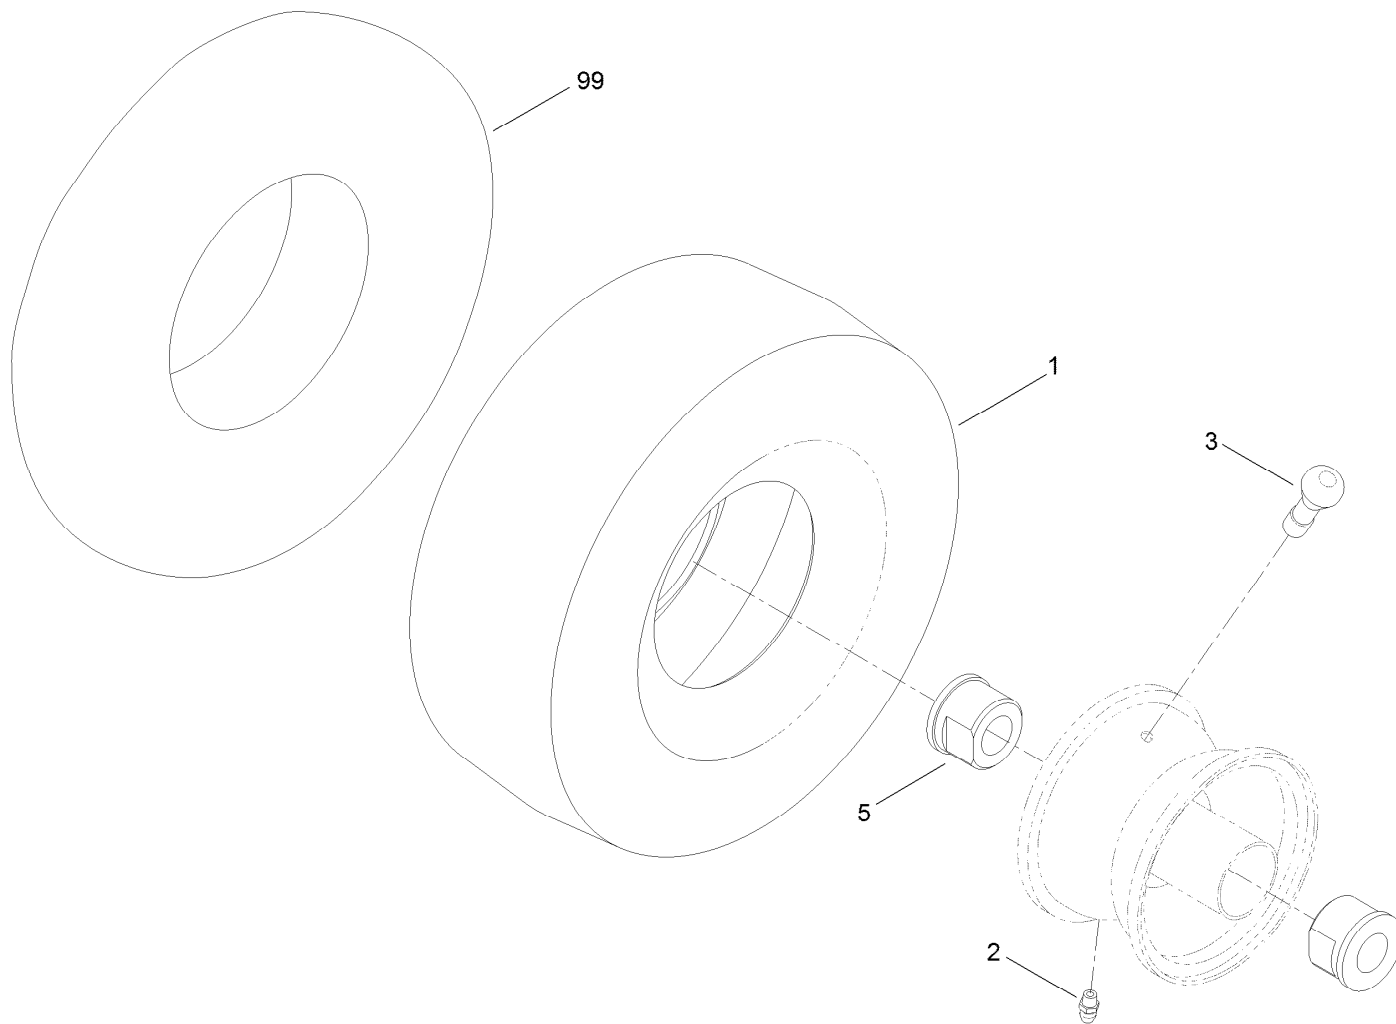

Caster Wheel Assembly No. 120-5515


Ref.	Part Number	Qty.	Description
1	120-5514	1	Tire-Smooth (Cst)
2	302-5	1	Fitting-Grease
3	232-27	1	Stem-Valve
5	114-1640	2	Bushing-Flange
99	93-4244	1	Tube-Inner (W/Valve)

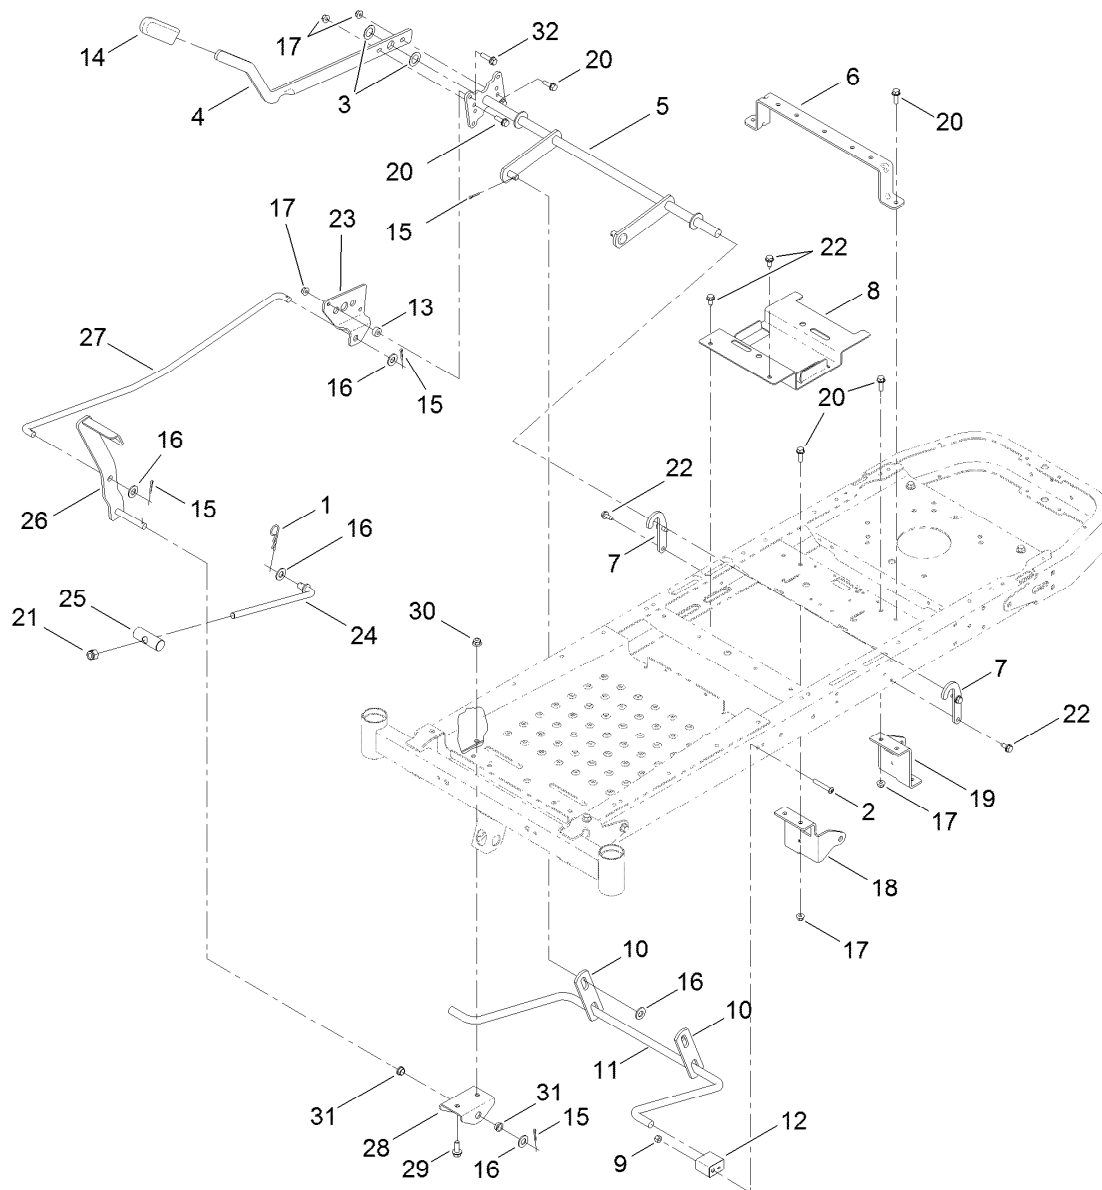

Deck Lift Assembly


Ref.	Part Number	Qty.	Description
1	1-806005	1	Hairpin-Cotter
2	120-5499	2	Screw-HSBH
3	3-6498	2	Washer-Thrust
4	119-3427-03	1	Lever-Lift
5	117-7346-03	1	Deck Lift ASM
6	119-3435-03	1	Brace-Seat, Rear
7	119-8875	2	Bracket-Lift
8	119-3406-03	1	Bracket-Battery
9	3296-29	2	Nut-Nyloc 5/16-18
10	108-7840	2	Link-Lift
11	108-7839	1	Arm-Lift, Rear
12	108-7845	2	Block-Pivot
13	112-3961	2	Spacer
14	1-633268	1	Grip-Lever
15	3272-10	5	Pin-Cotter 1/8 X 3/4
16	3256-26	6	Washer-1/2 Sae
17	104-8300	6	Nut-Nyloc 5/16-18 Flg

Ref.	Part Number	Qty.	Description
18	119-8861-01	1	Mount-Hydro, Front (RH)
19	119-8862-01	1	Mount-Hydro, Front (LH)
20	3234-29	4	Screw-HH Flg 5/16-18 X 1
21	3296-19	1	Nut-Nyloc 1/2-20
22	32144-70	6	Screw-HWH 5/16-18 X 3/4 Tf
23	120-2275	1	Plate-Footlift
24	104-8047	1	Rod-Trunion
25	119-8810	1	Pin-Pivot
26	120-2276-01	1	Pedal ASM
27	120-2242	1	Rod-Footlift
28	120-2294-01	1	Bracket-Footlift
29	3234-42	2	Screw HHH 3/8-16 X 1
30	104-8301	2	Nut-Nyloc 3/8-16 Flg
31	256-156	2	Bushing-Flange
32	3234-36	2	Screw-HH Flg 5/16-18 X 1 1/4

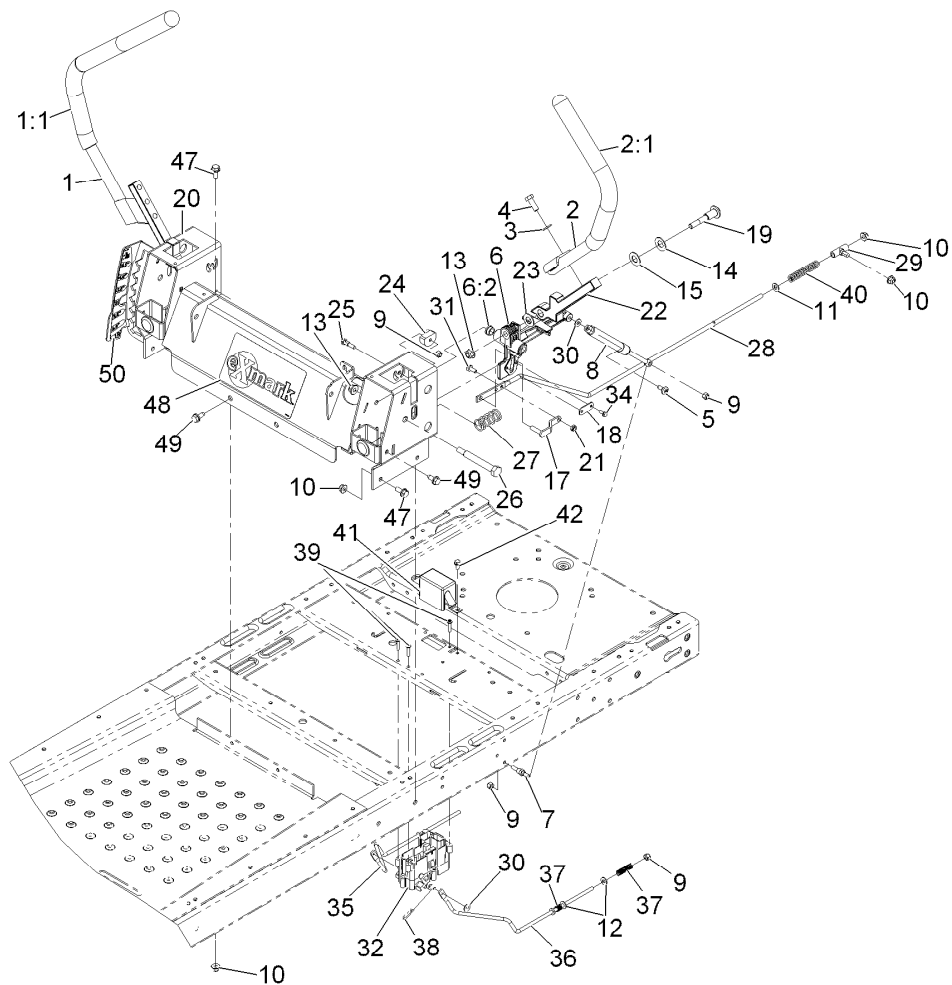

Motion Control Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	119-3486	1	RH Handle ASM	24	115-9604	2	Eccentric
1:1	108-6187	1	Grip	25	119-3301	2	Bolt-Pivot, Eccentric
2	119-3485	1	LH Handle ASM	26	115-5099	2	Bolt-Pivot
2:1	108-6187	1	Grip	27	119-8876	2	Spring-Return
3	3256-24	4	Washer-3/8 Sae	28	117-5388	2	Rod-Hydro
4	323-6	4	Screw-HH 3/8-16 X 1	29	119-8842	2	Mount-Rod, Hydro
5	112-4004	2	Screw-Shoulder	30	119-8952	4	Washer
6	119-3470	2	Actuator Arm ASM	31	321-3	2	Screw-HH 1/4-20 X 5/8
6:2	256-156	2	Bushing-Flange	32	115-9660	1	Brake Control Module ASM
7	110-6810	2	Stud-Damper	34	32144-1	4	Screw-HWH #10-24 X 1/2
8	103-2913	2	Damper-Control, Motion				Tapite
9	3296-42	8	Nut-Nyloc 1/4-20	35	119-8816	1	Rod-Brake, RH
10	104-8300	10	Nut-Nyloc 5/16-18 Flg	36	119-8817	1	Rod-Brake, LH
11	3256-23	2	Washer-5/16 Sae	37	117-1169	4	Spring-Compression
12	3256-22	4	Washer-1/4 Sae	38	3290-307	2	Pin-Hair
13	104-8301	4	Nut-Nyloc 3/8-16 Flg	39	32144-36	4	Screw-PPH
14	119-8925	2	Washer-Belleville	40	1-603807	2	Spring
15	117-1240	2	Washer	41	119-8859	1	Cover-Brake
17	119-3303	2	Pin-Rod, Hydro	42	32144-4	1	Screw-HWH 1/2-20 X 1/2
18	119-8948	2	Plate-Stop, Hydro				Tapite
19	117-1198	2	Bolt-Pivot	47	3234-47	6	Screw-HH Flg 5/16-18 X 3/4
20	119-3386-03	1	Box-Control	48	116-4219	1	Decal
21	3296-56	2	Nut-Nyloc 1/4-20 Thin	49	32144-70	4	Screw-HWH 5/16-18 X 3/4
22	115-5098-05	2	Lever-Control				Tf
23	120-2273	2	Washer-Nylon	50	119-8871	1	Decal-HOC

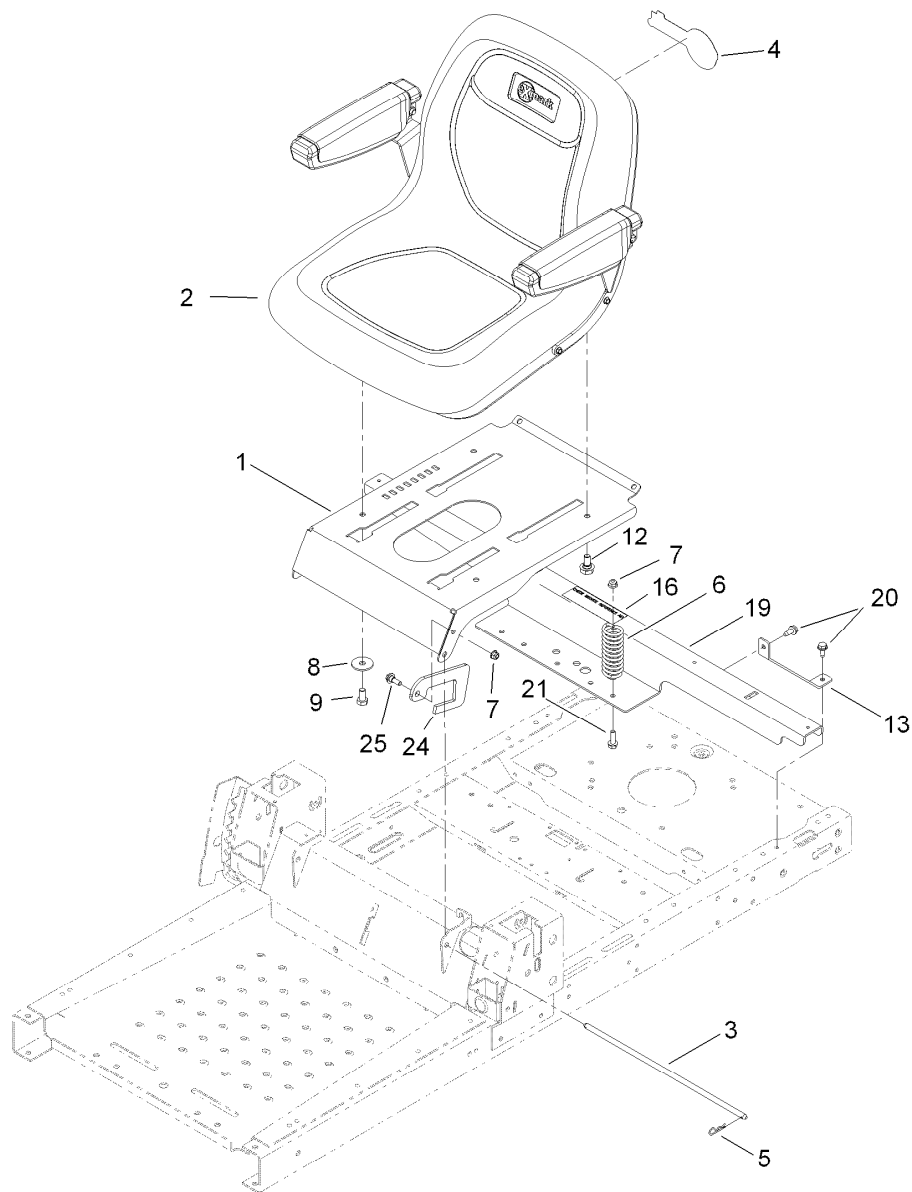

Seat Assembly

Ref.	Part Number	Qty.	Description
1	119-3391-03	1	Pan-Seat
2	119-8957	1	Seat-18 In W/Arm
3	119-3433	1	Rod-Pivot, Narrow
4	120-5464	1	Decal
5	3290-250	2	Pin-Hair
6	92-7054	3	Spring-Compression
7	104-8300	4	Nut-Nyloc 5/16-18 Flg
8	5-4460	2	Washer-Pivot
9	322-2	2	Screw-HH 5/16-18 X 5/8
12	37-8771	2	Screw-Shoulder 5/16-18 X 5/8

Ref.	Part Number	Qty.	Description
13	119-3431-03	2	Support-Tank, Rear
16	106-8717	1	Decal-Service
19	119-3436-03	1	Support-Pod
20	32144-70	4	Screw-HWH 5/16-18 X 3/4 Tf
21	3234-29	3	Screw-HH Flg 5/16-18 X 1
24	120-5512	1	Stop-Seat
25	116-2670	1	Screw-Shoulder HHF 5/16-18 X .96

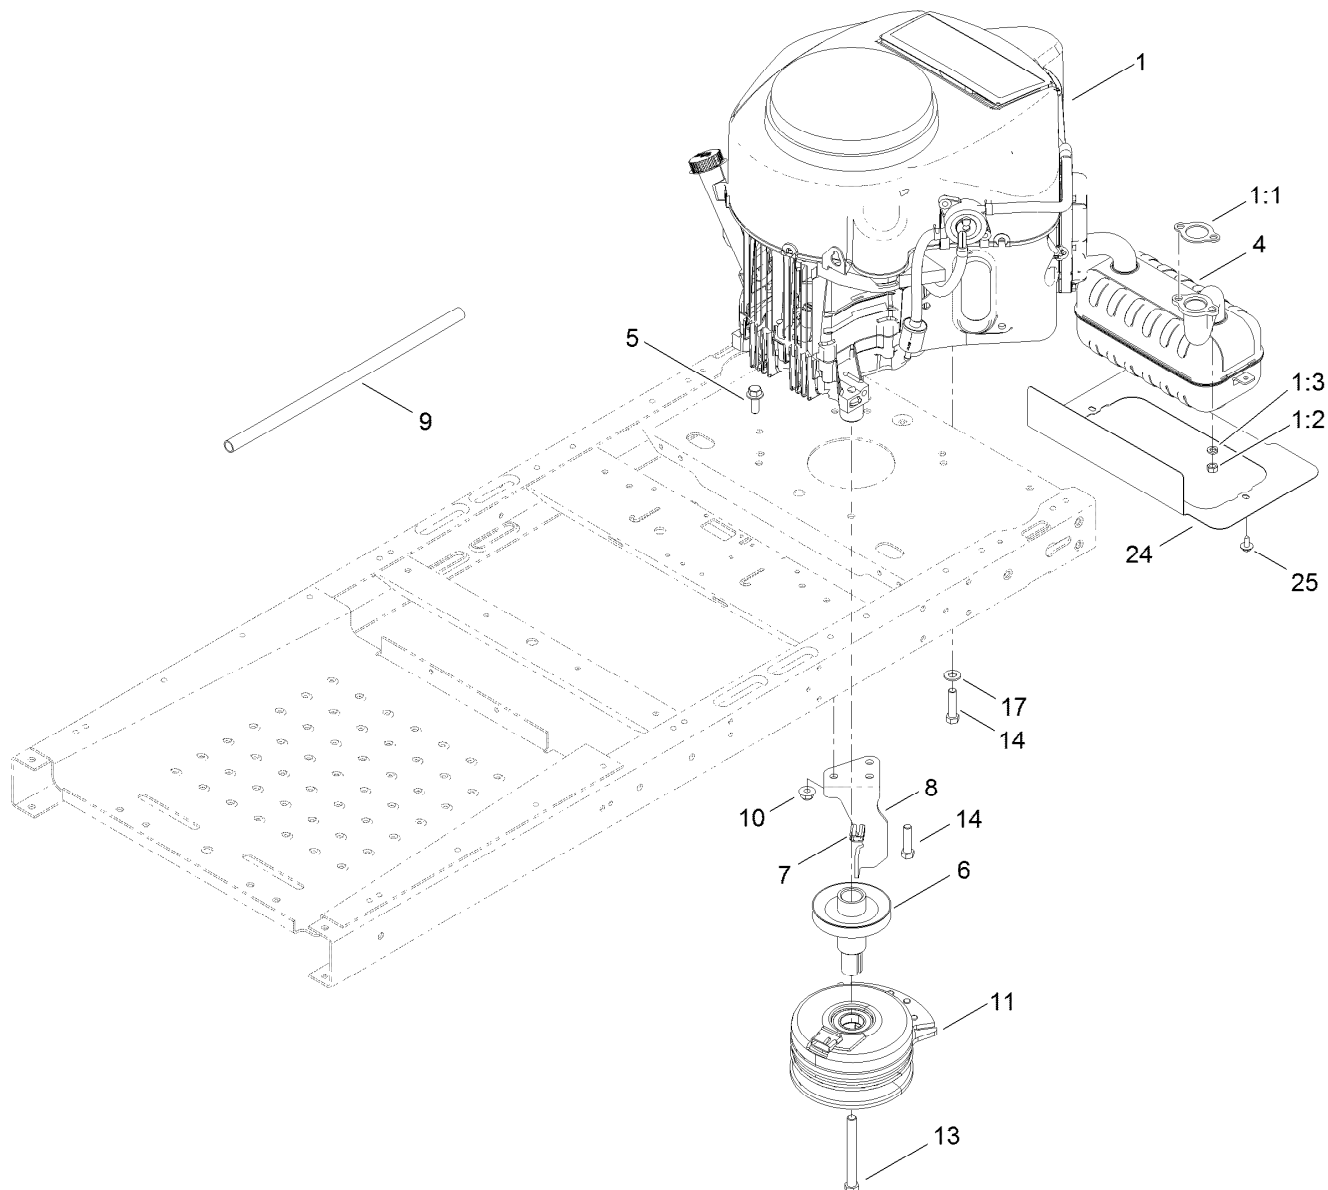


Engine, Muffler and Clutch Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fr651V-As06-R ●■
1:1	1-653313	2	Gasket-Exhaust
1:2	114-3549	4	Nut
1:3	114-3550	4	Washer-Lock, Spring
4	117-7256	1	Muffler-Kawasaki
5	3234-42	1	Screw-HHF
6	119-3318	1	Pulley-Engine
7	120-2217	1	Isolator-Clutch

Ref.	Part Number	Qty.	Description
8	119-8884	1	Stop-Clutch
9	106-7022	1	Tube-Drain, Oil
10	104-8301	1	Nut-Flange, NI
11	117-7468	1	Clutch-Electric
13	3212-16	1	Screw-HH
14	323-50	4	Bolt-HH
17	3256-24	3	Washer-Flat
24	119-8976-03	1	Shield-Heat
25	46-8560	2	Screw-HHFTF

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

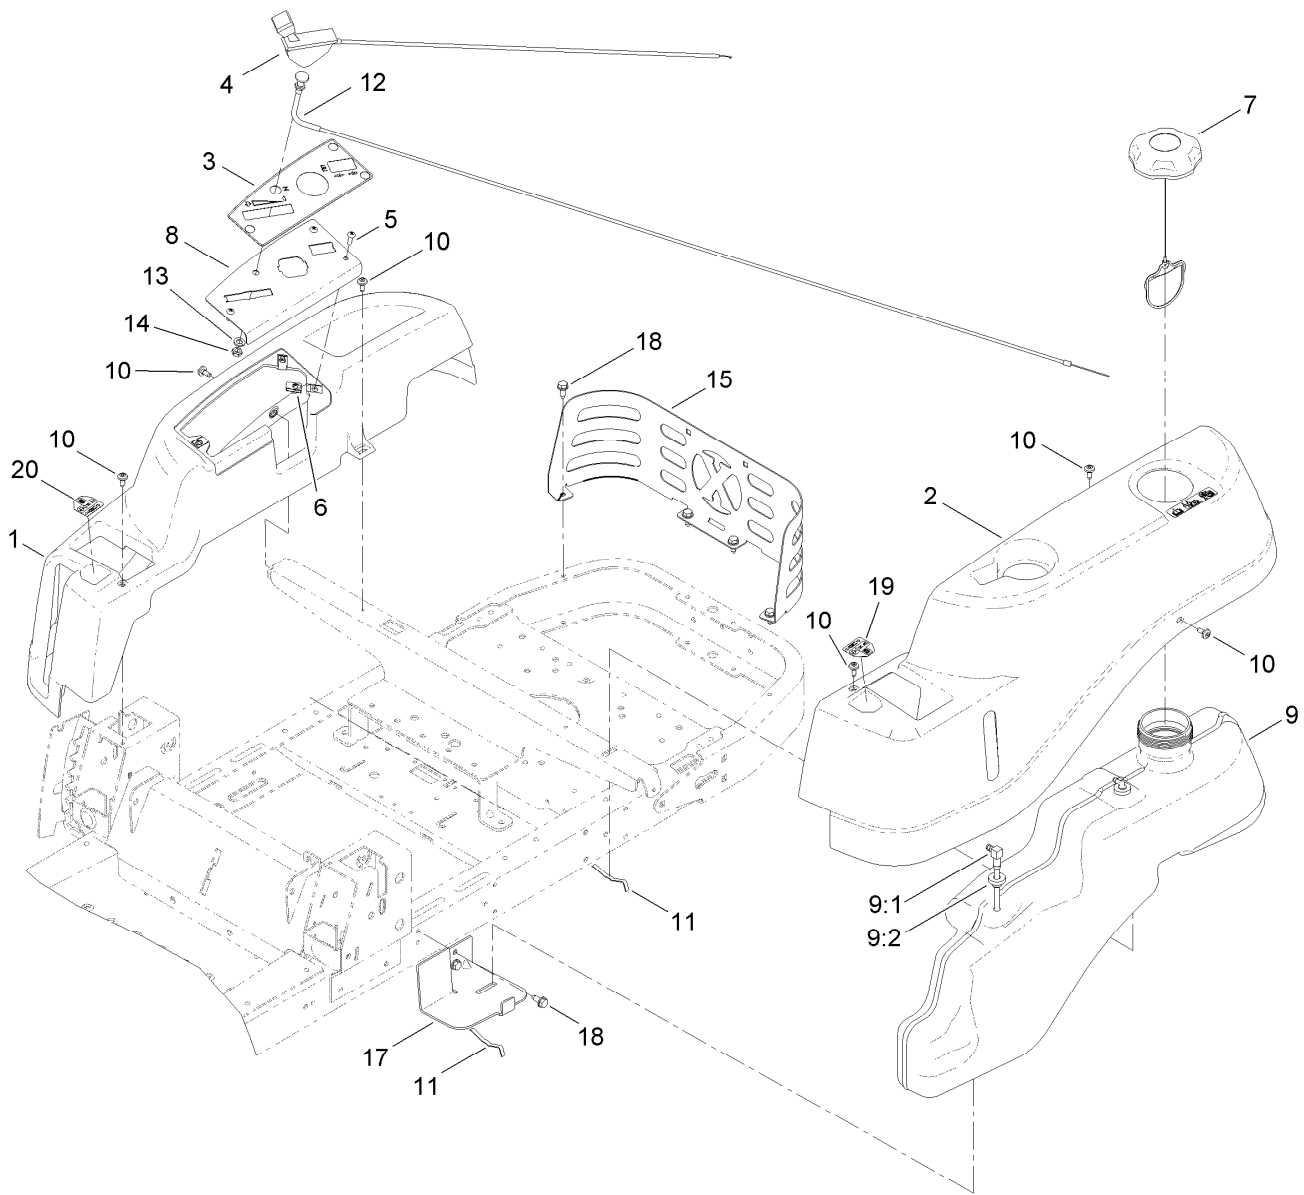

Controls and Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	119-8961	1	Pod-RH
2	119-8960	1	Pod-LH
3	120-5462	1	Decal-Control Panel
4	120-2214	1	Cable-Throttle
5	3258-166	3	Screw-PPH 1/4-20 X 3/4
6	107069	3	Nut-Retainer-Panel 1/4-20
7	120-5461	1	Cap-Fuel, Ratcheting
8	119-3378-03	1	Plate-Control
9	119-3324	1	Fuel Tank ASM
9:1	115-2564	1	Tube-Drop
9:2	46-6560	2	Bushing

Ref.	Part Number	Qty.	Description
10	112-4004	6	Screw-Shoulder
11	609830	2	Spring
12	112-9753	1	Cable-Choke
13	3253-21	1	Washer-Lock 3/8
14	3220-3	1	Nut-Jam 3/8-24
15	119-8993-03	1	Guard-Rear, Narrow
17	119-3476-03	1	Support-Tank, Front
18	32144-70	6	Screw-HWH 5/16-18 X 3/4 Tf
19	119-8814	1	Decal-Control Lever, LH
20	119-8815	1	Decal-Control Lever, RH

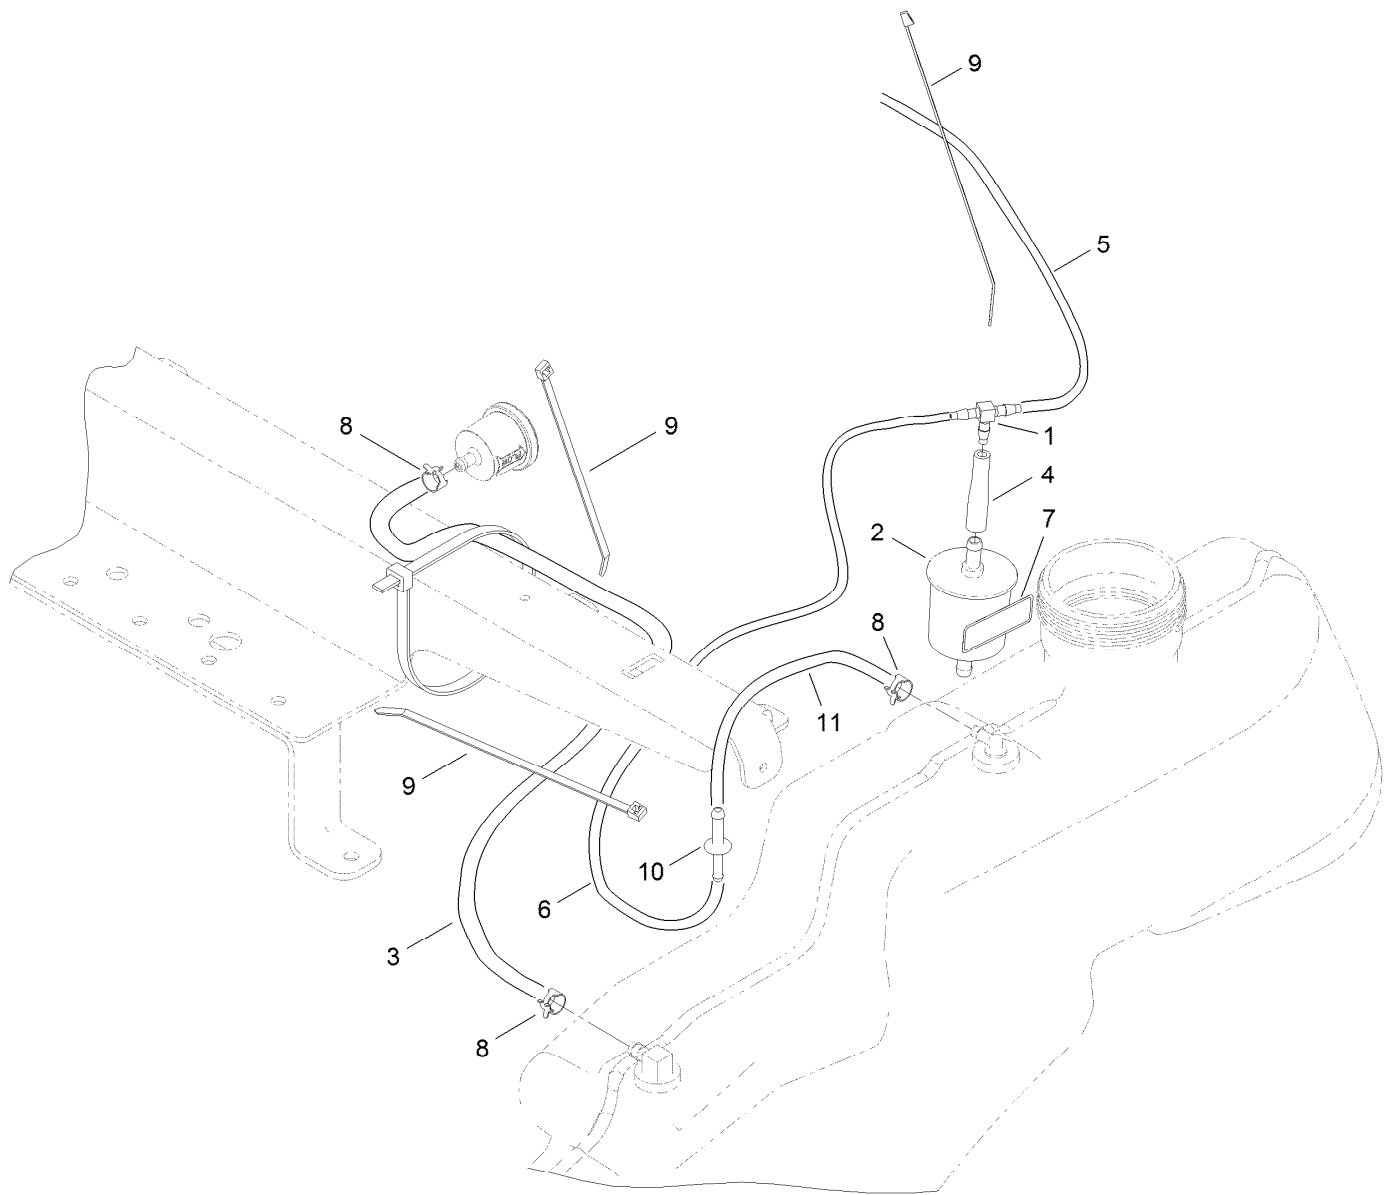

Fuel Delivery Assembly


Ref.	Part Number	Qty.	Description
1	120-2234	1	Fitting-Tee
2	120-2235	1	Filter-Air
3	110-5701	1	Hose-Fuel
4	120-2272	1	Hose-Fuel, Molded
5	119-8150	1	Hose-Fuel
6	119-8150	1	Hose-Fuel
7	116-4769	1	Decal-Filter, Emissions
8	2412-98	3	Clamp
9	614249	3	Strap-Tie
10	117-5399	1	Adaptor-Orifice
11	110-1876	1	Hose-Fuel

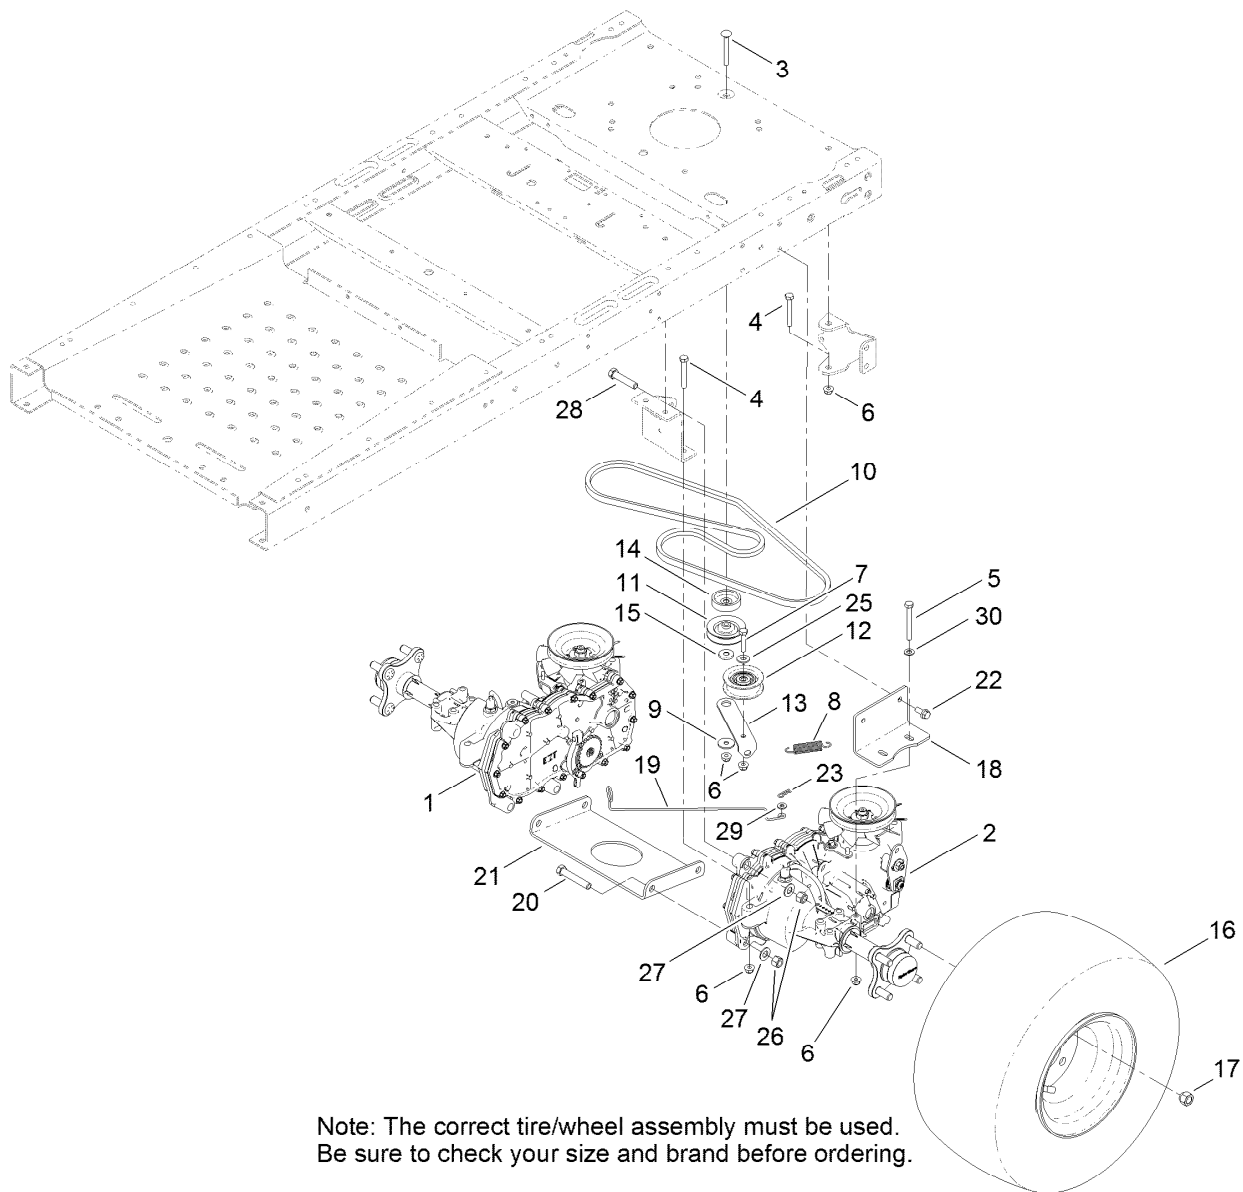

Hydro Transaxle Drive and Rear Wheel Assembly


Ref.	Part Number	Qty.	Description
1	119-3331	1	Transaxle-Hydro, RH
2	119-3330	1	Transaxle-Hydro, LH
3	3230-8	1	Screw-CARR
4	322-11	4	Screw-HH
5	322-13	4	Screw-HH
6	104-8300	14	Nut-Flange, NI
7	322-7	1	Screw-HH
8	104-6415	1	Spring-Return, Pedal
9	5-4460	1	Washer-Pivot
10	119-3309	1	V-Belt
11	119-8822	1	Pulley-Idler
12	106-2176	1	Pulley-Idler
13	119-3326	1	Arm-Idler
14	119-3353	1	Spacer
15	119-3327	1	Spacer-Arm, Idler
16	119-3465	2	Wheel And Tire ASM (Kenda)

Ref.	Part Number	Qty.	Description
16	120-5523	2	Wheel And Tire ASM (Premium)
17	242-50	8	Nut-Lug
18	117-7264-03	2	Mount-Hydro
19	119-3464	2	Rod-Bypass
20	324-10	4	Screw-HH
21	119-3339-03	1	Cross Plate-Hydro
22	3234-29	4	Screw-HHF
23	3290-307	2	Pin-Hair
25	3256-3	1	Washer-Flat
26	3296-48	6	Nut-Lock, NI
27	3256-25	6	Washer-Flat
28	324-8	2	Screw-HH
29	3256-22	2	Washer-Flat
30	3256-23	4	Washer-Flat

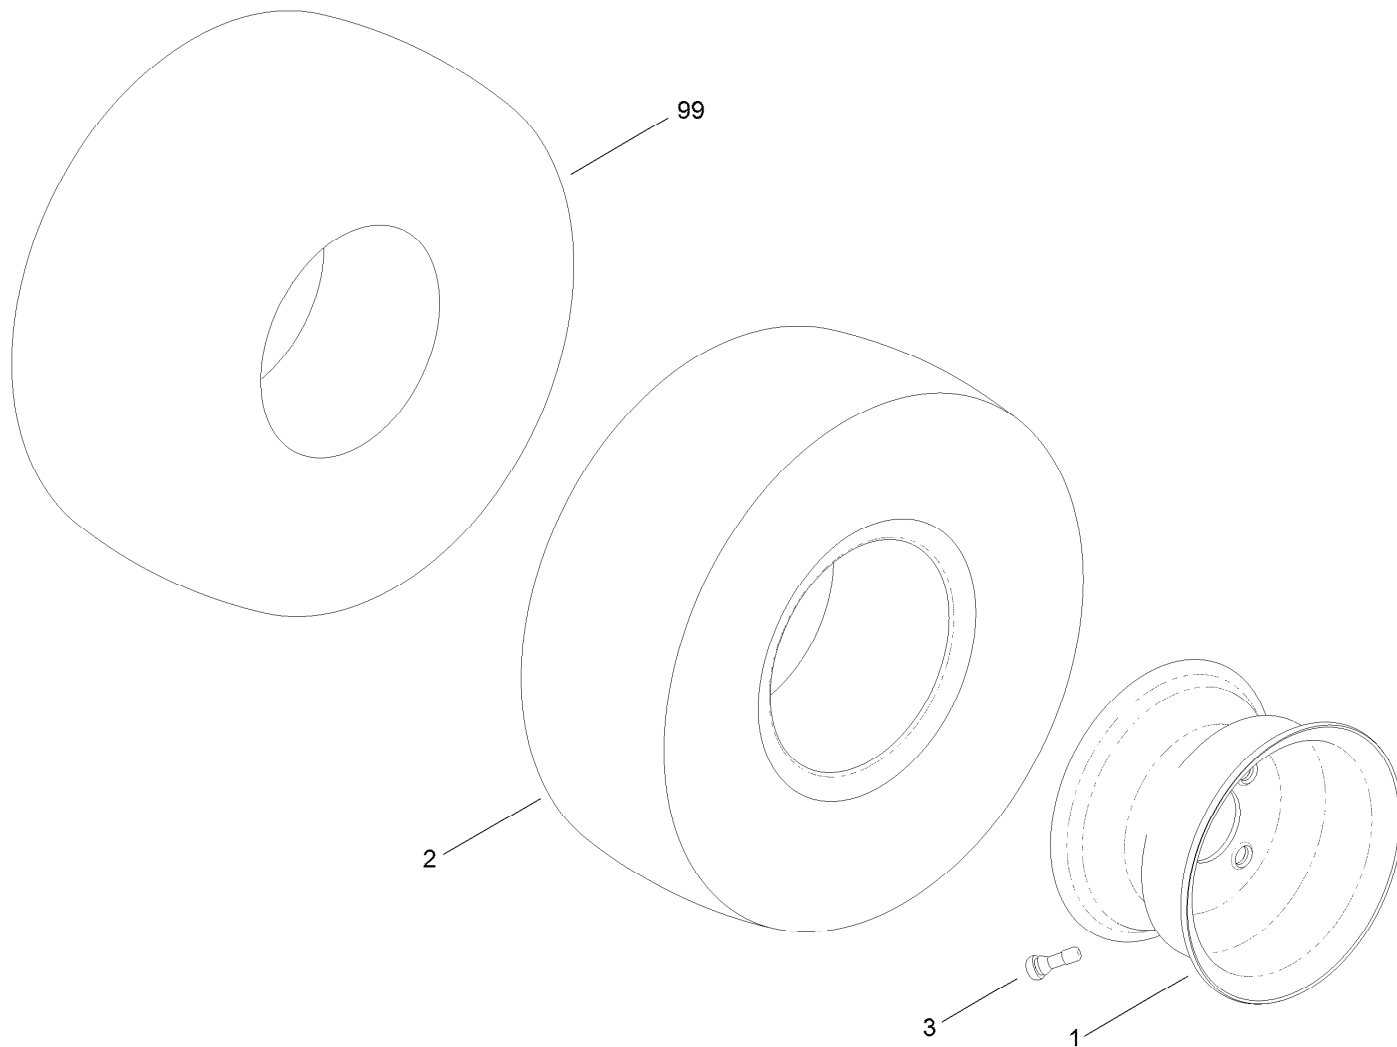

Wheel and Tire Assembly No. 119-3465


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	107-2475	1	Wheel
2	110-6885	1	Tire (Kenda)
3	232-27	1	Stem-Valve
99	107-2491	1	Tube-Tire

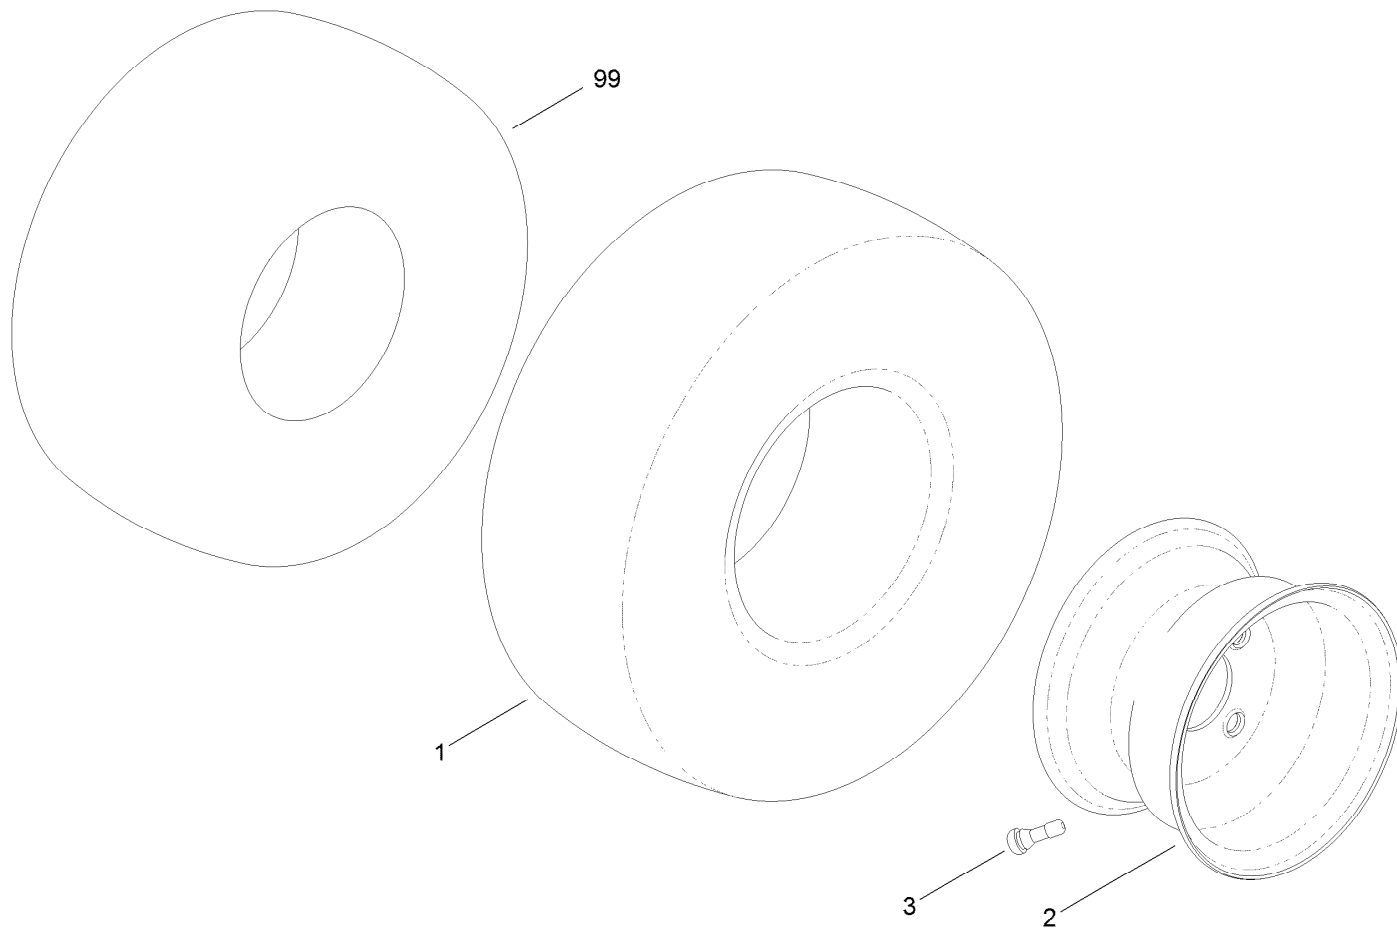

Wheel and Tire Assembly No. 120-5523

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-8907	1	Tire (Premium)
2	107-2475	1	Wheel
3	232-27	1	Stem-Valve
99	107-2491	1	Tube-Tire

Right Hand Hydro Transaxle Assembly No. 119-3331

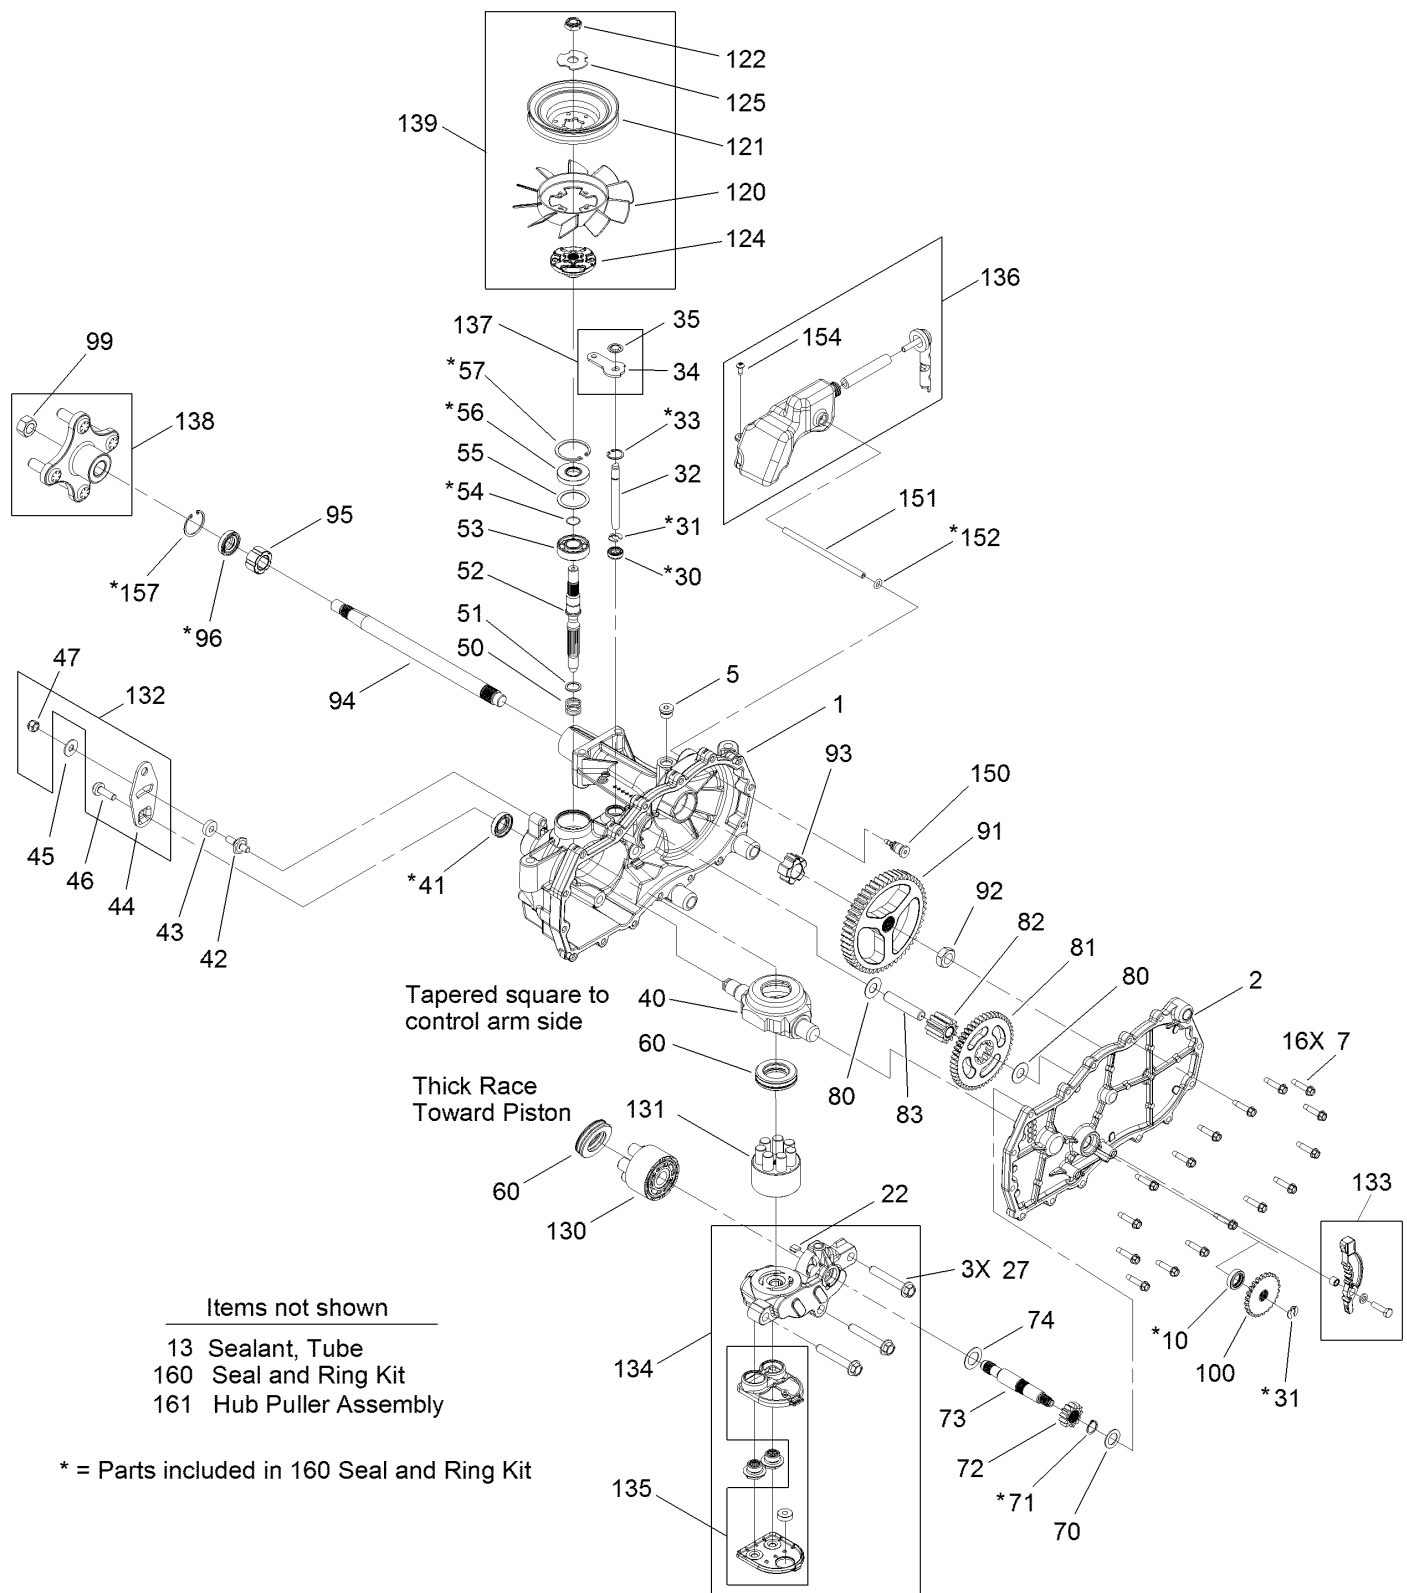


Right Hand Hydro Transaxle Assembly No. 119-3331 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-5531	1	Main Housing ASM	74	104-5360	1	Washer-Shaft, Motor
2	120-5533	1	Housing Side Kit	80	119-5541	2	Washer
5	104-2189	1	Plug-Thread, Straight	81	104-5317	1	Gear
7	117-5359	16	Screw-Hfhcs	82	104-5318	1	Gear-Jackshaft, 10T
10	120-5535	1	Seal-Lip	83	104-5329	1	Pin-Jackshaft
13	104-2147	1	Sealant ●	91	120-5539	1	Gear-Bull
22	114-1680	1	Plate-Bypass	92	104-2142	1	Nut-HJ
27	120-5536	3	Bolt-Hex Flange	93	115-8314	1	Bushing-Inboard
30	106-8676	1	Seal-Lip	94	120-5540	1	Shaft-Axle
31	106-8677	1	Ring-Retaining, EXT	95	120-5541	1	Bearing-Sleeve
32	106-8678	2	Rod-Bypass	96	120-5542	1	Seal-Lip
33	106-8679	1	Ring-Retaining, Int	99	120-5543	1	Nut-Hex Lock
34	107-2490	1	Arm-Bypass	100	106-8694	1	Disc-Brake, Cog
35	106-8681	1	Ring-Retaining, EXT	120	120-5544	1	Fan-6 Inch
40	104-5304	1	Swashplate-Trunnion	121	120-5545	1	Pulley
41	104-5313	1	Seal-Lip	122	105-1875	1	Nut-Lock
42	104-2116	1	Stud	124	120-5546	1	Hub
43	112-9853	1	Puck-Friction	125	107-9122	1	Washer-Slotted
44	106-8747	1	Arm-Control	130	103-2666	1	Cylinder Block Kit
45	114-8491	1	Washer	131	110-8561	1	Pump Block ASM
46	107-2488	1	Screw	132	117-5362	1	Arm Control Kit
47	105-1872	1	Nut	133	106-8688	1	Brake Arm Kit
50	120-5537	1	Spring-Compression	134	112-9862	1	Center Section Filter Kit
51	120-5538	1	Washer	135	114-1634	1	Filter Kit
52	104-5306	1	Shaft-Input	136	120-5547	1	Expansion Tank Kit
53	104-5311	1	Bearing-Ball	137	107-2489	1	Bypass Arm Kit
54	104-5307	1	Ring-Retaining	138	120-7101	1	Hub Kit
55	104-5308	1	Spacer	139	105-1928	1	Fan Pulley Kit
56	104-5310	1	Seal-Lip	150	104-5349	1	Fitting-Sae
57	104-5309	1	Ring-Retaining	151	115-8302	1	Hose
60	94-6922	1	Bearing-Thrust	152	104-5361	1	O-Ring
70	104-5339	1	Washer-Flat	154	120-7100	1	Bolt-Self Tapping
71	104-5340	1	Ring-Retaining	157	120-7102	1	Ring-Retaining
72	104-5316	1	Gear-Pinnion, 13T	160	120-7103	1	Seal And Ring Kit ●
73	106-8683	1	Shaft-Motor	161	114-8467	1	Hub-Puller, 4 Bolt ●

● Not illustrated


Left Hand Hydro Transaxle Assembly No. 119-3330

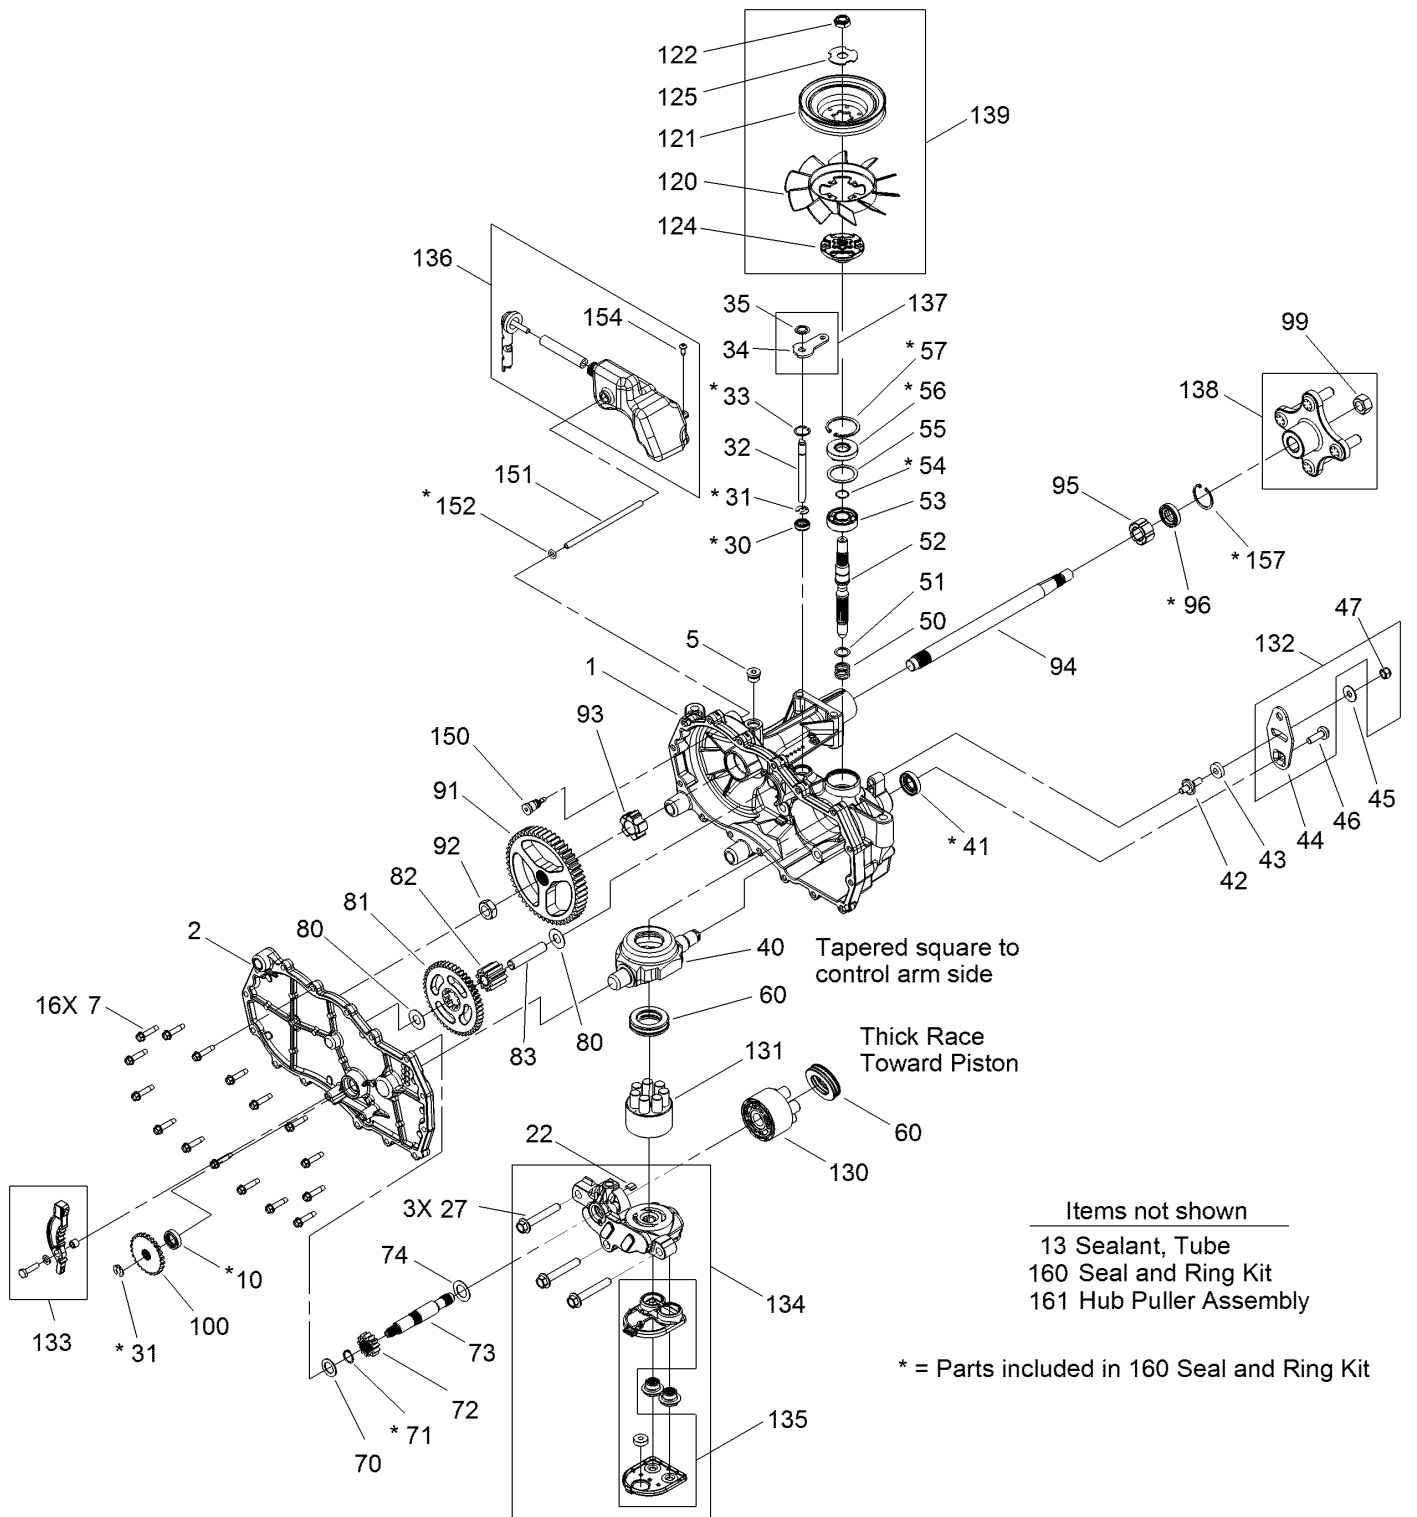

Left Hand Hydro Transaxle Assembly No. 119-3330 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-5532	1	RH Main Housing ASM	74	104-5360	1	Washer-Shaft, Motor
2	120-5534	1	RH Housing Side Kit	80	119-5541	2	Washer
5	104-2189	1	Plug-Thread, Straight	81	104-5317	1	Gear
7	117-5359	16	Screw-Hfhcs	82	104-5318	1	Gear-Jackshaft, 10T
10	120-5535	1	Seal-Lip	83	104-5329	1	Pin-Jackshaft
13	104-2147	1	Sealant ●	91	120-5539	1	Gear-Bull
22	114-1680	1	Plate-Bypass	92	104-2142	1	Nut-HJ
27	120-5536	3	Bolt-Hex Flange	93	115-8314	1	Bushing-Inboard
30	106-8676	1	Seal-Lip	94	120-5540	1	Shaft-Axle
31	106-8677	1	Ring-Retaining, EXT	95	120-5541	1	Bearing-Sleeve
32	106-8678	2	Rod-Bypass	96	120-5542	1	Seal-Lip
33	106-8679	1	Ring-Retaining, Int	99	120-5543	1	Nut-Hex Lock
34	107-2490	1	Arm-Bypass	100	106-8694	1	Disc-Brake, Cog
35	106-8681	1	Ring-Retaining, EXT	120	120-5544	1	Fan-6 Inch
40	104-5304	1	Swashplate-Trunnion	121	120-5545	1	Pulley
41	104-5313	1	Seal-Lip	122	105-1875	1	Nut-Lock
42	104-2116	1	Stud	124	120-5546	1	Hub
43	112-9853	1	Puck-Friction	125	107-9122	1	Washer-Slotted
44	106-8747	1	Arm-Control	130	103-2666	1	Cylinder Block Kit
45	114-8491	1	Washer	131	110-8561	1	Pump Block ASM
46	107-2488	1	Screw	132	117-5362	1	Arm Control Kit
47	105-1872	1	Nut	133	106-8688	1	Brake Arm Kit
50	120-5537	1	Spring-Compression	134	112-9861	1	Center Section Filter Kit
51	120-5538	1	Washer	135	114-1634	1	Filter Kit
52	104-5306	1	Shaft-Input	136	120-5548	1	Expansion Tank Kit
53	104-5311	1	Bearing-Ball	137	107-2489	1	Bypass Arm Kit
54	104-5307	1	Ring-Retaining	138	120-7101	1	Hub Kit
55	104-5308	1	Spacer	139	105-1928	1	Fan Pulley Kit
56	104-5310	1	Seal-Lip	150	104-5349	1	Fitting-Sae
57	104-5309	1	Ring-Retaining	151	115-8302	1	Hose
60	94-6922	1	Bearing-Thrust	152	104-5361	1	O-Ring
70	104-5339	1	Washer-Flat	154	120-7100	1	Bolt-Self Tapping
71	104-5340	1	Ring-Retaining	157	120-7102	1	Ring-Retaining
72	104-5316	1	Gear-Pinnion, 13T	160	120-7103	1	Seal And Ring Kit ●
73	106-8683	1	Shaft-Motor	161	114-8467	1	Hub-Puller, 4 Bolt ●

● Not illustrated

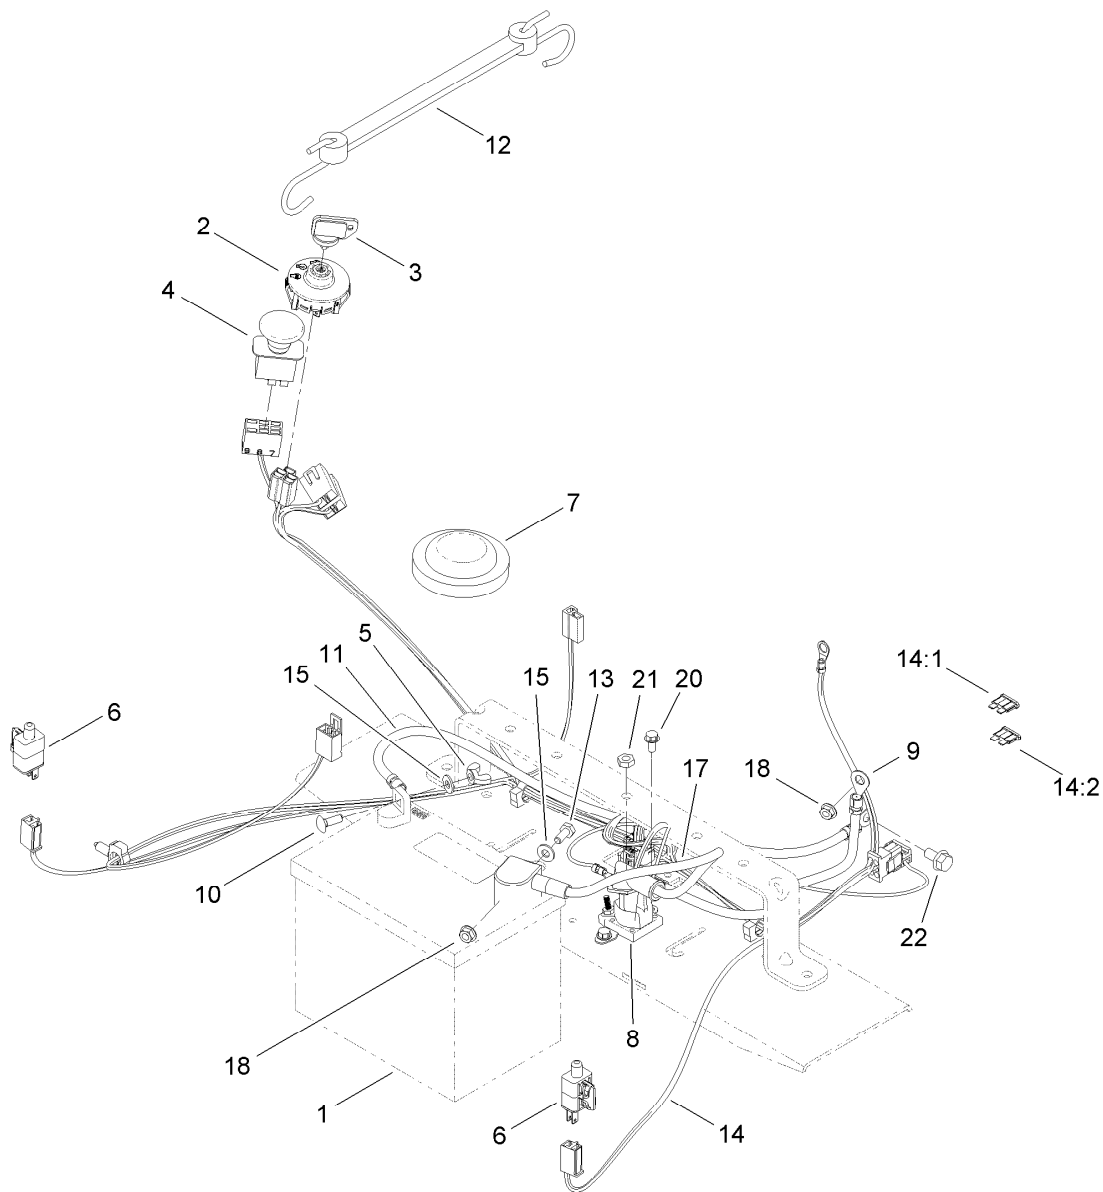

Electrical Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1		1	Battery ●	13	321-3	1	Screw-HH 1/4-20 X 5/8
2	117-2221	1	Switch-Ignition	14	119-3343	1	Harness-Wire
3	103-2106	1	Key-Exmark Logo	14:1	109103	1	Fuse-Blade, 30 Amp
4	103-5221	1	Switch-PTO	14:2	109102	1	Fuse-Blade, 25 Amp
5	32103-22	1	Nut-Wing	15	3256-22	2	Washer-1/4 Sae
6	110-6765	2	Switch-Single Pole No	17	119-8897	1	Cable-Battery, Red
7	100-3524	1	Switch-Seat	18	32128-33	2	Nut-Whizlock 1/4-20
8	117-1197	1	Solenoid	20	32144-4	2	Screw-HWH 1/2-20 X 1/2
9	119-8898	1	Cable-Battery, Red				Taptite
10	3229-1	1	Bolt-Carriage 1/4-20 X 3/4	21	3220-2	2	Nut-Jam 5/16-24
11	119-8899	1	Cable-Battery, Black	22	33104-016	1	Screw-HHF
12	104-2466	1	Holddown-Battery				

● Not serviced separately

Notes:

Notes:

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK.

4-CYCLE PREMIUM ENGINE OIL

Part No. 116-3373

Both SAE 30 and SAE 10W-30 in one bottle.

Contains increased levels of zinc and phosphorus for better lubricity.

No Viscosity Index Improvers that tend to shear down in high heat.

Synthetic formulation.

Gas & Diesel compatible.

Anti-corrosion additives.

API 'SL' and JASO rated with wet clutch compatibility for other machines.

PREMIUM HYDRO OIL

Part No. 109-9828

Commercial quality for tough, high-heat conditions.

Designed specifically for zero-turn mower hydraulic systems.

Superior shear resistance under heavy loads.



Available from your local Exmark dealer. Find your closest dealer at exmark.com

SEE EXMARK'S COMPLETE LINE OF ACCESSORIES AND OPTIONS

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	ROLL OVER PROTECTION SYSTEM (ROPS)
DECK LIFT ASSIST KIT	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	TURF STRIPER
12V POWER PORT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2011 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4500-845 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

