




PIONEER S-SERIES

Model No. PNS20KA443—Serial No. 920000 and Up

Picture below may not reflect actual product.

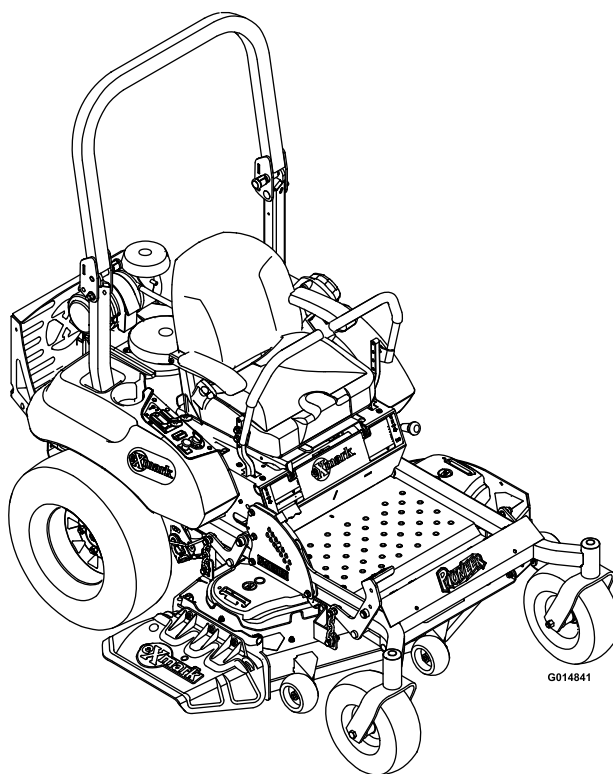

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HOC: height-of-cut	RRB: rear roller brush
ASM: assembly	HSBH: hex socket button head	SFH: slotted fillister head
BBC: blade brake control	HSFH: hex socket flat head	SHH: slotted hex head
BHTF: button head thread forming	HSH: hex socket head	SHWH: slotted hex washer head
CARR: carriage	HWH: hex washer head	SPH: slotted pan head
CCW: counter clockwise	HWTF: hex washer head thread forming	SQH: square head
CW: clockwise	HYD: hydraulic	SRH: slotted round head
DEG: degrees	LH: left hand	STD: standard
DPA: Dual Point Adjustment	LP: Liquid Propane	TAP: self tapping
ECM: electronic control module	NI: nylon insert	TTH: torx truss head
EXT: external	NPTF: national pipe thread fine	
FH: flat head	PFH: phillips flat head	
GA: gauge	PPH: phillips pan head	
HD: heavy-duty	PPHTF: phillips pan head thread forming	
HF: hex flange	PRH: phillips round head	
HH: hex head	PTH: phillips truss head	
HHF: hex head flange	PTO: power-take-off	
HHFTF: hex head flange thread forming	RH: right hand	
HJ: hex jam	ROPS: roll-over protection system	
HLH: hex lag head		

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

EXMARK PARTS PLUS

PARTS


OVERNIGHT

OR *FREE**

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)


Contents

Complete Deck Assembly No. 116-4810	5
Deck Assembly	6
Deck W/Decals Assembly No. 116-3194	7
Main Frame Assembly	8
Main Frame W/Decals Assembly No. 116-4095	9
Caster Wheel Assembly No. 103-5189	10
Roll-Over Protection System Assembly No. 116-3498	11
Deck Lift Assembly	12
Motion Control Assembly	13
Motion Control Assembly - LH	14
Motion Control Assembly - RH	15
Seat Assembly	16
Seat W/Tracks Assembly No. 116-3692	17
Controls Assembly	18
Fuel Tank Mounting Assembly	19
Fuel Tank Assembly No. 116-4610	20
Engine Assembly	21
Hydraulic Assembly	22
Transaxle Assembly	23
Electrical Assembly	24

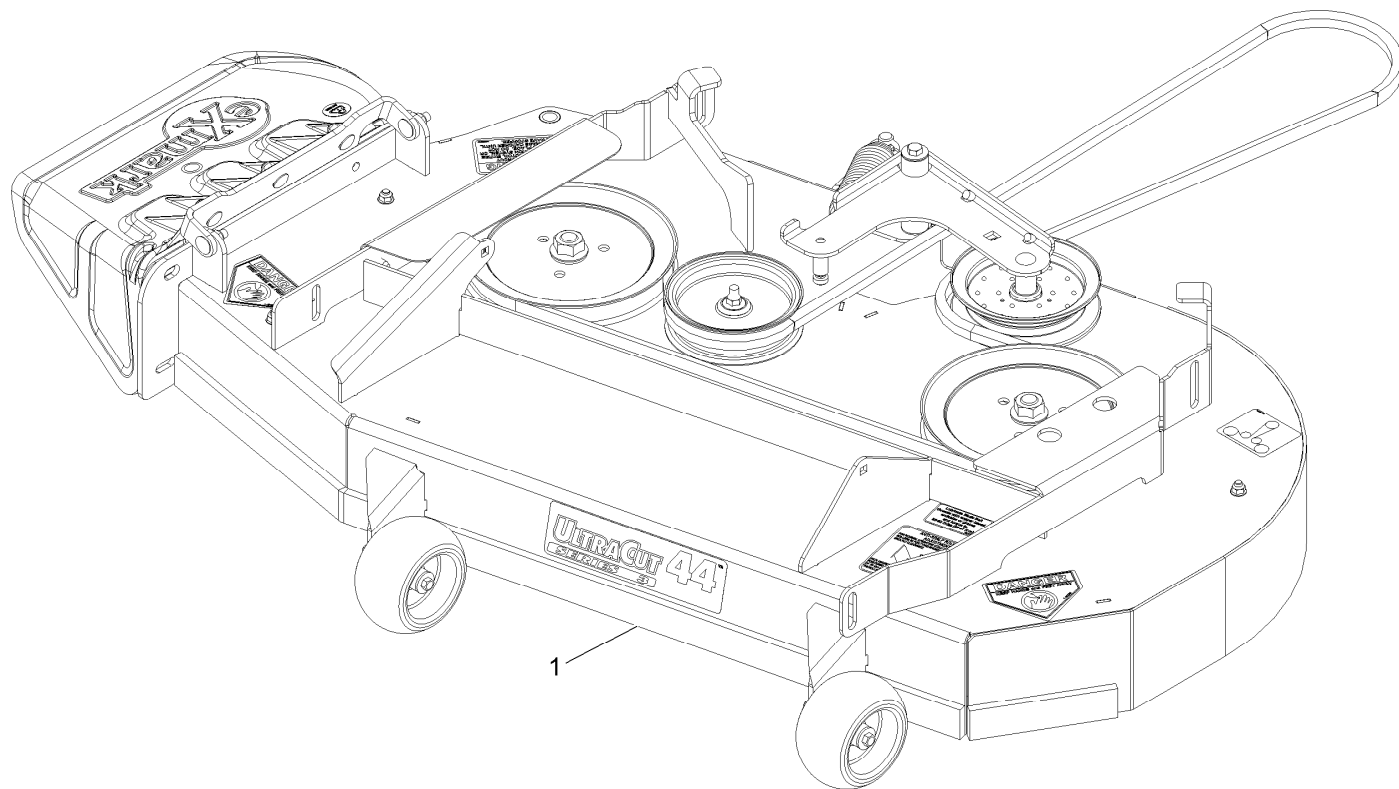

Complete Deck Assembly No. 116-4810

Ref.	Part Number	Qty.	Description
1	116-4810	1	ASM-Deck Complete 443

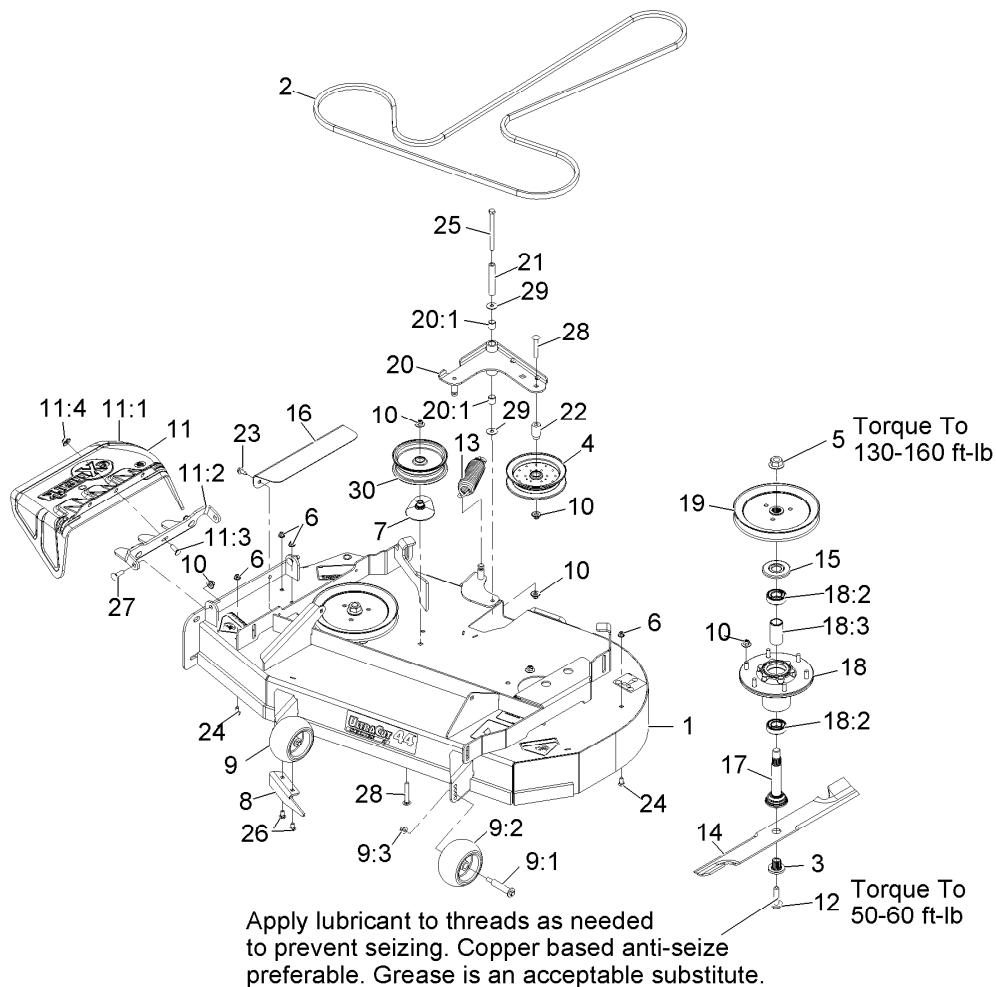


Deck Assembly

Ref.	Part Number	Qty.	Description
1	116-3194	1	ASM-Deck W/Decals 44
2	1-413093	1	Belt - V, B
3	103-3037	2	Bushing,Splined
4	103-8743	1	Pulley-Idler, Flanged
5	104-0753	2	Nut-Hex 3/4-16 Flg Special
6	104-8300	4	Nut-Nyloc 5/16-18 Flg
7	109-2872	1	Spacer-Pulley
8	109-5498-03	1	Baffle-Discharge
9	109-6388	2	Anti-Scalp Roller Kit
9:1	112-3977	1	Bolt-HH Shoulder 3/8-16 X 3.79
9:2	1-603299	1	Roller-Scalp, Anti
9:3	104-8301	1	Nut-Nyloc 3/8-16 Flg
10	109-6658	17	Nut-Nyloc 3/8-16 Flg
11	109-7188	1	ASM,Discharge Chute
11:1	109-2738	1	Chute,Discharge
11:2	109-8675-01	1	Bracket,Discharge Chute
11:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
11:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
12	109-9220	2	Screw-Sems 1/2-20 X 2.19
13	116-0133	1	Extension-Spring
14	116-1037	2	Blade-Notched, 22.25


Ref.	Part Number	Qty.	Description
14	116-1047	2	Blade-Mulch, 22.25 ●
15	116-1286	2	Guard,Bearing Top .989
16	116-2828-01	1	Cover,Belt
17	116-3342	2	ASM-Spindle And Seal
18	116-3344	2	ASM-Cutter Hsg With Bearings
18:2	116-0720	2	Bearing-Ball, 25Mm
18:3	116-3312	1	Spacer-Bearing
19	116-4589	2	Sheave-Blade Drive, 8.40
20	116-4693	1	ASM-Idler Arm
20:1	1-513034	2	Sleeve-Bearing
21	116-5111	1	Bushing
22	116-4714	1	Bushing-Idler
23	32144-70	2	Screw-HWH 5/16-18 X 3/4 Tf
24	322-2	2	Screw-HH 5/16-18 X 5/8
25	323-38	1	Screw-HH 3/8-16 X 4 3/4
26	3230-1	2	Bolt-Carriage 5/16-18 X 3/4
27	3231-25	2	Bolt-Carriage 3/8-16 X 1 1/4
28	3231-44	2	Bolt-Carriage 3/8-16 X 2 1/2
29	52-2860	2	Washer
30	99-8912	1	Pulley-Idler, Flat

● Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

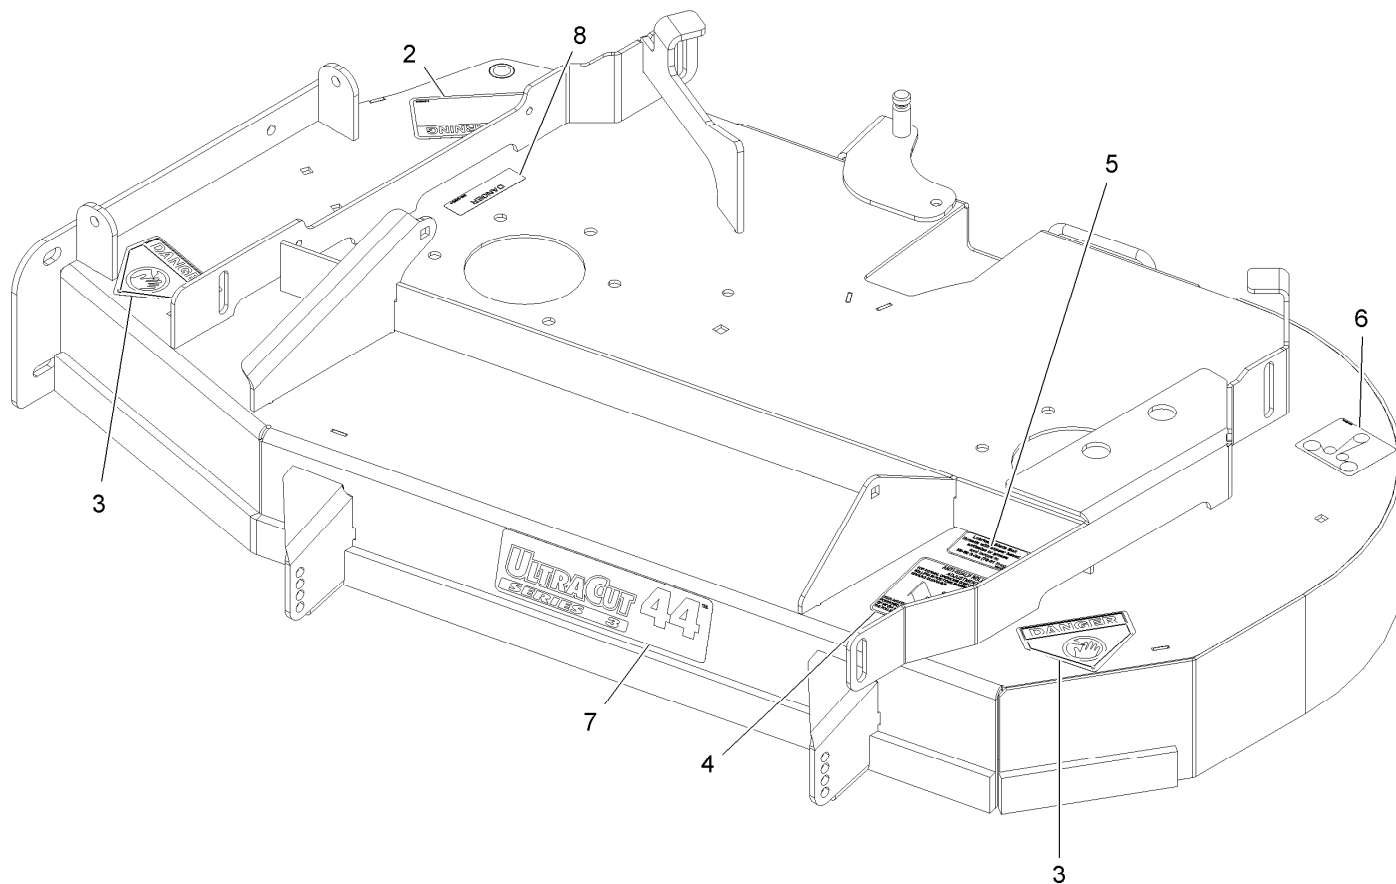

Deck W/Decals Assembly No. 116-3194

Ref.	Part Number	Qty.	Description
2	1-303508	1	Decal-Warning, Discharge
3	1-403005	2	Decal-Danger
4	1-633922	1	Decal,Antiscalp
5	109-3148	1	Decal,Bolt Torque
6	109-6014	1	Decal-Belt Routing
7	116-4795	1	Decal-Ultracut 44 Series 3
8	98-5954	1	Decal-Cover, Missing

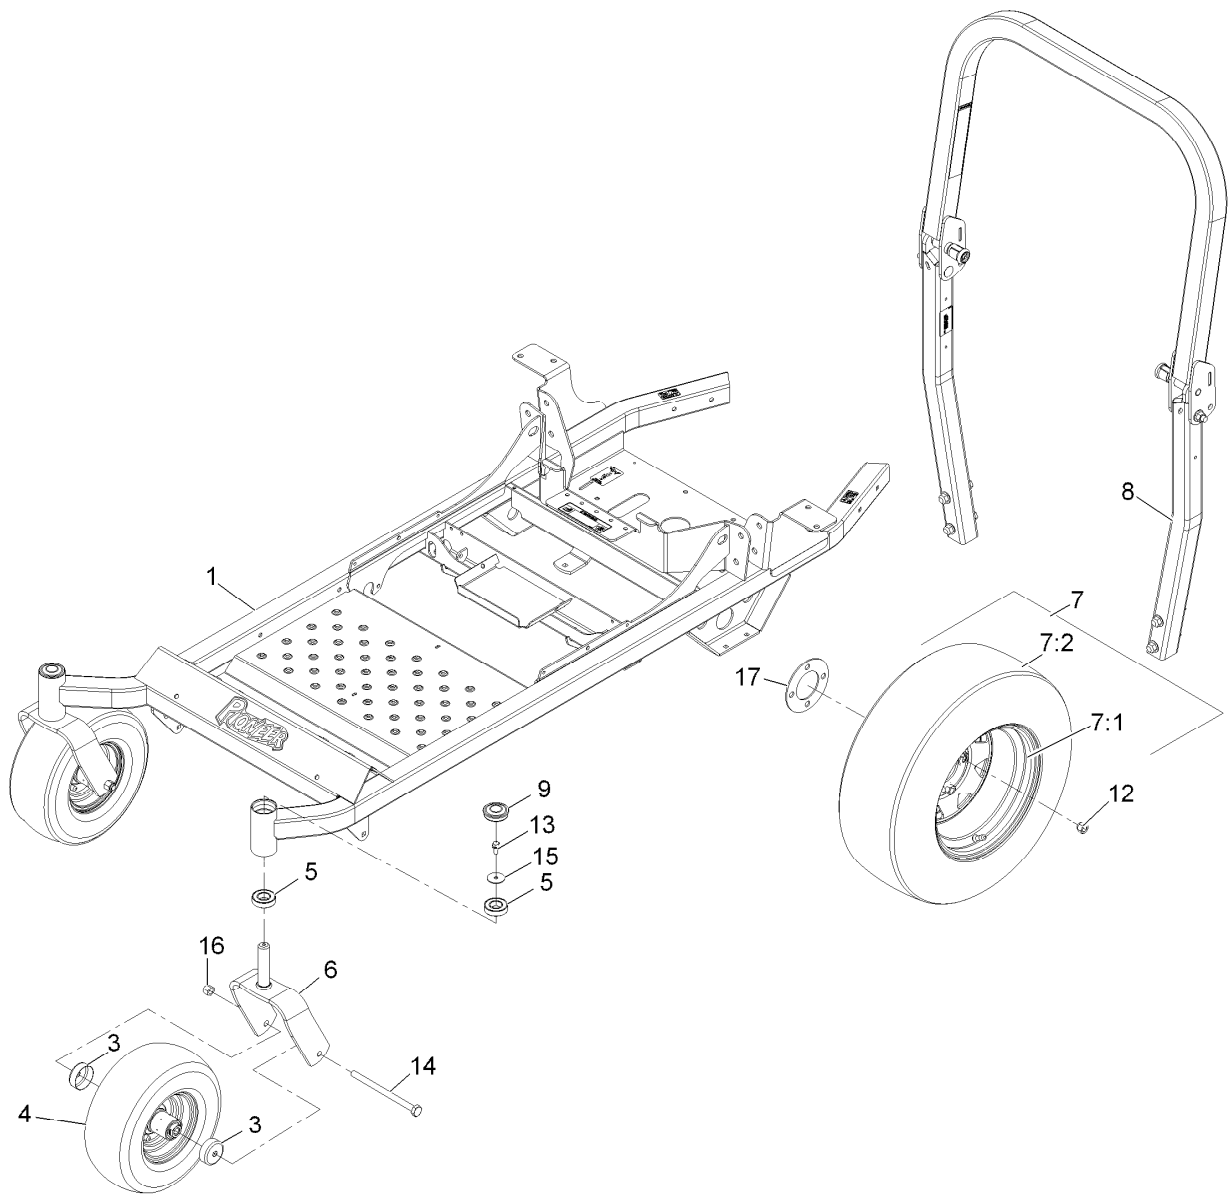


Main Frame Assembly

Ref.	Part Number	Qty.	Description
1	116-4095	1	Frame ASM-44
3	103-2768	4	Guard-Seal
4	103-5189	2	ASM, Wheel & Tire W/ Axle
5	109-3678	4	Bearing-Ball
6	116-0611-01	2	Wld,Caster Fork
7	116-3166	2	ASM,Wheel And Tire 22 X 9.50 - 12
7:1	116-3167	1	Wheel
7:2	116-1948	1	Tire


Ref.	Part Number	Qty.	Description
8	116-3498	1	ASM-ROPS Pioneer
9	116-4348	2	Cap-Grease
12	242-50	8	Nut-Lug 1/2-20
13	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
14	325-36	2	Screw-HH 1/2-13 X 7 1/2
15	3256-68	2	Washer-Flat
16	3296-23	2	Nut-Nyloc 1/2-13
17	116-5362	2	Spacer-Wheel ●

● May not be included on all units.

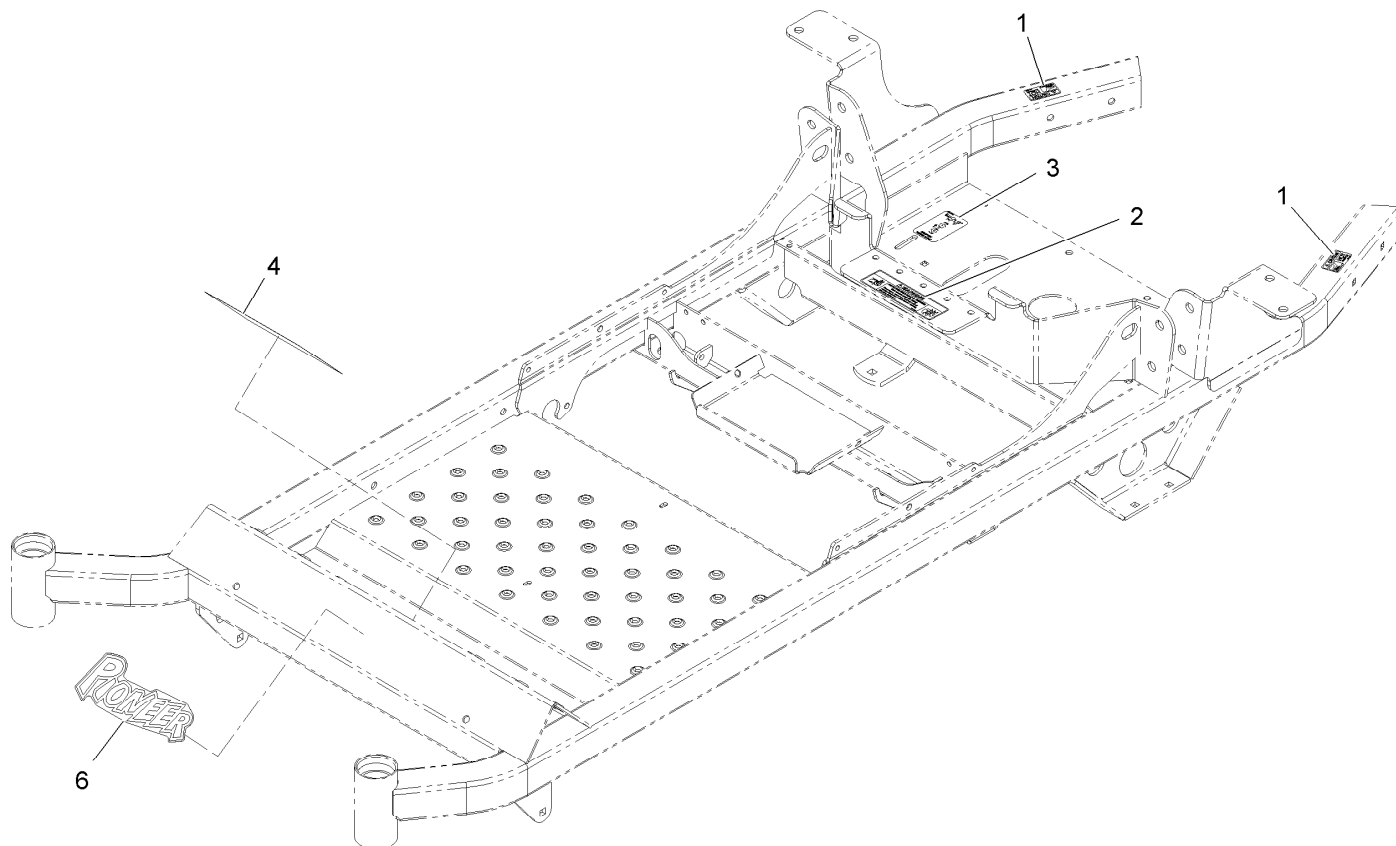

Main Frame W/Decals Assembly No. 116-4095

Ref.	Part Number	Qty.	Description
1	103-2076	2	Decal-Caution
2	116-1119	1	Decal,Belt Drive
3	116-1121	2	Decal,Drive Release
4	116-3303	1	Decal-Slope
6	116-4570	1	Decal-Pioneer Logo

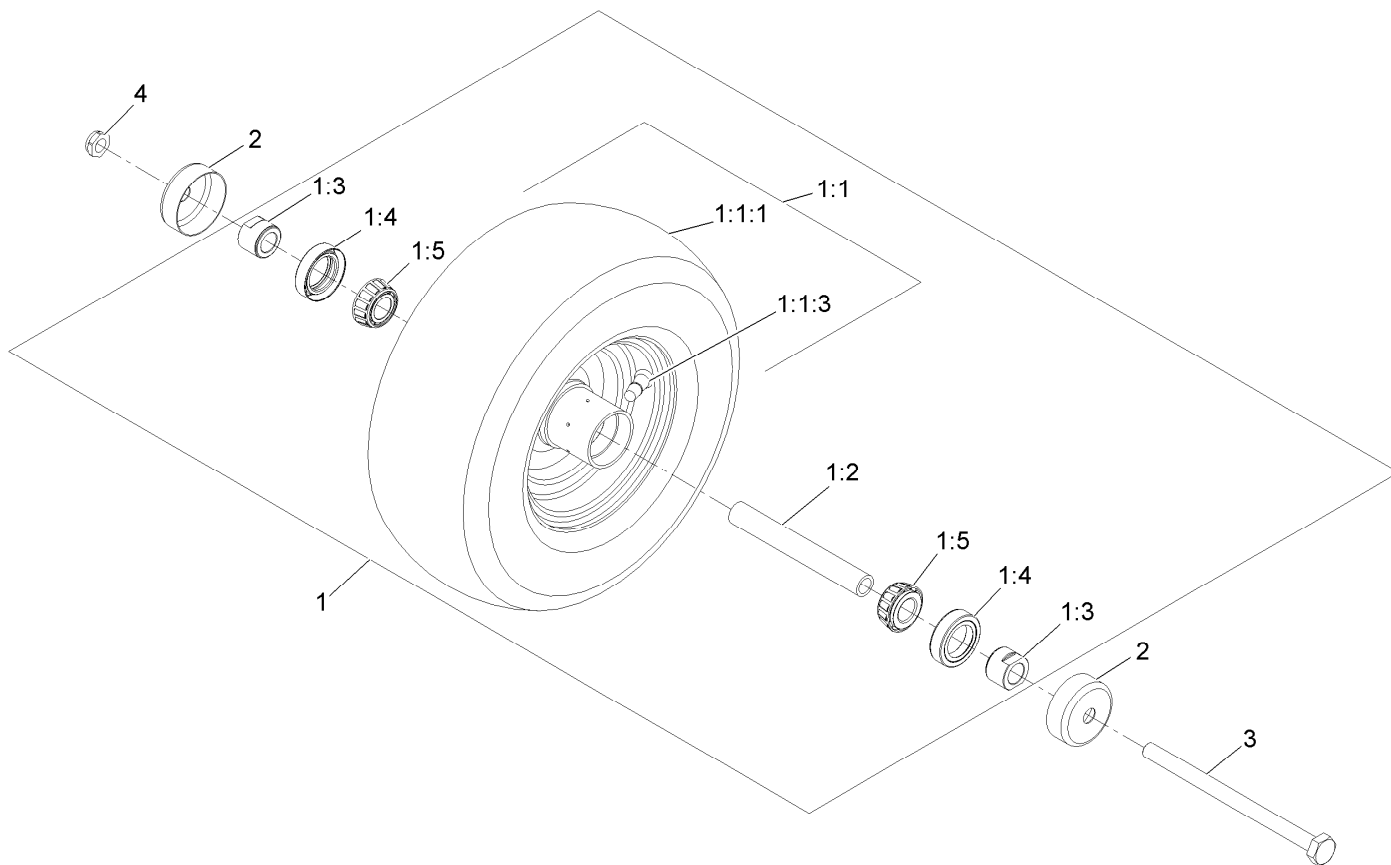


Caster Wheel Assembly No. 103-5189

Ref.	Part Number	Qty.	Description
1		1	ASM, Wheel And Brg 13X5.00-6 ●
1:1		1	ASM, Wheel And Tire 13X5.00-6 ●
1:1:1	1-633002	1	Tire
1:1:3	5108	1	Valve
1:2	103-3155	1	Axle-Caster
1:3	103-3051	2	Spacer-Nut ■
1:4	103-0063	2	Seal-Double Lip
1:5	1-633585	2	Bearing-Cone Tapered Roller
2	103-2768	2	Guard-Seal
3	325-36	1	Screw-HH 1/2-13 X 7 1/2
4	3296-45	1	Nut-Lock, NI

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

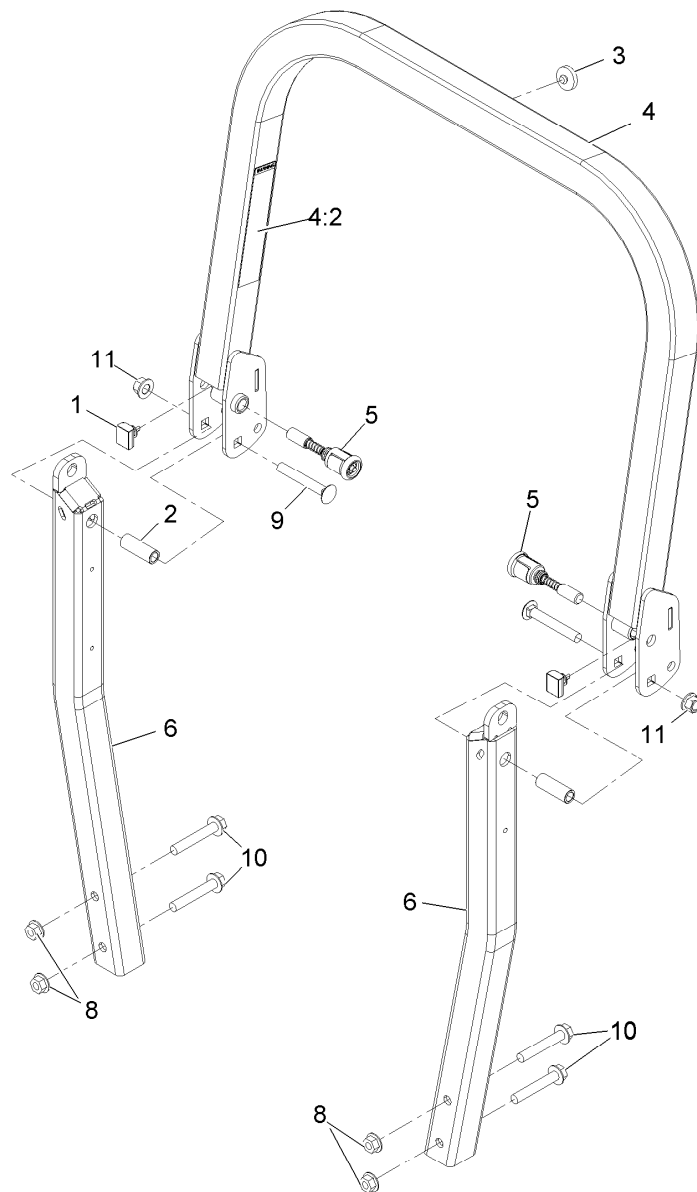

Roll-Over Protection System Assembly No. 116-3498

Ref.	Part Number	Qty.	Description
1	109-5337	2	Bumper-ROPS
2	109-6653	2	Spacer
3	109-9233	1	Bumper-Push-In, Rubber
4	116-0019	1	Upper ROPS ASM
4:2	107-2102	1	Decal-Warning, Folding ROPS
5	116-0104	2	Spring Pin ASM
6		2	ASM-Lwr ROPS Leg ●
8	32128-49	4	Nut-Whizlock 1/2-13
9	3233-10	2	Bolt-Carriage 1/2-13 X 3 1/2
10	3234-40	4	Screw-HF
11	99-5107	2	Nut-Lock 1/2-13


● Not serviced separately

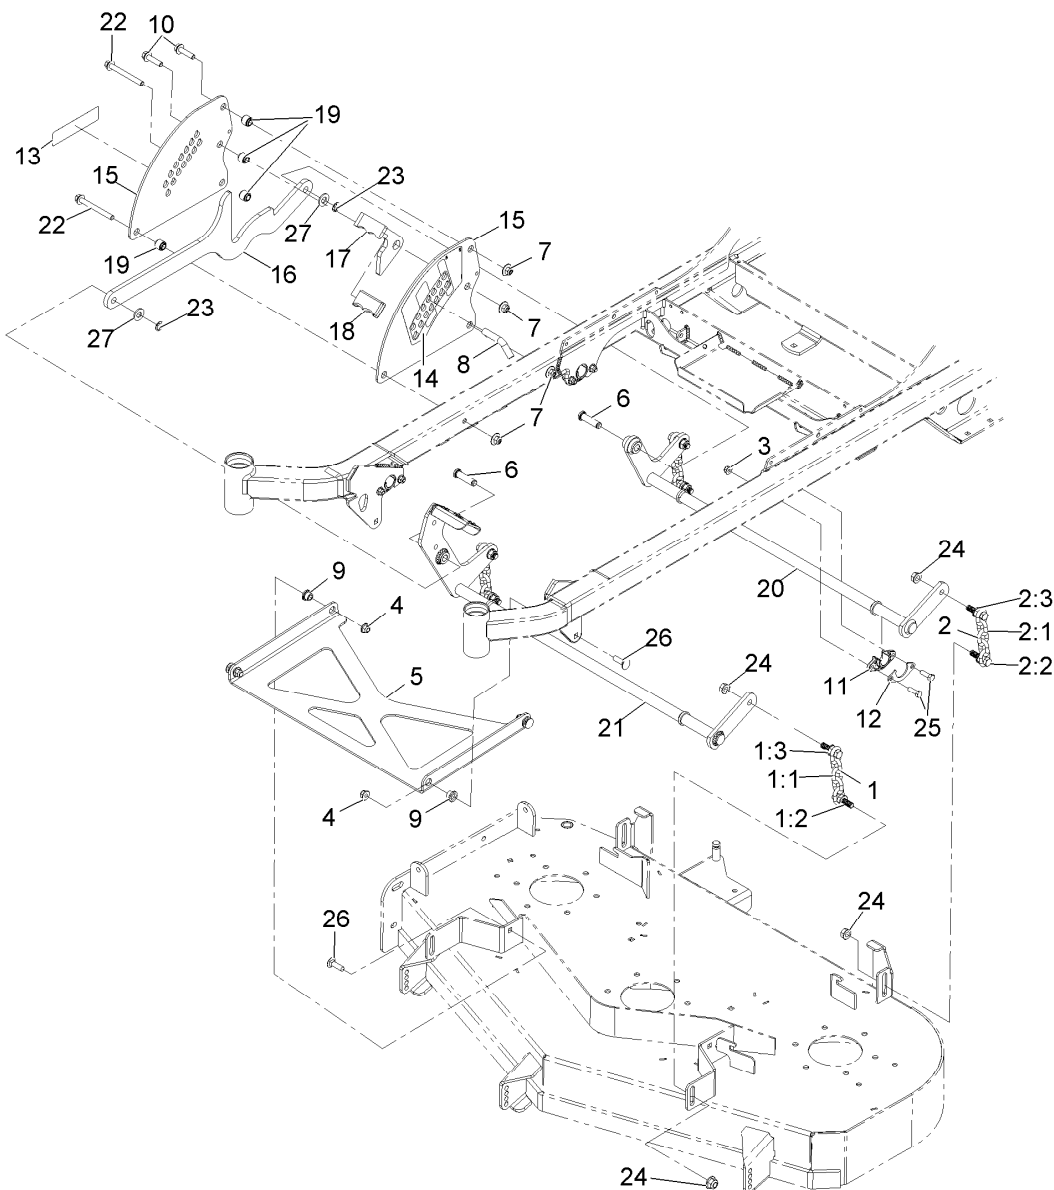

Deck Lift Assembly

Ref.	Part Number	Qty.	Description
1	103-9792	2	Deck Chain ASM
1:1	1-633447	1	Chain-Lift, Deck
1:2	103-1898	2	Screw-HH 7/16-20 X 1-5/8 Sp
1:3	32128-37	2	Nut-Whizlock 7/16-14
2	103-9817	2	Deck Chain ASM
2:1	1-633447	1	Chain-Lift, Deck
2:2	103-1898	2	Screw-HH 7/16-20 X 1-5/8 Sp
2:3	32128-37	2	Nut-Whizlock 7/16-14
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	104-8301	4	Nut-Nyloc 3/8-16 Flg
5	109-3723-01	1	Strut-Deck
6	109-5819	2	Pin-Clevis
7	109-6658	4	Nut-Nyloc 3/8-16 Flg
8	109-8757	1	Pin-HOC
9	109-8788	4	Bushing-Flanged
10	114-4681	2	Screw-HHF

Ref.	Part Number	Qty.	Description
11	115-5065	4	Bushing-Flange
12	116-2887	4	Gusset - Deck Lift
13	116-3884	1	Decal-S-Series
14	116-4308	1	Decal-Height Of Cut
15	116-4309-03	2	Plate,Deck Lift
16	116-4310-03	1	Link-HOC
17	116-4311	1	Transport Lock-HOC
18	116-4312	1	Grip-3/8 X 1 Flat Bar
19	116-4313	4	Spacer-Double Step
20	116-4314-03	1	Wld,Deck Lift Shaft-Rear
21	116-4315-03	1	Wld,Deck Lift Shaft-Frt
22	116-4701	2	Screw-HHF
23	32120-47	2	Ring-Retaining
24	32128-37	8	Nut-Whizlock 7/16-14
25	322-5	8	Screw-HH 5/16-18 X 1
26	3231-25	4	Bolt-Carriage 3/8-16 X 1 1/4
27	3256-26	2	Washer-1/2 Sae

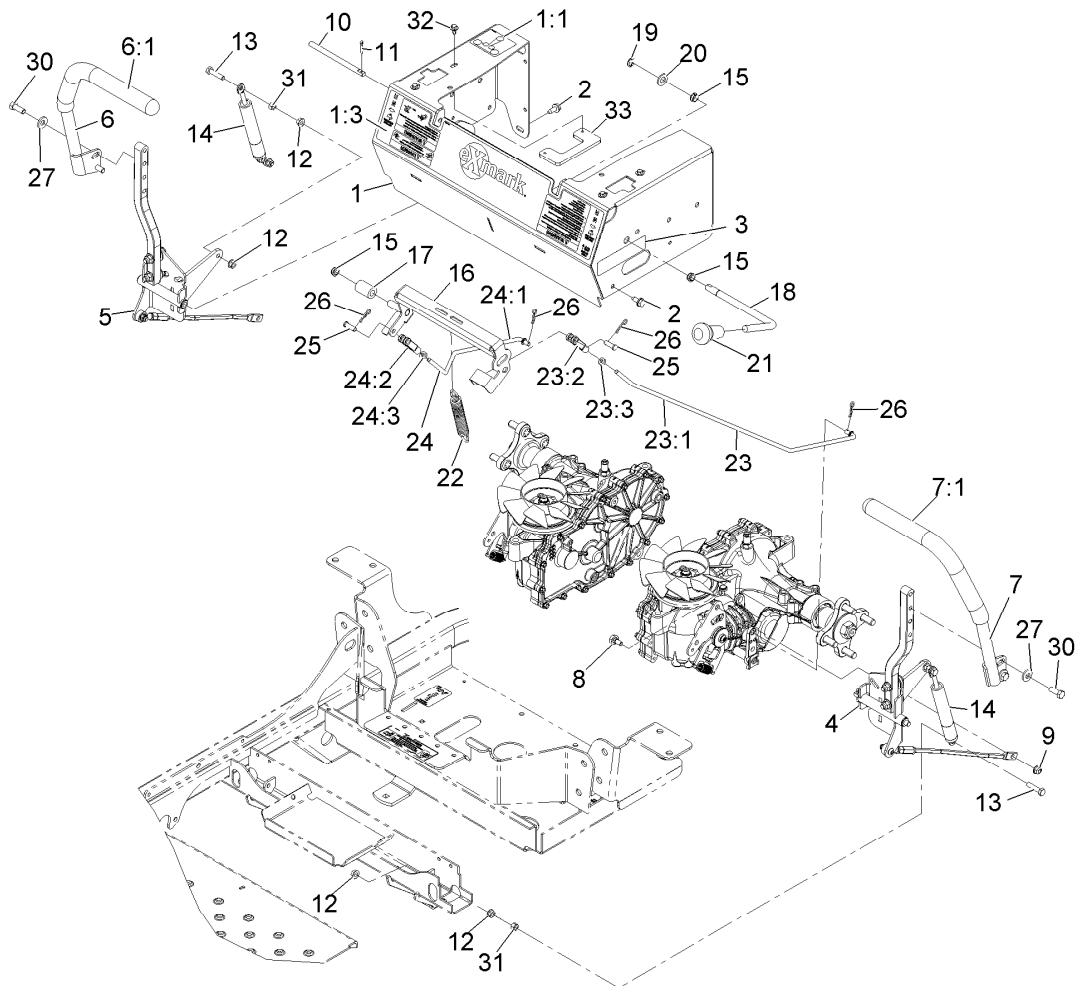


Motion Control Assembly

Ref.	Part Number	Qty.	Description
1	116-3188	1	ASM-Mot Ctrl Frm W/Dcl
1:1	109-6014	1	Decal-Belt Routing
1:3	116-4430	1	Decal-Front Panel
2	32144-70	6	Screw-HWH 5/16-18 X 3/4 Tf
3	116-3884	1	Decal-S-Series
4		1	Motion Control ASM-LH ●
5		1	Motion Control ASM-RH ●
6	119-3486	1	RH Handle ASM
6:1	108-6187	1	Grip
7	119-3485	1	LH Handle ASM
7:1	108-6187	1	Grip
8	37-8771	2	Screw-Shoulder 5/16-18 X 5/8
9	104-8300	2	Nut-Nyloc 5/16-18 Flg
10	109-3705	2	Pin-Control Pivot
11	3272-10	2	Pin-Cotter 1/8 X 3/4
12	32128-20	8	Nut-Whizlock 5/16-18
13	1-403180	4	Screw-HH 5/16-18 X 1 1/4 Sp
14	109-5957	2	Damper-Motion Control
15	116-1393	3	Bushing,Snap


Ref.	Part Number	Qty.	Description
16	116-1177	1	Wld,Brake Center Arm
17	109-5010	1	Spacer
18	116-3155	1	Handle,Brake
19	32120-47	1	Ring-Retaining
20	106-9888	1	Washer-Flat
21	106-7952	1	Knob
22	88-6130	1	Spring-Deck, Engagement
23	116-1165	1	Brake Linkage ASM-LH
23:1	116-1167	1	Linkage,Brake LH
23:2	1-303105	1	Yoke-Adjustable
23:3	3220-2	1	Nut-Jam 5/16-24
24	116-1166	1	Brake Linkage ASM-RH
24:1	116-1168	1	Linkage-Brake, RH
24:2	1-303105	1	Yoke-Adjustable
24:3	3220-2	1	Nut-Jam 5/16-24
25	1-808280	2	Pin-Clevis 5/16 X 1 49/64
26	1-806003	4	Hairpin-Cotter
27	98-5975	4	Washer-Spring Disc 3/8
30	323-6	4	Screw-HH 3/8-16 X 1
31	3217-6	4	Nut-Hex 5/16-18
32	46-8560	4	Screw-HHF 1/4-20 X 1/2
33	109-6214	2	Stop-Motion Control

● Not serviced separately

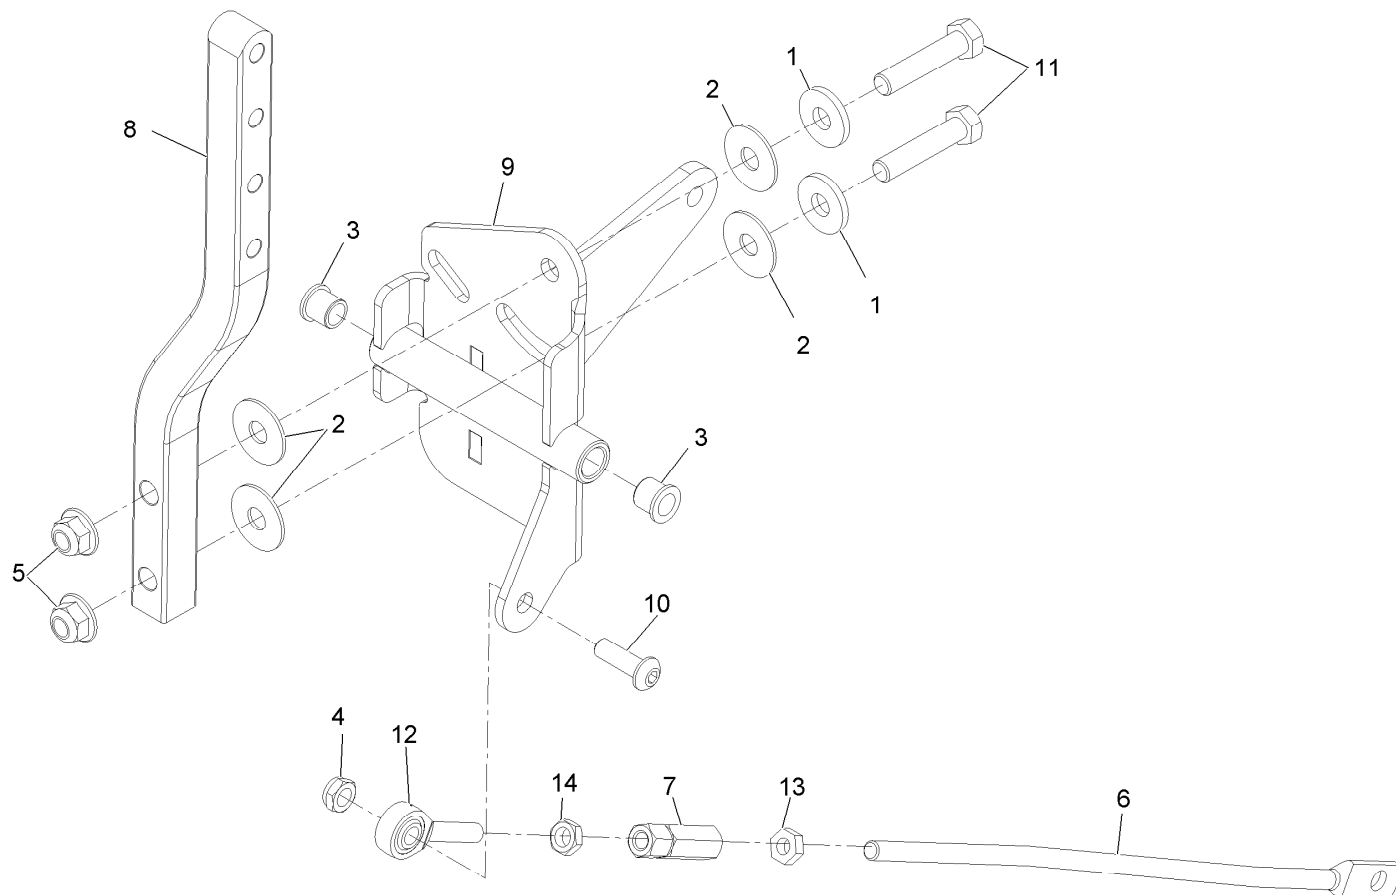


Motion Control Assembly - LH

Ref.	Part Number	Qty.	Description
1	5-0838	2	Washer
2	52-2900	4	Washer-Plastic
3	103-9928	2	Bearing
4	3296-47	1	Nut-Nyloc 5/16-18 Thin
5	104-8301	2	Nut-Nyloc 3/8-16 Flg
6	116-2543	1	Link,Motion Control
7	109-3728	1	Nut-Rod Adjustment
8	116-3183	1	Arm-Motion Control
9	116-3176	1	LH Control Pivot ASM
10	3274-104	1	Screw-Button Head 5/16-18 X 1
11	323-9	2	Screw-HH 3/8-16 X 1 3/4
12	2411-53	1	Balljoint LH
13	3220-2	1	Nut-Jam 5/16-24
14	3220-20	1	Nut-Jam 5/16-24 LH

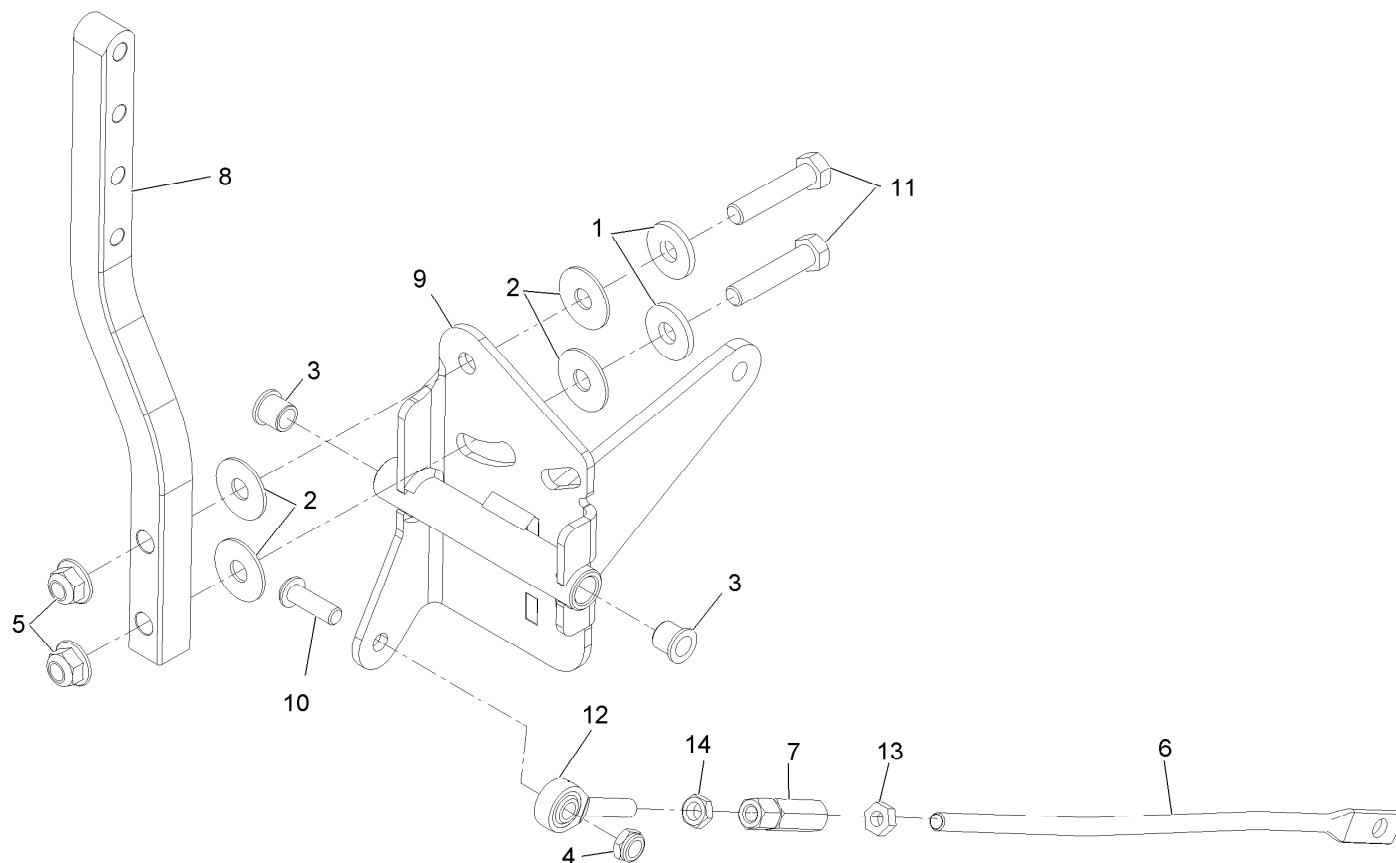


Motion Control Assembly - RH

Ref.	Part Number	Qty.	Description
1	5-0838	2	Washer
2	52-2900	4	Washer-Plastic
3	103-9928	2	Bearing
4	3296-47	1	Nut-Nyloc 5/16-18 Thin
5	104-8301	2	Nut-Nyloc 3/8-16 Flg
6	116-2543	1	Link,Motion Control
7	109-3728	1	Nut-Rod Adjustment
8	116-3183	1	Arm-Motion Control
9	116-3179	1	RH Control Pivot ASM
10	3274-104	1	Screw-Button Head 5/16-18 X 1
11	323-9	2	Screw-HH 3/8-16 X 1 3/4
12	2411-53	1	Balljoint LH
13	3220-2	1	Nut-Jam 5/16-24
14	3220-20	1	Nut-Jam 5/16-24 LH

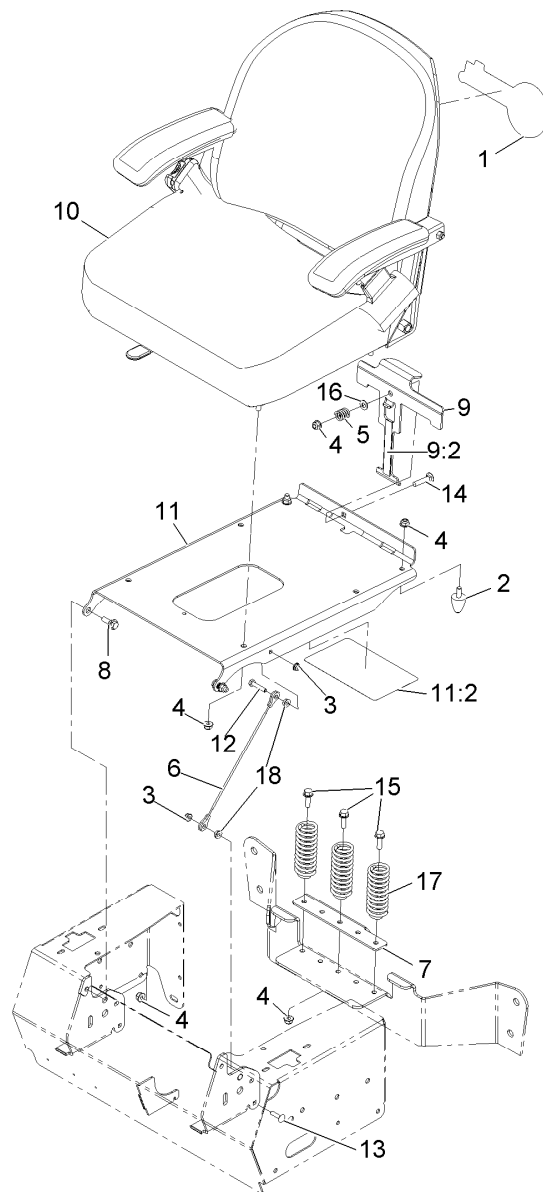


Seat Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	103-2882	1	Decal,Exmark Logo	11	116-4418	1	Plate, Seat W/Decals
2	103-9376	2	Bumper-Seat	11:2	109-6016	1	Decal-Service Aid
3	104-7201	2	Nut-Nyloc 1/4-20 Flg	12	321-8	1	Screw-HH 1/4-20 X 1 1/4
4	104-8300	12	Nut-Nyloc 5/16-18 Flg	13	3229-2	1	Bolt-Carriage 1/4-20 X 1
5	107-3017	1	Spring-Compression	14	3230-4	1	Bolt-Carriage 5/16-18 X 1 1/2
6	109-2628	1	Cable-Stop, Seat	15	3234-29	3	Screw-HH Flg 5/16-18 X 1
7	116-0871	1	Catch,Seat Latch	16	3256-23	1	Washer-5/16 Sae
8	116-1297	2	Screw-Shoulder	17	92-7054	3	Spring-Compression
9	116-3121	1	ASM-Seat Latch	18	32128-33	2	Nut-Whizlock 1/4-20
9:2	116-3120	1	Strip-Poly Wear				
10	116-3692	1	ASM-Seat Service				

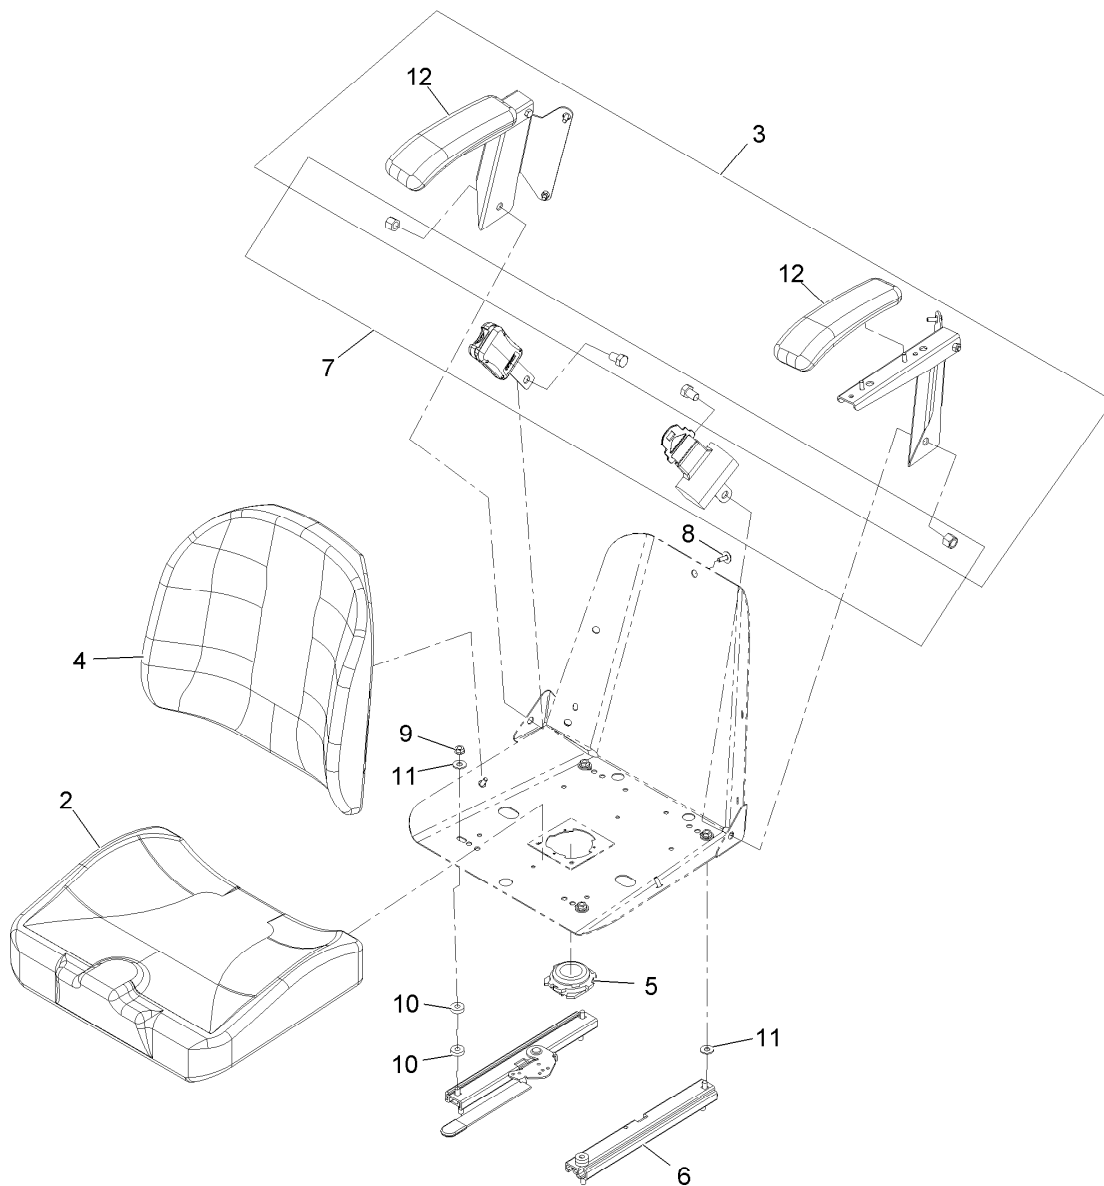

Seat W/Tracks Assembly No. 116-3692


Ref.	Part Number	Qty.	Description
2	116-3737	1	Cushion,Seat Bottom
3	110-5719	1	Armrest Kit
4	116-3738	1	Cushion,Seat Back
5	116-2878	1	Switch-Seat
6	1-643255	1	Track-Seat
7	116-2981	1	Seat Belt Kit
8	103-8383	7	Screw-HWH 1/4-20 X 3/4 Taptite
9	32128-20	4	Nut-Whizlock 5/16-18
10	26-4840	4	Spacer-Pin, Mounting
11	3256-3	6	Washer-5/16 Std
12	110-4163	2	Cushion-Rest, Arm

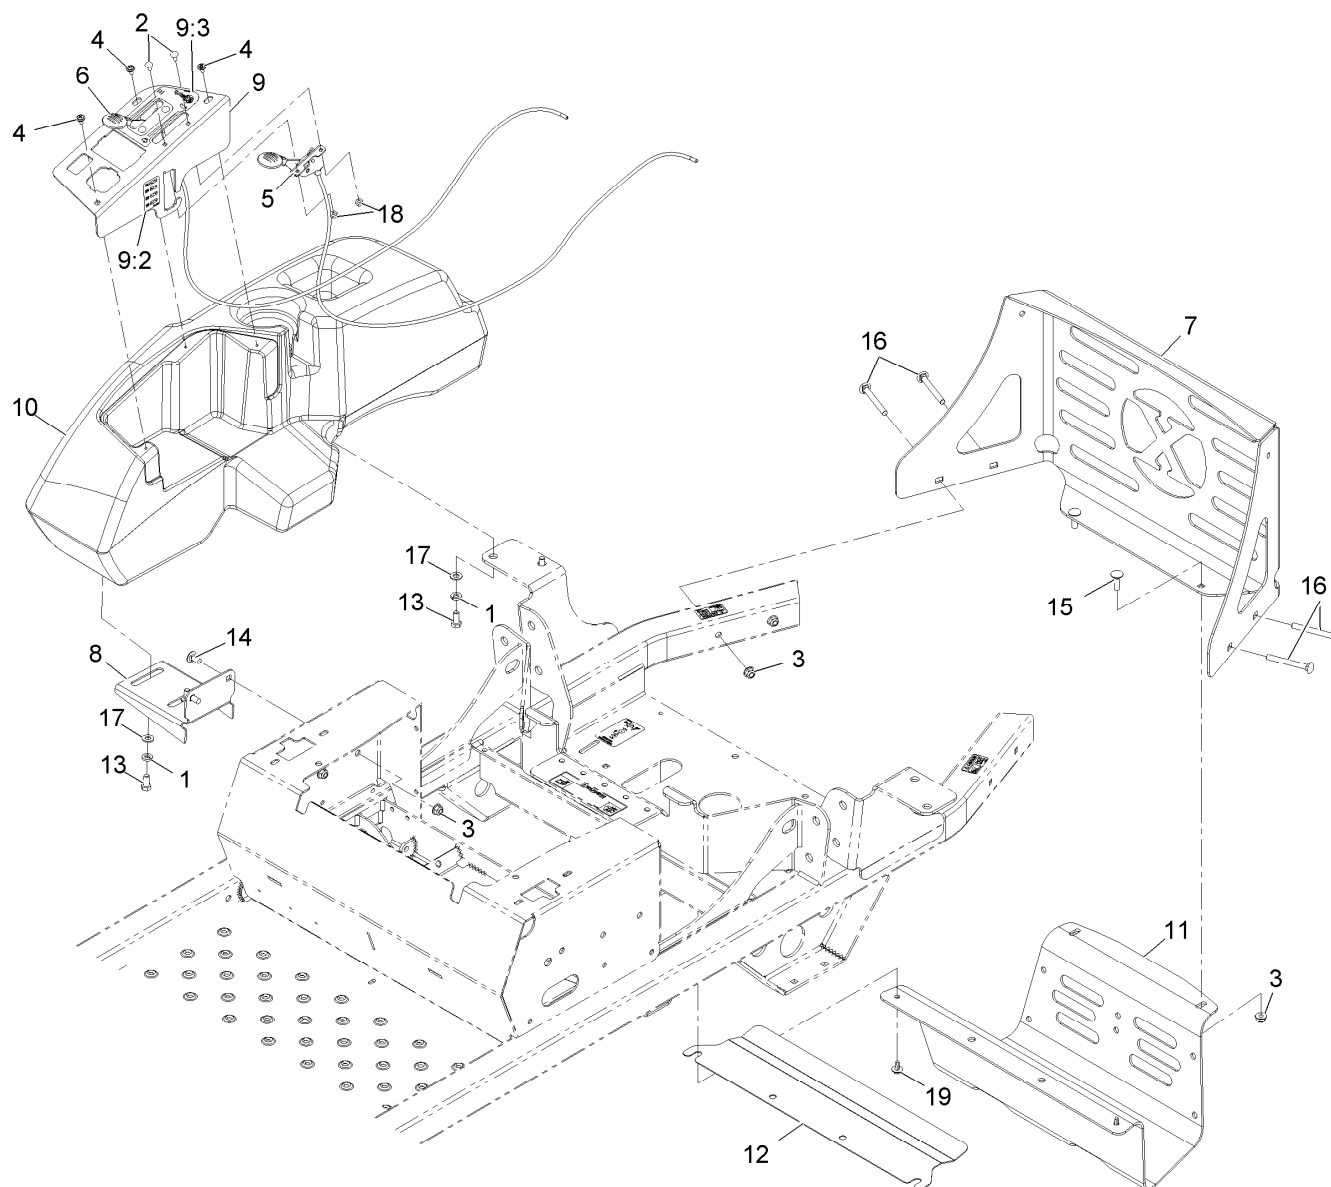

Controls Assembly

Ref.	Part Number	Qty.	Description
1	1-805005	4	Washer-Lock 5/16 Heavy
2	1-807513	4	Bolt-Carriage #10-24 X 1/2
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	109-2661	3	Screw-PPH #10-24 X 1/2
5	116-4919	1	Control,Throttle
6	109-8747	1	Control,Choke
7	116-3453-03	1	Panel,Rear Guard
8	116-3495-03	1	Bracket-Tank And Fender
9	116-3496	1	ASM,Control Panel W/Decal
9:2	116-1496	1	Decal,Fuse Block
9:3	116-4465	1	Decal-Throttle Choke


Ref.	Part Number	Qty.	Description
10	116-4138	1	Console,RH
11	116-4708-03	1	Guard-Muffler
12	116-4709-03	1	Shield-Heat Deflector
13	322-3	4	Screw-HH 5/16-18 X 3/4
14	3230-18	2	Bolt-Carriage 5/16-18 X 5/8
15	3230-2	2	Bolt-Carriage 5/16-18 X 1
16	3230-9	4	Bolt-Carriage 5/16-18 X 2 3/4
17	3256-23	4	Washer-5/16 Sae
18	3296-2	4	Nut-Nyloc #10-24
19	46-8560	2	Screw-HHF 1/4-20 X 1/2

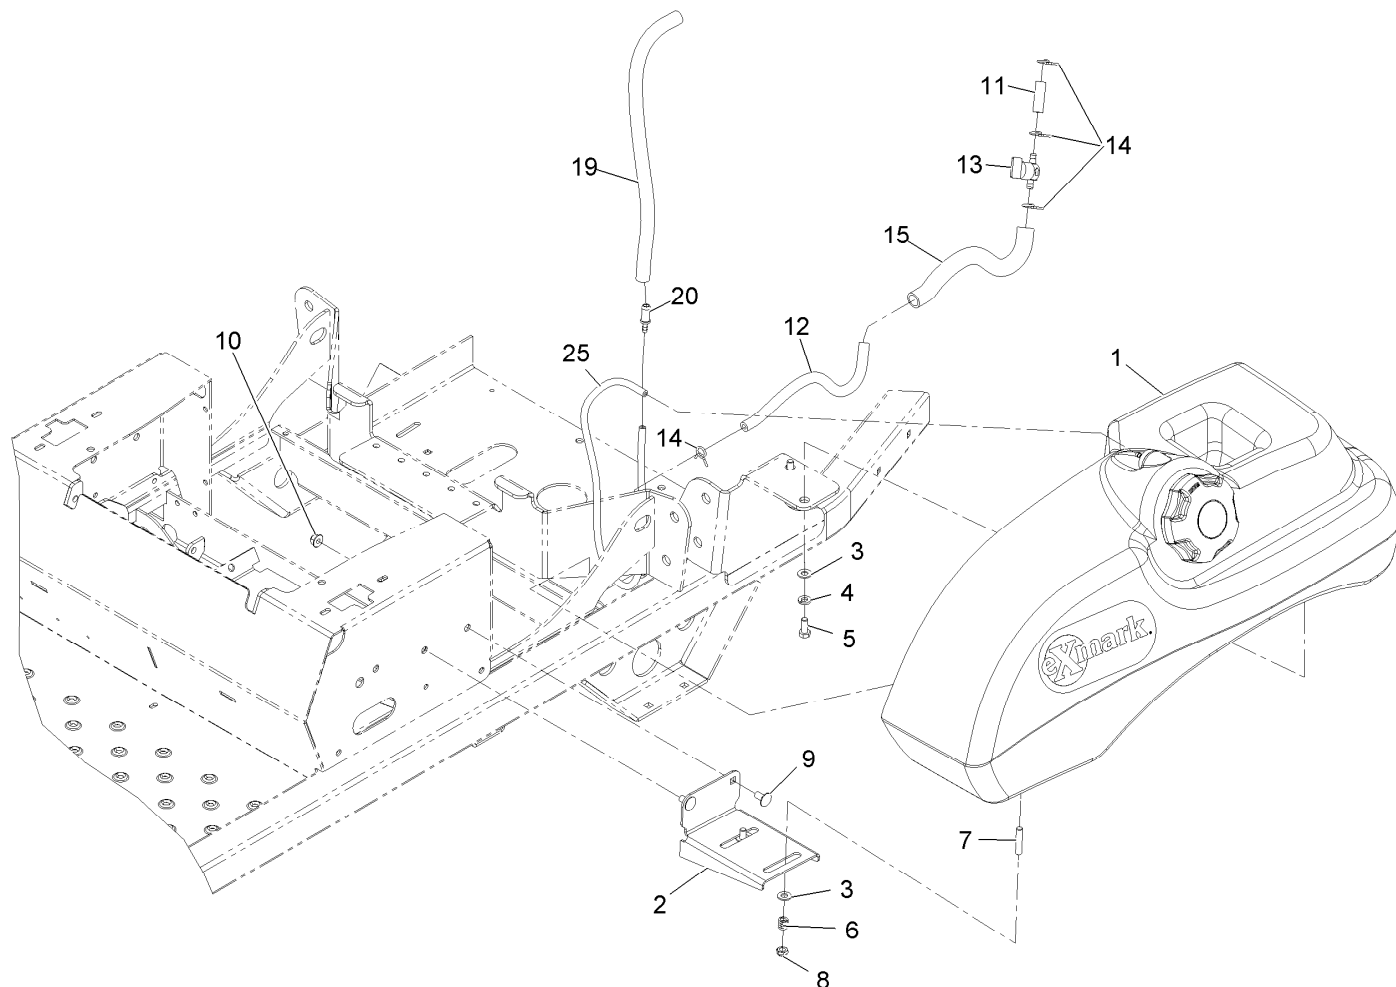

Fuel Tank Mounting Assembly

Ref.	Part Number	Qty.	Description
1	116-4610	1	ASM-Fuel Tank
2	116-3495-03	1	Bracket-Tank And Fender
3	3256-23	4	Washer-5/16 Sae
4	1-805005	2	Washer-Lock 5/16 Heavy
5	322-3	2	Screw-HH 5/16-18 X 3/4
6	1-633349	2	Spring-Compression
7	1-633023	2	Stud-Fuel Tank
8	3296-47	2	Nut-Nyloc 5/16-18 Thin
9	3230-18	2	Bolt-Carriage 5/16-18 X 5/8

Ref.	Part Number	Qty.	Description
10	104-8300	2	Nut-Nyloc 5/16-18 Flg
11	106-9492	1	Hose-Fuel
12	109-0282	1	Hose-Fuel
13	1-603770	1	Valve-Fuel
14	1-303077	4	Clamp
15	116-4515	1	Conduit-Fuel Line
19	116-4344	1	Hose-Fuel
20	116-4630	1	Fitting-Straight Orifice
25	116-4802	1	Hose,Emissions

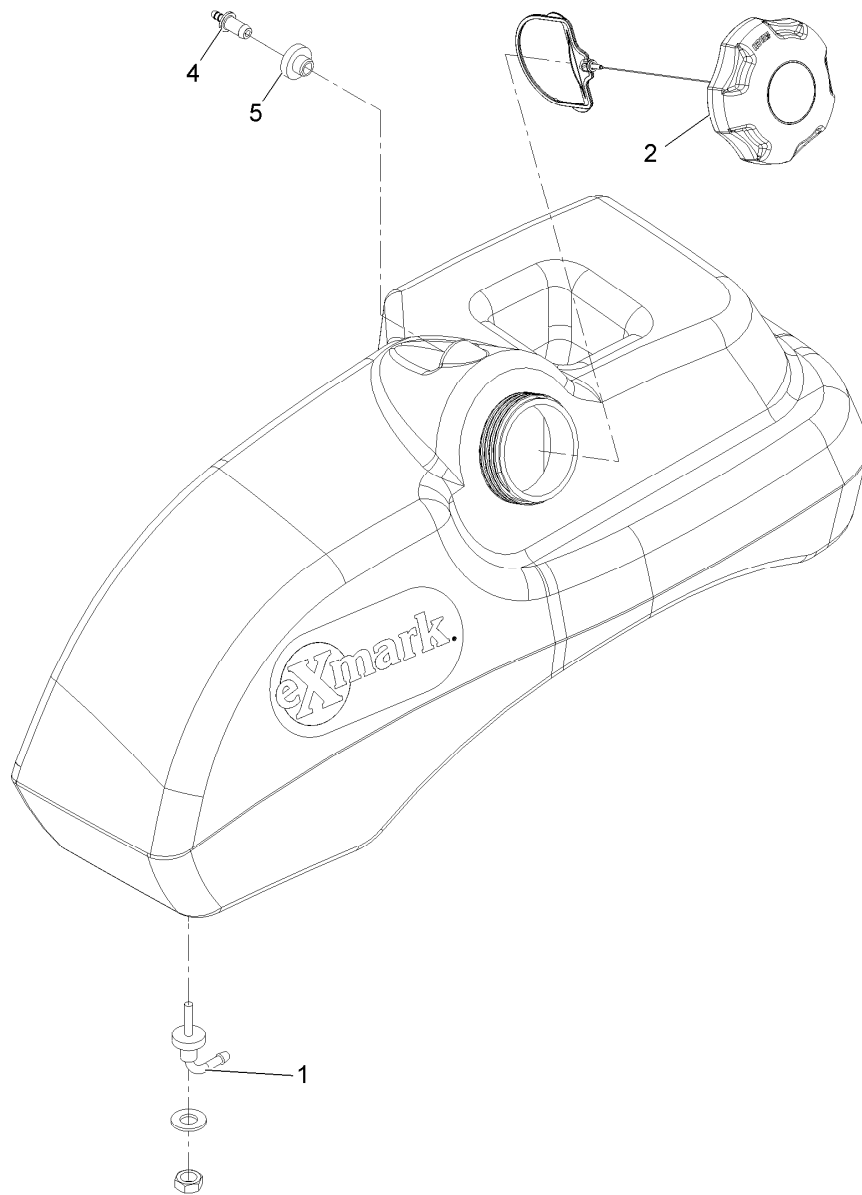


Fuel Tank Assembly No. 116-4610

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-2605	1	Fitting-Fuel Bulkhead W/Strainer ●
2	120-5461	1	Cap-Fuel, Ratcheting
4	116-4630	1	Fitting-Straight Orifice
5	46-6560	1	Bushing

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Kawasaki Replacement Parts List
(Refer To Engine Owner's Manual)

Description	Kawasaki Part
Engine Oil Filter	49065-7007
Engine Air Filter	11013-7048
Fuel Filter	4019-7005

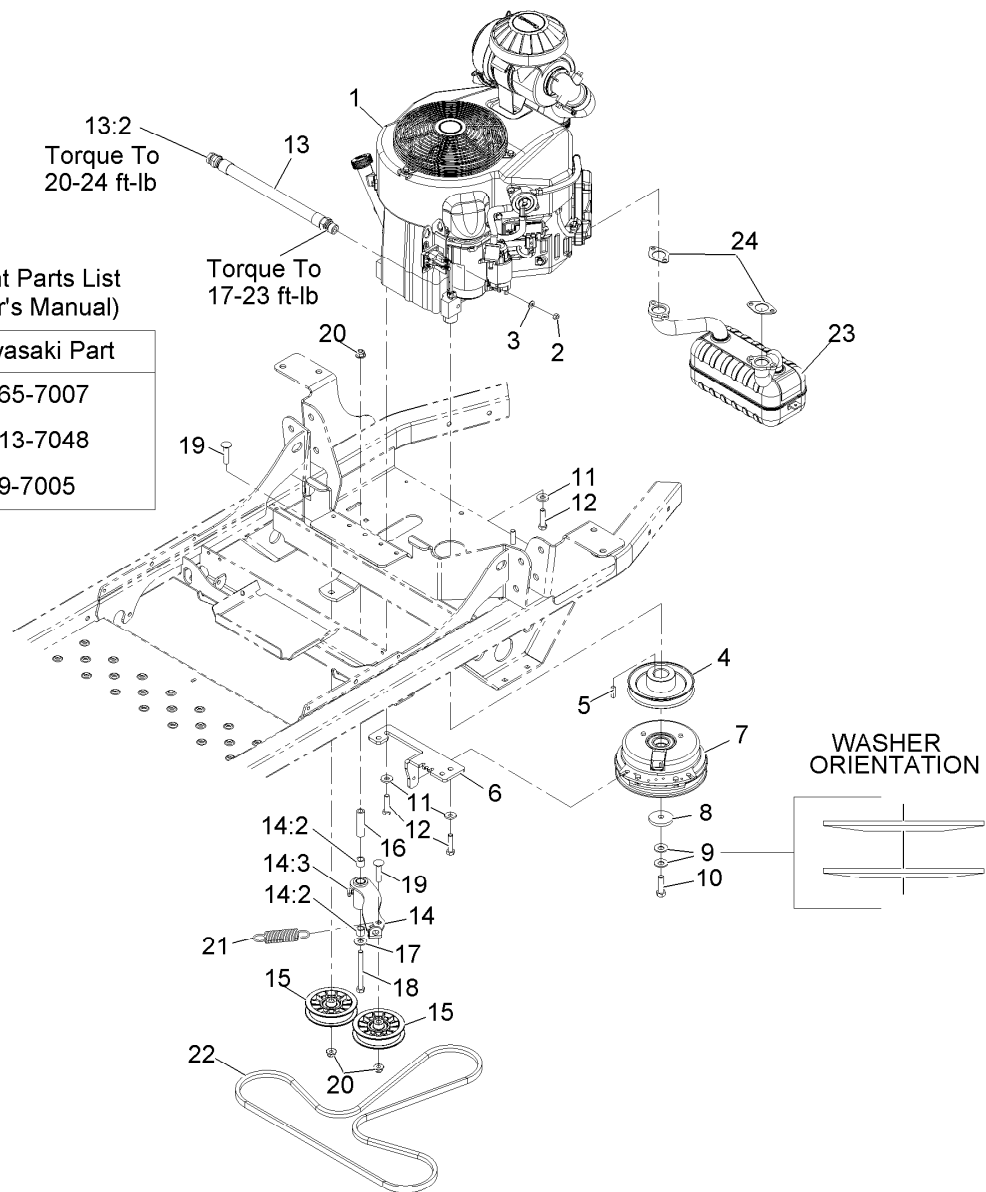

Engine Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fx600V-S13-R ●■
2	3217-5	1	Nut-Hex 1/4-20
3	3256-22	1	Washer-1/4 Sae
4	116-1946	1	Sheave-Pump, Drive
5	1-807259	1	Key-Machine 1/4 X 1/4 X 1
6	116-4773-03	1	Anchor-Clutch
7	116-1947	1	Clutch
8	109-6919	1	Washer-Clutch
9	1-603610	2	Washer-Spring Disc 7/16
10	109-9761	1	Screw-HH 7/16-20 X 1 1/2 W/Loctite ◆
11	98-5975	4	Washer-Spring Disc 3/8
12	323-8	4	Screw-HH 3/8-16 X 1 1/2
13	109-4490	1	Oil Drain Hose ASM ▲


Ref.	Part Number	Qty.	Description
13:2	109-1012	1	Plug
14	116-4729	1	ASM-Idler Arm W/Bearings
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Zerk-90° 1/4-28
15	116-2456	2	Pulley-Flat, 3.50 Dia
16	1-603384	1	Bushing-Pivot, Idler
17	3256-4	1	Washer-3/8 Std
18	323-15	1	Screw-HH 3/8-16 X 3 1/2
19	3231-5	2	Bolt-Carriage 3/8-16 X 1 3/4
20	104-8301	3	Nut-Nyloc 3/8-16 Flg
21	1-603402	1	Spring-Extension
22	115-9613	1	V-Belt
23	116-2450	1	Muffler-Kawasaki
24	1-653313	2	Gasket-Exhaust

● Not serviced separately

▲ Use a Teflon Pipe Sealant or equivalent on threads.

◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.


■ Obtain parts from www.kawpowerepc.com

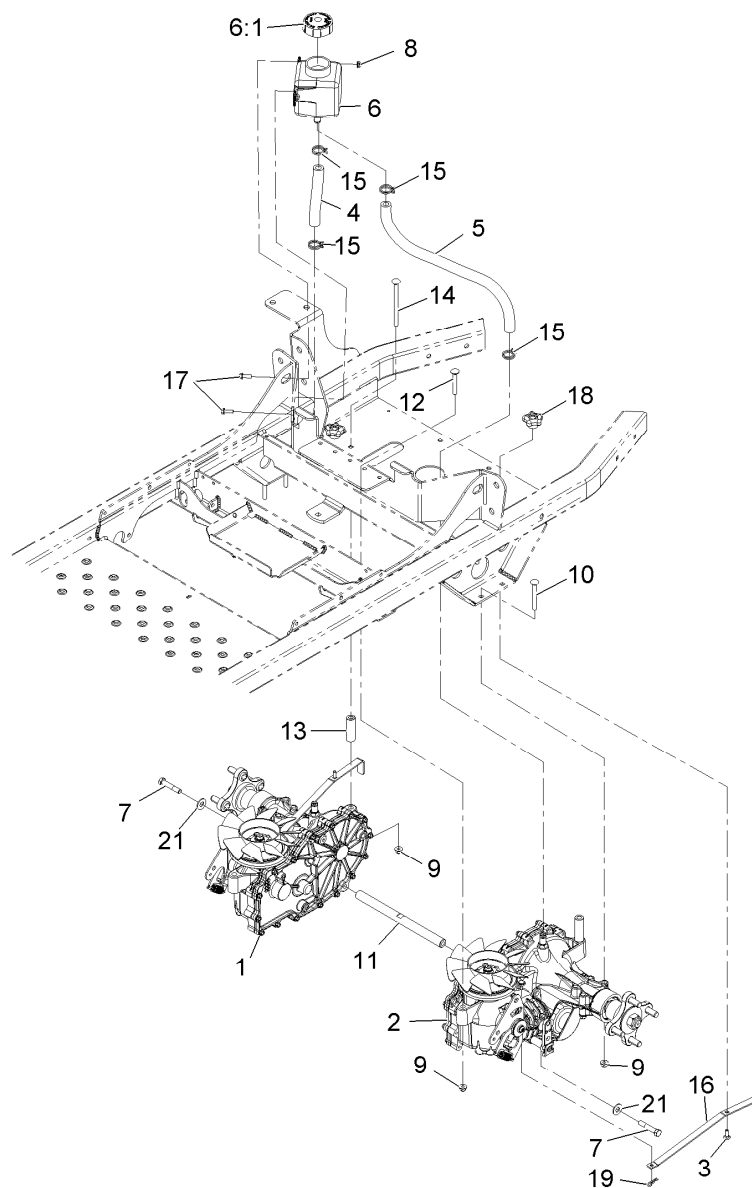

Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	116-3174	1	Transaxle ASM
2	116-3173	1	Transaxle ASM
3	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
4	116-4710	1	Hose-Hydraulic
5	109-5578	1	Hose-Hydraulic
6	109-2250	1	Vent-Tank, Hydro
6:1	109-3320	1	Cap-Reservoir, HYD
7	94-7972	2	Screw-HH W/Loctite
8	104-7201	2	Nut-Nyloc 1/4-20 Flg
9	104-8300	8	Nut-Nyloc 5/16-18 Flg
10	3230-9	4	Bolt-Carriage 5/16-18 X 2 3/4


Ref.	Part Number	Qty.	Description
11	116-4860	1	Shaft-Transaxle Spacer
12	3230-7	2	Bolt-Carriage 5/16-18 X 2 1/4
13	116-2803	2	Spacer-Hydro
14	3230-30	2	Bolt-Carriage 5/16-18 X 4 1/2
15	109-3322	4	Clamp-Hose
16	109-5395	2	Arm-Hydro Bypass
17	32105-15	2	Screw-Machine 1/4-20 X 3/4
18	108-6402	2	Knob-Handle
19	1-806003	2	Hairpin-Cotter
21	3256-4	2	Washer-3/8 Std

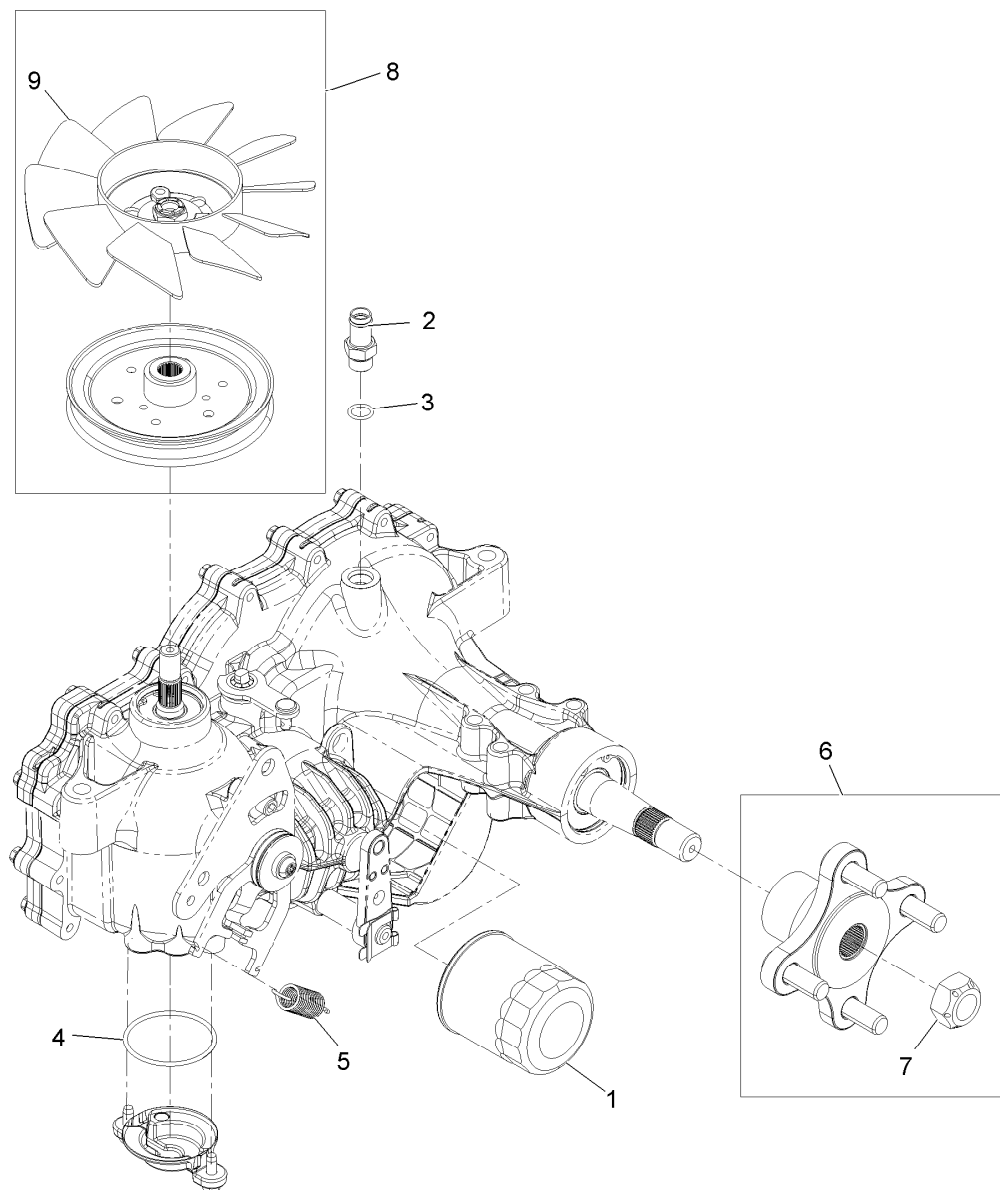

Transaxle Assembly

Ref.	Part Number	Qty.	Description
1	109-3321	1	Filter-Hydraulic
2	109-3278	1	Adapter-Straight
3	237-42	1	O-Ring
4	109-3540	1	O-Ring-Charge Seal Cover
5	109-5592	1	Spring
6	109-5939	1	Hub Kit
7	109-3536	1	Nut-Hub
8	109-5938	1	Fan And Pulley Kit
9	114-8453	1	Fan-7.0
99	109-3537	1	Complete Seal Kit ●

● Not illustrated

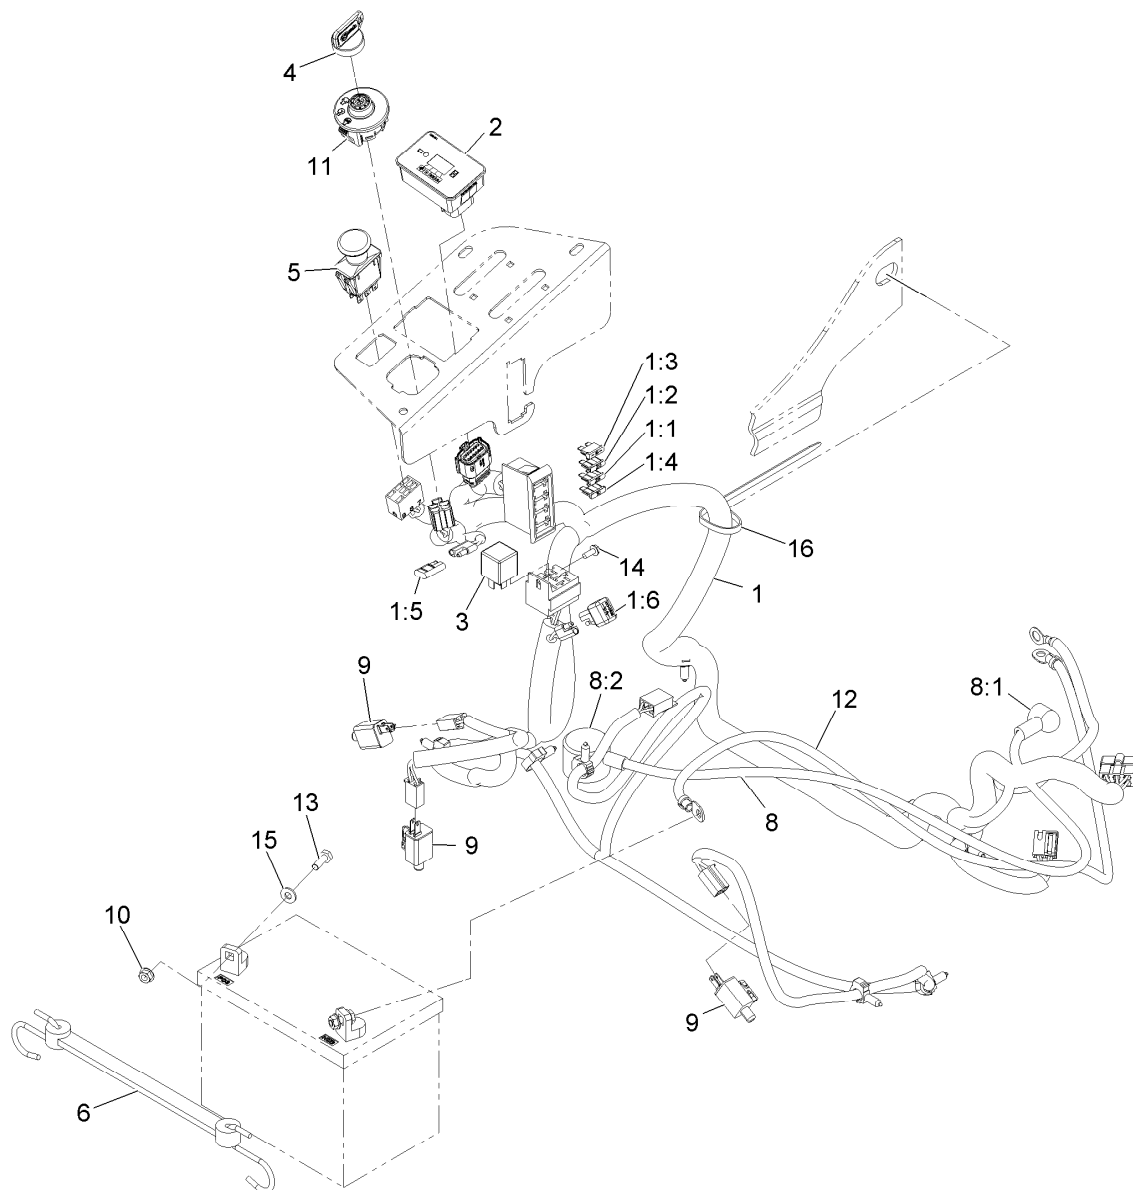

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	116-4861	1	Harness, Wire ●
1:1	109102	1	Fuse-Blade, 25 Amp
1:2	1-816001	1	Fuse-Blade Type, 20 Amp
1:3	109355	1	Fuse-Blade, 15 Amp
1:4	218-578	1	Fuse-Blade, 10 Amp
1:5	116-0053	1	Cap-Plug
1:6	103-3895	1	Diode-Tvs
2	117-3884	1	Module ASM
3	1-643275	1	Relay-12Vdc 40 Amp
4	103-2106	1	Key-Exmark Logo
5	103-5221	1	Switch-PTO
6	104-2466	1	Holddown-Battery

Ref.	Part Number	Qty.	Description
8	109-7621	1	Positive Battery Cable ASM
8:1	1-543393	1	Insulator-Solenoid
8:2	109-2407	1	Insulator-Battery
9	110-6765	3	Switch-Single Pole No
10	32128-33	2	Nut-Whizlock 1/4-20
11	117-2221	1	Switch-Ignition
12	117-7240	1	Cable-Battery, Negative
13	321-4	2	Screw-HH 1/4-20 X 3/4
14	32144-1	1	Screw-HWH #10-24 X 1/2 Tapite
15	3256-22	2	Washer-1/4 Sae
16	1-303335	1	Tie-Cable 7 15/16 (Large)

● Use dielectric grease on all wiring harness connectors.

Notes:

Notes:

Notes:

SEE EXMARK'S COMPLETE LINE OF ACCESSORIES AND OPTIONS

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	ROLL OVER PROTECTION SYSTEM (ROPS)
DECK LIFT ASSIST KIT	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	TURF STRIPER
12V POWER PORT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2011 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4500-862 Rev. B
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

