




METRO®

Model No. MG16KA483P—Serial No. 920000 and Up

Picture below may not reflect actual product.

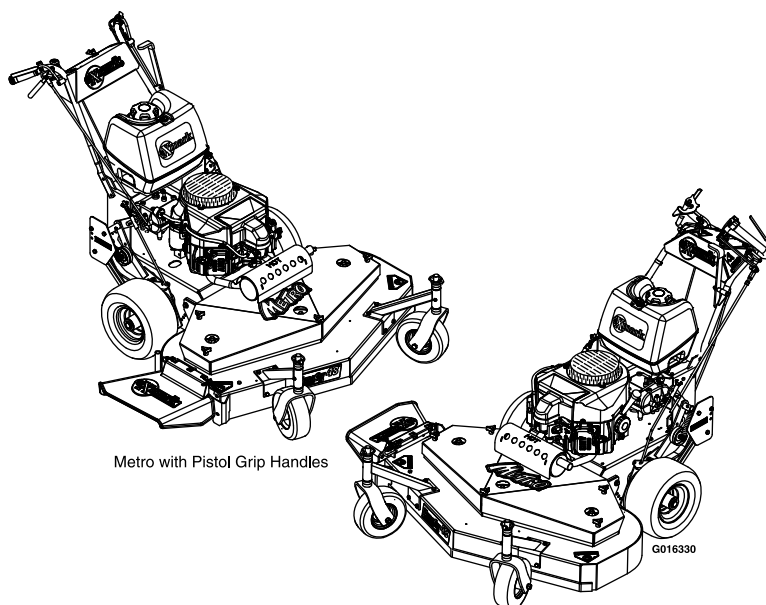

Metro with Pistol Grip Handles

Metro with ECS Handles

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HOC: height-of-cut	RRB: rear roller brush
ASM: assembly	HSBH: hex socket button head	SFH: slotted fillister head
BBC: blade brake control	HSFH: hex socket flat head	SHH: slotted hex head
BHTF: button head thread forming	HSH: hex socket head	SHWH: slotted hex washer head
CARR: carriage	HWH: hex washer head	SPH: slotted pan head
CCW: counter clockwise	HWHTF: hex washer head thread forming	SQH: square head
CW: clockwise	HYD: hydraulic	SRH: slotted round head
DEG: degrees	LH: left hand	STD: standard
DPA: Dual Point Adjustment	LP: Liquid Propane	TAP: self tapping
ECM: electronic control module	NI: nylon insert	TTH: torx truss head
EXT: external	NPTF: national pipe thread fine	
FH: flat head	PFH: phillips flat head	
GA: gauge	PPH: phillips pan head	
HD: heavy-duty	PPHTF: phillips pan head thread forming	
HF: hex flange	PRH: phillips round head	
HH: hex head	PTH: phillips truss head	
HHF: hex head flange	PTO: power-take-off	
HHFTF: hex head flange thread forming	RH: right hand	
HJ: hex jam	ROPS: roll-over protection system	
HLH: hex lag head		

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

EXMARK PARTS PLUS

PARTS

OVERNIGHT

OR *FREE**

If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Mower Deck Assembly 6

Engine Deck Assembly 8


Engine Deck Assembly (cont.) 10

Pistol Grip Upper Handle and Controls 12

Fuel Tank Assembly 14

Decals 15

Mower Deck Assembly

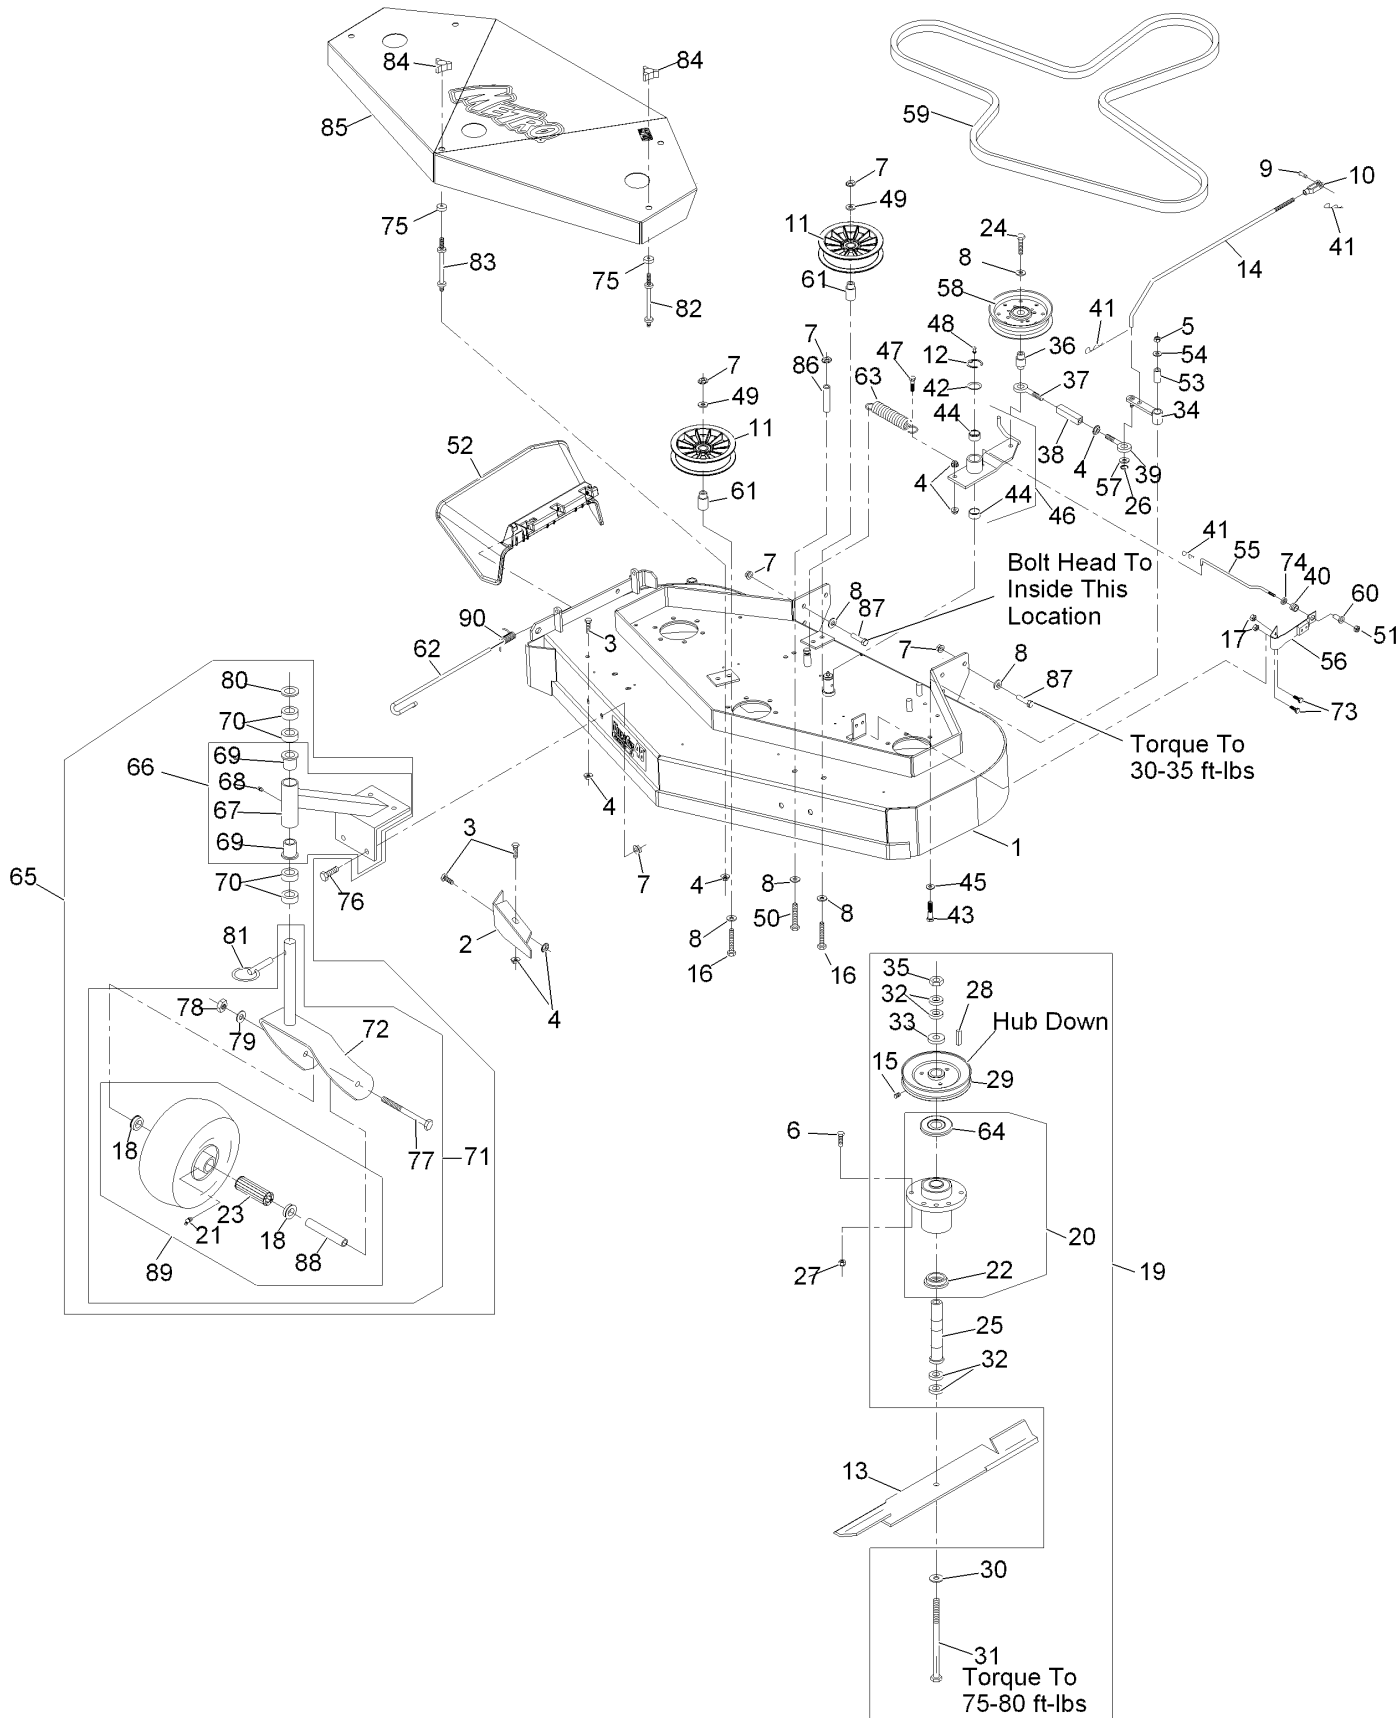

Mower Deck Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-2601	1	Deck (116-0617-01)W/Decals	45	1-303334	1	Washer-Spring Disc 5/16
			Dogleg & Discharge	46	103-3600	1	Idler Arm ASM
			Deflector	47	116-3515	1	Screw,HH Special 5/16-18 X 1.25
2	1-402107-01	1	Baffle-Dogleg	48	302-19	1	Zerk-1/4-28 Str
3	322-2	3	Screw-HH 5/16-18 X 5/8	49	3256-24	2	Washer-3/8 Sae
4	32128-20	11	Nut-Whizlock 5/16-18	50	323-20	1	Screw-HH 3/8-16 X 3-1/4
5	3296-29	1	Nut-Nyloc 5/16-18	51	3296-56	1	Nut-Nyloc 1/4-20 Thin
6	323-7	18	Screw-HH 3/8-16 X 1 1/4	52	109-5151	1	Deflector-Discharge
7	3290-357	19	Nut-Whizlock 3/8-16	53	1-403179	1	Tube-Pivot
8	98-5975	12	Washer-Spring Disc 3/8	54	3256-3	1	Washer-5/16 Std
9	1-808280	1	Pin-Clevis 5/16 X 1 49/64	55	1-323714	1	Rod-Brake
10	1-303105	1	Yoke-Adjustable	56	1-324372	1	Pad And Spring ASM
11	109-0977	2	Pulley,Idler 5"	57	3256-23	1	Washer-5/16 Sae
12	32151-103	1	E-Ring	58	116-3626	1	Pulley-Idler
13	103-6583	3	Blade, Notched	59	1-403174	1	Belt, Drive (Main Deck)
13	103-6581	3	Blade, Mulching ■	60	1-323746	1	Spacer-Flanged
13	103-6738	3	Blade, Low Lift	61	1-413113	2	Bushing-Idler
13	103-1577	3	Blade, Solid	62	109-8854	1	Pin-Chute
13	103-6336	3	Blade, Extreme	63	1-323071	1	Spring-Extension
14	1-323303	1	Linkage-Arm	64	103-1330	3	Guard-Bearing Top ▲
15	3246-18	3	Setscrew-5/16-18 X 3/8 ●	65	103-1238	2	Asm , Caster/Mount Complete
16	323-13	2	Screw-HH 3/8-16 X 2 3/4	66	1-302203	2	Support ASM
17	3296-42	2	Nut-Nyloc 1/4-20	67	1-302194-01	2	Support-Caster
18	1-513810	4	Bushing-Flanged	68	302-52	2	Zerk-1/8-27 Str
19	103-8387	3	Asm, Cutter Housing Complete	69	1-303514	4	Bearing-Flanged
20	103-8280	3	Kit, Cutter Housing ▲	70	1-303314	8	Spacer-Caster
21	302-61	2	Zerk-45° 1/4-28	71	103-1236	2	Asm, Caster Wheel Assembly
22	103-2535	3	Spacer-Guard Bottom	72	1-322145-01	2	Fork
23	1-513809	2	Bearing	73	321-4	2	Screw-HH 1/4-20 X 3/4
24	702809	1	Screw-HH	74	1-323748	1	Ring-Push On
25	1-323529	3	Tube-Spindle, Short ▲	75	1-323417	5	Washer-Belt Shield
26	32120-35	1	E-Ring	76	323-4	8	Screw-HH 3/8-16 X 3/4
27	3296-39	18	Nut-Nyloc 3/8-16	77	325-20	2	Screw-HH 1/2-13 X 6
28	1-807267	3	Key-Machine 1/4 X 3/16 X 1 1/4	78	3217-9	2	Nut-Hex 1/2-13
29	1-403183	3	Sheave ▲	79	3253-7	2	Washer-Lock 1/2
30	1-513208	3	Washer-Spring Disc 5/8	80	1-513338	2	Washer
31	1-800861	3	Screw-Cap, HH	81	1-809020	2	Pin
32	1-323539	12	Spacer-Blade Drive	82	1-303537	2	Stud-Shield, Belt (Short)
33	1-323339	3	Washer	83	1-303536	3	Stud-Shield, Belt (Long)
34	1-322235	1	Arm-Assist	84	1-323385	5	Knob-3 Prong
35	3219-6	3	Nut-Hex 5/8-18	85	116-2707	1	Shield (1-402100-01)W/Decals 48?
36	1-303434	1	Bushing-Engagement	86	1-403188	1	Spacer
37	1-303348	1	Eyebolt-Thread, LH	87	323-8	8	Screw-HH 3/8-16 X 1 1/2
38	1-303236	1	Body-Turnbuckle	88	1-513547	2	Spacer
39	1-303238	1	Eyebolt-Thread, RH	89	103-2171	2	Kit, Tire & Wheel Asm W/ Spacer
40	1-323747	1	Spring-Compression	90	116-0962	1	Spring, Torsion
41	1-806003	3	Hairpin-Cotter				
42	1-303352	1	Washer-Spindle				
43	322-10	1	Screw-HH 5/16-18 X 2				
44	1-323729	2	Sleeve-Bearing				

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

▲ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator's manual for locations.

Engine Deck Assembly

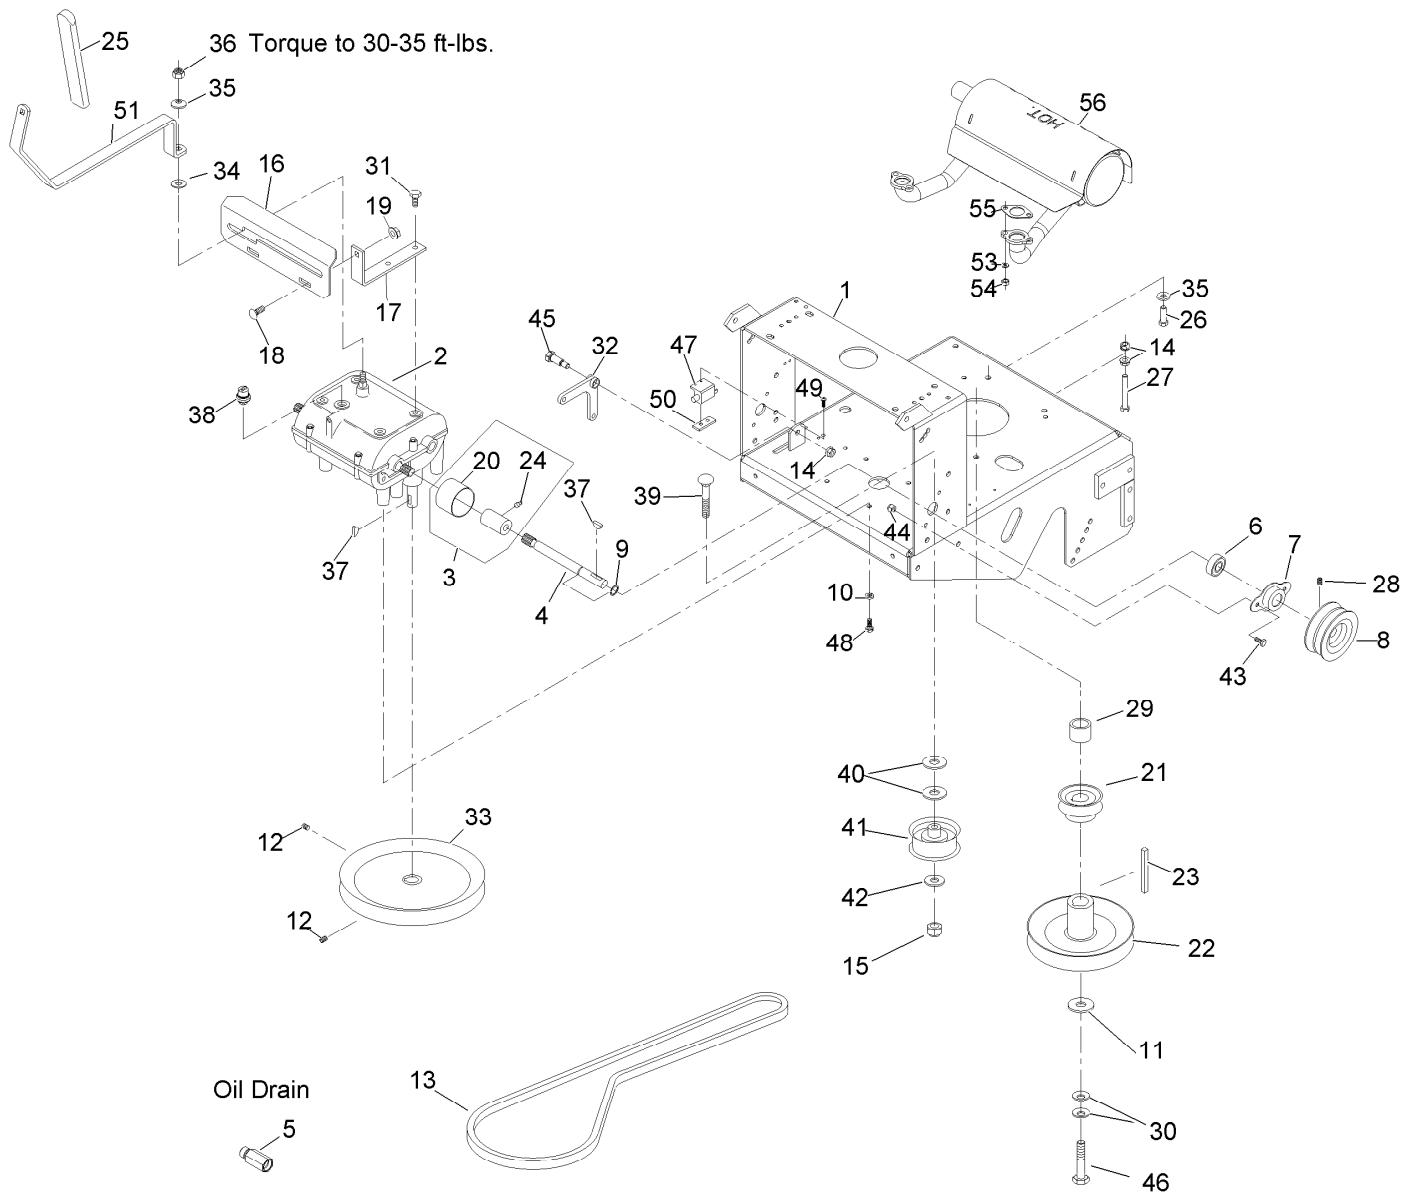


Engine Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-3499	1	Rear Deck (117-3521-01) W/Decals	27	323-13	1	Screw-HH 3/8-16 X 2 3/4
2	1-323500	1	Transmission	28	3246-18	2	Setscrew-5/16-18 X 3/8 ■
3	1-324340	2	Asm, Coupling, W/Guard And Zerk	29	1-633453	1	Spacer-Clutch
4	1-323502	2	Shaft-Transmission	30	1-603610	2	Washer-Spring Disc 7/16
5	103-2587	1	Adapter	31	9264964	4	Bolt-HWH 5/16-18 X 3/4 Tap
6	1-323252	2	Bearing-Shaft ●	32	1-303186	1	Bellcrank
7	1-323254	2	Flange-Output	33	1-323278	1	Sheave-Transmission ●
8	103-6511	2	Sheave-Transmission ●	34	1-323379	1	Washer
9	32151-62	2	Ring-Retaining	35	98-5975	5	Washer-Spring Disc 3/8
10	1-805005	4	Washer-Lock 5/16 Heavy	36	3296-6	1	Nut-Nyloc 3/8-24
11	1-373034	1	Washer	37	3257-5	3	Key-Woodruff #9 3/4 X 3/16
12	3245-41	2	Setscrew-1/4-20 X 3/8 ■	38	1-303282	1	Switch-Start, Neutral
13	1-323280	1	Belt, Transmission	39	3231-6	1	Bolt-Carriage 3/8-16 X 2
14	3290-357	3	Nut-Whizlock 3/8-16	40	3256-5	2	Washer-7/16 Std
15	3296-39	1	Nut-Nyloc 3/8-16	41	1-323285	1	Pulley-Idler, Flat
16	103-3498	1	Shifter Plate (1-323387-03) W/Decals	42	3256-24	1	Washer-3/8 Sae
17	1-323389-03	2	Bracket-Plate, Shift	43	321-3	4	Screw-HH 1/4-20 X 5/8
18	3230-1	2	Bolt-Carriage 5/16-18 X 3/4	44	3296-42	4	Nut-Nyloc 1/4-20
19	32128-20	2	Nut-Whizlock 5/16-18	45	1-603403	1	Bolt-Shoulder
20	51-4220	2	Guard-Coupler	46	116-3702	1	Screw-HH ■
21	103-1666	1	Sheave-Transmission ●	47	1-513051	1	Switch-N.O.
22	103-1667	1	Sheave ●	48	322-3	4	Screw-HH 5/16-18 X 3/4
23	103-4177	1	Key	49	3290-500	2	Screw-PPH #10-24 X 5/8
24	302-19	2	Zerk-1/4-28 Str	50	1-633181	1	Plate-Tapped
25	103-1733	1	Grip	51	103-1606	1	Asm Shift Lever, W/Grip
26	323-7	4	Screw-HH 3/8-16 X 1 1/4	53	114-3550	4	Washer-Lock, Spring
				54	114-3549	4	Nut-M8
				55	1-653313	2	Gasket-Exhaust
				56	116-4397	1	Muffler

● Apply anti-seize compound in bore.

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

Engine Deck Assembly (cont.)

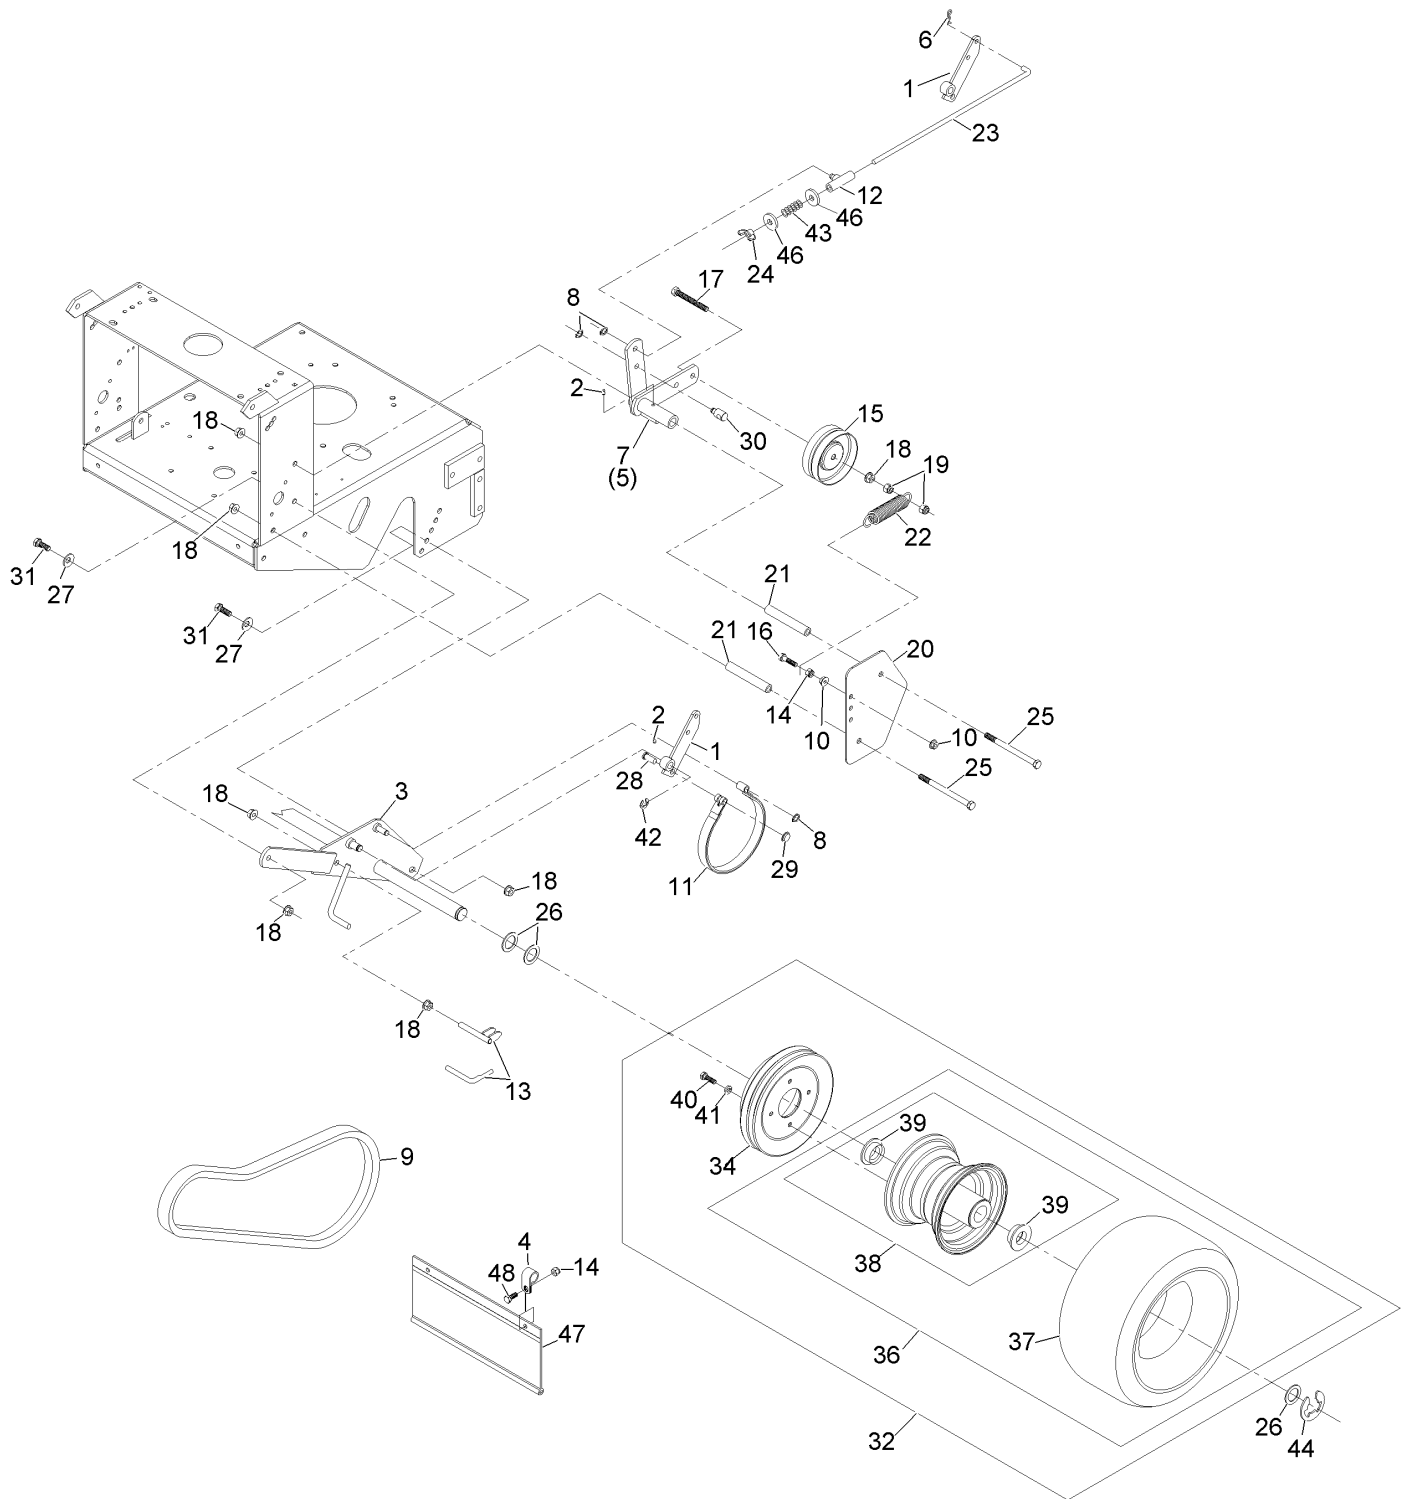


Engine Deck Assembly (cont.) (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-1611-03	2	Arm-Brake	24	1-513959	2	Wingnut-Nyloc 5/16
2	302-19	4	Zerk-1/4-28 Str	25	323-39	4	Screw-HH 3/8-16 X 5
3	1-322117-03	1	Axle	26	1-523157	1	Washer ●
4	2412-104	2	Clamp-R	26	1-543436	1	Washer-Spacer ●
5	103-1615-03	1	Arm-Idler, LH	27	98-5975	4	Washer-Spring Disc 3/8
6	1-806003	2	Hairpin-Cotter	28	1-323307	2	Pin-Clevis 1/2 X 1
7	103-1616-03	1	Arm-Idler, RH	29	1-803051	2	Nut-Push 3/8
8	32151-47	6	Ring-Retaining	30	103-1864	2	Swivel-Lever, Drive
9	1-323288	2	Belt, Wheel Drive (36"&48" Models)	31	323-6	4	Screw-HH 3/8-16 X 1
10	32128-20	4	Nut-Whizlock 5/16-18	32	109-4721	2	Asm, Wheel Drive (36"&48" Models)
11	1-323262	2	Band-Brake	34	109-4359	2	Drum And Sheave ASM
12	110-5866	2	Swivel-Brake	36	1-323719	2	Wheel And Tire ASM
13	1-412358	2	Scraper	37	1-323720	1	Tire-Turfmaster
14	3296-29	4	Nut-Nyloc 5/16-18	38	1-323328	1	Wheel And Hub ASM
15	1-323277	2	Idler-Wheel, Drive	39	1-323329	4	Bearing-Flanged
16	322-6	2	Screw-HH 5/16-18 X 1 1/4	40	322-5	8	Screw-HH 5/16-18 X 1
17	99-8664	2	Bolt-HH 3/8-16 X 3 Tap	41	1-805005	8	Washer-Lock 5/16 Heavy
18	3290-357	14	Nut-Whizlock 3/8-16	42	32120-47	2	Ring-Retaining
19	3296-39	4	Nut-Nyloc 3/8-16	43	1-323245	2	Spring-Compression
20	1-323287-01	2	Shield-Wheel, Drive	44	1-808519	2	Ring-Snap
21	1-323283	4	Spacer-Shield	46	3256-23	4	Washer-5/16 Sae
22	1-603402	2	Spring-Extension	47	98-3259	1	Shield-Trailing
23	1-323548	2	Linkage-Brake	48	322-3	2	Screw-HH 5/16-18 X 3/4

● QTY As Required

Pistol Grip Upper Handle and Controls

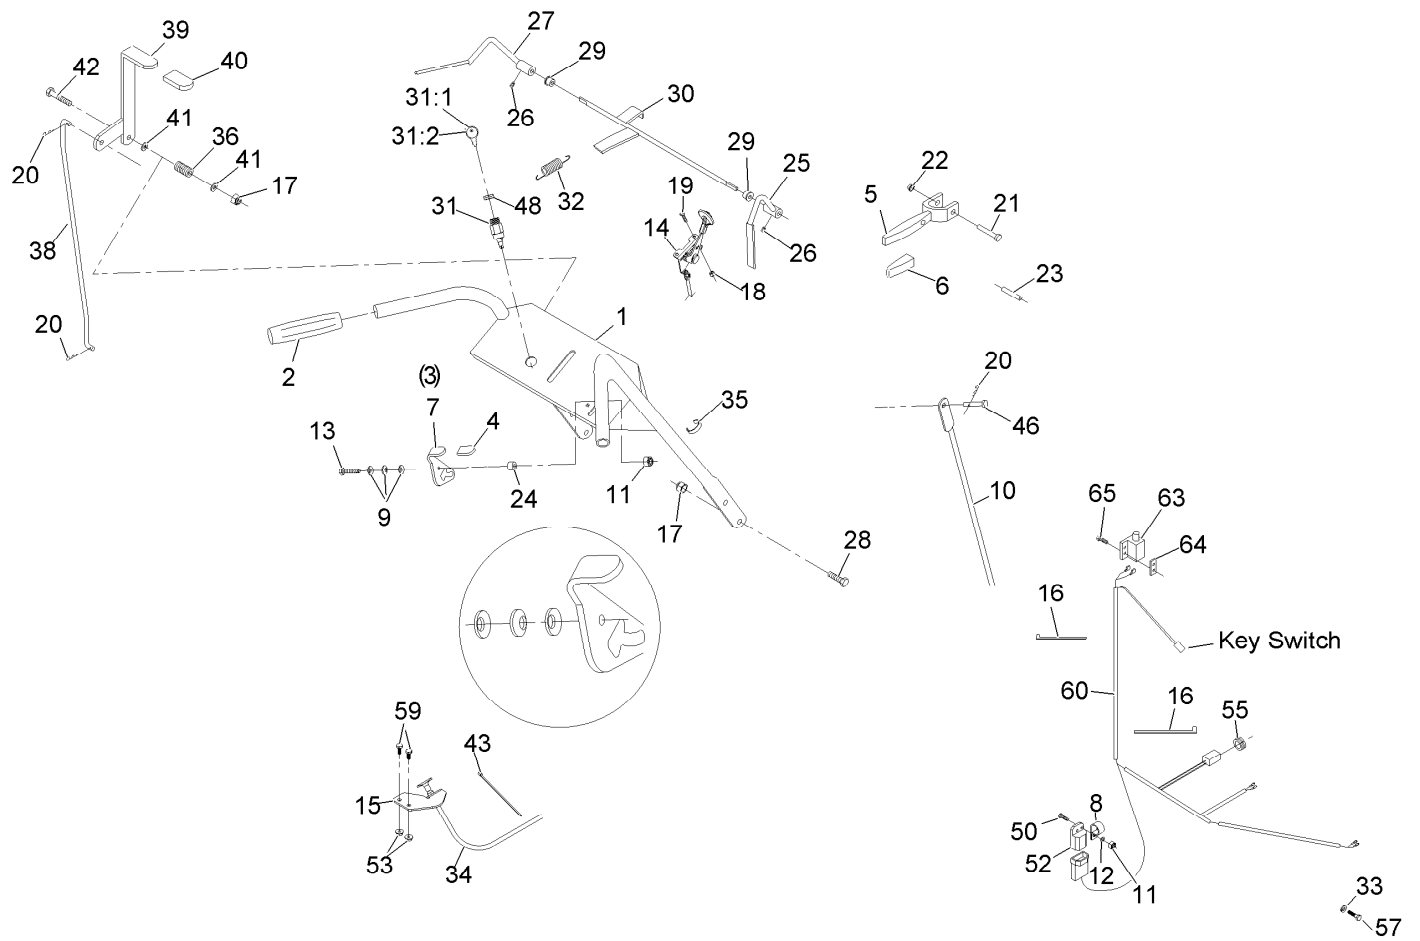


Pistol Grip Upper Handle and Controls (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-4695	1	Kit, Handle (109-4682-03) W/Decals	29	1-303365	2	Bushing-Nylon
2	1-303097	2	Grip-Handle	30	1-322192-03	1	Rod, Connecting
3	1-324279	1	LH Thumb Latch ASM ●	31	1-403121	1	Switch-Key
4	1-303019	2	Grip-Latch	31:1	1-603511	1	Key-Ignition
5	1-302006	2	Drive Lever ASM	31:2	103-2106	1	Key-Exmark Logo
6	1-303021	2	Grip-Lever, Drive	32	1-303363	1	Spring-Extension
7	1-324280	1	RH Thumb Latch ASM	33	33094-00	1	Washer
8	1-323229	1	Clip-Loom 3/8	34	103-1796	1	Cable-Choke
9	1-303435	6	Washer-Spring Disc 1/4	35	1-303088	1	Clip-Cable
10	1-323359	2	Linkage-Wheel, Drive	36	1-303160	1	Spring-Compression
11	3296-42	3	Nut-Nyloc 1/4-20	38	1-323298	1	Linkage-Blade, Upper
12	3256-22	1	Washer-1/4 Sae	39	1-322157	1	Lever ASM
13	321-18	2	Screw-HH 1/4-20 X 2 1/4	40	1-303020	1	Grip-Lever
14	116-2426	1	Cable, Throttle	41	3256-4	2	Washer-3/8 Std
15	103-1797-01	1	Bracket-Cable, Choke	42	323-10	1	Screw-HH 3/8-16 X 2
16	1-303287	5	Tie-Cable 5 1/2 (Small)	43	1-303335	1	Tie-Cable 7 15/16 (Large)
17	3296-39	5	Nut-Nyloc 3/8-16	46	1-808286	2	Pin-Clevis
18	3296-2	2	Nut-Nyloc #10-24	48	103-0498	1	Nut-Ignition
19	1-807513	2	Bolt-Carriage #10-24 X 1/2	50	321-4	1	Screw-HH 1/4-20 X 3/4
20	1-806003	4	Hairpin-Cotter	52	1-323430	1	Module-Interlock
21	1-808250	2	Pin-Lever, Drive	53	32128-33	2	Nut-Whizlock 1/4-20
22	1-803001	2	Nut	55	1-543296	1	Grommet
23	1-806340	2	Pin-Roll	57	33114-016	1	Screw-HH M8-1.25 X 16Mm
24	1-323549	2	Spacer	59	321-3	2	Screw-HH 1/4-20 X 5/8
25	1-412185-03	1	Lever-RH ▲	60	116-2661	1	Harness-Wire
26	1-803322	2	Setscrew-5/16-24 X 5/16 ■	63	1-513051	1	Switch-N.O.
27	1-412183-03	1	Lever-LH ▲	64	1-633181	1	Plate-Tapped
28	323-6	4	Screw-HH 3/8-16 X 1	65	3290-500	2	Screw-PPH #10-24 X 5/8

● Not illustrated

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

▲ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on inside of bore of OPC hub.

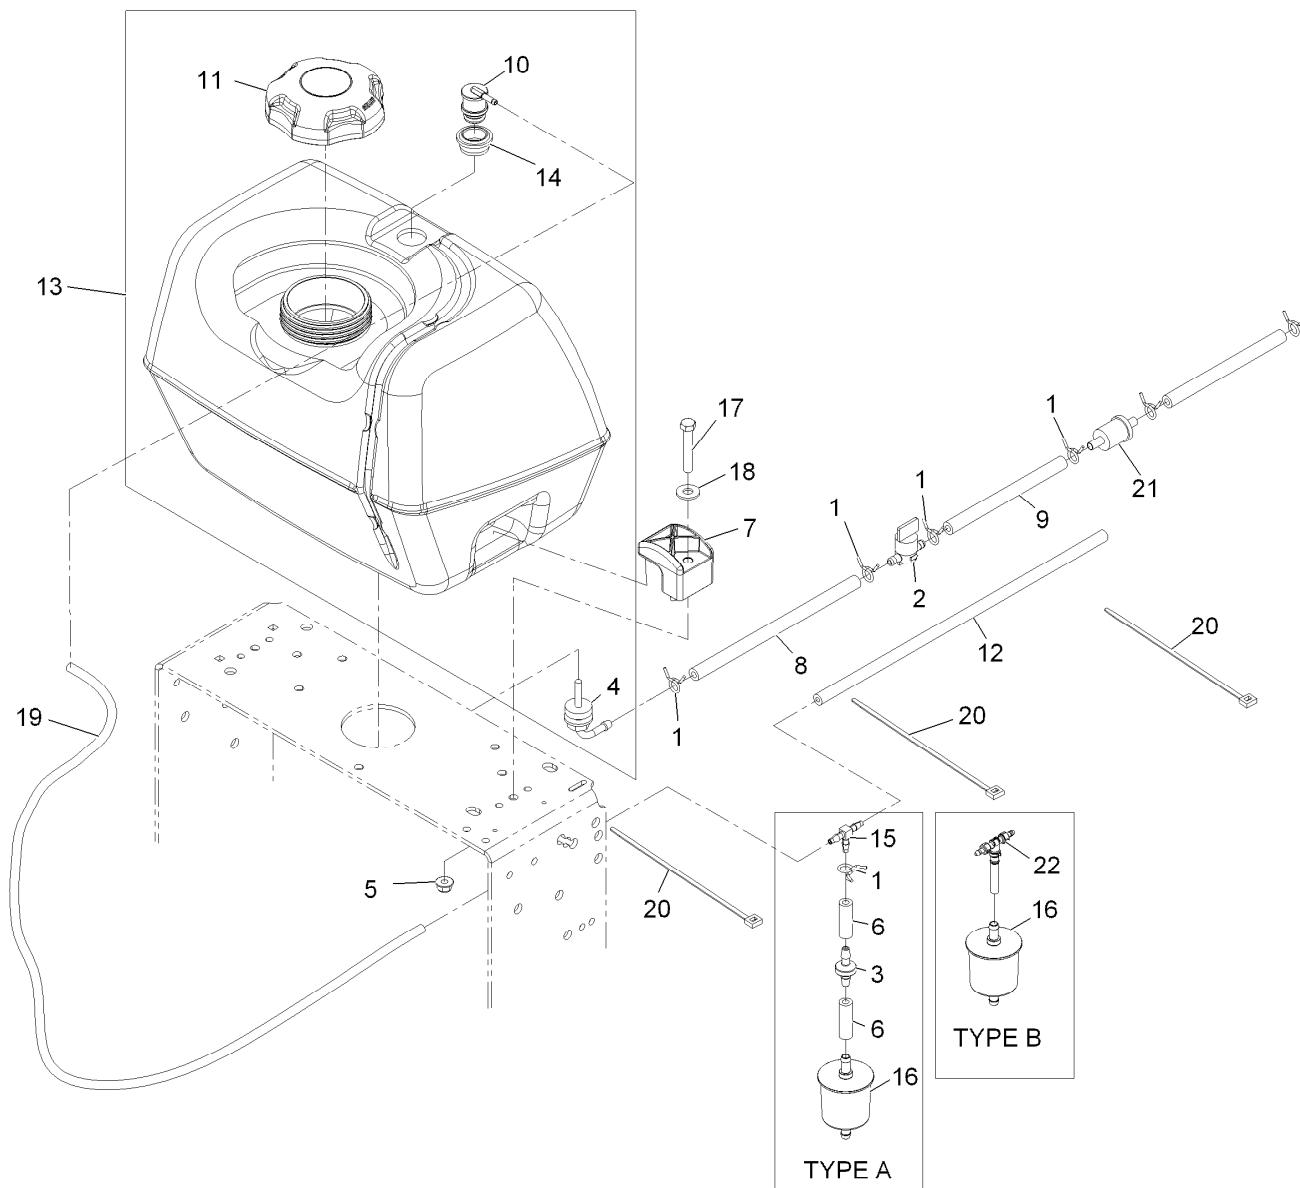

Fuel Tank Assembly


Ref.	Part Number	Qty.	Description
1	2412-98	5	Clamp-Hose
1	2412-98	4	Clamp-Hose
2	1-603770	1	Valve-Fuel
3	99-5000	1	Valve-Check, Fuel
4	103-2605	1	Fitting-Fuel Bulkhead W/Strainer ▲
5	104-8300	2	Nut-Nyloc 5/16-18 Flg
6	106-9492	2	Hose-Fuel
7	107-4543	2	Clamp
8	109-0650	1	Hose-Fuel
9	99-9415	1	Hose-Fuel
10	114-0285	1	Valve-Rollover
11	120-5461	1	Cap-Fuel, Ratcheting

Ref.	Part Number	Qty.	Description
12	115-7872	1	Hose-Fuel
13	116-3656	1	Asm-Fuel Tank
14	114-0284	1	Grommet
15	120-2234	1	Fitting-Tee
16	120-2235	1	Filter-Air
17	322-10	2	Screw-HH 5/16-18 X 2
18	3256-3	2	Washer-5/16 Std
19	116-4346	1	Hose-Emissions
20	1-303335	3	Tie-Cable 7 15/16 (Large)
21		1	Pn 41019-1055 Filter W/6In Fuel Line ■●
22	116-5464	1	Asm-Tee And Check

● Not serviced separately

▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

■ Obtain parts from www.kawpowerepc.com

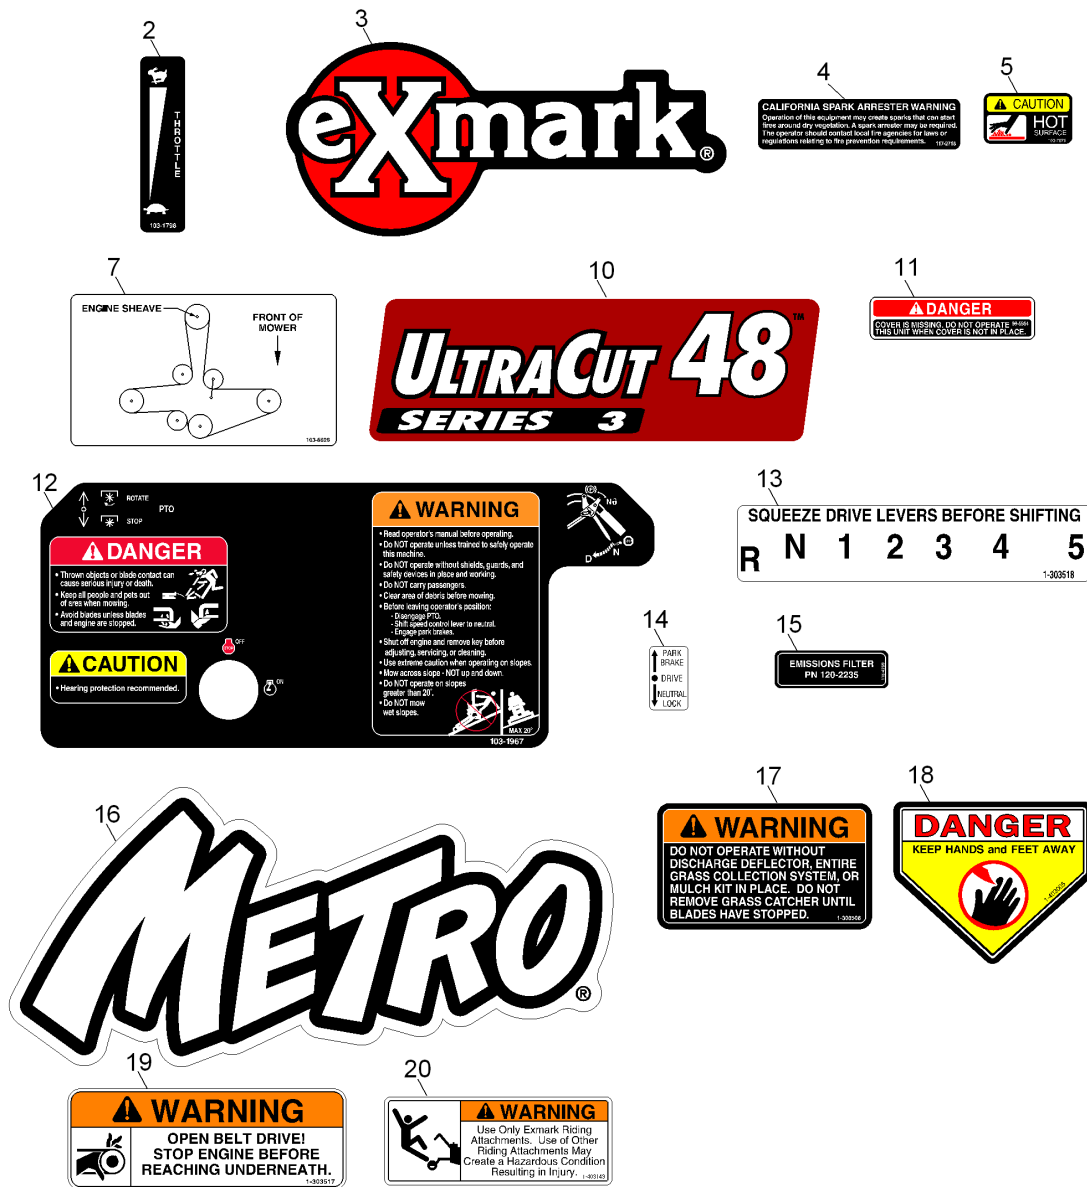

Decals

Ref.	Part Number	Qty.	Description
2	103-1798	1	Decal, Throttle
3	103-2882	1	Decal, Exmark Logo
4	117-2718	1	Decal-Arrester, Spark
5	103-2076	1	Decal-Caution
7	103-5626	1	Decal, Belt Routing
10	116-4697	1	Decal-Ultracut 48 Series 3
11	98-5954	1	Decal-Cover, Missing
12	103-1967	1	Decal, Console
13	1-303518	1	Decal, Shifter

Ref.	Part Number	Qty.	Description
14	1-323550	2	Decal, Neutral/Brake
15	116-4769	1	Decal-Filter, Emissions
16	103-2920	1	Decal, Metro Model
17	1-303508	1	Decal-Warning, Discharge
18	1-403005	2	Decal-Danger
19	1-303517	1	Decal, Belt Drive
20	1-403143	1	Decal, Sulky Warning
99	103-2640	1	Decal, Kit ●

● Not illustrated

SEE EXMARK'S COMPLETE LINE OF ACCESSORIES AND OPTIONS

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	ROLL OVER PROTECTION SYSTEM (ROPS)
DECK LIFT ASSIST KIT	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	TURF STRIPER
12V POWER PORT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2011 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4500-763 Rev. B
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

