



Count on it.

Form No. 3360-963 Rev B

Parts Catalog

TITAN Z6050

Zero-Turn-Radius Riding Mower

Model No. 74824—Serial No. 290000001 and Up

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquid Propane

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Frame and Castor Wheel Assembly 4

Motion Control Assembly 5

Brake Control Assembly 6

Control Assembly 7

Seat Assembly 8

Traction Drive Assembly 9

RH Hydro Assembly No. 115-2550 10

LH Hydro Assembly No. 115-2551 12

Engine, Clutch and Exhaust Assembly 14

Fuel Delivery System 15

Body and Styling Assembly 16

Electrial Assembly 17


Deck Lift Assembly 18

60 Inch Deck Assembly 19

60 Inch Deck and Decal Assembly No. 117-5375 20

60 Inch Deck Spindle and Blade Assembly 21

Attachments and Accessories 22

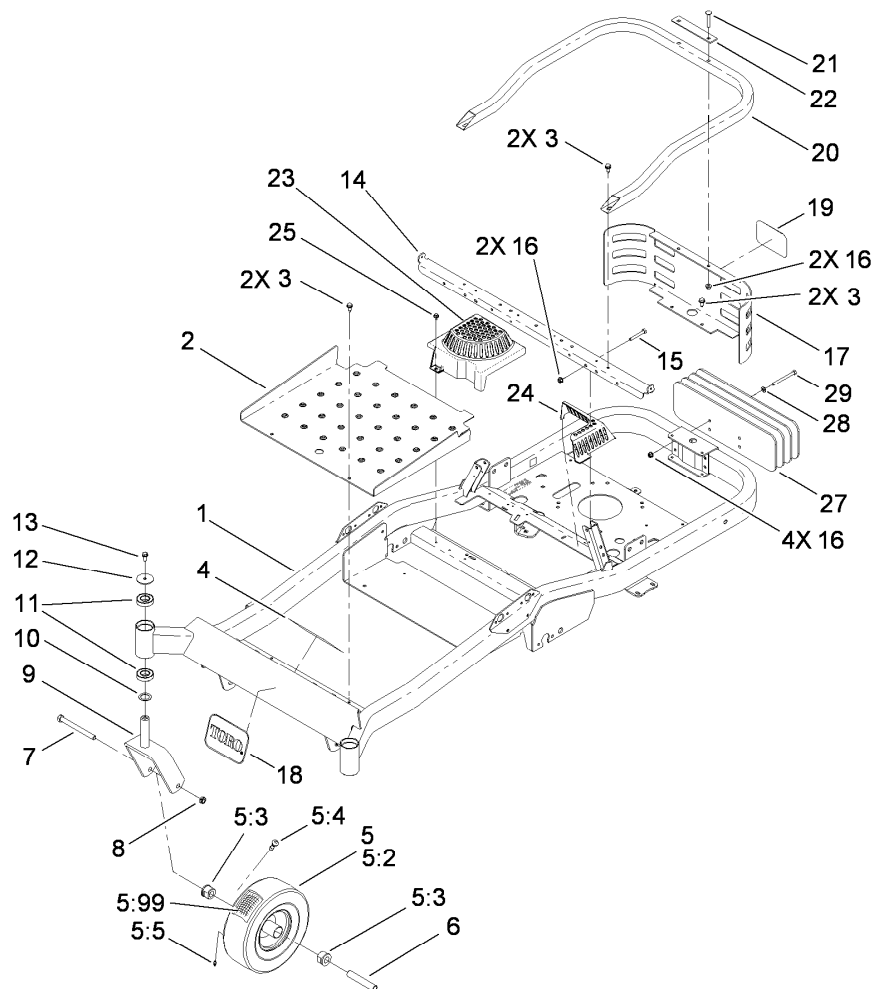

Frame and Castor Wheel Assembly


Ref.	Part Number	Qty.	Description
1	117-7356-01	1	Frame ASM
2	115-2531-03	1	Floorpan
3	32144-70	6	Screw-HWHTF
4	109-8965	1	Decal-Safety
5	115-2554	2	Wheel And Tire ASM
5:2	115-2557	1	Tire-Smooth
5:3	114-1640	2	Bushing-Flange
5:4	232-27	1	Stem-Valve
5:5	302-5	1	Fitting-Grease
5:99	117-1234	1	Tube-Inner
6	104-3667	2	Spanner-Wheel
7	325-22	2	Screw-HH
8	3296-45	2	Nut-Lock, NI
9	110-6634-01	2	Caster Fork ASM
10	10-8110	2	Washer-Thrust
11	109-3678	4	Bearing-Ball
12	109-3724	2	Washer

Ref.	Part Number	Qty.	Description
13	3234-47	2	Screw-HHF
14	115-2566-03	1	Support-Seat
15	322-11	2	Screw-HH
16	104-8300	8	Nut-Flange, NI
17	115-2632-03	1	Guard-Rear, Shield
18	62-5550	1	Decal
19	105-8278	1	Decal
20	115-2565-01	1	Guard-Rear, Tube
21	3230-6	2	Screw-CARR
22	115-5061-01	1	Plate-Spacer
23	117-1241	1	Cover-Fan, RH
24	117-1242	1	Cover-Fan, LH
25	46-8560	2	Screw-HHFTF
27	117-5396-03	4	Plate-Weight, 60 Inch
28	3256-23	4	Washer-Flat
29	322-22	4	Screw-HH



Ref.	Part Number	Qty.	Description
16	3220-2	2	Nut-Jam
17	110-6783-05	1	Arm-Actuator, LH
18	110-6782-05	1	Arm-Actuator, RH ●
19	115-5023	2	Tab-Stop
20	110-6873	2	Eccentric
21	110-6874	2	Screw-Eccentric
22	110-6875	2	Bolt-Shoulder
23	110-6751	2	Bracket-Return
24	110-6750	2	Plate-Return
25	110-6752	2	Spring-Compression
26	110-6894	6	Washer-Pivot
27	323-4	2	Screw-HH
28	110-6784	2	Bolt-Shoulder
29	37-8771	2	Bolt-Shoulder
30	104-8300	2	Nut-Flange, NI
31	112-9771	2	Washer-Teflon


3360-963B

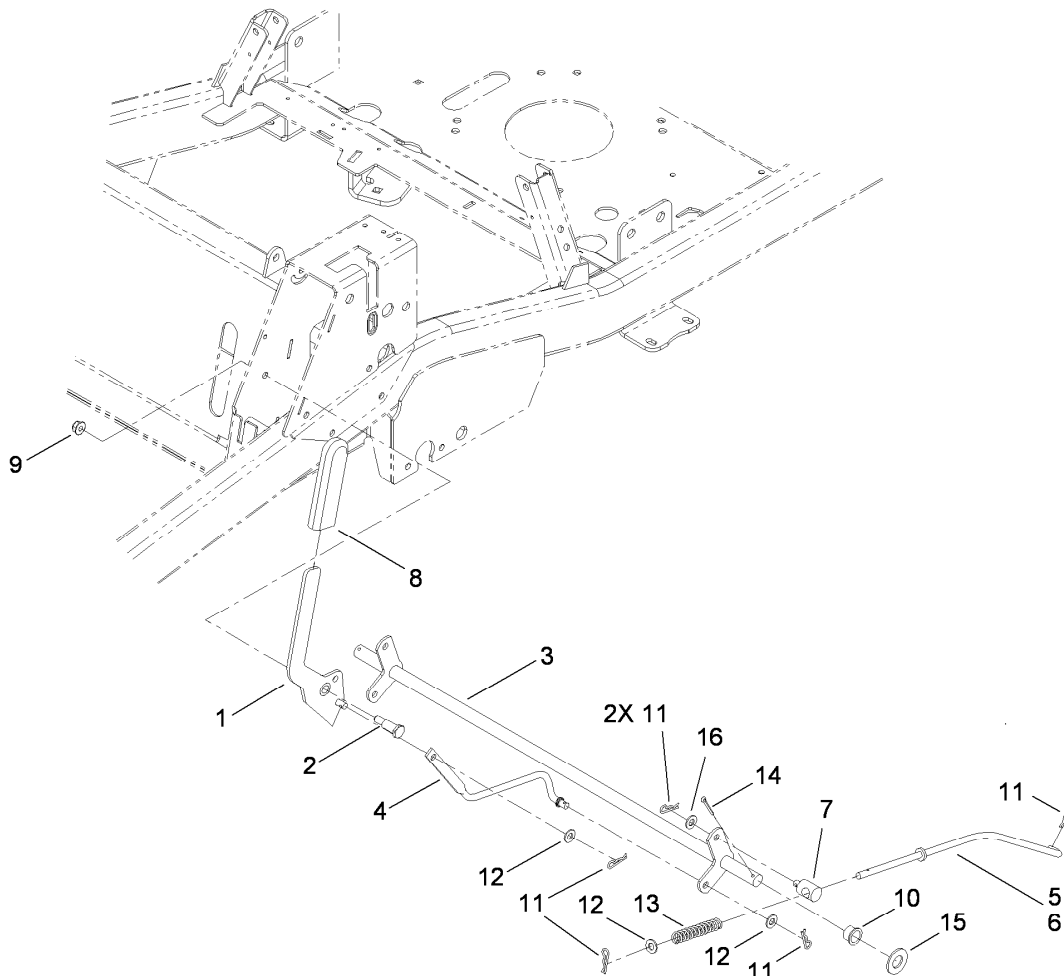

Brake Control Assembly

Ref.	Part Number	Qty.	Description
1	117-1167	1	Brake Handle ASM
2	63-2650	1	Screw-Shoulder
3	115-5071-03	1	Brake-Bellcrank
4	115-5074	1	Link-Brake
5	115-9679	1	Rod-Brake, LH
6	115-9680	1	Rod-Brake, RH ●
7	115-9681	2	Fitting-Rod
8	1-633268	1	Grip-Lever
9	104-8300	1	Nut-Flange, NI
10	256-292	2	Bushing-Flange, NI
11	1-806003	8	Pin-Cotter, Hair
12	3256-23	4	Washer-Flat
13	1-603807	2	Spring-Return, Neutral
14	3272-11	2	Pin-Cotter
15	3256-27	2	Washer-Flat
16	40-1940	2	Washer


● Not illustrated

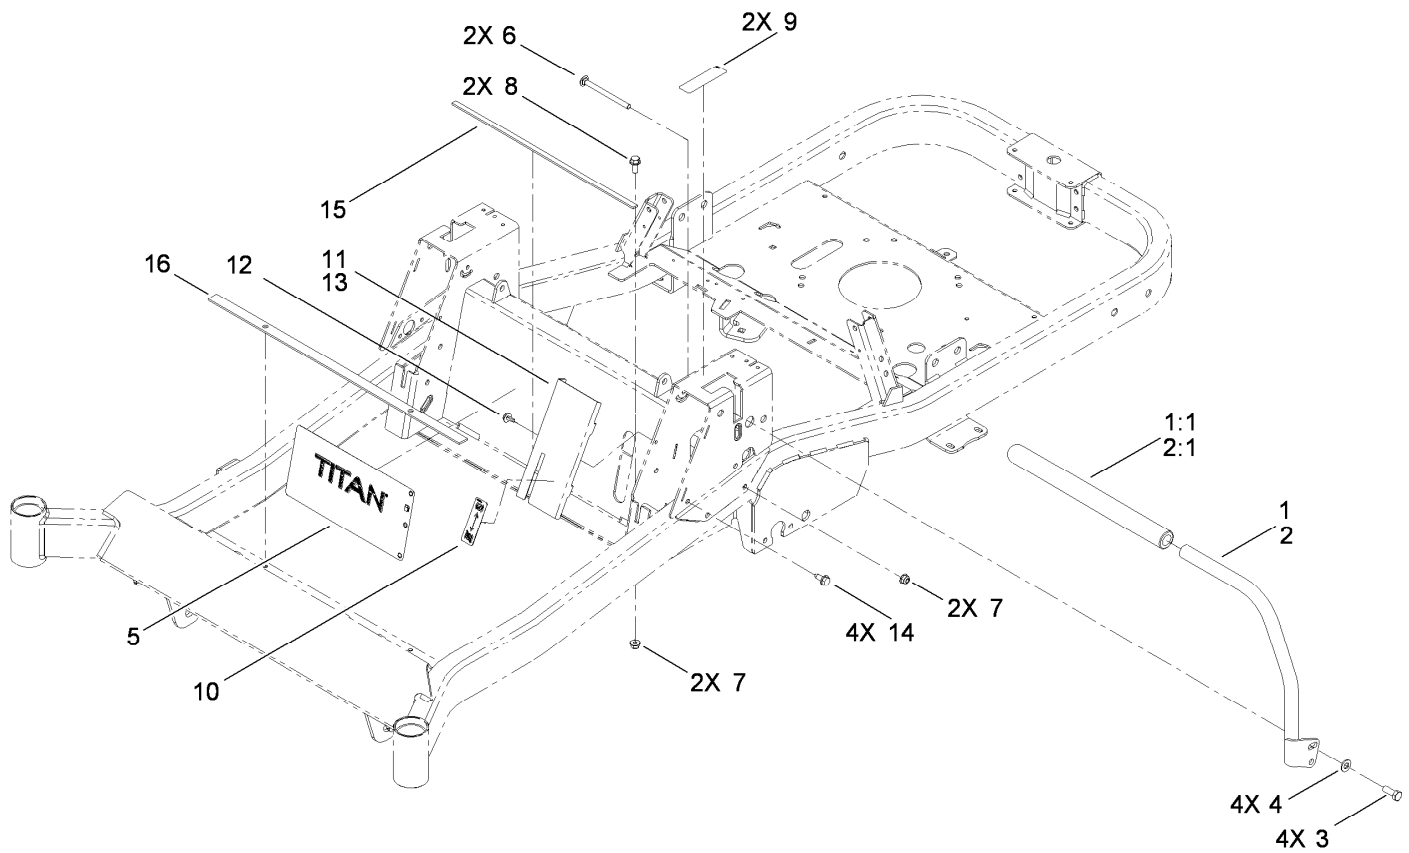

Control Assembly


Ref.	Part Number	Qty.	Description
1	117-5338	1	LH Control Handle ASM
1:1	108-6187	1	Grip
2	117-5339	1	RH Control Handle ASM ●
2:1	108-6187	1	Grip ●
3	323-6	4	Screw-HH
4	3256-24	4	Washer-Flat
5	117-1164	1	Decal
6	106-9758	2	Screw-CARR
7	104-8300	4	Nut-Flange, NI
8	3234-47	2	Screw-HHF
9	99-8936	2	Decal-Control, Motion
10	115-9625	1	Decal
11	115-2561-03	1	Cover-Control, LH
12	46-8560	2	Screw-HHFTF
13	117-1255-03	1	Cover-Control, RH ●
14	32144-70	4	Screw-HWHTF
15	117-7237	1	Strip-Vibration, Anti
16	117-7238	1	Strip-Vibration, Anti

● Not illustrated

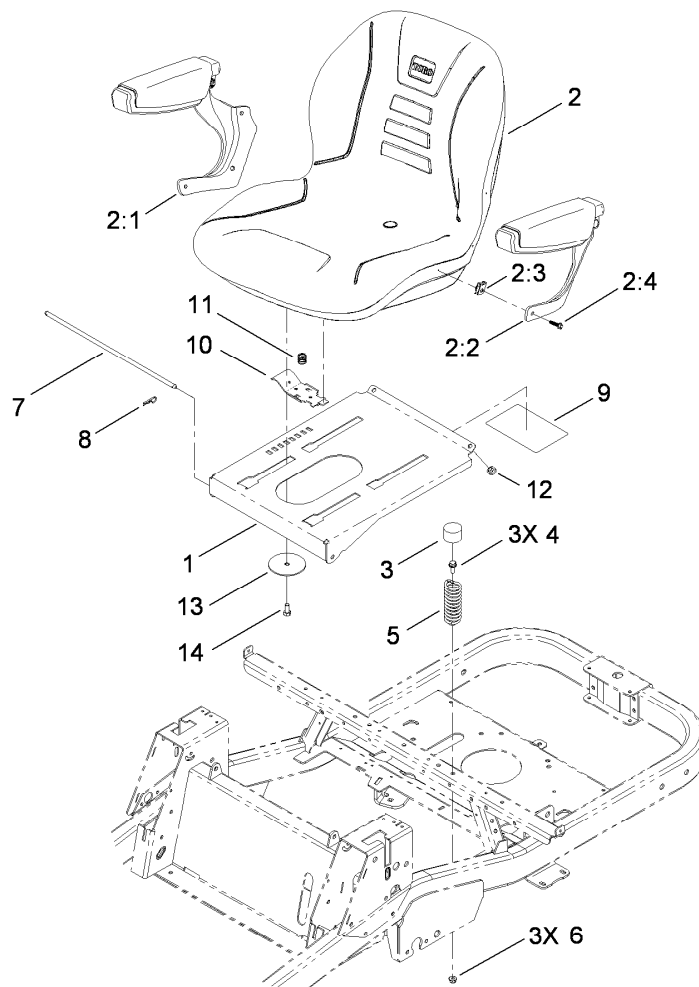

Seat Assembly

Ref.	Part Number	Qty.	Description
1	117-5320-03	1	Pan-Seat
2	115-5053	1	18 Inch Seat ASM
2:1	117-5346	1	Armrest-RH
2:2	117-5347	1	Armrest-LH
2:3	117-5348	6	Nut-Speed
2:4	117-5349	6	Screw-Tapping
3	701178	3	Cap-Protector
4	3234-47	3	Screw-HHF
5	92-7054	3	Spring-Compression
6	104-8300	3	Nut-Flange, NI
7	115-4966	1	Rod-Stop
8	3290-250	2	Pin-Hair
9	115-9630	1	Decal-Maintenance
10	115-9623	1	Latch-Seat
11	115-9624	1	Spring-Compression
12	1-513658	2	Bumper
13	117-5307	1	Washer-Seat
14	323-4	1	Screw-HH

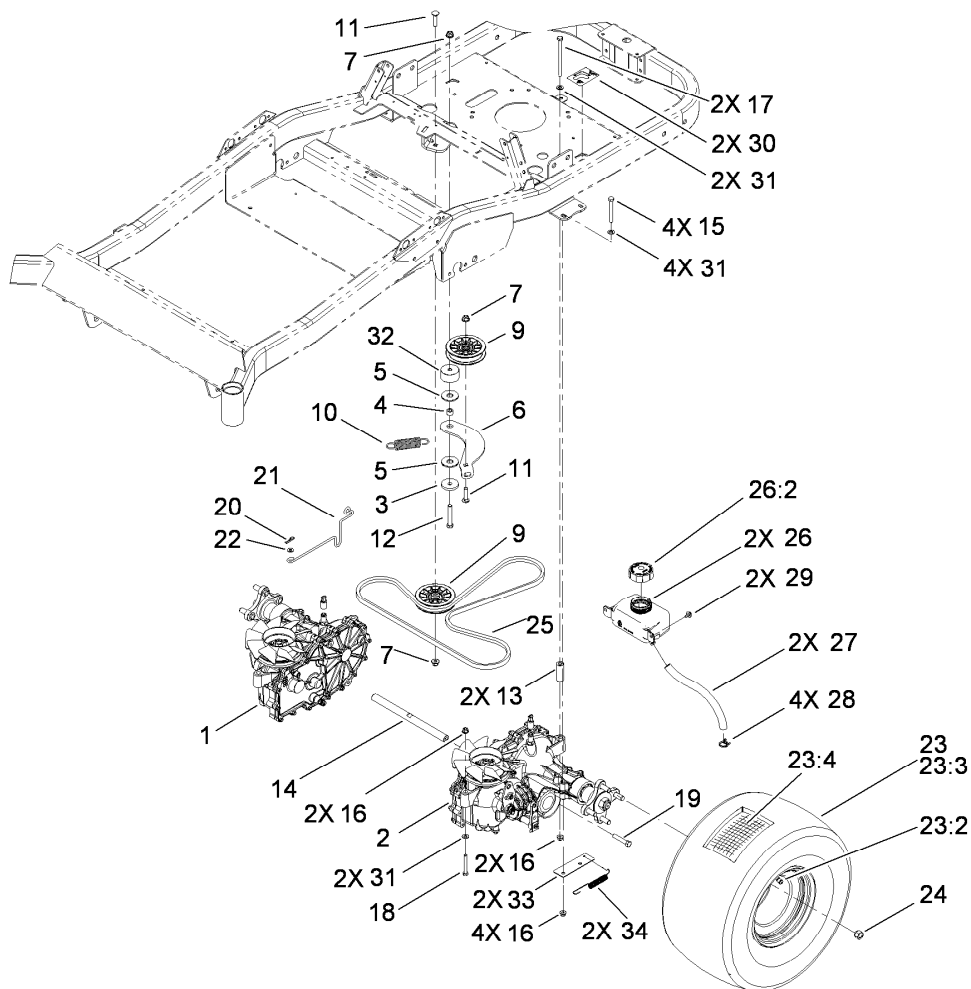


Traction Drive Assembly

Ref.	Part Number	Qty.	Description
1	115-2550	1	Hydro-RH
2	115-2551	1	Hydro-LH
3	110-9981	1	Washer-Plain
4	115-4986	1	Spacer
5	114-0463	2	Washer-Friction, Composite
6	117-5350	1	Arm-Idler
7	104-8301	3	Nut-Flange, NI
9	109-3397	2	Pulley-Idler, Flat
10	1-603402	1	Spring-Extension
11	3231-4	2	Screw-CARR
12	323-12	1	Screw-HH
13	109-3652	2	Spacer-Hydro
14	115-2559	1	Shaft-Cross, Hydro
15	322-13	4	Screw-HH
16	104-8300	8	Nut-Flange, NI
17	322-38	2	Screw-HH
18	322-11	2	Screw-HH
19	323-10	2	Screw-HH
20	1-806003	2	Pin-Cotter, Hair

Ref.	Part Number	Qty.	Description
21	115-4990	2	Rod-Bypass
22	3256-22	2	Washer-Flat
23	115-2593	2	Tire And Rim ASM
23:2	232-27	1	Stem-Valve
23:3	99-2994	1	Tire
23:4	93-3893	1	Tube-Inner
24	242-50	8	Nut-Lug
25	115-9613	1	V-Belt
26	115-9618	1	HYD Reservoir ASM
26:2	109-3320	1	Cap-Reservoir, HYD
27	115-4969	2	Hose-Overflow
28	117-1193	4	Clamp-Hose
29	46-8560	2	Screw-HHFTF
30	117-1158	2	Decal-Bypass
31	3256-23	8	Washer-Flat
32	117-5351	1	Spacer
33	117-7248-03	2	Plate-Spring
34	110769	2	Spring-Extension


RH Hydro Assembly No. 115-2550

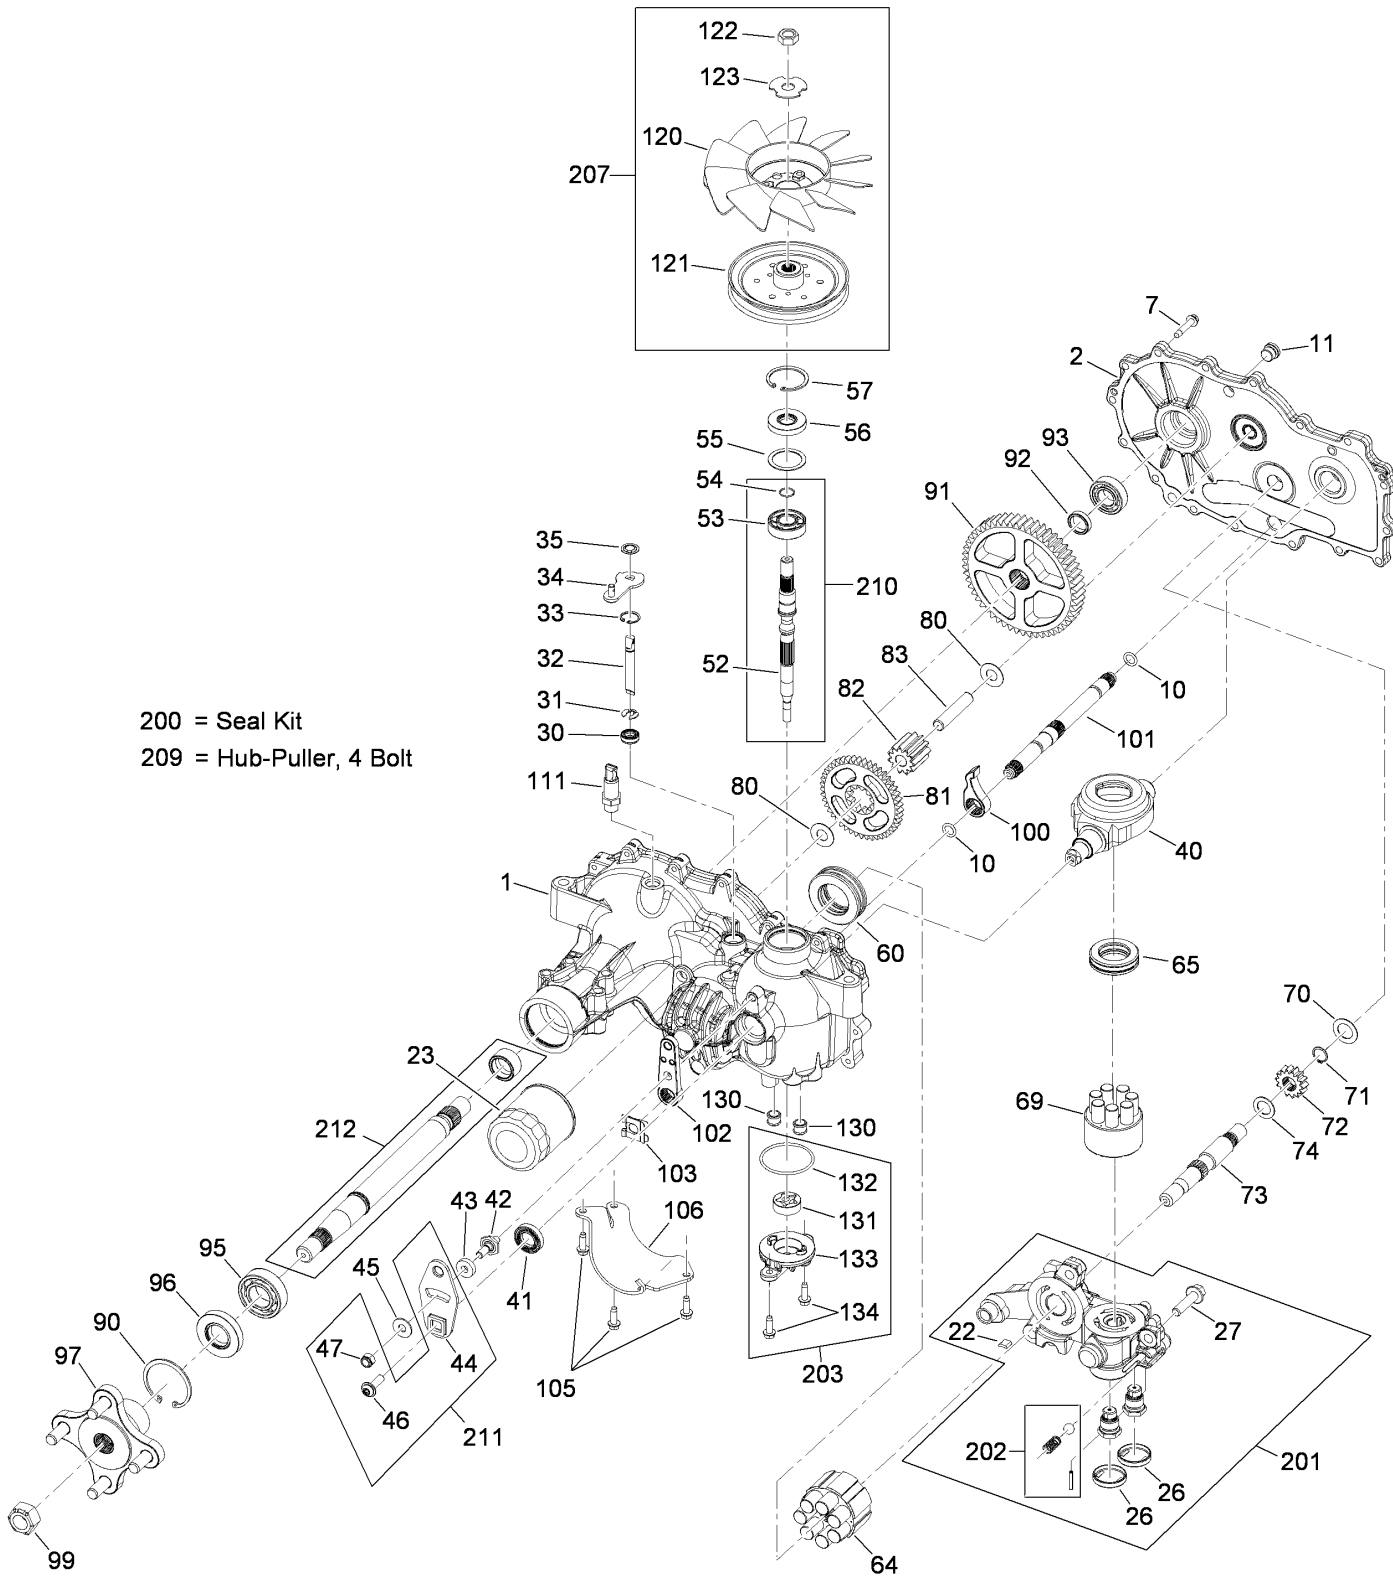

RH Hydro Assembly No. 115-2550 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	117-5357	1	RH Main Housing Kit	80	94-1933	1	Washer
2	117-5358	1	Housing Side Kit	81	114-1692	1	Gear-45T
7	117-5359	16	Screw-Hfhcs	82	114-1693	1	Gear-11T
10	114-1678	2	O-Ring	83	104-5329	1	Pin-Jackshaft
11	104-2189	1	Plug-Thread, Straight	90	104-2169	1	Ring-Retaining
22	114-1680	1	Plate-Bypass	91	114-1694	1	Gear-54T
23	109-3321	1	Element-Oil Filter, HYD	92	114-1695	1	Spacer
26	114-1683	2	Seal-Plug	93	114-1696	1	Bearing-Ball
27	114-1684	3	Screw-Hfhc	95	104-2143	1	Bearing-Ball
30	106-8676	1	Seal-Lip	96	104-2144	1	Seal
31	106-8677	1	Ring-Retaining, EXT	97	109-5939	1	Hub Kit
32	114-1685	1	Rod-Bypass	99	105-1895	1	Nut
33	106-8679	1	Ring-Retaining, Int	100	114-1697	1	Pawl-Brake
34	107-2490	1	Arm-Bypass	101	117-5360	1	Shaft-Brake
35	106-8681	1	Ring-Retaining, EXT	102	114-1699	1	Handle-Brake
40	104-5304	1	Swashplate-Trunnion	103	114-8450	1	Clip-Retaining
41	104-5313	1	Seal-Lip	105	104-2120	3	Screw
42	104-2116	1	Stud	106	114-8473	1	Guard-Filter, LH
43	112-9853	1	Puck-Friction	111	109-3278	1	Adapter-Straight
44	106-8747	1	Arm-Control	120	114-8453	1	Fan-7.0
45	114-8491	1	Washer	121	114-8454	1	Pulley-5.0 Inch
46	107-2488	1	Screw	122	104-2168	1	Nut-Hex
47	105-1872	1	Nut	123	107-9122	1	Washer-Slotted
52	114-1687	1	Shaft-Input	130	114-8455	2	Tube-Connecting
53	104-5311	1	Bearing-Ball	131	104-2122	1	Gerotor ASM
54	104-5307	1	Ring-Retaining	132	109-3540	1	O-Ring-Seal
55	104-5308	1	Spacer	133	114-8457	1	Cover-Charge Pump
56	104-5310	1	Seal-Lip	134	104-2120	2	Screw
57	104-5309	1	Ring-Retaining	200	109-3537	1	Complete Seal Kit
60	112-4154	1	Bearing-Thrust	201	114-8463	1	RH Center Section Kit
64	114-1689	1	Motor Cylinder Block Kit	202	114-8464	1	Charge Relief Kit
65	94-6922	1	Bearing-Thrust	203	114-8465	1	Charge Kit
69	110-8561	1	Pump Block ASM	207	109-5938	1	Fan And Pulley Kit
70	104-5339	1	Washer-Flat	209	114-8467	1	Hub-Puller, 4 Bolt
71	104-5340	1	Ring-Retaining	210	117-5361	1	Shaft Input Kit
72	114-1690	1	Gear-14T	211	117-5362	1	Arm Control Kit
73	114-1691	1	Shaft-Motor	212	114-8470	1	Axle Shaft Kit
74	104-5360	1	Washer-Shaft, Motor				


LH Hydro Assembly No. 115-2551

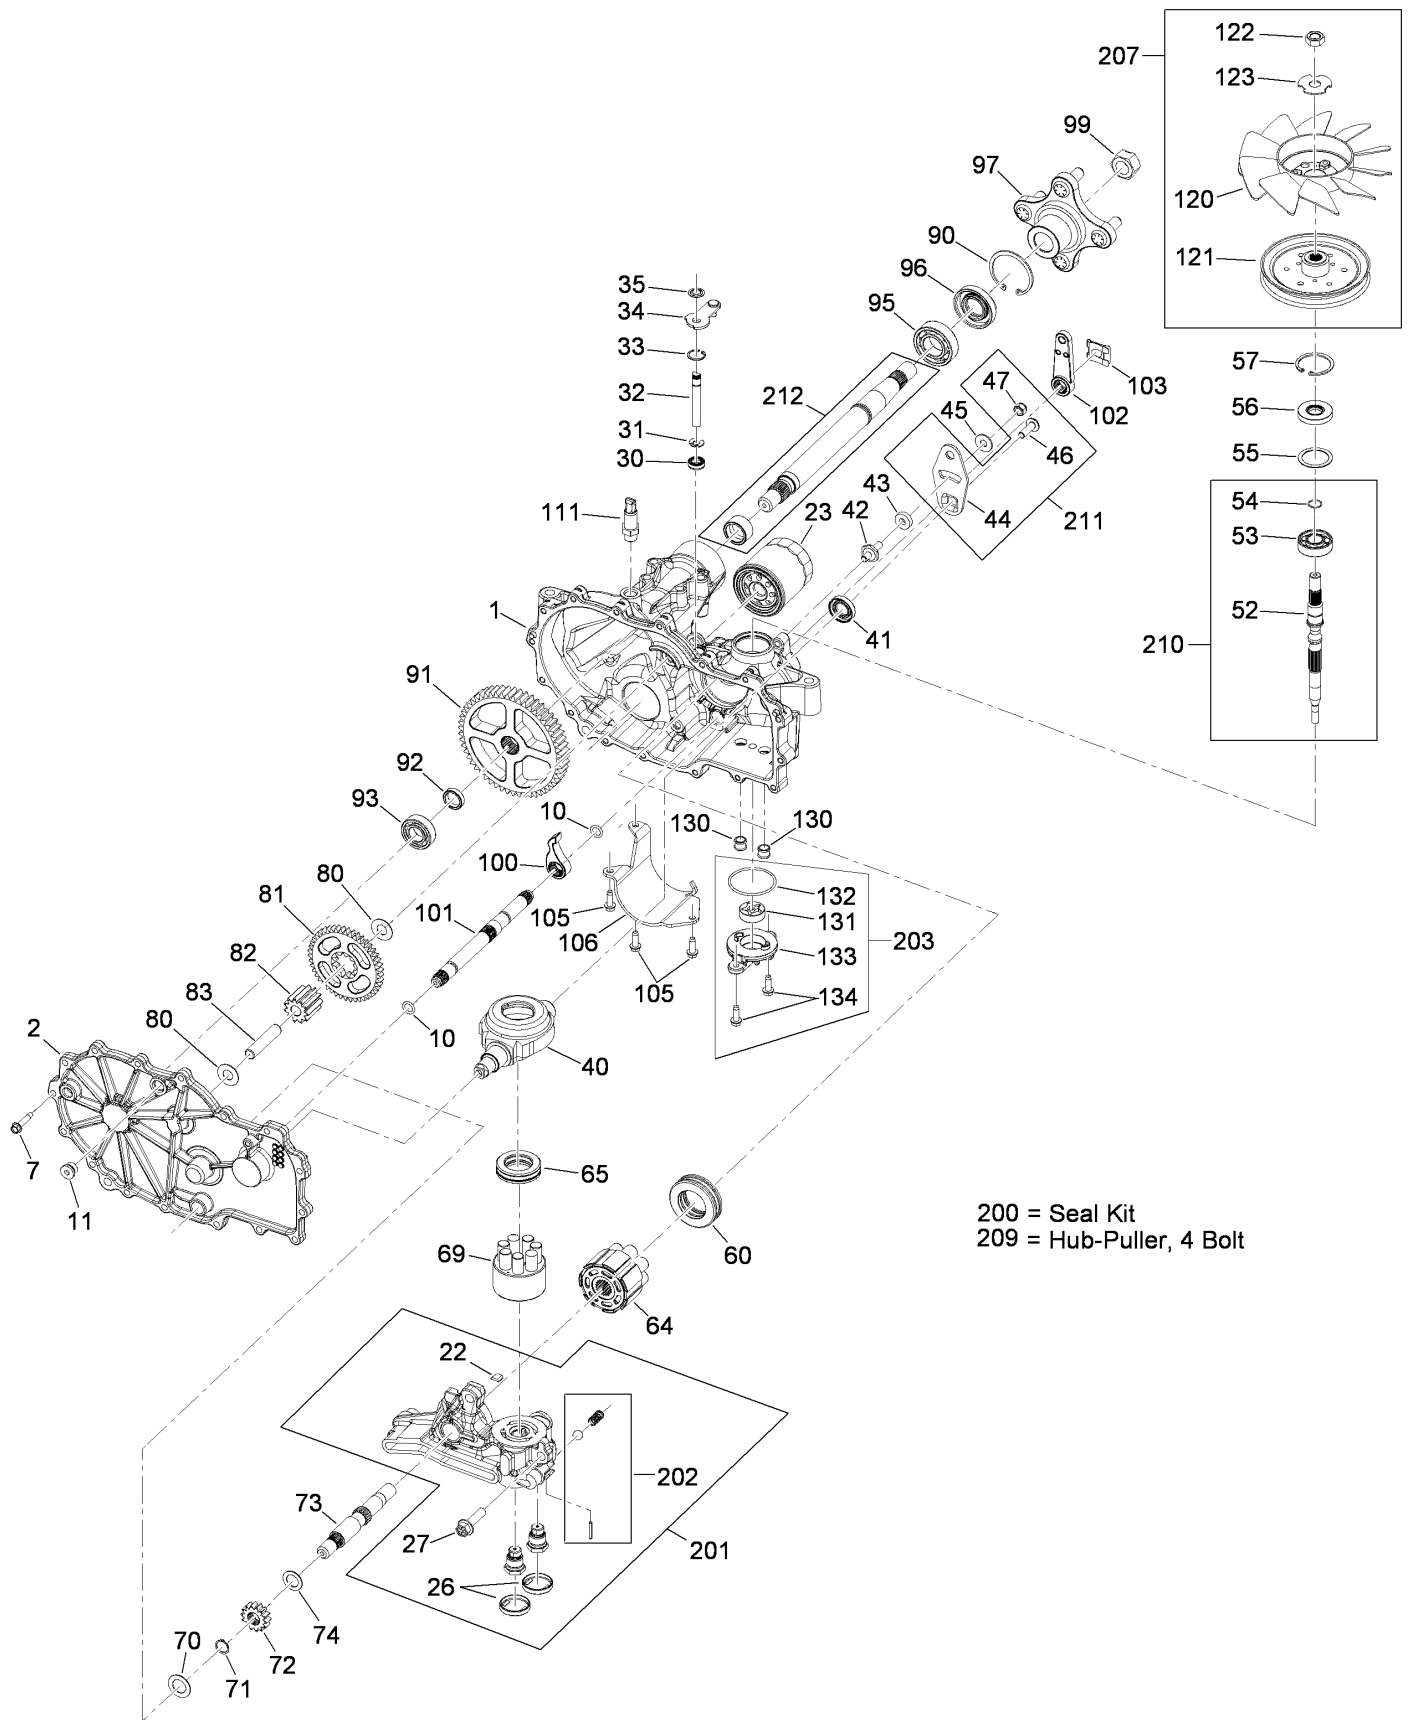

LH Hydro Assembly No. 115-2551 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	114-8471	1	Main Housing Kit
2	114-8472	1	Side Cover Kit
7	117-5359	16	Screw-Hfhcs
10	114-1678	2	O-Ring
11	104-2189	1	Plug-Thread, Straight
22	114-1680	1	Plate-Bypass
23	109-3321	1	Element-Oil Filter, HYD
26	114-1683	2	Seal-Plug
27	114-1684	3	Screw-Hfhc
30	106-8676	1	Seal-Lip
31	106-8677	1	Ring-Retaining, EXT
32	114-1685	1	Rod-Bypass
33	106-8679	1	Ring-Retaining, Int
34	107-2490	1	Arm-Bypass
35	106-8681	1	Ring-Retaining, EXT
40	104-5304	1	Swashplate-Trunnion
41	104-5313	1	Seal-Lip
42	104-2116	1	Stud
43	112-9853	1	Puck-Friction
44	106-8747	1	Arm-Control
45	114-8491	1	Washer
46	107-2488	1	Screw
47	105-1872	1	Nut
52	114-1687	1	Shaft-Input
53	104-5311	1	Bearing-Ball
54	104-5307	1	Ring-Retaining
55	104-5308	1	Spacer
56	104-5310	1	Seal-Lip
57	104-5309	1	Ring-Retaining
60	114-1688	1	Bearing-Thrust
64	114-1689	1	Motor Cylinder Block Kit
65	94-6922	1	Bearing-Thrust
69	110-8561	1	Pump Block ASM
70	104-5339	1	Washer-Flat
71	104-5340	1	Ring-Retaining
72	114-1690	1	Gear-14T
73	114-1691	1	Shaft-Motor
74	104-5360	1	Washer-Shaft, Motor

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
80	94-1933	2	Washer
81	114-1692	1	Gear-45T
82	114-1693	1	Gear-11T
83	104-5329	1	Pin-Jackshaft
90	104-2169	1	Ring-Retaining
91	114-1694	1	Gear-54T
92	114-1695	1	Spacer
93	114-1696	1	Bearing-Ball
95	104-2143	1	Bearing-Ball
96	104-2144	1	Seal
97	109-5939	1	Hub Kit
99	109-3536	1	Nut-Hub
100	114-1697	1	Pawl-Brake
101	117-5360	1	Shaft-Brake
102	114-1699	1	Handle-Brake
103	114-8450	1	Clip-Retaining
105	104-2120	3	Screw
106	114-8473	1	Guard-Filter, LH
111	109-3278	1	Adapter-Straight
120	114-8453	1	Fan-7.0
121	114-8454	1	Pulley-5.0 Inch
122	104-2168	1	Nut-Hex
123	107-9122	1	Washer-Slotted
130	114-8455	2	Tube-Connecting
131	104-2122	1	Gerotor ASM
132	109-3540	1	O-Ring-Seal
133	114-8457	1	Cover-Charge Pump
134	104-2120	2	Screw
200	109-3537	1	Complete Seal Kit
201	114-8476	1	LH Center Section Kit
202	114-8464	1	Charge Relief Kit
203	114-8465	1	Charge Kit
207	109-5938	1	Fan And Pulley Kit
209	114-8467	1	Hub-Puller, 4 Bolt
210	117-5361	1	Shaft Input Kit
211	117-5362	1	Arm Control Kit
212	114-8470	1	Axle Shaft Kit

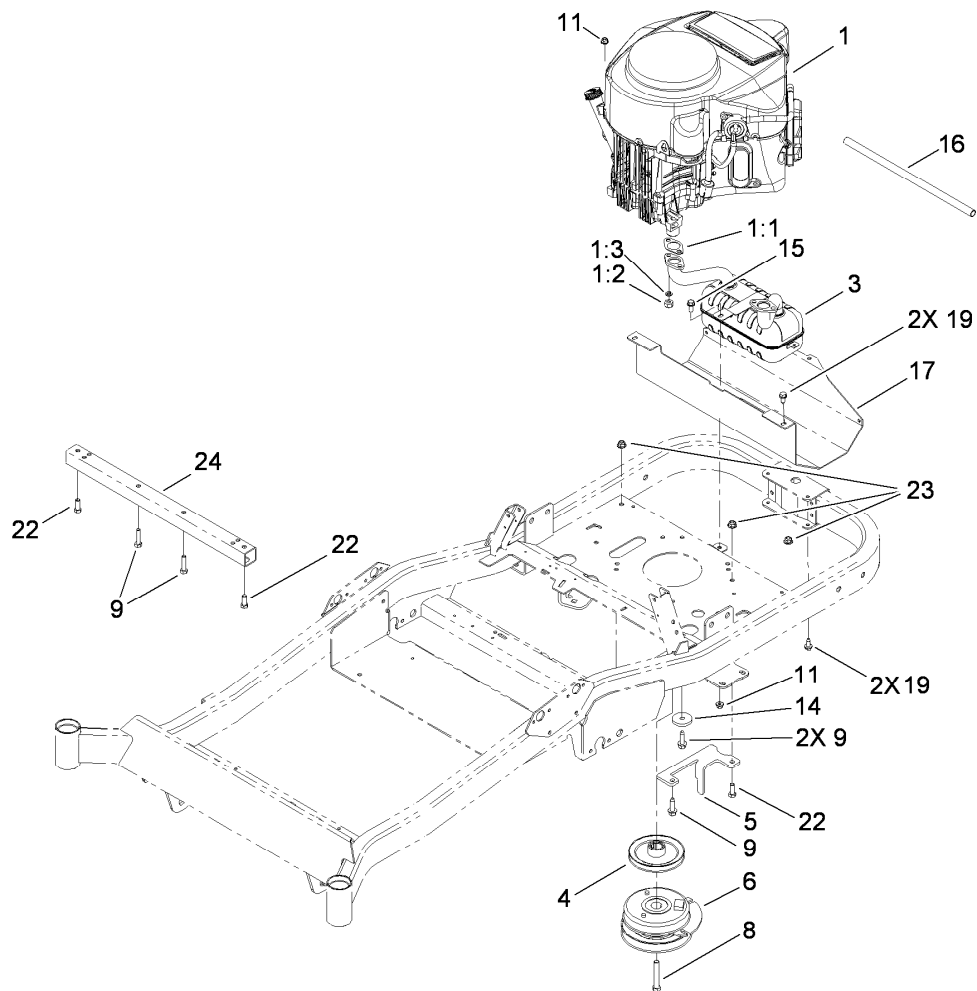


Engine, Clutch and Exhaust Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Kawasaki, Fs730V As04R ●■
1:1	112-9820	2	Gasket-Exhaust
1:2	112-9834	4	Nut
1:3	112-9835	4	Washer-Lock
3	117-1184	1	Muffler-Kawasaki Twin
4	115-2568	1	Pulley-Engine
5	117-7344-03	1	Bracket-Stop, PTO
6	117-1252	1	Clutch-PTO
8	3212-11	1	Screw-HH
9	323-50	4	Bolt-HH
11	104-8300	1	Nut-Flange, NI
14	110-9981	1	Washer-Plain
15	3234-47	1	Screw-HHF
16	106-7022	1	Tube-Drain, Oil
17	117-5330-03	1	Shield-Heat
19	32144-70	4	Screw-HWHTF
22	323-6	3	Screw-HH
23	104-8301	3	Nut-Flange, NI
24	117-7335-03	1	Tube-Stiffener


● Not serviced separately

■ Obtain parts from www.kawpowerepc.com

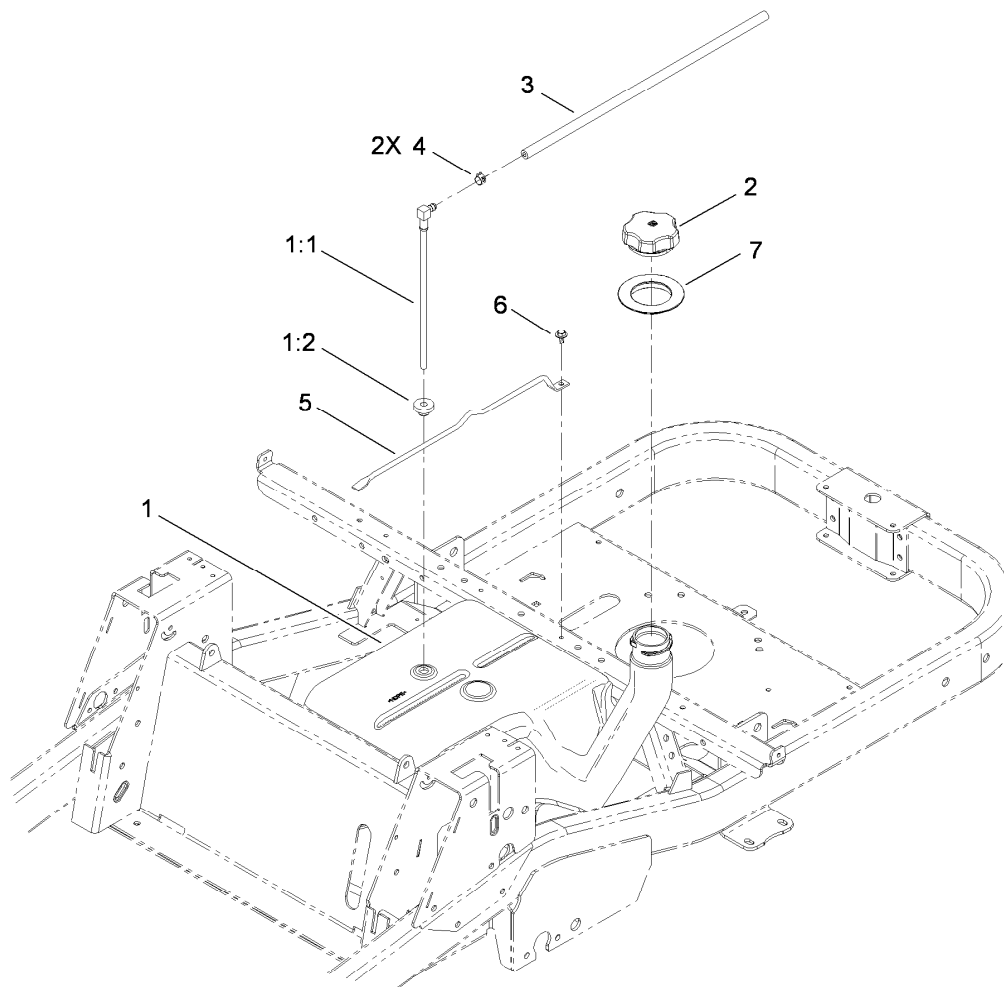


Fuel Delivery System

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	115-9620	1	5 Gallon Fuel Tank ASM
1:1	115-2564	1	Tube-Drop
1:2	46-6560	1	Bushing
2	115-9601	1	Cap-Fuel, Vented
3	109-0299	1	Hose-Fuel
4	2412-98	2	Clamp
5	115-2620	1	Rod-Tank, Gas
6	46-8560	1	Screw-HHFTF
7	117-1298	1	Seal-Tank

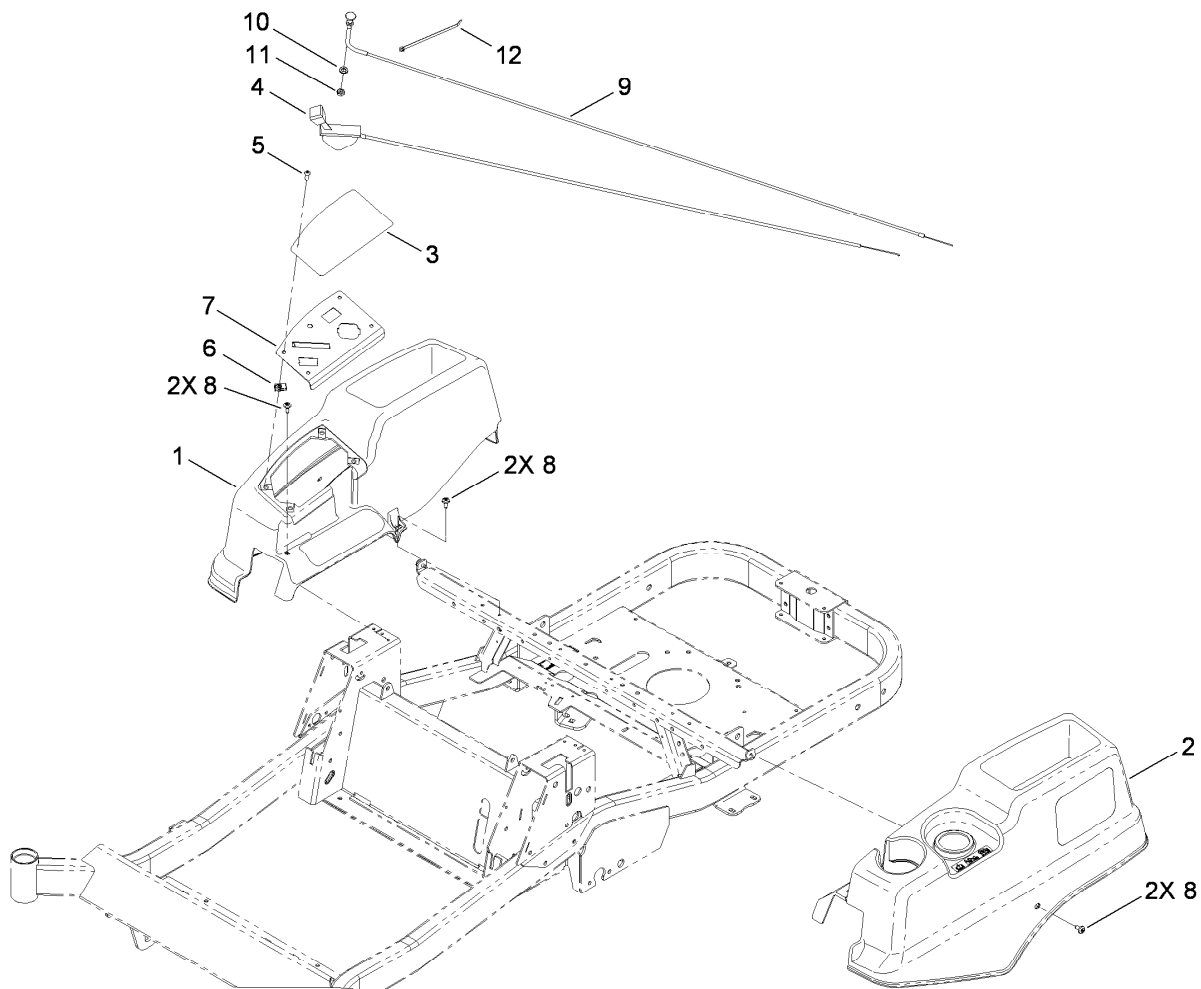

Body and Styling Assembly


Ref.	Part Number	Qty.	Description
1	115-2581	1	Pod-RH
2	115-2582	1	Pod-LH
3	115-9632	1	Decal-Panel, Control
4	110-6653	1	Cable-Throttle
5	3258-166	4	Screw-PRH
6	107069	4	Clip
7	115-2591-03	1	Panel-Control
8	112-4004	6	Screw-Shoulder
9	110-6754	1	Cable-Choke
10	3253-21	1	Washer-Lock
11	3220-3	1	Nut-HJ
12	614249	1	Tie-Cable

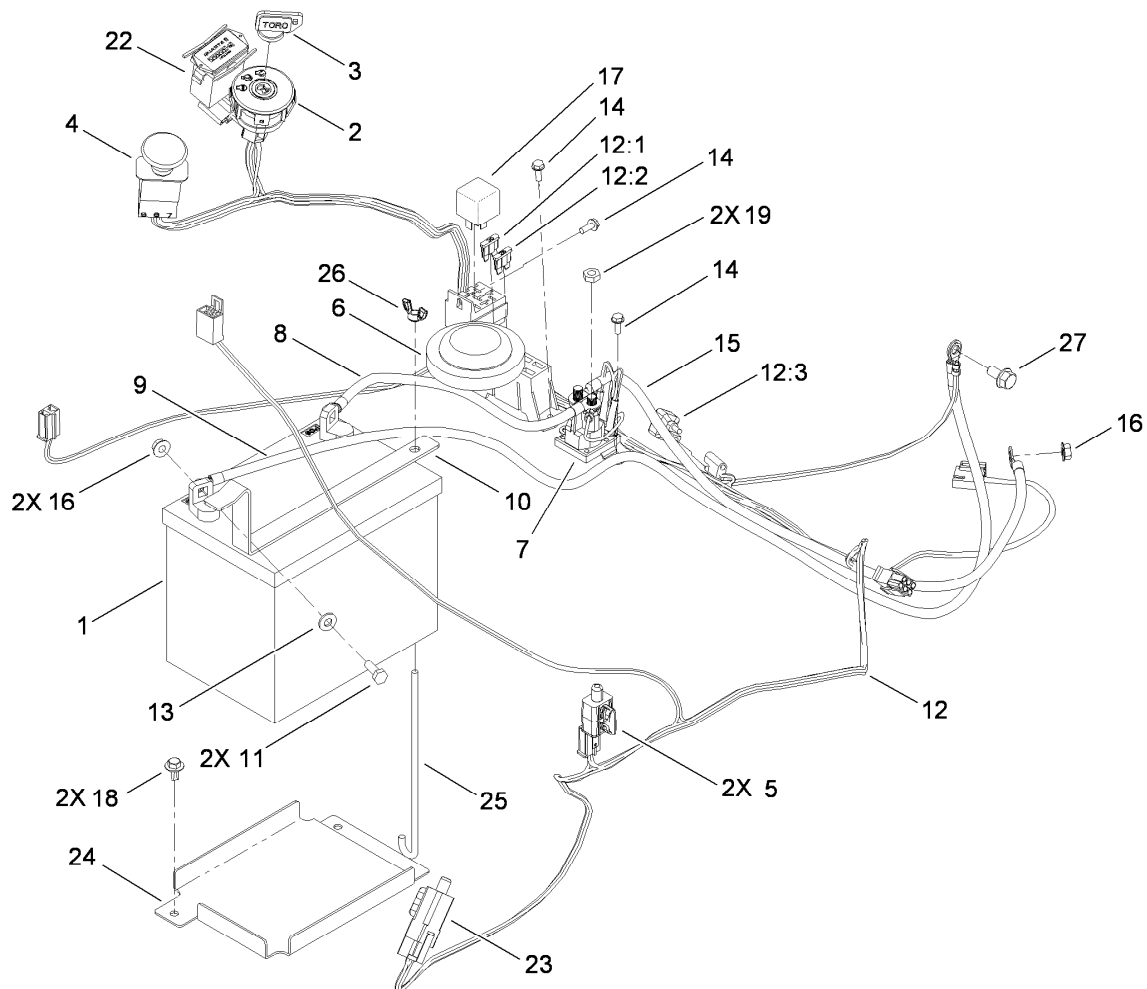

Electrical Assembly


Ref.	Part Number	Qty.	Description
1	104-2493	1	Battery
2	116-0050	1	Switch-Ignition
3	63-8360	1	Key-Ignition
4	93-9998	1	Switch-PTO
5	110-6765	2	Switch-Single Pole No
6	100-3524	1	Switch-Seat
7	117-1197	1	Solenoid
8	117-5342	1	Cable-Battery, Positive
9	117-7240	1	Cable-Battery, Negative
10	117-7313-01	1	Strap-Battery
11	321-4	2	Screw-HH
12	117-7243	1	Harness-Wire
12:1	109103	1	Fuse-Blade, 30 Amp
12:2	109102	1	Fuse-Blade, 25 Amp

Ref.	Part Number	Qty.	Description
12:3	100-4918	1	Diode
13	3256-22	2	Washer-Flat
14	32144-1	5	Screw-Taptite
15	92-6989	1	Wire-21 Inch
16	32128-33	3	Nut-HF
17	98-7249	1	Relay
18	46-8560	2	Screw-HHFTF
19	3220-2	2	Nut-Jam
22	1-513374	1	Meter-Hour
23	99-7408	1	Switch-Reverse
24	117-1283-03	1	Tray-Battery
25	1-633651	1	Bolt-Holddown
26	1-543792	1	Wingnut
27	33104-016	1	Screw-HHF

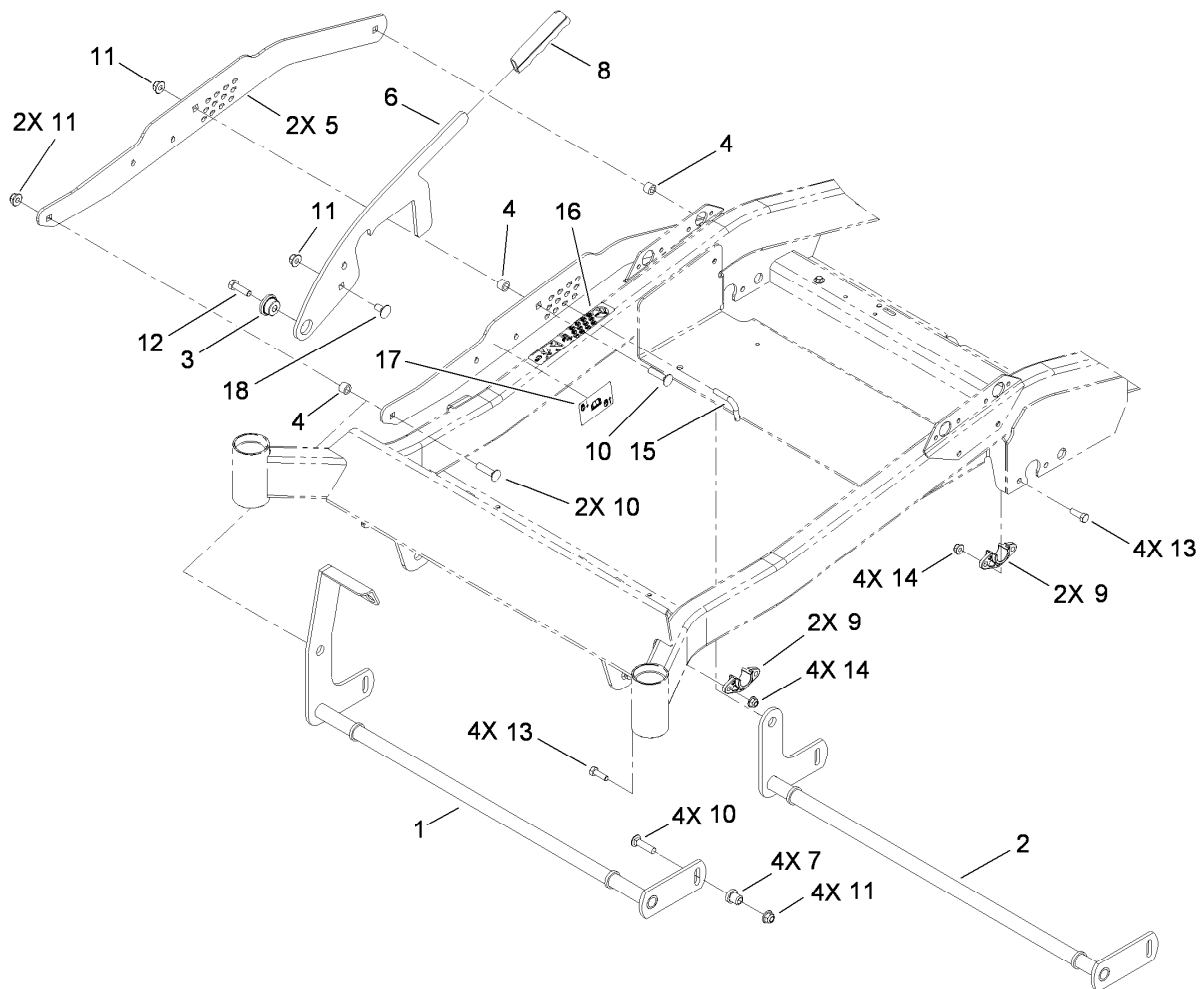

Deck Lift Assembly


Ref.	Part Number	Qty.	Description
1	115-2495-03	1	Pivot-Front
2	115-2498-03	1	Pivot-Rear
3	117-1281	1	Bushing-Mount, HOC
4	115-4986	3	Spacer
5	115-2503-03	2	Plate-Lift, Foot
6	115-2504	1	Plate-Stop, HOC
7	65-5950	4	Bushing-Pulley
8	115-5033	1	Grip
9	115-5065	4	Bushing-Flange
10	3231-4	7	Screw-CARR
11	104-8301	8	Nut-Flange, NI
12	323-7	1	Screw-HH
13	322-5	8	Screw-HH
14	104-8300	8	Nut-Flange, NI
15	117-1280	1	Pin-Keyed
16	115-9644	1	Decal-HOC
17	117-5344	1	Decal-Lock, Deck
18	3231-1	1	Screw-CARR

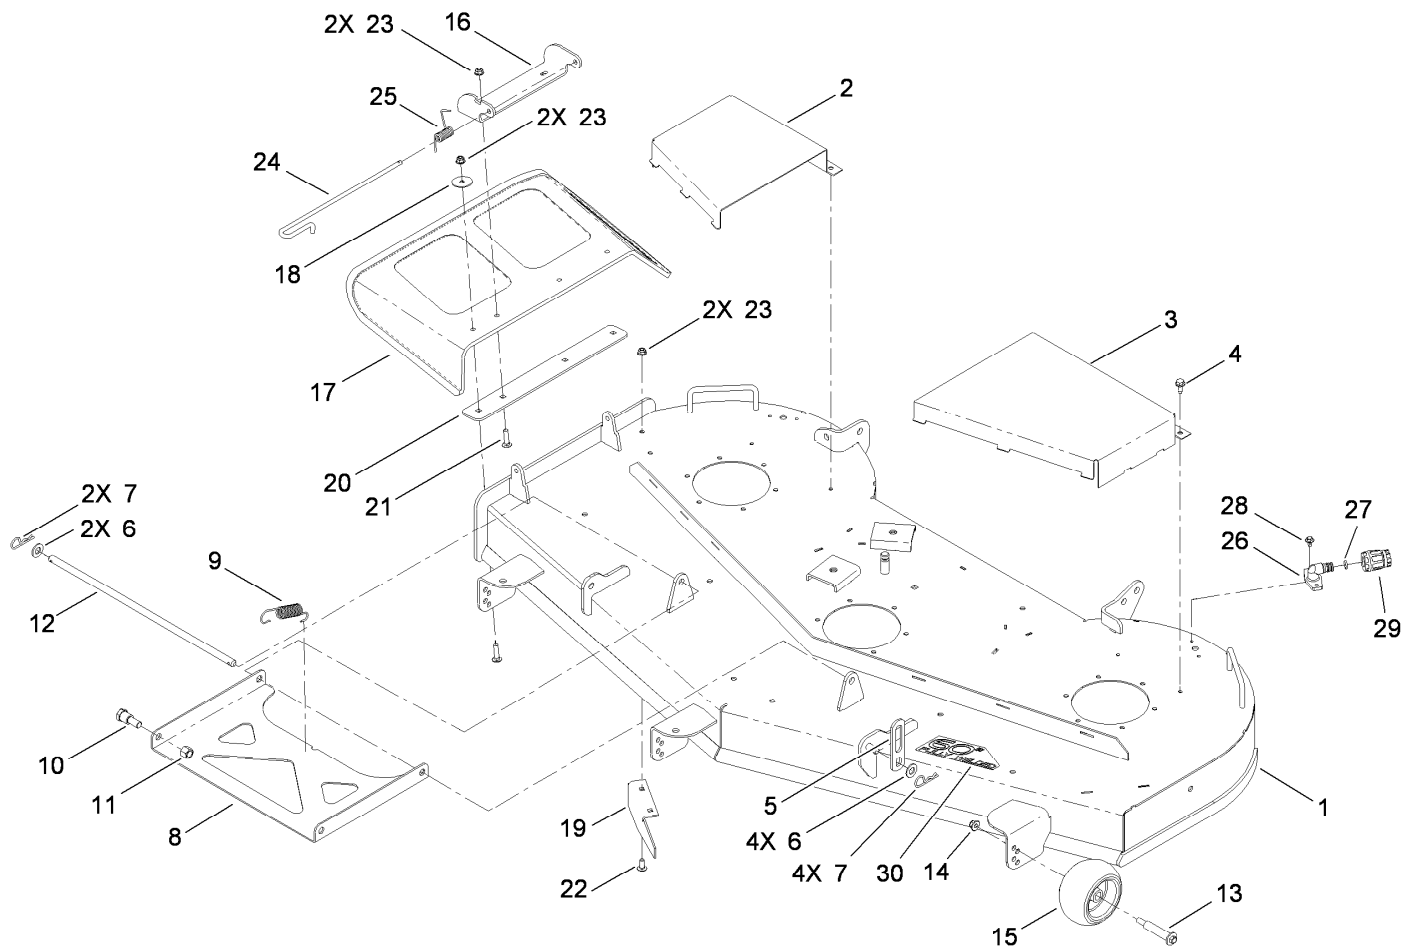

60 Inch Deck Assembly


Ref.	Part Number	Qty.	Description
1	117-5375	1	60 Inch Deck ASM
2	115-5036-03	1	Cover-Belt, RH
3	115-5037-03	1	Cover-Belt, LH
4	32144-70	4	Screw-HWHTF
5	115-2622	4	Link-Lift
6	3256-26	6	Washer-Flat
7	1-806005	6	Pin-Hair
8	115-5027-01	1	Pan-Pivot, Deck
9	115-9652	1	Spring-Extension
10	94-5823	2	Bolt-Shoulder, HH
11	3296-23	2	Nut-Lock, NI
12	115-5030	1	Rod-Deck, Pivot
13	112-3977	3	Bolt-Shoulder
14	104-8301	3	Nut-Flange, NI
15	1-603299	3	Roller-Scalp, Anti

Ref.	Part Number	Qty.	Description
16	114-1648-03	1	Bracket-Deflector, Upper
17	117-1270	1	Deflector-Molded
18	3256-68	2	Washer-Flat
19	115-9658-03	1	Baffle-Cutoff
20	115-5048-03	1	Plate-Deflector
21	3230-3	4	Screw-CARR
22	3230-23	2	Screw-CARR
23	104-8300	6	Nut-Flange, NI
24	109-8854	1	Pin-Chute
25	115-9641	1	Spring-Torsion
26	95-2747	2	Fitting-Washout
27	46-6290	2	O-Ring, Seal
28	46-8560	4	Screw-HHFTF
29	95-3270	1	Connector-Hose
30	117-5303	1	Decal

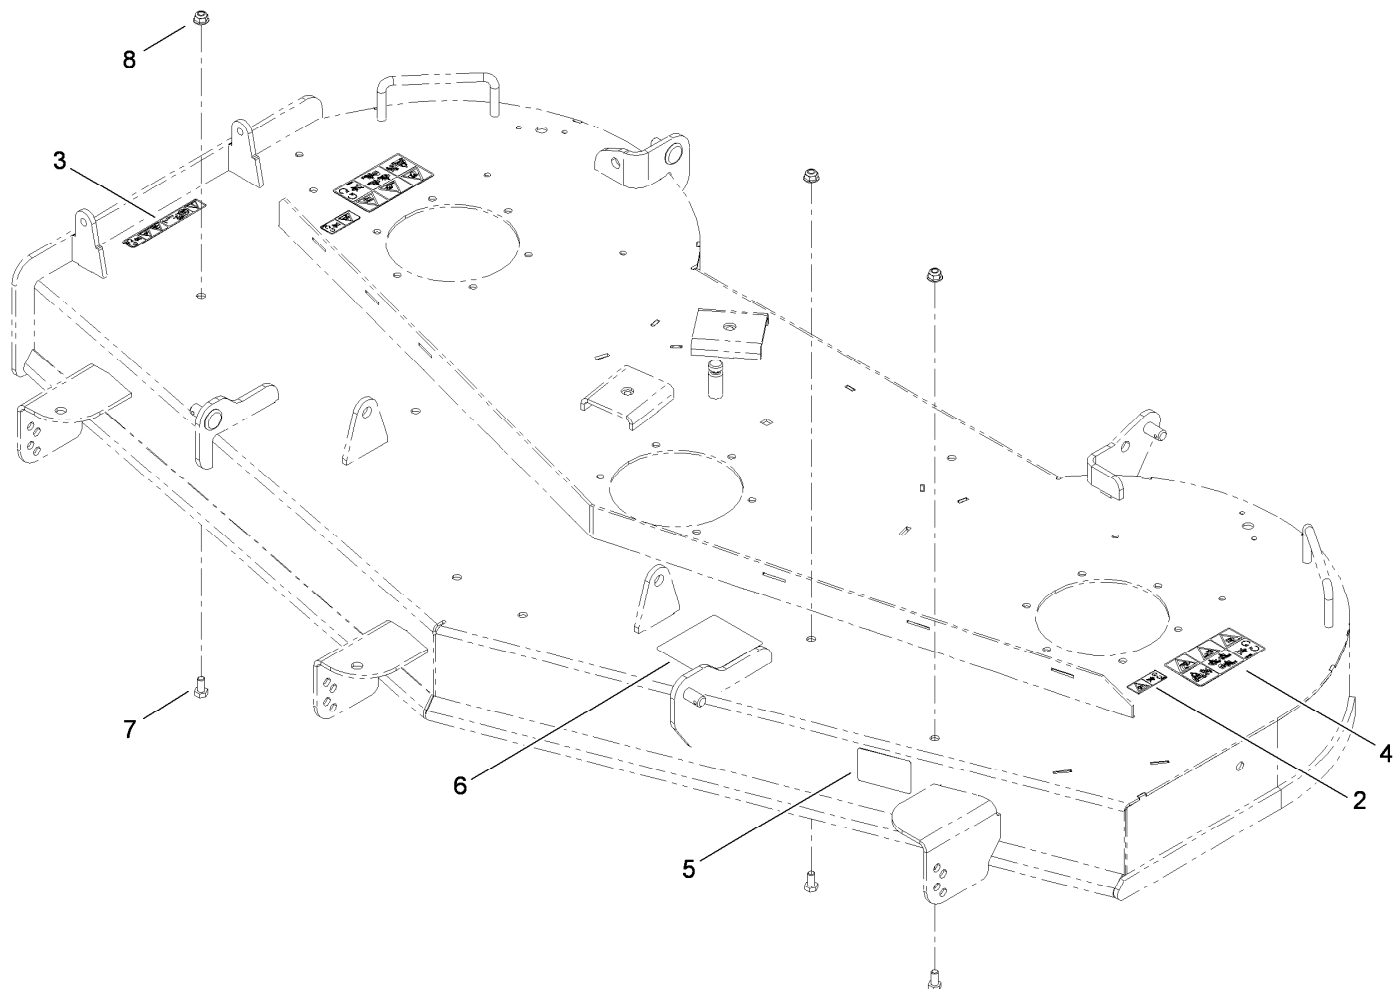

60 Inch Deck and Decal Assembly No. 117-5375

Ref.	Part Number	Qty.	Description
2	114-1606	2	Decal-Danger, Pulley
3	93-7009	1	Decal-Danger, Deflector
4	110-6691	2	Decal-Danger
5	112-9840	1	Decal-Scalp, Anti
6	117-1194	1	Decal-Routing, Belt
7	322-2	3	Screw-HH
8	104-8300	3	Nut-Flange, NI

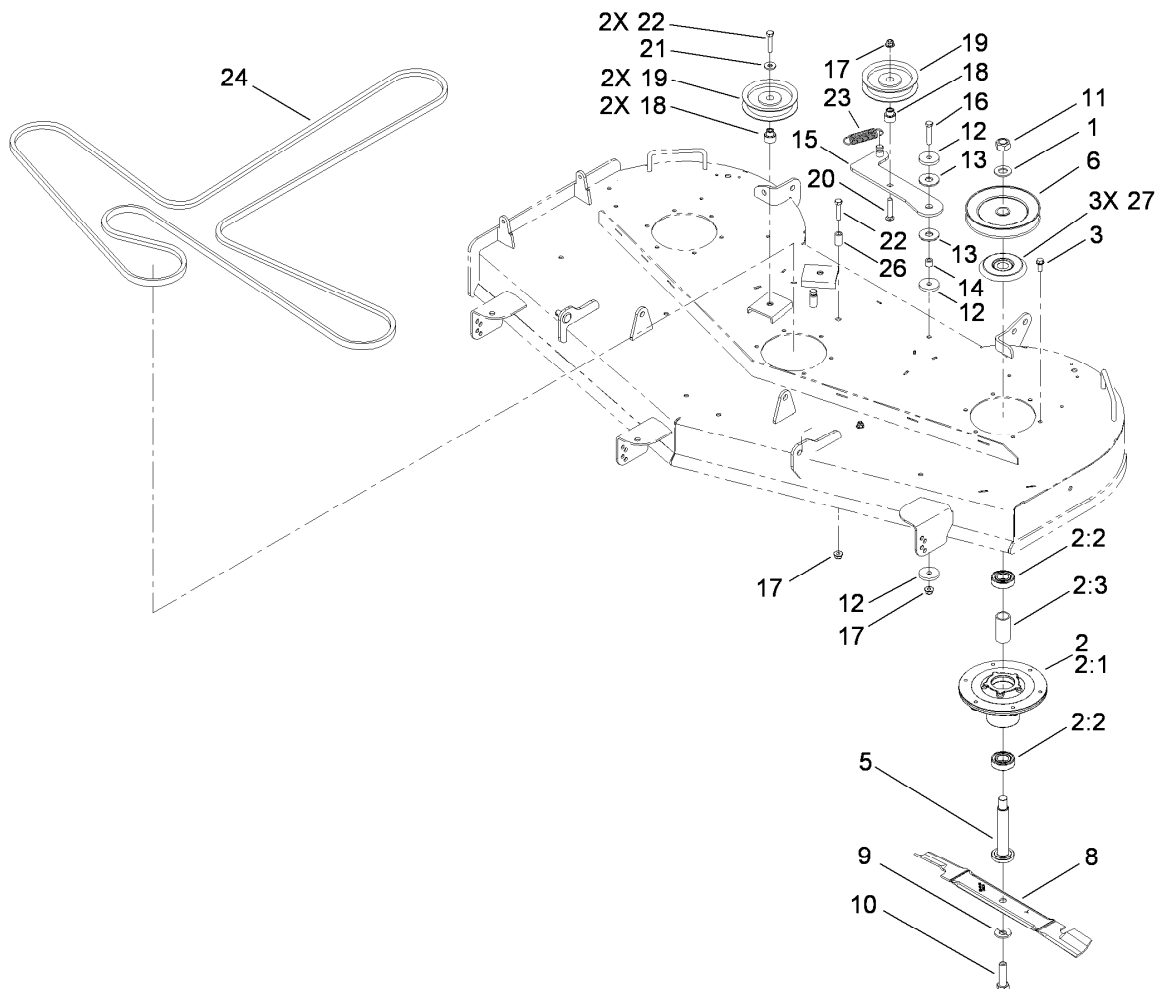

60 Inch Deck Spindle and Blade Assembly

Ref.	Part Number	Qty.	Description
1	7-4150	3	Washer
2	117-1250	3	Spindle ASM
2:1	115-9693	1	Housing-Spindle
2:2	104-6325	2	Bearing-Ball
2:3	115-2641	1	Spacer-Bearing
3	32144-41	18	Screw-Taptite
5	115-2642	3	Shaft-Spindle
6	115-4975	3	Pulley
8	115-9649-03	3	Blade-Hi Flo, 20.5 Inch
9	22-8520	3	Washer-Belleville
10	51-4060	3	Screw-Blade
11	3219-7	3	Nut-Hex
12	110-9981	3	Washer-Plain
13	114-0463	2	Washer-Friction, Composite

Ref.	Part Number	Qty.	Description
14	1-413088	1	Bushing-Lever, Lift
15	115-5054	1	Idler Arm ASM
16	323-10	1	Screw-HH
17	104-8301	3	Nut-Flange, NI
18	115-2577	3	Bushing-Idler
19	1-603843	3	Pulley-Idler
20	3231-6	1	Screw-CARR
21	80-6990	2	Washer-Hardened
22	323-9	3	Screw-HH
23	108-4056	1	Spring-Extension
24	115-4972	1	Belt-V
26	1-603401	1	Spacer-Fender
27	117-7210	3	Shield-Bearing

Attachments and Accessories

For 74824 TITAN Z6050 Zero-Turn-Radius Riding Mower

Product Name	Model/Part
60in Recycler Kit.....	117-5314
Hitch Kit	117-5315
Step Kit	117-5316
Light Kit.....	117-5317
Sunshade	117-5318
54in/60in Striping Kit.....	117-5319
Leaf Bagging Enhancement Kit	117-7202
Transport Seat Hold Down Kit.....	117-7251
60in Recycler Kit.....	119-3455
Side Bagger Finishing Kit.....	119-3458
Soft Bag (3 Bushel).....	30104
10 cu. ft. Poly Dump Cart	79991

Notes:



Count on it.