



**Count on it.**

# Parts Catalog

## **GrandStand® Mower**

**With 48in TURBO FORCE® Cutting Unit**

**Model No. 79548—Serial No. 312000001 and Up**



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# List of Abbreviations

**AR:** as required

**ASM:** assembly

**BBC:** blade brake control

**BHTF:** button head thread forming

**CARR:** carriage

**CCW:** counter clockwise

**CW:** clockwise

**DEG:** degrees

**DPA:** Dual Point Adjustment

**ECM:** electronic control module

**EXT:** external

**FH:** flat head

**GA:** gauge

**HD:** heavy-duty

**HF:** hex flange

**HH:** hex head

**HHF:** hex head flange

**HHFTF:** hex head flange thread forming

**HJ:** hex jam

**HLH:** hex lag head

**HOC:** height-of-cut

**HSBH:** hex socket button head

**HSFH:** hex socket flat head

**HSH:** hex socket head

**HWH:** hex washer head

**HWHTF:** hex washer head thread forming

**HYD:** hydraulic

**LH:** left hand

**LPG:** Liquid Propane Gas

**NI:** nylon insert

**NPTF:** national pipe thread fine

**PFH:** phillips flat head

**PPH:** phillips pan head

**PPHTF:** phillips pan head thread forming

**PRH:** phillips round head

**PTH:** phillips truss head

**PTO:** power-take-off

**RH:** right hand

**ROPS:** roll-over protection system

**RRB:** rear roller brush

**SFH:** slotted fillister head

**SHH:** slotted hex head

**SHWH:** slotted hex washer head

**SPH:** slotted pan head

**SQH:** square head

**SRH:** slotted round head


**STD:** standard

**TAP:** self tapping

**TTH:** torx truss head

# Contents


|                                              |    |
|----------------------------------------------|----|
| Frame Assembly.....                          | 4  |
| Wheel and Bearing Assembly No. 112-3810..... | 5  |
| Parking Brake Assembly.....                  | 6  |
| Decklift Assembly.....                       | 7  |
| Platform Assembly.....                       | 9  |
| Cushion Assembly No. 119-8742.....           | 10 |
| Platform Assembly No. 117-9640.....          | 11 |
| Ground Drive Assembly.....                   | 12 |
| Hydraulic Motor Assembly 114-0549.....       | 13 |
| Pump Idler Assembly.....                     | 14 |
| Hydraulic System Assembly.....               | 15 |
| Hydraulic Pump Assembly No. 119-7375.....    | 16 |
| Control Assembly.....                        | 17 |
| Engine Assembly.....                         | 18 |
| Fuel Tank Assembly.....                      | 19 |
| Electrical Assembly.....                     | 20 |
| Carbon Canister Assembly.....                | 22 |
| Deck Assembly.....                           | 23 |
| Deck Decal Assembly No. 120-6401.....        | 24 |
| Idler Arm Assembly No. 120-6410.....         | 25 |
| Idler Adjust Assembly No. 117-0446.....      | 26 |
| Spindle Assembly No. 119-8560.....           | 27 |
| Deflector Assembly No. 121-5960.....         | 28 |
| Attachments and Accessories.....             | 29 |

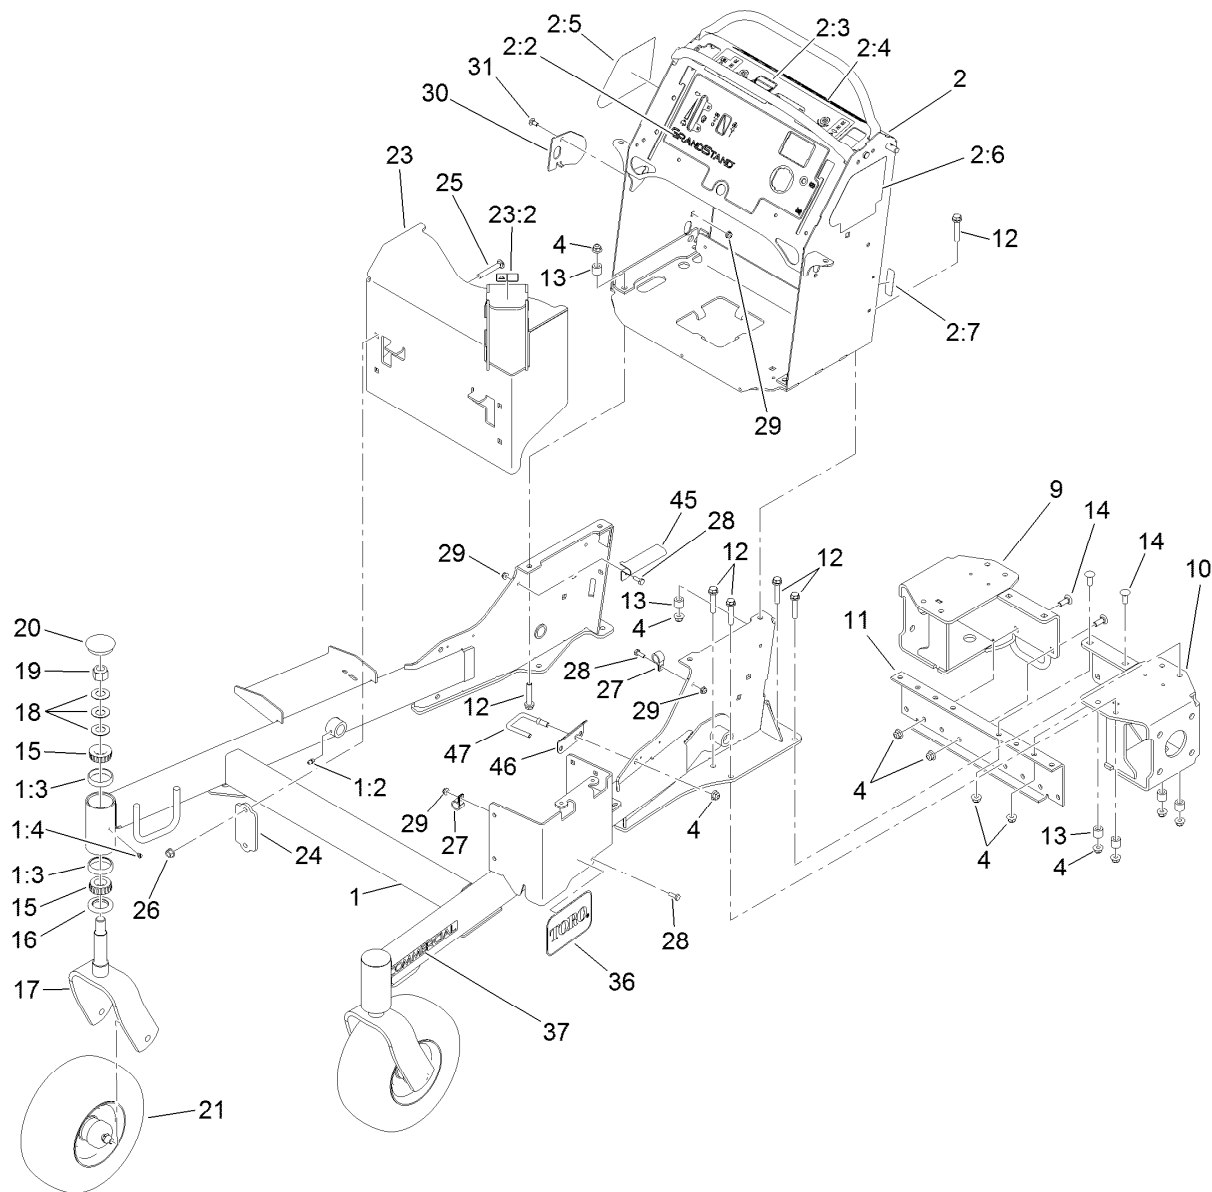

## Frame Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 119-8700    | 1    | Front Frame ASM         |
| 1:2  | 302-5       | 4    | Fitting-Grease          |
| 1:3  | 1-543508    | 4    | Cup-Bearing             |
| 1:4  | 1-811010    | 2    | Plug                    |
| 2    | 120-6460    | 1    | Control Tower ASM       |
| 2:2  | 120-6464    | 1    | Decal-Control Panel     |
| 2:3  | 119-8727    | 1    | Decal-Opc               |
| 2:4  | 117-3626    | 1    | Decal-Warning           |
| 2:5  | 117-0456    | 1    | Decal-HOC               |
| 2:6  | 121-5972    | 1    | Decal-Service Aid       |
| 2:7  | 116-3267    | 1    | Decal-Fuse              |
| 4    | 104-8301    | 22   | Nut-Flange, NI          |
| 9    | 119-7222-01 | 1    | RH Motor Mount ASM      |
| 10   | 119-7220-01 | 1    | LH Motor Mount ASM      |
| 11   | 119-7224-01 | 1    | Mount-Motor, Center     |
| 12   | 108-3742    | 12   | Screw-HHF               |
| 13   | 121-1760    | 12   | Spacer                  |
| 14   | 3231-22     | 8    | Screw-CARR              |
| 15   | 1-543509    | 4    | Bearing-Roller, Tapered |
| 16   | 1-543511    | 2    | Seal-Grease             |
| 17   | 103-8618-01 | 2    | Fork-Caster             |

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 18   | 1-633508    | 6    | Washer-Bellville            |
| 19   | 3296-51     | 2    | Nut-Lock, NI                |
| 20   | 103-4882    | 2    | Cap-Grease                  |
| 21   | 112-3810    | 2    | Wheel/Tire And Bearing ASM  |
| 23   | 119-0230    | 1    | Muffer Guard ASM            |
| 23:2 | 106-5517    | 1    | Decal-Warning, Hot Surface  |
| 24   | 119-7303-01 | 2    | Bracket-Mounting, Guard     |
| 25   | 3231-31     | 4    | Screw-CARR                  |
| 26   | 32128-21    | 4    | Nut-HF                      |
| 27   | 2412-87     | 2    | Clamp-Cable                 |
| 28   | 321-4       | 3    | Screw-HH                    |
| 29   | 104-7201    | 4    | Nut-HF                      |
| 30   | 119-7312    | 1    | Plate-Striker               |
| 31   | 3229-11     | 1    | Screw-CARR                  |
| 36   | 68-3640     | 1    | Decal                       |
| 37   | 117-3591    | 2    | Decal-Commercial            |
| 45   | 116-5067    | 1    | Bracket-Hose, Fuel (Double) |
| 46   | 121-6003    | 2    | Guard-Hose                  |
| 47   | 121-6004    | 2    | Guide-Hose                  |

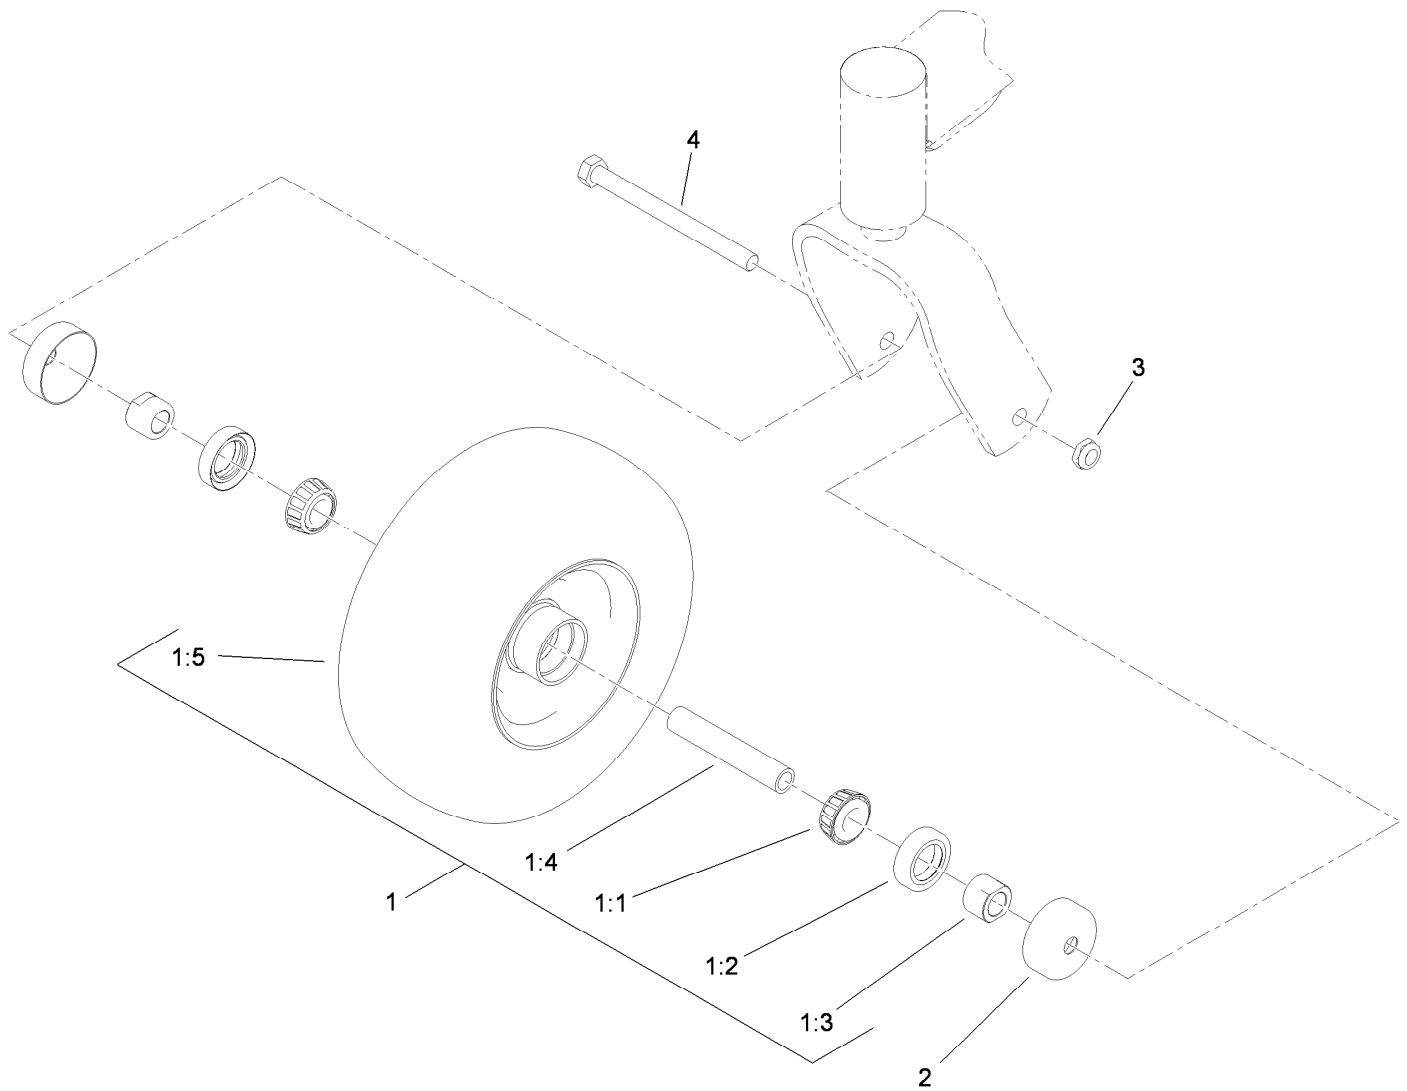


## Wheel and Bearing Assembly No. 112-3810

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    |             | 1    | Wheel And Bearing ASM ● |
| 1:1  | 1-633585    | 2    | Bearing-Cone, Taper     |
| 1:2  | 103-0063    | 2    | Seal-Caster             |
| 1:3  | 103-3051    | 2    | Spacer-Nut ■            |
| 1:4  | 103-3157    | 1    | Axle-Caster             |
| 1:5  | 110-9965    | 1    | Wheel And Tire ASM      |
| 2    | 103-2768    | 2    | Guard-Seal              |
| 3    | 3296-45     | 1    | Nut-Lock, NI            |
| 4    | 325-20      | 1    | Screw-HH                |

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on spacer nut

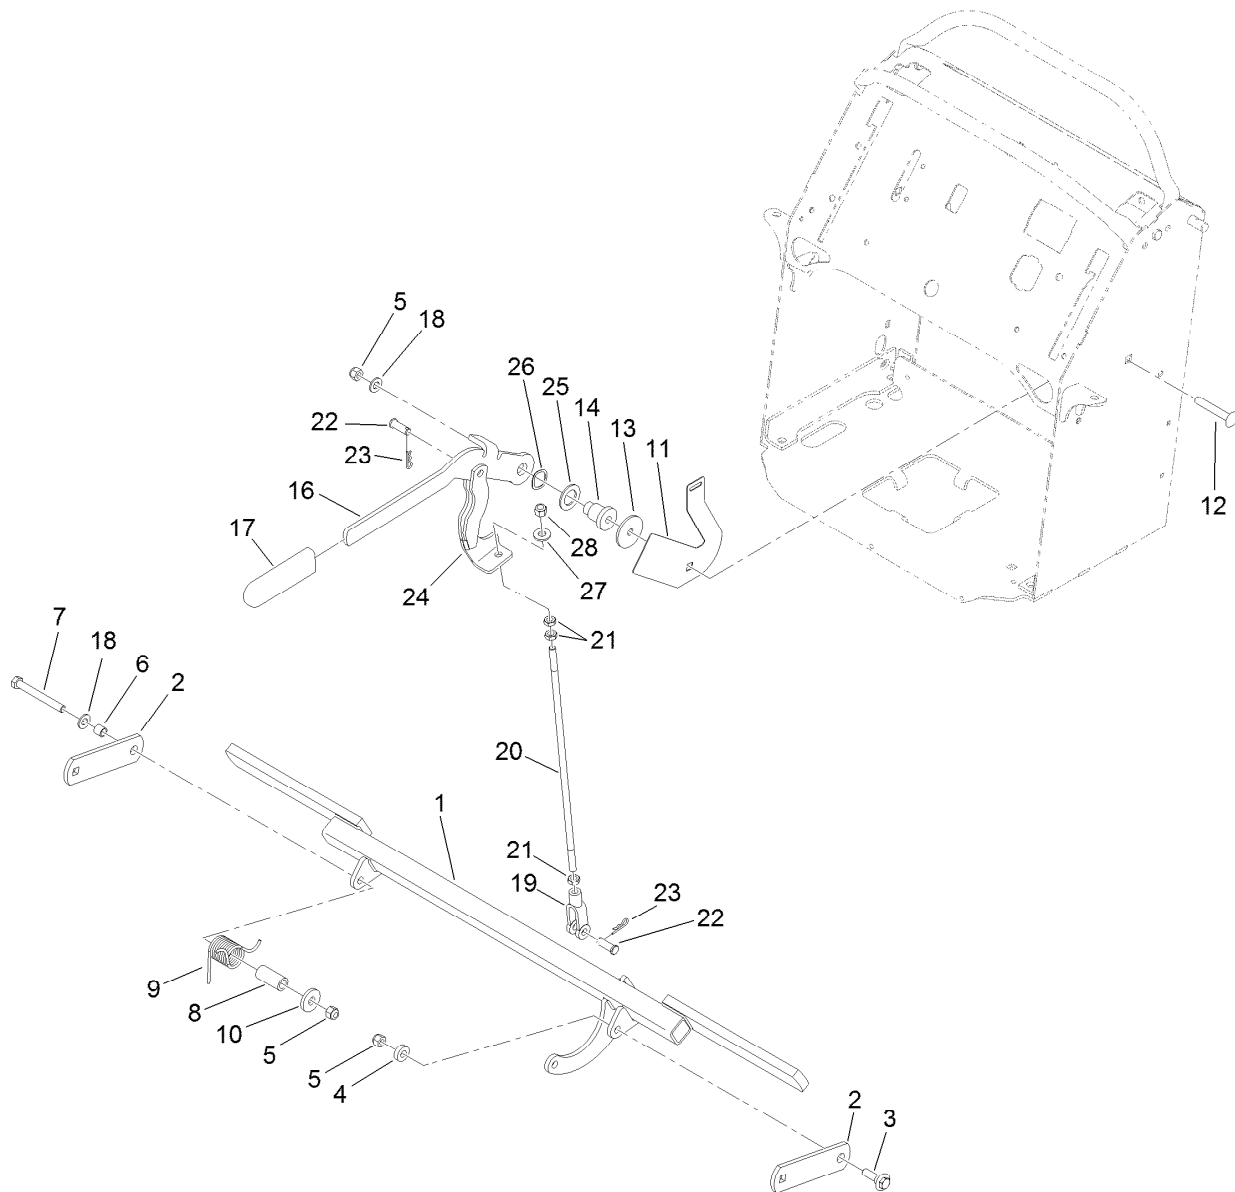

## Parking Brake Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 119-8730-03 | 1    | Brake Bar ASM       |
| 2    | 114-5186-01 | 2    | Support-Brake       |
| 3    | 614672      | 1    | Bolt-Shoulder       |
| 4    | 5-0652      | 1    | Spacer              |
| 5    | 104-8301    | 3    | Nut-Flange, NI      |
| 6    | 117-9684    | 1    | Spacer              |
| 7    | 323-20      | 1    | Screw-HH            |
| 8    | 117-9683    | 1    | Spacer              |
| 9    | 117-9682    | 1    | Spring-Torsion      |
| 10   | 1-373034    | 1    | Washer              |
| 11   | 117-0452-03 | 1    | Plate-Switch, Brake |
| 12   | 3231-44     | 1    | Screw-CARR          |
| 13   | 63-7400     | 1    | Washer-Rebound      |
| 14   | 106-3214    | 1    | Mount-Pulley        |


| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 16   | 117-5759-03 | 1    | Lever-Brake         |
| 17   | 1-633268    | 1    | Grip-Lever          |
| 18   | 3256-24     | 2    | Washer-Flat         |
| 19   | 1-633131    | 1    | Yoke-Linkage, Brake |
| 20   | 119-7244    | 1    | Rod-Brake           |
| 21   | 3220-3      | 3    | Nut-HJ              |
| 22   | 283-2       | 2    | Pin-Clevis          |
| 23   | 3290-307    | 2    | Pin-Hair            |
| 24   | 119-8780-03 | 1    | Brake Arm ASM       |
| 25   | 1-303007    | 1    | Washer              |
| 26   | 106-5335    | 1    | Washer-Wave         |
| 27   | 98-5975     | 1    | Washer-Belleville   |
| 28   | 3296-6      | 1    | Nut-Lock            |

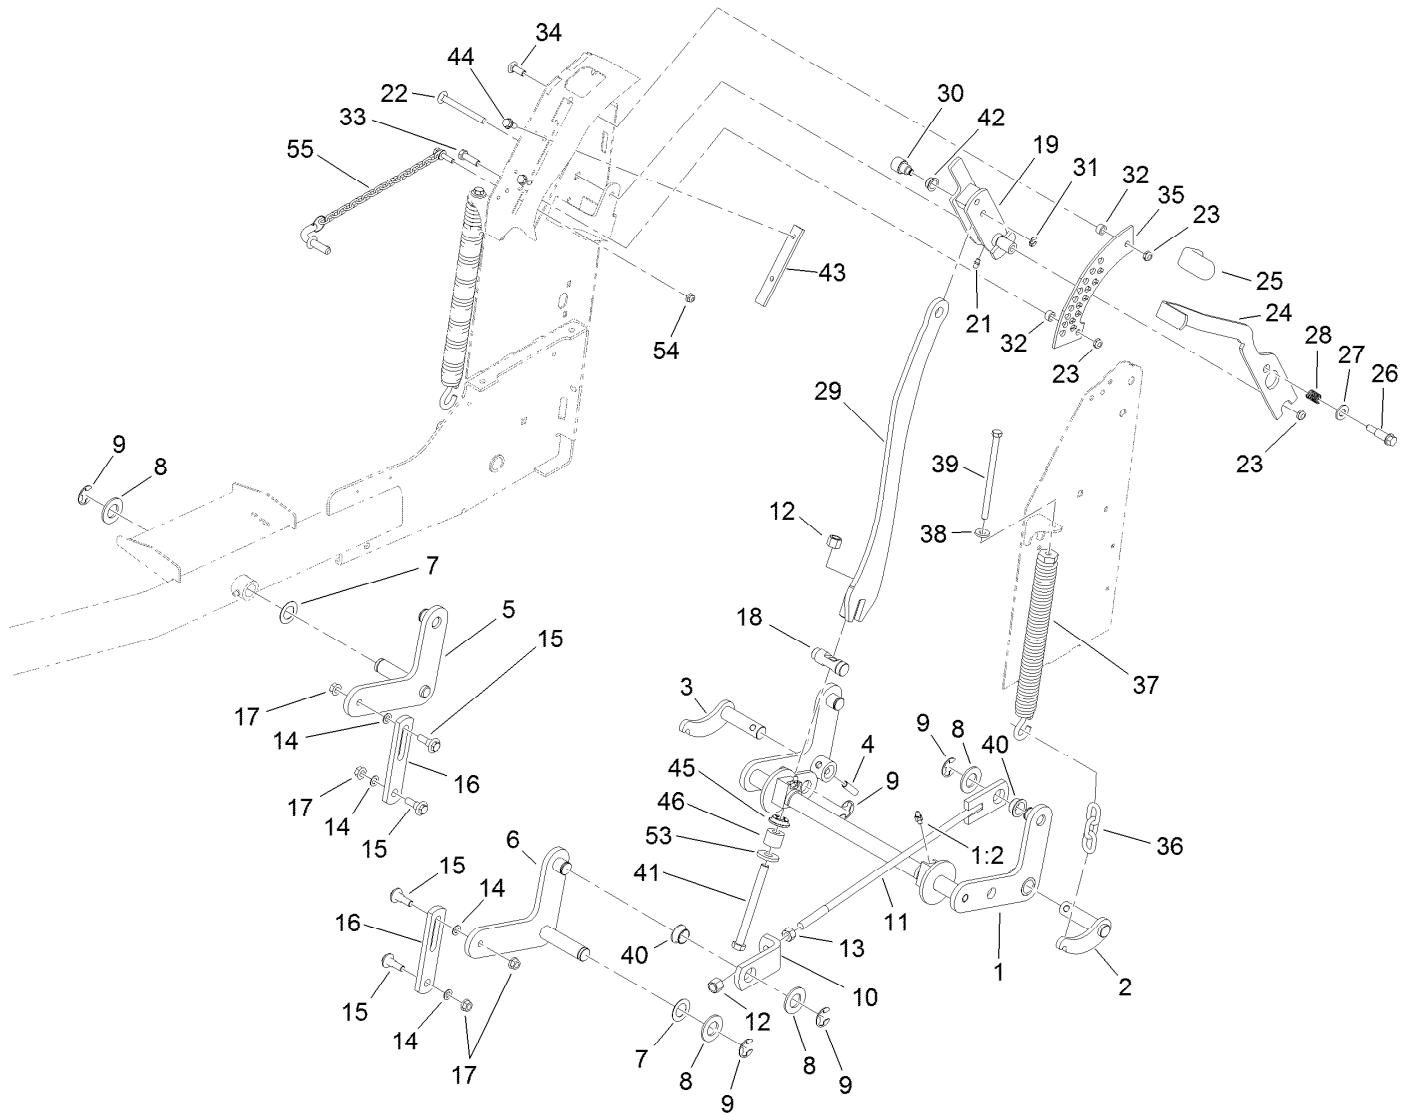

## Decklift Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 116-3103    | 1    | Rear Crossshaft ASM  |
| 1:2  | 302-11      | 2    | Fitting-Lube, 45 DEG |
| 2    | 116-3104-01 | 1    | LH Pivot Shaft ASM   |
| 3    | 116-3105-01 | 1    | RH Pivot Shaft ASM   |
| 4    | 116-3107    | 2    | Pin-Spiral           |
| 5    | 117-0489-01 | 1    | RH Lift ASM          |
| 6    | 117-0488-01 | 1    | LH Lift ASM          |
| 7    | 110-6767    | 2    | Washer-Thrust        |
| 8    | 3256-29     | 6    | Washer-Flat          |
| 9    | 32151-103   | 7    | Ring-Retaining, EXT  |
| 10   | 116-2901    | 2    | Bracket-Lift Rod     |
| 11   | 116-2902    | 2    | Lift Rod ASM         |
| 12   | 3296-23     | 3    | Nut-Lock, NI         |
| 13   | 3217-9      | 2    | Nut-HH               |
| 14   | 40-1940     | 4    | Washer               |
| 15   | 109-9840    | 4    | Screw-Shoulder, HHF  |
| 16   | 117-0519    | 2    | Link-Lift            |
| 17   | 32128-21    | 4    | Nut-HF               |
| 18   | 114-5274    | 1    | Pin-HOC              |
| 19   | 114-3512    | 1    | HOC Handle ASM       |
| 21   | 302-5       | 1    | Fitting-Grease       |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 22   | 3231-24     | 1    | Screw-CARR            |
| 23   | 3296-59     | 3    | Nut-Lock, NI          |
| 24   | 114-1878-03 | 1    | Lever-HOC             |
| 25   | 1-633268    | 1    | Grip-Lever            |
| 26   | 66-0561     | 1    | Screw-Shoulder        |
| 27   | 3256-26     | 1    | Washer-Flat           |
| 28   | 65-9940     | 1    | Spring                |
| 29   | 116-2939    | 1    | Bar-Lift              |
| 30   | 116-3048    | 1    | Hub-Pivot             |
| 31   | 32151-47    | 1    | Ring-Retaining        |
| 32   | 111044      | 2    | Spacer                |
| 33   | 323-7       | 1    | Screw-HH              |
| 34   | 3231-22     | 1    | Screw-CARR            |
| 35   | 114-5307    | 1    | Bracket-HOC           |
| 36   | 103-9859    | 2    | Chain-Decklift, Front |
| 37   | 116-0886    | 2    | Extension Spring ASM  |
| 38   | 98-5975     | 2    | Washer-Belleville     |
| 39   | 323-58      | 2    | Bolt-TAP, HH          |
| 40   | 116-2909    | 4    | Bearing-Flange        |
| 41   | 325-22      | 1    | Screw-HH              |
| 42   | 116-3047    | 1    | Bearing-Flange        |

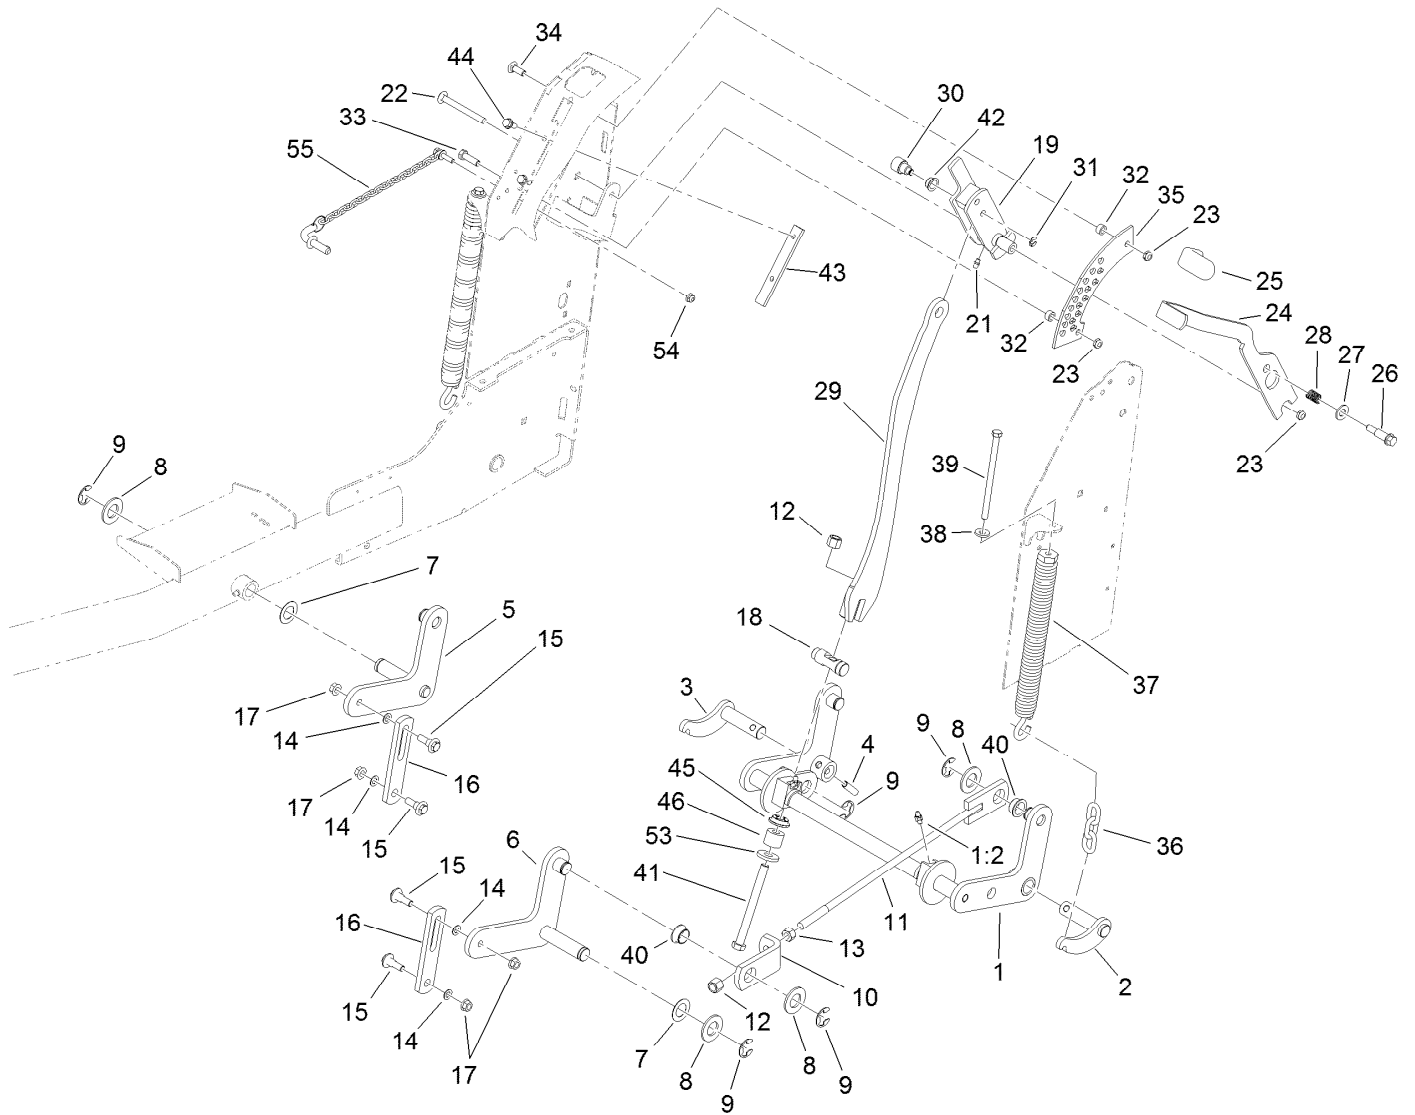

## Decklift Assembly (continued)


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 43   | 116-3124    | 1    | Skid-Handle, Lift |
| 44   | 32144-11    | 2    | Screw-HWHTF       |
| 45   | 116-3625    | 1    | Seat-Spring       |
| 46   | 116-3241    | 1    | Spring-Urethane   |

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 53   | 92-2651     | 1    | Washer      |
| 54   | 104-7201    | 1    | Nut-HF      |
| 55   | 114-0409    | 1    | HOC Pin ASM |

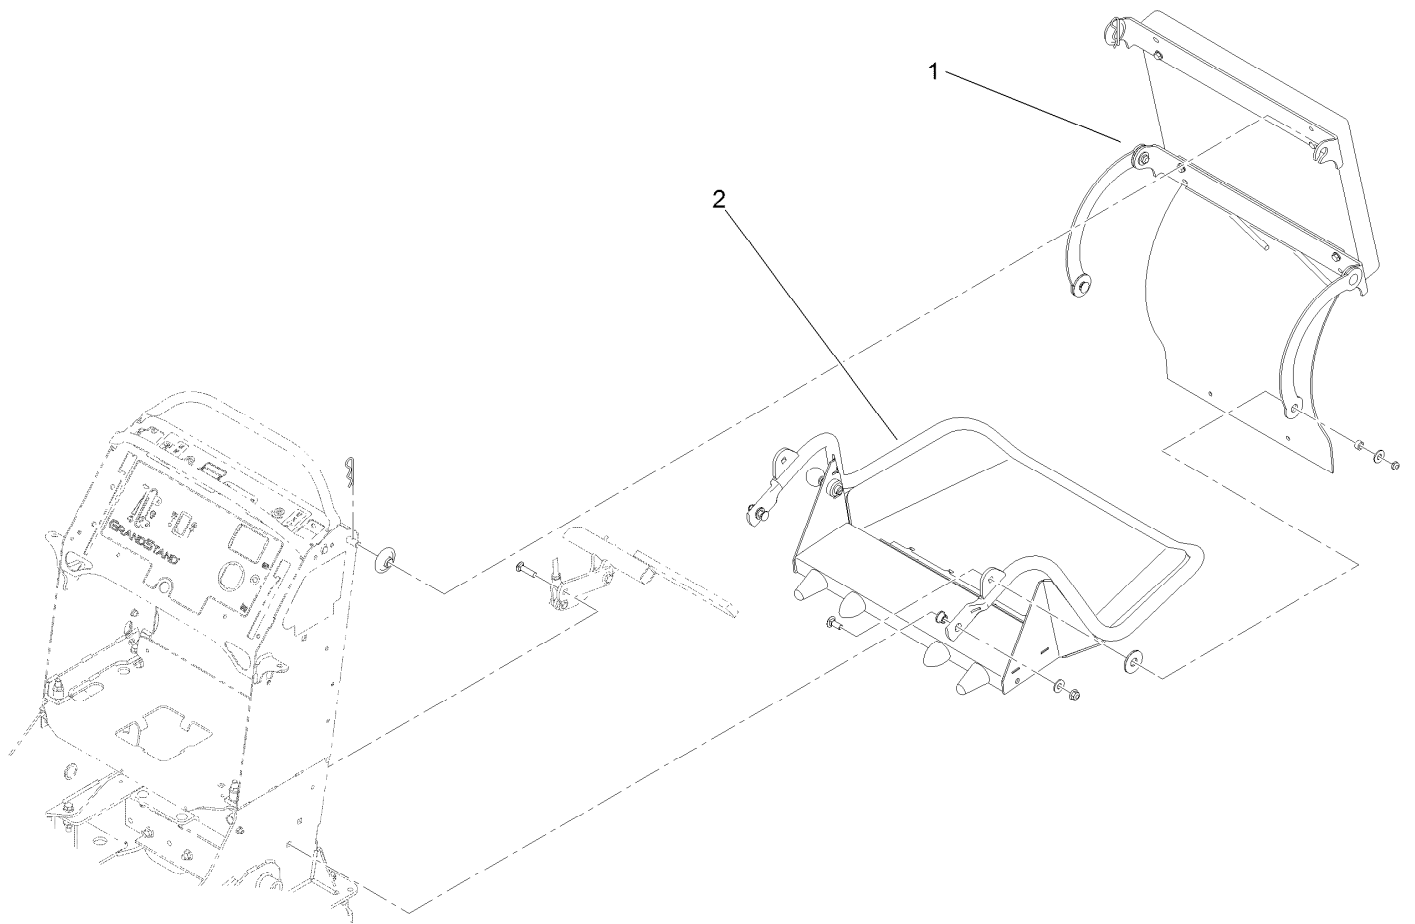


## Platform Assembly

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 119-8742           | 1           | Cushion ASM        |
| 2           | 117-9640           | 1           | Platform ASM       |

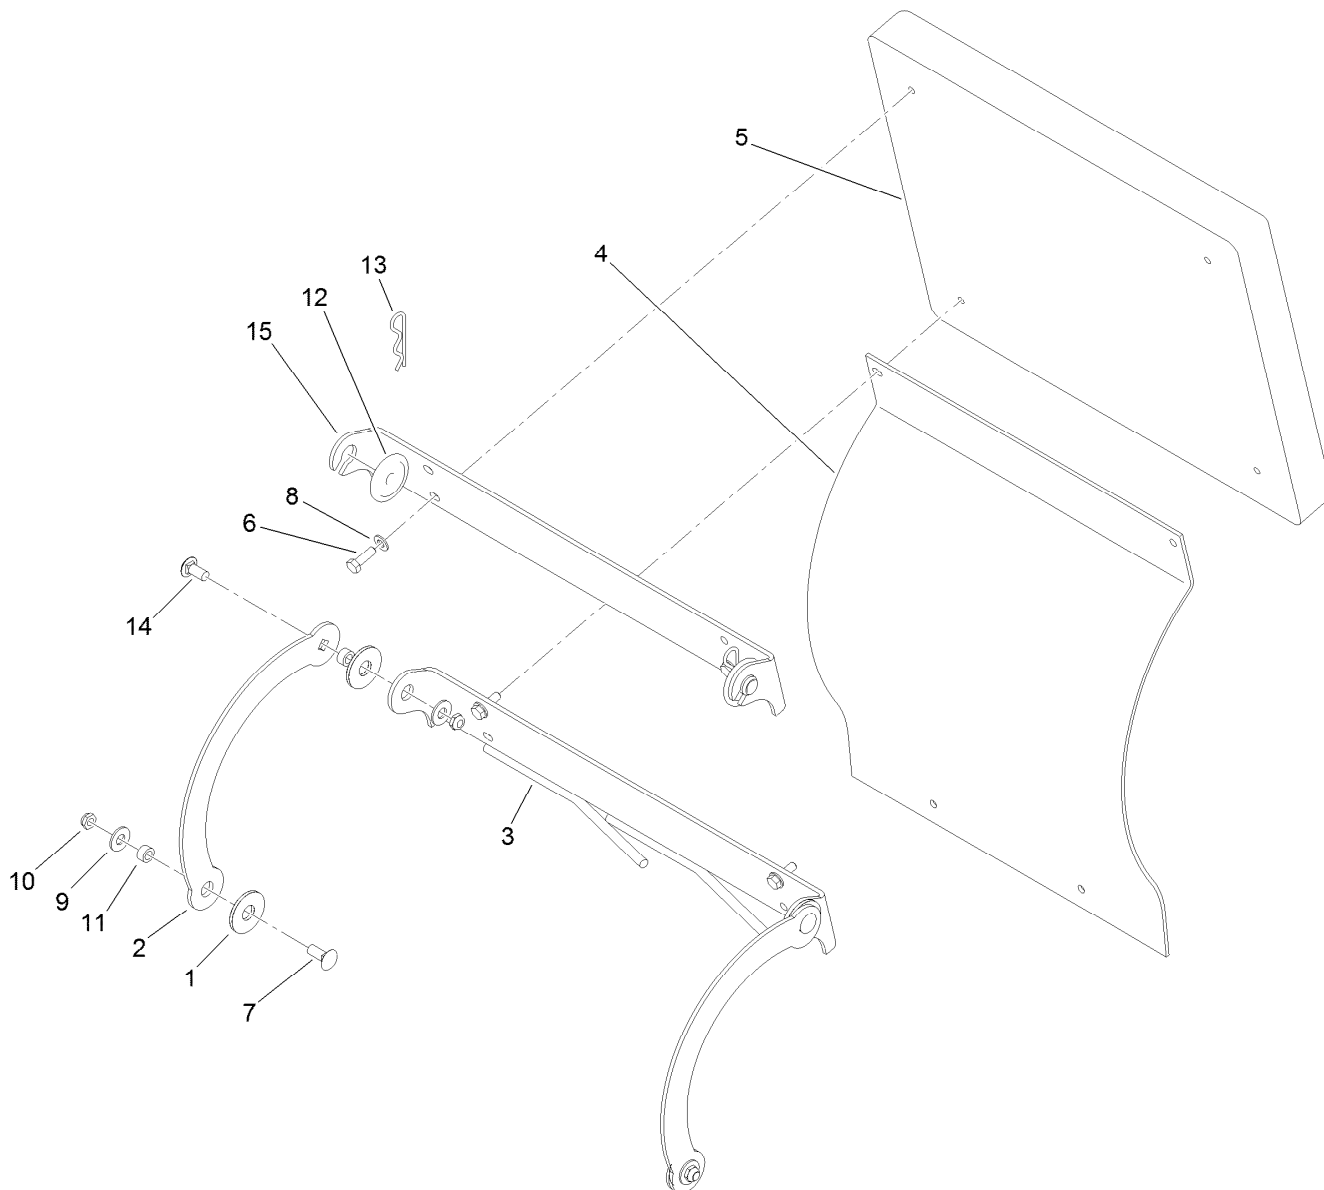


## Cushion Assembly No. 119-8742

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 114-0463    | 4    | Washer-Friction, Composite |
| 2    | 114-1915-01 | 2    | Link-Pad                   |
| 3    | 119-7369-03 | 1    | Lower Hinge ASM            |
| 4    | 114-1919    | 1    | Shield-Rear                |
| 5    | 117-9739    | 1    | Pad-Cushion                |
| 6    | 116-0648    | 4    | Screw-HH, Thread Locking   |
| 7    | 3231-2      | 2    | Screw-CARR                 |
| 8    | 3256-23     | 4    | Washer-Flat                |
| 9    | 3256-4      | 4    | Washer-Flat                |
| 10   | 3296-59     | 4    | Nut-Lock, NI               |
| 11   | 111044      | 4    | Spacer                     |
| 12   | 116-2886    | 2    | Slide-Bushing              |
| 13   | 3290-355    | 2    | Pin-Hair                   |
| 14   | 3231-27     | 2    | Screw-CARR                 |
| 15   | 116-2757-03 | 1    | Hinge-Pad                  |

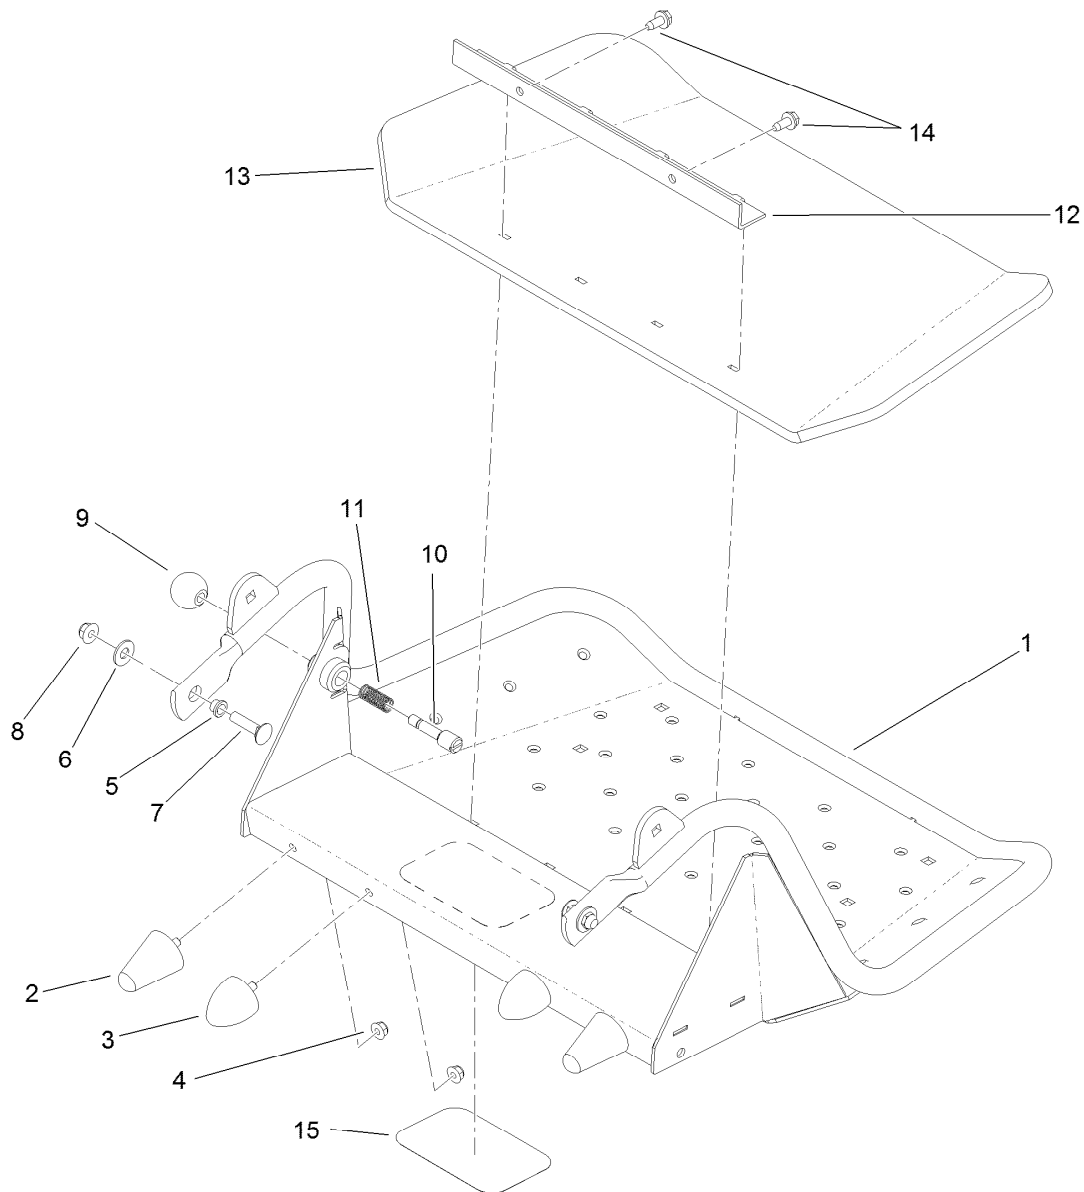

## Platform Assembly No. 117-9640

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 1    | 117-9641-01 | 1    | Platform ASM    |
| 2    | 114-1925    | 2    | Bumper-Rubber   |
| 3    | 114-1926    | 2    | Bumper-Rubber   |
| 4    | 104-8300    | 4    | Nut-Flange, NI  |
| 5    | 109-8788    | 2    | Bushing-Flanged |
| 6    | 3256-4      | 2    | Washer-Flat     |
| 7    | 3231-4      | 2    | Screw-CARR      |
| 8    | 104-8301    | 2    | Nut-Flange, NI  |
| 9    | 1-603175    | 1    | Knob-Ball       |
| 10   | 119-8650    | 1    | Pin-Latch       |
| 11   | 114-5348    | 1    | Spring          |
| 12   | 114-1920-03 | 1    | Clamp-Shield    |
| 13   | 114-5349    | 1    | Mat-Foot        |
| 14   | 32144-70    | 2    | Screw-HWHTF     |
| 15   | 68-3640     | 1    | Decal           |

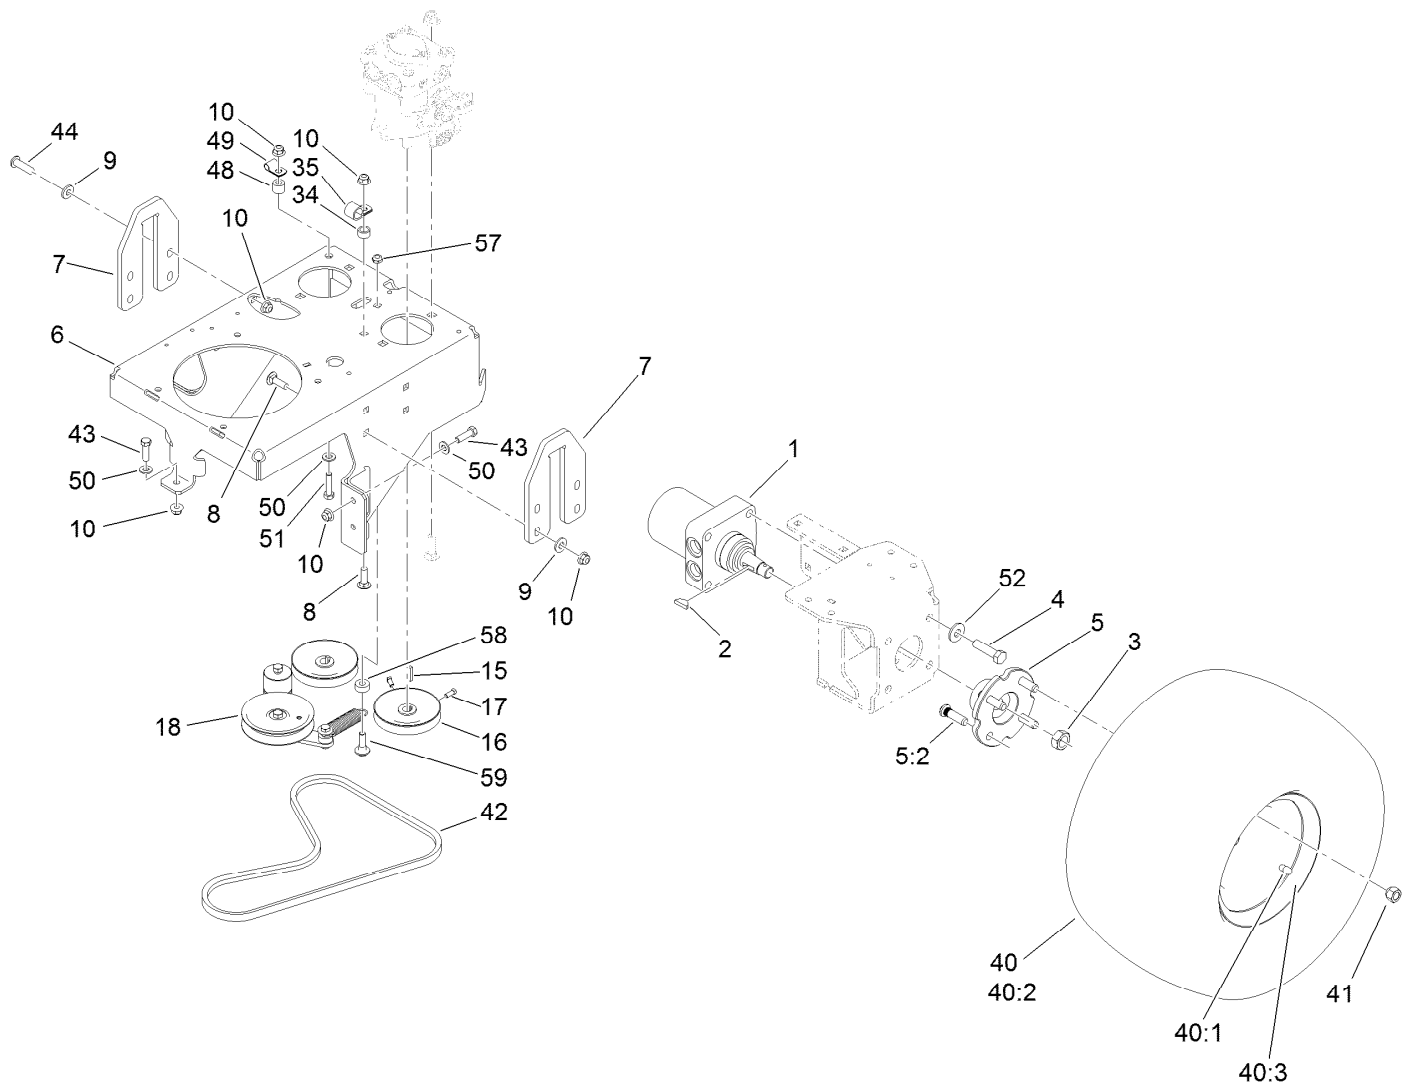


## Ground Drive Assembly

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 114-0549    | 2    | HYD Motor ASM     |
| 2    | 3257-8      | 2    | Key-Woodruff      |
| 3    | 85-7310     | 2    | Nut-Motor, Wheel  |
| 4    | 325-8       | 8    | Screw-HH          |
| 5    | 105-0800    | 2    | Wheel Hub ASM     |
| 5:2  | 10-6830     | 4    | Stud-Type, Drive  |
| 6    | 120-6456-01 | 1    | Base-Engine       |
| 7    | 119-8662    | 2    | Plate-Lift        |
| 8    | 3231-25     | 8    | Screw-CARR        |
| 9    | 98-5975     | 8    | Washer-Belleville |
| 10   | 104-8301    | 15   | Nut-Flange, NI    |
| 15   | 1-807272    | 2    | Key               |
| 16   | 105-5648    | 2    | Pulley-Pump       |
| 17   | 3241-5      | 4    | Screw-Set         |
| 18   |             | 1    | Pump Idler ASM ●  |
| 34   | 1-653069    | 1    | Spacer-Wheel      |
| 35   | 1-633396    | 1    | Clip-Loom         |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 40   | 120-6465    | 2    | Wheel/Tire ASM    |
| 40:1 | 116-4605    | 1    | Rim-8 Inch        |
| 40:2 | 120-6466    | 1    | Tire              |
| 40:3 | 232-27      | 1    | Stem-Valve        |
| 41   | 242-50      | 8    | Nut-Lug           |
| 42   | 114567      | 1    | Belt-V, Lower PTO |
| 43   | 3234-42     | 5    | Screw-HHF         |
| 44   | 3274-63     | 1    | Screw-HSBH        |
| 48   | 121-1760    | 1    | Spacer            |
| 49   | 116-3362    | 1    | Clip-Tube         |
| 50   | 3256-24     | 1    | Washer-Flat       |
| 51   | 323-8       | 1    | Screw-HH          |
| 52   | 1-513435    | 8    | Washer-Spring     |
| 57   | 3296-59     | 1    | Nut-Lock, NI      |
| 58   | 104-8426    | 1    | Spacer            |
| 59   | 614672      | 1    | Bolt-Shoulder     |


● Not serviced separately

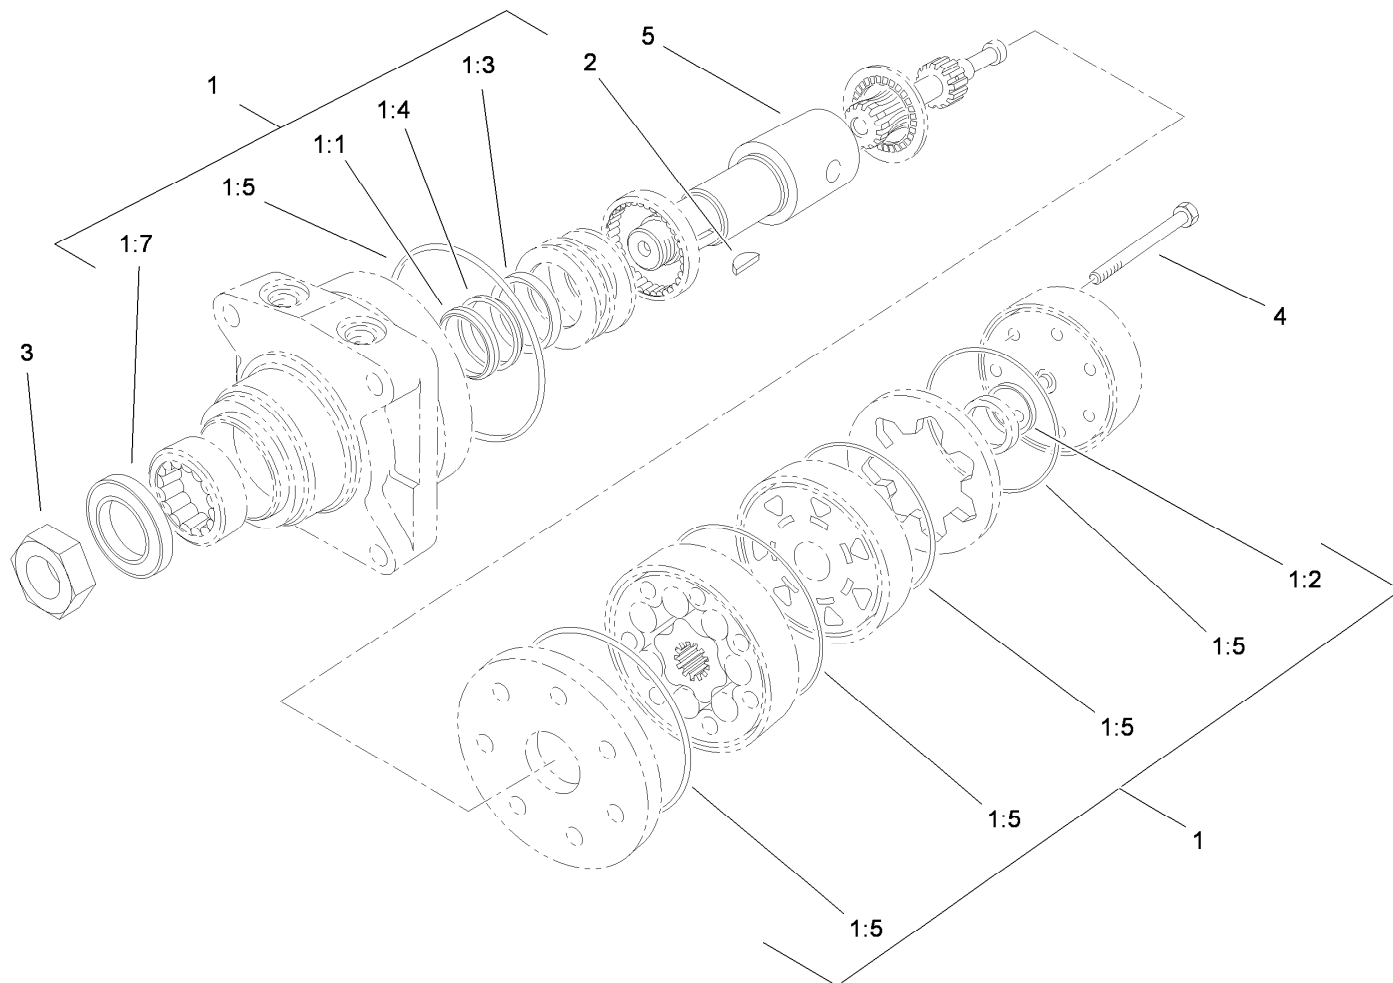

## Hydraulic Motor Assembly 114-0549


| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 1-000119    | 1    | Seal Kit                |
| 1:1  |             | 1    | Ring-Back Up ●          |
| 1:2  |             | 1    | Seal-Commutator ●       |
| 1:3  |             | 1    | Seal-Shaft (Viton) ●    |
| 1:4  |             | 1    | Washer-Back Up, Steel ● |
| 1:5  |             | 5    | Ring-Seal (Viton) ●     |
| 1:7  |             | 1    | Seal-Dirt And Water ●   |
| 2    | 3257-8      | 1    | Key-Woodruff            |
| 3    | 85-7310     | 1    | Nut-Motor, Wheel        |
| 4    | 106-5549    | 6    | Bolt-Special            |
| 5    | 106-8764    | 1    | Shaft-Coupling          |

● Not serviced separately

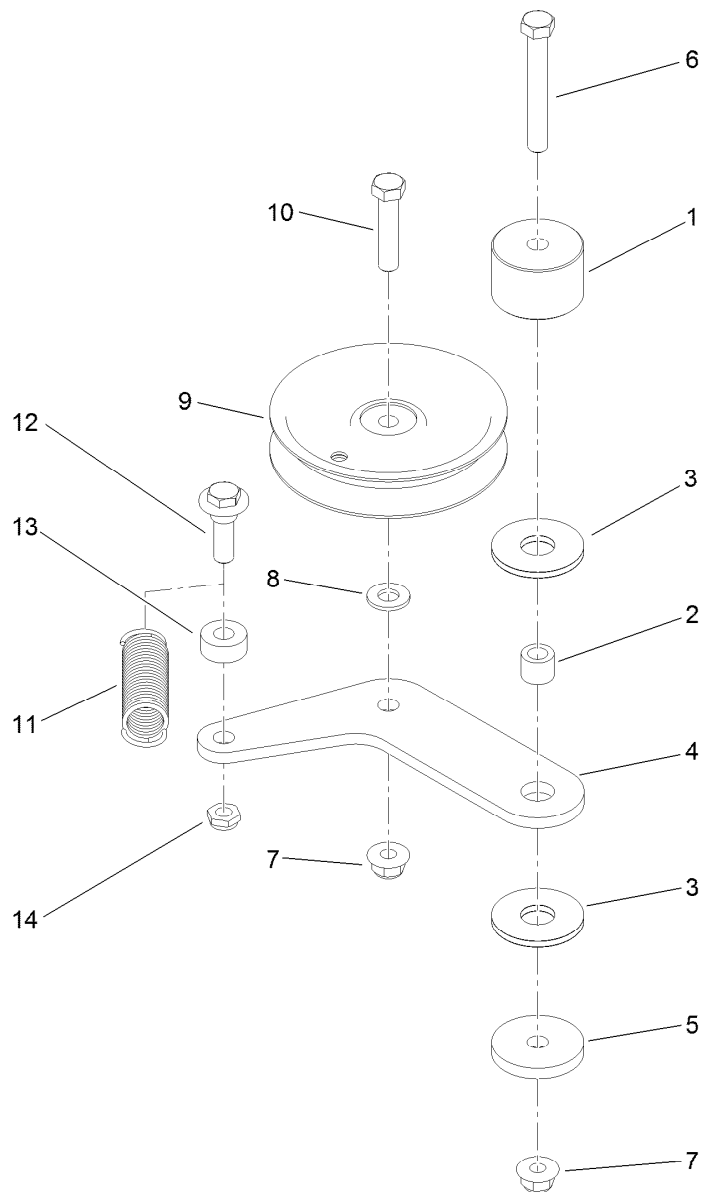

## Pump Idler Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 117-3568    | 1    | Hub-Idler                  |
| 2    | 1-413088    | 1    | Bushing-Lever, Lift        |
| 3    | 114-0463    | 2    | Washer-Friction, Composite |
| 4    | 119-8737    | 1    | Plate-Idler                |
| 5    | 110-9981    | 1    | Washer-Plain               |
| 6    | 323-13      | 1    | Screw-HH                   |
| 7    | 104-8301    | 2    | Nut-Flange, NI             |
| 8    | 3256-24     | 1    | Washer-Flat                |
| 9    | 93-1622     | 1    | Pulley-Idler               |
| 10   | 323-9       | 1    | Screw-HH                   |
| 11   | 108-4056    | 1    | Spring-Extension           |
| 12   | 614672      | 1    | Bolt-Shoulder              |
| 13   | 104-8426    | 1    | Spacer                     |
| 14   | 3296-59     | 1    | Nut-Lock, NI               |

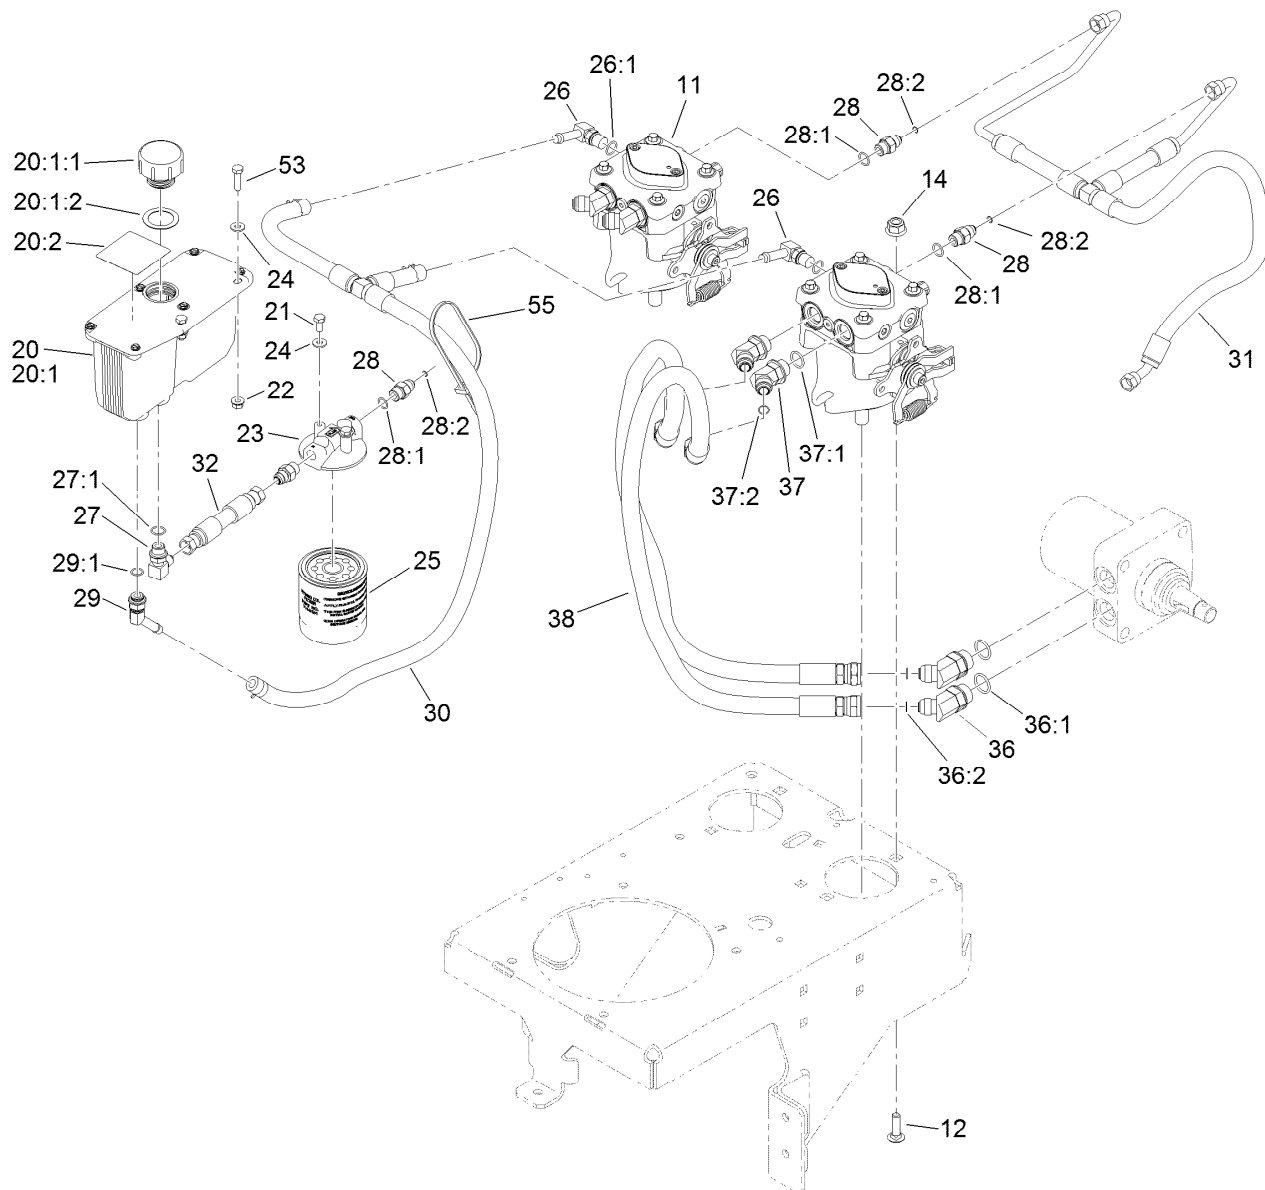


## Hydraulic System Assembly

| Ref.   | Part Number | Qty. | Description               |
|--------|-------------|------|---------------------------|
| 11     | 119-7375    | 2    | Hydraulic Pump ASM        |
| 12     | 3232-3      | 4    | Screw-CARR                |
| 14     | 114-8417    | 4    | Nut-HF, NI                |
| 20     | 107-8433    | 1    | HYD Reservoir ASM         |
| 20:1   |             | 1    | Reservoir-HYD ●           |
| 20:1:1 | 103-1948    | 1    | Cap-Reservoir, HYD        |
| 20:1:2 | 103-1949    | 1    | Gasket-Cap                |
| 20:2   | 115-4212    | 1    | Decal-Warning             |
| 21     | 321-3       | 2    | Screw-HH                  |
| 22     | 32128-32    | 2    | Nut-HHF                   |
| 23     | 104-7836    | 1    | Head-Filter               |
| 24     | 3256-22     | 4    | Washer-Flat               |
| 25     | 114-3494    | 1    | Element-Filter, 25 Micron |
| 26     | 100-4887    | 2    | Fitting-Barbed, 90 DEG    |
| 26:1   | 237-42      | 1    | O-Ring                    |
| 27     | 103-1802    | 1    | Fitting-HYD, 90 DEG       |
| 27:1   | 1-603921    | 1    | O-Ring                    |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 28   | 103-2156    | 4    | Fitting-Straight       |
| 28:1 | 1-603921    | 1    | O-Ring                 |
| 28:2 | 103-1020    | 1    | O-Ring                 |
| 29   | 103-1807    | 1    | Fitting-Barbed, 45 DEG |
| 29:1 | 237-42      | 1    | O-Ring                 |
| 30   | 121-5969    | 1    | Case Drain Hose ASM    |
| 31   | 121-5968    | 1    | Charge Hose ASM        |
| 32   | 116-2604    | 1    | HYD Hose ASM           |
| 36   | 1-523222    | 4    | Fitting-HYD, 45 DEG    |
| 36:1 | 1-603919    | 1    | O-Ring                 |
| 36:2 | 1-603992    | 1    | O-Ring                 |
| 37   | 1-523221    | 4    | Fitting-HYD, 45 DEG    |
| 37:1 | 1-603920    | 1    | O-Ring                 |
| 37:2 | 1-603992    | 1    | O-Ring                 |
| 38   | 116-6902    | 4    | HYD Hose ASM           |
| 53   | 321-6       | 2    | Screw-HH               |
| 55   | 3290-378    | 2    | Tie-Cable              |

● Not serviced separately


# 99 - Seal Overhaul Kit

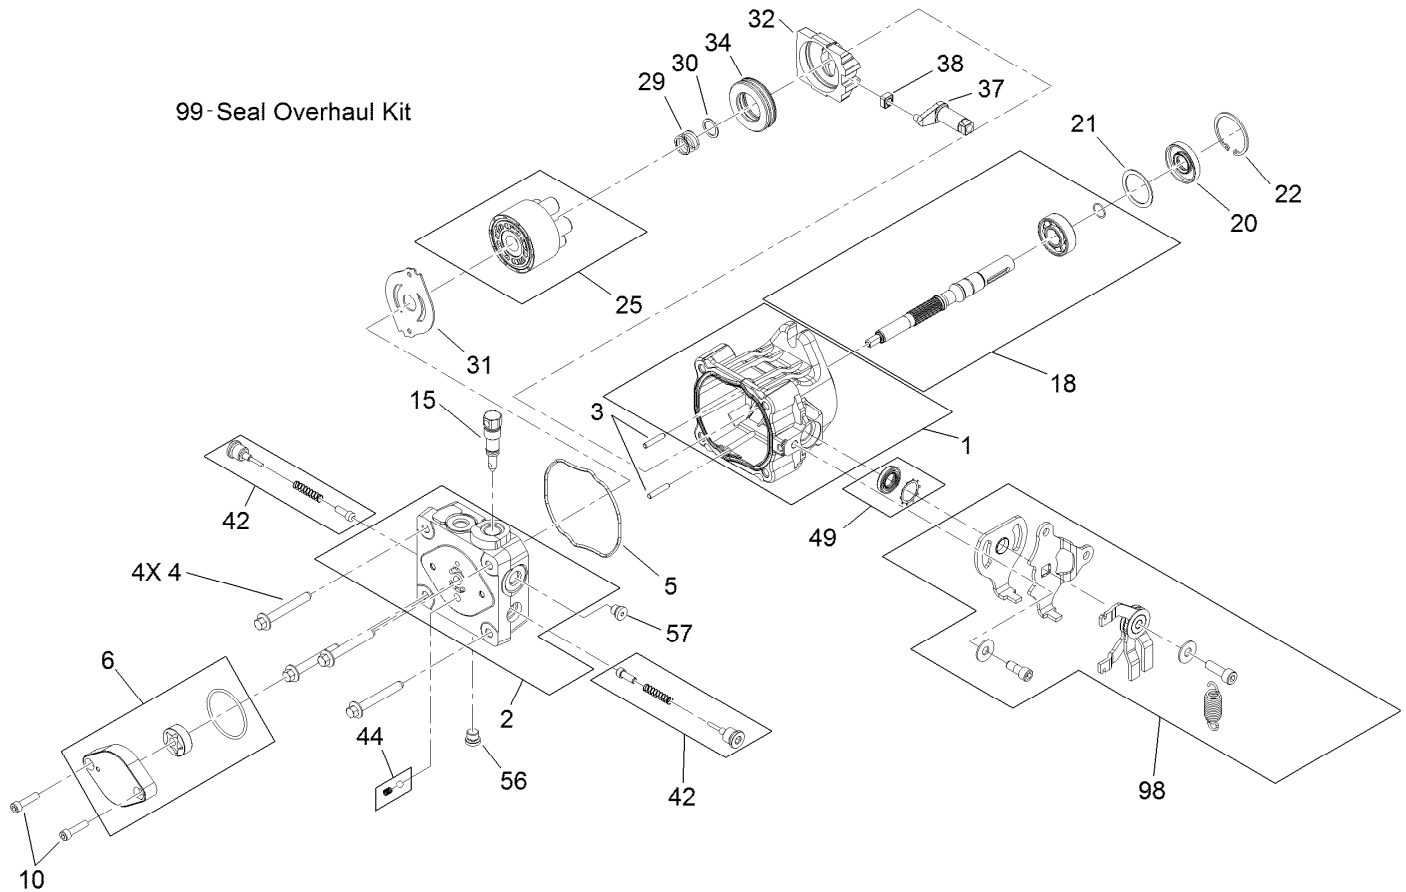

## Hydraulic Pump Assembly No. 119-7375

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 115-4464    | 1    | Housing Kit             |
| 2    | 106-8752    | 1    | End Cap Kit (W/Poppets) |
| 3    | 106-8753    | 2    | Pin-Headless, Straight  |
| 4    | 106-8754    | 4    | Bolt-HF                 |
| 5    | 106-8755    | 1    | O-Ring                  |
| 6    | 106-8756    | 1    | Charge Pump Kit         |
| 10   | 104-2111    | 2    | Capscrew                |
| 15   | 106-8759    | 1    | Bypass Valve Kit        |
| 18   | 103-2664    | 1    | Input Shaft Kit         |
| 20   | 104-5310    | 1    | Seal-Lip                |
| 21   | 104-5308    | 1    | Spacer                  |
| 22   | 104-5309    | 1    | Ring-Retaining          |
| 25   | 103-2666    | 1    | Cylinder Block Kit      |
| 29   | 94-1936     | 1    | Spring-Block            |


| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 30   | 94-1937     | 1    | Washer-Thrust                |
| 31   | 105-6185    | 1    | Plate-Valve                  |
| 32   | 94-1907     | 1    | Swashplate-Variable          |
| 34   | 94-6922     | 1    | Bearing-Thrust               |
| 37   | 115-4458    | 1    | Arm-Trunnion, Tapered Square |
| 38   | 94-1910     | 1    | Guide-Slot                   |
| 42   | 98-3252     | 2    | Valve-Check (W/Poppet)       |
| 44   | 106-8760    | 1    | Charge Relief Valve Kit      |
| 49   | 106-8761    | 1    | Trunnion Seal / Retainer Kit |
| 56   | 106-8762    | 1    | Plug-HSH                     |
| 57   | 104-2189    | 1    | Plug-Thread, Straight        |
| 98   | 115-4046    | 1    | Return Kit                   |
| 99   | 105-6184    | 1    | Seal Overhaul Kit            |

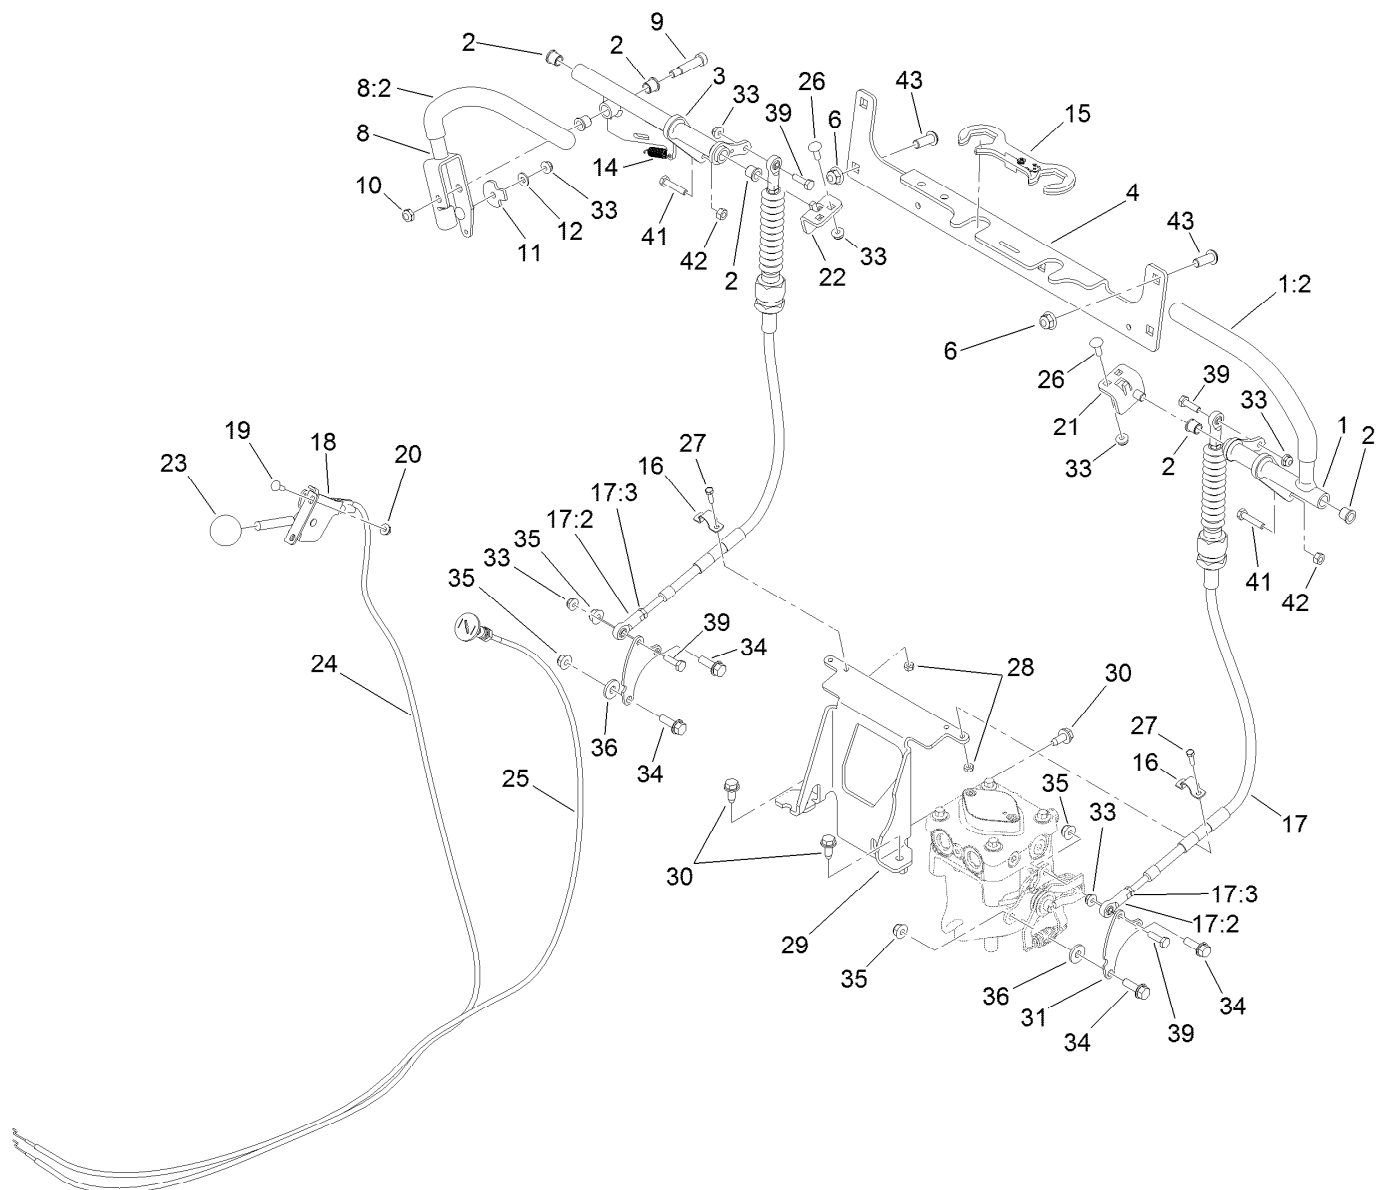

## Control Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 119-8743    | 1    | LH Lever ASM          |
| 1:2  | 119-0222    | 1    | Grip                  |
| 2    | 103-9928    | 6    | Bearing               |
| 3    | 119-7353    | 1    | RH Motion Control ASM |
| 4    | 119-7359-01 | 1    | Bracket-Cross         |
| 6    | 104-8301    | 4    | Nut-Flange, NI        |
| 8    | 119-1887    | 1    | RH Motion Lever ASM   |
| 8:2  | 119-0222    | 1    | Grip                  |
| 9    | 114-0239    | 1    | Screw-HSH             |
| 10   | 3296-47     | 1    | Nut-Lock, NI          |
| 11   | 114-0268    | 1    | Cam-Lever             |
| 12   | 3256-22     | 1    | Washer-Flat           |
| 14   | 114-0249    | 1    | Spring-Extension      |
| 15   | 120-8372    | 1    | Lock-Cable            |
| 16   | 119-7370    | 2    | Clamp                 |
| 17   | 119-7366    | 2    | Cable ASM             |
| 17:2 | 119-7379    | 2    | Rod-Ball Joint        |
| 17:3 | 3220-1      | 3    | Nut-Jam               |
| 18   | 110-5547    | 1    | Control Lever ASM     |
| 19   | 1-807533    | 2    | Bolt-CARR             |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 20   | 32128-17    | 2    | Nut-Lock, Flange         |
| 21   | 119-8690    | 1    | LH Pivot Tab ASM         |
| 22   | 119-8718    | 1    | RH Pivot Tab ASM         |
| 23   | 1-603175    | 1    | Knob-Ball                |
| 24   | 119-6654    | 1    | Cable-Throttle           |
| 25   | 119-6655    | 1    | Control-Choke, Push/Pull |
| 26   | 3229-1      | 4    | Screw-CARR               |
| 27   | 3290-134    | 4    | Screw                    |
| 28   | 3296-2      | 4    | Nut-Lock, NI             |
| 29   | 119-8746-01 | 1    | Bracket-Cable Mount      |
| 30   | 32144-70    | 3    | Screw-HWHTF              |
| 31   | 121-5967    | 2    | Plate-Control, Pump      |
| 33   | 104-7201    | 8    | Nut-HF                   |
| 34   | 3234-29     | 4    | Screw-HHF                |
| 35   | 104-8300    | 4    | Nut-Flange, NI           |
| 36   | 4-2390      | 2    | Washer-Flat              |
| 39   | 321-5       | 4    | Screw-HH                 |
| 41   | 114-0282    | 2    | Screw-HH                 |
| 42   | 3217-5      | 2    | Nut-Hex                  |
| 43   | 3274-94     | 4    | Screw-HSBH               |

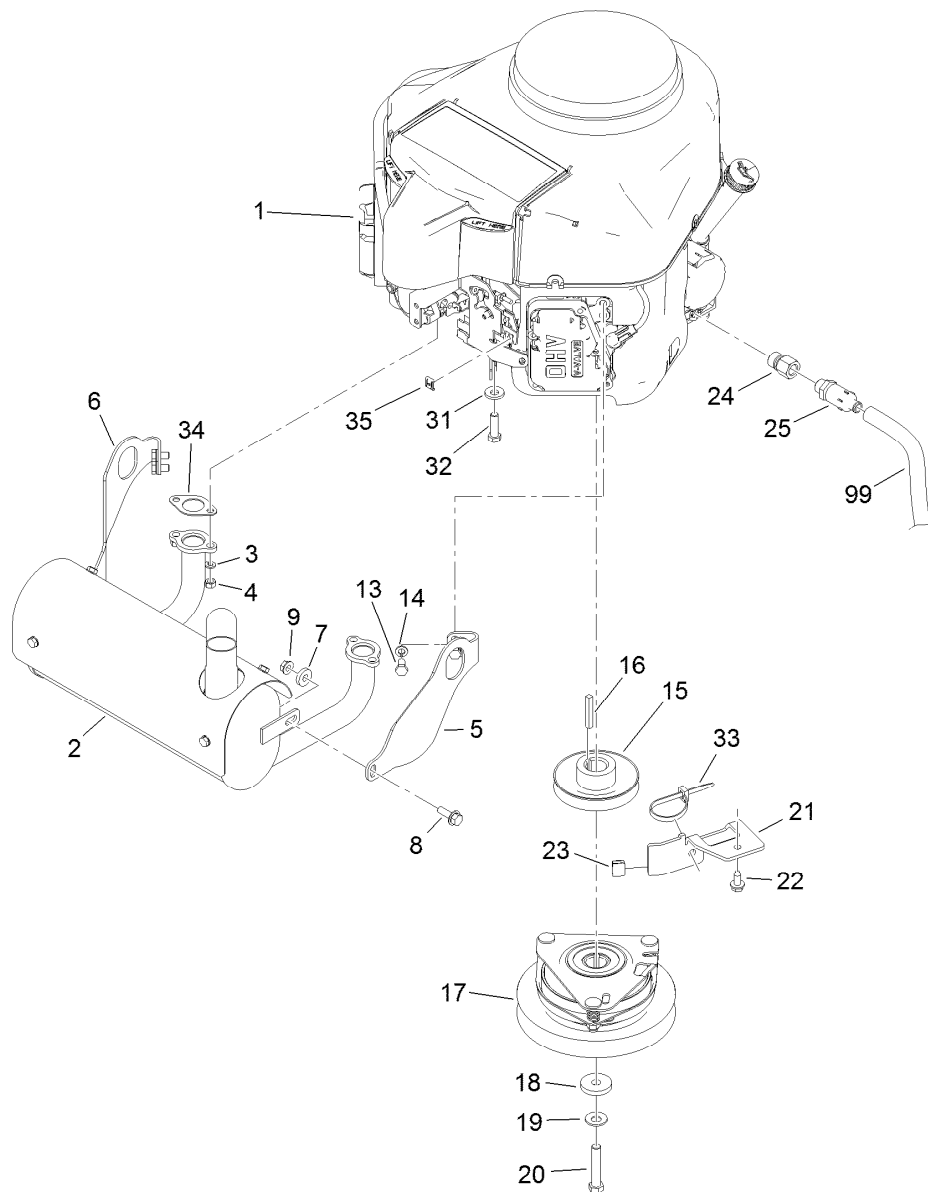


## Engine Assembly

| Ref. | Part Number | Qty. | Description                   |
|------|-------------|------|-------------------------------|
| 1    |             | 1    | Engine-Kawasaki, Fs691V<br>●■ |
| 2    | 116-2352    | 1    | Muffler                       |
| 3    | 114-3550    | 4    | Washer-Lock, Spring           |
| 4    | 114-3549    | 4    | Nut                           |
| 5    | 116-2353    | 1    | Bracket-Muffler Mount, LH     |
| 6    | 116-2354    | 1    | Bracket-Muffler Mount, RH     |
| 7    | 104-7658    | 2    | Spacer                        |
| 8    | 3234-29     | 2    | Screw-HHF                     |
| 9    | 32128-25    | 2    | Nut-HF                        |
| 13   | 33114-016   | 4    | Screw-HH                      |
| 14   | 3253-4      | 4    | Washer-Lock                   |
| 15   | 112-7067    | 1    | Pulley                        |
| 16   | 608006      | 1    | Key-Square                    |
| 17   | 105-2635    | 1    | Clutch / Brake ASM            |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 18   | 107-4136    | 1    | Washer              |
| 19   | 1-603610    | 1    | Washer-Spring       |
| 20   | 3212-9      | 1    | Screw-HH            |
| 21   | 121-5984-03 | 1    | Bracket-Clutch Stop |
| 22   | 32144-70    | 1    | Screw-HWHTF         |
| 23   | 109-3765    | 1    | Bumper              |
| 24   | 103-1966    | 1    | Adapter             |
| 25   | 92-6877     | 1    | Valve-Drain, Oil    |
| 31   | 98-5975     | 4    | Washer-Belleville   |
| 32   | 323-7       | 4    | Screw-HH            |
| 33   | 3290-378    | 1    | Tie-Cable           |
| 34   | 1-653313    | 2    | Gasket-Exhaust      |
| 35   | 81-1690     | 1    | Clamp-Cable         |
| 99   | 103-1964    | 1    | Hose-Drain, Oil     |

● Not serviced separately


■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

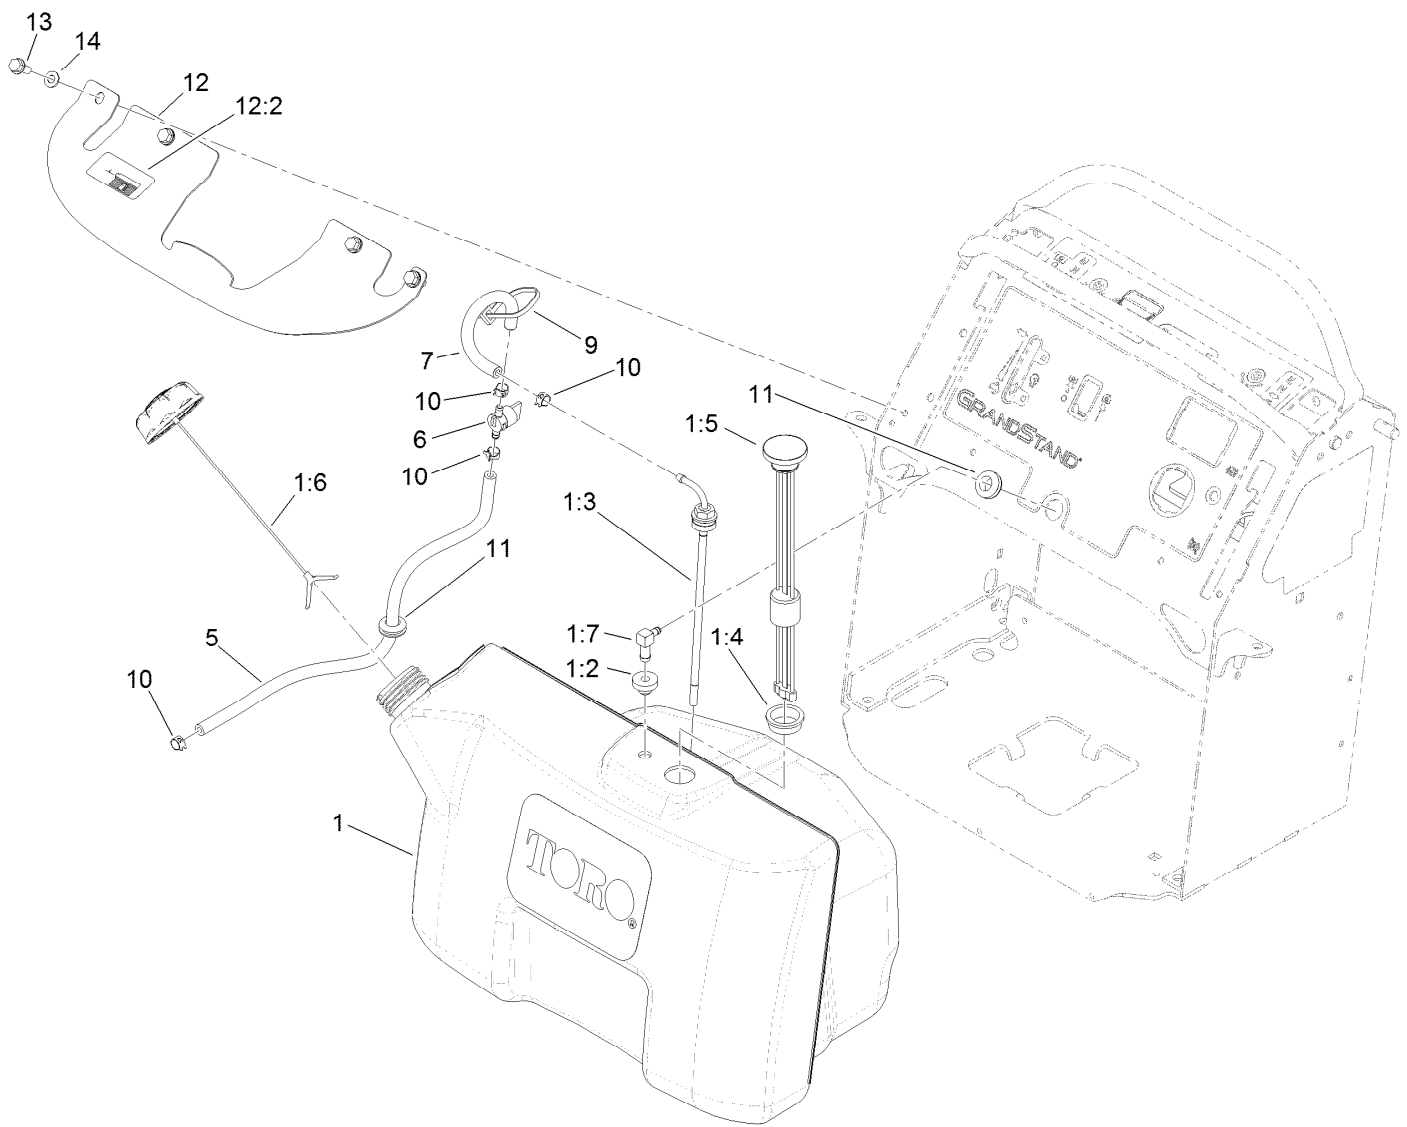

## Fuel Tank Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    | 119-7340    | 1    | Tank ASM               |
| 1:2  | 46-6560     | 3    | Bushing                |
| 1:3  | 1-643172    | 3    | Elbow-90 DEG           |
| 1:4  | 95-8972     | 1    | Grommet                |
| 1:5  | 117-9719    | 1    | Guage-Fuel             |
| 1:6  | 116-1704    | 1    | Cap-Fuel, Ratcheting   |
| 1:7  | 116-3408    | 1    | Fitting-Fuel, Bulkhead |
| 5    | 110-5701    | 1    | Hose-Fuel              |
| 6    | 1-603770    | 1    | Valve-Fuel             |


| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 7    | 109-0297    | 1    | Hose-Fuel        |
| 9    | 3290-378    | 4    | Tie-Cable        |
| 10   | 2412-98     | 4    | Clamp-Hose       |
| 11   | 112-7069    | 2    | Grommet          |
| 12   | 120-6462    | 1    | Tank Bracket     |
| 12:2 | 116-3290    | 1    | Decal-Fill, Fuel |
| 13   | 32144-11    | 4    | Screw-HWHTF      |
| 14   | 3256-70     | 4    | Washer-Flat      |

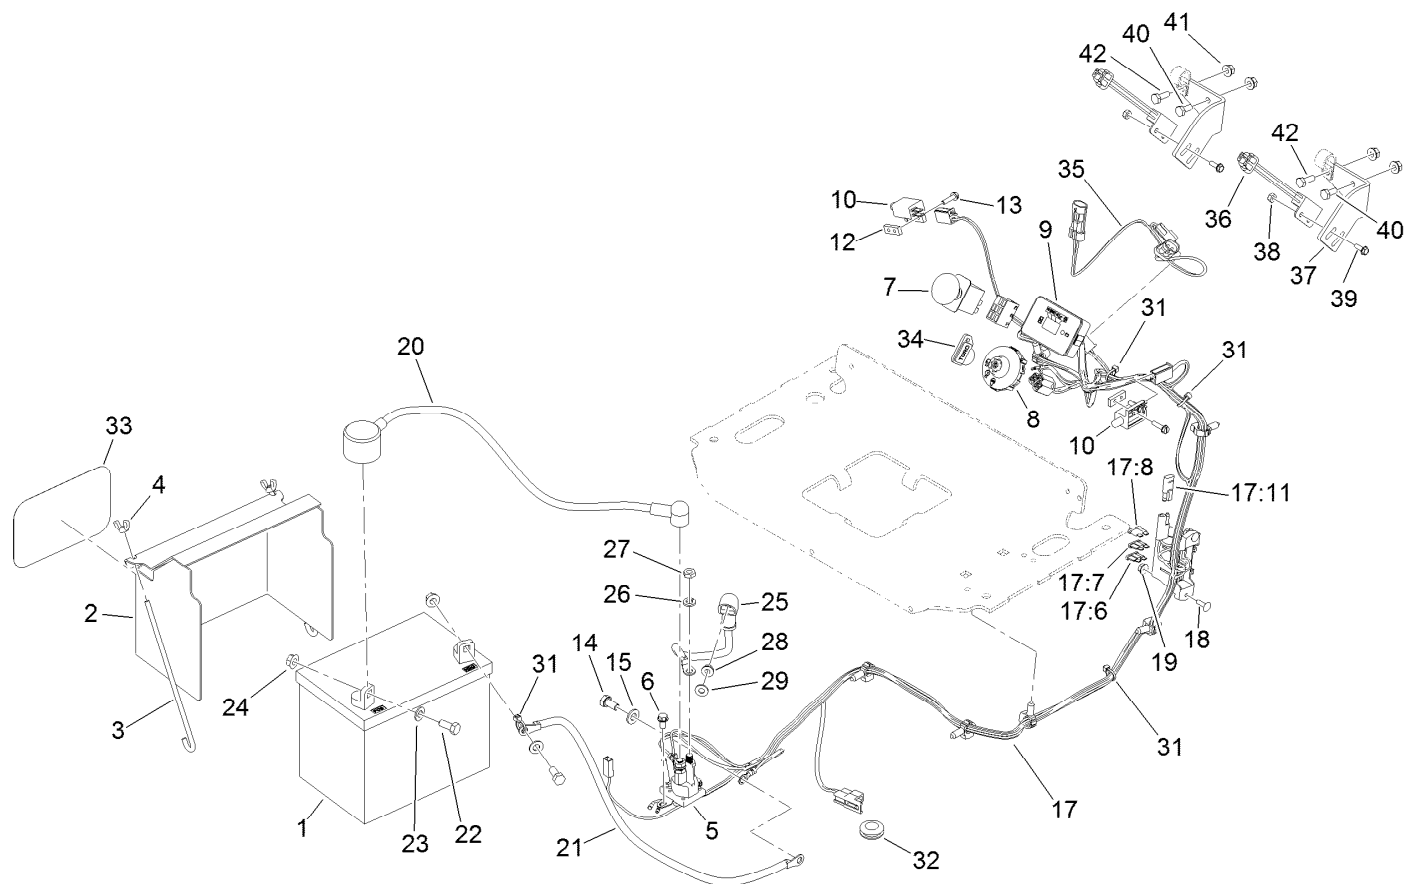

## Electrical Assembly


| Ref.  | Part Number | Qty. | Description             |
|-------|-------------|------|-------------------------|
| 1     | 104-8162    | 1    | Battery                 |
| 2     | 117-0543-01 | 1    | Cover-Battery           |
| 3     | 1-633651    | 2    | Bolt-Holddown           |
| 4     | 1-543792    | 2    | Wingnut                 |
| 5     | 117-1197    | 1    | Solenoid                |
| 6     | 32144-4     | 2    | Screw-HWH               |
| 7     | 114-0279    | 1    | Switch-PTO              |
| 8     | 117-2222    | 1    | Switch-Ignition         |
| 9     | 117-3886    | 1    | Module-Hour Meter       |
| 10    | 1-513152    | 2    | Switch-Closed, Normally |
| 12    | 1-633181    | 2    | Plate-Tapped            |
| 13    | 32105-13    | 4    | Screw-HWH               |
| 14    | 33114-016   | 1    | Screw-HH                |
| 15    | 33094-00    | 1    | Washer-Plain            |
| 17    | 116-2662    | 1    | Harness-Wiring          |
| 17:6  | 109103      | 1    | Fuse-Blade, 30 Amp      |
| 17:7  | 109102      | 1    | Fuse-Blade, 25 Amp      |
| 17:8  | 218-578     | 1    | Fuse-Blade, 10 Amp      |
| 17:11 | 116-0053    | 1    | Cap-Plug                |
| 18    | 1-807533    | 2    | Bolt-CARR               |
| 19    | 3290-148    | 2    | Nut-HF                  |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 20   | 115-3864    | 1    | Cable-Battery, Positive |
| 21   | 105-0836    | 1    | Cable-Battery, Black    |
| 22   | 322-3       | 2    | Screw-HH                |
| 23   | 3256-23     | 2    | Washer-Flat             |
| 24   | 109-5715    | 2    | Nut-HHF, Smooth         |
| 25   | 106-8268    | 1    | Cable-Battery, Red      |
| 26   | 3253-4      | 2    | Washer-Lock             |
| 27   | 3220-2      | 2    | Nut-Jam                 |
| 28   | 32128-33    | 1    | Nut-HF                  |
| 29   | 3256-22     | 1    | Washer-Flat             |
| 31   | 1-303287    | 4    | Tie-Cable               |
| 32   | 117-2781    | 1    | Grommet                 |
| 33   | 68-3640     | 1    | Decal                   |
| 34   | 63-8360     | 1    | Key-Ignition            |
| 35   | 119-8729    | 1    | Harness-Wire, Neutral   |
| 36   | 105-0023    | 2    | Switch-Proximity        |
| 37   | 119-8503-01 | 2    | Bracket-Mount, Switch   |
| 38   | 3296-2      | 4    | Nut-Lock, NI            |
| 39   | 32105-23    | 4    | Screw                   |
| 40   | 321-3       | 2    | Screw-HH                |

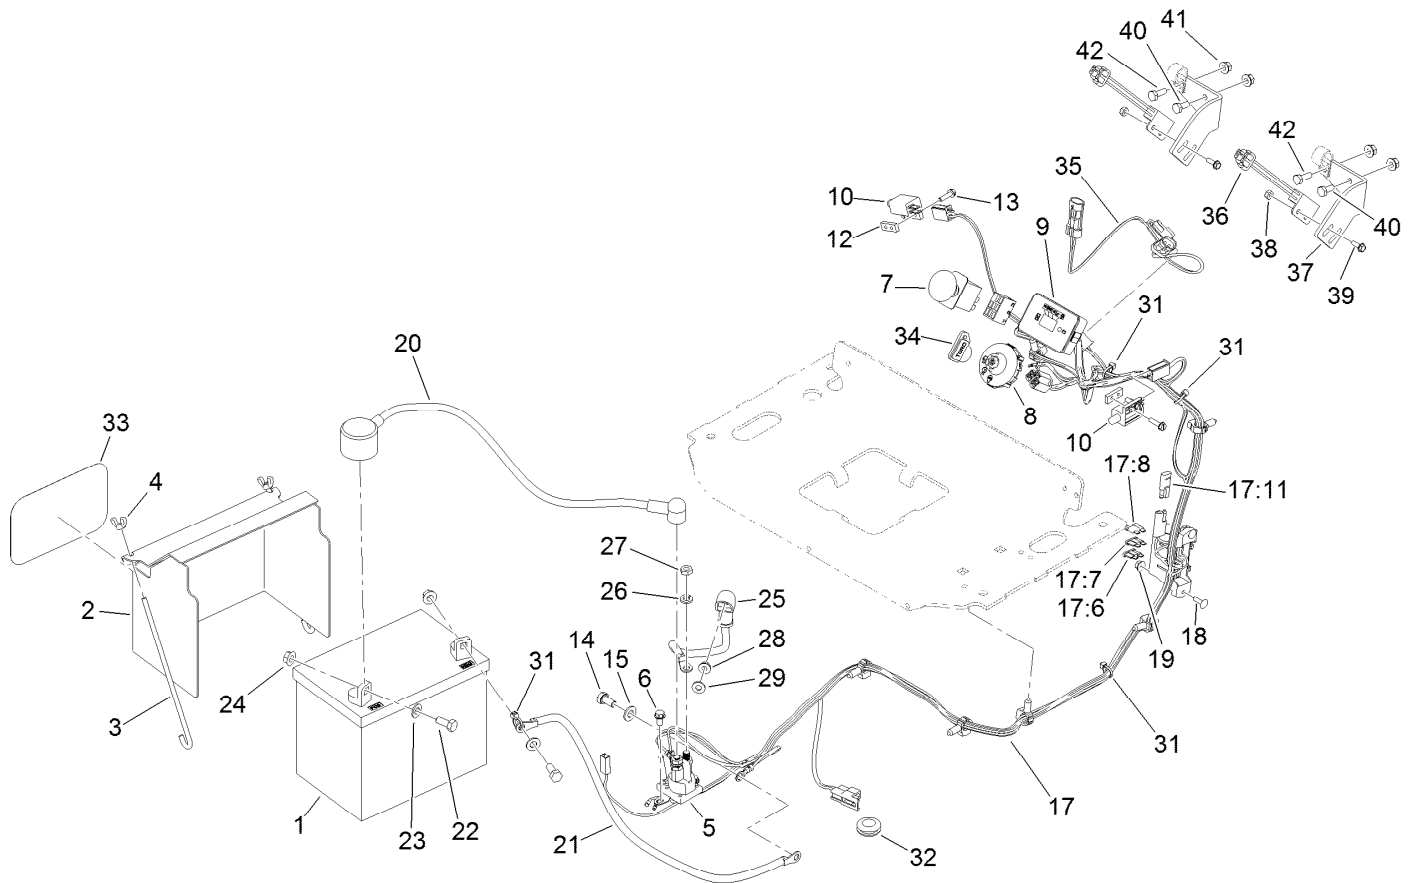

## Electrical Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 41   | 32128-32    | 4    | Nut-HHF     |
| 42   | 321-4       | 2    | Screw-HH    |

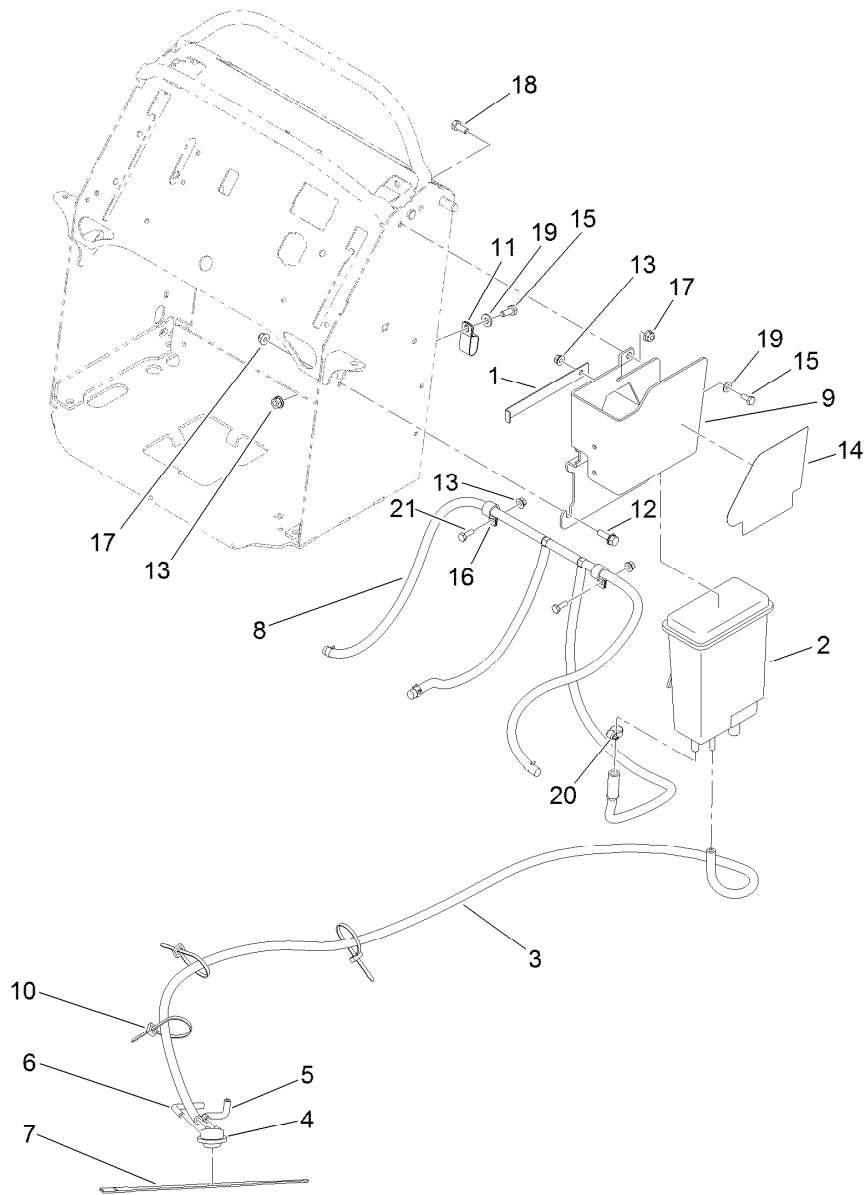

## Carbon Canister Assembly

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 120-8307-01 | 1    | Plate-Loc               |
| 2    | 117-9795    | 1    | Canister-Carbon, 1200Cc |
| 3    | 120-6493    | 1    | Hose-Fuel               |
| 4    | 116-2232    | 1    | Valve-Control, Vacuum   |
| 5    | 119-8502    | 1    | Hose-Vent, Formed       |
| 6    | 119-8501    | 1    | Hose-Vent, Formed       |
| 7    | 116-2469    | 1    | Strap-Velcro, Cable Tie |
| 8    | 120-8303    | 1    | Vent Hose ASM           |
| 9    | 119-7385-01 | 1    | Plate- Adapter          |
| 10   | 3290-378    | 3    | Tie-Cable               |
| 11   | 2412-105    | 1    | Clamp-Tube, Double      |


| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 12   | 3234-29     | 2    | Screw-HHF          |
| 13   | 32128-32    | 4    | Nut-HHF            |
| 14   | 117-0485    | 1    | Decal-Aid, Service |
| 15   | 321-3       | 2    | Screw-HH           |
| 16   | 2412-87     | 2    | Clamp-Cable        |
| 17   | 104-8300    | 3    | Nut-Flange, NI     |
| 18   | 322-3       | 1    | Screw-HH           |
| 19   | 3256-22     | 2    | Washer-Flat        |
| 20   | 2412-108    | 1    | Clamp-Worm         |
| 21   | 321-4       | 2    | Screw-HH           |

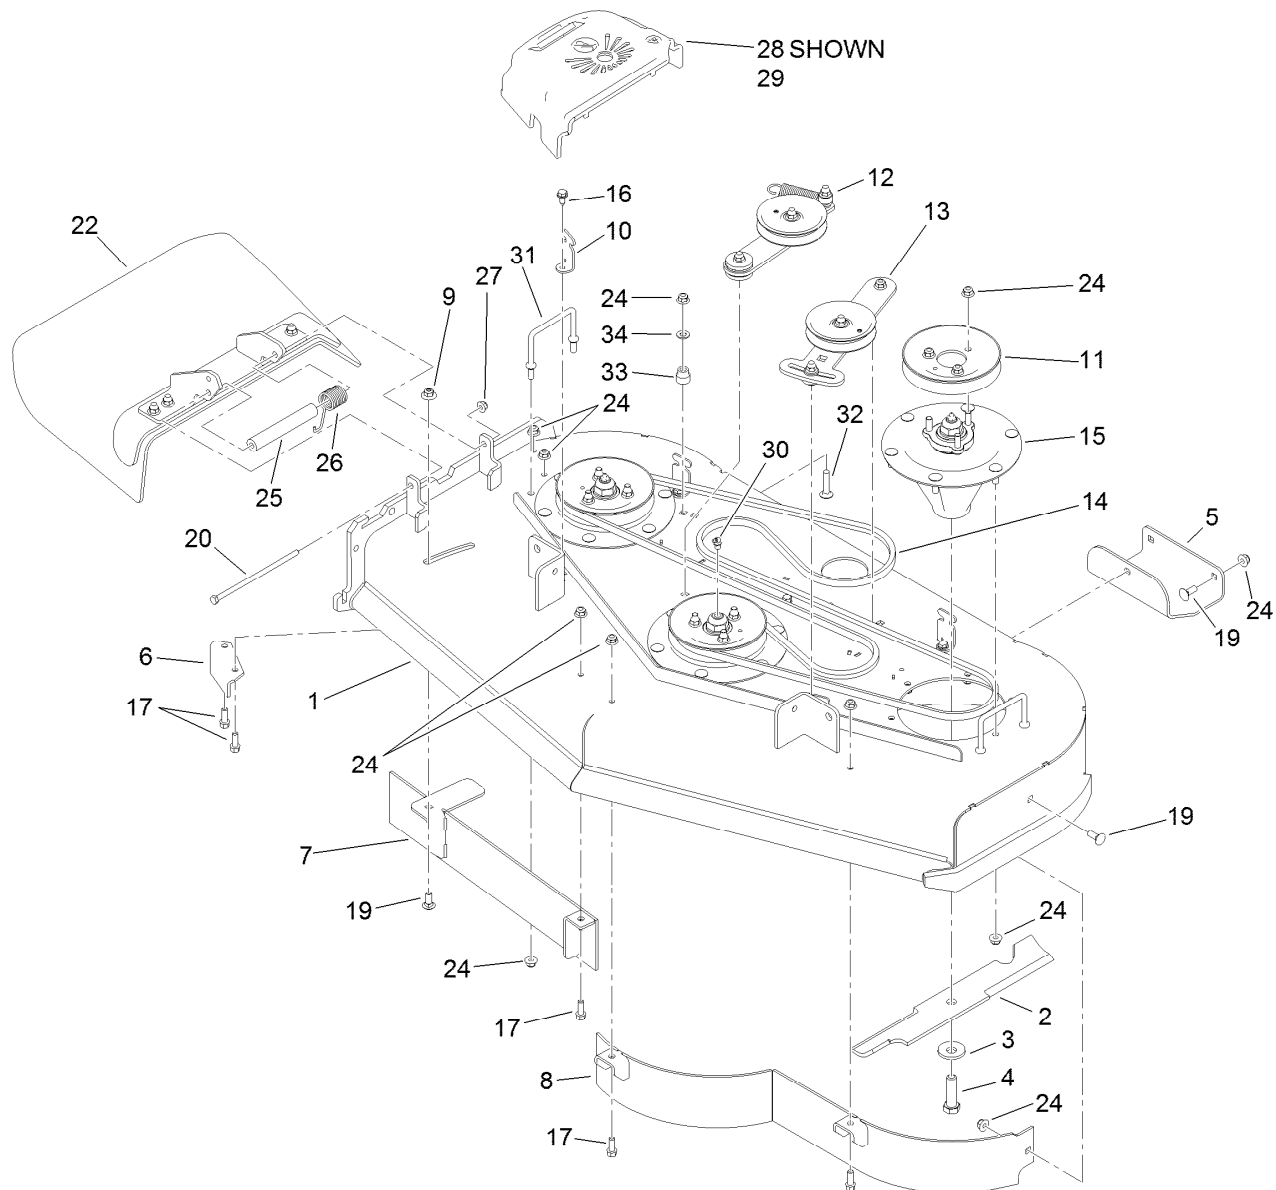

## Deck Assembly

| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 120-6401    | 1    | Deck ASM                    |
| 2    | 107-3192-03 | 3    | Blade-16.5 Inch (High Flow) |
| 3    | 103-0865    | 3    | Washer-Blade Bolt, Heavy    |
| 4    | 51-4060     | 3    | Screw-Blade                 |
| 5    | 114-1908-01 | 1    | Skid                        |
| 6    | 107-8541-01 | 1    | Baffle-Discharge            |
| 7    | 121-1790-01 | 1    | Baffle ASM                  |
| 8    | 117-0410-01 | 1    | 48 Inch Baffle ASM          |
| 9    | 109-6658    | 1    | Nut-Flange, NI              |
| 10   | 117-5758-03 | 4    | Bracket-Cover               |
| 11   | 120-6432    | 3    | Pulley                      |
| 12   | 120-6410    | 1    | Idler Arm ASM               |
| 13   | 117-0446    | 1    | Idler Adjust ASM            |
| 14   | 114-0453    | 1    | Belt-V                      |
| 15   | 119-8560    | 3    | Spindle ASM                 |
| 16   | 32144-70    | 4    | Screw-HWHTF                 |


| Ref. | Part Number | Qty. | Description    |
|------|-------------|------|----------------|
| 17   | 92-1624     | 5    | Screw-HWH      |
| 19   | 3231-2      | 5    | Screw-CARR     |
| 20   | 322-50      | 1    | Screw-HH       |
| 22   | 121-5960    | 1    | Deflector ASM  |
| 24   | 104-8301    | 41   | Nut-Flange, NI |
| 25   | 105-4622    | 1    | Spacer         |
| 26   | 108-4052    | 1    | Spring-Torsion |
| 27   | 104-8300    | 1    | Nut-Flange, NI |
| 28   | 120-6431    | 1    | Cover-Belt, RH |
| 29   | 120-6423    | 1    | Cover-Belt     |
| 30   | 302-33      | 1    | Fitting-Grease |
| 31   | 109-6982    | 2    | Wireform-Cover |
| 32   | 3231-5      | 1    | Screw-CARR     |
| 33   | 1-603496    | 1    | Bushing-Idler  |
| 34   | 3256-24     | 1    | Washer-Flat    |

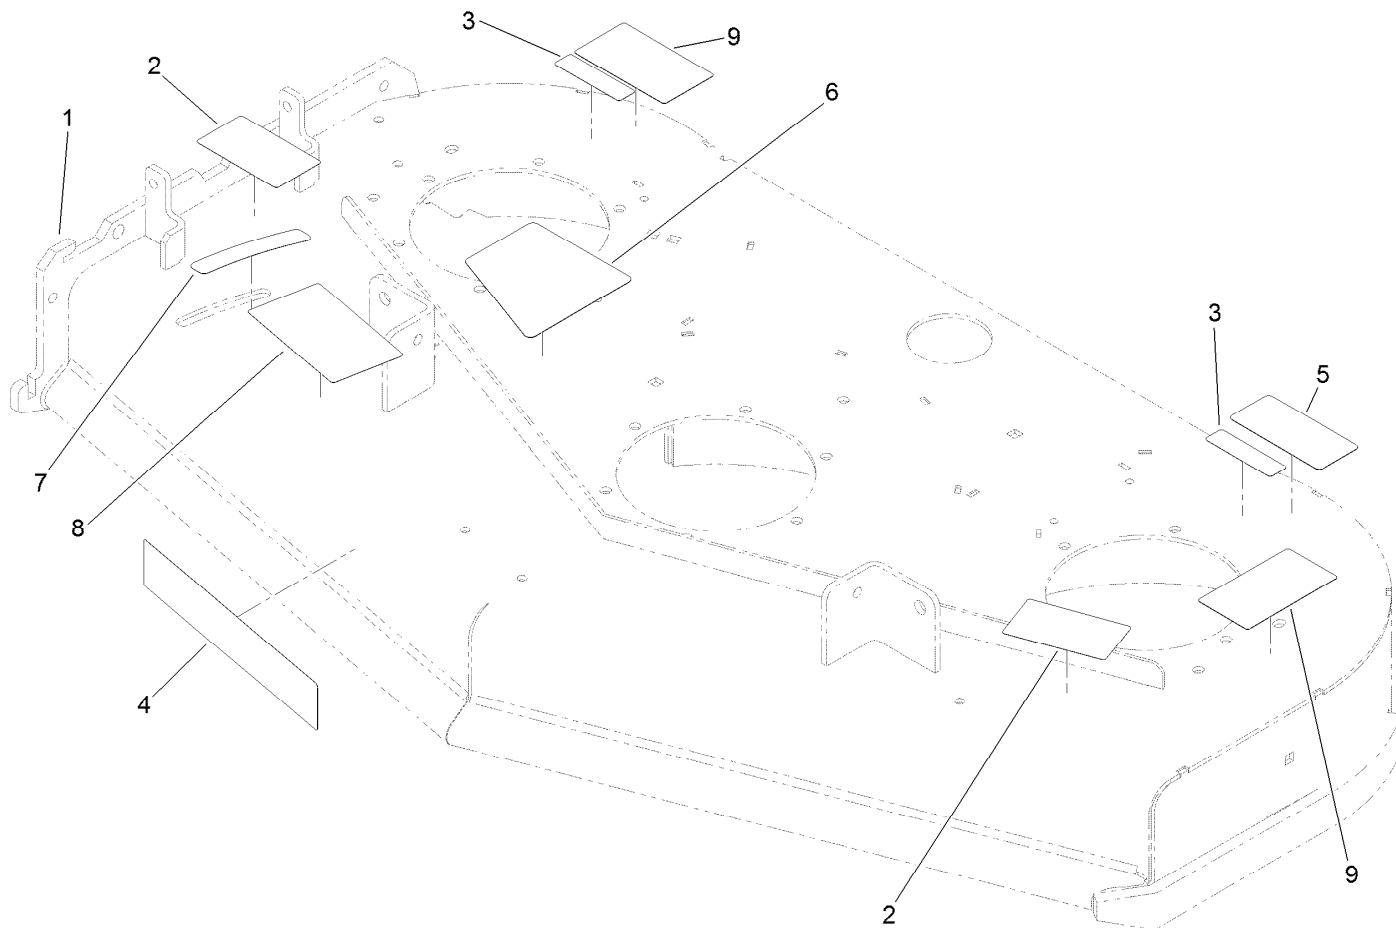

## Deck Decal Assembly No. 120-6401


| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    |             | 1    | Deck ASM ●                   |
| 2    | 93-7010     | 2    | Decal-Danger                 |
| 3    | 119-0217    | 2    | Decal-Danger                 |
| 4    | 107-1690    | 1    | Decal                        |
| 5    | 93-7818     | 1    | Decal-Torque, Blade Bolt     |
| 6    | 120-6412    | 1    | Decal-Belt Tension, Ce       |
| 7    | 110-2067    | 1    | Decal-Setting, Baffle        |
| 8    | 110-2068    | 1    | Decal-Adjustment, Baffle     |
| 9    | 120-6424    | 2    | Decal-Danger, Rotating Parts |

● Not serviced separately

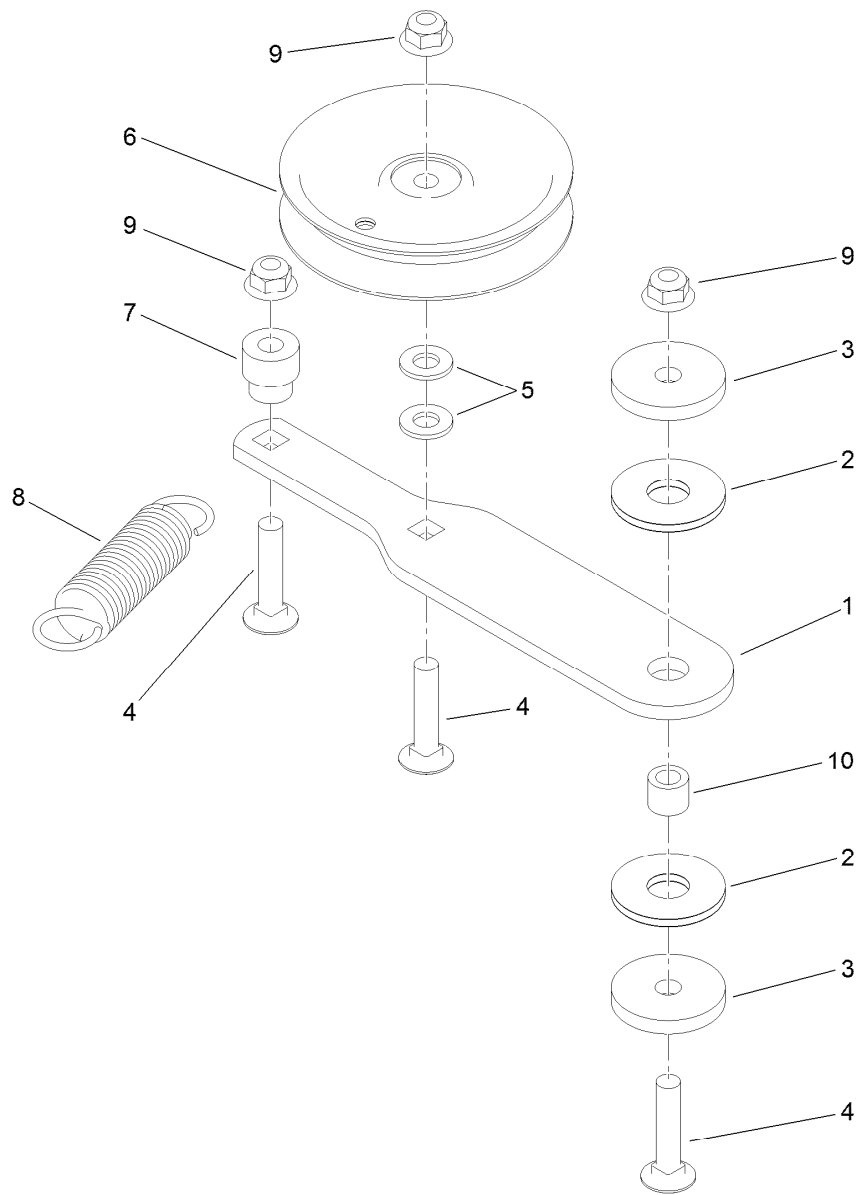


## Idler Arm Assembly No. 120-6410

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 120-6409    | 1    | Arm-Idler                  |
| 2    | 114-0463    | 2    | Washer-Friction, Composite |
| 3    | 110-9981    | 2    | Washer-Plain               |
| 4    | 3231-5      | 3    | Screw-CARR                 |
| 5    | 3256-24     | 2    | Washer-Flat                |
| 6    | 93-1622     | 1    | Pulley-Idler               |
| 7    | 1-603496    | 1    | Bushing-Idler              |
| 8    | 1-603402    | 1    | Spring-Extension           |
| 9    | 104-8301    | 3    | Nut-Flange, NI             |
| 10   | 1-413088    | 1    | Bushing-Lever, Lift        |

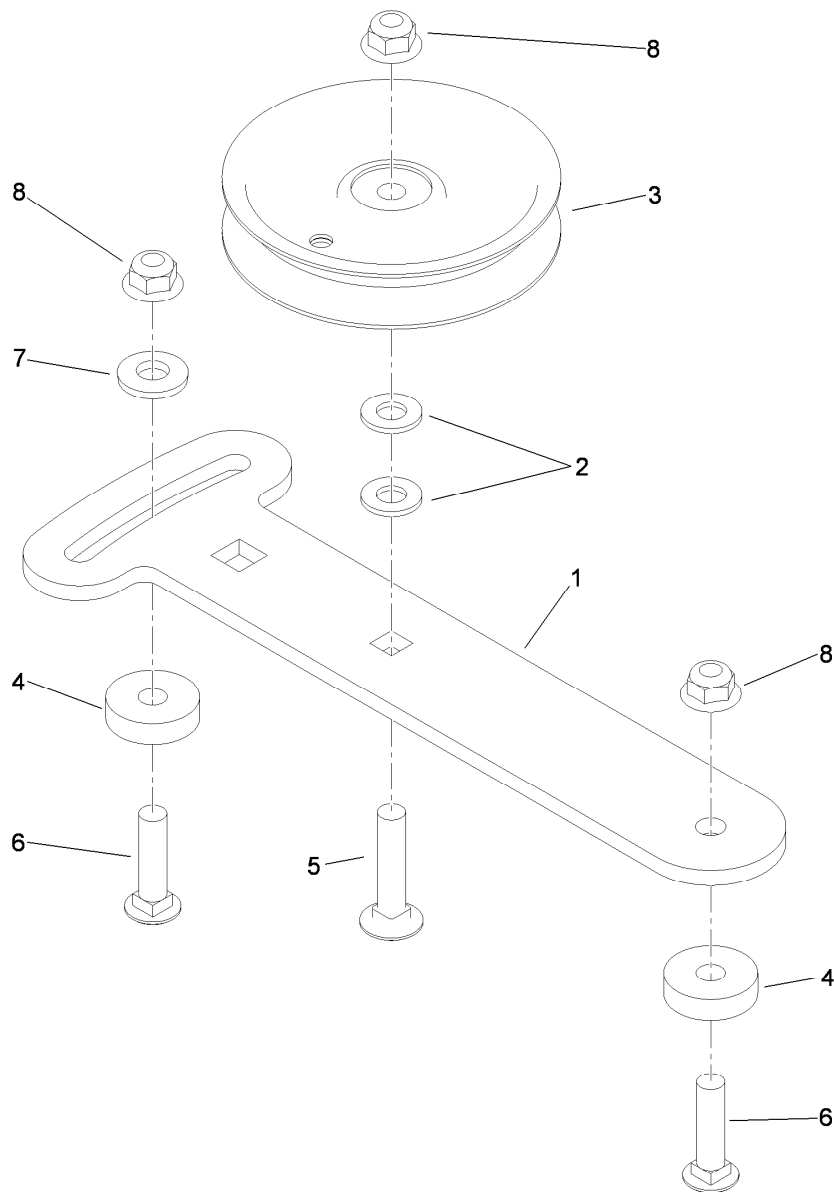

## Idler Adjust Assembly No. 117-0446


| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 1    | 114-1991    | 1    | Plate-Idler       |
| 2    | 3256-24     | 2    | Washer-Flat       |
| 3    | 93-1622     | 1    | Pulley-Idler      |
| 4    | 105-7788    | 2    | Spacer            |
| 5    | 3231-5      | 1    | Screw-CARR        |
| 6    | 3231-4      | 2    | Screw-CARR        |
| 7    | 98-5975     | 1    | Washer-Belleville |
| 8    | 104-8301    | 3    | Nut-Flange, NI    |

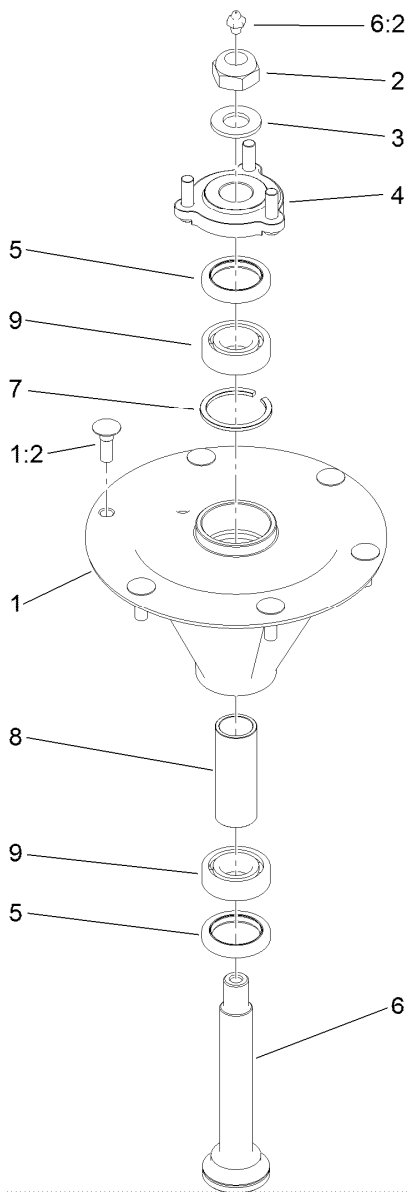

## Spindle Assembly No. 119-8560

| Ref. | Part Number | Qty. | Description                     |
|------|-------------|------|---------------------------------|
| 1    |             | 1    | Spindle Housing And Studs ASM ● |
| 1:2  | 114-8195    | 6    | Bolt-Ribbed Neck                |
| 2    | 3296-67     | 1    | Nut-Lock, NI                    |
| 3    | 92-5836     | 1    | Washer                          |
| 4    | 117-6172    | 1    | Spindle Hub ASM                 |
| 5    | 253-133     | 2    | Seal-Oil                        |
| 6    | 119-8527    | 1    | Spindle Shaft And Zerk ASM      |
| 6:2  | 302-2       | 1    | Fitting-Grease                  |
| 7    | 119-8532    | 1    | Snap Ring                       |
| 8    | 117-6184    | 1    | Spacer                          |
| 9    | 119-8558    | 2    | Bearing-Noseal                  |

● Not serviced separately

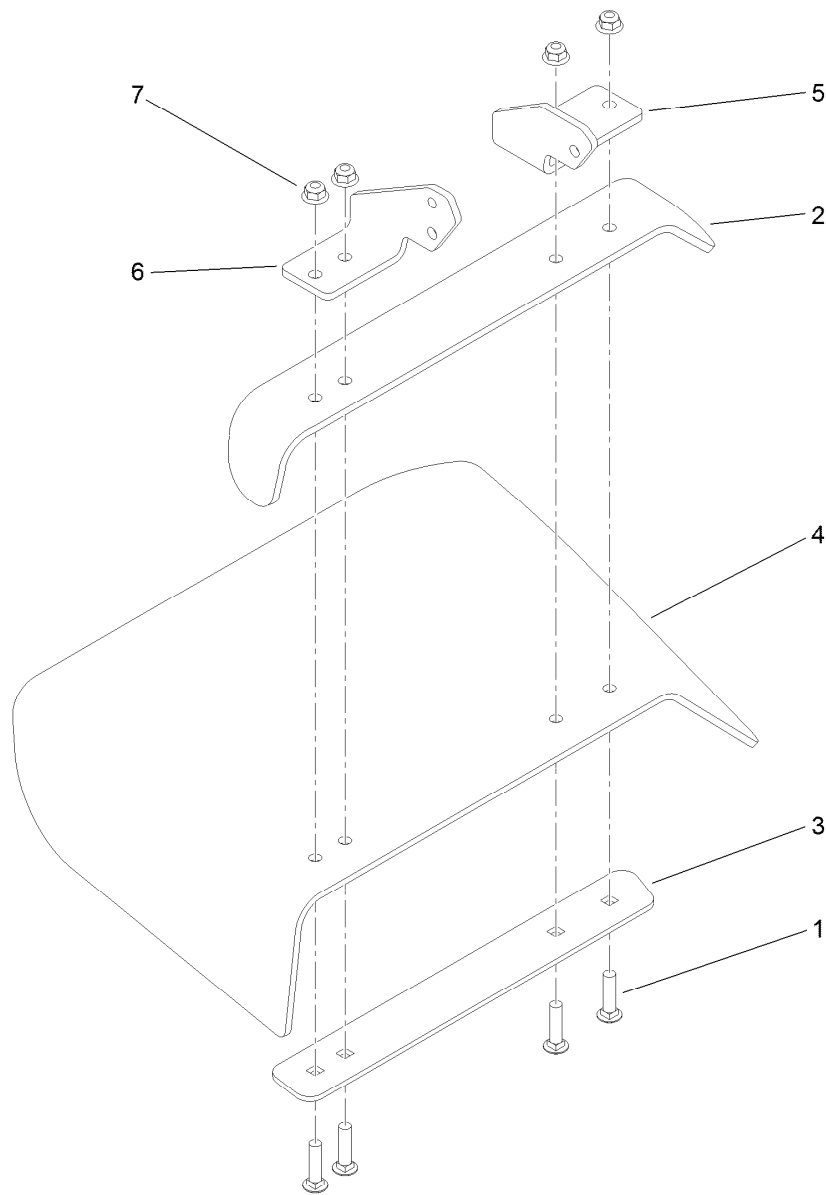

## Deflector Assembly No. 121-5960

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 3231-4      | 4    | Screw-CARR         |
| 2    | 106-3246-01 | 1    | Deflector          |
| 3    | 106-3248-03 | 1    | Strap-Discharge    |
| 4    | 110-0759    | 1    | Deflector-Rubber   |
| 5    | 108-4059-01 | 1    | Plate-Hinge, Rear  |
| 6    | 106-3253-01 | 1    | Plate-Hinge, Front |
| 7    | 104-8301    | 4    | Nut-Flange, NI     |

# Attachments and Accessories

## For 79548 GrandStand Mower With 48in TURBO FORCE Cutting Unit

| Product Name                          | Model/Part  |
|---------------------------------------|-------------|
| Standard High Lift Blade .....        | 107-3192-03 |
| Blade-Low Flow, 16.5in.....           | 107-3193-03 |
| Blade-Mid Flow, 16.5in .....          | 107-3194-03 |
| Blade-Atomic, 16.5in .....            | 107-3195-03 |
| Blade-Recycling, 16.5in.....          | 107-3196-03 |
| Bagging Enhancement Kit .....         | 108-4091    |
| Blade-Hi Flow, 16.5in (6 Pack).....   | 110-0414    |
| Blade-Lo Flow, 16.5in (6 Pack) .....  | 110-0415    |
| Blade-Recycler, 16.5in (6 Pack).....  | 110-0416    |
| Blade-Atomic, 16.5in (6 Pack) .....   | 110-0417    |
| Blade-Mid Flow, 16.5in (6 Pack) ..... | 110-0418    |
| Weight-Cast.....                      | 112-7059-01 |
| Light Kit.....                        | 114-3505    |
| Striping Kit .....                    | 114-3521    |
| Hypr-Oil 500 (quart) .....            | 114-4713    |
| Hypr-Oil 500 (gallon).....            | 114-4714    |
| Hypr-Oil 500-5 (5 gallon).....        | 114-4715    |
| Recycler Kit .....                    | 117-0540    |
| Weight Kit .....                      | 117-3620    |
| Chute Gate Kit With Bag .....         | 119-7292    |
| Trash Bag ASM .....                   | 119-7293    |
| Speed Control Kit.....                | 119-7390    |
| Soft Bag (3 Bushel).....              | 30104       |
| Spark Arrestor .....                  | 98-9099     |

**Notes:**

**Notes:**



**Count on it.**