
FORM NO. 3318–748

TORO

MODEL NO. 04482–60698 & UP
MODEL NO. 04483–60986 & UP

PARTS CATALOG

8 & 11 BLADE SPA CUTTING UNIT
GREENSMASTER 3200

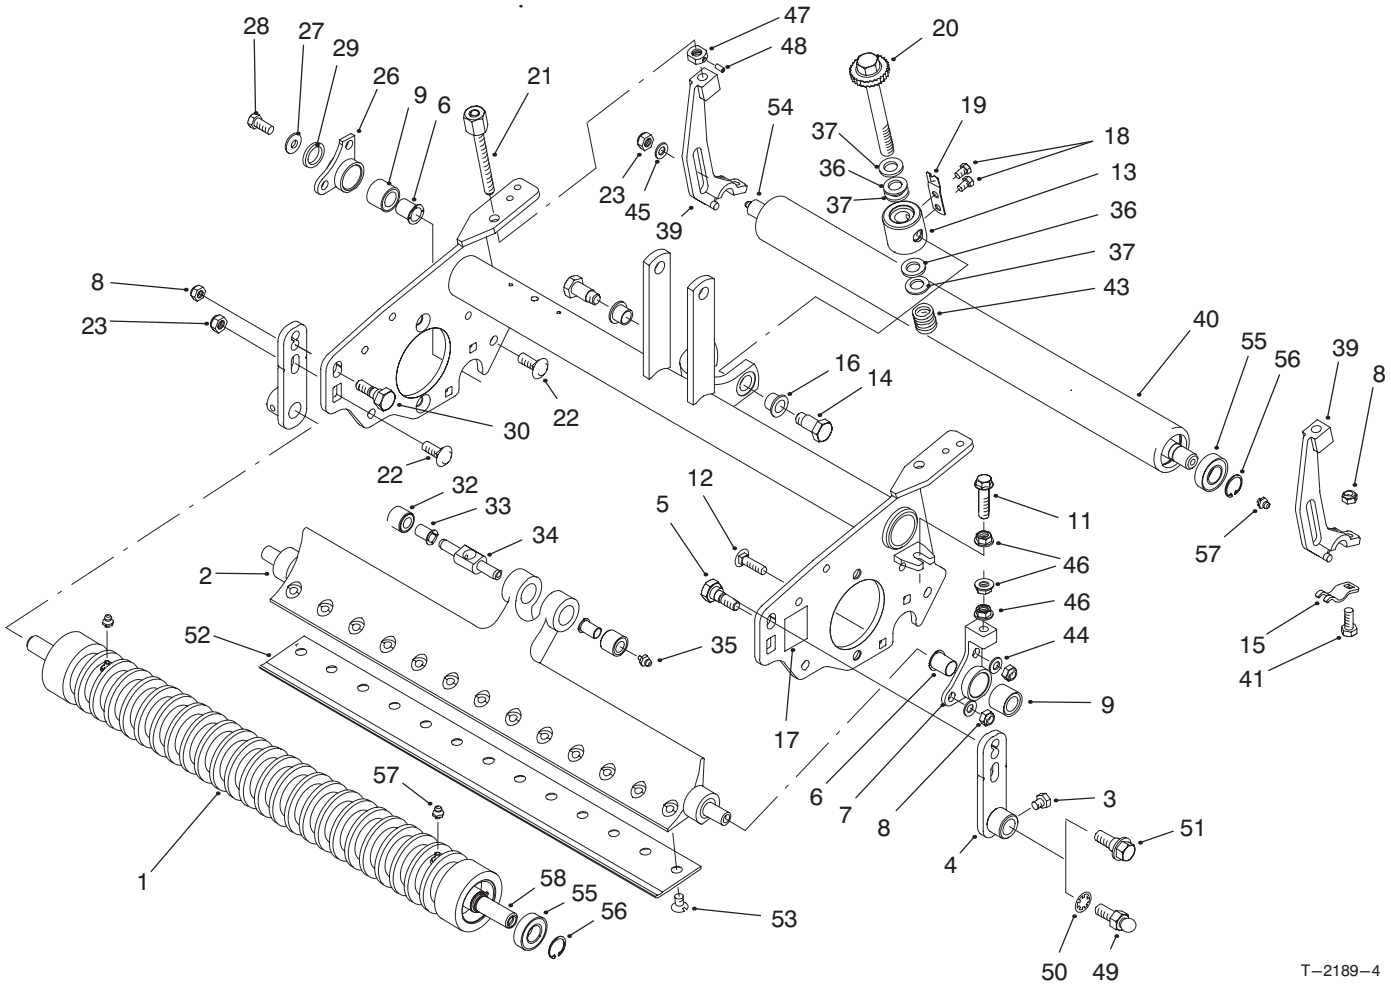

ROLLERS & BEDBAR ASSSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–6389	Roller – Wiehle	1
2	93–2511	Bedbar	1
3	33113–012	Screw – HH	2
4	94–8170	Bracket – Front	2
5	95–1618	Bolt – Shoulder	1
6	93–7502	Bushing – Flanged	2
7	93–2512	Hub – Pivot LH	1
8	33024–00	Nut – Lock	8
9	93–7501	Bushing	2
11	94–3489	Screw – HHF	1
12	33124–025	Screw – Carriage	4
13	93–2518	Housing – Pivot	1
14	93–2545	Screw – Pivot	2
15	95–1637	Collar – Height–of–Cut	2
16	93–2891	Bushing – Plastic	2
17	94–8169	Decal – Bracket Position	2
18	33113–008	Screw – HH	2


Ref. No.	Part No.	Description	No. Used
19	93–2522	Arm – Spring	1
20	93–2550	Adjustor	1
21	95–1633	Adjuster – Height–of–Cut	2
22	33125–025	Screw – Carriage	4
23	33025–00	Nut – Lock	4
26	93–2513	Hub – Pivot. RH	1
27	3256–82	Washer – Flat	1
28	33104–020	Screw – HHF	1
29	93–7510	Ring – Quad	1
30	95–1617	Bolt – Eccentric	1
32	62–5510	Bushing – Rubber	2
33	52–2890	Bushing – Links, Steering	2
34	52–2920	Pivot – Bedbar	1
35	302–18	Fitting – Grease	1
36	77–0350	Washer – Thrust Nylon	2
37	257–5	Washer – Thrust	3

Note: Quantity is for 1 Cutting Unit.

© The TORO Company – 1996
All Rights Reserved

TPS

3318–748

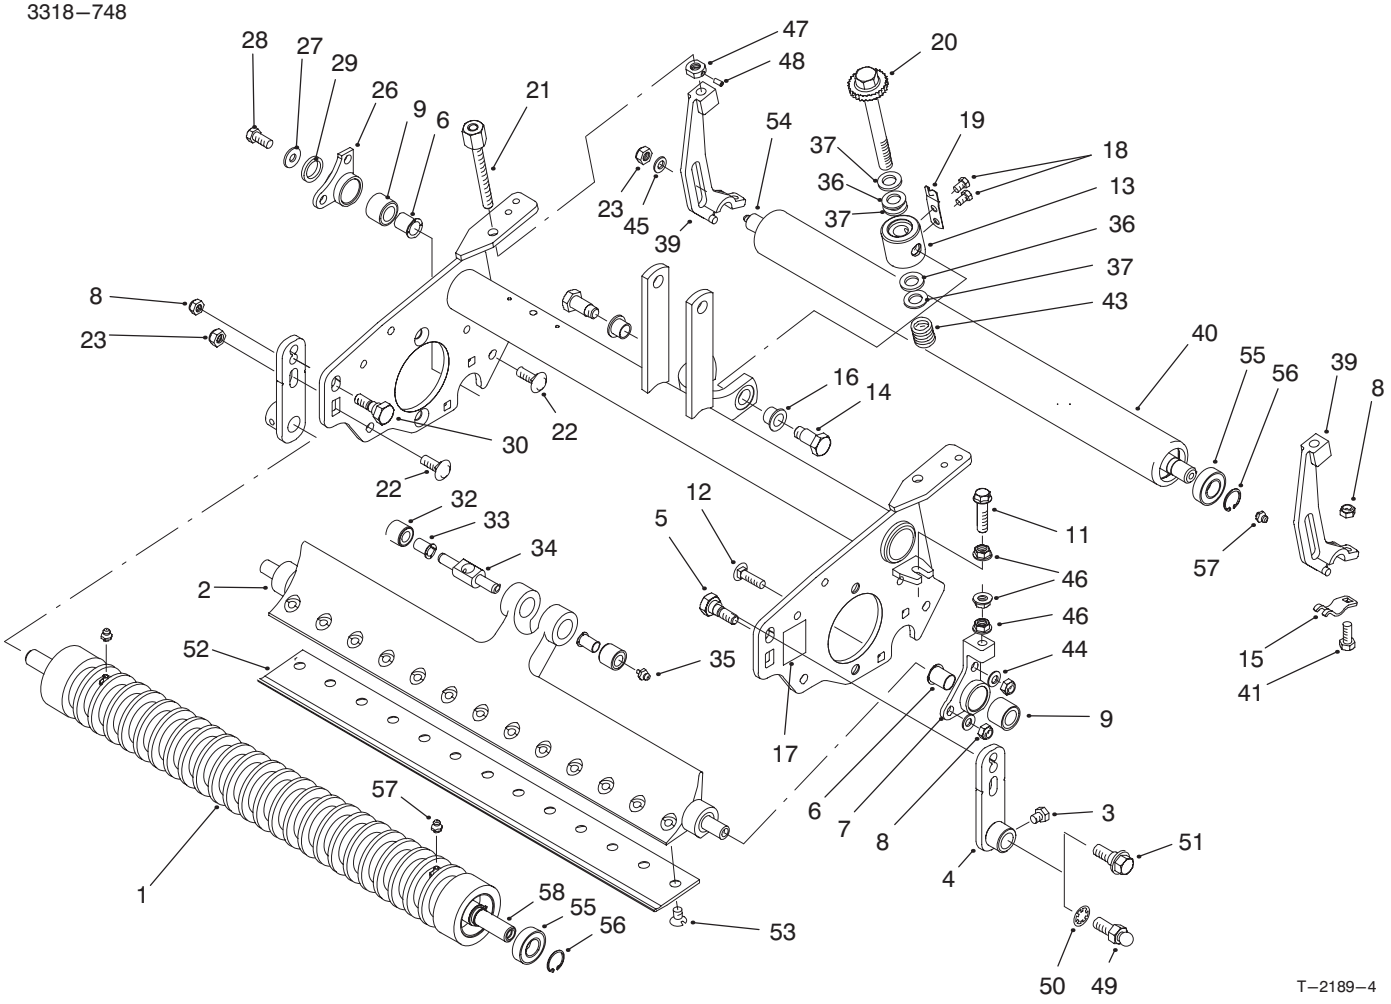


ROLLERS & BEDBAR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
39	95–1638	Bracket – Height–of–Cut Adjustment	2
40	93–2467	Tube – Roller	1
41	33114–020	Screw – Carriage	2
43	93–2562	Spring – Compression	1
44	87–7510	Washer – Flat	2
45	3256–46	Washer – Flat	2
46	33004–00	Nut – Flange Lock	3
47	95–1632	Nut – Locking	2
48	3234–42	Screw – Set	2
49	94–2958	Stud – Ball (Used on old suspensions)	2
50	3254–6	Washer – Lock	2
51	93–2364	Bolt – Shoulder	2

Ref. No.	Part No.	Description	No. Used
52	93–4263	Bedknife – Tournament	1
*	93–4262	Bedknife – Microcut	1
*	93–4264	Bedknife – Low 1/8”	1
*	94–6392	Bedknife – High 3/16”	1
*	63–8600	Bedknife – Fairway	1
53	57–4910	Screw – Special	13
54	93–2466	Shaft	1
55	93–2559	Bearing	4
56	93–2525	Ring – Retaining	4
57	302–5	Fitting – Grease	4
58	93–2470	Shaft – Roller Wiehle	1
*	93–2465	Rear Roller Assembly (Incl. Ref. #40 & 54–57)	1
*	94–8171	Wiehle Roller Assembly (Incl. Ref. #1 & 55–58)	1

*Not Illustrated

Note: Quantity is for 1 Cutting Unit.

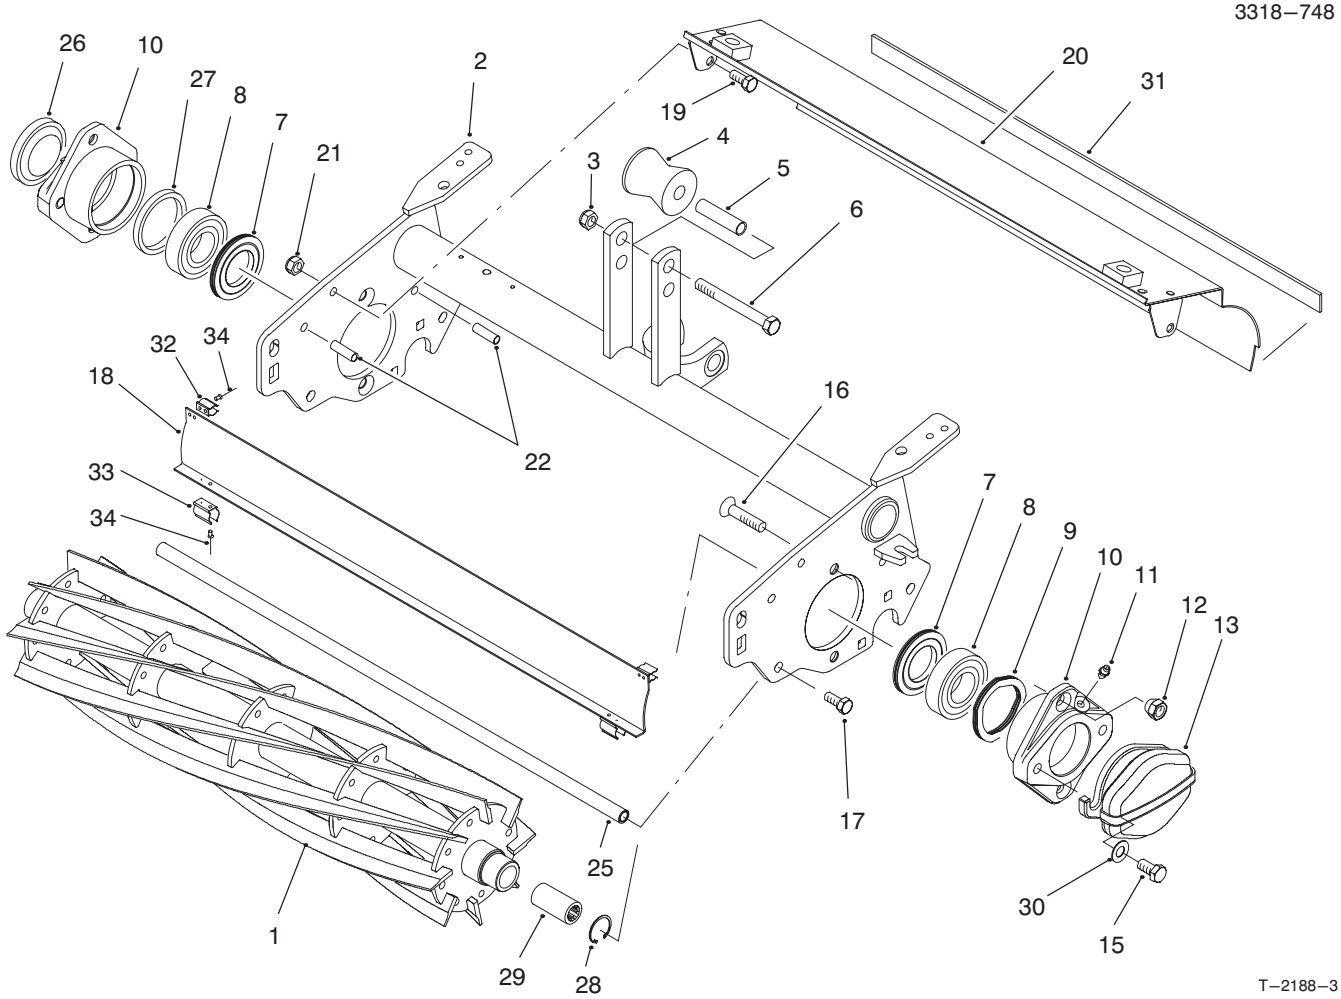

T–2188–3

REEL & SHIELDS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	94–4356	Reel – 8 Blade	1
*	94–4357	Reel – 11 Blade	1
2	95–1634	Frame	1
3	33025–00	Nut – Lock	1
4	93–2463	Roller – Lift	1
5	93–2464	Spacer – Roller	1
6	33115–080	Screw – HH	1
7	94–8908	Seal – Grease	2
8	93–2489	Bearing	2
9	94–4543	Spring – Flat Wire	2
10	94–4545	Housing – Bearing	2
11	302–5	Fitting – Grease	2
12	93–2454	Nut – Taper	4
13	93–2570	Counterweight	1
15	93–2569	Screw – HHF	4
16	94–1341	Screw – Tapered	4
17	33115–020	Screw – HHF	2

Ref. No.	Part No.	Description	No. Used
18	93–2475	Front Shield Assembly (Incl. Ref. #32–34)	1
19	33114–020	Screw – HHF	2
20	93–2481	Rear Shield Assembly	1
21	33024–00	Nut – Lock	2
22	32121–123	Pin – Spring	4
25	93–2477	Rod – Shield	1
26	2410–30	Cap – Plastic	1
27	94–4544	Spacer – Bearing	1
28	32120–37	Ring – Retaining	1
29	94–4507	Coupler – Spline	2
30	3256–24	Washer	2
31	95–1636	Strip – Seal	1
32	94–1381	Clip – Spring Small	2
33	94–1380	Clip – Spring Large	2
34	3269–33	Rivet – Pop	8

*Not Illustrated

Note: Quantity is for 1 Cutting Unit.

3318–748

MAINTENANCE RECORD

Date								

Compliance with Radio Interference Regulations Certified.
Certifie Conforme au Reglement sur le Brouillage Radioelectrique.

Litho in U.S.A.