




MODEL NO. 30387-60001 & UP	PARTS CATALOG
DEBRIS BLOWER For Groundsmaster® 3000	

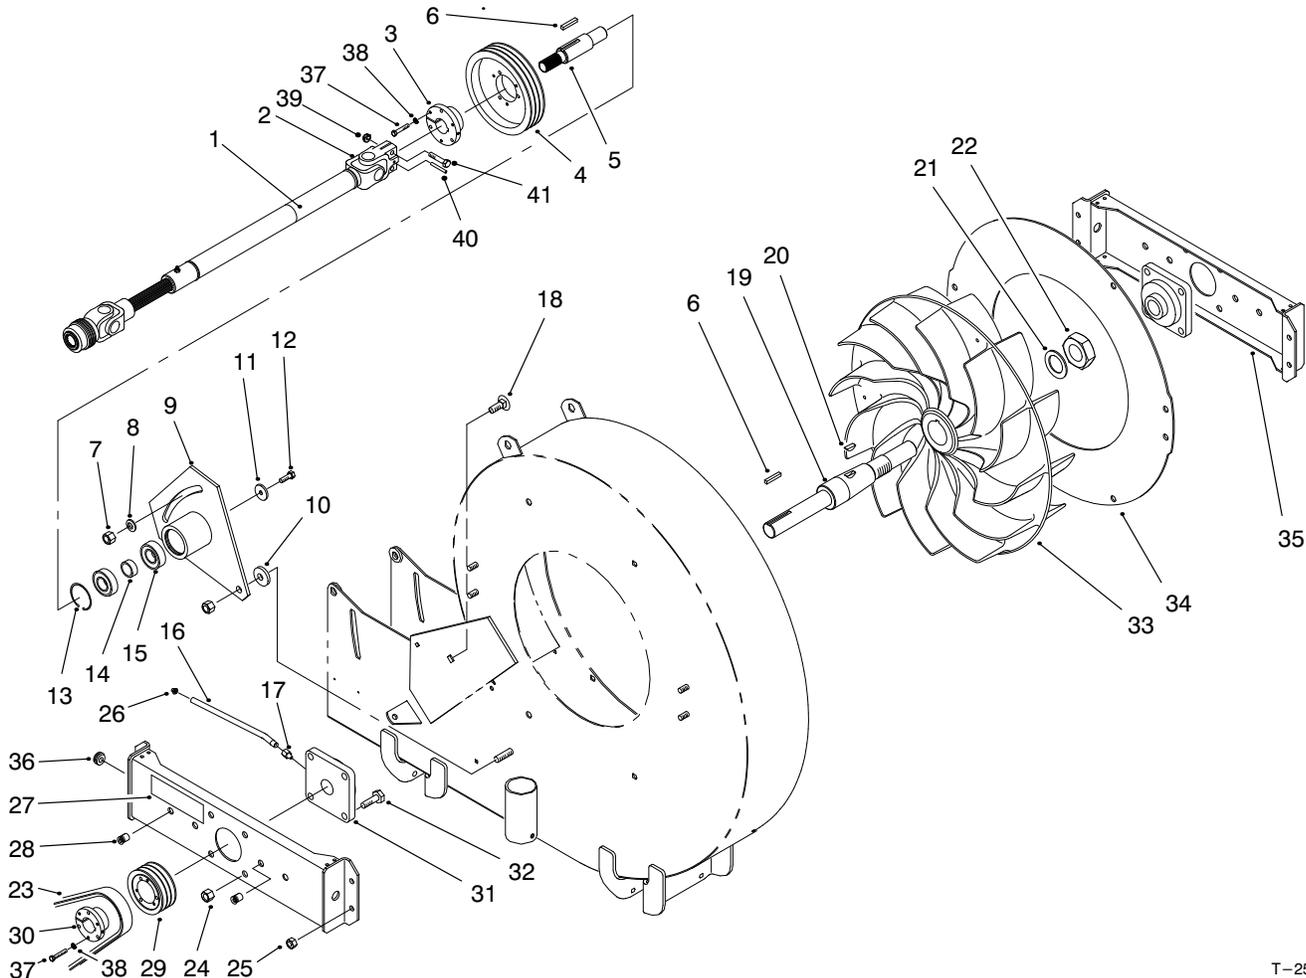


T-2518-1

FAN DRIVE ASM

Ref. No.	Part No.	Description	No. Used
1	95-0894	Decal-Rotation	1
2	95-0897	Shaft-Drive (Incl. Ref. #1)	1
3	95-0882	Hub (Incl. Ref. #37 & 38)	1
4	95-0881	Pulley	1
5	94-8973	Shaft	1
6	5-1718	Key-Square	2
7	33026-00	Nut-Lock	2
8	33096-00	Washer-Flat	1
9	94-8968	Asm-Tensioner	1
10	30-8770	Washer	1
11	71-5320	Washer-Support	1
12	48-7700	Screw-HH	1
13	32120-8	Ring-Snap	1
14	94-8972	Spacer-Bearing	1
15	94-8978	Asm-Bearing	2

Ref. No.	Part No.	Description	No. Used
16	95-0887	Pipe-Grease	2
17	95-0888	Adapter	1
18	33126-035	Screw-CARR	1
19	94-8952	Shaft-Fan	1
20	3257-42	Key-Woodruff	1
21	77-0950	Washer-Castor	1
22	3218-17	Nut-Jam	1
23	94-8976	Belt	1
24	32146-9	Nut-Lock	8
25	33025-00	Nut-Lock	8
26	302-5	Fitting-Grease	2
27	95-0892	Decal-Danger	2
28	93-5449	Nut-Clinch	4
29	95-0883	Hub	1
30	95-0884	Pulley	1
31	94-8987	Asm-Bearing (Incl. Ref. #26)	2

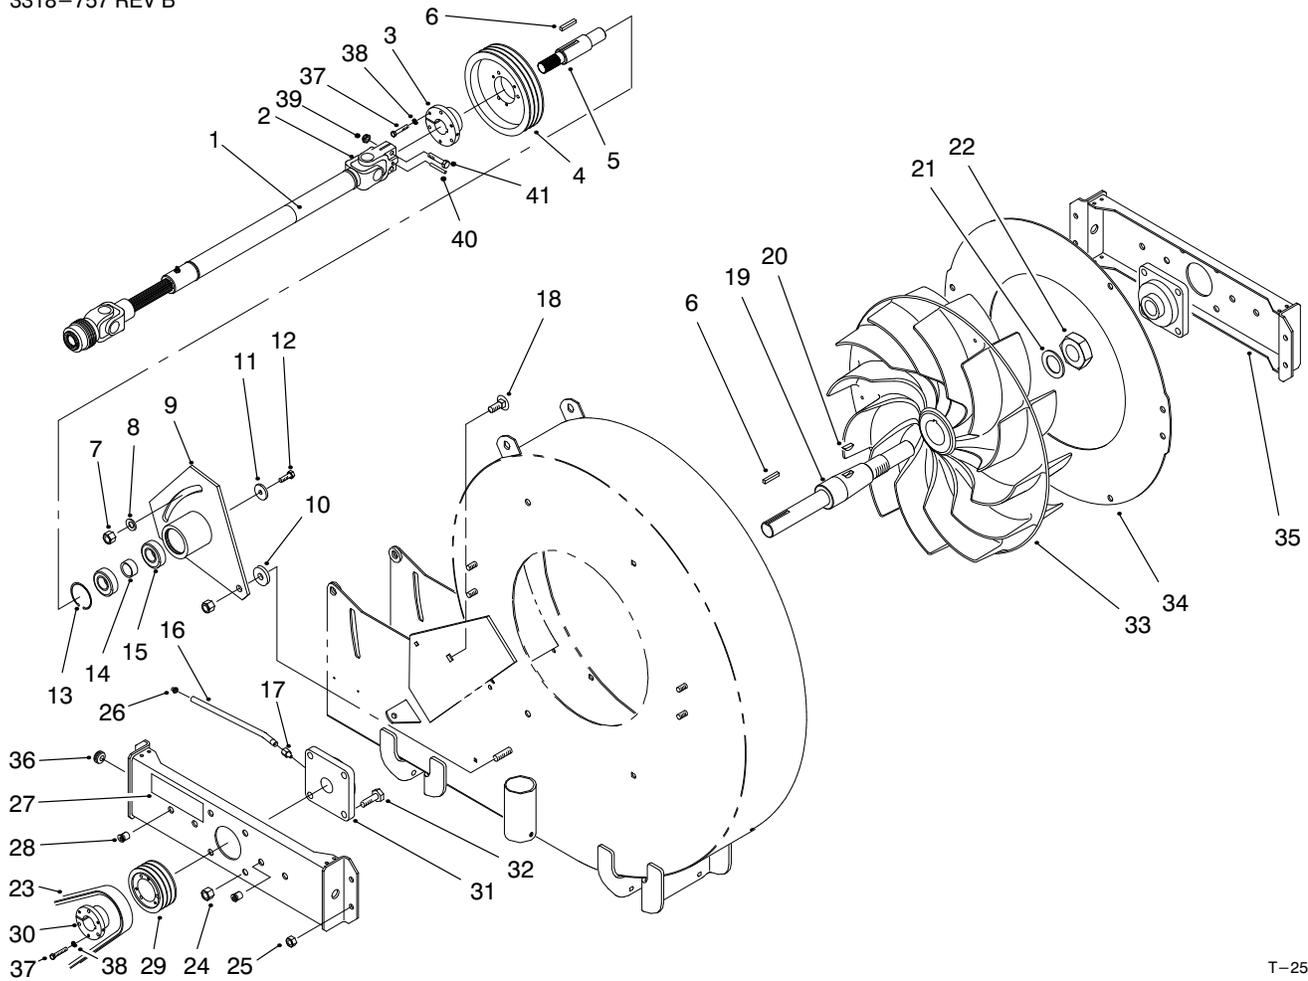


T-2518-1

FAN DRIVE ASM (Continued)

Ref. No.	Part No.	Description	No. Used
32	26-0671	Bolt-Blade	8
33	94-8950	Fan	1
34	94-8962	Panel-Access	1
35	95-0898	Asm-Bracket (Incl. Ref. #27 & 28)	2
36	95-3259	Grommet	2

Ref. No.	Part No.	Description	No. Used
37	32104-96	Screw-HH	6
38	3253-18	Washer-Spring Lock	6
39	33024-00	Nut	2
40	32121-34	Pin-Roll	1
41	33114-040	Screw	2

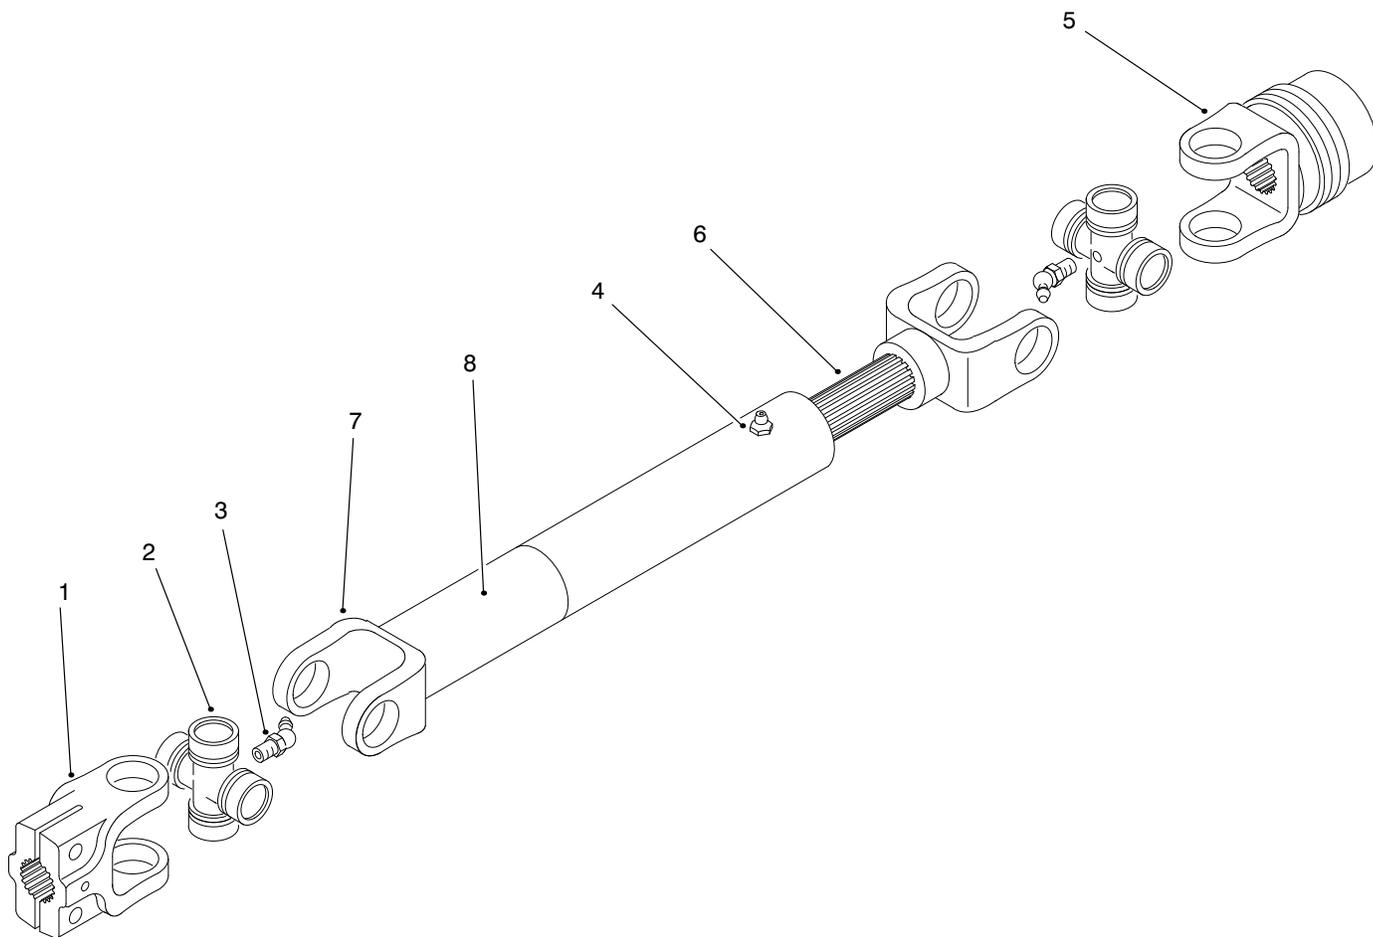


T-2519-1

DRIVESHAFT ASM NO. 95-0897

Ref. No.	Part No.	Description	No. Used
1	54-9040	End Yoke	1
2	54-9180	U-Joint Kit	2
3	62-3820	Fitting-Grease	2
4	302-58	Fitting-Grease	1
5	93-4633	Asm-Yoke, Auto Lock	1

Ref. No.	Part No.	Description	No. Used
6	93-4634	Shaft-Slip Yoke	1
7	95-3252	Tube-Slip Yoke (Incl Ref. #8)	1
8	95-0894	Decal-Rotation	1

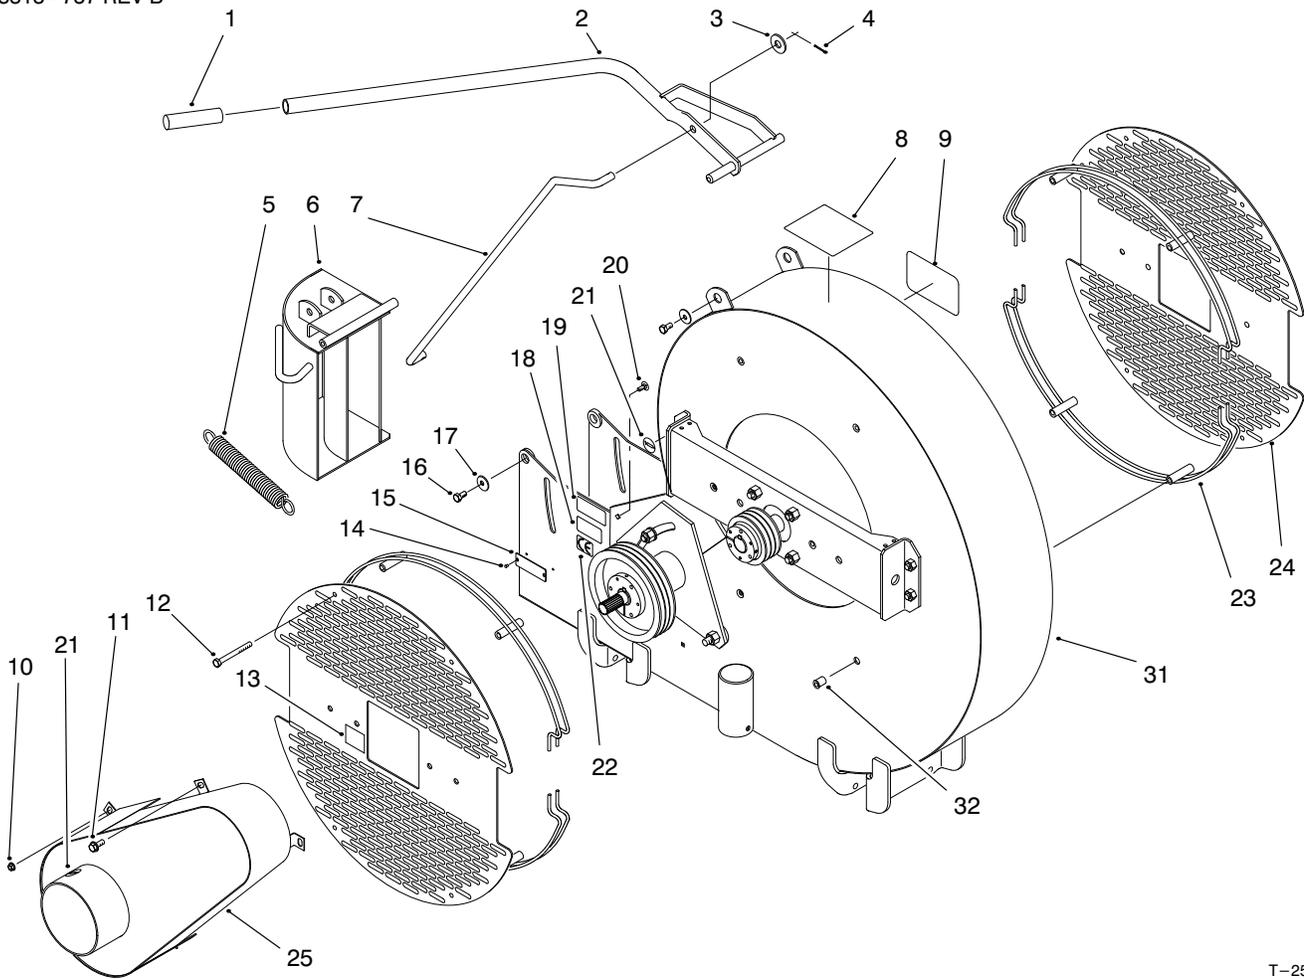


T-2520-1

HOUSING ASM

Ref. No.	Part No.	Description	No. Used
1	95-0886	Handle-Grip	1
2	95-0879	Asm-Handle	1
3	3256-6	Washer-Flat	2
4	3272-11	Pin-Cotter	2
5	95-0885	Spring	1
6	95-0852	Asm-Deflector	1
7	95-0880	Rod-Linkage	1
8	95-0893	Decal-Caution	1
9	67-1300	Decal-Toro	1
10	33003-00	Nut-HF	2
11	33104-020	Screw-HHF	4
12	33114-080	Screw-HH	8
13	88-8950	Decal-Warning	1
14	3290-271	Rivet-Pop	2
†15		Plate-Serial	1

Ref. No.	Part No.	Description	No. Used
16	48-7700	Screw-HH	4
17	3256-82	Washer-Flat	4
†18		Decal-Safety Std	1
19	55-4300	Decal-Warning	1
20	33123-016	Screw-Carriage	2
21	58-6520	Decal-Grease	3
22	93-7252	Decal-CE Mark	1
23	95-0871	Asm-Guard	4
24	95-3250	Guard-Fan (Incl. Ref. #13)	2
25	95-0866	Asm-Guard	1
31	95-0899	Asm-Housing (Incl. Ref. #8, 9, 19 & 32)	1
32	93-5449	Nut-Clinch	8

† Not Serviced Separately.

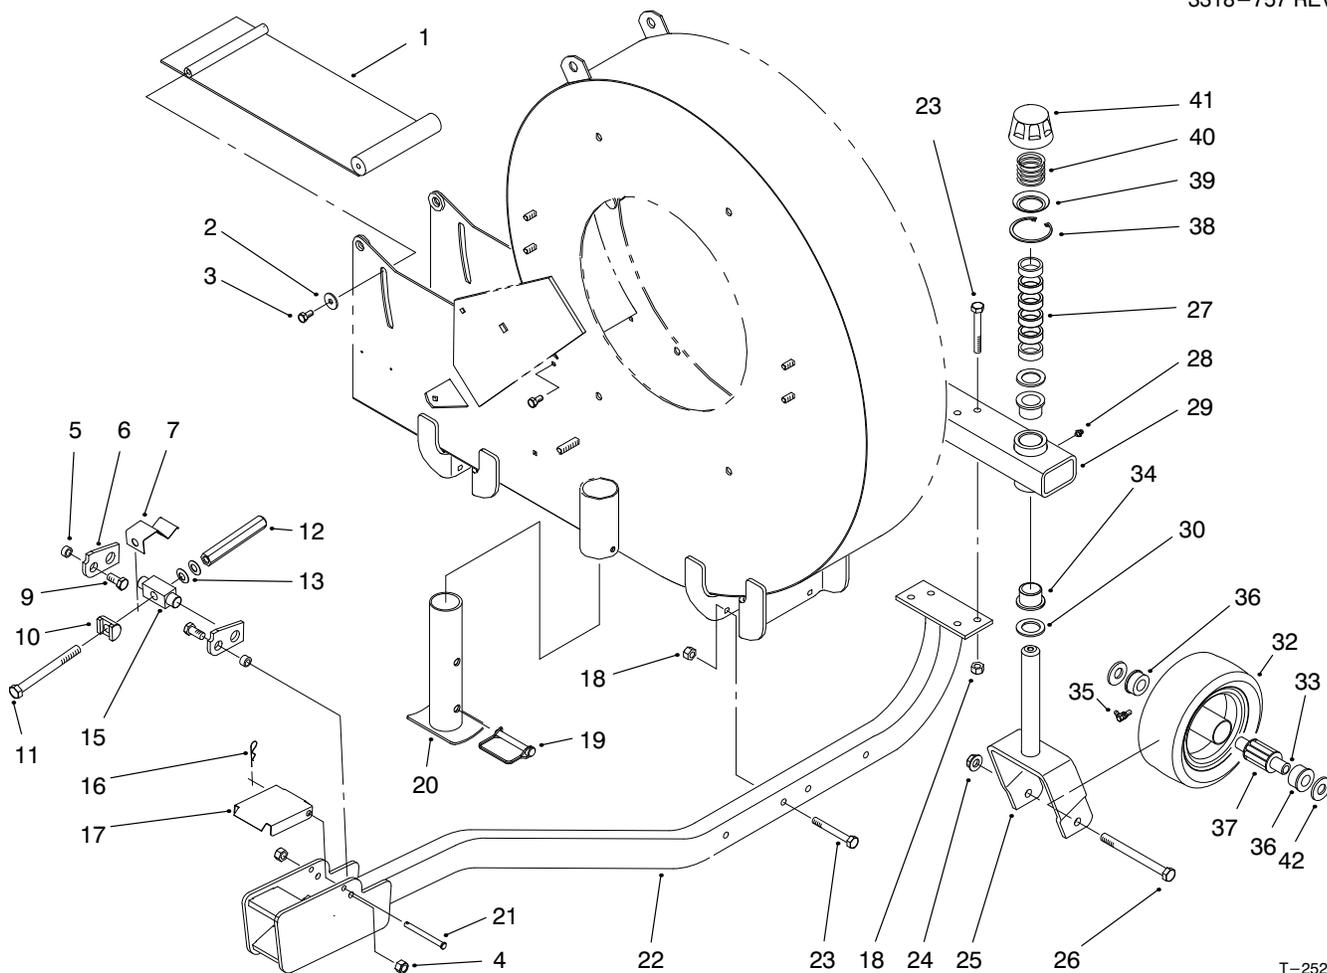

T-2521-3

LIFT ARM ASM

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	95-0857	Asm-Deflector	1	26	325-22	Screw-HH	2
2	3256-82	Washer-Flat	2	27	63-0070	Spacer	12
3	48-7700	Screw-HH	4	28	302-5	Fitting-Grease	2
4	33025-00	Nut-Lock	4	29	95-3251	Asm-Bumper (Incl. Ref. #28 & 34)	1
5	93-4618	Spacer-Pivot	4	30	3-6781	Washer-Thrust	4
6	93-4675	Plate-Release	4	32	85-5760	Wheel-Castor (Incl. Ref. #35-37)	2
7	93-4818	Spring-Lever	2	33	62-4340	Spanner	2
9	33115-025	Screw-HH	4	34	94-1291	Bushing-Special	4
10	93-4676	Shaft-Latch	2	35	302-40	Fitting-Grease	2
11	3213-24	Screw-HH	2	36	62-5580	Bearing-Outer	4
12	93-4678	Lever-Release	2	37	83-4740	Bearing-Roller	2
13	3290-413	Washer-Spring	4	38	92-5581	Ring-Retaining, Internal	2
15	93-4677	Hub-Release	2	39	92-5583	Washer-Cap	2
16	3290-467	Pin-Cotter	2	40	92-5584	Spring-Compression	2
17	93-4819	Cover-Latch	2	41	92-8861	Cap-Height of Cut	2
18	33025-00	Nut-Lock	12	42	3256-6	Washer-Flat	4
19	93-4696	Pin-Snapper	1	*	92-8862	Asm-Cap, Height of Cut (Incl. Ref. #38-41)	2
20	95-0859	Asm-Stand	1	*	95-3083	Kit-Wheel, Castor (Incl. Ref. #24, 26, 32-33 & 42)	2
21	283-88	Pin-Clevis	2				
22	95-0867	Asm-Lift Arm LH	2				
23	33115-080	Screw-HH	12				
24	32128-23	Nut-Lock	2				
25	98-7068	Asm-Front Castor Fork	2				

*Not Illustrated

TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3-6781	Washer-Thrust	5	30	4	95-0882	Hub	1	3	1
5-1718	Key-Square	1	6	2	95-0883	Hub	1	29	1
26-0671	Bolt-Blade	1	32	8	95-0884	Pulley	1	30	1
30-8770	Washer	1	10	1	95-0885	Spring	4	5	1
48-7700	Screw-HH	5	3	4	95-0886	Handle-Grip	4	1	1
48-7700	Screw-HH	1	12	1	95-0887	Pipe-Grease	1	16	2
48-7700	Screw-HH	4	16	4	95-0888	Adapter	1	17	2
54-9040	End Yoke	3	1	1	95-0892	Decal-Danger	1	27	2
54-9180	U-Joint Kit	3	2	2	95-0893	Decal-Caution	4	8	1
55-4300	Decal-Warning	4	19	1	95-0894	Decal-Rotation	1	1	1
58-6520	Decal-Grease	4	21	3	95-0894	Decal-Rotation	3	8	1
62-3820	Fitting-Grease	3	3	2	95-0897	Shaft-Drive	1	2	1
62-4340	Spanner	5	33	2	95-0898	Asm-Bracket	2	35	2
62-5580	Bearing-Outer	5	36	4	95-3083	Kit-Wheel, Castor	5	*	2
63-0070	Spacer	5	27	12	95-0899	Asm-Housing	4	31	1
67-1300	Decal-Toro	4	9	1	95-3250	Guard-Fan	4	24	2
71-5320	Washer-Support	1	11	1	95-3251	Asm-Bumper	5	29	1
77-0950	Washer-Castor	1	21	1	95-3252	Tube-Slip Yoke	3	7	1
83-4740	Bearing-Roller	5	37	2	95-3259	Grommet	2	36	2
85-5760	Wheel-Castor	5	32	2	98-7068	Asm-Front Castor Fork	5	25	2
88-8950	Decal-Warning	4	13	1	283-88	Pin-Clevis	5	21	2
92-5581	Ring-Retaining, Internal	5	38	2	302-5	Fitting-Grease	1	26	2
92-5583	Washer-Cap	5	39	2	302-5	Fitting-Grease	5	28	2
92-5584	Spring-Compression	5	40	2	302-40	Fitting-Grease	5	35	2
92-8861	Cap-Height of Cut	5	41	2	302-58	Fitting-Grease	3	4	1
92-8862	Asm-Cap, Height of Cut	5	*	2	325-22	Screw-HH	5	26	2
93-4618	Spacer-Pivot	5	5	4	3213-24	Screw-HH	5	11	2
93-4633	Asm-Yoke, Auto Lock	3	5	1	3218-17	Nut-Jam	1	22	1
93-4634	Shaft-Slip Yoke	3	6	1	3253-18	Washer-Spring Lock	2	38	6
93-4675	Plate-Release	5	6	4	3256-6	Washer-Flat	5	42	4
93-4676	Shaft-Latch	5	10	2	3256-6	Washer-Flat	4	3	2
93-4677	Hub-Release	5	15	2	3256-82	Washer-Flat	5	2	2
93-4678	Lever-Release	5	12	2	3256-82	Washer-Flat	4	17	4
93-4696	Pin-Snapper	5	19	1	3257-42	Key-Woodruff	1	20	1
93-4818	Spring-Lever	5	7	2	3272-11	Pin-Cotter	4	4	2
93-4819	Cover-Latch	5	17	2	3290-271	Rivet-Pop	4	14	2
93-5449	Nut-Clinch	1	28	4	3290-413	Washer-Spring	5	13	4
93-5449	Nut-Clinch	4	32	8	3290-467	Pin-Cotter	5	16	2
93-7252	Decal-CE Mark	4	22	1	32104-96	Screw-HH	2	37	6
94-1291	Bushing-Special	5	34	4	32120-8	Ring-Snap	1	13	1
94-8950	Fan	2	33	1	32121-34	Pin-Roll	2	40	1
94-8952	Shaft-Fan	1	19	1	32128-23	Nut-Lock	5	24	2
94-8962	Panel-Access	2	34	1	32146-9	Nut-Lock	1	24	8
94-8968	Asm-Tensioner	1	9	1	33003-00	Nut-HF	4	10	2
94-8972	Spacer-Bearing	1	14	1	33024-00	Nut	2	39	2
94-8973	Shaft	1	5	1	33025-00	Nut-Lock	5	4	4
94-8976	Belt	1	23	1	33025-00	Nut-Lock	5	18	12
94-8978	Asm-Bearing	1	15	2	33025-00	Nut-Lock	1	25	8
94-8987	Asm-Bearing	1	31	2	33026-00	Nut-Lock	1	7	2
95-0852	Asm-Deflector	4	6	1	33096-00	Washer-Flat	1	8	1
95-0857	Asm-Deflector	5	1	1	33104-020	Screw-HHF	4	11	4
95-0859	Asm-Stand	5	20	1	33114-040	Screw	2	41	2
95-0866	Asm-Guard	4	25	1	33114-080	Screw-HH	4	12	8
95-0867	Asm-Lift Arm, LH	5	22	2	33115-025	Screw-HH	5	9	4
95-0871	Asm-Guard	4	23	4	33115-080	Screw-HH	5	23	12
95-0879	Asm-Handle	4	2	1	33123-016	Screw-CARR	4	20	2
95-0880	Rod-Linkage	4	7	1	33126-035	Screw-CARR	1	18	1
95-0881	Pulley	1	4	1					

*Not Illustrated

