




<b>MODEL NO. 20803-7900001 &amp; UP</b>	<b>PARTS CATALOG</b>
<b>48cm RECYCLER<sup>®</sup> REAR BAGGER MOWER</b>	

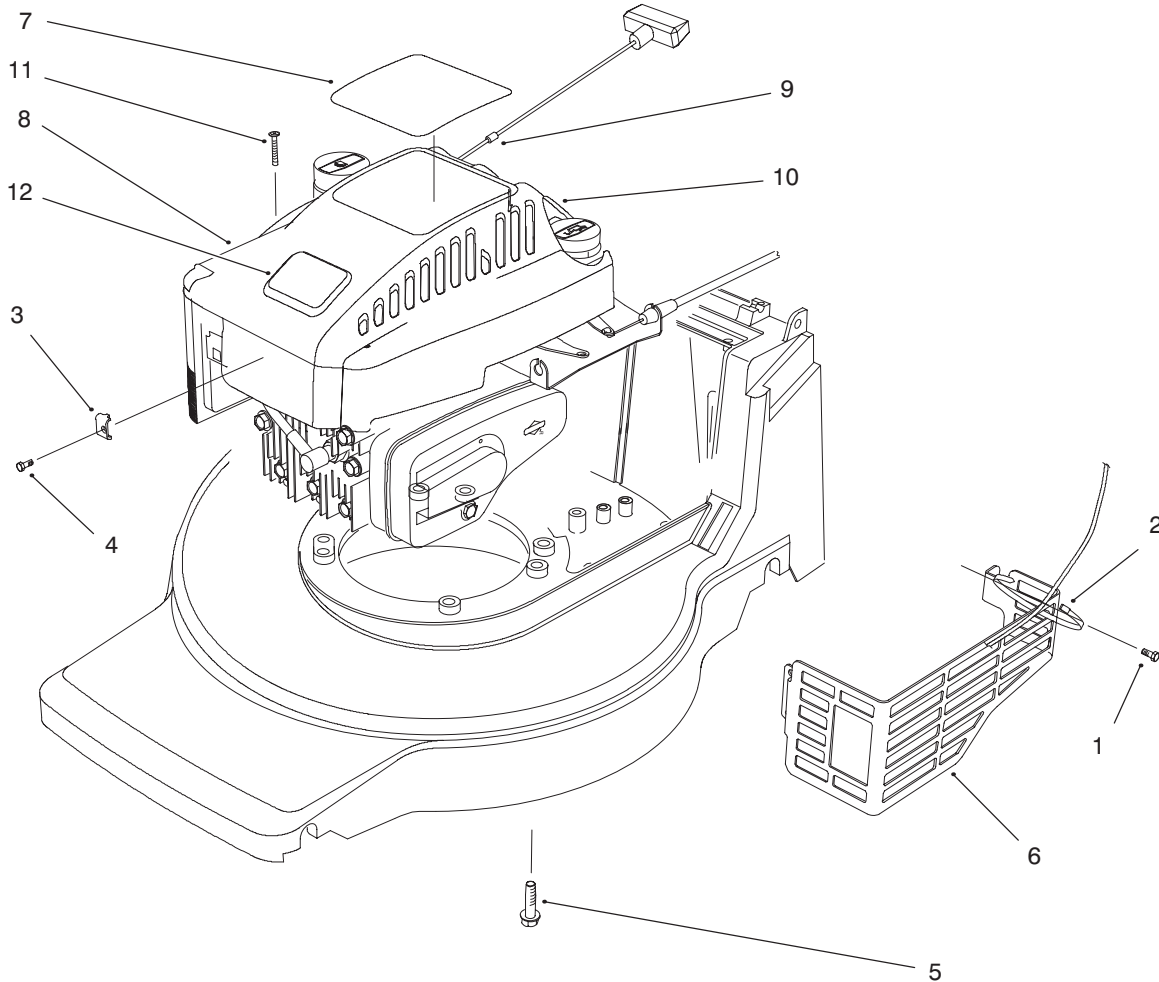


C-2627

## ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-73	Screw	3
2	3290-378	Tie - Cable	1
3	2210-249	Clamp - Casting	1
4	93-8470	Screw - Clamp	1
5	32144-102	Screw	3
6	82-8550	Shield - Muffler	1

Ref. No.	Part No.	Description	No. Used
7	93-4354	Decal - Engine	1
8		Engine	1
9	2210-316	Rope - Stop	1
10	93-0243	Shroud	1
11	32144-121	Screw	2
12	92-2289	Plate - Logo	1

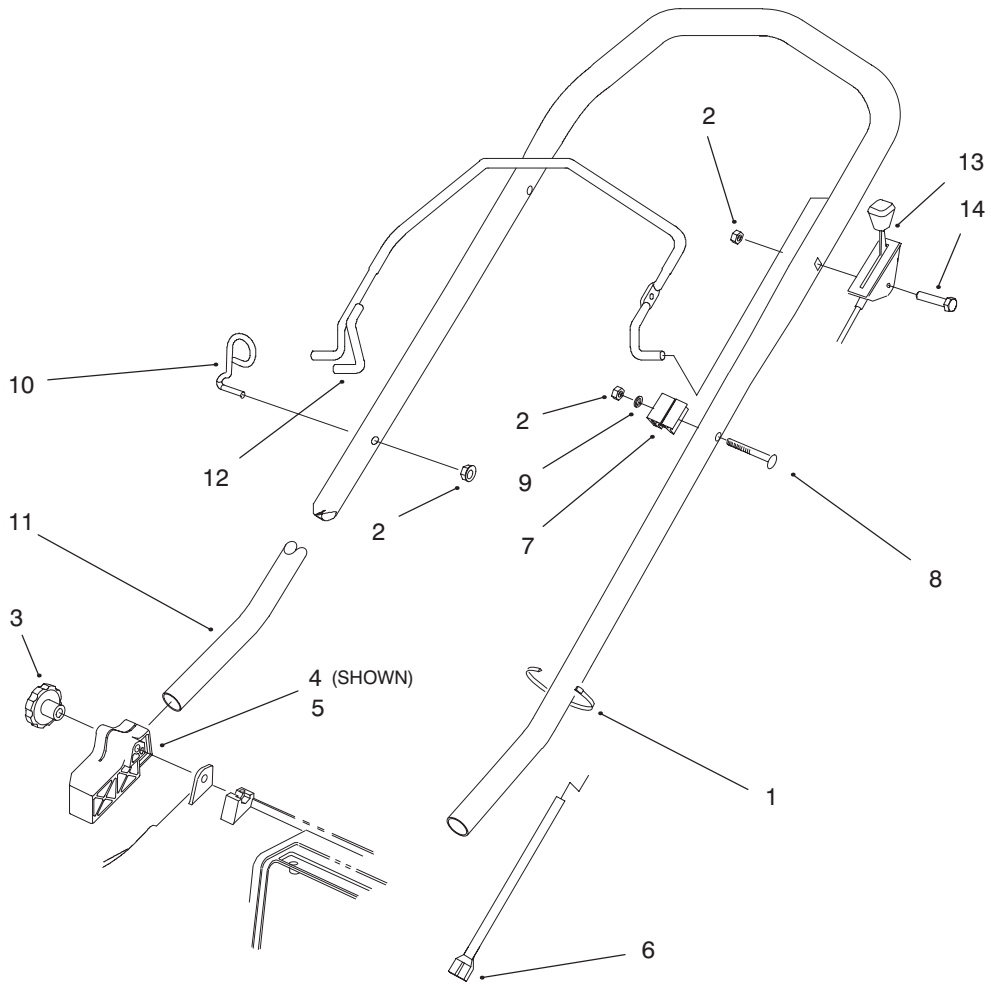


C-2624

## HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3290-378	Tie - Cable	1
2	3296-73	Nut - Lock Insert	3
3	19-4050	Knob	2
4	71-8100	Mount - Handle RH	1
5	71-8090	Mount - Handle LH	1
6	93-1116	Cable - Brake	1
7	92-7729	Anchor - Cable	1

Ref. No.	Part No.	Description	No. Used
8	95-4453	Screw - Handle	1
9	3256-1	Washer - Flat	1
10	95-4457	Rope - Guide	1
11	94-4375	Handle	1
12	95-5924	Bail - Brake	1
13	93-1118	Control - Throttle	1
14	321-48	Screw - Hex Head	1

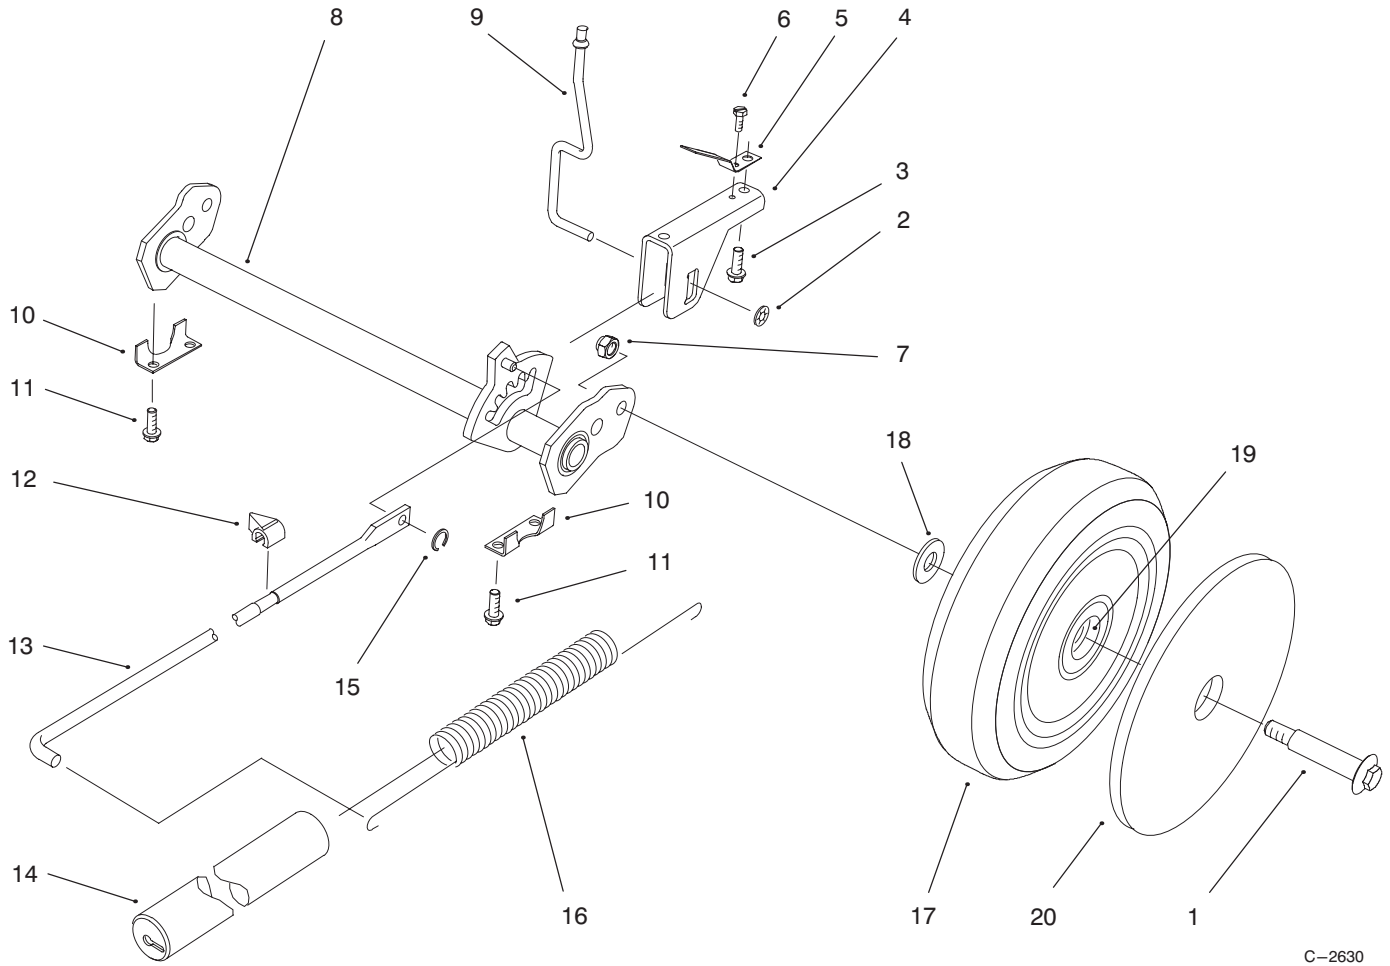


C-2630

## DECK SUSPENSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	27-6230	Bolt - Wheel	2
2	32112-13	Nut - Push	1
3	63-8590	Screw	2
4	71-8080	Saddle - Height of Cut	1
5	71-8060	Spring - Trigger	2
6	32144-31	Screw	1
7	3296-5	Nut - Lock (Nylon)	2
8	71-7800	Arm - Pivot	1
9	71-7840	Rod - Trigger	1
10	71-7770	Plate - Securing	2
11	32144-4	Screw - Hex Head Tap	4

Ref. No.	Part No.	Description	No. Used
12	71-7980	Indicator - Height of Cut	1
13	71-7970	Rod - Link	1
14	71-8450	Cover - Spring	1
15	32151-93	Ring - Grip	1
16	71-7740	Spring - Counterbalance	1
17	14-9949	Rear Wheel & Tire Assembly (Incl. Ref. # 19)	2
18	40-1940	Washer	2
19	27-6250	Bushing	2
20	92-7663	Cover - Wheel	1

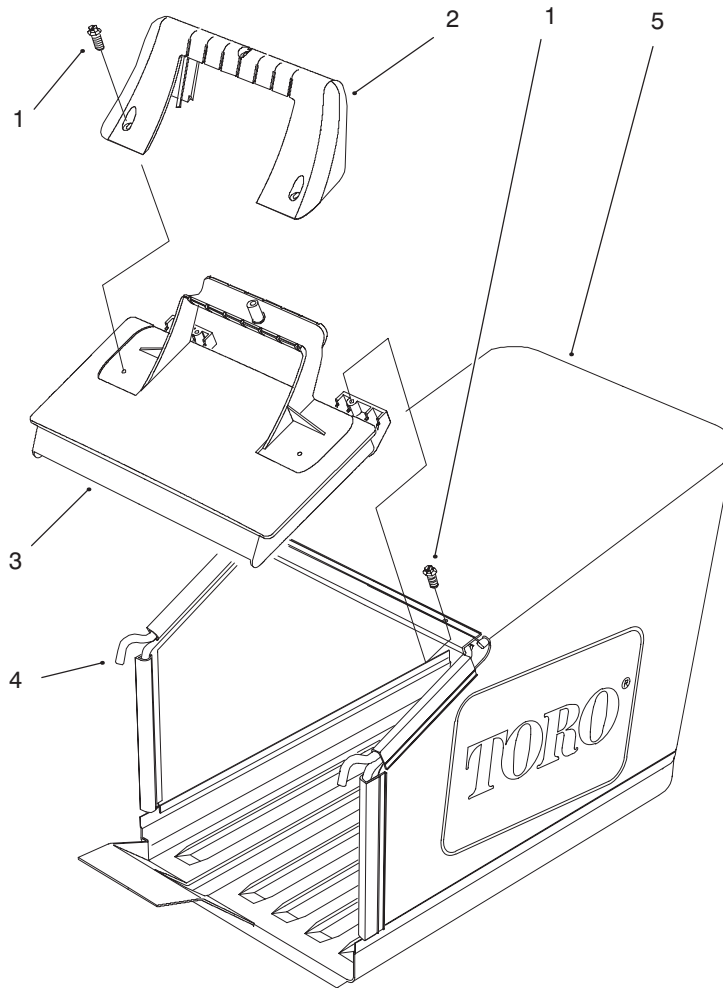


C-2626

## BAG AND COMPONENTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-111	Screw - Phillips Pan Head	5
2	71-9480	Handle Door	1
3	71-9470	Door - Bag	1

Ref. No.	Part No.	Description	No. Used
4	71-9900	Frame	1
5	71-9460	Bag - Grass	1

\* Not Illustrated

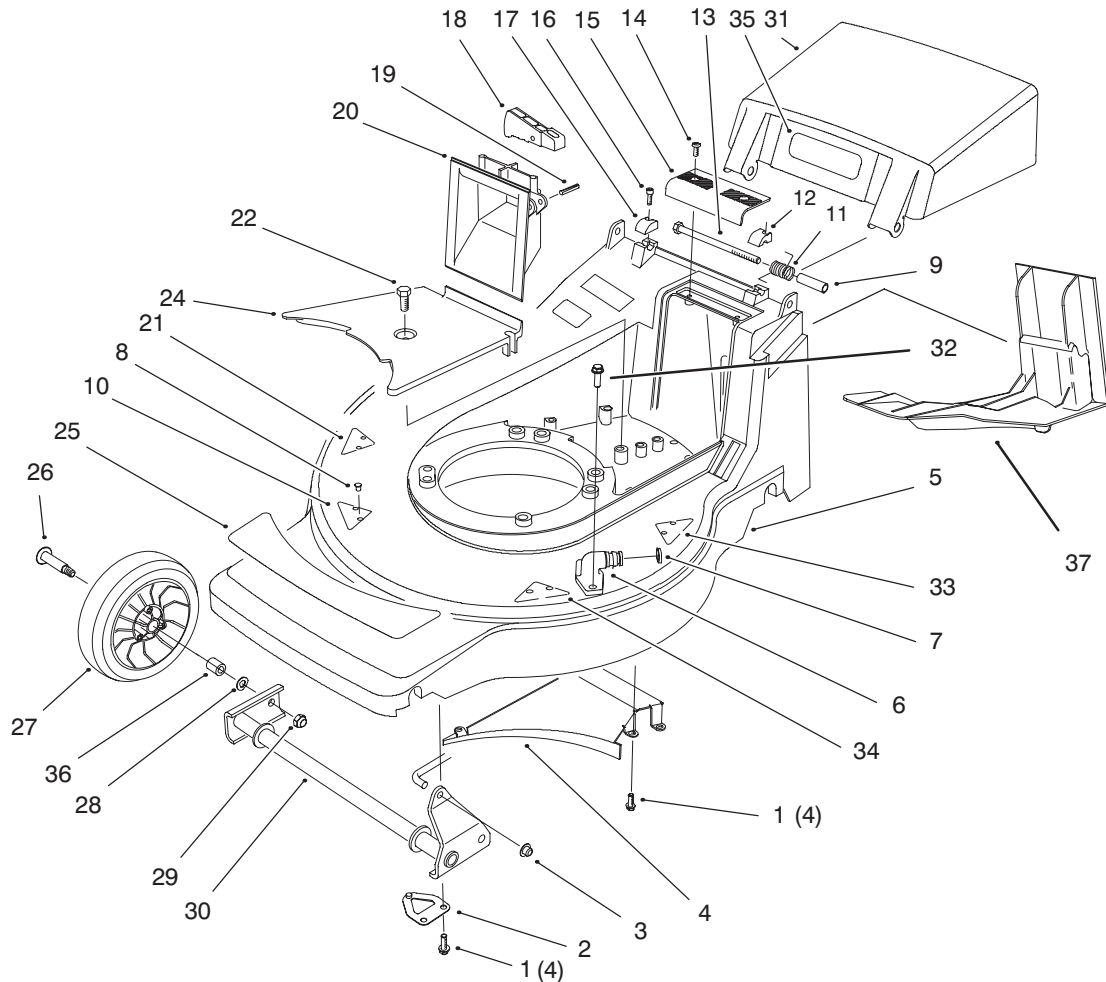


C-2629

## DECK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32144-4	Screw - Hex Head Tap	8
2	71-8830	Retainer Shaft Assembly	2
3	32112-11	Nut - Push	1
4	71-7990	Ramp - Discharge	1
5	95-6134	Housing Assembly (Incl. Ref.# 6-8,10,21,25 & 32-34)	1
6	95-2747	Fitting - Washout	1
7	46-6290	O-Ring	1
8	32144-111	Screw - Phillips Pan Head	8
9	71-8580	Spacer - Door	2
10	71-8920	Kicker - Front Right	1
11	71-9840	Spring - Door	2
12	71-7900	Cap - Bolt LH	1
13	322-29	Screw - Hex Head	2
14	32144-97	Screw - Phillips Pan Head	2
15	71-7860	Grip - Upper	1
16	65-5210	Screw - Thread Forming	2
17	71-7910	Cap - Bolt RH	1
18	71-7930	Trigger - Height of Cut	1

Ref. No.	Part No.	Description	No. Used
19	3284-5	Pin - Groove	1
20	71-7870	Grip - Lower	1
21	71-9230	Kicker - Rear Right	1
22	32144-70	Screw - Tap	1
24	71-7920	Cover - Belt	1
25	92-7863	Decal - Deck	1
26	27-6230	Bolt - Wheel	2
27	46-1113	Wheel & Tire Assembly 7" (Incl. Ref.# 36)	2
28	40-1940	Washer	2
29	3296-5	Nut - Lock (Nylon)	2
30	71-7820	Pivot - Front	1
31	17-1569	Door - Discharge	1
32	46-6811	Screw - Hex Washer Head	2
33	71-9250	Kicker - Rear Left	1
34	71-9440	Kicker - Front Left	1
35	93-4105	Decal - Danger	1
36	27-6250	Bushing	2
37	71-9990	Plug - Recycler	1

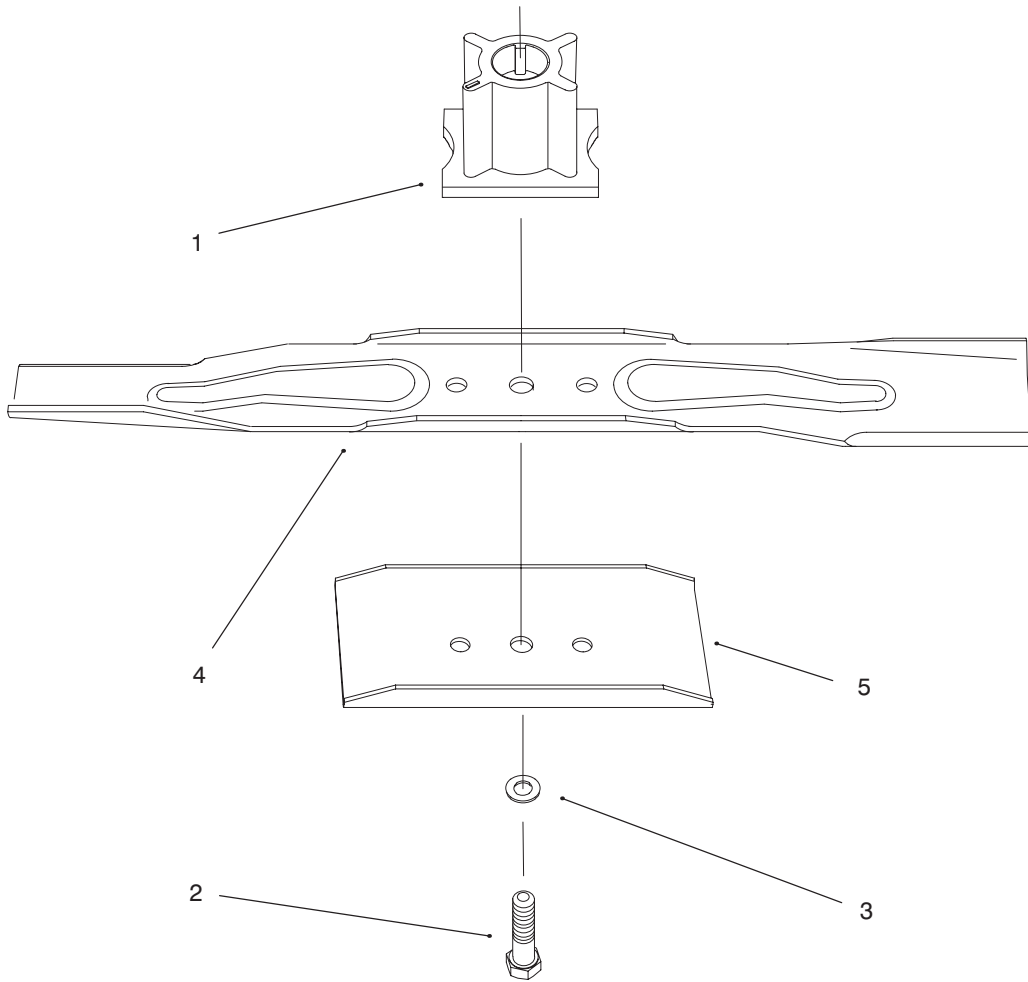


C-2628

### BLADE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-7940	Retainer - Blade	1
2	26-0672	Bolt - Blade	1
3	3253-22	Washer - Lock	1

Ref. No.	Part No.	Description	No. Used
4	71-9260	Blade	1
5	80-0510	Stiffener - Blade	1

Obtain Parts From Briggs & Stratton

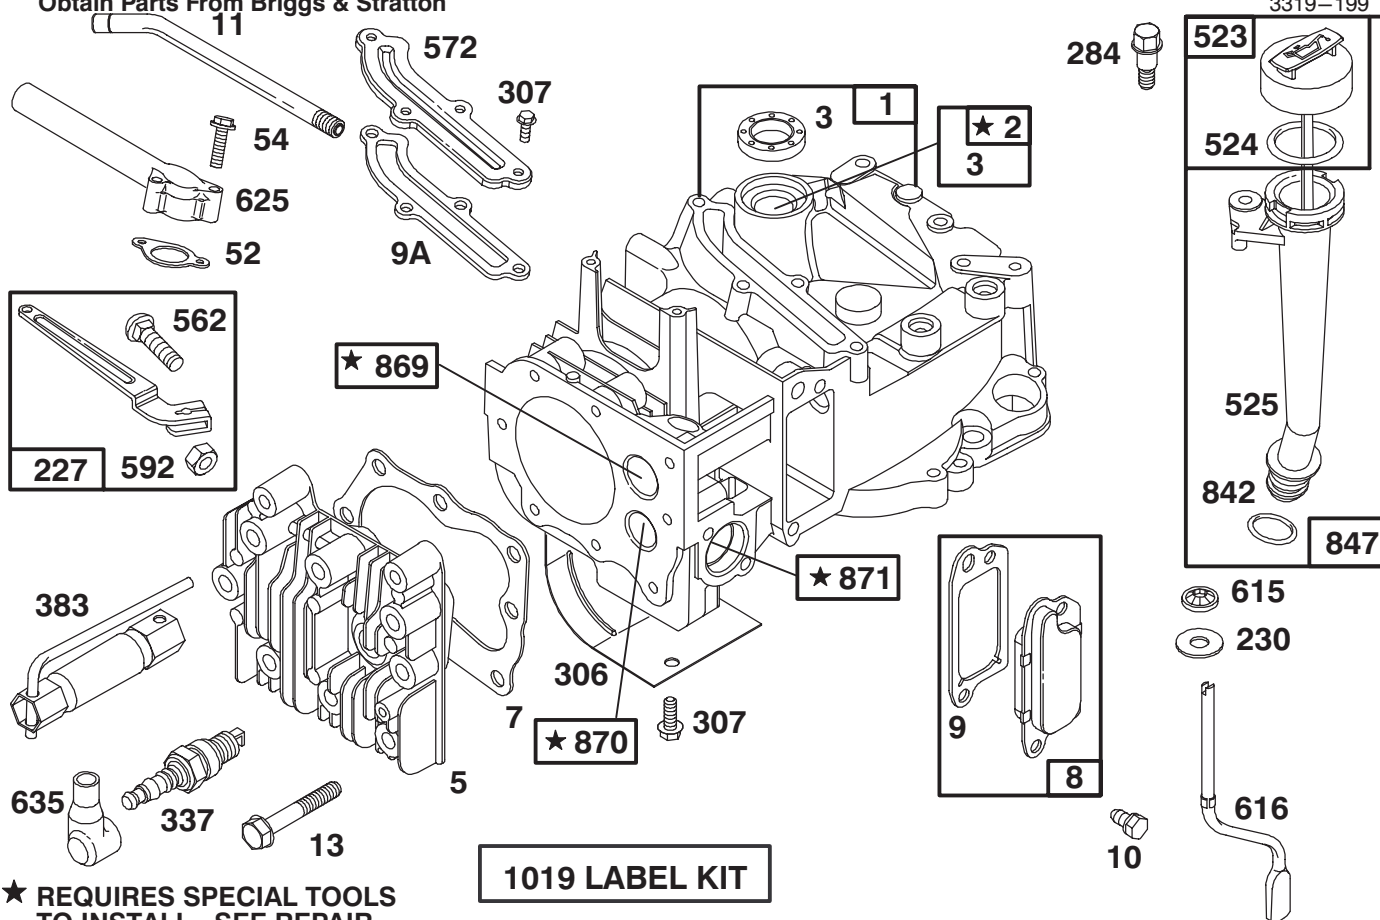

★ REQUIRES SPECIAL TOOLS TO INSTALL. SEE REPAIR INSTRUCTION MANUAL.

**1019 LABEL KIT**


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	293708	Bushing – Cylinder	1
★3	299819	Seal – Oil	1
5	214349	Head – Cylinder	1
★7	272916	Gasket – Cylinder Head	1
8	495786	Breather – Valve Chamber	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
10	94650	Screw – Breather Mtg.	1
11	231933	Tube – Breather	1
13	94547	Screw – Cylinder Head	1
★52	272199	Gasket – Intake Elbow	1
54	94526	Screw – Intake Elbow Mtg.	1
227	492349	Lever Assembly – Gov.	1
230	67072	Washer – Gov. Crank	1
284	94511	Screw – Hex. Head	1
306	224324	Shield – Cylinder	1
307	94515	Screw – Hex. Head	1
337	802592	Plug – Spark	1

Ref. No.	Part No.	Description	No. Used
383	89838	Wrench – Spark Plug	1
523	495264	Cap With Dipstick – Oil Filler	1
★524	280393	Seal – Filler Tube	1
525	495265	Tube – Oil Filler	1
562	94852	Bolt – Carriage	1
572	224328	Baffle – Cylinder	1
592	231082	Nut – Hex.	1
615	94474	Fastener	1
616	262578	Crank – Governor	1
625	497465	Tube – Fuel Intake	1
635	66538	Elbow – Spark Plug	1
★842	280966	Seal – O-Ring	1
847	495263	Oil Fill Tube Assy.	1
869	213512	Seat – Intake Valve	1
870	213513	Seat – Exhaust Valve	1
871	262001	Guide – Exhaust Valve	1
1019	494256	<b>Note:</b> 63709 Guide – Intake Valve Label Kit	1

★ Included in Gasket Set—Part No. 496316.

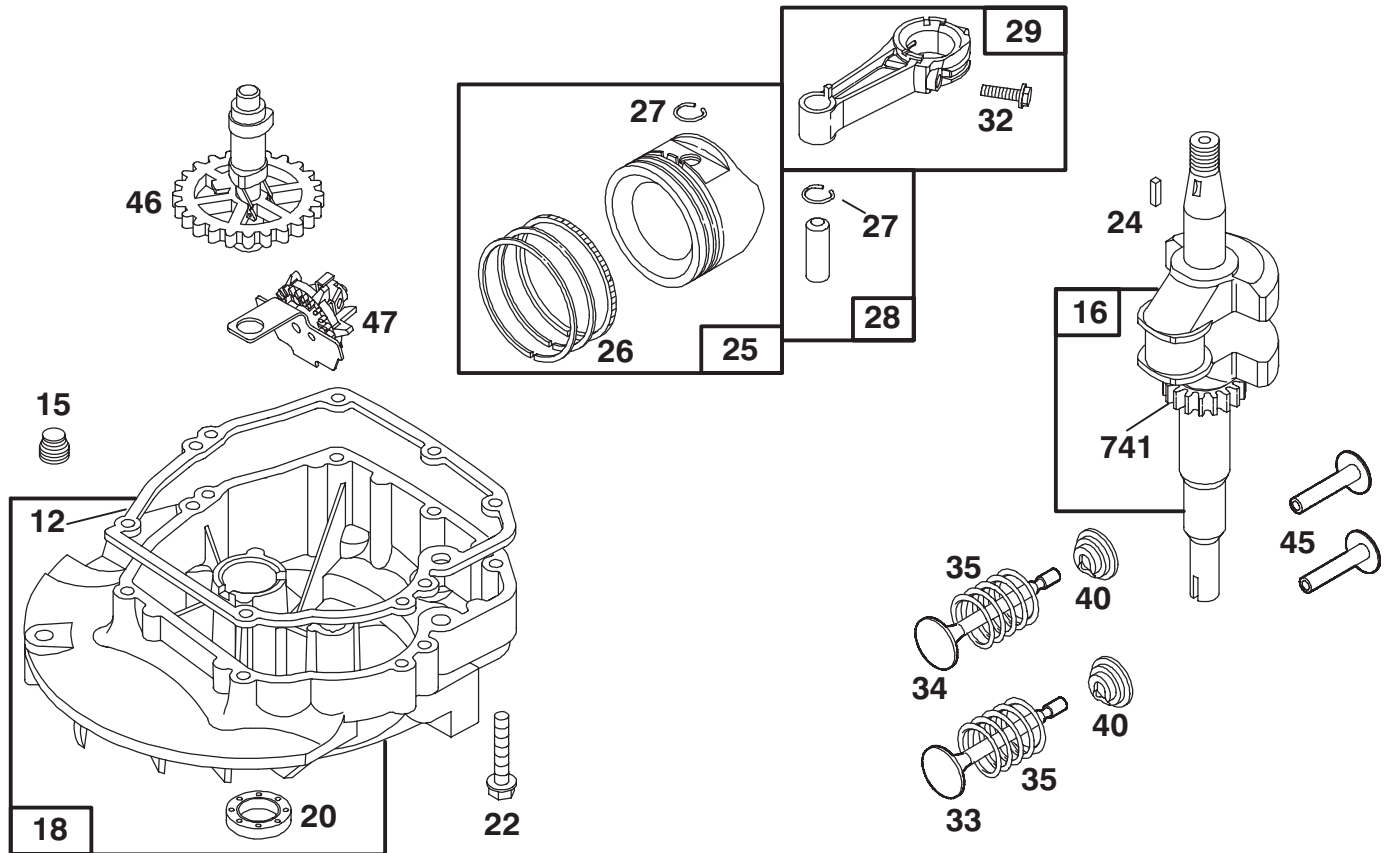

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★12	272198	Gasket – Crankcase	1
15	94720	Plug – Oil Drain	1
16	494546	Crankshaft	
		<b>Note:</b> Order 94388 For Timing Gear Key.	
18	493279	Sump – Engine	1
★20	399781	Seal – Oil	1
22	94220	Screw – Hex. Head	1
		<b>Note:</b> 94612 Screw – Hex. Head (One (1) Used in Hole Nearest Breather)	
24	222698	Key – Flywheel	1
25	493262	Piston Assy. (Standard)	1
	493385	Piston Assy. (.010" O.S.)	1
	493386	Piston Assy. (.020" O.S.)	1
	493387	Piston Assy. (.030" O.S.)	1
26	493261	Ring Set (Standard)	1
	493388	Ring Set (.010" O.S.)	1
	493389	Ring Set (.020" O.S.)	1
	493390	Ring Set (.030" O.S.)	1

Ref. No.	Part No.	Description	No. Used
27	26026	Lock – Piston Pin	1
28	298909	Pin – Piston (Standard)	1
	298908	Pin – Piston (.005" O.S.)	1
29	490566	Rod Assembly – Connecting	1
		<b>Note:</b> For Connecting Rod With .020" Undersize Crankpin Bearing – Order No. 490743.	
32	94699	Screw – Connecting Rod	1
33	262651	Valve – Exhaust	1
34	262652	Valve – Intake	1
35	262224	Spring – Valve	1
40	93312	Retainer – Valve Spring	1
45	262204	Tappet – Valve	1
46	492830	Gear – Cam	1
47	493737	Slinger – Oil	1
741	262598	Gear – Timing	1

★ Included in Gasket Set—Part No. 496316.



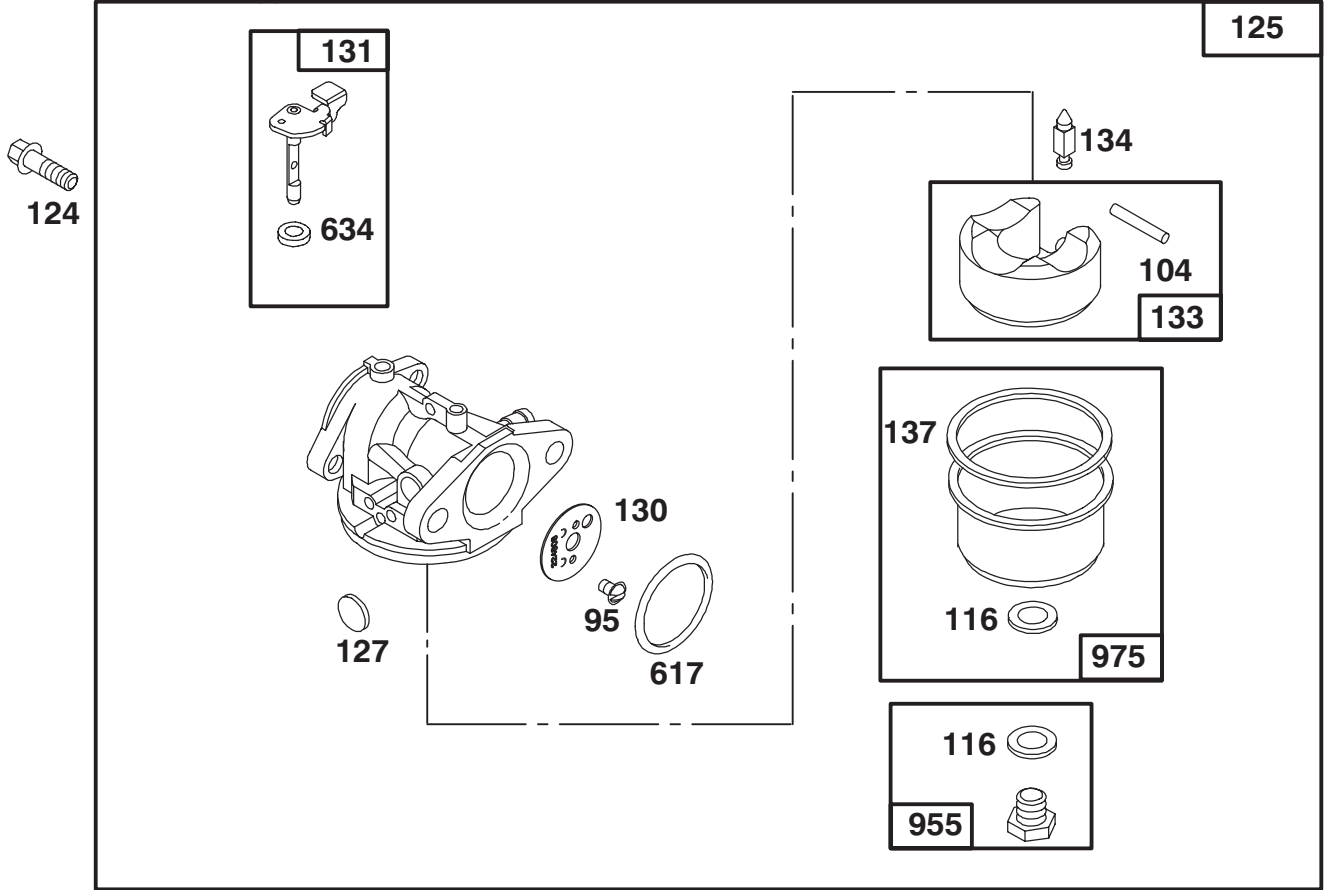

Assemblies include all parts shown in frames.




## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
95	94098	Screw - Throttle Valve Mtg.	1
●104	231371	Pin - Float Hinge	1
●◆116		Gasket-Sealing (Sold in Kit Only)	1
124	94525	Screw - Carburetor Mtg.	1
125	497314	Carburetor	1
●127		Plug - Welch (Sold in Kit Only)	1
130	224908	Valve - Throttle	1
131	493267	Shaft - Throttle	1
133	398187	Float Assy. - Carburetor	1
●134	398188	Valve - Inlet (Includes Seat)	1

Ref. No.	Part No.	Description	No. Used
●◆137		Gasket - Bowl (Sold in Kit Only)	1
●◆617	270344	Seal - Fuel Intake Tube	1
●◆634		Washer - Shaft (Sold in Kit Only)	1
955	497315	Screw - Bowl Mtg. (Std.) <b>Note:</b> 496495 Screw - Bowl Mtg. (High Altitude)	1
975	493640	Bowl Assy. - Carburetor	1

● Included in Carburetor Kit-Part No. 493762.

◆ Included in Carburetor Gasket Set-Part No. 490937.

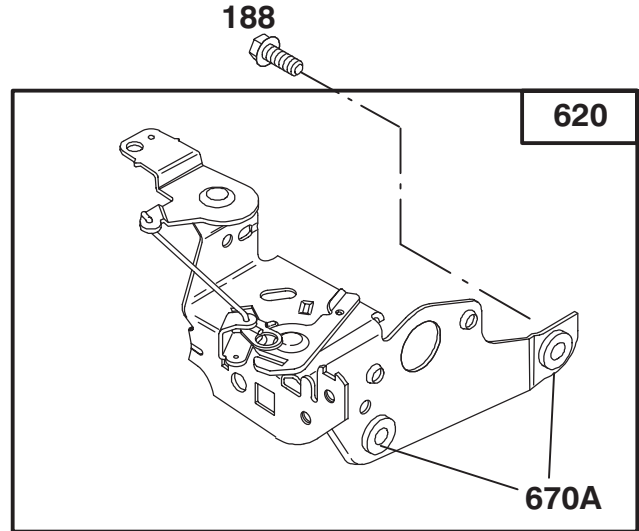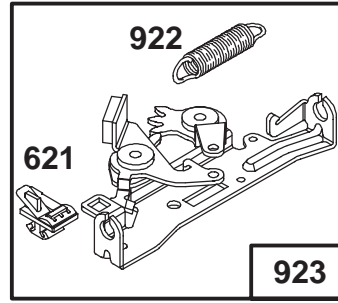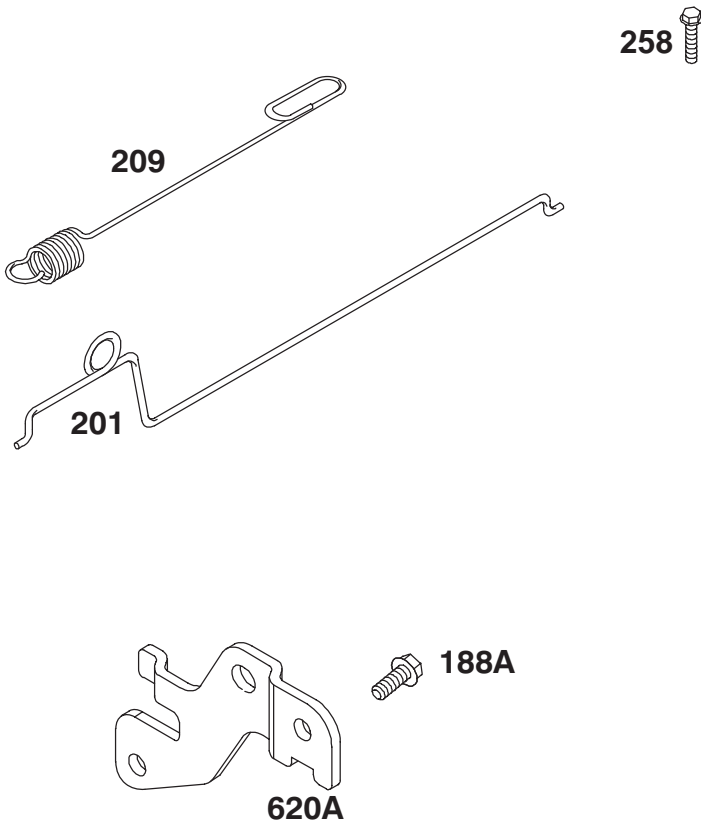


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
188	94644	Screw - Hex. Head	1
188A	94602	Screw - Hex. Head	1
201	262579	Link - Governor	1
209	263046	Spring - Governor	1
258	94512	Screw - Hex. Head	1
620	497203	Bracket - Carburetor	1

Ref. No.	Part No.	Description	No. Used
620A	225152	Bracket - Control	1
621	396847	Switch - Stop	1
670A	493823	Spacer - Bracket	1
922	262640	Spring - Brake	1
923	493442	Brake Assembly	1

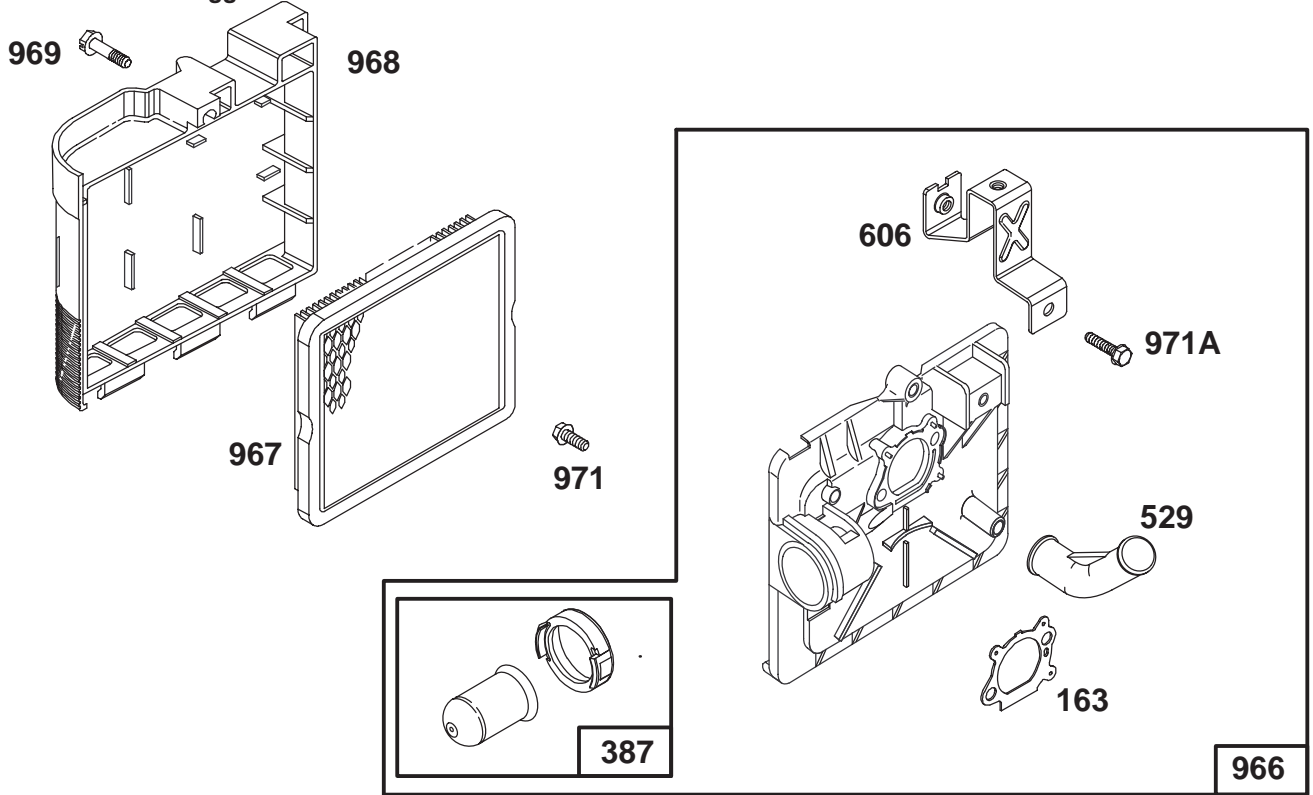


Assemblies include all parts shown in frames.

### ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
163	272653	Gasket – Air Cleaner	1
387	496115	Primer–Carburetor	1
529	281299	Grommet – Breather	1
606	224815	Strap – Bracket	1
966	496116	Base – Air Cleaner	1

Ref. No.	Part No.	Description	No. Used
967	491588	Filter – Air	1
968	281340	Cover – Air Cleaner	1
969	94120	Screw – Cover Mtg.	1
971	94121	Screw – Air Cleaner	1
971A	94749	Screw – Hex. Head	1

★ Included in Gasket Set—Part No. 496316.

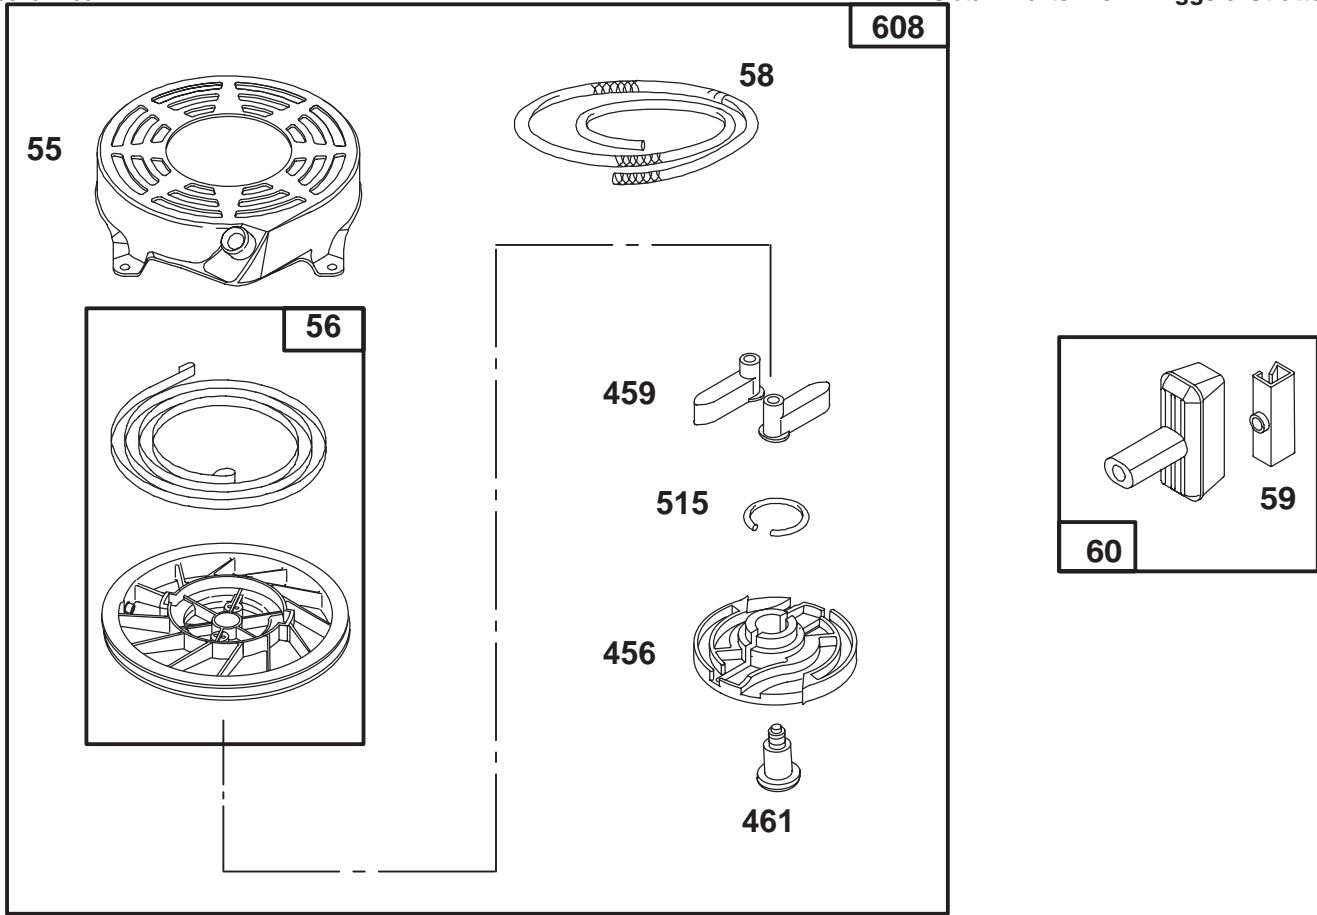


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
55	497440	Housing – Rewind Starter	1
56	498144	Pulley – Rewind Starter	1
58	280399	Rope – Rewind Starter (Cut to Required Length)	1
59	224467	Insert – Starter Grip	1
60	493926	Handle – Rewind Starter	1
456	281503	Retainer – Rewind Starter	1

Ref. No.	Part No.	Description	No. Used
459	281505	Pawl – Starter	1
461	94943	Pin – Starter	1
515	263073	Spring – Torsion	1
608	497680	Starter Assy. – Rewind	1
		<b>Includes:</b>	
		94128 Screw – Hex. Hd.	1
		92987 Nut – Hex.	1




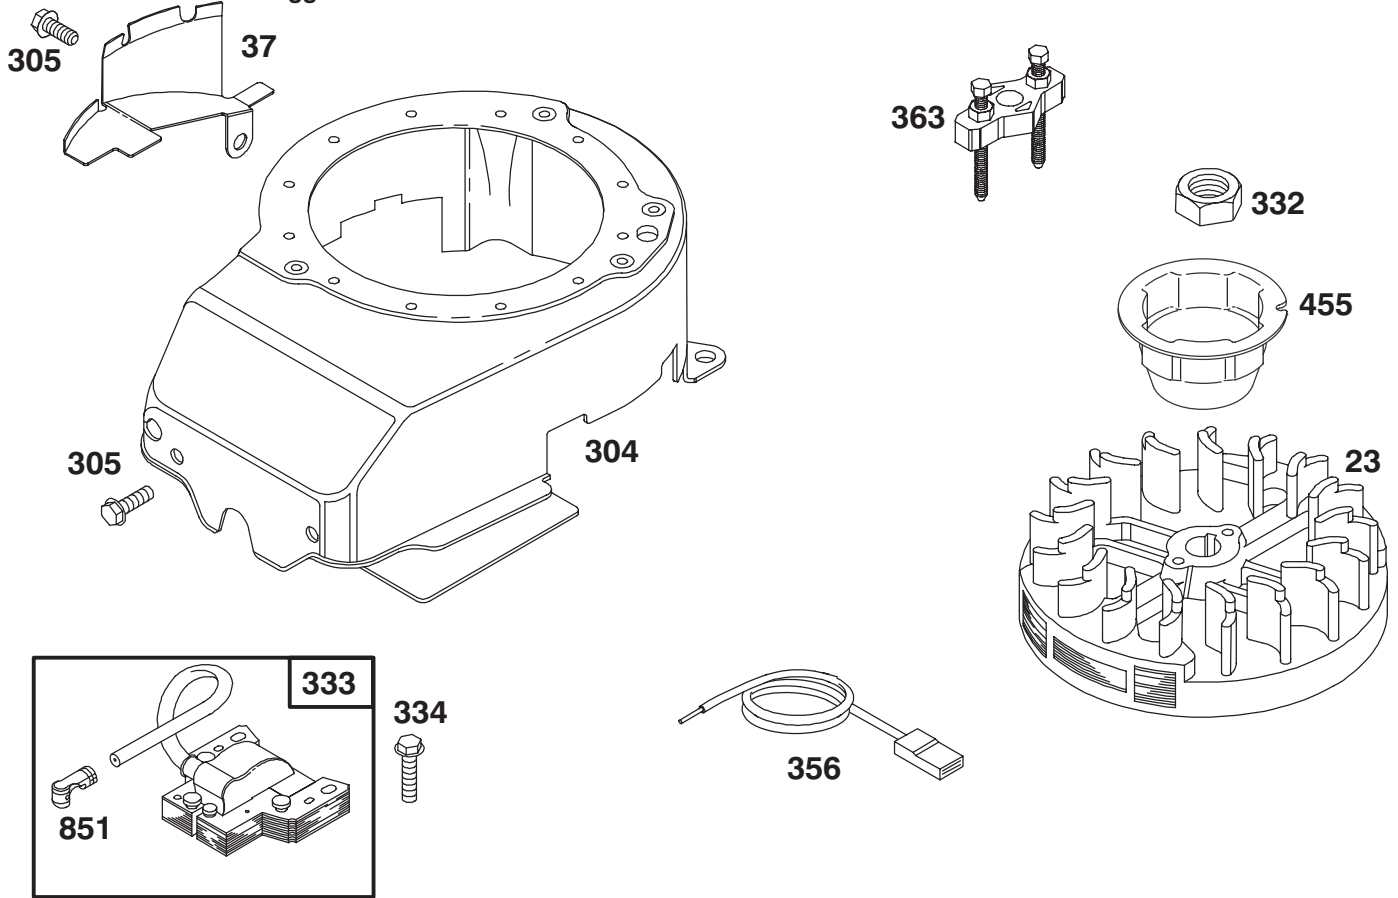


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
23	492177	Flywheel	1
37	224511	Guard - Flywheel	1
304	493293	Housing - Blower	1
305	94744	Screw - Sem	1
332	92284	Nut - Flywheel	1
333	802574	Armature - Magneto	1

Ref. No.	Part No.	Description	No. Used
334	94731	Screw - Sem	1
356	398808	Wire - Ground	1
363	19069	Flywheel Puller	1
455	225121	Cup - Starter	1
851	493880	Terminal - Ignition Cable	1

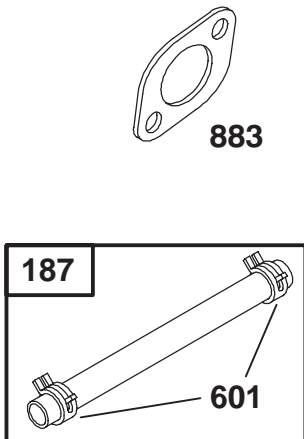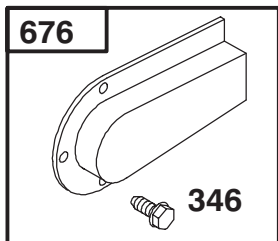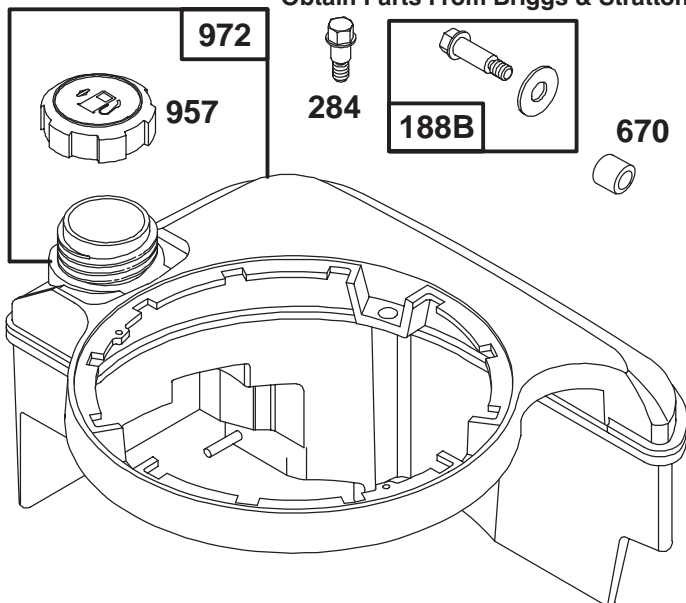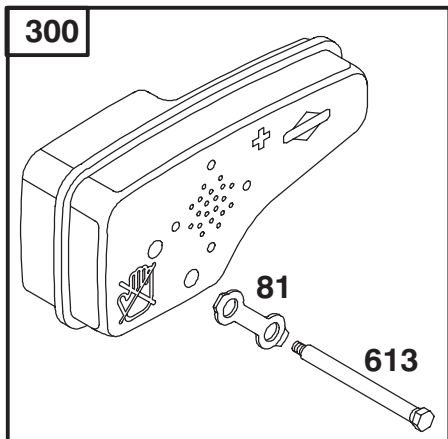


Assemblies include all parts shown in frames.


### ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
81	223664	Lock – Muffler Screw	1
187	492790	Hose – Fuel	1
188	398540	Screw – Tank Mounting	1
284	94511	Screw – Shoulder	1
300	496106	Muffler – Exhaust	1
346	93705	Screw – Hex. Head	1
601	93053	Clamp – Hose	1


Ref. No.	Part No.	Description	No. Used
613	94231	Screw – Shoulder	1
670	280512	Spacer – Fuel Tank	1
676	493871	Deflector – Muffler	1
★883	272253	Gasket – Exhaust	1
957	397974	Cap Assy. – Fuel	1
972	495224	Tank Assembly – Fuel	1

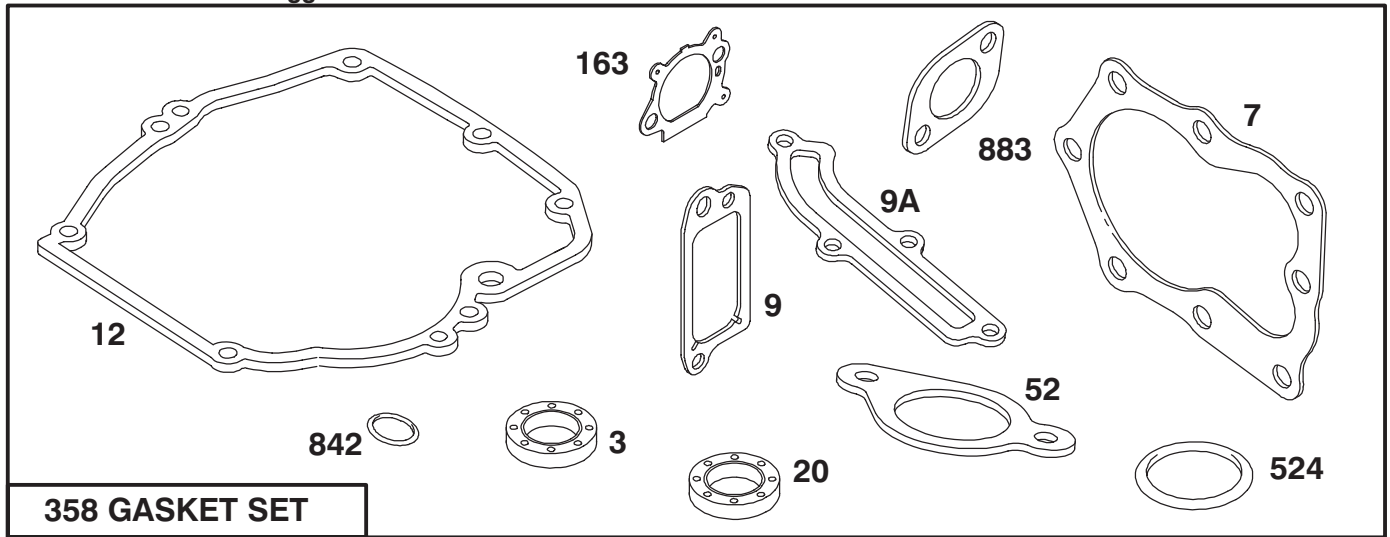

**358 GASKET SET**

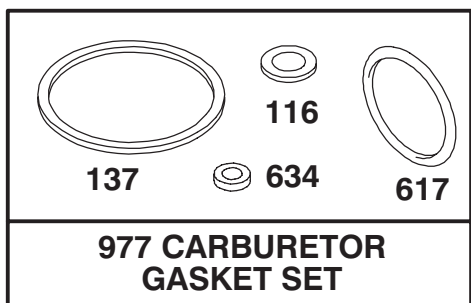

**977 CARBURETOR GASKET SET**

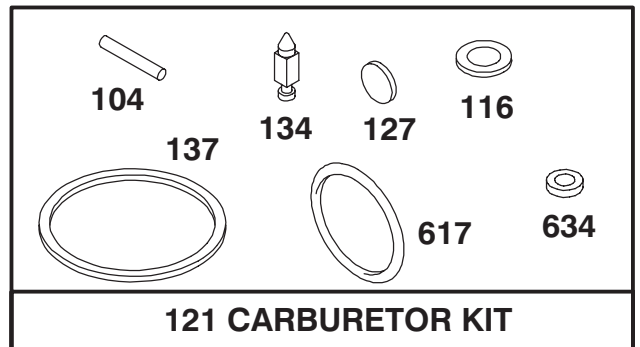

**121 CARBURETOR KIT**

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12F802-0667-01

Ref. No.	Part No.	Description	No. Used
★3	299819	Seal – Oil	1
★7	272916	Gasket – Cylinder Hd.	1
★9	272481	Gasket – Breather	1
★9A	272238	Gasket – Baffle Plate	1
★12	272198	Gasket – Crankcase	1
★20	399781	Seal – Oil	1
★52	272199	Gasket – Intake Elbow	1
●104	231371	Pin – Float Hinge	1
◆◆116		Gasket – Sealing (Sold in Kit Only)	1
121	493762	Carburetor Kit	1
●127		Plug – Welch (Sold in Kit Only)	1

Ref. No.	Part No.	Description	No. Used
●134	398188	Valve – Inlet (Includes Seat)	1
◆◆137		Gasket – Bowl (Sold in Kit Only)	1
★163	272653	Gasket – Air Cleaner	1
358	497316	Gasket Set	1
★524	280393	Seal – Filler Tube	1
◆◆617	270344	Seal – Fuel Intake Tube	1
◆◆634		Washer – Shaft (Sold in Kit Only)	1
★842	280966	Seal – O-Ring	1
★883	272253	Gasket – Exhaust	1
977	490937	Gasket Set – Carburetor	1

● Included in Carburetor Kit—Part No. 493762.

◆ Included in Carburetor Gasket Set—Part No. 490937.

★ Included in Gasket Set—Part No. 496316.

# TORO PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
14-9949	Rear Wheel & Tire Assembly 8"	3	17	2	71-9900	Frame	4	4	1
17-1569	Door - Discharge	5	31	1	80-0510	Stiffener - Blade	6	5	1
19-4050	Knob	2	3	2	82-8550	Shield - Muffler	1	6	1
26-0672	Bolt - Blade	6	2	1	92-2289	Plate - Logo	1	12	1
27-6230	Bolt - Wheel	3	1	2	92-7663	Cover - Wheel	3	20	1
27-6230	Bolt - Wheel	5	26	2	92-7729	Anchor - Cable	2	7	1
27-6250	Bushing	3	19	2	92-7863	Decal - Deck	5	25	1
27-6250	Bushing	5	36	2	93-0243	Shroud	1	10	1
40-1940	Washer	3	18	2	93-1116	Cable - Brake	2	6	1
40-1940	Washer	5	28	2	93-1118	Control - Throttle	2	13	1
46-1113	Wheel & Tire Assembly 7"	5	27	2	93-4105	Decal - Danger	5	35	1
46-6290	O-Ring	5	7	1	93-4354	Decal - Engine	1	7	1
46-6811	Screw - Hex Washer Head	5	32	2	93-8470	Screw - Clamp	1	4	1
63-8590	Screw	3	3	2	94-4375	Handle	2	11	1
65-5210	Screw - Thread Forming	5	16	2	95-2747	Fitting - Washout	5	6	1
71-7740	Spring - Counterbalance	3	16	1	95-4453	Screw - Handle	2	8	1
71-7770	Plate - Securing	3	10	2	95-4457	Rope - Guide	2	10	1
71-7800	Arm - Pivot	3	8	1	95-5924	Bail - Brake	2	12	1
71-7820	Pivot - Front	5	30	1	95-6134	Housing Assembly	5	5	1
71-7840	Rod - Trigger	3	9	1	2210-249	Clamp - Casting	1	3	1
71-7860	Grip - Upper	5	15	1	2210-316	Rope - Stop	1	9	1
71-7870	Grip - Lower	5	20	1	321-48	Screw - Hex Head	2	14	1
71-7900	Cap - Bolt LH	5	12	1	322-29	Screw - Hex Head	5	13	2
71-7910	Cap - Bolt RH	5	17	1	3253-22	Washer - Lock	6	3	1
71-7920	Cover - Belt	5	24	1	3256-1	Washer - Flat	2	9	1
71-7930	Trigger - Height of Cut	5	18	1	3284-5	Pin - Groove	5	19	1
71-7940	Retainer - Blade	6	1	1	3290-378	Tie - Cable	2	1	1
71-7970	Rod - Link	3	13	1	3290-378	Tie - Cable	1	2	1
71-7980	Indicator - Height of Cut	3	12	1	3296-5	Nut - Lock (Nylon)	3	7	2
71-7990	Ramp - Discharge	5	4	1	3296-5	Nut - Lock (Nylon)	5	29	2
71-8060	Spring - Trigger	3	5	2	3296-73	Nut - Lock Insert	2	2	3
71-8080	Saddle - Height of Cut	3	4	1	32112-11	Nut - Push	5	3	1
71-8090	Mount - Handle LH	2	5	1	32112-13	Nut - Push	3	2	1
71-8100	Mount - Handle RH	2	4	1	32144-4	Screw - Hex Head Tap	5	1	8
71-8450	Cover - Spring	3	14	1	32144-4	Screw - Hex Head Tap	3	11	4
71-8580	Spacer - Door	5	9	2	32144-31	Screw	3	6	1
71-8830	Retainer Shaft Assembly	5	2	2	32144-70	Screw - Tap	5	22	1
71-8920	Kicker - Front Right	5	10	1	32144-73	Screw	1	1	3
71-9230	Kicker - Rear Right	5	21	1	32144-97	Screw - Phillips Pan Head	5	14	2
71-9250	Kicker - Rear Left	5	33	1	32144-102	Screw	1	5	3
71-9260	Blade	6	4	1	32144-111	Screw - Phillips Pan Head	4	1	5
71-9440	Kicker - Front Left	5	34	1	32144-111	Screw - Phillips Pan Head	5	8	8
71-9460	Bag - Grass	4	5	1	32144-121	Screw	1	11	2
71-9470	Door - Bag	4	3	1	32151-93	Ring - Grip	3	15	1
71-9480	Handle Door	4	2	1					
71-9840	Spring - Door	5	11	2					

\*Not Illustrated