
Parts Manual

PIONEER® S-SERIES

Model No. PNS740KC604—Serial No. 313000000 and Up

Picture below may not reflect actual product.

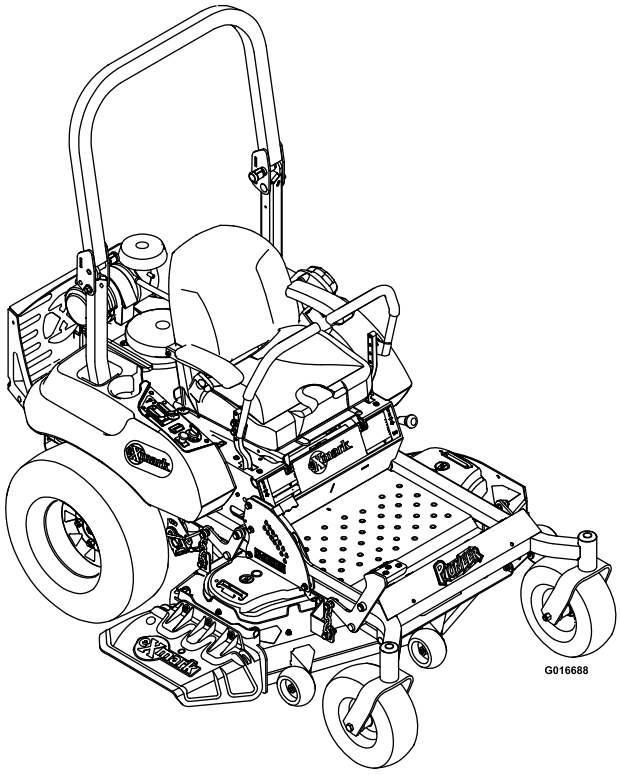

Part No. 4501-473 Rev. B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2013—Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310


Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved



If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)


Contents

Complete Deck Assembly No. 116-5945 4
Deck Assembly 5
Deck W/Decals Assembly No. 116-5812 6
Mainframe Assembly 7
Mainframe W/Decals Assembly No. 116-5854 8
Roll-Over Protection System Assembly No. 116-3498 9
Caster Wheel Assembly No. 103-5189 10
Deck Lift Assembly 11
Motion Control Assembly 12
Motion Control Assembly - LH 13
Motion Control Assembly - RH 14
Seat Assembly 15
Seat W/Tracks Assembly No. 116-6192 16
Controls Assembly 17
Fuel Tank Mounting Assembly 18
Fuel Tank Assembly No. 116-4610 19
Engine Assembly 20
Hydraulic Assembly 21
Transaxle Assembly 22
Electrical Assembly 23

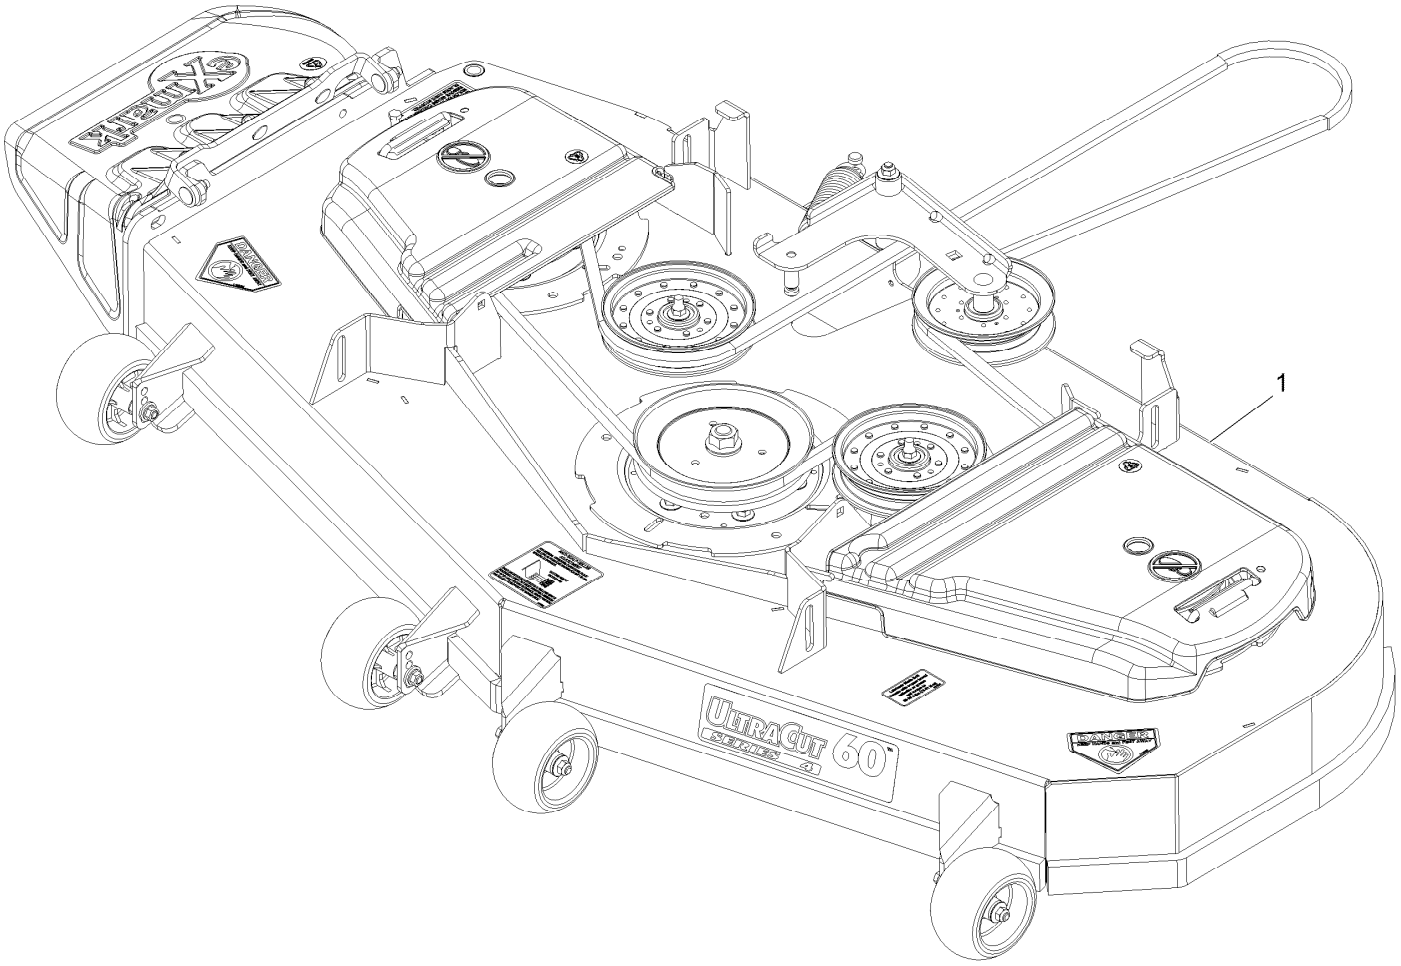

Complete Deck Assembly No. 116-5945

Ref.	*Part Number*	*Qty.*	*Description*
1	116-5945	1	ASM-Deck Complete 604

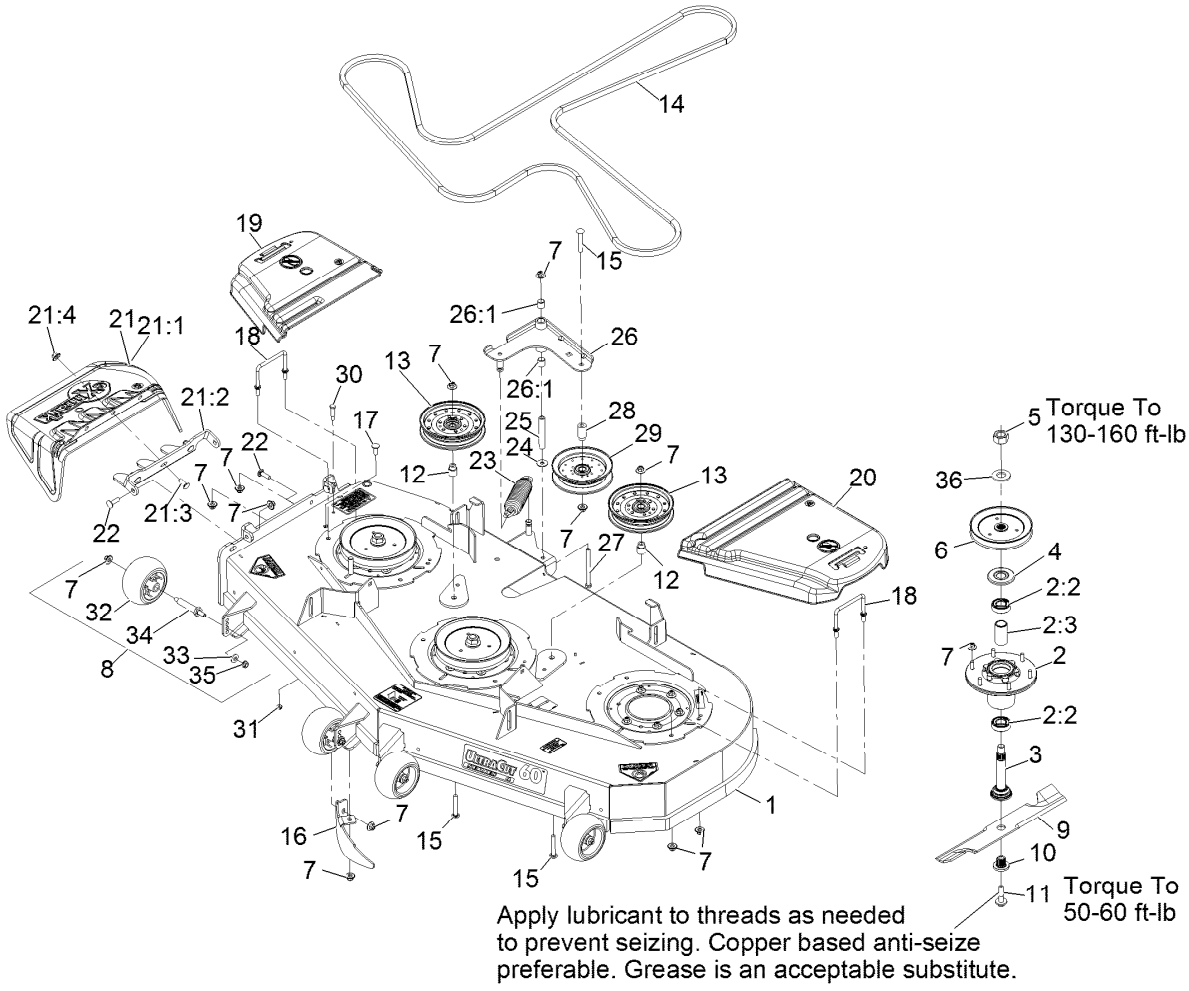


Deck Assembly

Ref.	Part Number	Qty.	Description
1	116-5812	1	Deck ASM,W/Decals 604
2	116-3344	3	ASM-Cutter Hsg With Bearings
2:2	116-0720	2	Bearing-Ball
2:3	116-3312	1	Spacer-Bearing
3	116-3341	3	ASM-Spindle And Seal
4	116-1286	3	Guard,Bearing Top .989
5	116-7306	3	Nut-Hex
6	116-0676	3	Sheave,Blade Drive 7.25
7	109-6658	34	Nut-Nyloc 3/8-16 Flg
8	103-4051	4	Kit,Anti-Scalp Roller
9	116-5174	3	Blade-Extreme 2, 20.50"
9	103-6403	3	Blade, Notched 20.5 (.94 Hole)
9	103-6393	3	Blade, Mulch 20.5 (.94 Hole) ●
9	103-6388	3	Blade- Low Lift 20.5 (.94 Hole)
9	103-6383	3	Blade, Solid 20.5 (.94 Hole)
10	103-3037	3	Bushing,Splined
11	109-9220	3	Screw-Sems 1/2-20 X 2.19
12	1-633456	2	Bushing,Idler
13	116-4670	2	Pulley-Idler, Flat
14	114-8154	1	Belt-V
15	3231-44	3	Bolt-Carriage 3/8-16 X 2 1/2
16	116-5614-01	1	Dogleg - Lz60


Ref.	Part Number	Qty.	Description
17	3231-22	1	Bolt-Carriage 3/8-16 X 1
18	109-6982	2	Wireform-Cover
19	116-0094	1	Cover-Belt, RH
20	109-6938	1	Cover-Belt, LH
21	109-7188	1	ASM,Discharge Chute
21:1	109-2738	1	Chute,Discharge
21:2	109-8675-01	1	Bracket,Discharge Chute
21:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
21:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
22	3231-28	3	Bolt-Carriage 3/8-16 X 1 1/4
23	116-6317	1	Spring-Extension
24	52-2860	1	Washer
25	116-5111	1	Bushing
26	116-4693	1	ASM-Idler Arm
26:1	1-513034	2	Sleeve-Bearing
27	323-23	1	Screw-HH 3/8-16 X 4-1/2
28	116-4714	1	Bushing-Idler
29	116-4668	1	Idler-Pulley, Flanged
30	112-8387	1	Bolt-HH Shoulder 1/4-20 X 1.64
31	104-7201	1	Nut-Nyloc 1/4-20 Flg
32	1-603299	4	Roller-Scalp, Anti
33	98-5975	4	Washer-Spring Disc 3/8
34	99-2842	4	Spacer
35	3290-357	4	Nut-Whizlock 3/8-16
36	103-2802	3	Washer

● Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

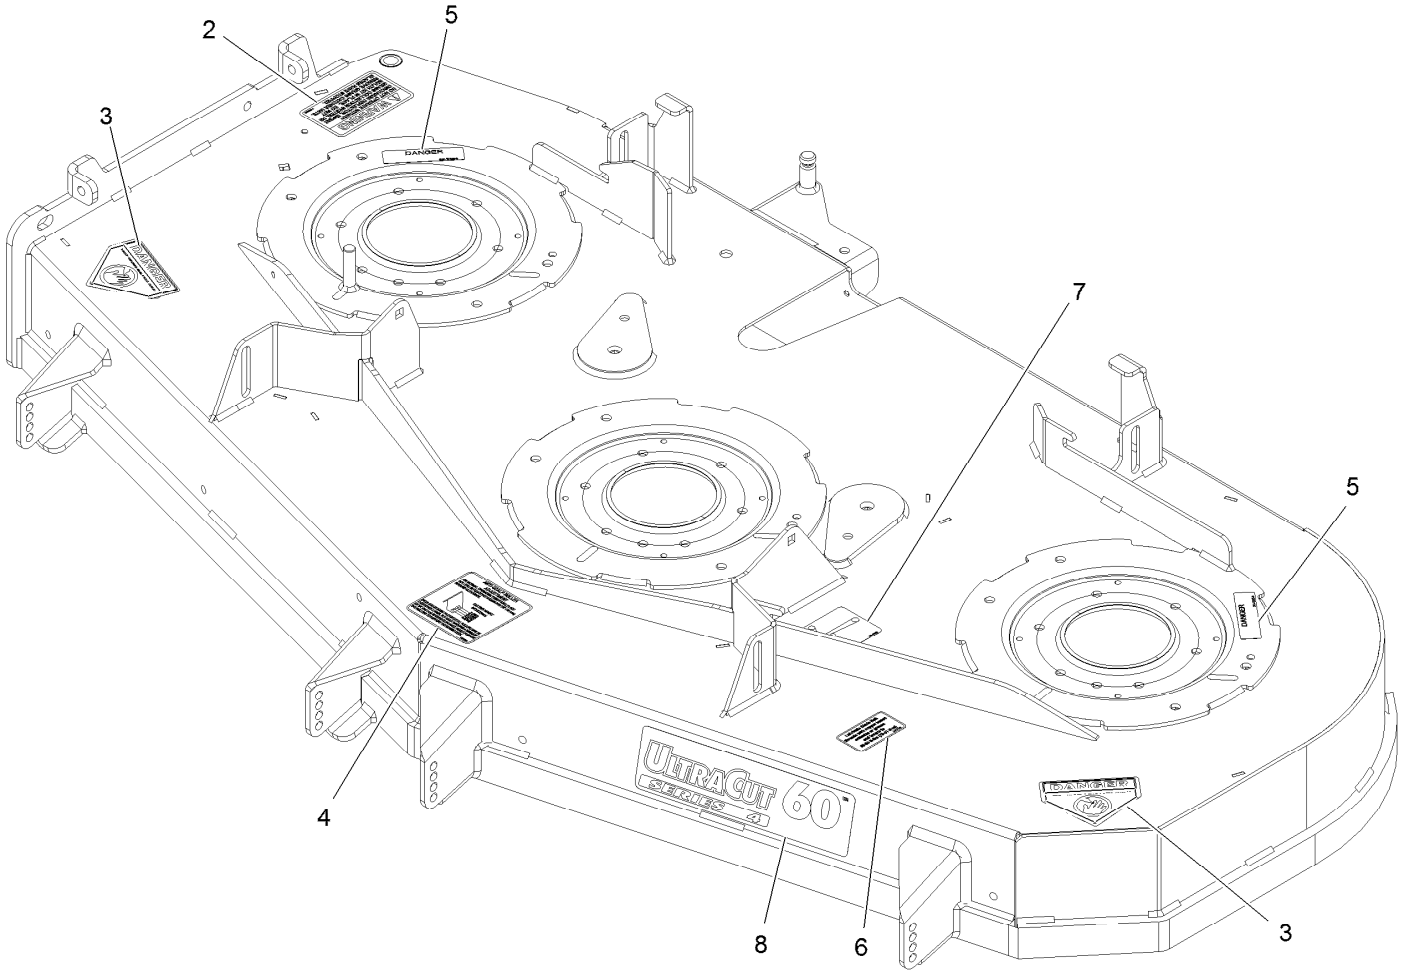

Deck W/Decals Assembly No. 116-5812


Ref.	*Part Number*	*Qty.*	*Description*
2	1-303508	1	Decal-Warning, Discharge
3	1-403005	2	Decal-Danger
4	1-633922	1	Decal,Antiscalp
5	98-5954	2	Decal-Cover, Missing
6	109-3148	1	Decal,Bolt Torque
7	109-6035	1	Decal-Belt Routing
8	116-0025	1	Decal,Ultracut 60 Series 4

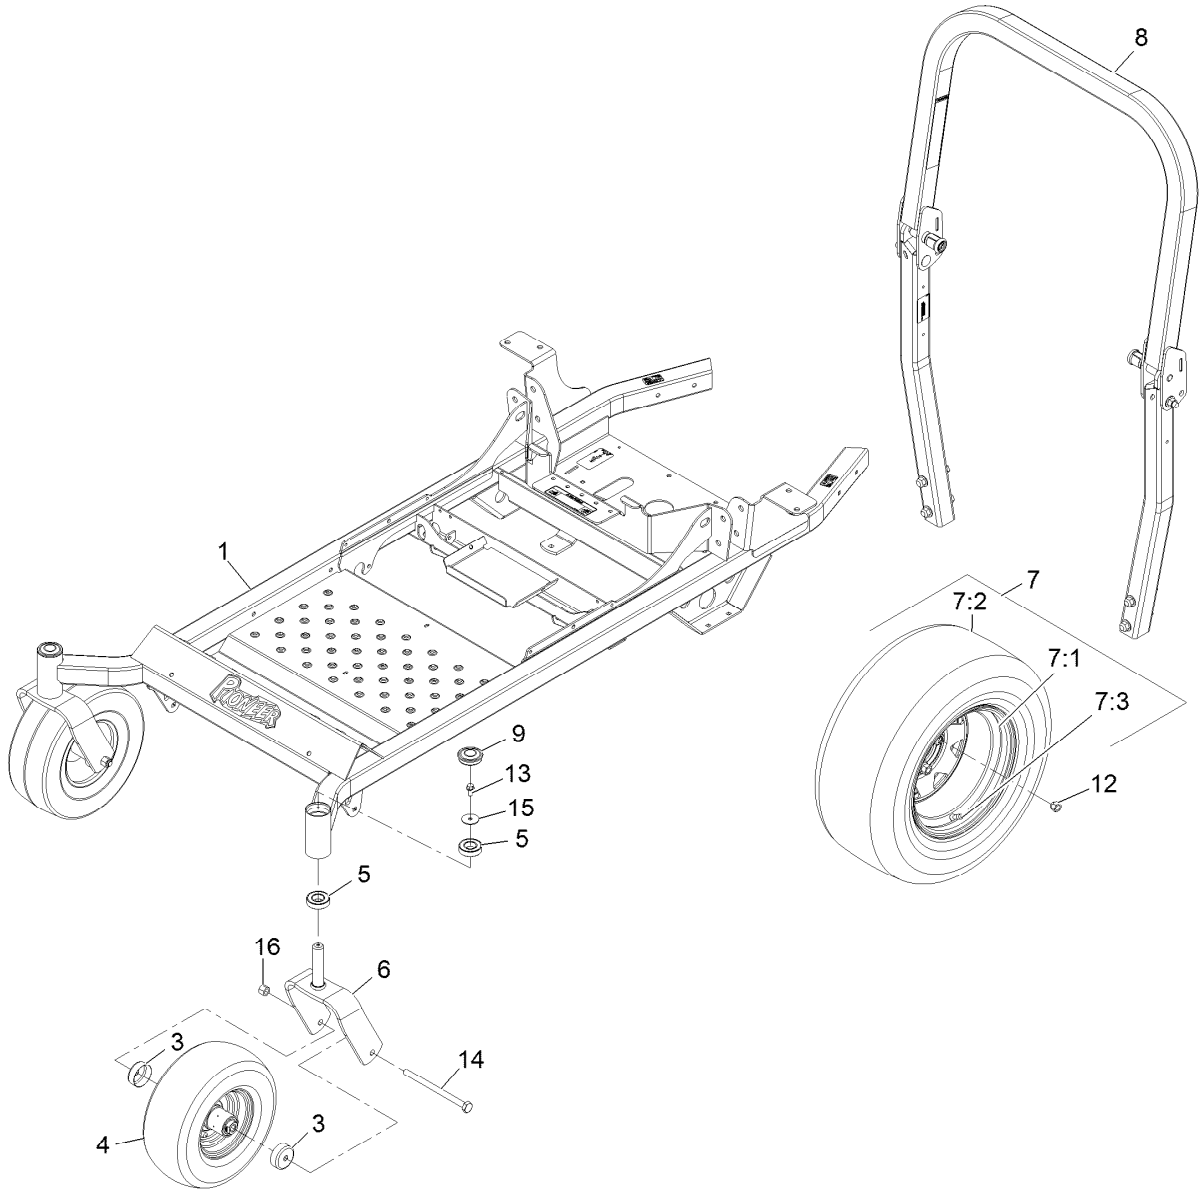

Mainframe Assembly


Ref.	Part Number	Qty.	Description
1	116-5854	1	Frame ASM-60
3	103-2768	4	Guard-Seal
4	103-5189	2	ASM, Wheel & Tire W/ Axle
5	109-3678	4	Bearing-Ball
6	116-5861-01	2	Caster Fork [red]
7	119-2685	2	Wheel And Tire ASM
7:1	120-3272	1	Wheel
7:2	120-3269	1	Tire

Ref.	Part Number	Qty.	Description
7:3	232-27	1	Stem-Valve
8	116-3498	1	ASM-ROPS Pioneer
9	116-4348	2	Cap-Grease
12	242-50	8	Nut-Lug 1/2-20
13	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
14	325-36	2	Screw-HH 1/2-13 X 7 1/2
15	3256-68	2	Washer-Flat
16	3296-23	2	Nut-Nyloc 1/2-13

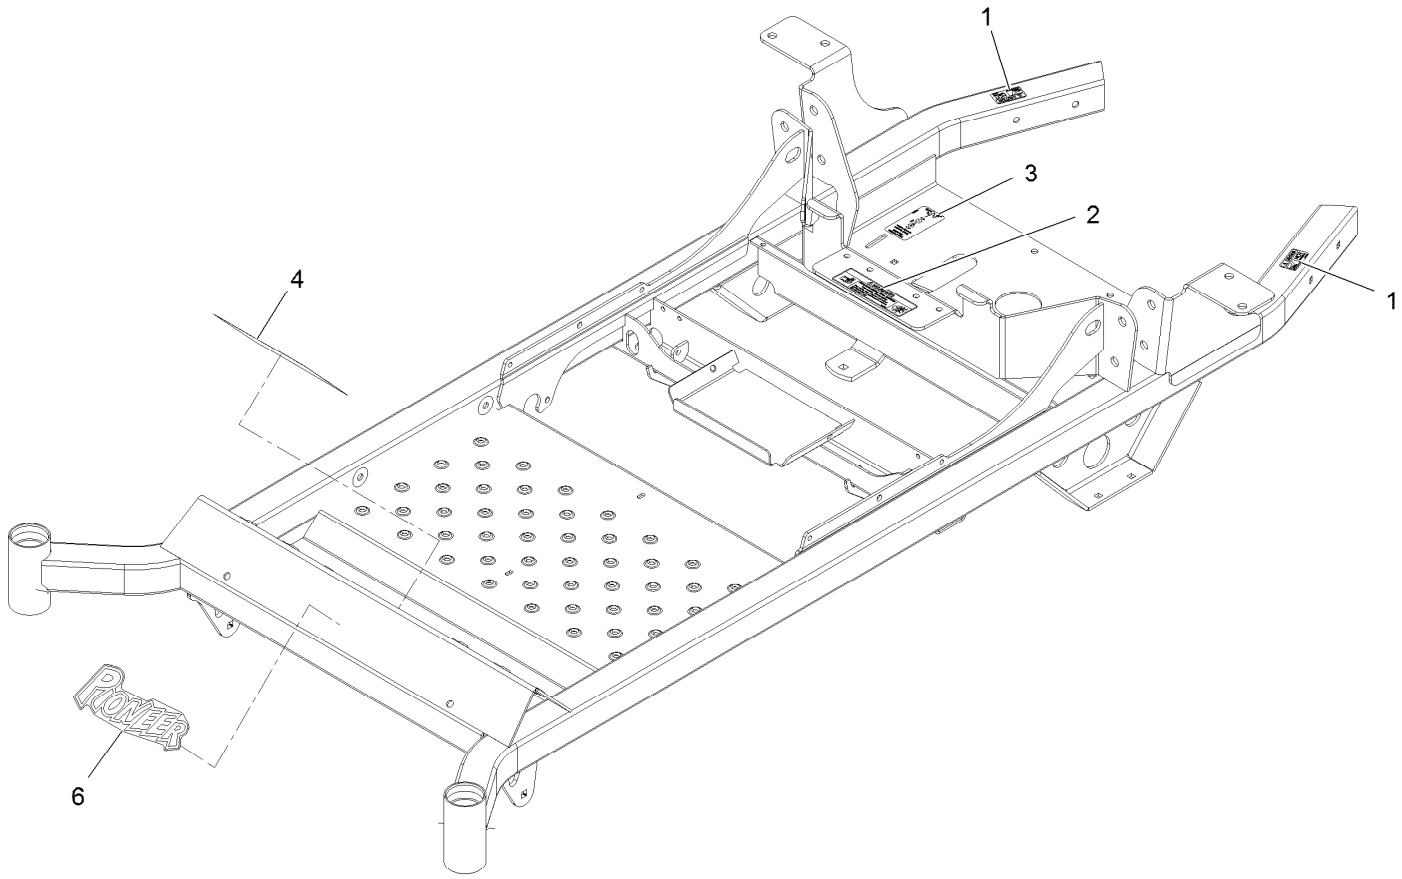

Mainframe W/Decals Assembly No. 116-5854


Ref.	*Part Number*	*Qty.*	*Description*
1	103-2076	2	Decal-Caution
2	116-1119	1	Decal,Belt Drive
3	116-6363	2	Decal-Drive Release
4	116-3303	1	Decal-Slope
6	116-4570	1	Decal-Pioneer Logo

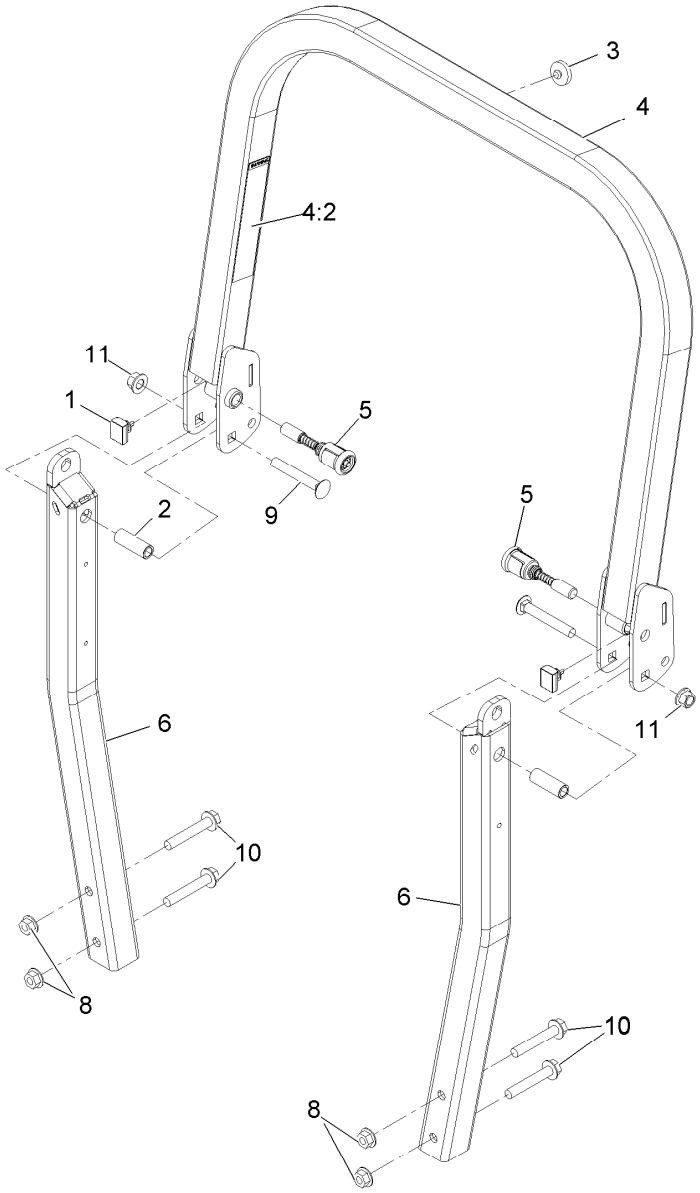

Roll-Over Protection System Assembly No. 116-3498

Ref.	*Part Number*	*Qty.*	*Description*
1	109-5337	2	Bumper-ROPS
2	109-6653	2	Spacer
3	109-9233	1	Bumper-Push-In, Rubber
4	116-0019	1	Upper ROPS ASM
4:2	107-2102	1	Decal-Warning, Folding ROPS
5	116-0104	2	Pin-Spring
6		2	ASM-Lwr ROPS Leg ●
8	32128-49	4	Nut-Whizlock 1/2-13
9	3233-10	2	Bolt-Carriage 1/2-13 X 3 1/2
10	3234-40	4	Screw-HF
11	99-5107	2	Nut-Lock 1/2-13


● Not serviced separately

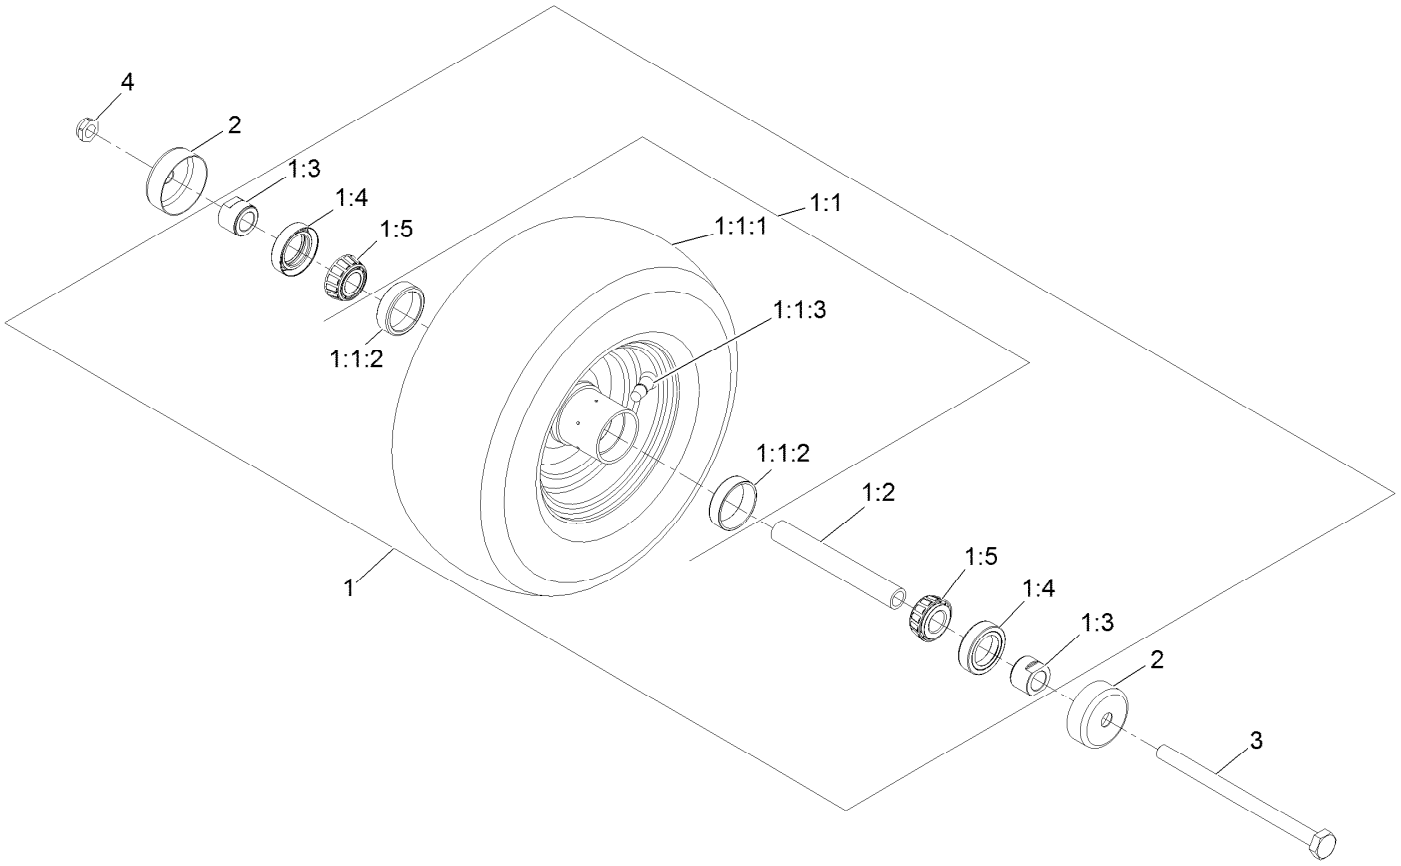

Caster Wheel Assembly No. 103-5189

Ref.	*Part Number*	*Qty.*	*Description*
1		1	ASM, Wheel And Brg 13X5.00-6 ●
1:1		1	ASM, Wheel And Tire 13X5.00-6 ●
1:1:1	1-633002	1	Tire
1:1:2	1-633584	2	Bearing-Cup
1:1:3	5108	1	Valve
1:2	103-3155	1	Axle-Caster
1:3	103-3051	2	Spacer-Nut ■
1:4	103-0063	2	Seal-Double Lip
1:5	1-633585	2	Bearing-Cone Tapered Roller
2	103-2768	2	Guard-Seal
3	325-36	1	Screw-HH 1/2-13 X 7 1/2
4	3296-45	1	Nut-Nyloc 1/2-13 Thin


● Not serviced separately
■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

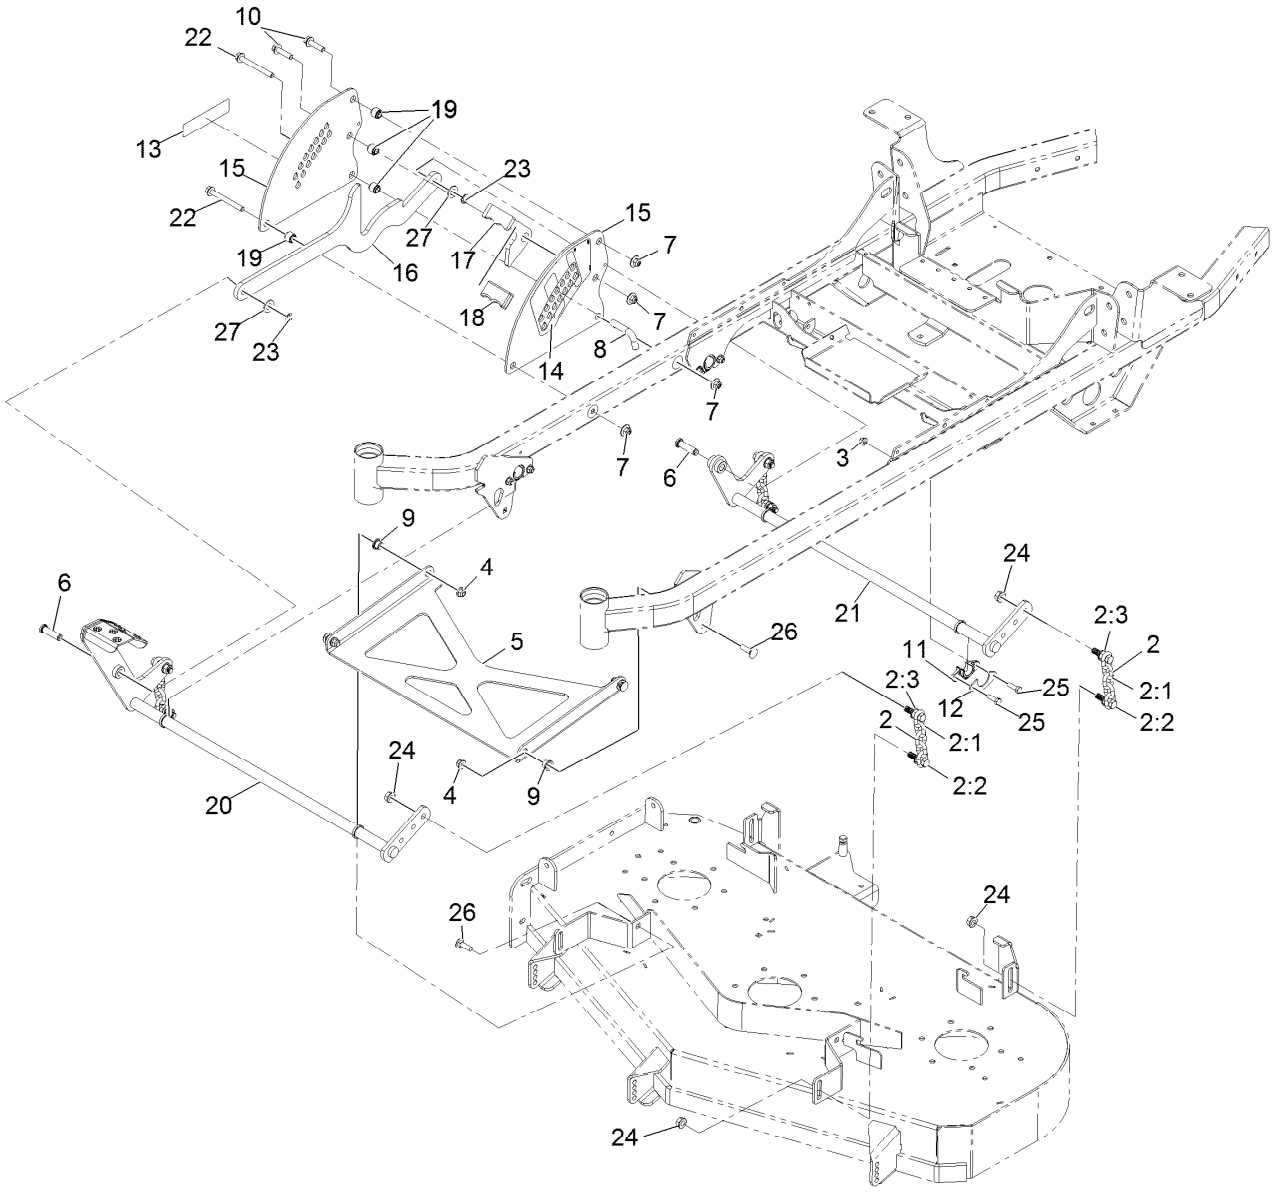

Deck Lift Assembly

Ref.	Part Number	Qty.	Description
2	103-9817	4	Deck Chain ASM
2:1	1-633447	1	Chain-Lift, Deck
2:2	103-1898	2	Screw-HH 7/16-20 X 1-5/8 Sp
2:3	32128-37	2	Nut-Whizlock 7/16-14
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	104-8301	4	Nut-Nyloc 3/8-16 Flg
5	109-3723-01	1	Strut-Deck
6	109-5819	2	Pin-Clevis
7	109-6658	4	Nut-Nyloc 3/8-16 Flg
8	116-5584	1	Pin-HOC
9	109-8788	4	Bushing-Flanged
10	114-4681	2	Screw-HHF
11	115-5065	4	Bushing-Flange
12	116-2887	4	Gusset-Deck Lift

Ref.	Part Number	Qty.	Description
13	116-3884	1	Decal-S-Series
14	116-4308	1	Decal-Height Of Cut
15	116-4309-03	2	Plate,Deck Lift
16	116-4310-03	1	Link-HOC
17	116-4311	1	Transport Lock-HOC
18	116-4312	1	Grip-3/8 X 1 Flat Bar
19	116-4313	4	Spacer-Double Step
20	116-6011-03	1	Wld-Deck Lift Shaft Frt
21	116-6012-03	1	Wld-Deck Lift Shaft Rr
22	116-4701	2	Screw-HHF
23	32120-47	2	Ring-Retaining
24	32128-37	8	Nut-Whizlock 7/16-14
25	322-5	8	Screw-HH 5/16-18 X 1
26	3231-25	4	Bolt-Carriage 3/8-16 X 1 1/4
27	3256-26	2	Washer-1/2 Sae

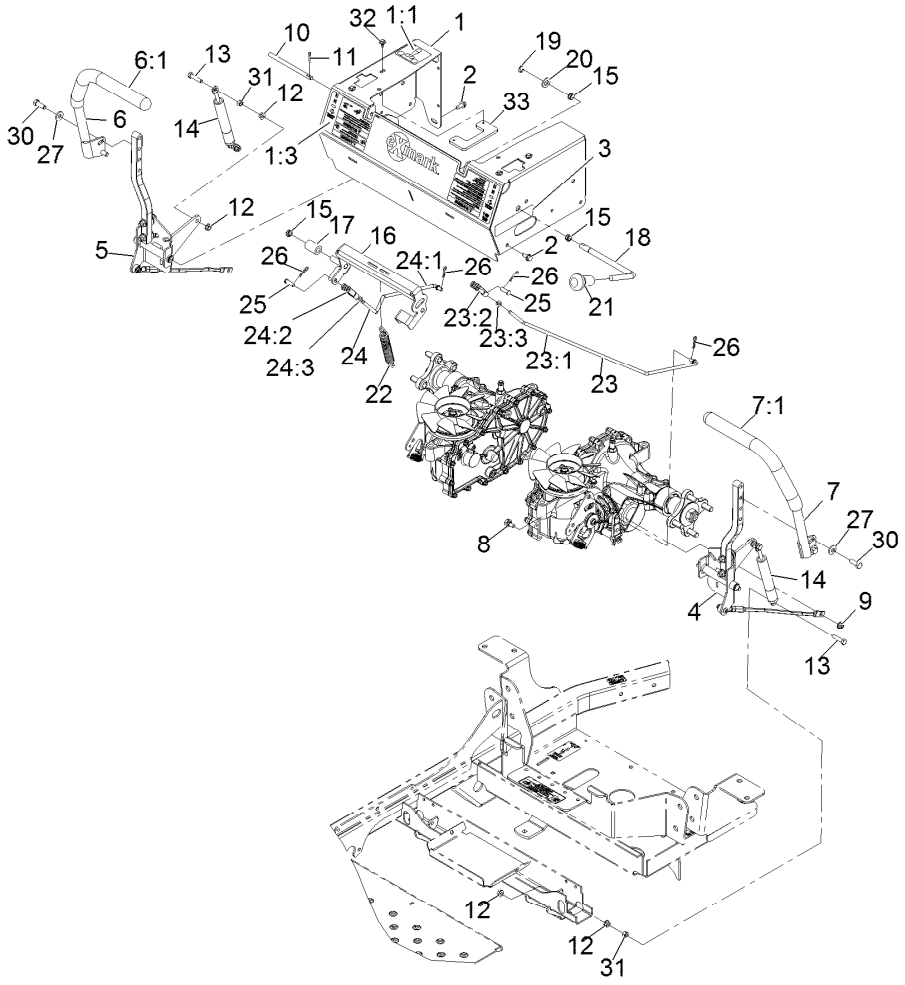


Motion Control Assembly

Ref.	Part Number	Qty.	Description
1	116-3188	1	ASM-Mot Ctrl Frm W/Dcl
1:1	109-6014	1	Decal-Belt Routing
1:3	116-4430	1	Decal-Front Panel
2	32144-70	6	Screw-HWH 5/16-18 X 3/4 Tf
3	116-3884	1	Decal-S-Series
4		1	Motion Control ASM-LH ●
5		1	Motion Control ASM-RH ●
6	119-3486	1	RH Handle ASM
6:1	108-6187	1	Grip
7	119-3485	1	LH Handle ASM
7:1	108-6187	1	Grip
8	37-8771	2	Screw-Shoulder 5/16-18 X 5/8
9	104-8300	2	Nut-Nyloc 5/16-18 Flg
10	109-3705	2	Pin-Control Pivot
11	3272-10	2	Pin-Cotter 1/8 X 3/4
12	32128-20	8	Nut-Whizlock 5/16-18
13	1-403180	4	Screw-HH 5/16-18 X 1 1/4 Sp
14	109-5957	2	Damper-Motion Control
15	116-1393	3	Bushing,Snap


Ref.	Part Number	Qty.	Description
16	116-6233	1	ASM-Brake Center Arm
17	109-5010	1	Spacer
18	116-3155	1	Handle,Brake
19	32120-47	1	Ring-Retaining
20	106-9888	1	Washer-Flat
21	106-7952	1	Knob
22	88-6130	1	Spring-Deck, Engagement
23	116-1165	1	Brake Linkage ASM-LH
23:1	116-1167	1	Linkage,Brake LH
23:2	1-303105	1	Yoke-Adjustable
23:3	3220-2	1	Nut-Jam 5/16-24
24	116-1166	1	Brake Linkage ASM-RH
24:1	116-1168	1	Linkage-Brake, RH
24:2	1-303105	1	Yoke-Adjustable
24:3	3220-2	1	Nut-Jam 5/16-24
25	1-808280	2	Pin-Clevis 5/16 X 1 49/64
26	1-806003	4	Hairpin-Cotter
27	98-5975	4	Washer-Spring Disc 3/8
30	323-6	4	Screw-HH 3/8-16 X 1
31	3217-6	4	Nut-Hex 5/16-18
32	46-8560	4	Screw-HHF 1/4-20 X 1/2
33	109-6214	2	Stop-Motion Control

● Not serviced separately

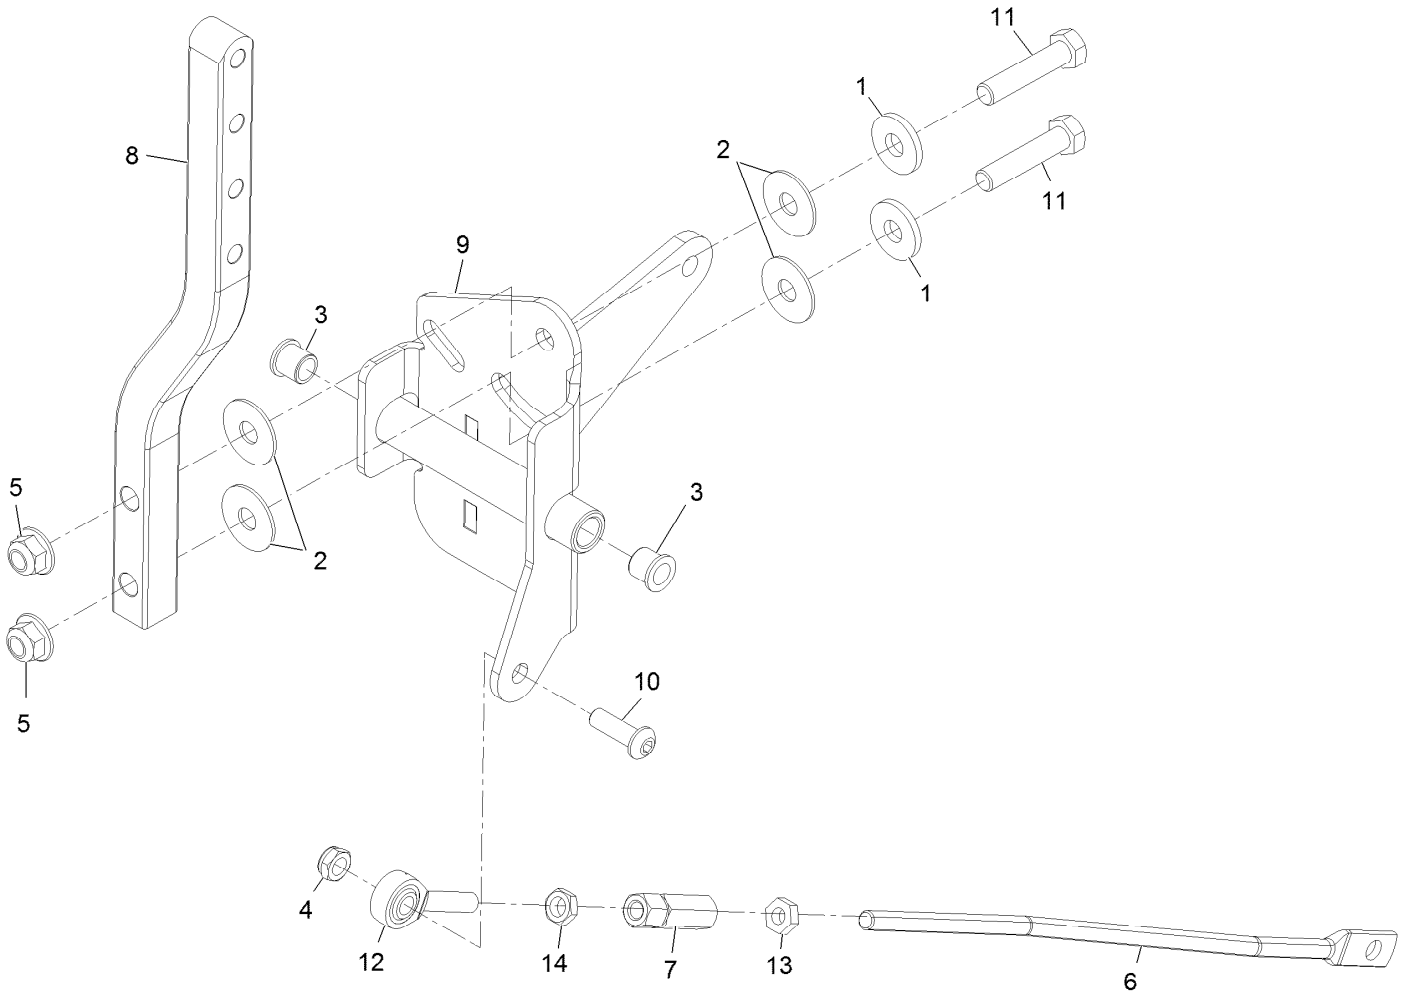


Motion Control Assembly - LH

Ref.	*Part Number*	*Qty.*	*Description*
1	5-0838	2	Washer
2	52-2900	4	Washer-Plastic
3	103-9928	2	Bearing
4	3296-47	1	Nut-Nyloc 5/16-18 Thin
5	104-8301	2	Nut-Nyloc 3/8-16 Flg
6	116-2543	1	Link,Motion Control
7	109-3728	1	Nut-Rod Adjustment
8	116-3183	1	Arm-Motion Control
9	116-5477	1	LH Control Pivot ASM
10	3274-104	1	Screw-Button Head 5/16-18 X 1
11	323-9	2	Screw-HH 3/8-16 X 1 3/4
12	2411-53	1	Balljoint LH
13	3220-2	1	Nut-Jam 5/16-24
14	3220-20	1	Nut-Jam 5/16-24 LH

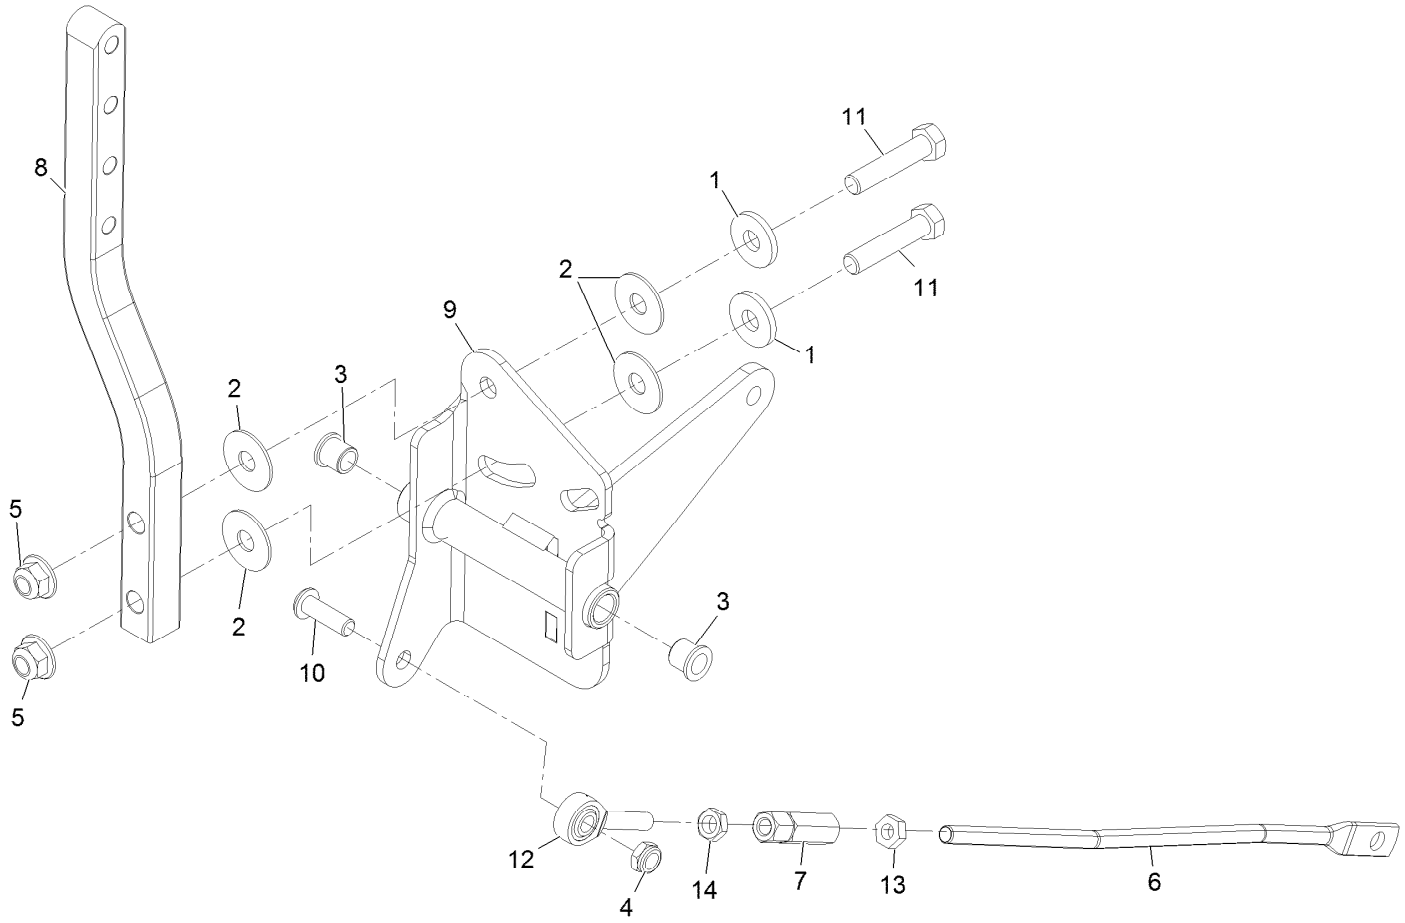


Motion Control Assembly - RH

Ref.	*Part Number*	*Qty.*	*Description*
1	5-0838	2	Washer
2	52-2900	4	Washer-Plastic
3	103-9928	2	Bearing
4	3296-47	1	Nut-Nyloc 5/16-18 Thin
5	104-8301	2	Nut-Nyloc 3/8-16 Flg
6	116-2543	1	Link,Motion Control
7	109-3728	1	Nut-Rod Adjustment
8	116-3183	1	Arm-Motion Control
9	116-5476	1	RH Control Pivot ASM
10	3274-104	1	Screw-Button Head 5/16-18 X 1
11	323-9	2	Screw-HH 3/8-16 X 1 3/4
12	2411-53	1	Balljoint LH
13	3220-2	1	Nut-Jam 5/16-24
14	3220-20	1	Nut-Jam 5/16-24 LH

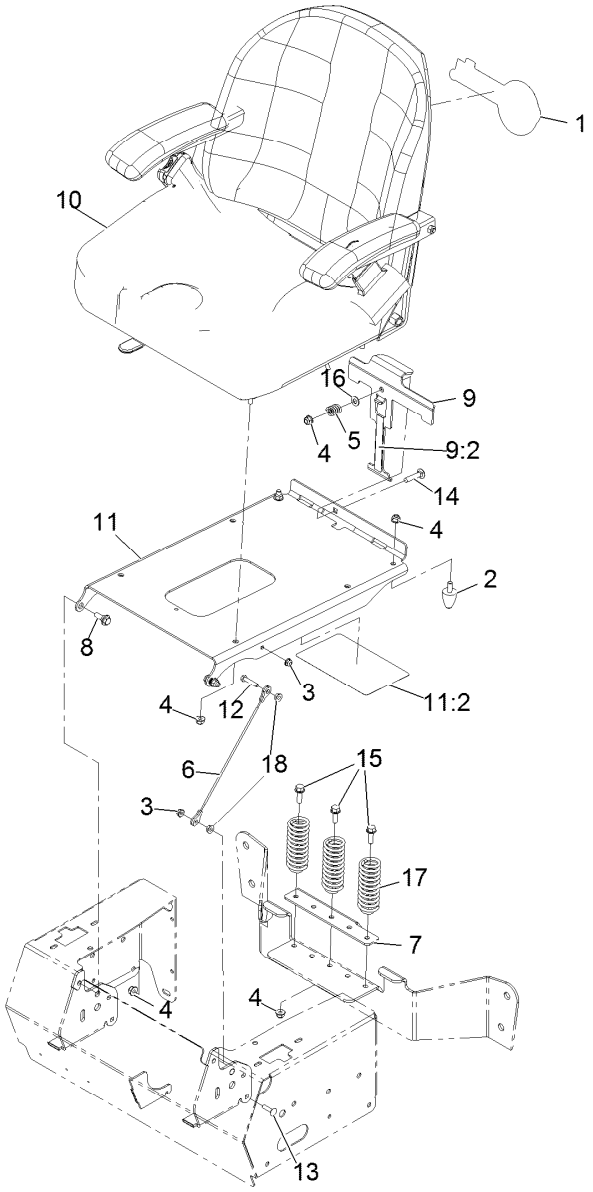


Seat Assembly

Ref.	Part Number	Qty.	Description
1	103-2882	1	Decal,Exmark Logo
2	103-9376	2	Bumper-Seat
3	104-7201	2	Nut-Nyloc 1/4-20 Flg
4	104-8300	12	Nut-Nyloc 5/16-18 Flg
5	107-3017	1	Spring-Compression
6	109-2628	1	Cable-Stop, Seat
7	116-0871	1	Catch,Seat Latch
8	116-1297	2	Screw-Shoulder
9	116-3121	1	ASM-Seat Latch
9:2	116-3120	1	Strip-Poly Wear
10	116-6192	1	Asm-Seat Service
11	116-4418	1	Plate, Seat W/Decals
11:2	109-6016	1	Decal-Service Aid
12	321-8	1	Screw-HH 1/4-20 X 1 1/4
13	3229-2	1	Bolt-Carriage 1/4-20 X 1
14	3230-4	1	Bolt-Carriage 5/16-18 X 1 1/2
15	3234-29	3	Screw-HH Flg 5/16-18 X 1
16	3256-23	1	Washer-5/16 Sae
17	92-7054	3	Spring-Compression
18	32128-33	2	Nut-Whizlock 1/4-20

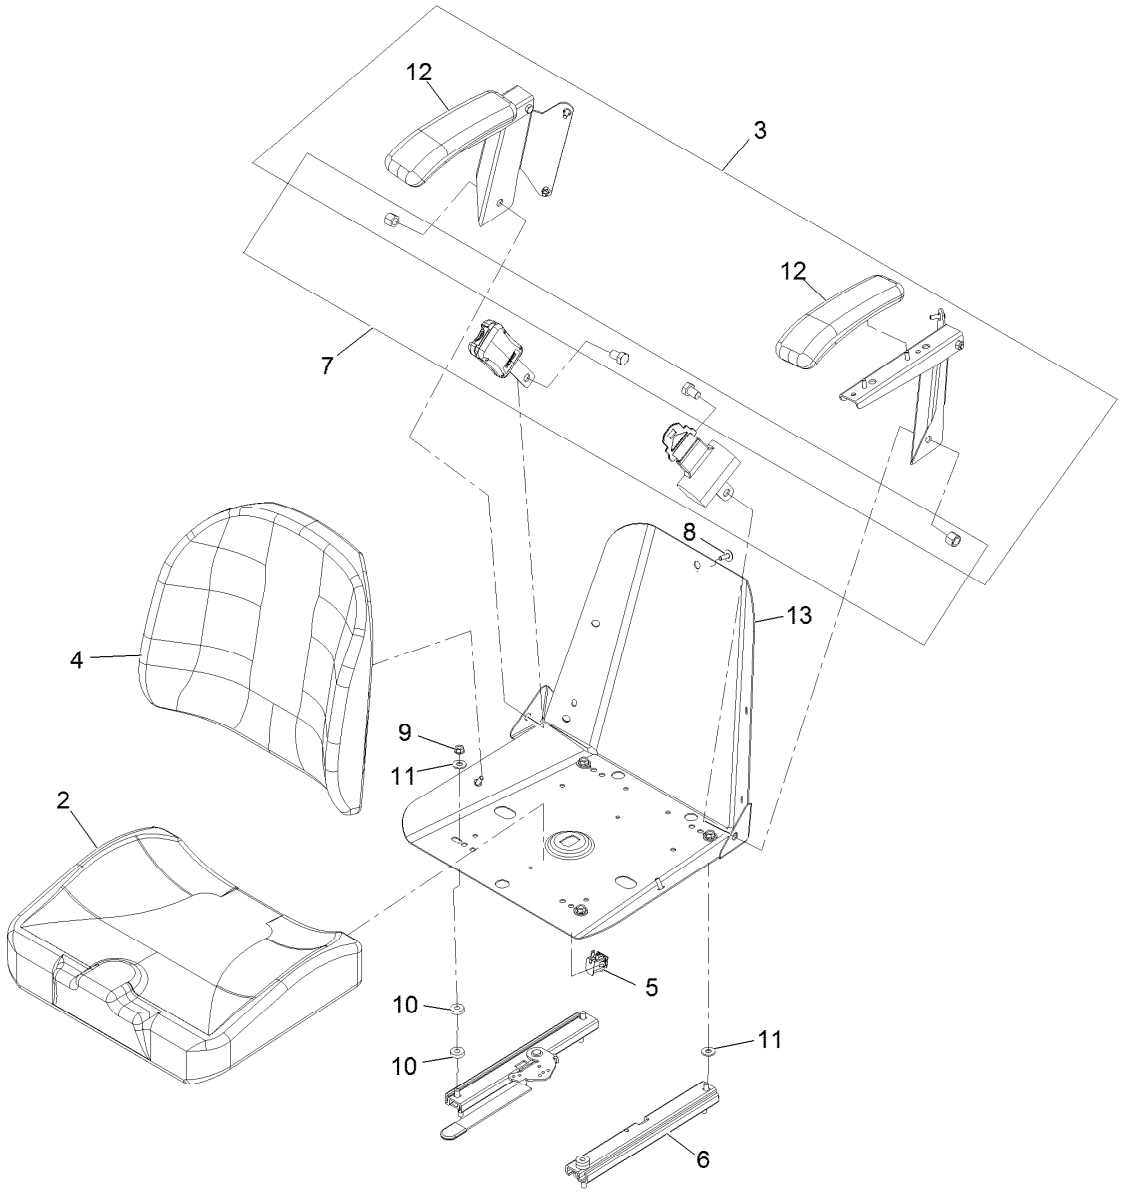

Seat W/Tracks Assembly No. 116-6192


Ref.	*Part Number*	*Qty.*	*Description*
2	116-7329	1	Cushion-Seat Bottom
3	110-5719	1	Armrest Kit
4	116-3738	1	Cushion,Seat Back
5	82-2190	1	Switch
6	1-643255	1	Track-Seat
7	116-2981	1	Seat Belt Kit
8	103-8383	7	Screw-HWH 1/4-20 X 3/4 Taptite
9	32128-20	4	Nut-Whizlock 5/16-18
10	26-4840	4	Spacer-Pin, Mounting
11	3256-3	6	Washer-5/16 Std
12	110-4163	2	Cushion-Rest, Arm
13	116-7496	1	Frame-Seat

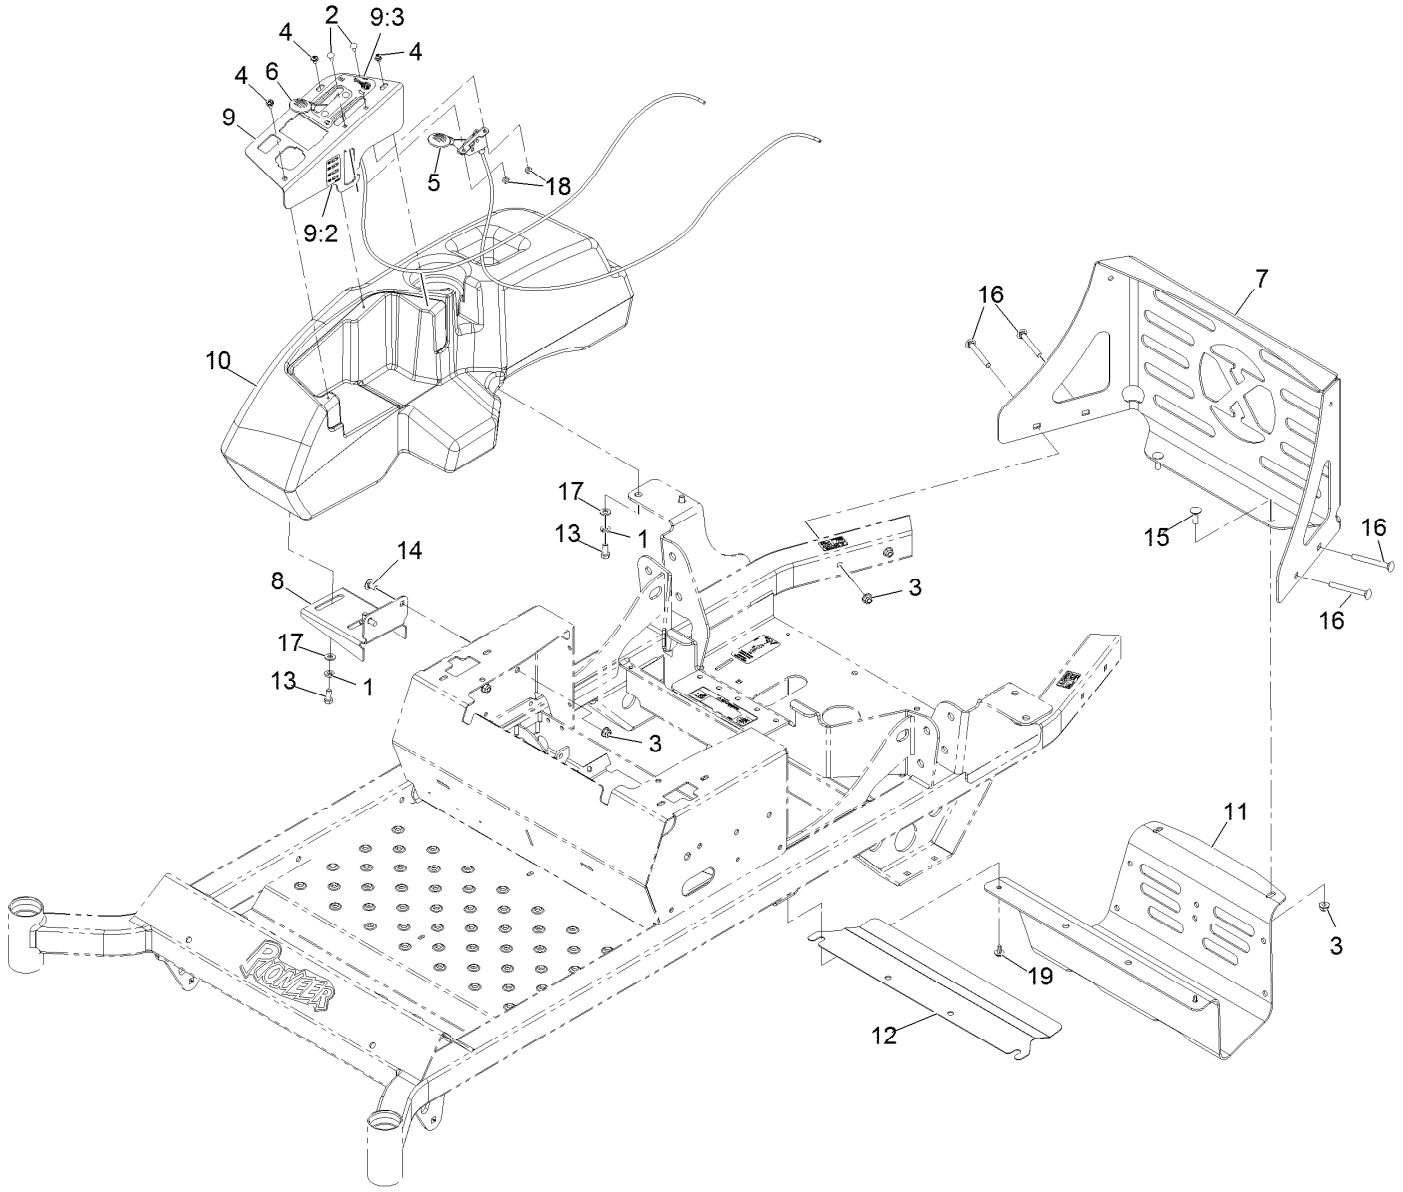

Controls Assembly

Ref.	Part Number	Qty.	Description
1	1-805005	4	Washer-Lock 5/16 Heavy
2	1-807513	4	Bolt-Carriage #10-24 X 1/2
3	104-8300	8	Nut-Nyloc 5/16-18 Flg
4	109-2661	3	Screw-PPH #10-24 X 1/2
5	116-4919	1	Control,Throttle
6	109-9147	1	Control-Choke
7	116-3453-03	1	Panel,Rear Guard
8	116-3495-03	1	Bracket-Tank And Fender
9	116-9051	1	ASM, Control Panel W/ Decal
9:2	116-1496	1	Decal,Fuse Block
9:3	116-4465	1	Decal-Throttle Choke

Ref.	Part Number	Qty.	Description
10	116-4138	1	Console,RH
11	116-4708-03	1	Guard-Muffler
12	116-6004-03	1	Shield-Heat Deflector
13	322-3	4	Screw-HH 5/16-18 X 3/4
14	3230-18	2	Bolt-Carriage 5/16-18 X 5/8
15	3230-2	2	Bolt-Carriage 5/16-18 X 1
16	3230-9	4	Bolt-Carriage 5/16-18 X 2 3/4
17	3256-23	4	Washer-5/16 Sae
18	3296-2	4	Nut-Nyloc #10-24
19	46-8560	2	Screw-HHF 1/4-20 X 1/2

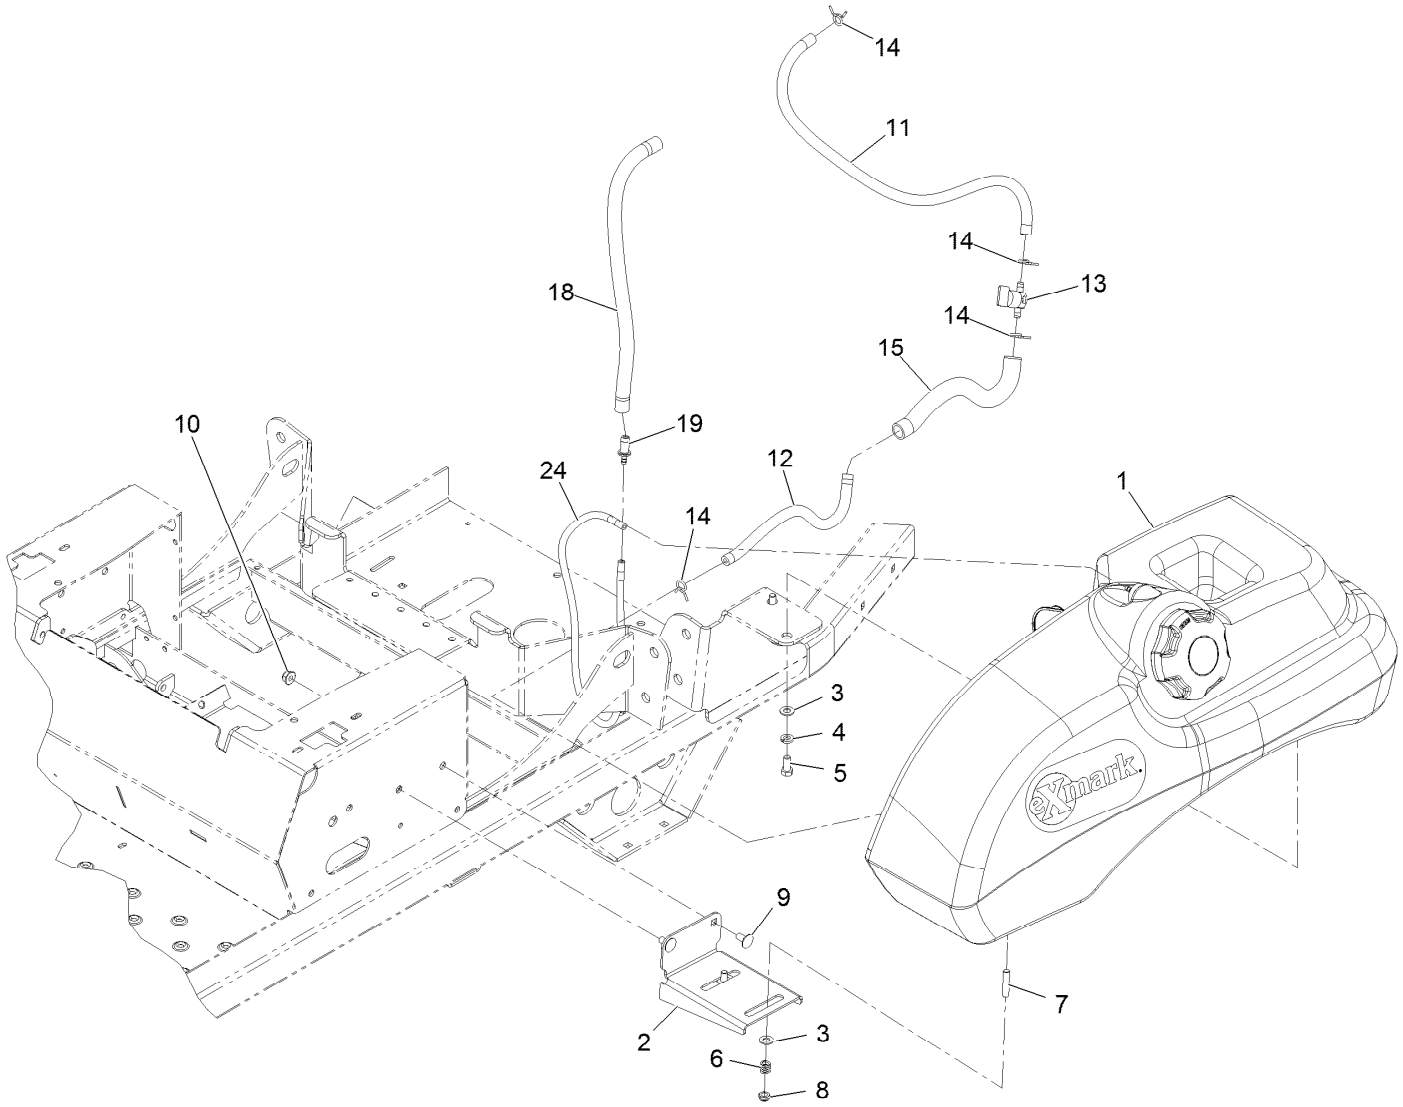


Fuel Tank Mounting Assembly

Ref.	Part Number	Qty.	Description
1	116-4610	1	ASM-Fuel Tank
2	116-3495-03	1	Bracket-Tank And Fender
3	3256-23	4	Washer-5/16 Sae
4	1-805005	2	Washer-Lock 5/16 Heavy
5	322-3	2	Screw-HH 5/16-18 X 3/4
6	1-633349	2	Spring-Compression
7	1-633023	2	Stud-Fuel Tank ●
8	3296-47	2	Nut-Nyloc 5/16-18 Thin
9	3230-18	2	Bolt-Carriage 5/16-18 X 5/8

Ref.	Part Number	Qty.	Description
10	104-8300	2	Nut-Nyloc 5/16-18 Flg
11	109-0301	1	Hose-Fuel
12	109-0282	1	Hose-Fuel
13	1-603770	1	Valve-Fuel
14	1-303077	4	Clamp-Fuel Line
15	116-4515	1	Conduit-Fuel Line
18	116-4344	1	Hose-Fuel
19	116-4630	1	Fitting-Straight Orifice
24	116-4802	1	Hose,Emissions


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

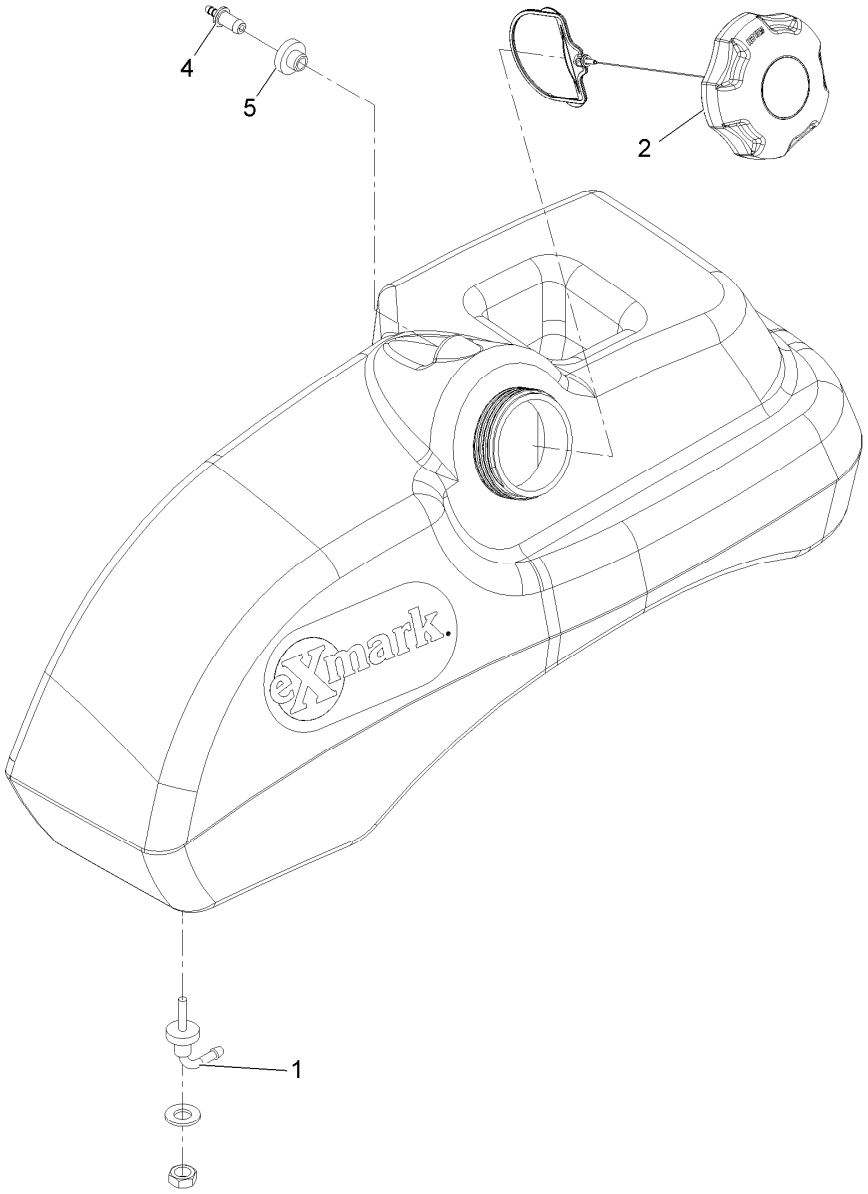

Fuel Tank Assembly No. 116-4610

Ref.	*Part Number*	*Qty.*	*Description*
1	103-2605	1	Fitting-Fuel Bulkhead W/Strainer ●
2	120-5461	1	Cap-Fuel, Ratcheting
4	116-4630	1	Fitting-Straight Orifice
5	46-6560	1	Bushing

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

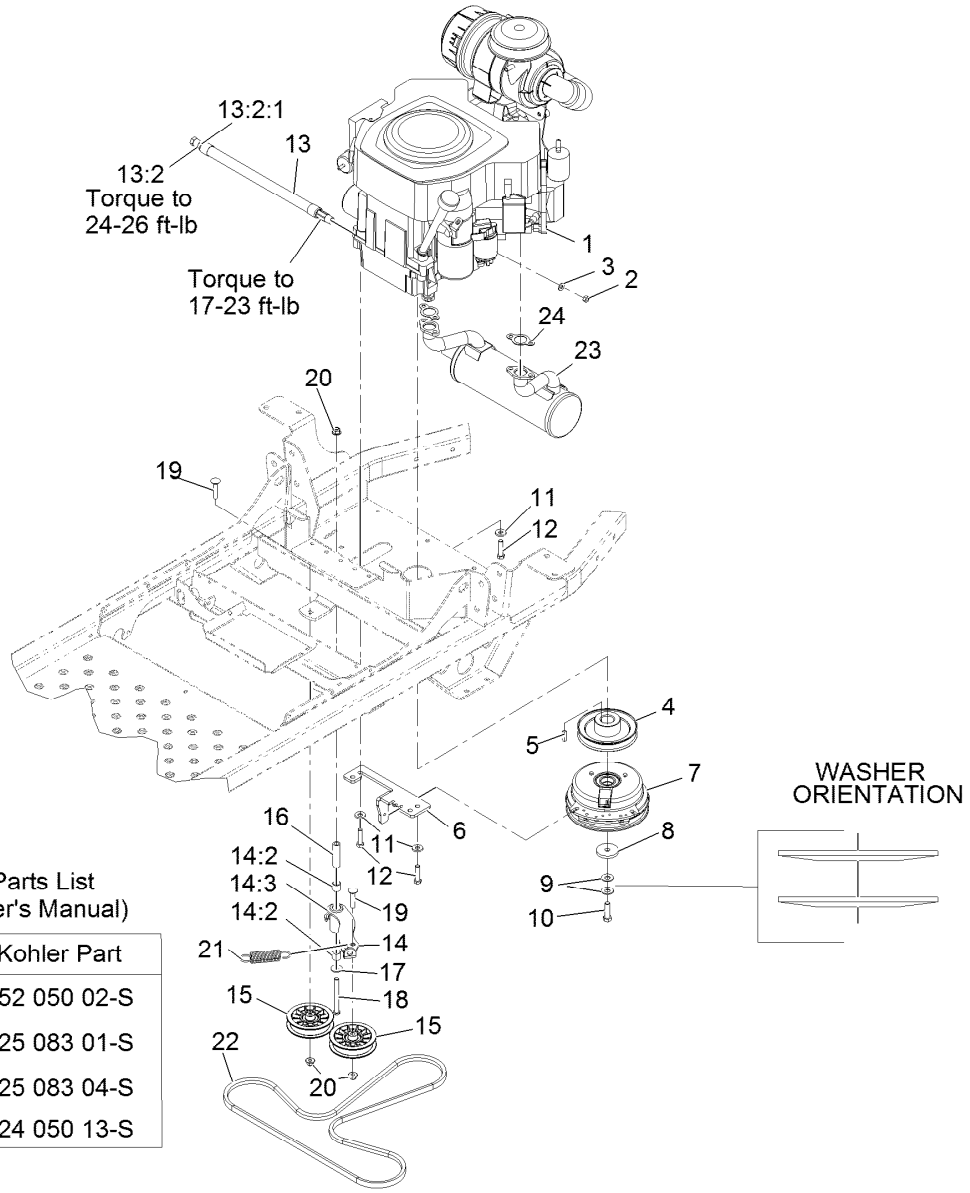

Kohler Replacement Parts List
(Refer To Engine Owner's Manual)


Description	Kohler Part
Engine Oil Filter	52 050 02-S
Engine Air Filter	25 083 01-S
Safety Filter	25 083 04-S
Fuel Filter	24 050 13-S

Engine Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1		1	Engine-Kohler ●■
2	3217-5	1	Nut-Hex 1/4-20
3	3256-22	1	Washer-1/4 Sae
4	116-1946	1	Sheave-Pump, Drive
5	1-807259	1	Key-Machine 1/4 X 1/4 X 1
6	116-4773-03	1	Anchor-Clutch
7	116-1604	1	Clutch
8	109-6919	1	Washer-Clutch
9	1-603610	2	Washer-Spring Disc 7/16
10	109-9761	1	Screw-HH 7/16-20 X 1 1/2 W/Loctite ▲
11	98-5975	4	Washer-Spring Disc 3/8
12	32144-102	4	Screw-HWH 3/8-16 X 1 1/2 Taptite
13	116-5316	1	Oil Drain Hose ASM

Ref.	*Part Number*	*Qty.*	*Description*
13:2	353-508	1	Plug-W/O-Ring
13:2:1	237-42	1	O-Ring
14	116-4729	1	ASM-Idler Arm W/Bearings
14:2	1-513034	2	Sleeve-Bearing
14:3	302-40	1	Zerk-90° 1/4-28
15	116-2456	2	Pulley-Flat, 3.50 Dia
16	1-603384	1	Bushing-Pivot, Idler
17	3256-4	1	Washer-3/8 Std
18	323-15	1	Screw-HH 3/8-16 X 3 1/2
19	3231-5	2	Bolt-Carriage 3/8-16 X 1 3/4
20	104-8301	3	Nut-Nyloc 3/8-16 Flg
21	1-603402	1	Spring-Extension
22	115-9613	1	V-Belt
23	116-6493	1	Muffler-Kohler Twin
24	110-6697	2	Gasket-Exhaust

● Not serviced separately
■ Obtain parts from www.kohlerplus.com
▲ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

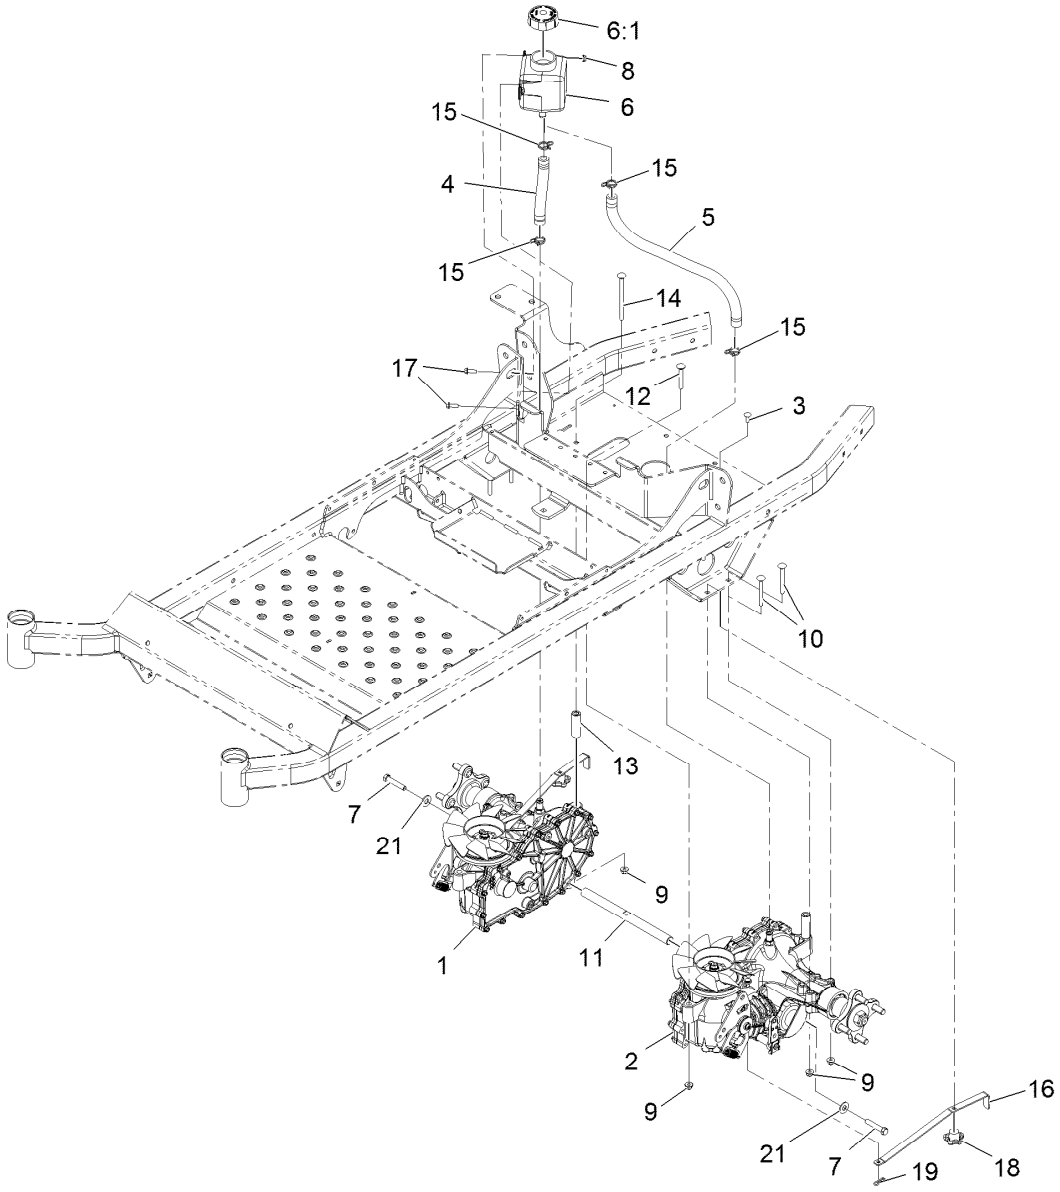


Hydraulic Assembly

Ref.	Part Number	Qty.	Description
1	116-6007	1	Transaxle ASM
2	116-6008	1	Transaxle ASM
3	3229-1	2	Bolt-CARR
4	116-5641	1	Hose-Hydraulic
5	116-5642	1	Hose-Hydraulic
6	109-2250	1	Vent-Tank, Hydro
6:1	109-3320	1	Cap-Reservoir, HYD
7	94-7972	2	Screw-HH W/Loctite ●
8	104-7201	2	Nut-HF
9	104-8300	8	Nut-Flange, NI
10	3230-9	4	Screw-CARR

Ref.	Part Number	Qty.	Description
11	116-6833	1	Shaft-Spacer
12	3230-7	2	Bolt-CARR
13	116-5809	2	Spacer-Hydro
14	3230-30	2	Screw-CARR
15	126-0327	4	Clamp-Hose
16	109-5395	2	Arm-Hydro Bypass
17	32105-15	2	Screw-HWH
18	108-6402	2	Knob-Handle
19	1-806003	2	Pin-Cotter, Hair
21	3256-4	2	Washer-Flat


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

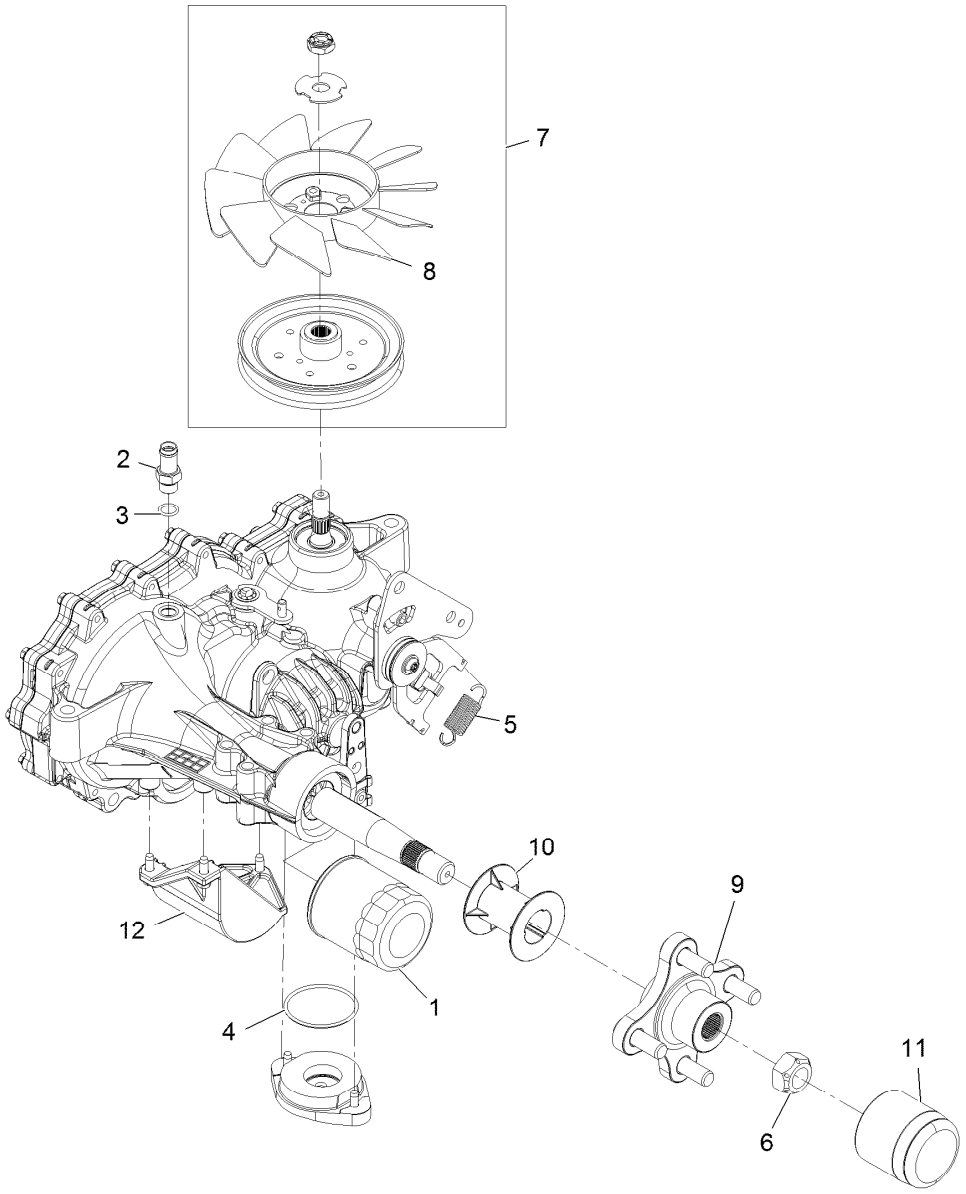

Transaxle Assembly

Ref.	*Part Number*	*Qty.*	*Description*
1	109-3321	1	Filter-Hydraulic
2	109-3278	1	Adapter-Straight
3	237-42	1	O-Ring
4	109-3540	1	O-Ring-Charge Seal Cover
5	109-5592	1	Spring
6	109-3536	1	Nut-Hub
7	109-5938	1	Fan And Pulley Kit
8	114-8453	1	Fan-7.0
9	116-3872	1	Hub-Offset
10	116-6213	1	Tube-Axle 2.04
11	116-6214	1	Cap-Long Axle
12	120-7979	1	Guard-Filter, LH
99	109-3537	1	Complete Seal Kit ●

● Not illustrated

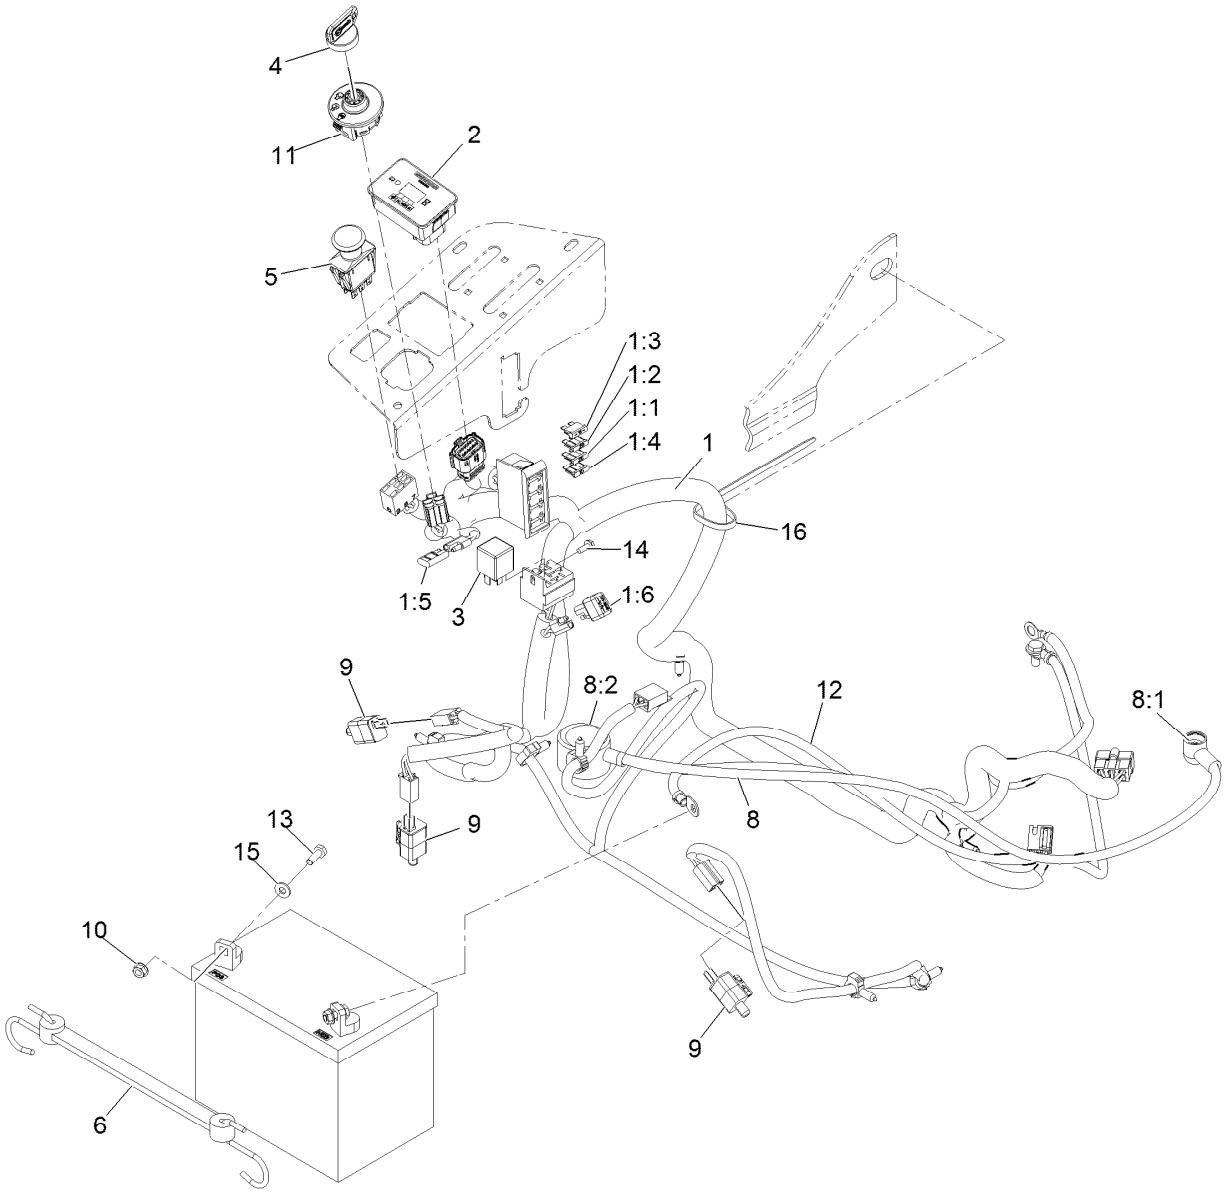

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	116-4861	1	Harness, Wire ●
1:1	109102	1	Fuse-Blade, 25 Amp
1:2	1-816001	1	Fuse-Blade Type, 20 Amp
1:3	109355	1	Fuse-Blade, 15 Amp
1:4	218-578	1	Fuse-Blade, 10 Amp
1:5	116-0053	1	Cap-Plug
1:6	103-3895	1	Diode-Tvs
2	116-5609	1	Module ASM
3	1-643275	1	Relay-12Vdc 40 Amp
4	1-603511	1	Key-Ignition
4	103-2106	1	Key-Exmark Logo
5	103-5221	1	Switch-PTO
6	104-2466	1	Holddown-Battery

Ref.	Part Number	Qty.	Description
8	109-7630	1	Positive Battery Cable ASM
8:1	109-2407	1	Insulator-Battery
8:2	1-543393	1	Insulator-Solenoid
9	110-6765	3	Switch-Single Pole No
10	32128-33	2	Nut-Whizlock 1/4-20
11	117-2221	1	Switch-Ignition
12	117-7240	1	Cable-Battery, Negative
13	321-4	2	Screw-HH 1/4-20 X 3/4
14	32144-1	1	Screw-HWH #10-24 X 1/2 Taptite
15	3256-22	2	Washer-1/4 Sae
16	1-303335	1	Tie-Cable 7 15/16 (Large)

● Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:

Notes:

Notes:

EXMARK® MAINTENANCE

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK.

4-CYCLE PREMIUM ENGINE OIL
Part No. 116-3373

Both SAE 30 and SAE 10W-30 in one bottle.

Contains increased levels of zinc and phosphorus for better lubricity.

No Viscosity Index Improvers that tend to shear down in high heat.

Synthetic formulation.

Gas & Diesel compatible.

Anti-corrosion additives.


API 'SL' and JASO rated with wet clutch compatibility for other machines.

PREMIUM HYDRO OIL
Part No. 109-9828

Commercial quality for tough, high-heat conditions.

Designed specifically for zero-turn mower hydraulic systems.

Superior shear resistance under heavy loads.

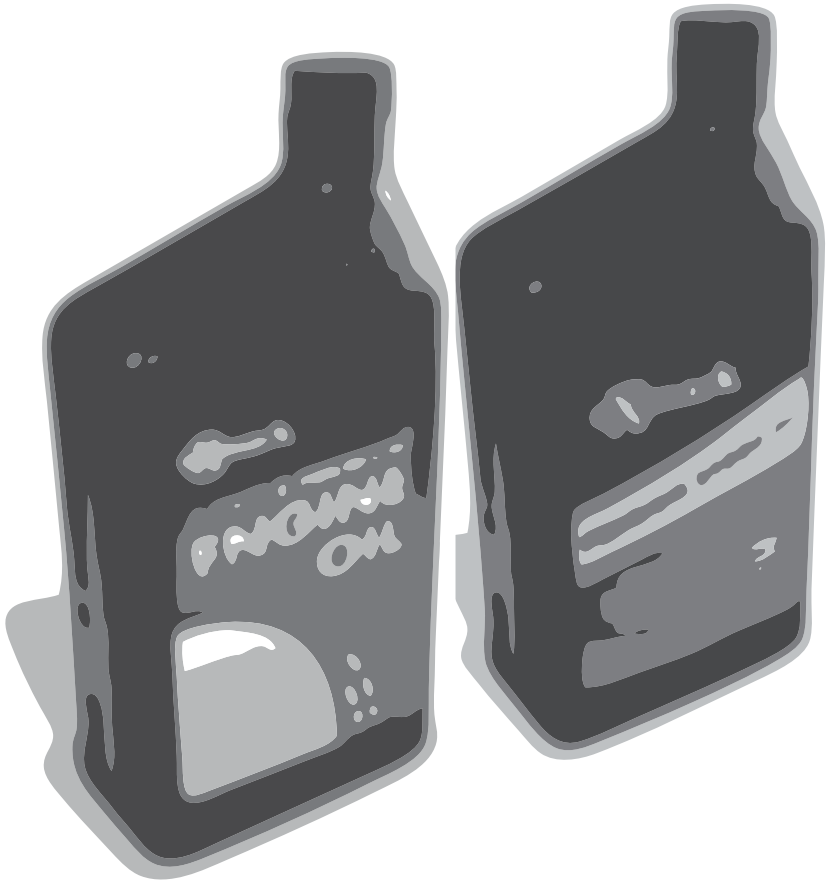

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2013 Exmark Mfg. Co., Inc.
All Rights Reserved

Industrial Park Box 808
Beatrice, NE 68310
(402) 223-6285
Fax (402) 223-5489

Part No. 4501-473 Rev. B
Printed in the USA.

www.exmark.com