



Form No. 3375-263 Rev B

Count on it.

Parts Catalog

TimeMaster 76cm Lawn Mower

Model No. 20977—Serial No. 313000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: Liquefied Petroleum Gas

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Contents

Deck and Frame Assembly 4

Belt, Spindle and Blade Assembly 5

Side Discharge Chute Assembly 6

Bag Assembly 7


Engine and Pulley Assembly 8

Front Wheel and Axle Assembly 9

Handle Assembly 10

Transmission, Rear Wheel and Height-of-Cut Assembly 12

Attachments and Accessories 13

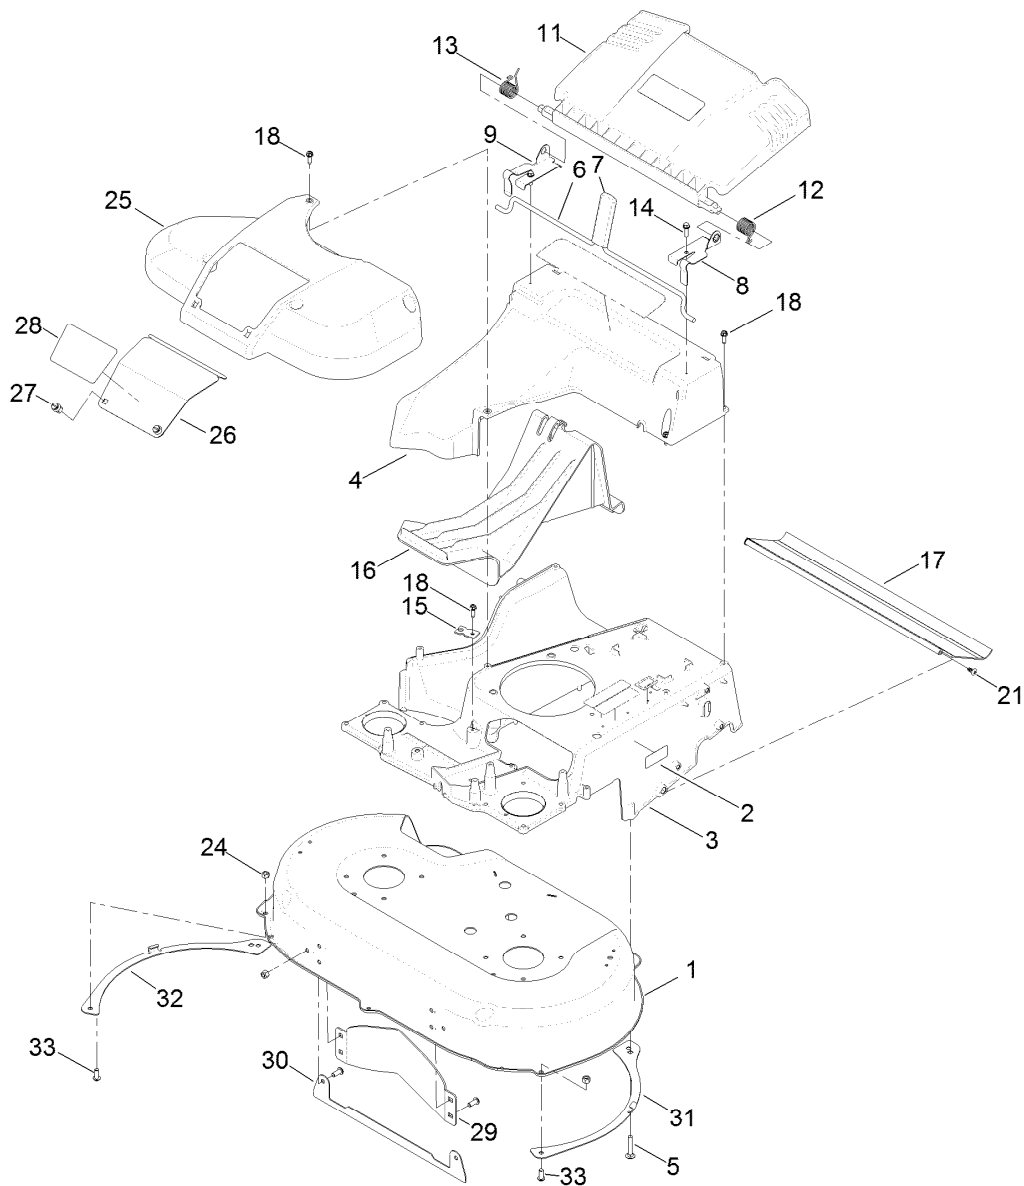


Deck and Frame Assembly

Ref.	Part Number	Qty.	Description
1	125-2534	1	Housing ASM
2	121-5684	1	Decal-Location, Service Dealer
3	121-9198-01	1	Frame
4	120-3336	1	Chute
5	3230-5	2	Screw-CARR
6	120-3344	1	Rod-Release, Handle
7	120-7018	1	Grip-Lever
8	121-9114	1	Bracket-Door, LH
9	121-9115	1	Bracket-Door, RH
11	120-7048	1	Rear Deflector ASM
12	115-2859	1	Spring-Torsion
13	114-7924	1	Spring-Torsion
14	46-8091	2	Screw-HWH
15	107-7497	1	Bracket-Cable, Traction

Ref.	Part Number	Qty.	Description
16	120-5225	1	Plug-Mulch
17	120-6241	1	Shield-Trailing
18	49-2040	9	Screw-HWHTF
21	117-1092	2	Screw-PTH
24	3296-29	4	Nut-Lock, NI
25	121-5810	1	Cover-Belt
26	121-5793-03	1	Door-Access
27	121-5840	2	Fastener-Quarter Turn
28	125-2507	1	Decal-Access Panel
29	116-5588-01	1	Baffle-Flow Control
30	125-5081-01	1	Plate-Deck
31	120-7085-03	1	Skid-LH
32	120-9488-03	1	Skid-RH
33	3274-55	2	Screw-HSBH
99	125-5072	1	Frame Plate Kit ●


● Not illustrated

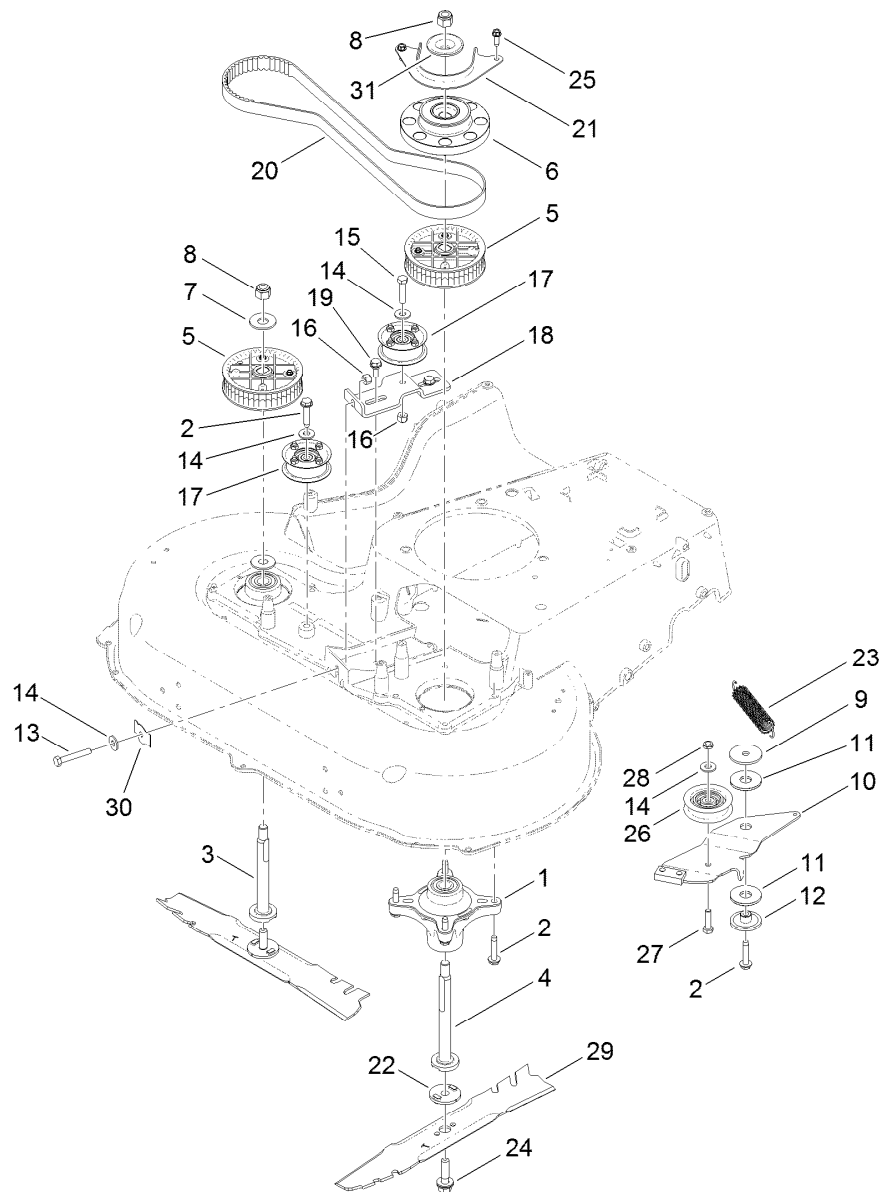

Belt, Spindle and Blade Assembly


Ref.	Part Number	Qty.	Description
1	120-6234	2	Spindle ASM
2	32144-57	10	Screw
3	120-5234	1	Shaft-Spindle
4	120-5235	1	Shaft-Spindle
5	121-9100	2	Sprocket
6	120-3334	1	Pulley-Brake, Spindle
7	109-9505	1	Washer-Spring
8	3296-19	2	Nut-Hex
9	63-7400	1	Washer-Rebound
10	120-6242	1	Arm-Brake
11	121-2305	2	Washer-Friction, Composite
12	120-9490	1	Spacer
13	9114524	1	Bolt-TAP, HH
14	3256-3	4	Washer-Flat
15	322-7	1	Screw-HH
16	3296-29	2	Nut-Lock, NI

Ref.	Part Number	Qty.	Description
17	121-5763	2	Pulley
18	120-3348	1	Bracket-Idler
19	120-7024	2	Screw-Shoulder, HHF
20	120-3335	1	Belt-Synchronous
21	120-5245-03	1	Guide-Belt, Spindle
22	120-5236	2	Adapter-Blade
23	121-5808	1	Spring-Extension, Brake
24	125-2466	2	Bolt-Blade
25	49-2040	2	Screw-HWHTF
26	120-7082	1	Pulley-Idler
27	322-6	1	Screw-HH
28	3296-47	1	Nut-Lock, NI
29	120-9500-03	2	Blade-15.4
30	121-2336	1	Spring-Flat
31	125-2544	1	Washer-Cup

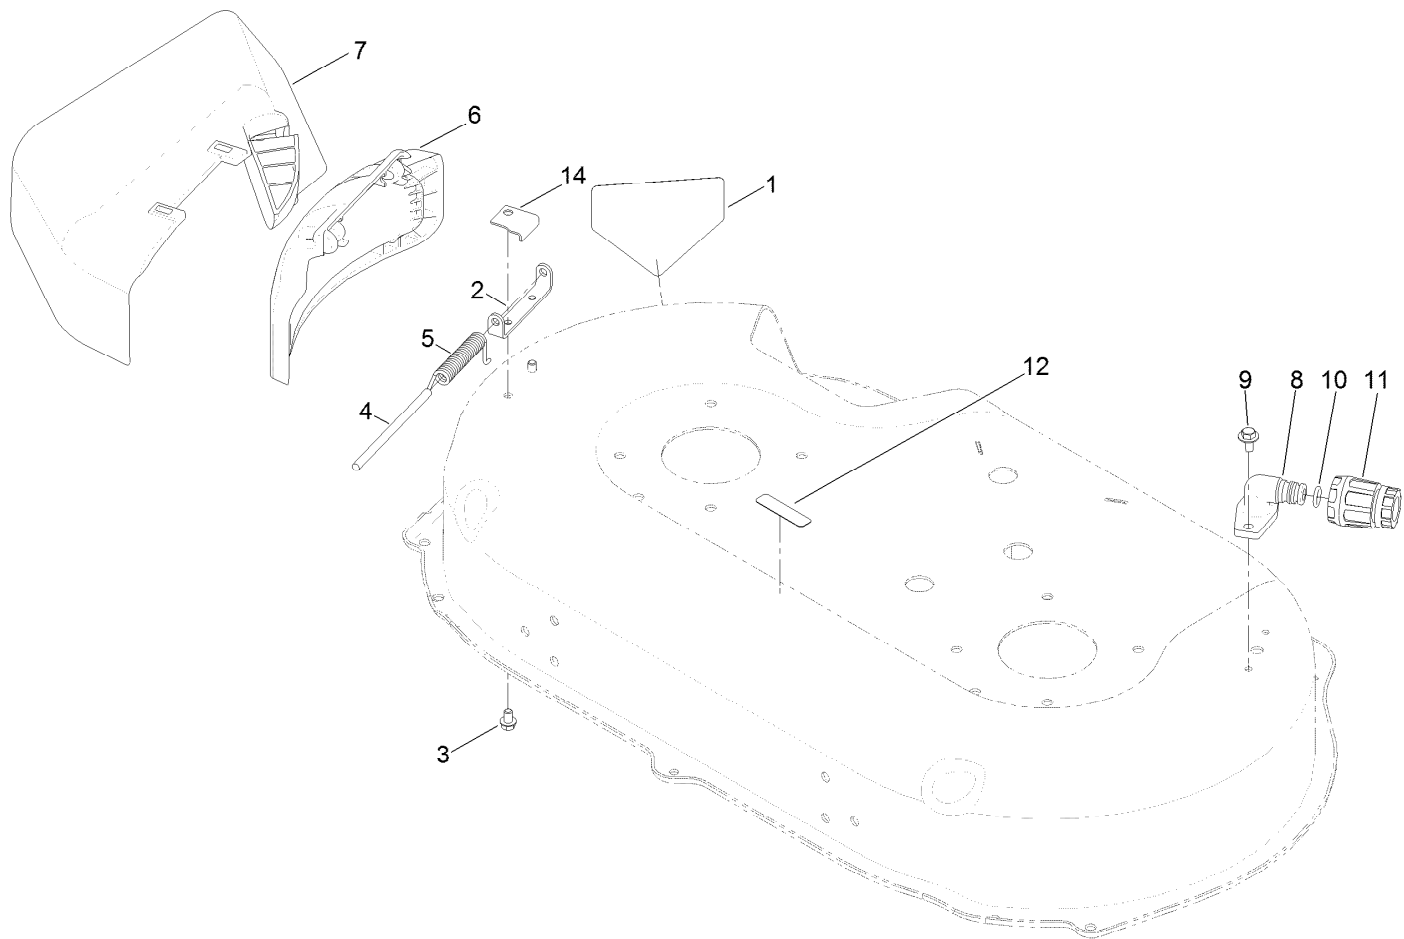


Side Discharge Chute Assembly

Ref.	Part Number	Qty.	Description
1	112-8760	1	Decal-Danger
2	112-6416	1	Bracket-Cover
3	99-8445	2	Screw-HWH
4	99-5291	1	Rod-Cover
5	121-5843	1	Spring-Torsion, Cover
6	121-9197	1	Deflector-Side
7	125-5084	1	Side Discharge Chute ASM
8	95-2747	1	Fitting-Washout
9	46-8560	2	Screw-HHFTF
10	46-6290	1	O-Ring, Seal
11	95-3270	1	Connector-Hose
12	120-9570	1	Decal-Warning
14	121-5842	1	Plate-Spring

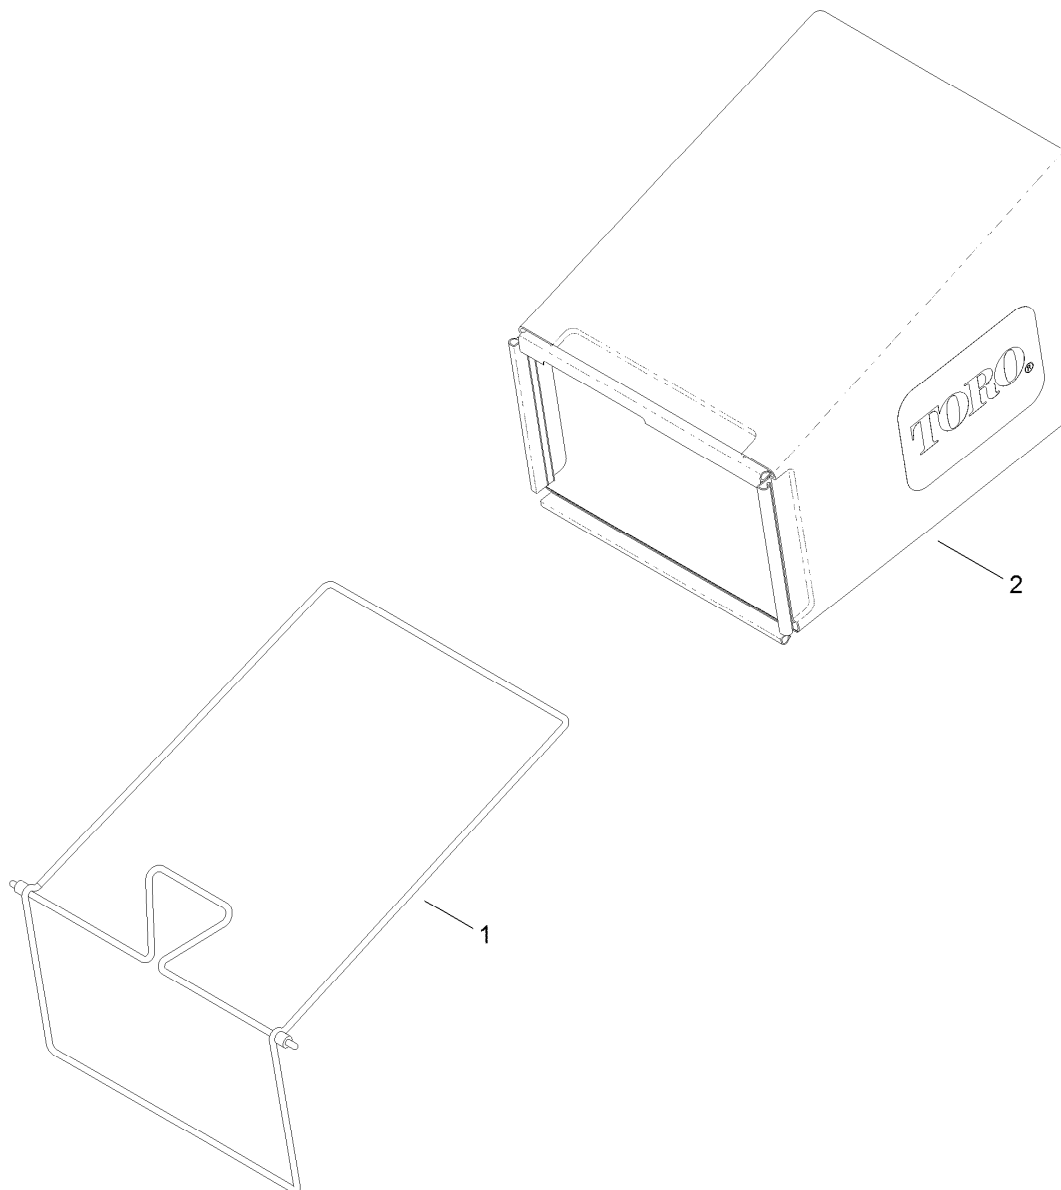

Bag Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	121-5766-03	1	Frame-Bag
2	121-5770	1	Bag-Grass

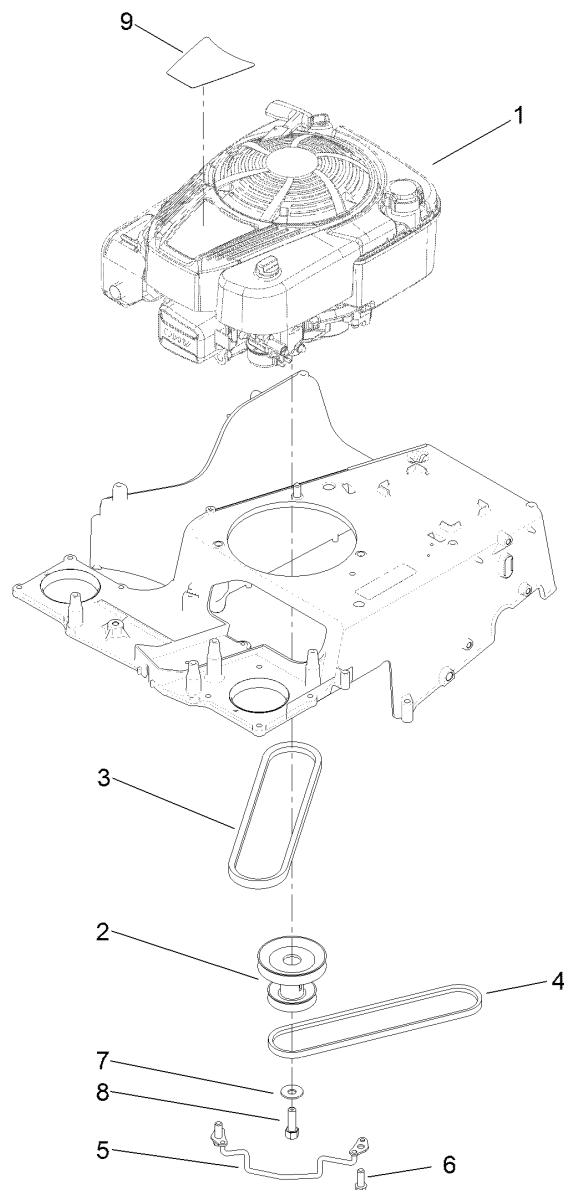


Engine and Pulley Assembly

Ref.	Part Number	Qty.	Description
1		1	Engine-Briggs 875 ●■
2	120-3333	1	Pulley-Engine
3	121-5765	1	V-Belt
4	120-9470	1	V-Belt, Traction
5	120-7077	1	Guide-Belt
6	95-1726	3	Screw-Taptite
7	3290-465	1	Washer-Belleville
8	26-0671	1	Screw-HH
9	125-2506	1	Decal-Shroud

● Not serviced separately


■ Obtain parts from www.briggsandstratton.com

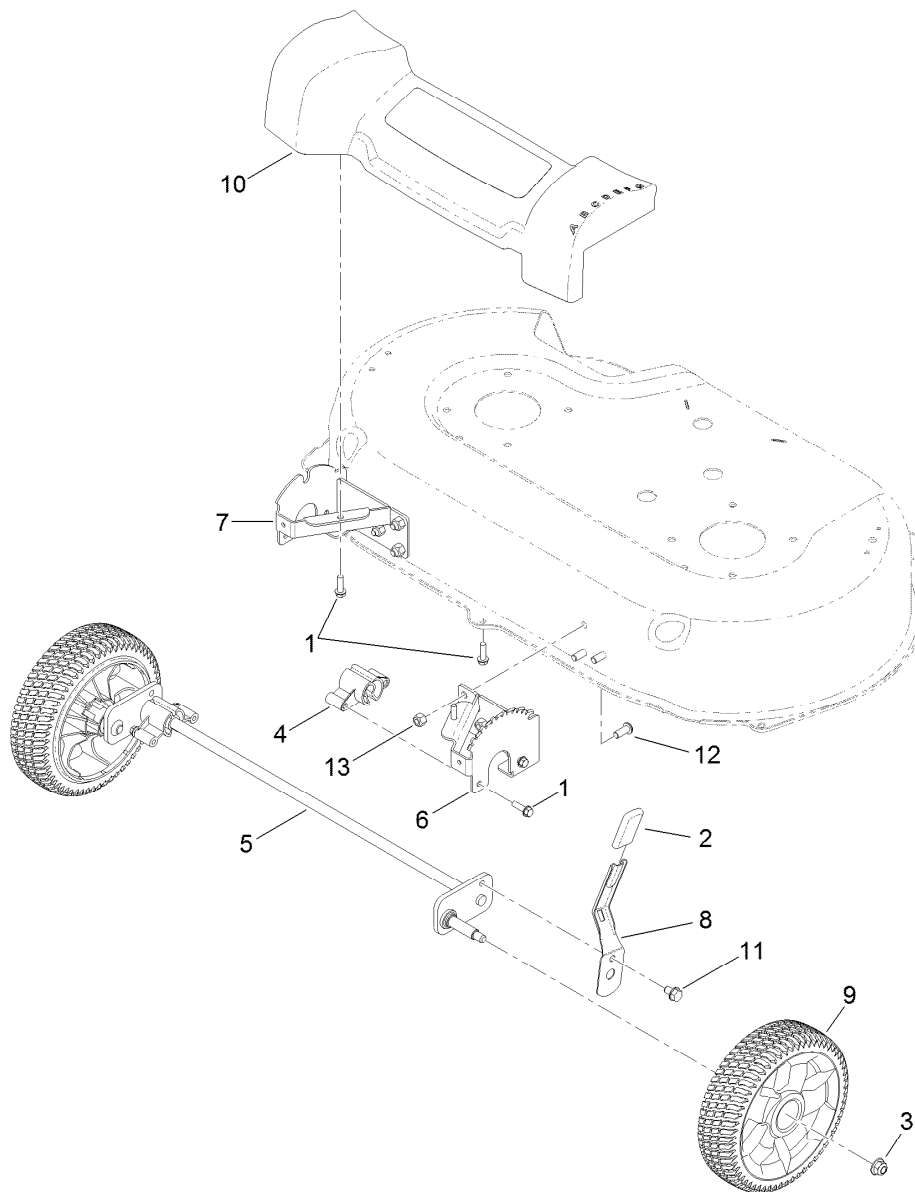

Front Wheel and Axle Assembly


Ref.	Part Number	Qty.	Description
1	46-8091	7	Screw-HWH
2	120-9535	1	Grip-Lever
3	104-8301	2	Nut-Flange, NI
4	125-2495	2	Bushing-Pivot, Front
5	125-5061	1	Axle-Front
6	120-7037-03	1	Plate-HOC, LH
7	120-7038-03	1	Plate-HOC, RH
8	120-7043	1	Arm-Spring
9	125-2510	2	8 Inch Wheel ASM
10	125-5027	1	Front Cover ASM
11	700057	1	Screw-HWH
12	3274-55	6	Screw-HSBH
13	3296-29	6	Nut-Lock, NI

Handle Assembly

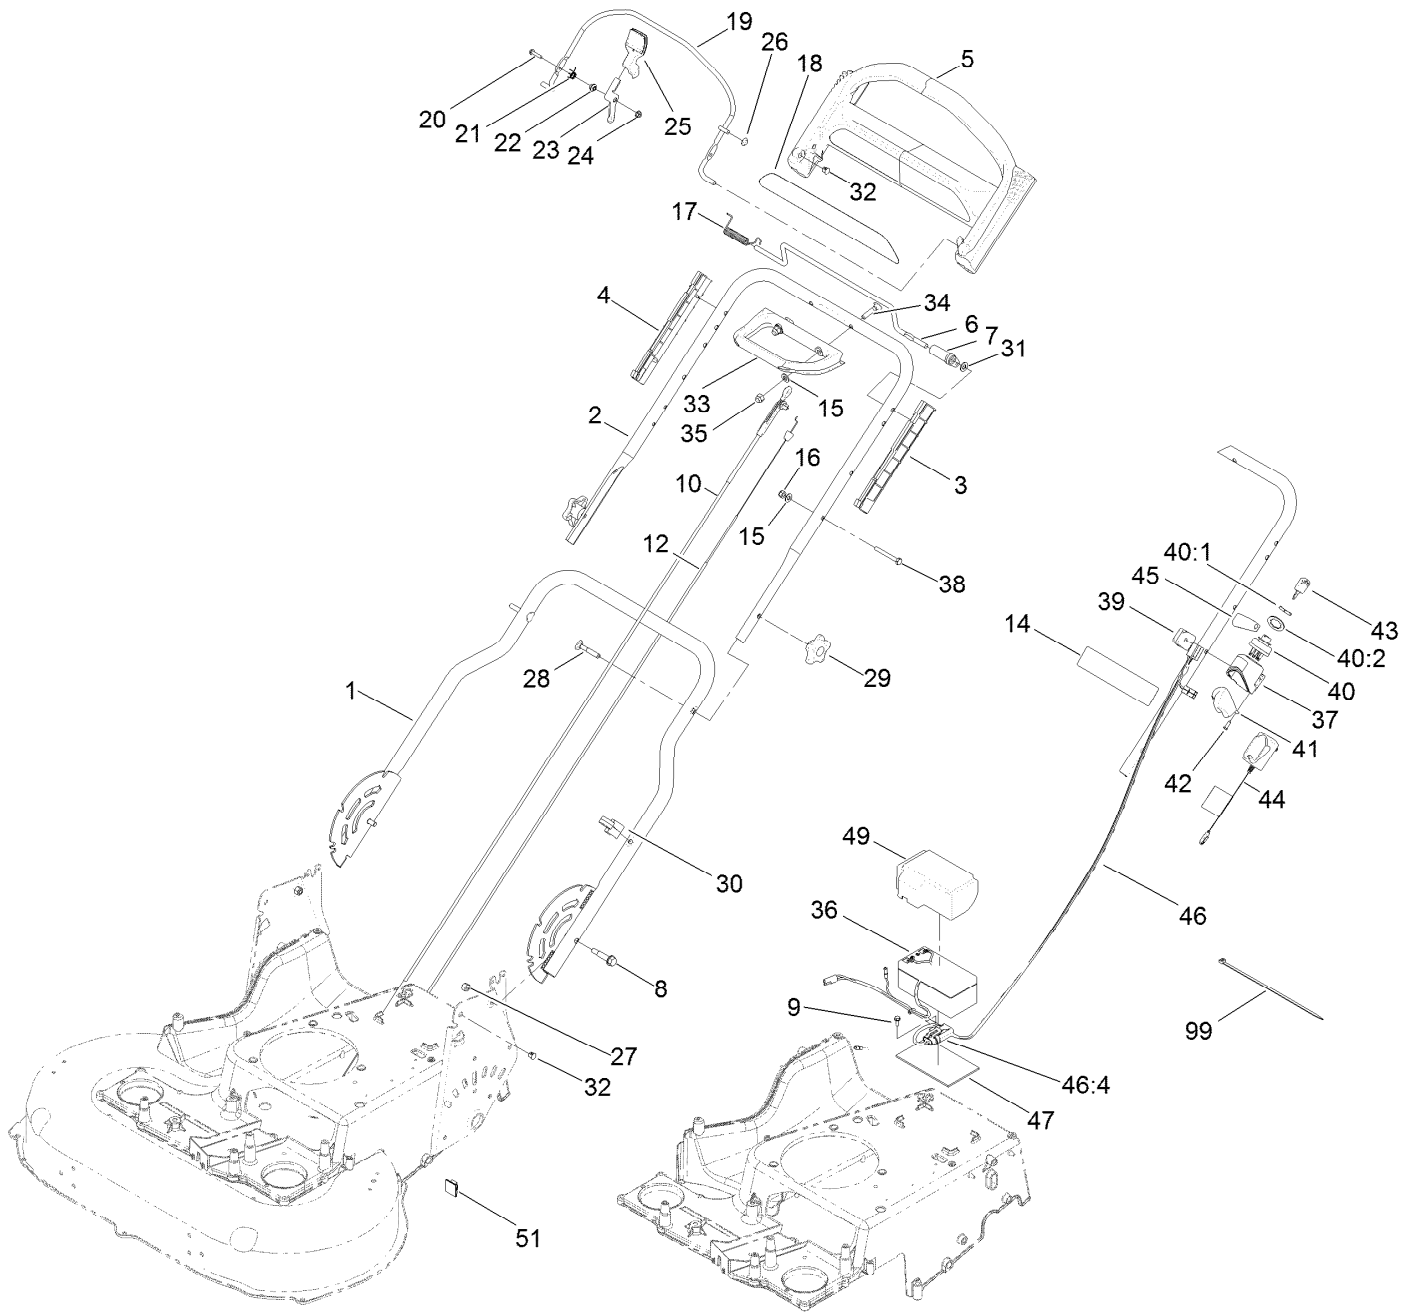

Handle Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	125-5058-05	1	Handle-Lower	29	117-5976	2	Knob-Handle
2	121-5783-05	1	Handle-Upper	30	114-7988	1	Guide-Cable
3	105-6842	1	Guide-LH	31	3256-23	1	Washer-Flat
4	105-6841	1	Guide-RH	32	104-9368	3	Plug-Dome
5	104-8678	1	Handle-Control	33	120-7087	1	Handle-Assist, Traction
6	99-1588	1	Bar-Control, Traction	34	92-4095	2	Screw-Handle
7	99-1589	1	Lever-Traction	35	125-5028	2	Nut-Hex, Nylon Cap
8	120-7025	2	Bolt-Shoulder, HHF	36	106-8397	1	Battery
9	32144-1	1	Screw-Taptite	37	108-3795	1	Housing-Switch, Key
10	120-6243	1	Cable-Brake, BBC	38	321-50	1	Screw-HH
12	120-6244	1	Cable-Traction	39	92-7729	1	Anchor-Cable, Upper
14	104-7953	1	Decal	40	23-0660	1	Switch-Starter
15	3256-1	1	Washer-Flat	40:1	218-461	1	Nut-HH
16	3296-73	1	Nut-Lock, NI	40:2	3254-5	1	Washer-Tooth, Internal
17	121-9118	1	Spring-Torsion	41	108-3796	1	Cover-Swtch
18	120-3911	1	Decal-Ads, Handle	42	32144-111	2	Screw-PPH
19	108-3788-03	1	Bail-Brake	43	700918	1	Key
20	106-9169	1	Screw-HWH	44	120-3947	1	Charger-Ce
21	107-7462	1	Spring-Torsion	45	108-9751	1	Decal-Switch, Ignition
22	107-7463	1	Spacer	46	117-0070	1	Harness-Wire
23	106-6802	1	Lever	46:4	99-6124	1	Fuse-Blade, 40 Amp
24	32128-17	1	Nut-Lock, Flange	47	108-0987	1	Foam-Battery
25	112-8884	1	Knob-BBC	49	120-3329	1	Cover-Battery
26	3290-337	1	Nut-Speed	51	125-2545	1	Clip-Conduit
27	3296-29	2	Nut-Lock, NI	99	614249	2	Tie-Cable
28	92-2260	2	Screw-Handle				

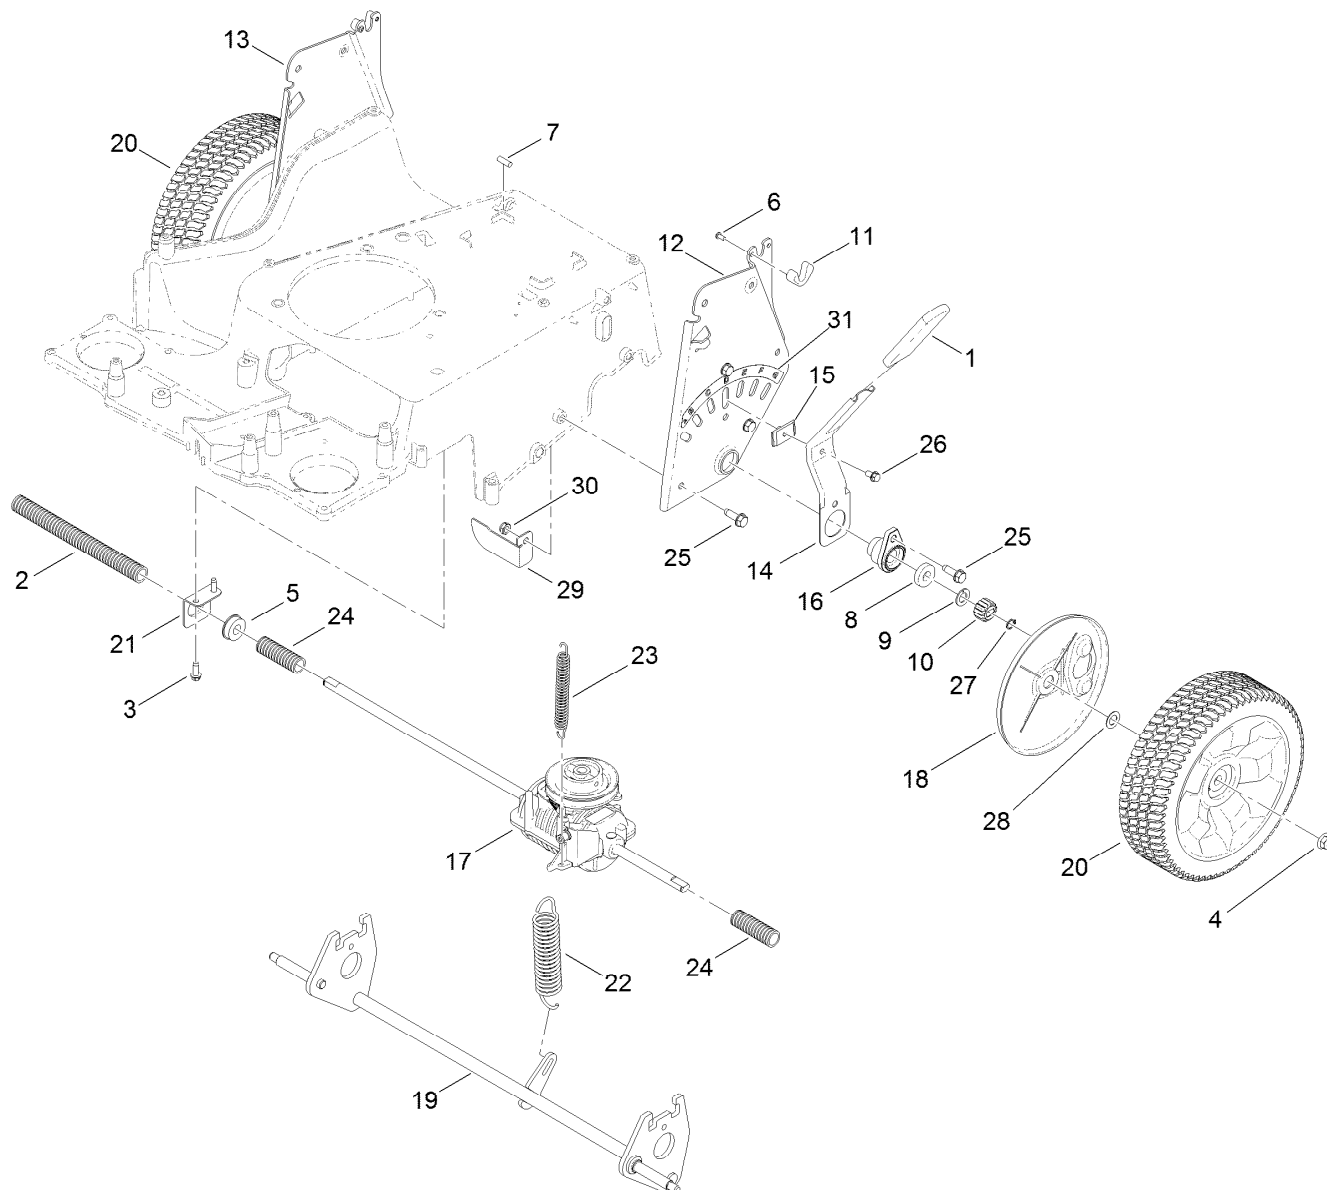

Transmission, Rear Wheel and Height-of-Cut Assembly

Ref.	Part Number	Qty.	Description
1	1-633295	1	Grip-Lever, Lift
2	121-5799	1	Conduit-Convolute
3	49-2040	2	Screw-HWHTF
4	104-8301	2	Nut-Flange, NI
5	104-8699	1	Bearing-Ball
6	105-9437	2	Screw-PPH
7	106-5681	1	Pin-Stop
8	109-8020	2	Bearing-Ball
9	110-7191	2	Washer-Thrust
10	110-9417	2	Gear-Pinion, 15T
11	115-8406	2	Anchor-Bag
12	120-3342-03	1	Plate-HOC, LH
13	120-3343-03	1	Plate-HOC, RH
14	120-5208	1	Arm-Spring, Rear
15	120-5209	1	Key-Springarm
16	120-5210	2	Retainer-Bearing

Ref.	Part Number	Qty.	Description
17	120-5211	1	Transmission-Msv2 Gt
18	120-6233	2	Cover-Gear
19	125-5062	1	Axle-Rear
20	125-2509	2	10 Inch Wheel Gear ASM
21	120-7008	1	Mount-Bearing
22	120-7026	1	Spring-Extension
23	120-7027	1	Spring-Extension
24	121-5800	2	Conduit-Convolute
25	701243	8	Screw-HWHTF
26	32144-4	1	Screw-HWH
27	32151-61	2	Ring-Retaining
28	36-4780	2	Washer-Plain
29	121-5821	1	Bracket-Stop
30	3296-47	1	Nut-Lock, NI
31	125-2497	1	Decal-HOC, Rear

Attachments and Accessories

For 20977 TimeMaster 76cm Lawn Mower

Product Name	Model/Part
Mower Cover	490-7461
Attach WPM-76cm TimeMaster, ES, CE.....	ATT-20977

Notes:

Notes:



Count on it.