



# **53cm Side Discharge Rear Bagging Mower**

**Model No. 20712 – 7900001 & Up**

---

## **Parts Catalog**

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

| Description                     | Page | Description                      | Page  |
|---------------------------------|------|----------------------------------|-------|
| Housing Assembly . . . . .      | 1    | Toro Part Number Index . . . . . | 14-15 |
| Engine Assembly . . . . .       | 2    | Maintenance . . . . .            | 16-17 |
| Handle Assembly . . . . .       | 3    |                                  |       |
| Rear Catcher Assembly . . . . . | 4    |                                  |       |
| Engine Briggs & Stratton        |      |                                  |       |
| Model 12U802-0639-01 . . . . .  | 5-13 | Note:                            |       |

Accessories

| Description | Model / Parts No. | Description | Model / Parts No. |
|-------------|-------------------|-------------|-------------------|
|-------------|-------------------|-------------|-------------------|

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

| Abbreviation   | Meaning                | Abbreviation    | Meaning                           |
|----------------|------------------------|-----------------|-----------------------------------|
| AR . . . . .   | as required            | HWHTF . . . . . | hex washer head<br>thread forming |
| ASM . . . . .  | assembly               | INC . . . . .   | incorporated                      |
| CARR . . . . . | carriage               | LH . . . . .    | left hand                         |
| DEG . . . . .  | degrees                | PH . . . . .    | pan head                          |
| FH . . . . .   | flat head              | PPH . . . . .   | Phillips pan head                 |
| GA . . . . .   | gauge                  | PTO . . . . .   | power take off                    |
| HF . . . . .   | hex flange             | RH . . . . .    | right hand                        |
| HFW . . . . .  | hex flange washer      | SFH . . . . .   | slotted fillister head            |
| HH . . . . .   | hex head               | SH . . . . .    | square head                       |
| HHF . . . . .  | hex head flange        | SHWH . . . . .  | slotted hex washer head           |
| HHST . . . . . | hex head self tapping  | SPH . . . . .   | slotted pan head                  |
| HJ . . . . .   | hex jam                | STD . . . . .   | standard                          |
| HOC . . . . .  | height-of-cut          | TAP . . . . .   | self tapping                      |
| HS . . . . .   | hex socket             | TH . . . . .    | truss head                        |
| HSBH . . . . . | hex socket button head | TTH . . . . .   | Torx truss head                   |
| HSFH . . . . . | hex socket flat head   | WH . . . . .    | wing head                         |
| HSH . . . . .  | hex socket head        |                 |                                   |
| HWH . . . . .  | hex washer head        |                 |                                   |

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

## Service Assemblies

Parts within service assemblies have reference numbers in the form  $X:Y$ .  $X$  is the reference number of the service assembly and  $Y$  is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

## Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form  $X (Y)$ .  $X$  is the reference number.  $Y$  in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

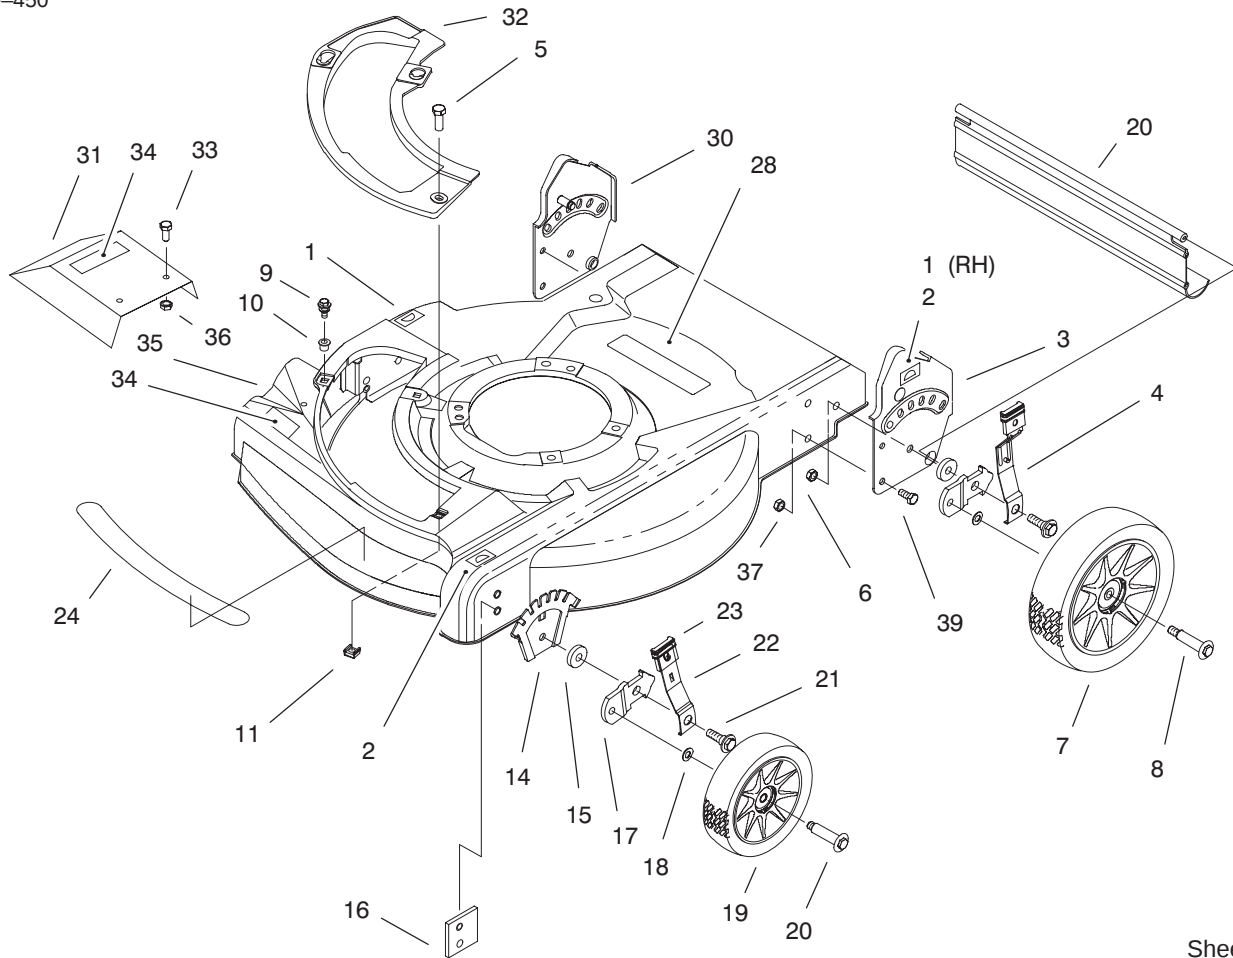


Sheet No.:2

## Housing Assembly

| Ref. No. | Part No. | Qty. | Description              |
|----------|----------|------|--------------------------|
| 1        | 93-6671  | 2    | Decal-HOC                |
| 2        | 93-6670  | 2    | Decal-HOC                |
| 3        | 92-7743  | 1    | ASM-Handle Brkt          |
| 4        | 92-1005  | 2    | ASM-Spring Arm           |
| 5        | 46-6811  | 1    | Screw-HWH                |
| 6        | 3296-39  | 2    | Nut-Lock                 |
| 7        | 684777   | 2    | ASM-Wheel                |
| 8        | 614650   | 2    | Bolt-Shoulder            |
| 9        | 614677   | 2    | Screw-Sems               |
| 10       | 94-1610  | 2    | Grommet-Plastic          |
| 11       | 613765   | 1    | Nut-Cage                 |
| 14       | 92-4881  | 2    | Plate-Height Adjust      |
| 15       | 92-4890  | 4    | Washer                   |
| 16       | 92-7731  | 2    | Plate-Baffle             |
| 17       | 614637   | 4    | Bracket-Wheel Height Adj |
| 18       | 40-1940  | 4    | Washer                   |
| 19       | 684776   | 2    | ASM-Wheel & Tire 6"      |
| 20       | 92-1099  | 2    | Bolt-Shoulder 6"         |
| 21       | 614672   | 4    | Bolt-Shoulder            |
| 22       | 614687   | 2    | Spring Arm-Front         |
| 23       | 92-1008  | 4    | Knob-Height Adjust       |
| 24       | 95-7051  | 1    | Decal-Deck               |
| 28       | 93-6657  | 1    | Decal-Danger             |


| Ref. No. | Part No. | Qty. | Description                                                         |
|----------|----------|------|---------------------------------------------------------------------|
| 30       | 92-7742  | 1    | RH Handle Bracket ASM                                               |
| 31       | 94-1697  | 1    | Guard-Plate (Incl. Ref. 34)                                         |
| 32       | 95-7052  | 1    | Plate-Cover                                                         |
| 33       | 32105-15 | 2    | Screw-HH                                                            |
| 34       | 93-6667  | 2    | Decal-Danger                                                        |
| 35       | 95-7082  | 1    | ASM-Hous & Baffle(Mach) (Incl. Ref. 1-2, 10-13, 24-25, 28, & 34-35) |
| 36       | 3296-42  | 2    | Nut-Lock                                                            |
| 37       | 3296-29  | 4    | Nut-Lock                                                            |
| 38       | 92-8647  | 1    | Shield-Trailing                                                     |
| 39       | 322-3    | 4    | Screw-HH                                                            |

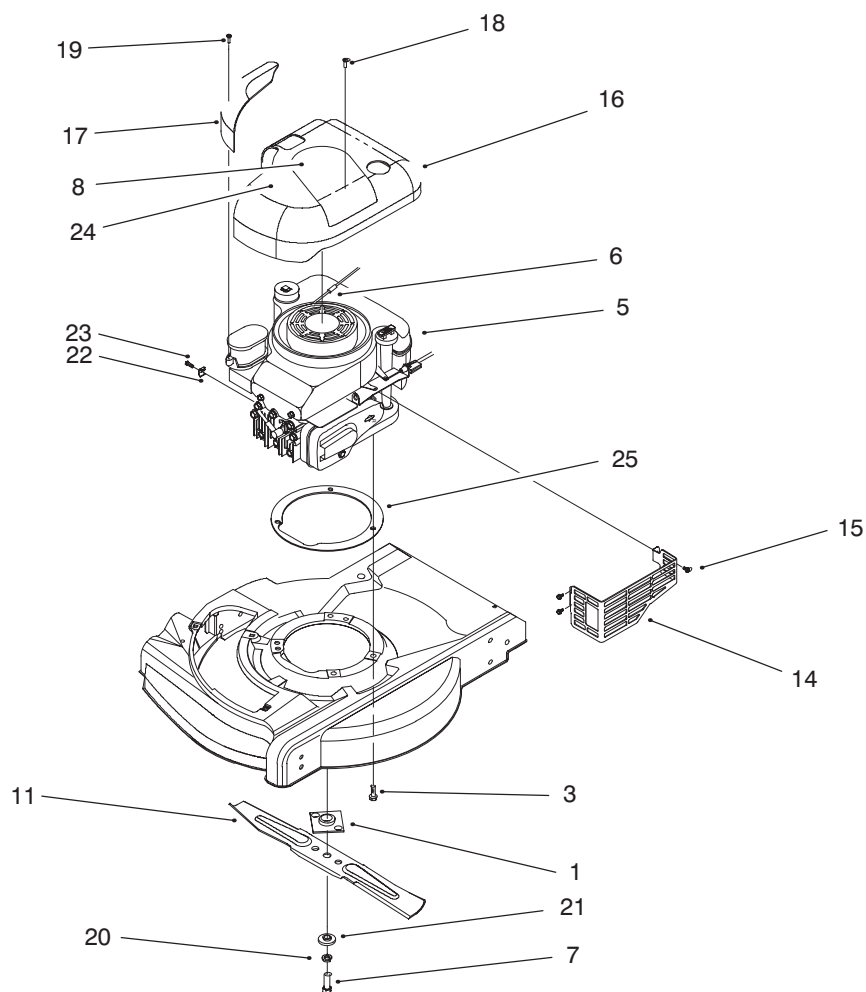

Sheet No.:3

## Engine Assembly

| Ref. No. | Part No. | Qty. | Description             |
|----------|----------|------|-------------------------|
| 1        | 677525   | 1    | ASM—Plate & Collar      |
| 3        | 95—1726  | 3    | Screw—Engine Mount      |
| 5        |          | 1    | Engine ASM 4—Cyc        |
| 6        | 2210—316 | 1    | Rope—Stop (P/W Eng)     |
| 7        | 95—1748  | 1    | Bolt—Blade              |
| 8        | 95—7053  | 1    | Decal—Recoil            |
| 11       | 612543   | 1    | Blade—21" Whirl         |
| 14       | 82—8550  | 1    | Shield—Muffler          |
| 15       | 32144—73 | 3    | Screw—HWHTF             |
| 16       | 95—1704  | 1    | Shroud—Engine           |
| 17       | 95—1709  | 1    | Cover—Air Cleaner       |
| 18       | 95—1706  | 2    | Screw—Shroud (P/W Eng)  |
| 19       | 95—1707  | 2    | Screw—Air Cleaner (P/W) |
| 20       | 3253—22  | 1    | Washer—Lock             |
| 21       | 92—8626  | 1    | Spacer—Blade            |
| 22       | 2210—249 | 1    | Clamp—Casing (P/W Eng)  |
| 23       | 93—8470  | 1    | Screw—Clamp (P/W Eng)   |
| 24       | 95—7061  | 1    | Nameplate—Shroud        |
| 25       | 93—7152  | 1    | Plate—Engine            |

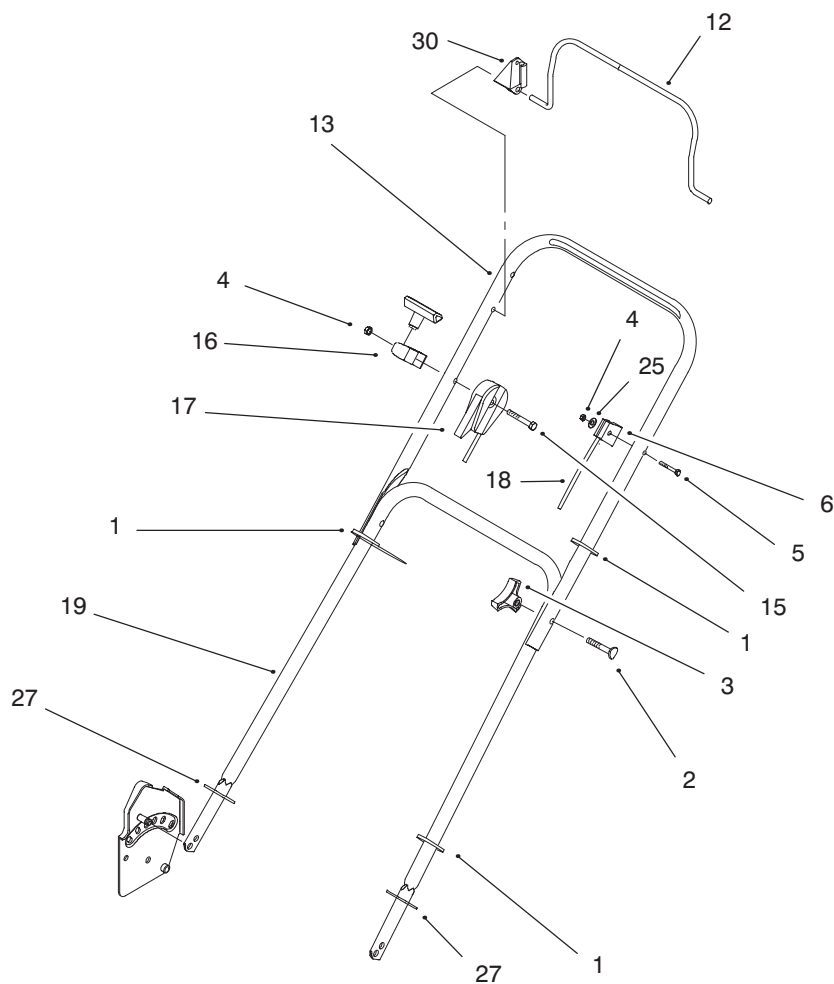


Sheet No.:4

## Handle Assembly

| Ref. No. | Part No. | Qty. | Description          |
|----------|----------|------|----------------------|
| 1        | 3290-378 | 3    | Tie-Cable            |
| 2        | 614697   | 2    | Screw-Handle         |
| 3        | 614243   | 2    | Knob                 |
| 4        | 3296-73  | 2    | Nut-Lock             |
| 5        | 92-2269  | 1    | Screw-Handle         |
| 6        | 94-6096  | 1    | Anchor-Cable         |
| 12       | 94-6099  | 1    | Bail-Flywheel Brake  |
| 13       | 95-1713  | 1    | Handle Section-Upper |
| 15       | 321-50   | 1    | Screw                |
| 16       | 93-7383  | 1    | Guide-Rope           |
| 17       | 95-7064  | 1    | Cable-Throttle       |
| 18       | 95-1718  | 1    | ASM-Brake Cable      |
| 19       | 614643   | 1    | Handle Section-Lower |
| 25       | 3256-1   | 1    | Washer-Flat          |
| 27       | 93-3653  | 2    | Handle-Guard         |
| 30       | 94-6097  | 1    | Stop-Bail            |


| Ref. No. | Part No. | Qty. | Description |
|----------|----------|------|-------------|
|          |          |      |             |

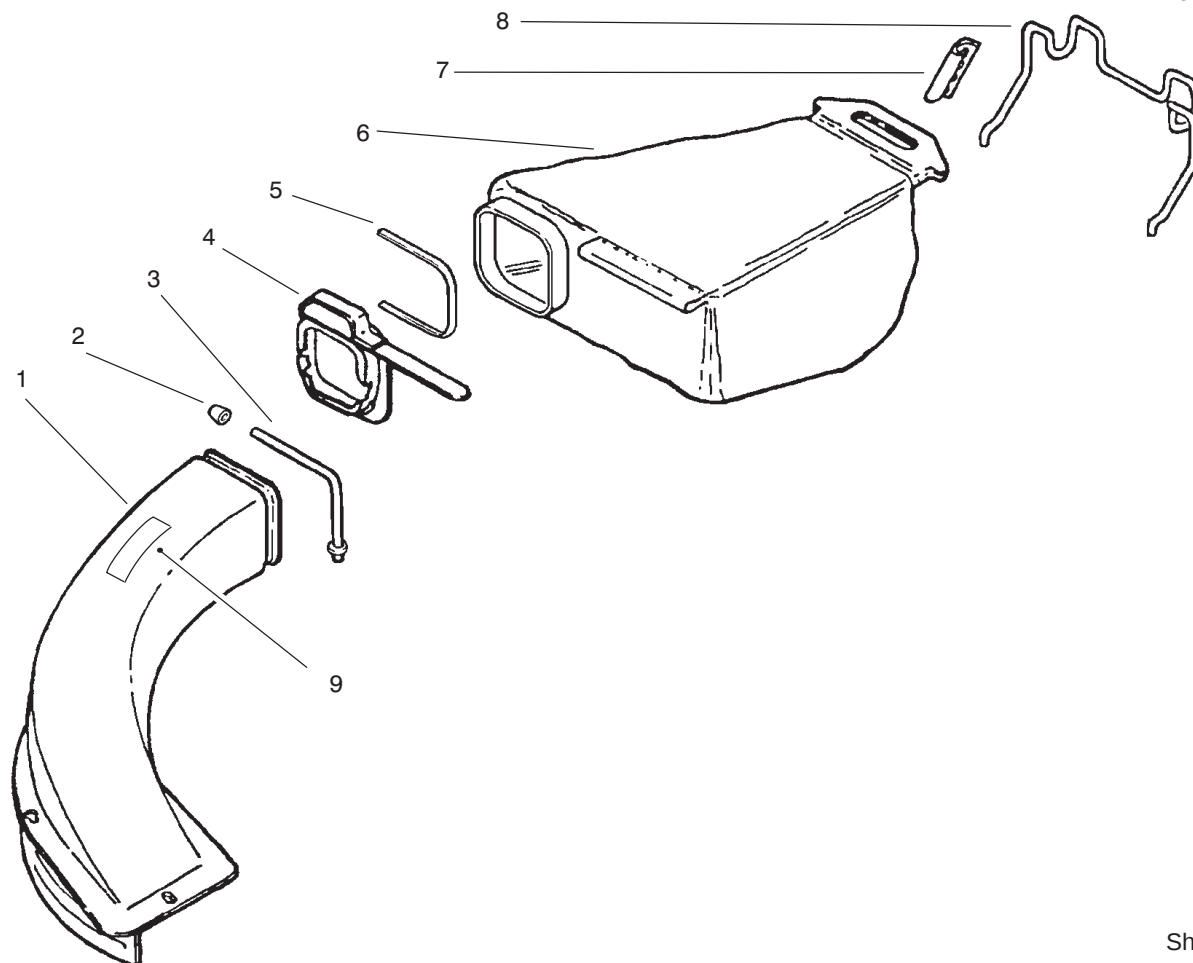

Sheet No.:5

## Rear Catcher Assembly

| Ref. No. | Part No. | Qty. | Description                                      |
|----------|----------|------|--------------------------------------------------|
| 1        | 95-7081  | 1    | Chute & Support Assembly (Incl. Ref. #2, 3, & 9) |
| 2        | 614589   | 1    | Nut-Cap                                          |
| 3        | 614591   | 1    | Chute Support                                    |
| 4        | 684727   | 1    | Adapter Assembly                                 |
| 5        | 614700   | 1    | Tie Strap                                        |
| 6        | 95-7050  | 1    | Bag Assembly                                     |
| 7        | 613462   | 2    | Hanger Clamp                                     |
| 8        | 613455   | 1    | Wide Hanger                                      |
| 9        | 95-7079  | 1    | Decal-Danger                                     |

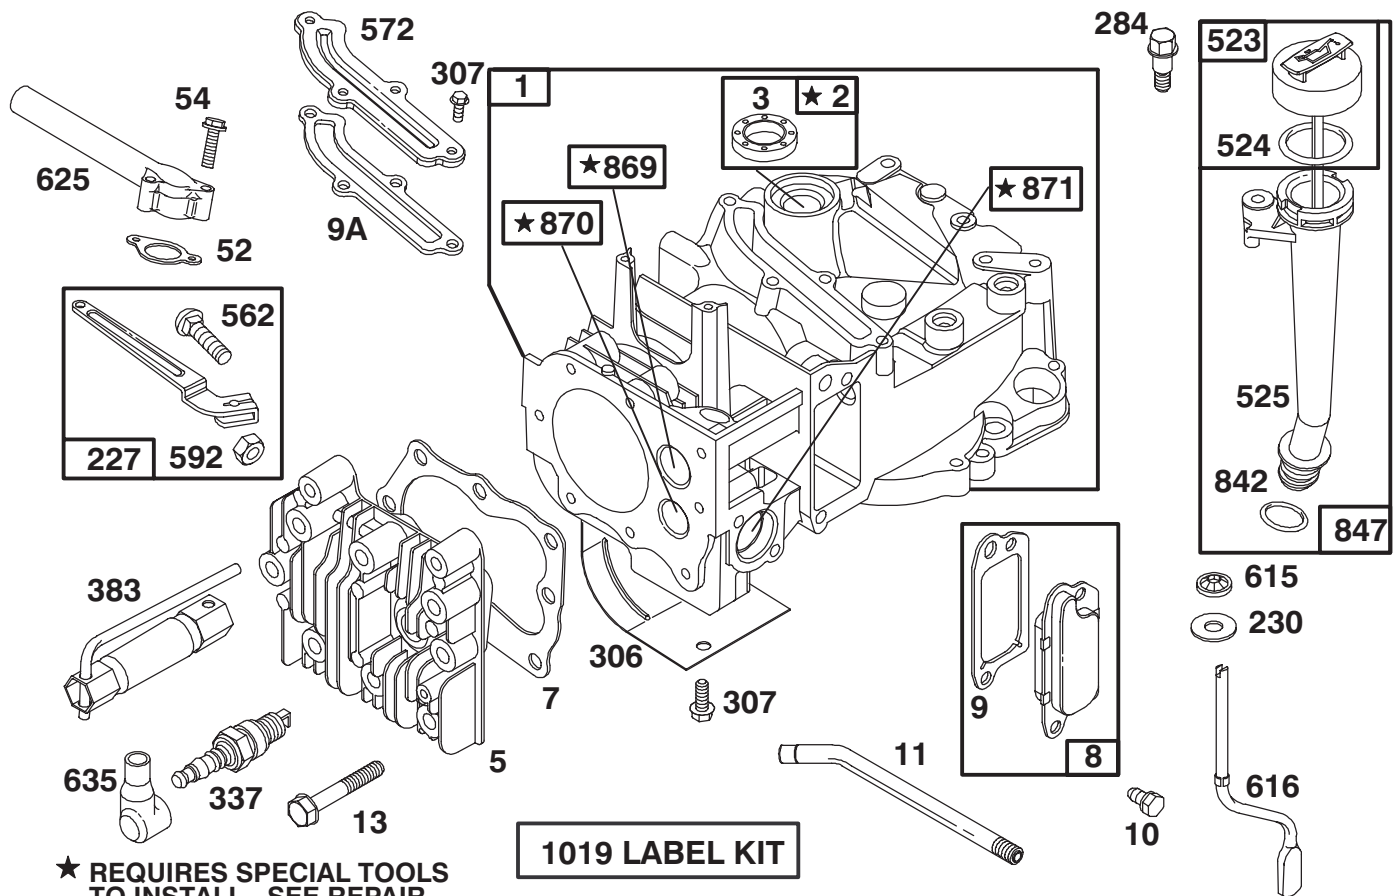


## ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 1        | 493260   | Cylinder Assembly         | 1        |
| 2        | 293708   | Bushing – Cylinder        | 1        |
| ★3       | 299819   | Seal – Oil                | 1        |
| 5        | 214626   | Head – Cylinder           | 1        |
| ★Ø7      | 272916   | Gasket – Cylinder Head    | 1        |
| 8        | 495786   | Breather – Valve Chamber  | 1        |
| ★Ø9      | 272481   | Gasket – Breather         | 1        |
| ★9A      | 272238   | Gasket – Baffle Plate     | 1        |
| 10       | 94650    | Screw – Breather Mtg.     | 1        |
| 11       | 231933   | Tube – Breather           | 1        |
| 13       | 94547    | Screw – Cylinder Head     | 1        |
| ★52      | 272199   | Gasket – Intake Elbow     | 1        |
| 54       | 94526    | Screw – Intake Elbow Mtg. | 1        |
| 227      | 492349   | Lever Assembly – Gov.     | 1        |
| 230      | 67072    | Washer – Gov. Crank       | 1        |
| 284      | 94511    | Screw – Hex. Head         | 1        |
| 306      | 224324   | Shield – Cylinder         | 1        |
| 307      | 94515    | Screw – Hex. Head         | 1        |
| 337      | 802592   | Plug – Spark              | 1        |

★ Included in Gasket Set—Part No. 497316.

| Ref. No. | Part No. | Description                                       | No. Used |
|----------|----------|---------------------------------------------------|----------|
| 383      | 89838    | Wrench – Spark Plug                               | 1        |
| 523      | 495264   | Cap With Dipstick – Oil Filler                    | 1        |
| ★524     | 280393   | Seal – Filler Tube                                | 1        |
| 525      | 495265   | Tube – Oil Filler                                 | 1        |
| 562      | 94852    | Bolt – Carriage                                   | 1        |
| 572      | 224328   | Baffle – Cylinder                                 | 1        |
| 592      | 231082   | Nut – Hex.                                        | 1        |
| 615      | 94474    | Fastener                                          | 1        |
| 616      | 263175   | Crank – Governor                                  | 1        |
| 625      | 497465   | Tube – Fuel Intake                                | 1        |
| 635      | 66538    | Elbow – Spark Plug                                | 1        |
| ★842     | 280966   | Seal – O-Ring                                     | 1        |
| 847      | 495263   | Oil Fill Tube Assy.                               | 1        |
| 869      | 213512   | Seat – Intake Valve                               | 1        |
| 870      | 213513   | Seat – Exhaust Valve                              | 1        |
| 871      | 262001   | Guide – Exhaust Valve                             | 1        |
| 1019     | 494256   | <b>Note:</b> 63709 Guide – Intake Valve Label Kit | 1        |

Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

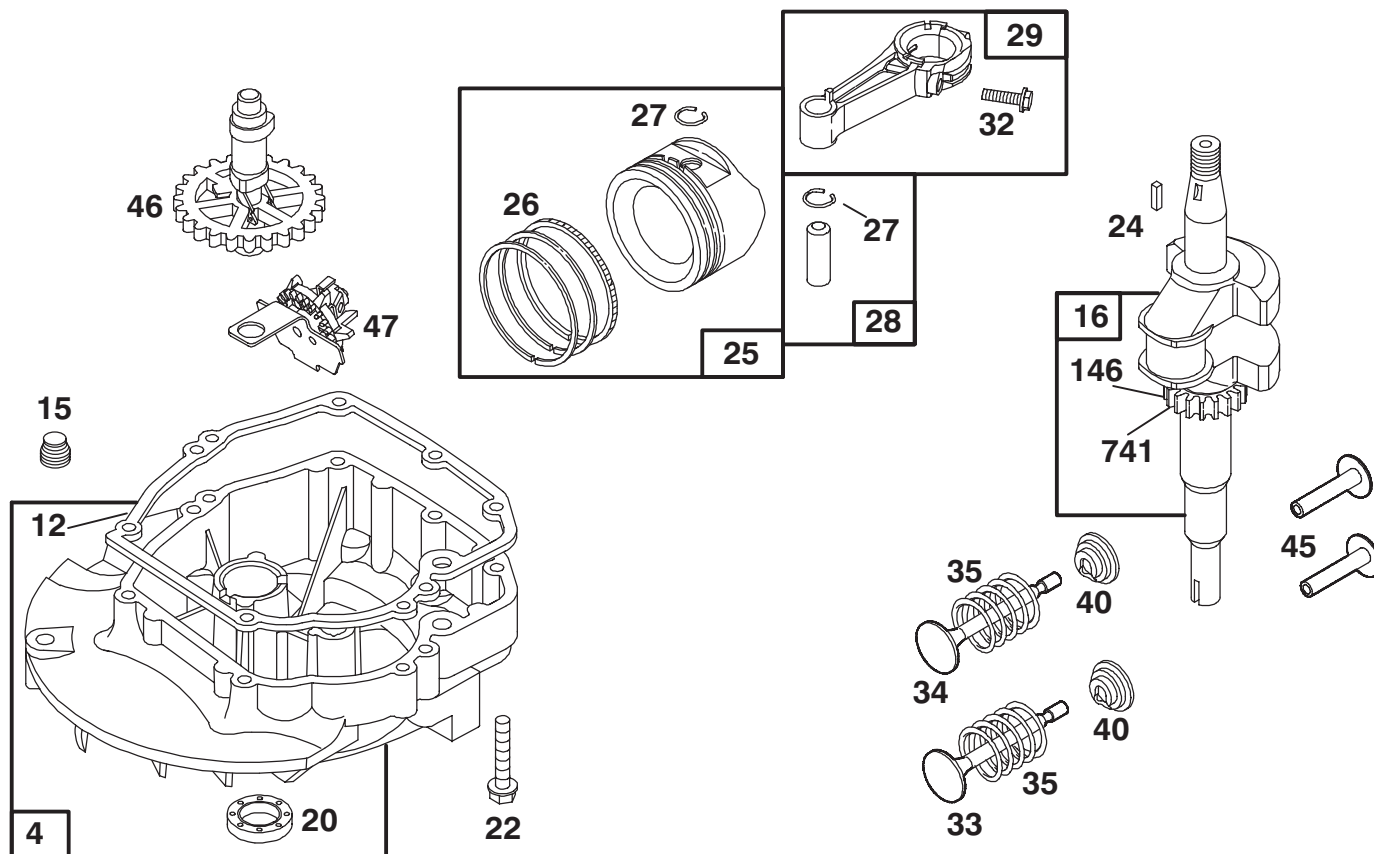


Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12U802-0639—01

| Ref. No. | Part No. | Description                                                              | No. Used | Ref. No. | Part No. | Description               | No. Used |
|----------|----------|--------------------------------------------------------------------------|----------|----------|----------|---------------------------|----------|
| 4        | 493279   | Sump — Engine                                                            | 1        | 27       | 263190   | Lock — Piston Pin         | 1        |
| ★12      | 272198   | Gasket — Crankcase                                                       | 1        | 28       | 499423   | Pin — Piston (Standard)   | 1        |
| 15       | 94720    | Plug — Oil Drain                                                         | 1        | 29       | 499424   | Rod Assembly — Connecting | 1        |
| 16       | 499147   | Crankshaft                                                               | 1        | 32       | 94699    | Screw — Connecting Rod    | 1        |
| ★20      | 399781   | Seal — Oil                                                               | 1        | 33       | 262651   | Valve — Exhaust           | 1        |
| 22       | 94220    | Screw — Hex. Head                                                        | 1        | 34       | 262652   | Valve — Intake            | 1        |
|          |          | <b>Note:</b> 94612 Screw — Hex. Head (One Used in Hole Nearest Breather) | 1        | 35       | 262224   | Spring — Valve            | 1        |
| 24       | 222698   | Key — Flywheel                                                           | 1        | 40       | 93312    | Retainer — Valve Spring   | 1        |
| 25       | 499429   | Piston Assy. (Standard)                                                  | 1        | 45       | 262204   | Tappet — Valve            | 1        |
|          | 499430   | Piston Assy. (.010" O.S.)                                                | 1        | 46       | 498275   | Gear — Cam                | 1        |
|          | 499431   | Piston Assy. (.020" O.S.)                                                | 1        | 47       | 493737   | Slinger — Oil             | 1        |
|          | 499432   | Piston Assy. (.030" O.S.)                                                | 1        | 146      | 94388    | Key — Timing              | 1        |
| 26       | 499425   | Ring Set (Standard)                                                      | 1        | 741      | 262598   | Gear — Timing             | 1        |
|          | 499426   | Ring Set (.010" O.S.)                                                    | 1        |          |          |                           |          |
|          | 499427   | Ring Set (.020" O.S.)                                                    | 1        |          |          |                           |          |
|          | 499428   | Ring Set (.030" O.S.)                                                    | 1        |          |          |                           |          |

★ Included in Gasket Set—Part No. 497316.

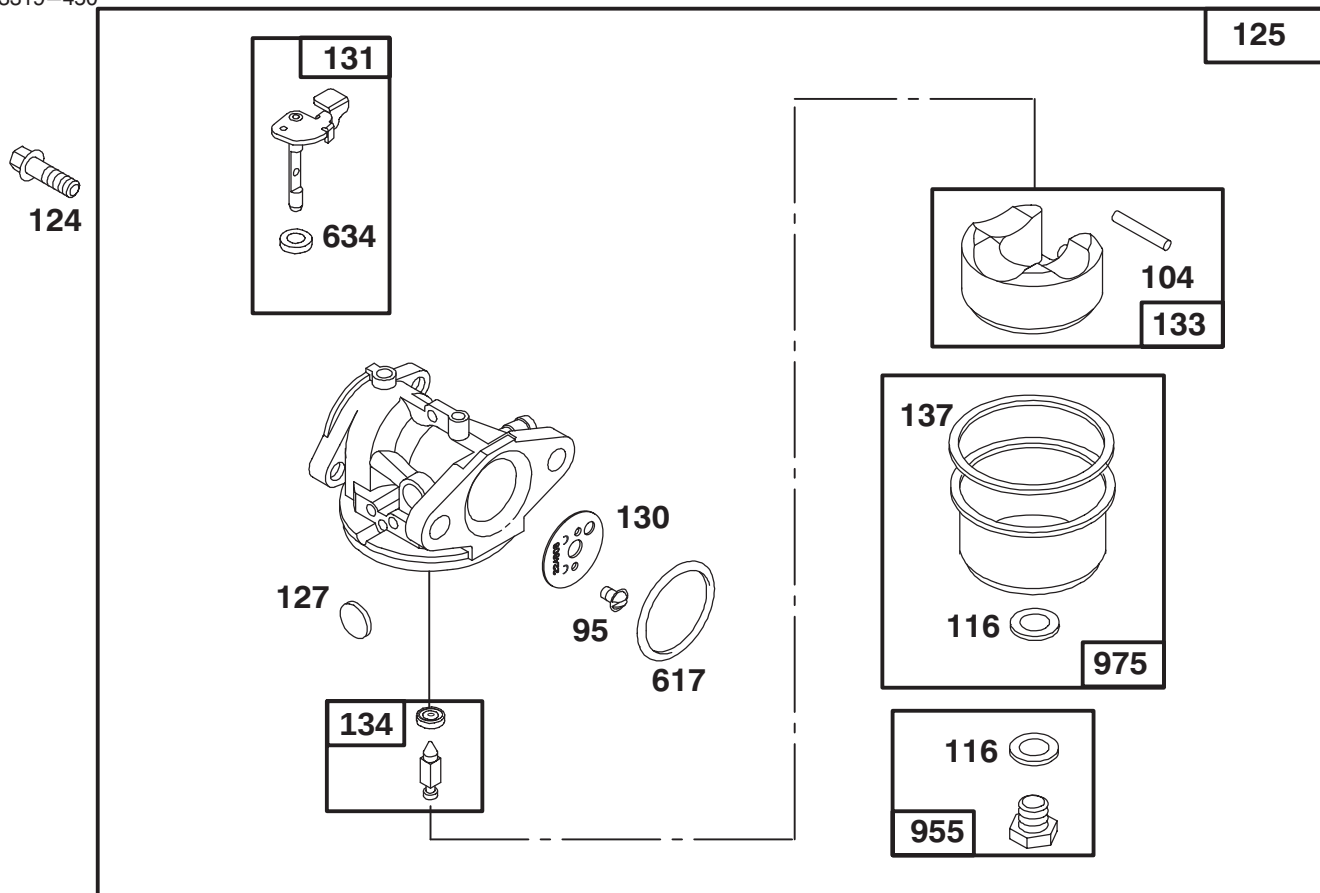

Assemblies include all parts shown in frames.


# ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

| Ref.<br>No. | Part No. | Description                          | No.<br>Used |
|-------------|----------|--------------------------------------|-------------|
| 95          | T94098   | Screw — Throttle<br>Valve Mtg.       | 1           |
| ●104        | T231371  | Pin — Float Hinge                    | 1           |
| ●◆116       |          | Gasket—Sealing<br>(Sold in Kit Only) | 1           |
| 124         | 94525    | Screw — Carburetor Mtg.              | 1           |
| 125         | 498966   | Carburetor                           | 1           |
| ●127        |          | Plug — Welch<br>(Sold in Kit Only)   | 1           |
| 130         | 224908   | Valve — Throttle                     | 1           |
| 131         | T493267  | Shaft — Throttle                     | 1           |
| 133         | 398187   | Float Assy. — Carburetor             | 1           |

| Ref.<br>No. | Part No. | Description                                                                          | No.<br>Used |
|-------------|----------|--------------------------------------------------------------------------------------|-------------|
| ●134        | T398188  | Valve — Inlet<br>(Includes Seat)                                                     | 1           |
| ●◆137       |          | Gasket — Bowl<br>(Sold in Kit Only)                                                  | 1           |
| ●◆617       | 270344   | Seal — Fuel Intake Tube                                                              | 1           |
| ●◆634       |          | Washer — Shaft<br>(Sold in Kit Only)                                                 | 1           |
| 955         | 498975   | Screw — Bowl Mtg. (Std.)<br><b>Note:</b> 496495 Screw —<br>Bowl Mtg. (High Altitude) | 1           |
| 975         | 493640   | Bowl Assy. — Carburetor                                                              | 1           |

●Included in Carburetor Kit—Part No. 498260.

- ◆ Included in Carburetor Gasket Set—Part No. 498261.

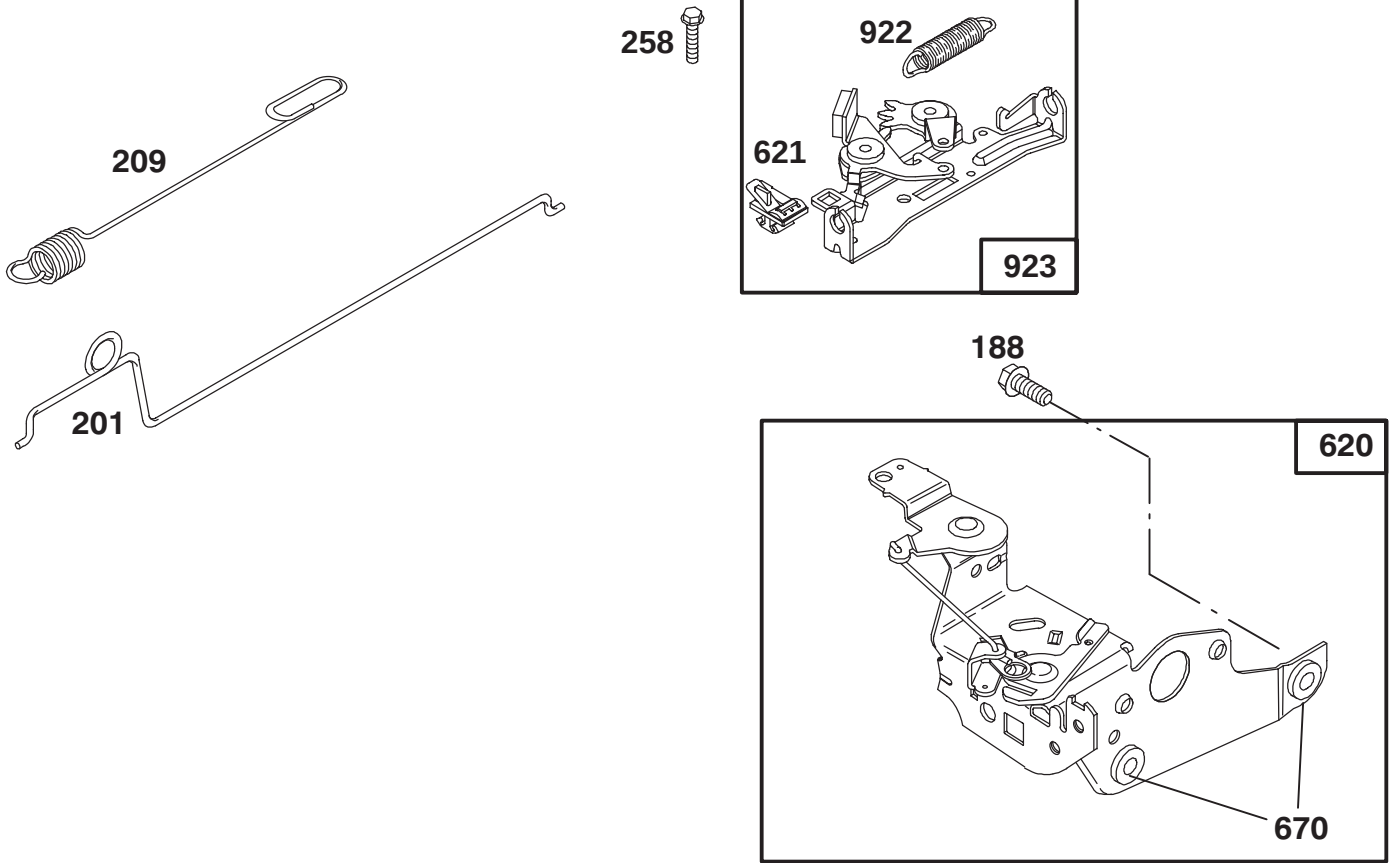

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12U802-0639—01

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 188      | 94644    | Screw — Hex. Head    | 1        |
| 201      | 262579   | Link — Governor      | 1        |
| 209      | 263044   | Spring — Governor    | 1        |
| 258      | 94512    | Screw—Hex. Head      | 1        |
| 620      | 497837   | Bracket — Carburetor | 1        |

| Ref. No. | Part No. | Description                   | No. Used |
|----------|----------|-------------------------------|----------|
| 621      | 396847   | Switch — Stop                 | 1        |
| ★670     | 493823   | Spacer — Bracket (Includes 2) | 1        |
| 922      | 262640   | Spring—Brake                  | 1        |
| 923      | 493442   | Brake Assembly                | 1        |

★ Included in Gasket Set—Part No. 497316.

3319-450

969

968

535

445

971

161

387

529

163

Assemblies include all parts shown in frames.


**ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01**

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 161      | 497915   | Base – Air Cleaner   | 1        |
| ★●163    | 272653   | Gasket – Air Cleaner | 1        |
| 387      | 496115   | Primer—Carburetor    | 1        |
| 445      | 497725   | Filter – Air         | 1        |
| 529      | 281556   | Grommet – Breather   | 1        |

| Ref. No. | Part No. | Description         | No. Used |
|----------|----------|---------------------|----------|
| 535      | 273185   | Filter – Air        | 1        |
| 968      | 281535   | Cover – Air Cleaner | 1        |
| 969      | 94777    | Screw – Cover Mtg.  | 1        |
| 971      | 94655    | Screw – Air Cleaner | 1        |

★ Included in Gasket Set—Part No. 497316.

● Included in Carburetor Kit—Part No. 498260.

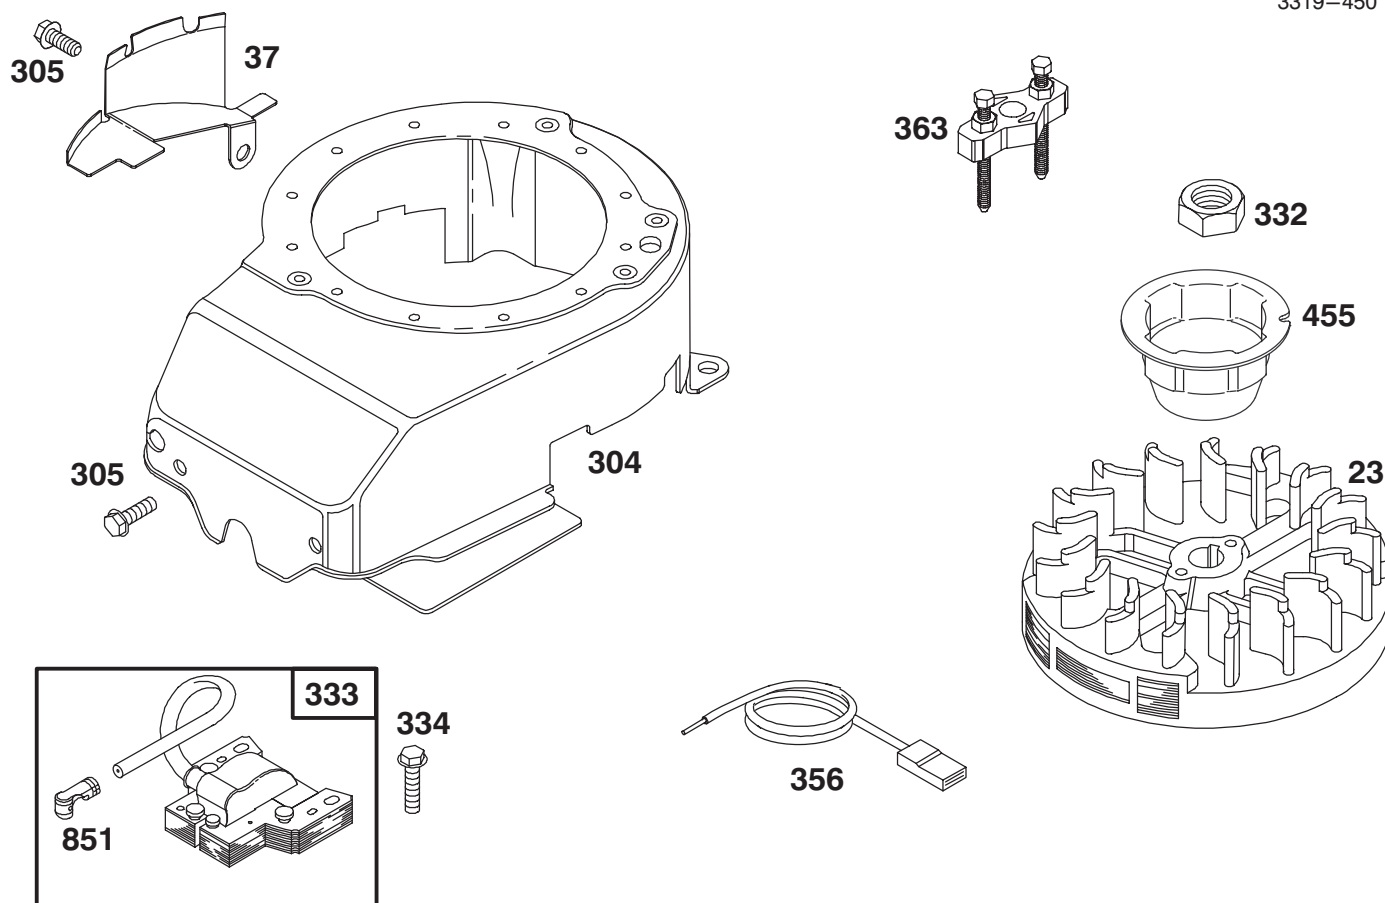






Assemblies include all parts shown in frames.

# ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

| Ref. No. | Part No. | Description        | No. Used |
|----------|----------|--------------------|----------|
| 23       | 492177   | Flywheel           | 1        |
| 37       | 224511   | Guard – Flywheel   | 1        |
| 304      | 493293   | Housing – Blower   | 1        |
| 305      | 94744    | Screw – Sem        | 1        |
| 332      | 92284    | Nut – Flywheel     | 1        |
| 333      | 802574   | Armature – Magneto | 1        |

| Ref. No. | Part No. | Description               | No. Used |
|----------|----------|---------------------------|----------|
| 334      | 94731    | Screw – Sem               | 1        |
| 356      | 398808   | Wire – Ground             | 1        |
| 363      | 19069    | Flywheel Puller           | 1        |
| 455      | 225121   | Cup – Starter             | 1        |
| 851      | 493880   | Terminal – Ignition Cable | 1        |

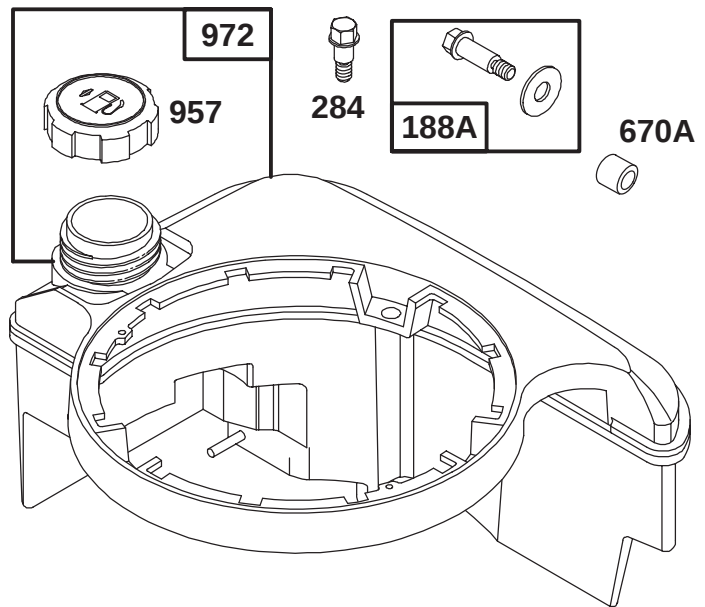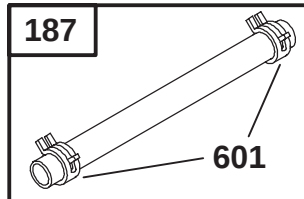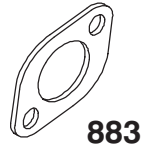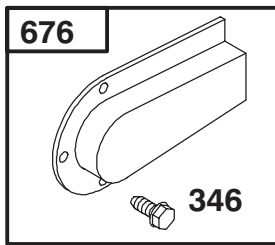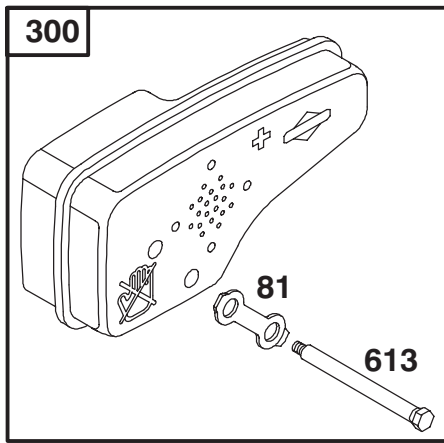

Assemblies include all parts shown in frames.


## ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

| Ref. No. | Part No. | Description           | No. Used |
|----------|----------|-----------------------|----------|
| 81       | 223664   | Lock – Muffler Screw  | 1        |
| 187      | 492790   | Hose – Fuel           | 1        |
| 188A     | 398540   | Screw – Tank Mounting | 1        |
| 284      | 94511    | Screw – Shoulder      | 1        |
| 300      | 496106   | Muffler – Exhaust     | 1        |
| 346      | 94896    | Screw – Hex. Head     | 1        |
| 601      | 93053    | Clamp – Hose          |          |

★ Included in Gasket Set—Part No. 497316.

| Ref. No. | Part No. | Description          | No. Used |
|----------|----------|----------------------|----------|
| 613      | 94231    | Screw – Shoulder     | 1        |
| 670A     | 280512   | Spacer – Fuel Tank   | 1        |
| 676      | 493871   | Deflector – Muffler  | 1        |
| ★Ø883    | 272253   | Gasket – Exhaust     | 1        |
| 957      | 397974   | Cap Assy. – Fuel     | 1        |
| 972      | 495224   | Tank Assembly – Fuel | 1        |


Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

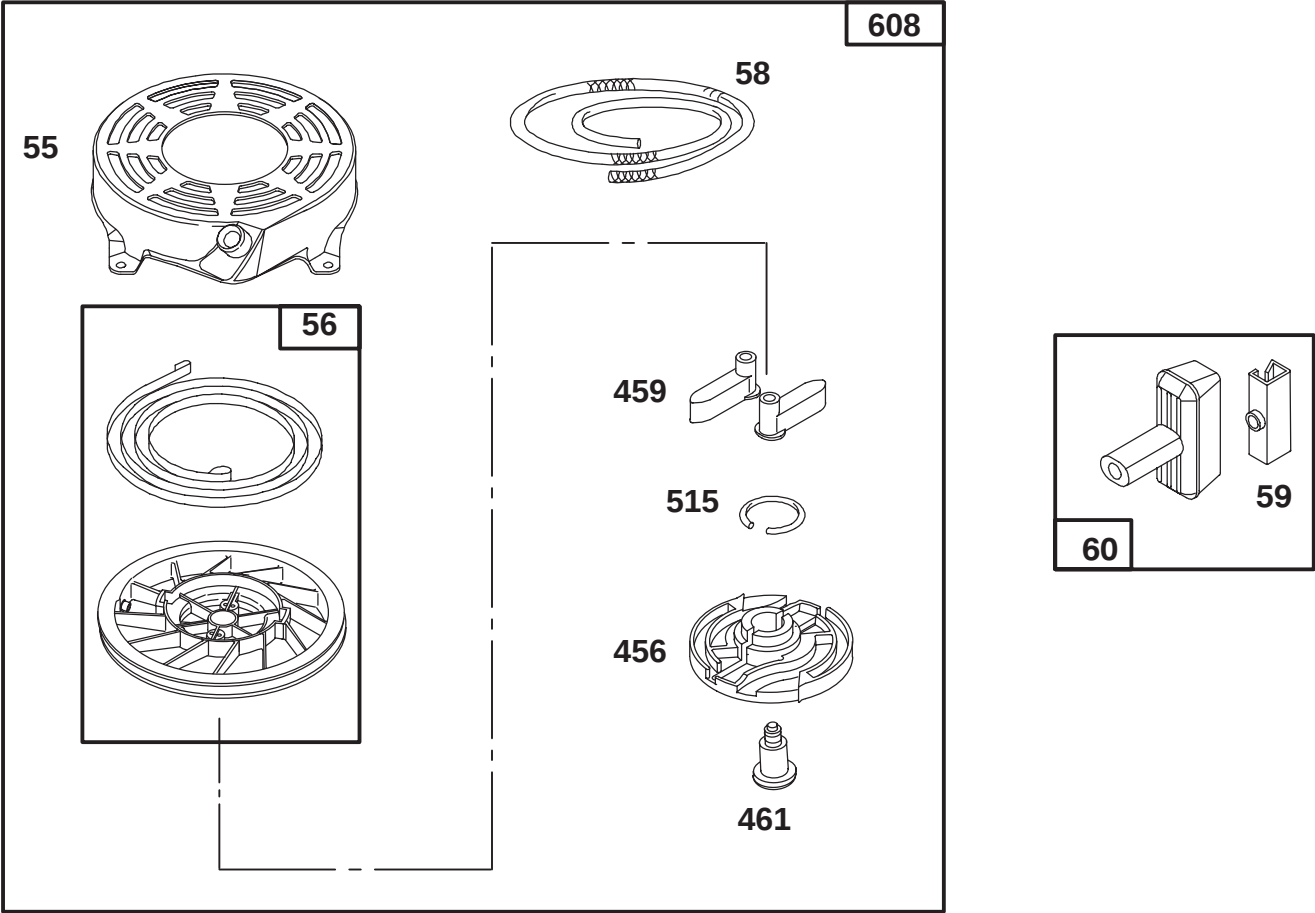

Assemblies include all parts shown in frames.

**ENGINE BRIGGS & STRATTON MODEL 12U802-0639—01**

| Ref. No. | Part No. | Description                                    | No. Used | Ref. No. | Part No. | Description             | No. Used |
|----------|----------|------------------------------------------------|----------|----------|----------|-------------------------|----------|
| 55       | 497440   | Housing — Rewind Starter                       | 1        | 461      | 94943    | Pin — Starter           | 1        |
| 56       | 498144   | Pulley — Rewind Starter                        | 1        | 515      | 263073   | Spring — Torsion        | 1        |
| 58       | 280399   | Rope — Rewind Starter (Cut to Required Length) | 1        | 608      | 497680   | Starter Assy. — Rewind  | 1        |
| 59       | T224467  | Insert — Starter Grip                          | 1        |          |          | <b>Includes:</b>        |          |
| 60       | T494212  | Handle — Rewind Starter                        | 1        |          |          | 94904 Screw — Hex. Head | 1        |
| 456      | 281503   | Retainer — Rewind Starter                      | 1        |          |          | 94908 Nut — Hex.        | 1        |
| 459      | 281505   | Pawl — Starter                                 | 1        |          |          |                         |          |

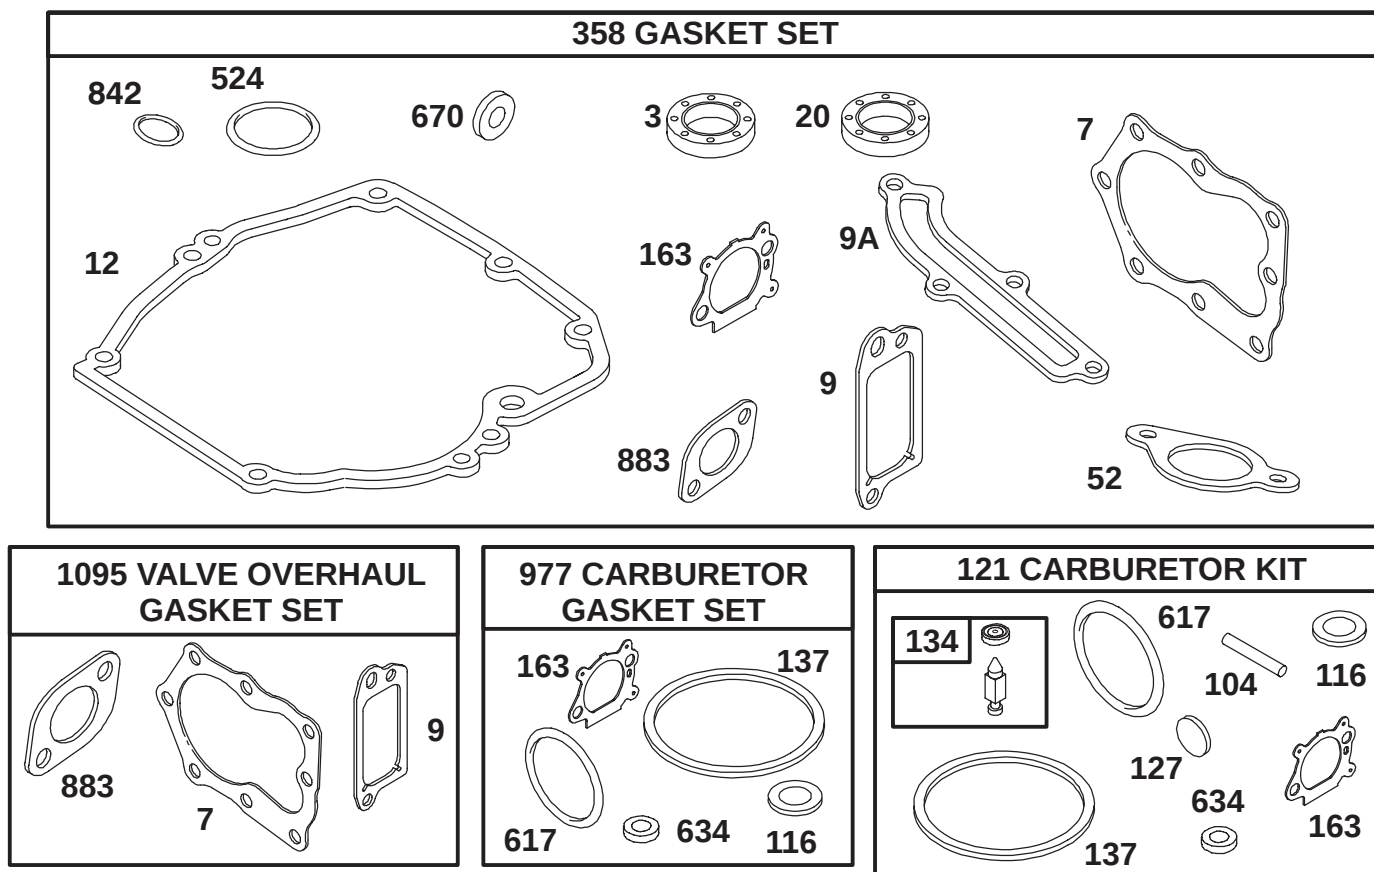

Assemblies include all parts shown in frames.

## ENGINE BRIGGS & STRATTON MODEL 12U802-0639-01

| Ref. No. | Part No. | Description                            | No. Used |
|----------|----------|----------------------------------------|----------|
| ★3       | 299819   | Seal – Oil                             | 1        |
| ★Ø7      | 272916   | Gasket – Cylinder Hd.                  | 1        |
| ★Ø9      | 272481   | Gasket – Breather                      | 1        |
| ★9A      | 272238   | Gasket – Baffle Plate                  | 1        |
| ★12      | 272198   | Gasket – Crankcase                     | 1        |
| ★20      | 399781   | Seal – Oil                             | 1        |
| ★52      | 272199   | Gasket – Intake Elbow                  | 1        |
| ●104     | 231371   | Pin – Float Hinge                      | 1        |
| ●◆116    |          | Gasket – Sealing<br>(Sold in Kit Only) | 1        |
| 121      | 498260   | Carburetor Kit                         | 1        |
| ●127     |          | Plug – Welch<br>(Sold in Kit Only)     | 1        |
| ●134     | T398188  | Valve – Inlet<br>(Includes Seat)       | 1        |

| Ref. No. | Part No. | Description                          | No. Used |
|----------|----------|--------------------------------------|----------|
| ●◆137    |          | Gasket – Bowl<br>(Sold in Kit Only)  | 1        |
| ★◆163    | 272653   | Gasket – Air Cleaner                 | 1        |
| 358      | 497316   | Gasket Set                           | 1        |
| ★524     | 280393   | Seal – Filler Tube                   | 1        |
| ●◆617    | 270344   | Seal – Fuel Intake Tube              | 1        |
| ●◆634    |          | Washer – Shaft<br>(Sold in Kit Only) | 1        |
| ★670     | 493823   | Spacer – Bracket<br>(Includes 2)     | 1        |
| ★842     | 280966   | Seal – O-Ring                        | 1        |
| ★Ø883    | 272253   | Gasket – Exhaust                     | 1        |
| 977      | 498261   | Gasket Set – Carburetor              | 1        |
| 1095     | 498528   | Gasket Set –<br>Valve Overhaul       | 1        |

● Included in Carburetor Kit—Part No. 498260.

◆ Included in Carburetor Gasket Set—Part No. 498261.

★ Included in Gasket Set—Part No. 497316.

Ø Included in Valve Overhaul Gasket Set—Part No. 498528.

# Toro Part Number Index

| Part No. | Page No. | Ref. No. | Qty. | Description              |
|----------|----------|----------|------|--------------------------|
| 612543   | 2        | 11       | 1    | Blade—21" Whirl          |
| 613455   | 4        | 8        | 1    | Wide Hanger              |
| 613462   | 4        | 7        | 2    | Hanger Clamp             |
| 613765   | 1        | 11       | 1    | Nut—Cage                 |
| 614243   | 3        | 3        | 2    | Knob                     |
| 614589   | 4        | 2        | 1    | Nut—Cap                  |
| 614591   | 4        | 3        | 1    | Chute Support            |
| 614637   | 1        | 17       | 4    | Bracket—Wheel Height Adj |
| 614643   | 3        | 19       | 1    | Handle Section—Lower     |
| 614650   | 1        | 8        | 2    | Bolt—Shoulder            |
| 614672   | 1        | 21       | 4    | Bolt—Shoulder            |
| 614677   | 1        | 9        | 2    | Screw—Sems               |
| 614687   | 1        | 22       | 2    | Spring Arm—Front         |
| 614697   | 3        | 2        | 2    | Screw—Handle             |
| 614700   | 4        | 5        | 1    | Tie Strap                |
| 677525   | 2        | 1        | 1    | ASM—Plate & Collar       |
| 684727   | 4        | 4        | 1    | Adapter Assembly         |
| 684776   | 1        | 19       | 2    | ASM—Wheel & Tire 6"      |
| 684777   | 1        | 7        | 2    | ASM—Wheel                |
| 40-1940  | 1        | 18       | 4    | Washer                   |
| 46-6811  | 1        | 5        | 1    | Screw—HWH                |
| 82-8550  | 2        | 14       | 1    | Shield—Muffler           |
| 92-1005  | 1        | 4        | 2    | ASM—Spring Arm           |
| 92-1008  | 1        | 23       | 4    | Knob—Height Adjust       |
| 92-1099  | 1        | 20       | 2    | Bolt—Shoulder 6" Wheel   |
| 92-2269  | 3        | 5        | 1    | Screw—Handle             |
| 92-4881  | 1        | 14       | 2    | Plate—Height Adjust      |
| 92-4890  | 1        | 15       | 4    | Washer                   |
| 92-7731  | 1        | 16       | 2    | Plate—Baffle             |
| 92-7742  | 1        | 30       | 1    | RH Handle Bracket ASM    |
| 92-7743  | 1        | 3        | 1    | ASM—Handle Brkt          |
| 92-8626  | 2        | 21       | 1    | Spacer—Blade             |
| 92-8647  | 1        | 38       | 1    | Shield—Trailing          |
| 93-3653  | 3        | 27       | 2    | Handle—Guard             |
| 93-6657  | 1        | 28       | 1    | Decal—Danger             |
| 93-6667  | 1        | 34       | 2    | Decal—Danger             |
| 93-6670  | 1        | 2        | 2    | Decal—HOC                |
| 93-6671  | 1        | 1        | 2    | Decal—HOC                |
| 93-7152  | 2        | 25       | 1    | Plate—Engine             |
| 93-7383  | 3        | 16       | 1    | Guide—Rope               |
| 93-8470  | 2        | 23       | 1    | Screw—Clamp (P/W Eng)    |
| 94-1610  | 1        | 10       | 2    | Grommet—Plastic          |
| 94-1697  | 1        | 31       | 1    | Guard—Plate              |
| 94-6096  | 3        | 6        | 1    | Anchor—Cable             |
| 94-6097  | 3        | 30       | 1    | Stop—Bail                |
| 94-6099  | 3        | 12       | 1    | Bail—Flywheel Brake      |
| 95-1704  | 2        | 16       | 1    | Shroud—Engine            |
| 95-1706  | 2        | 18       | 2    | Screw—Shroud (P/W Eng)   |
| 95-1707  | 2        | 19       | 2    | Screw—Air Cleaner (P/W)  |
| 95-1709  | 2        | 17       | 1    | Cover—Air Cleaner        |
| 95-1713  | 3        | 13       | 1    | Handle Section—Upper     |
| 95-1718  | 3        | 18       | 1    | ASM—Brake Cable          |
| 95-1726  | 2        | 3        | 3    | Screw—Engine Mount       |
| 95-1748  | 2        | 7        | 1    | Bolt—Blade               |
| 95-7050  | 4        | 6        | 1    | Bag Assembly             |
| 95-7051  | 1        | 24       | 1    | Decal—Deck               |
| 95-7052  | 1        | 32       | 1    | Plate—Cover              |
| 95-7053  | 2        | 8        | 1    | Decal—Recoil             |
| 95-7061  | 2        | 24       | 1    | Nameplate—Shroud         |
| 95-7064  | 3        | 17       | 1    | Cable—Throttle           |
| 95-7079  | 4        | 9        | 1    | Decal—Danger             |
| 95-7081  | 4        | 1        | 1    | Chute & Support Assembly |

\*Not Illustrated

# Toro Part Number Index (cont.)

| <b>Part No.</b> | <b>Page No.</b> | <b>Ref. No.</b> | <b>Qty.</b> | <b>Description</b>      |
|-----------------|-----------------|-----------------|-------------|-------------------------|
| 95-7082         | 1               | 35              | 1           | ASM-Hous & Baffle(Mach) |
| 2210-249        | 2               | 22              | 1           | Clamp-Casing (P/W Eng)  |
| 2210-316        | 2               | 6               | 1           | Rope-Stop (P/W Eng)     |
| 321-50          | 3               | 15              | 1           | Screw                   |
| 322-3           | 1               | 39              | 4           | Screw-HH                |
| 3253-22         | 2               | 20              | 1           | Washer-Lock             |
| 3256-1          | 3               | 25              | 1           | Washer-Flat             |
| 3290-378        | 3               | 1               | 3           | Tie-Cable               |
| 3296-29         | 1               | 37              | 4           | Nut-Lock                |
| 3296-39         | 1               | 6               | 2           | Nut-Lock                |
| 3296-42         | 1               | 36              | 2           | Nut-Lock                |
| 3296-73         | 3               | 4               | 2           | Nut-Lock                |
| 32105-15        | 1               | 33              | 2           | Screw-HH                |
| 32144-73        | 2               | 15              | 3           | Screw-HWHTF             |

[illegible]

## MAINTENANCE RECORD

[illegible]