
Parts Manual

TURF TRACER®
X-SERIES

Model No. TTX680PKC52400—Serial No. 315000000 and Up

Picture below may not reflect actual product.

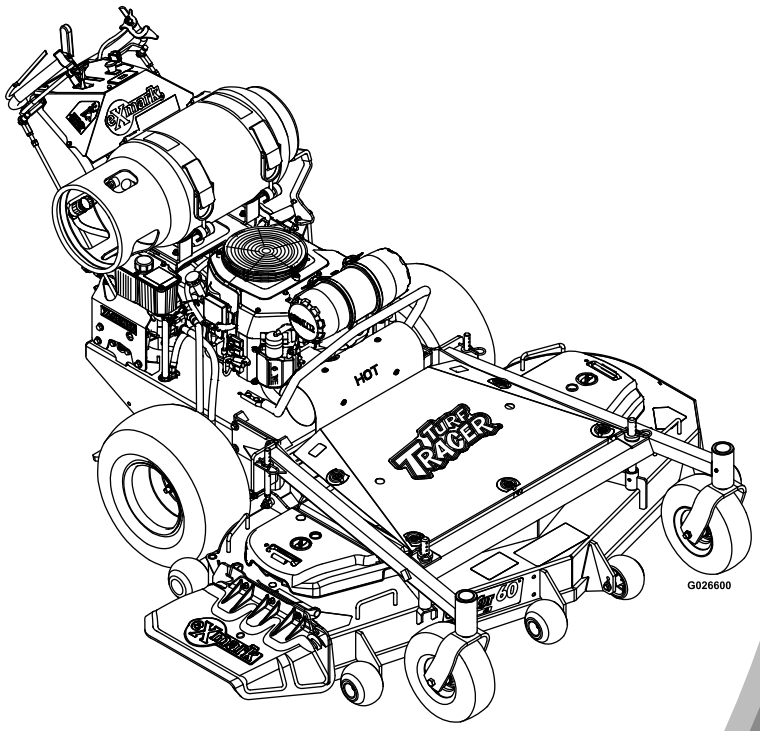

Part No. 4502-041 Rev. A

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1,6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required

ASM: assembly

BBC: blade brake control

BHTF: button head thread forming

CARR: carriage

CCW: counter clockwise

CW: clockwise

DEG: degrees

DPA: Dual Point Adjustment

ECM: electronic control module

EXT: external

FH: flat head

GA: gauge

HD: heavy-duty

HF: hex flange

HH: hex head

HHF: hex head flange

HHFTF: hex head flange thread forming

HJ: hex jam

HLH: hex lag head

HOC: height-of-cut

HP: high pressure

HSBH: hex socket button head

HSFH: hex socket flat head

HSH: hex socket head

HWH: hex washer head

HWHTF: hex washer head thread forming

HYD: hydraulic

LH: left hand

LP: low pressure

LPG: Liquefied Petroleum Gas

NI: nylon insert

NPTF: national pipe thread fine

PFH: phillips flat head

PPH: phillips pan head

PPHTF: phillips pan head thread forming

PRH: phillips round head

PTH: phillips truss head

PTO: power-take-off

RH: right hand

ROPS: roll-over protection system

RRB: rear roller brush

SFH: slotted fillister head

SHH: slotted hex head

SHWH: slotted hex washer head

SPH: slotted pan head

SQH: square head

SRH: slotted round head

STD: standard

TAP: self tapping

TTH: torx truss head

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).

© 2014—Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310

Contact us at www.Exmark.com.
Printed in the USA.
All Rights Reserved




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

Complete Deck Assembly 4
Deck Assembly 6
Deck W/Decals No. 116-2472 8
Deck Idler Assembly No. 126-2314 10
Frame Assembly 12
Front Frame Assembly No. 126-2540 14
ECS Upper Handle Controls Assembly 16
Controls Assembly 18
Engine Deck Assembly 20
Engine Assembly 22
LPG Fuel Assembly 24
Hydro Assembly 26
Electrical Assembly 28


Complete Deck Assembly

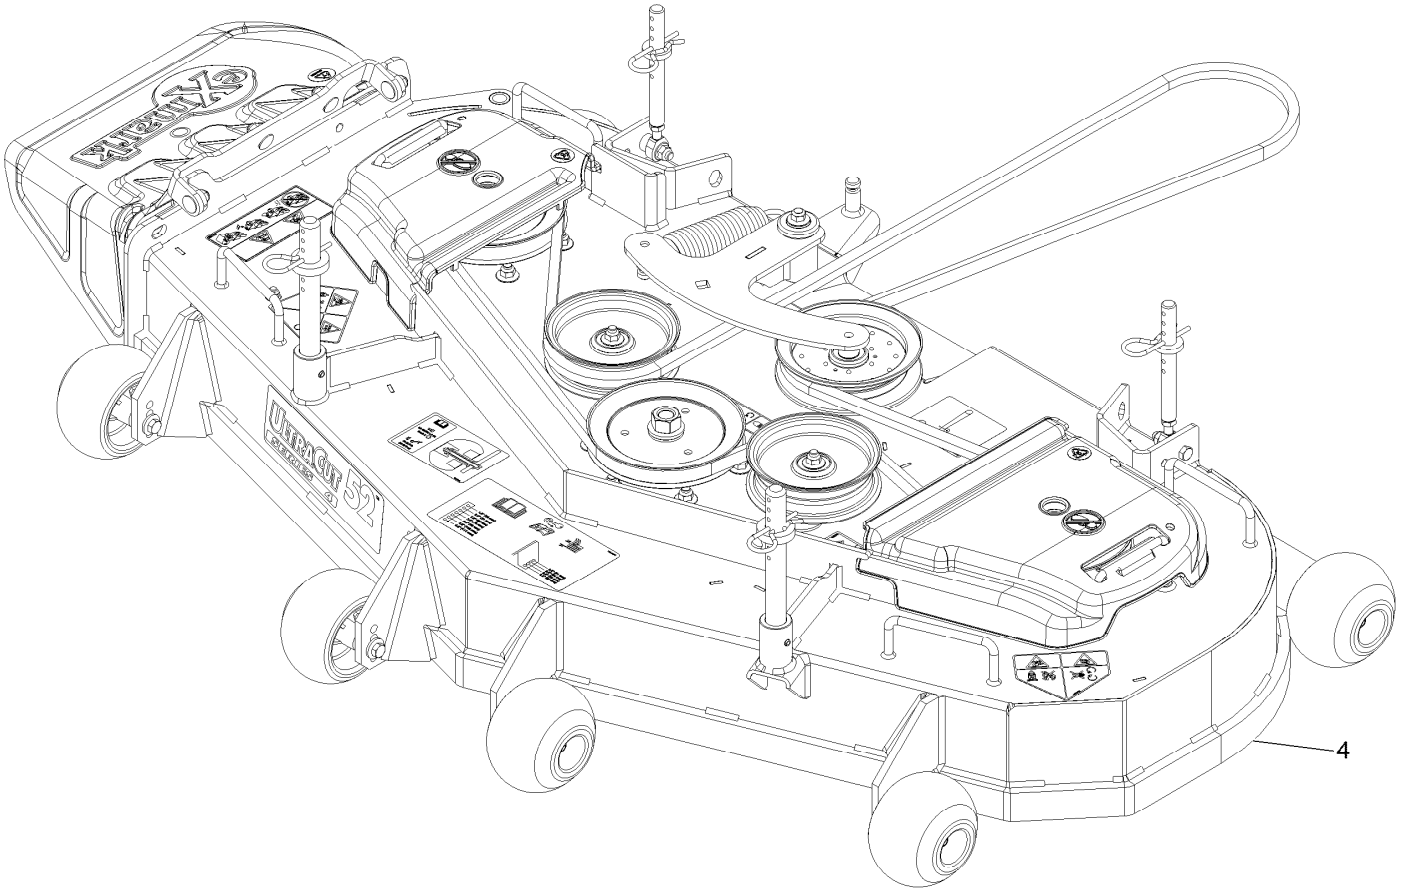

Complete Deck Assembly (continued)

Ref.	*Part Number*	*Qty.*	*Description*
4	126-2536	1	ASM, Complete Deck, 52

Deck Assembly

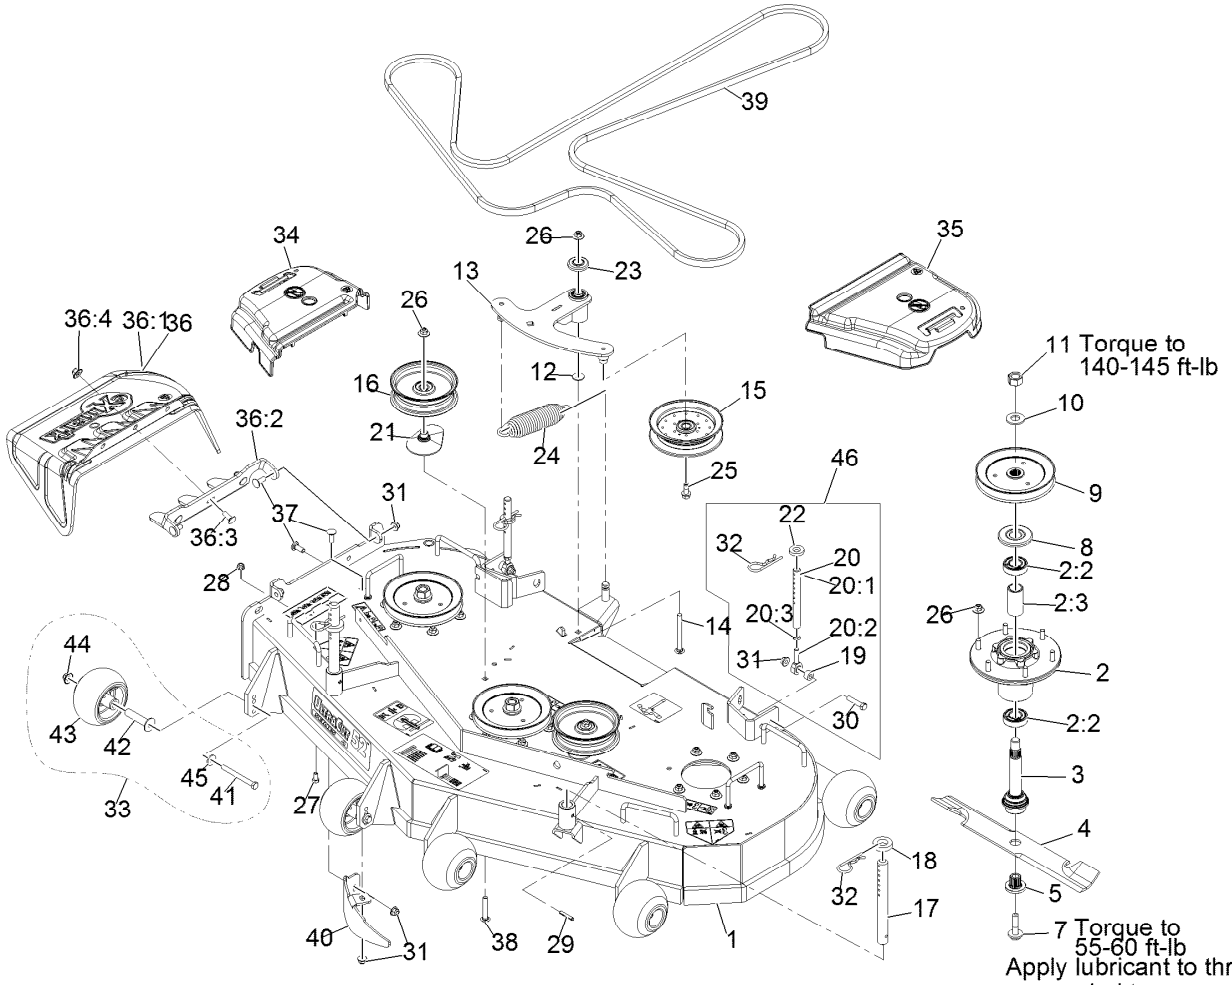


Apply lubricant to threads
as needed to prevent seizing.
Copper based antiseize preferable.
Grease is an acceptable substitute.

Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2472	1	ASM, Deck W/ Decals, 52"
2	116-3344	3	ASM-Cutter Hsg With Bearings
2:2	116-0720	2	Bearing-Ball
2:3	116-3312	1	Spacer-Bearing
3	116-3341	3	ASM-Spindle And Seal ●
4	116-5175	3	Blade-Extreme 2, 18.00"
4	103-6402	3	Blade-Notched
4	103-6392	3	Blade, Mulching
4	103-6387	3	Blade, Low Lift
4	103-6382	3	Blade, Solid
5	103-3037	3	Bushing, Splined
7	109-9220	3	Screw-Sems 1/2-20 X 2.19
8	116-1286	3	Guard,Bearing Top .989
9	116-0675	3	Sheave,Blade Drive 6.50
10	103-2802	3	Washer-Spring Disc 3/4
11	116-7306	3	Nut-Hex
12	3256-4	1	Washer-Flat
13	126-2314	1	ASM, Deck Idler
14	3231-24	1	Screw-CARR
15	116-4668	1	Idler-Pulley, Flanged
16	116-4669	2	Pulley-Idler Flat
17	1-603001	2	Rod, Deck Support
18	1-413425	2	Spacer-Deck Support
19	1-603050	2	Spacer
20	1-414521	2	Link Assy
20:1	1-413525	1	Link, Rear Deck Support
20:2	1-613204	1	Balljoint
20:3	3220-3	1	Nut-Jam 3/8-24
21	109-2872	2	Spacer-Pulley
22	1-323539	2	Spacer-Blade Drive
23	103-2916	1	Guard-Top
24	116-6317	1	Spring-Extension
25	126-1680	1	Screw-Hfh
26	109-6658	21	Nut-Nyloc 3/8-16 Flg
27	322-2	1	Screw-HH 5/16-18 X 5/8
28	104-8300	1	Nut-Nyloc 5/16-18 Flg
29	1-806332	2	Rollpin 1/4 X 1 1/2
30	323-9	2	Screw-HH 3/8-16 X 1 3/4
31	104-8301	6	Nut-Nyloc 3/8-16 Flg
32	1-806009	4	Hairpin-Cotter #206
33	116-9981	6	Kit, Anti-Scalp Roller
34	109-6935	1	Cover-Belt, RH
35	109-6936	1	Cover-Belt, LH
36	109-7188	1	ASM,Discharge Chute
36:1	109-2738	1	Chute, Discharge
36:2	109-8675-01	1	Bracket,Discharge Chute
36:3	3231-22	3	Bolt-Carriage 3/8-16 X 1
36:4	109-6658	3	Nut-Nyloc 3/8-16 Flg
37	3231-22	4	Bolt-Carriage 3/8-16 X 1
38	3231-40	2	Bolt-Carriage 3/8-16 X 2 1/4
39	126-2538	1	Belt, Deck Drive
40	116-5814-01	1	Baffle-Dogleg, Lz-Vt52
41	116-9362	6	Screw-HH 3/8-16 X 3 3/4 Gr 8
42	116-8131	6	Axle, Roller
43	103-8415	6	Roller-Anti-Scalp
44	109-6658	6	Nut-Nyloc 3/8-16 Flg
45	98-5975	6	Washer-Spring Disc 3/8
46	1-411532	2	Kit, Support Link W/Pin

● Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.


Deck W/Decals No. 116-2472

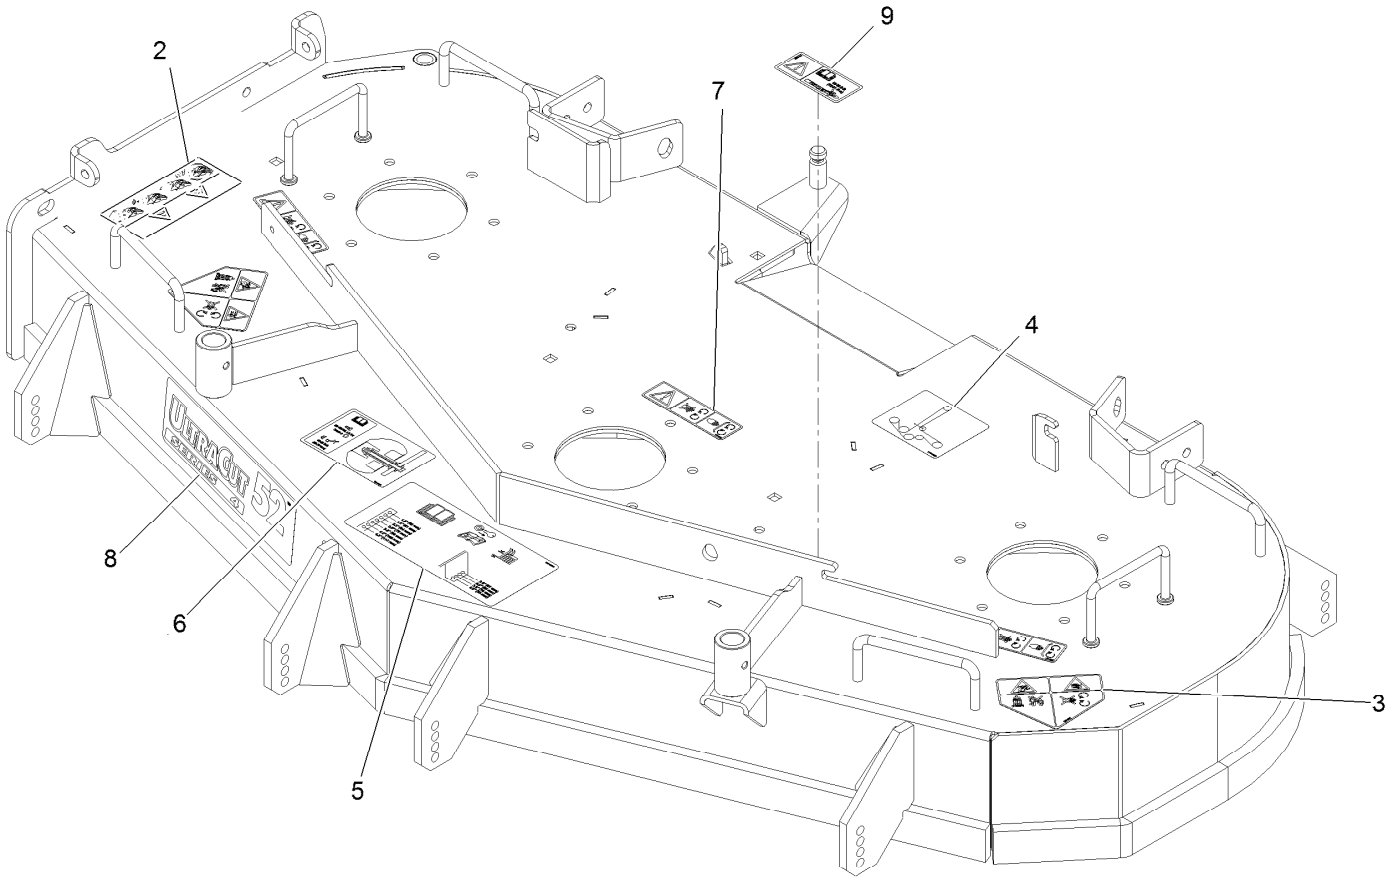

Deck W/Decals No. 116-2472 (continued)

Ref.	Part Number	Qty.	Description
2	114-3489	1	Decal-Warning, Bagger
3	112-8760	2	Decal-Danger
4	116-8727	1	Decal-Belt Routing
5	116-8278	1	Decal-Anti-Scalp
6	126-0898	1	Decal-Roller Mounting
7	112-9028	3	Decal-Cover Missing
8	116-0034	1	Decal,Ultracut 52 Series 4
9	116-8283	1	Decal-Bolt Torque

Deck Idler Assembly No. 126-2314

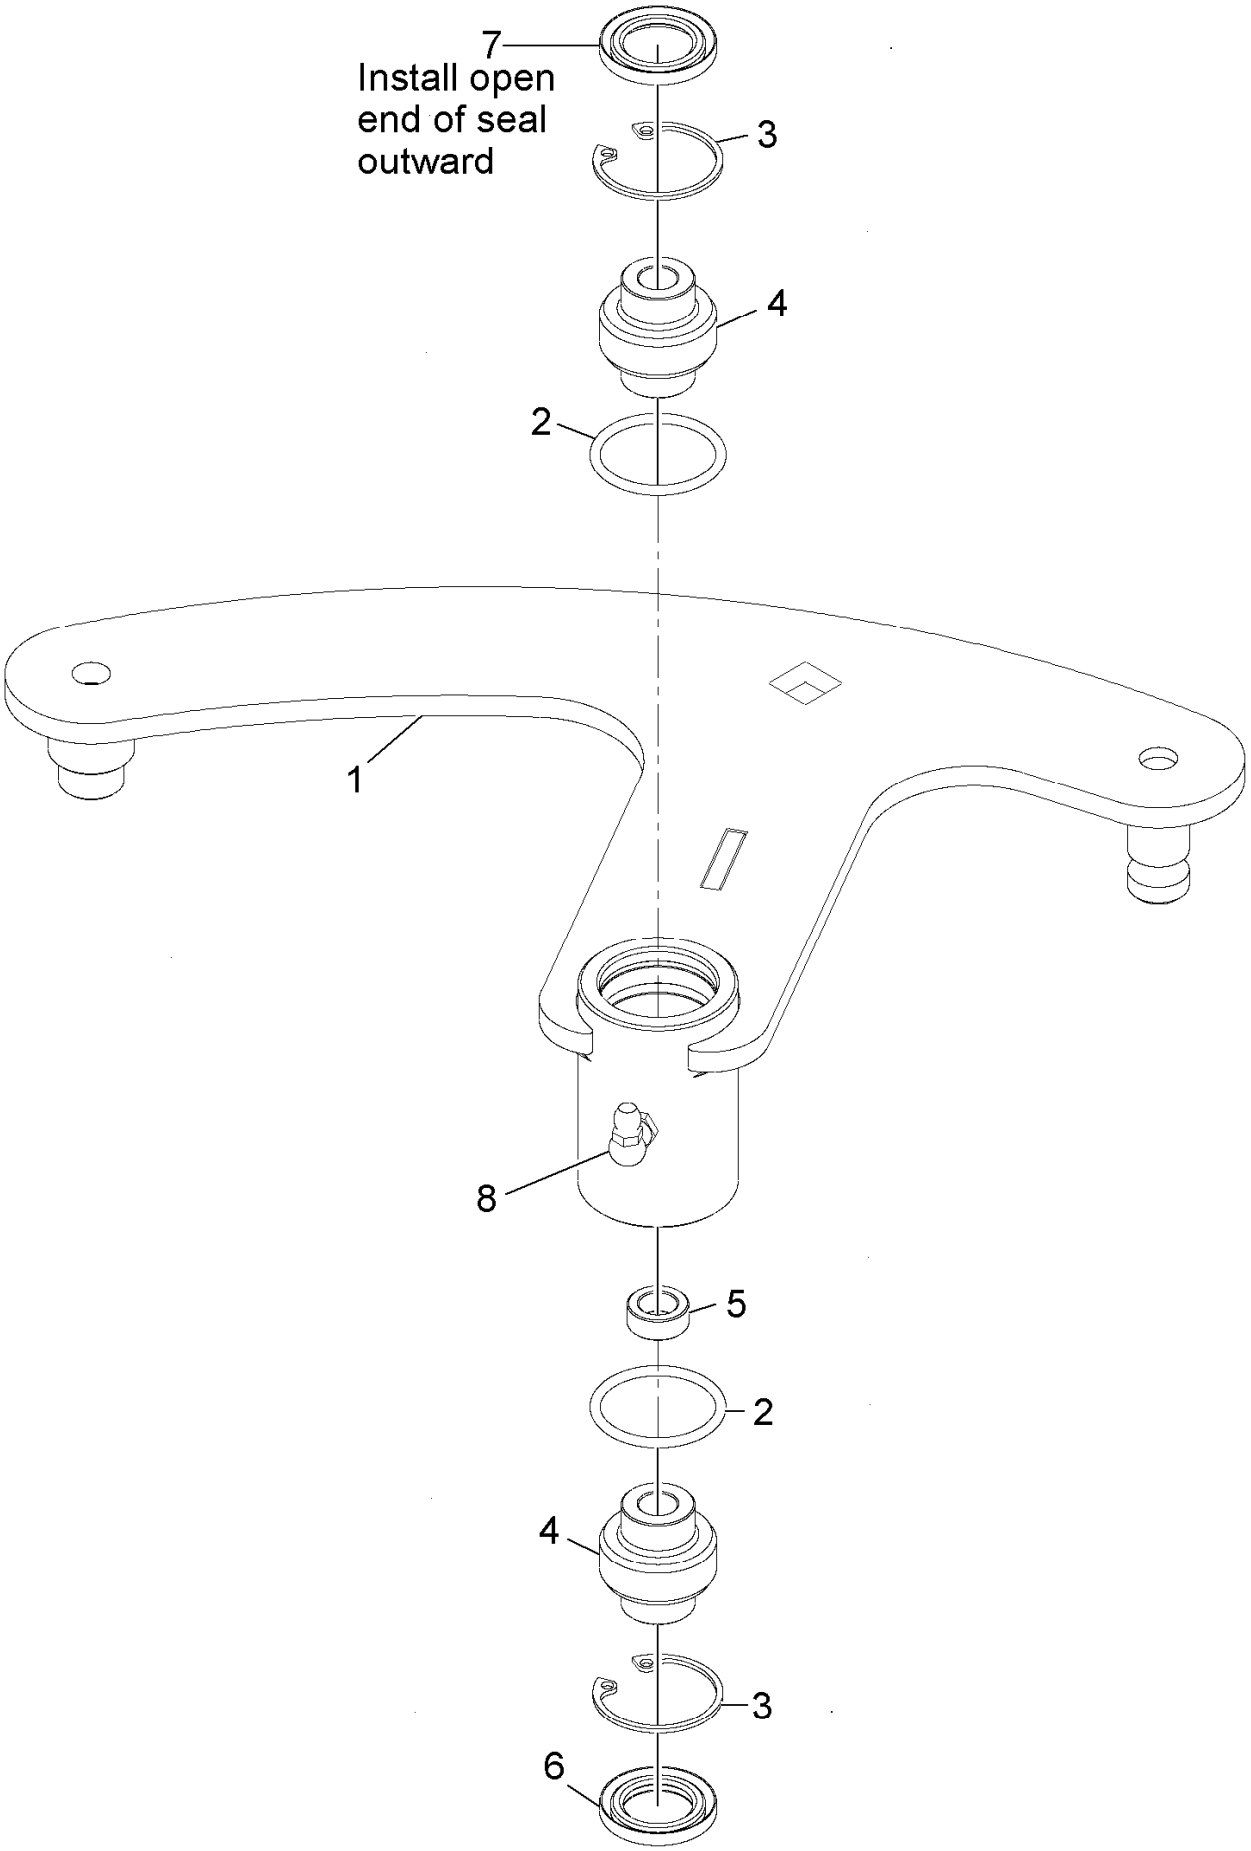


Deck Idler Assembly No. 126-2314 (continued)

Ref.	Part Number	Qty.	Description
1		1	Weld, Idler Arm ●
2	106-7159	2	O-Ring
3	32120-10	2	Ring-Snap
4	103-3504	2	Bearing-Spherical
5	103-5677	1	Spacer
6	103-3505	1	Seal-Double Lip
7	103-3506	1	Seal-Lip, Single
8	302-40	1	Fitting-Grease, 90 DEG

● Not serviced separately

Frame Assembly

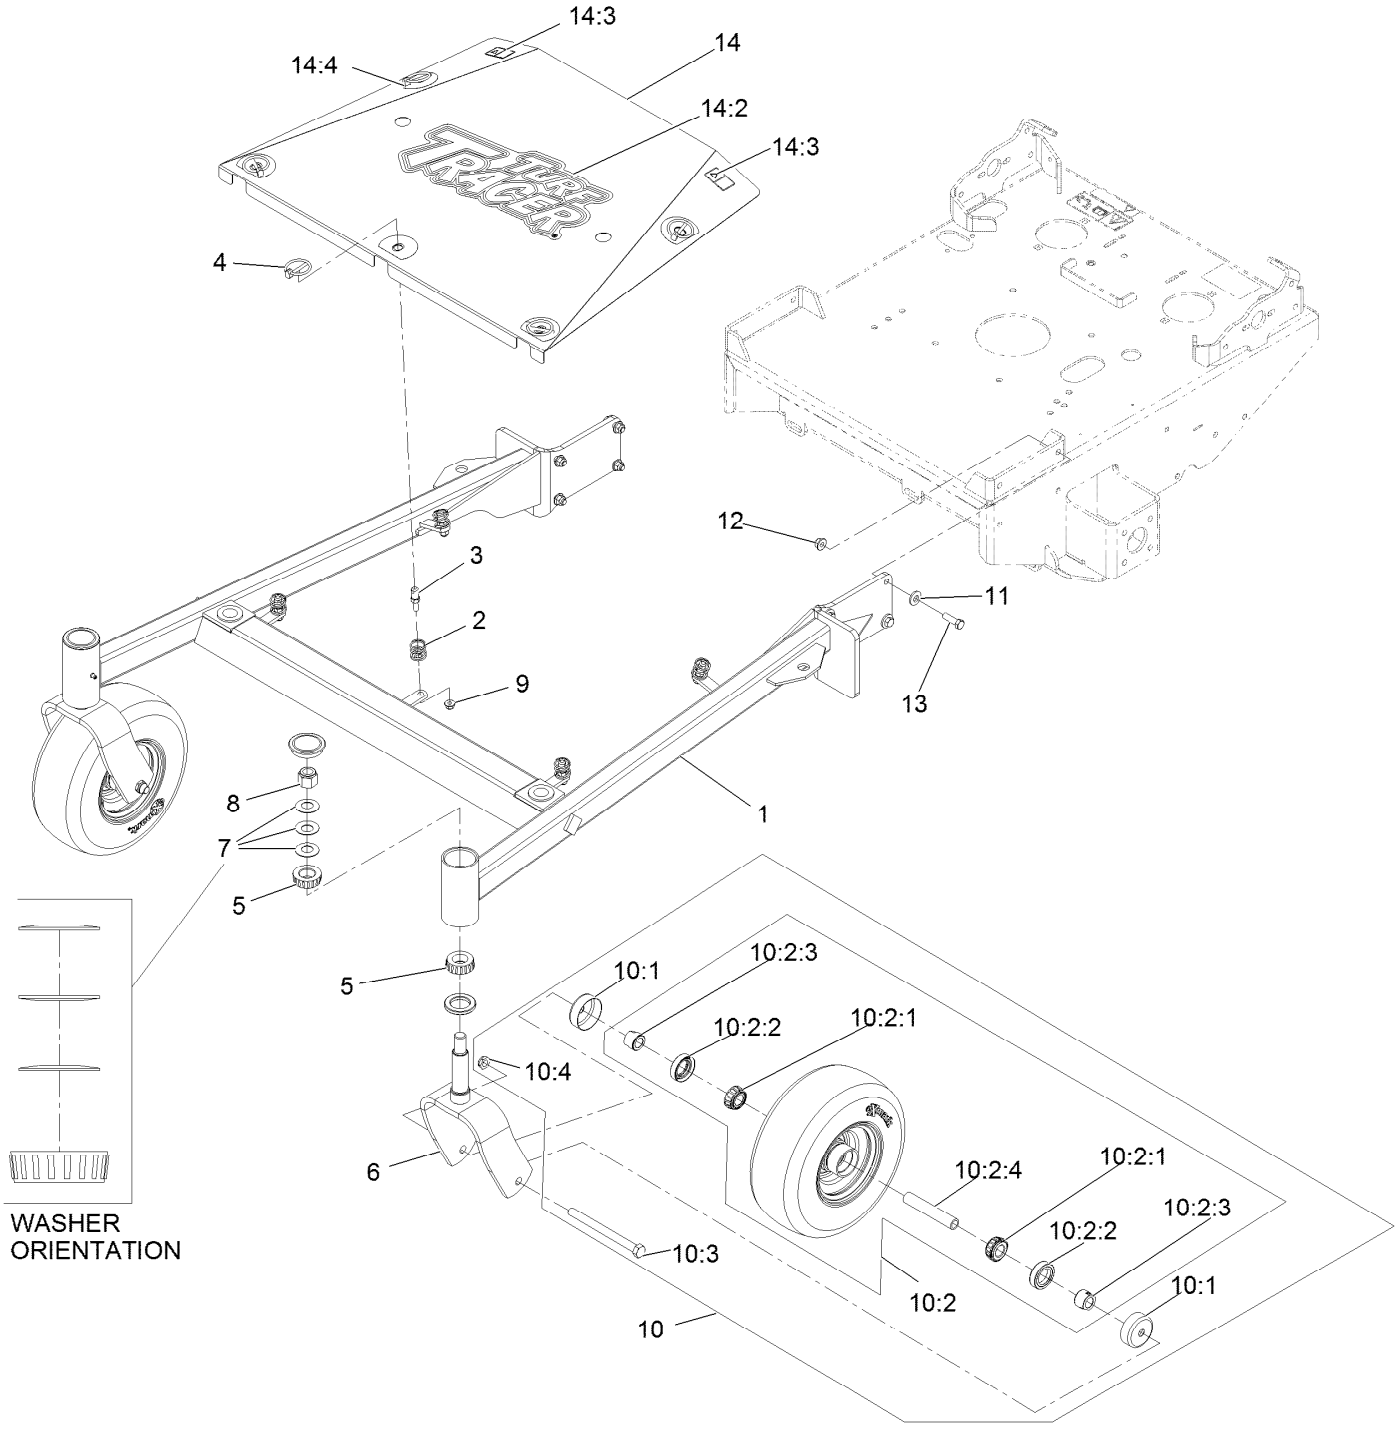


Frame Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2540	1	ASM, Front Frame W/ Bearings, 52
2	126-1503	5	Spring
3	126-1504	5	Pin, Spring
4	92-1298	5	Pin-Lynch
5	1-543509	4	Cone-Bearing Tapered Roller
6	103-1891-01	2	Wld, Caster Fork
7	1-633508	6	Washer-Spring Disc
8	3296-51	2	Nut-Nyloc 3/4-10
9	104-8300	5	Nut-Nyloc 5/16-18 Flg
10		2	ASM,Wheel&bearings ●
10:1	103-2768	2	Guard-Seal
10:2		1	ASM,Wheel And Bearing ●
10:2:1	1-633585	2	Bearing-Cone, Taper
10:2:2	103-0063	2	Seal-Caster
10:2:3	103-3051	2	Spacer-Nut
10:2:4	103-3157	1	Axle-Caster
10:3	325-20	1	Screw-HH
10:4	3296-45	1	Nut-Lock, NI
11	98-5975	8	Washer-Spring Disc 3/8
12	104-8301	8	Nut-Nyloc 3/8-16 Flg
13	323-7	8	Screw-HH 3/8-16 X 1 1/4
14	126-2544	1	ASM, Center Shield W/ Decals, 52
14:2	103-3013	1	Decal, Turf Tracer
14:3	106-5517	2	Decal-Warning, Hot Surface
14:4	126-1692	5	Decal-Scratch Cover

● Not serviced separately


Front Frame Assembly No. 126-2540

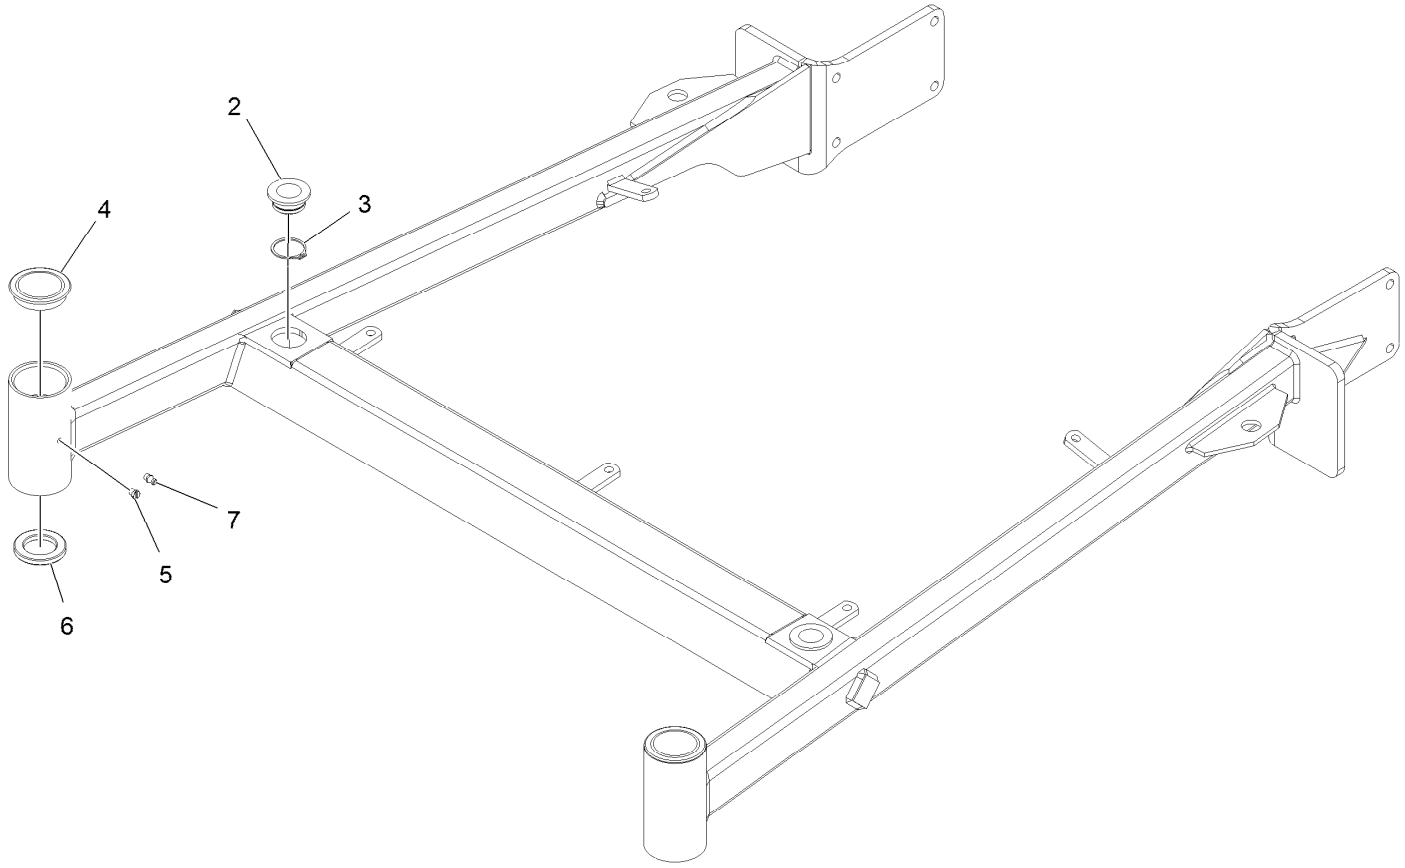

Front Frame Assembly No. 126-2540 (continued)

Ref.	Part Number	Qty.	Description
2	1-513336	2	Bushing-Deck
3	32120-33	2	Ring-Retaining
4	103-4882	2	Cap-Grease
5	1-811010	2	Plug
6	1-543511	2	Seal-Grease
7	302-19	1	Zerk-1/4-28 Str

ECS Upper Handle Controls Assembly

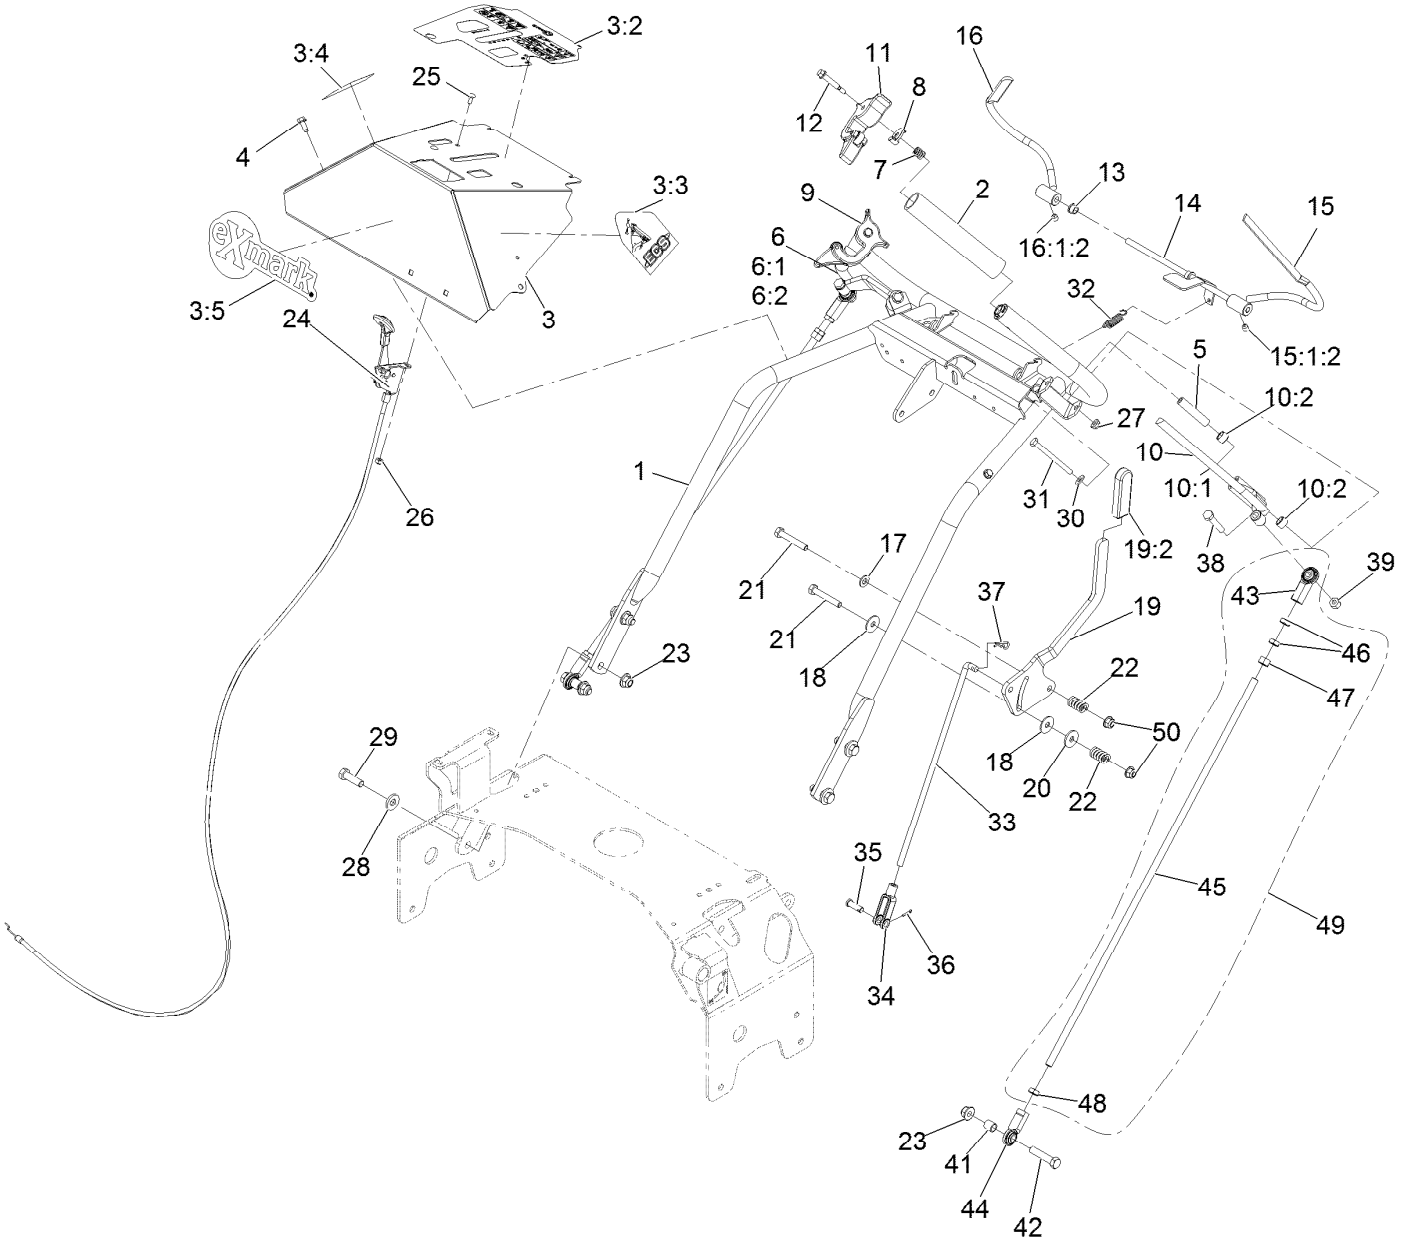


ECS Upper Handle Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2642-03	1	Weld, Handle
2	103-0815	2	Grip-Bar, Handle
3	126-2820	1	ASM, Console W/ Decals
3:2	126-3315	1	Decal-Console Ttx Efi
3:3	103-2242	1	Decal, Ecs Instruction LH
3:4	103-2243	1	Decal, Ecs Instruction RH
3:5	103-2882	1	Decal, Exmark Logo
4	32144-10	2	Screw-HWH 1/4-20 X .62
5	103-0027	2	Bushing-Lever, Drive
6	103-2513	1	Asm, Drive Lever RH
6:1	116-4082	1	Wld,RH Drive Lever
6:2	1-413152	2	Bushing-Sleeve
7	1-633349	2	Spring-Compression
8	126-2921	2	Latch, Ecs
9	103-1371	1	Thumb Latch Asm RH
10	103-2514	1	Asm, Drive Lever LH
10:1	116-4081	1	Wld,LH Drive Lever
10:2	1-413152	2	Bushing-Sleeve
11	103-1372	1	Thumb Latch Asm LH
12	126-2931	2	Screw-Shoulder
13	1-303365	2	Bushing-Nylon
14	103-0769-03	1	Rod Weldment, Opc
15	116-4079	1	Wld,LH Opc Lever ■
15:1:2	1-803322	1	Setscrew-5/16-24 X 5/16 ●
16	116-4080	1	Wld,RH Opc Lever ■
16:1:2	1-803322	1	Setscrew-5/16-24 X 5/16 ●
17	3256-23	1	Washer-5/16 Sae
18	1-323244	2	Washer-Friction
19	126-0148	1	Lever, Shift W/Grip
19:2	103-5994	1	Grip-Handle, Steering
20	1-603716	1	Washer-Friction Disc
21	322-11	2	Screw-HH
22	1-323245	2	Spring-Compression
23	104-8301	6	Nut-Nyloc 3/8-16 Flg
24	109-3958	1	Control-Throttle
25	1-807513	2	Bolt-Carriage #10-24 X 1/2
26	3296-2	2	Nut-Nyloc #10-24
27	104-7201	2	Nut-Nyloc 1/4-20 Flg
28	98-5975	4	Washer-Spring Disc 3/8
29	323-7	4	Screw-HH 3/8-16 X 1 1/4
30	3256-22	2	Washer-1/4 Sae
31	321-14	2	Screw-HH 1/4-20 X 2 3/4
32	1-303363	1	Spring-Extension
33	1-413225	1	Rod, Speed Control
34	1-303105	1	Yoke-Adjustable
35	1-808280	1	Pin-Clevis 5/16 X 1 49/64
36	3272-5	1	Pin-Cotter 3/32 X 1/2
37	1-806003	1	Hairpin-Cotter
38	322-9	2	Screw-HH 5/16-18 X 1 3/4
39	3296-29	2	Nut-Nyloc 5/16-18
41	103-1166	2	Spacer-Tube, Pump Link
42	323-9	2	Screw-HH 3/8-16 X 1 3/4
43	103-2463	4	Balljoint
44	103-1167	2	Joint-Ball End
45	103-1148	2	Rod,Drive Lever
46	3220-3	4	Nut-Jam 3/8-24
47	3219-3	2	Nut-Hex 3/8-24
48	3220-16	2	Nut-Jam 3/8-24 LH
49	116-3414	2	Drive Link ASM
50	104-8300	2	Nut-Nyloc 5/16-18 Flg

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.
■ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on inside of bore of OPC hub.


Controls Assembly

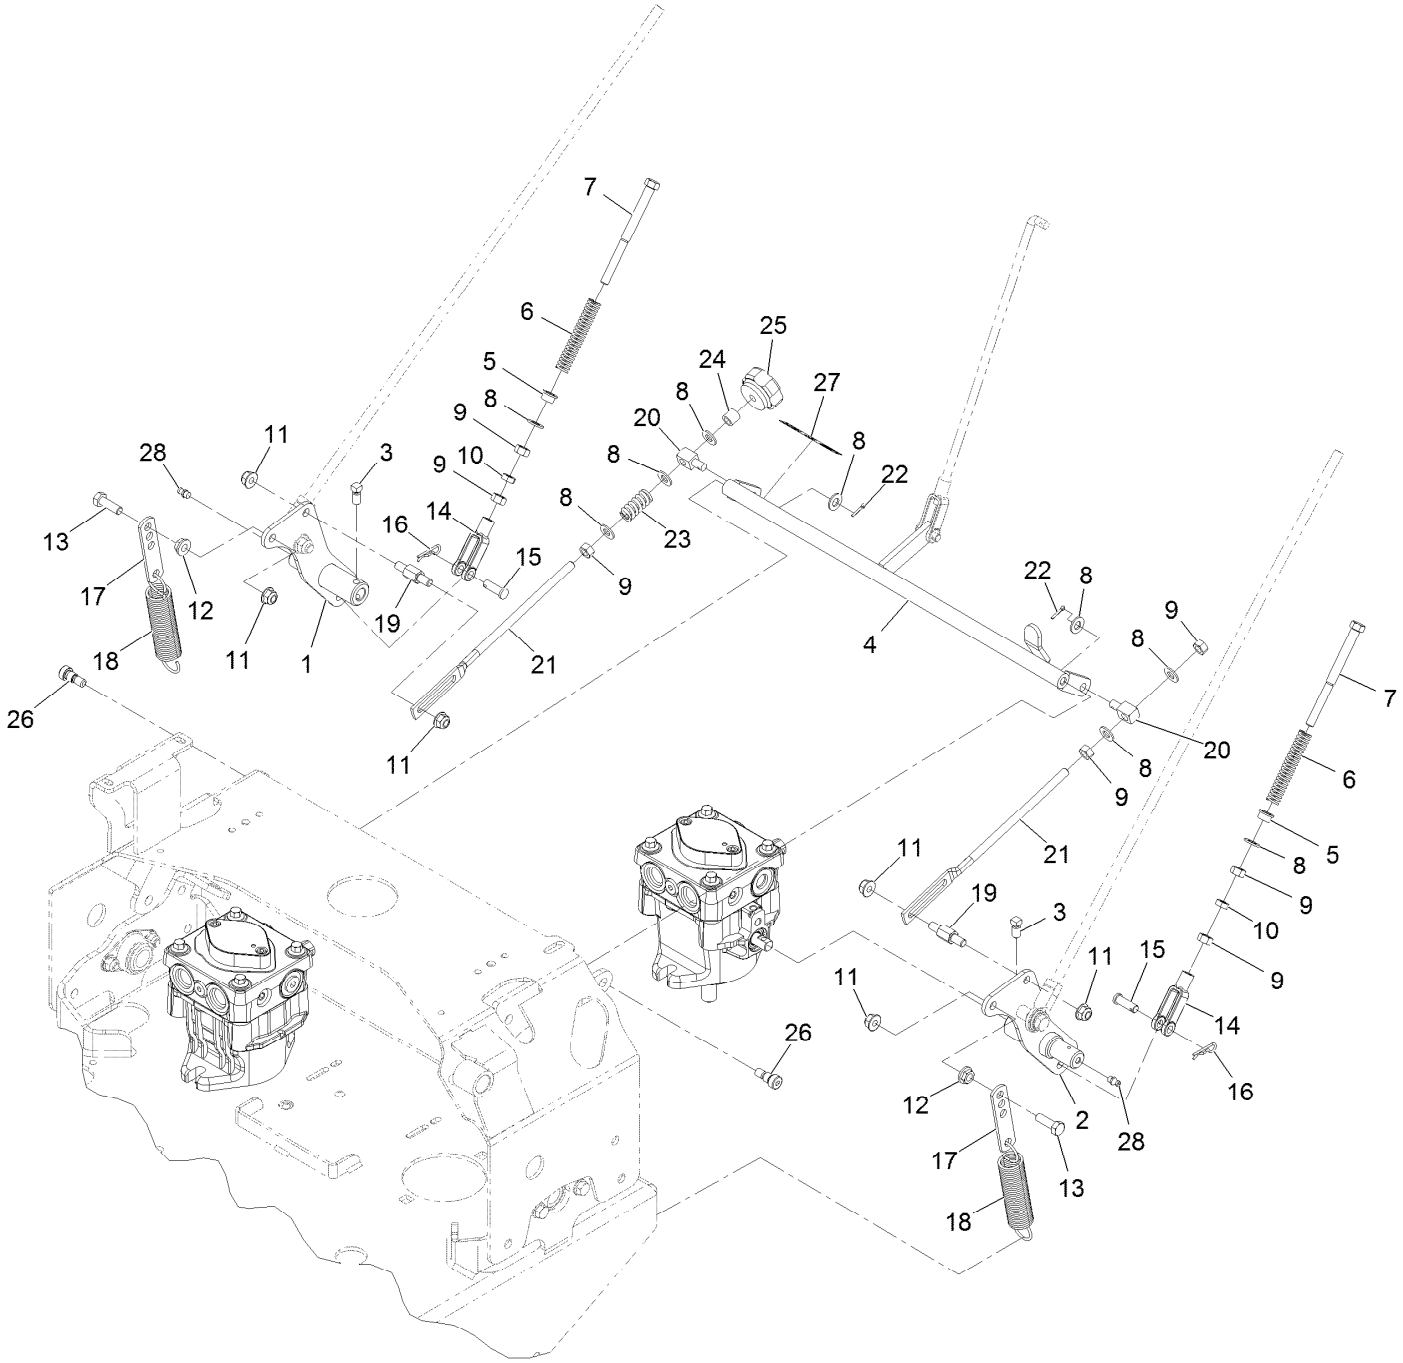

Controls Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-9975	1	Weld, Motion Control, Rt
2	116-9974	1	Weld, Motion Control, Lt
3	1-803022	2	Setscrew-5/16-18 X 5/8
4	126-2982-01	1	Weld, Speed Control
5	1-603735	2	Bushing-Flanged
6	103-0265	2	Spring, Neutral Return
7	1-603737	2	Bolt-Neutral Return
8	3256-23	9	Washer-5/16 Sae
9	3219-2	7	Nut-Hex 5/16-24
10	3220-2	2	Nut-Jam 5/16-24
11	104-8300	6	Nut-Nyloc 5/16-18 Flg
12	32128-20	2	Nut-Whizlock 5/16-18
13	322-5	2	Screw-HH 5/16-18 X 1
14	1-303105	2	Yoke-Adjustable
15	1-808280	2	Pin-Clevis 5/16 X 1 49/64
16	1-806003	2	Hairpin-Cotter
17	1-613089	2	Tab-Spring, Extension
18	1-603693	2	Spring
19	126-0610	2	Pin, Motion Control
20	1-603676	2	Swivel-Adjustable, Short
21	1-413350	2	Link-Control, Speed
22	3272-5	2	Pin-Cotter 3/32 X 1/2
23	1-323245	1	Spring-Compression
24	1-603903	1	Spacer
25	103-3060	1	Knob-Tracking
26	1-809056	2	Screw-Sh 5/16-18 X 1 3/8
27	116-7918	1	Decal-Tracking Adjustment
28	302-19	2	Zerk-1/4-28 Str


Engine Deck Assembly

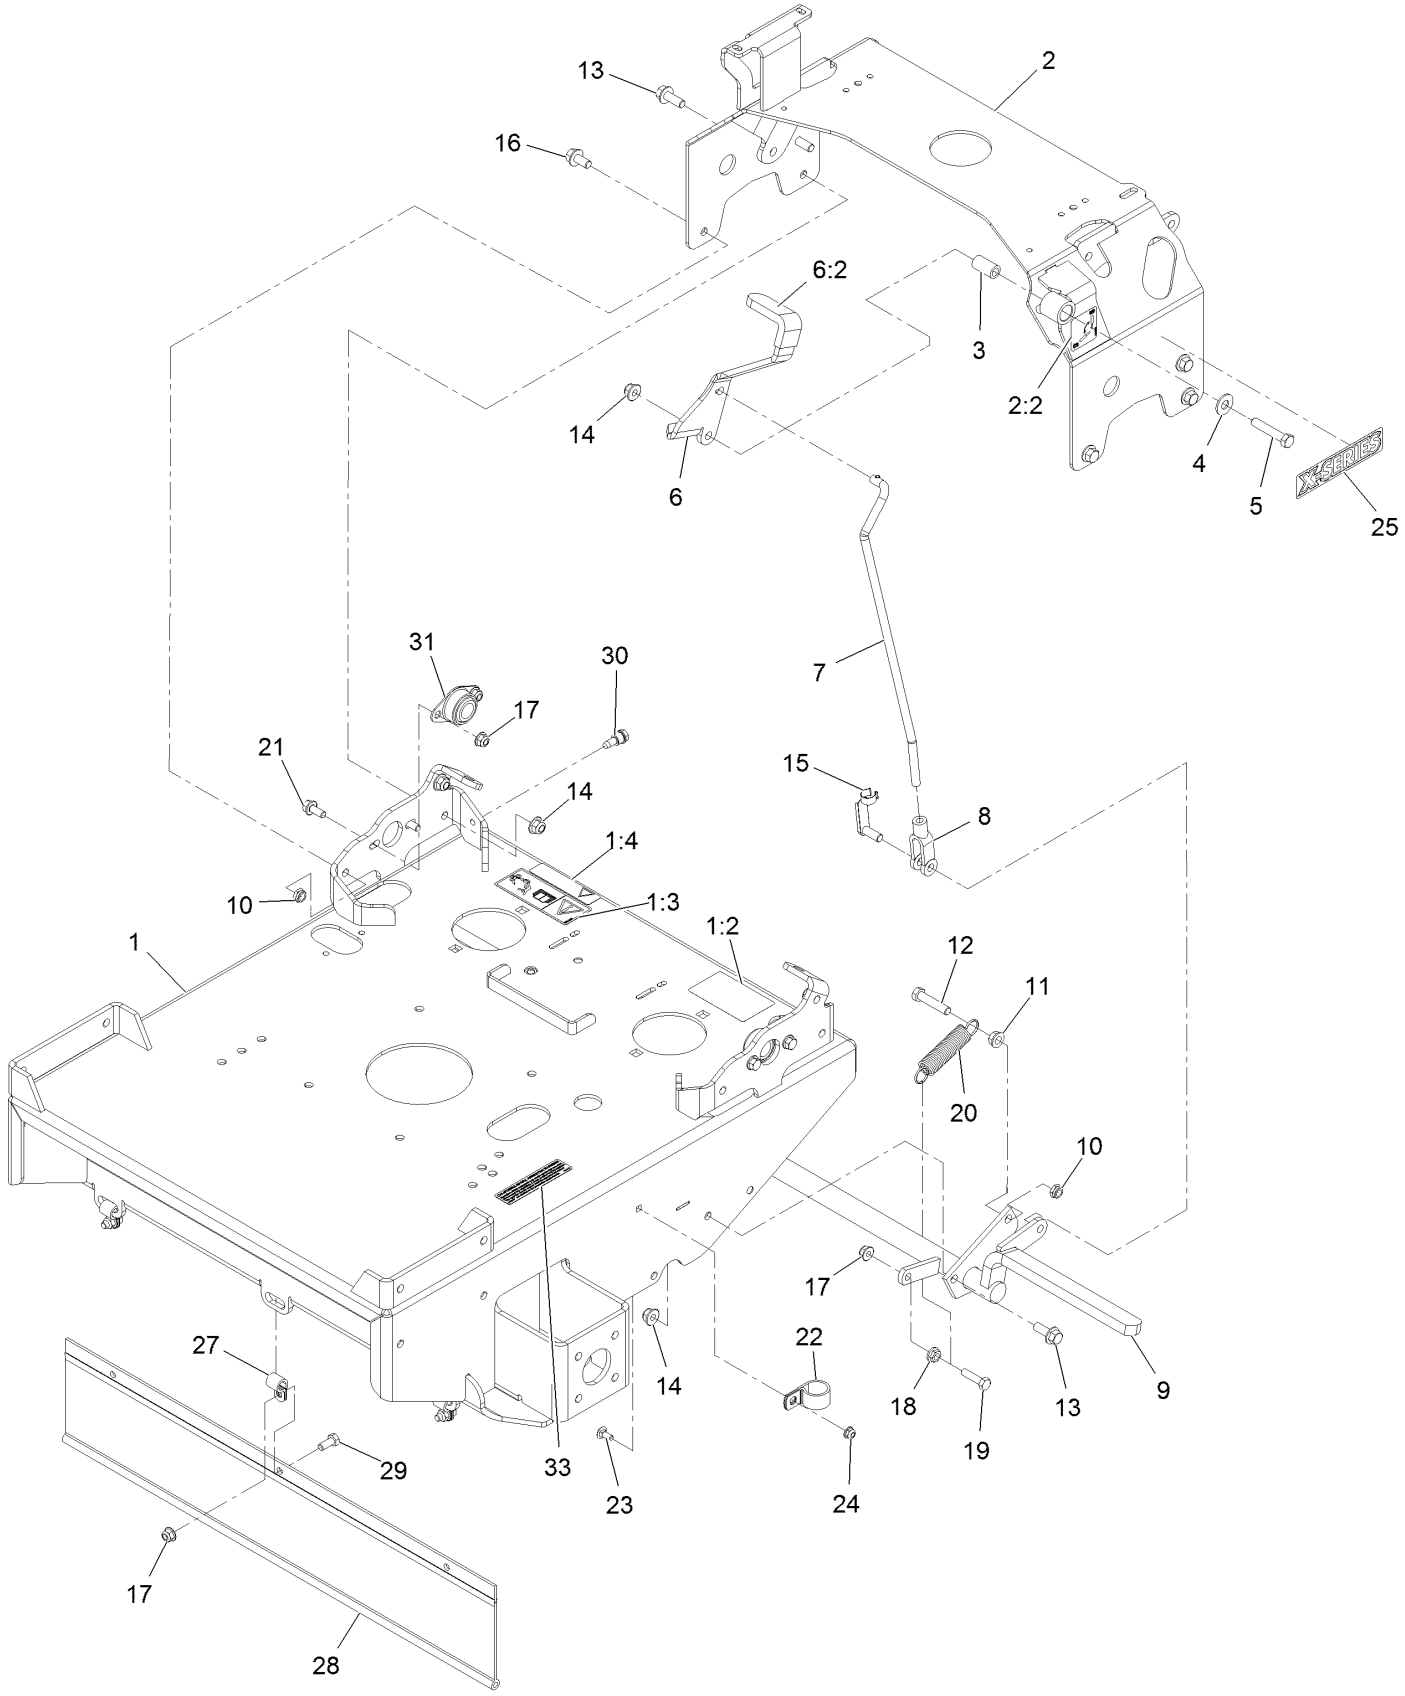

Engine Deck Assembly (continued)

Ref.	Part Number	Qty.	Description
1	126-2521	1	ASM, Engine Deck W/ Decals
1:2	98-1977	1	Decal-Warning
1:3	126-1400	1	Decal-Warning, Sulky
1:4	116-8253	1	Decal-Drive Release
2	126-2181	1	ASM, Tank Support W/ Decal
2:2	116-5988	1	Decal-Park Brake, Ce
3	1-413344	1	Bushing-Pivot
4	3256-4	1	Washer-3/8 Std
5	323-10	1	Screw-HH 3/8-16 X 2
6	126-2180	1	ASM, Brake Lever W/ Grip
6:2	1-303020	1	Grip-Lever
7	116-9960	1	Linkage-Brake
8	1-633131	1	Yoke-Linkage, Brake
9	116-9159	1	Wld,Brake Ttx
10	3296-59	3	Nut-Nyloc 3/8-16 Thin
11	3290-357	1	Nut-Whizlock 3/8-16
12	323-9	1	Screw-HH 3/8-16 X 1 3/4
13	3234-42	7	Screw HHF 3/8-16 X 1
14	104-8301	8	Nut-Nyloc 3/8-16 Flg
15	103-2399	1	Pin-Clevis Spring 3/8
16	3234-12	2	Screw-HH Flg 3/8-16 X 3/4
17	104-8300	8	Nut-Nyloc 5/16-18 Flg
18	32128-20	1	Nut-Whizlock 5/16-18
19	322-6	1	Screw-HH 5/16-18 X 1 1/4
20	1-323161	1	Spring
21	3234-47	4	Screw-HH Flg 5/16-18 X 3/4
22	1-643312	1	Clip-Loom
23	3229-11	1	Bolt-Carriage 1/4-20 X 5/8
24	104-7201	1	Nut-Nyloc 1/4-20 Flg
25	116-3883	2	Decal-X-Series
27	1-413510	3	Clip-Loom
28	103-2224	1	Shield, Drag
29	322-3	3	Screw-HH 5/16-18 X 3/4
30	115-1958	1	Bolt-Shoulder
31	1-633102	2	Bearing-Flanged
33	117-2718	1	Decal-Arrester, Spark

Engine Assembly

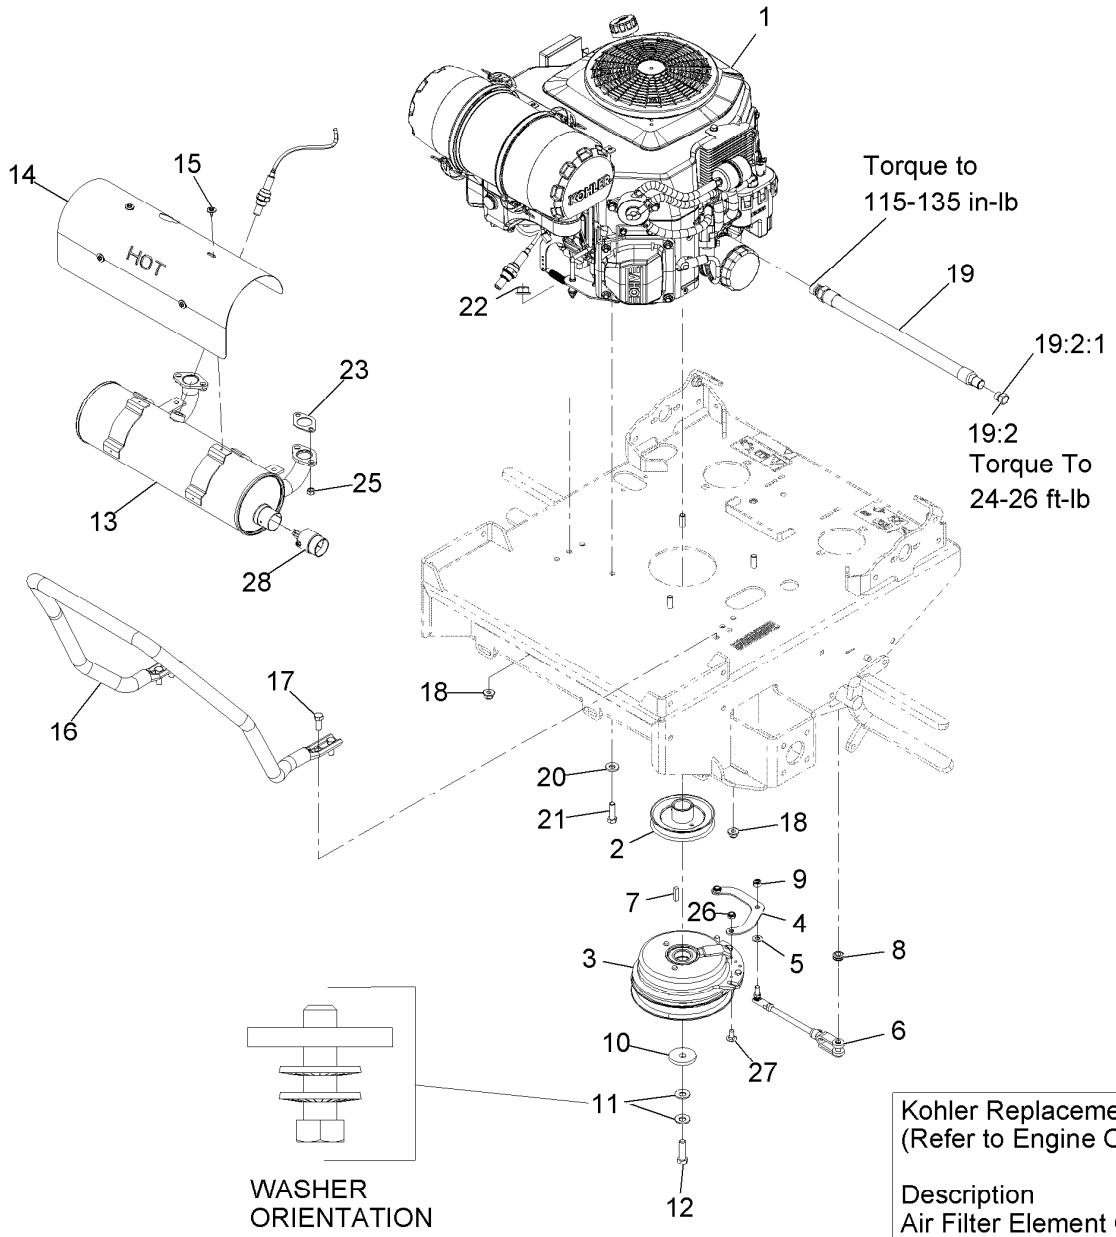

Kohler Replacement Parts List (Refer to Engine Owner's Manual)	
Description	Kohler P/N
Air Filter Element Outer	2508301-S
Air Filter Element Inner	2508304-S

Engine Assembly (continued)

Ref.	Part Number	Qty.	Description
1		1	Engine, Kohler Pcv680 ●■
2	126-2605	1	Sheave W/ Hub
3	126-2601	1	Clutch, 200 Ft/Lbs, 1.13
4	126-2602	1	Strap, Clutch
5	3256-23	1	Washer-5/16 Sae
6	126-0620	1	ASM, Clutch Anchor
7	1-807259	1	Key-Machine 1/4 X 1/4 X 1 ❑
8	237-136	1	Grommet
9	3296-4	1	Nut-Lock 5/16-24
10	109-6919	1	Washer-Clutch
11	1-603610	2	Washer-Spring Disc 7/16
12	87-2080	1	Bolt-Hex, TAP ◆
13	116-8653	1	Muffler-Ttx, Efi
14	116-8654	1	Shield-Muffler,Ttx Efi
15	116-1103	4	Screw-HH, Thread Forming
16	116-8575-03	1	Guard,Air Cleaner
17	323-6	4	Screw-HH 3/8-16 X 1
18	104-8301	4	Nut-Nyloc 3/8-16 Flg
19	116-5316	1	Oil Drain Hose ASM ▲
19:2	353-508	1	Plug-W/O-Ring
19:2:1	237-42	1	O-Ring
20	1-303334	4	Washer-Spring Disc 5/16
21	322-7	4	Screw-HH 5/16-18 X 1 1/2
22	104-8300	4	Nut-Nyloc 5/16-18 Flg
23	110-6697	2	Gasket-Exhaust
25	114-3549	4	Nut-M8
26	3296-47	2	Nut-Nyloc 5/16-18 Thin
27	3230-18	2	Bolt-Carriage 5/16-18 X 5/8
28	116-0433	1	Arrestor,Spark 1.375 Dia

● Not serviced separately


■ Obtain parts from www.kawpowerepc.com

▲ Use a Teflon Pipe Sealant or equivalent on threads.

◆ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

❑ Apply anti-seize compound to engine crankshaft, pulley hub I.D., clutch bore I.D. and square key.


LPG Fuel Assembly

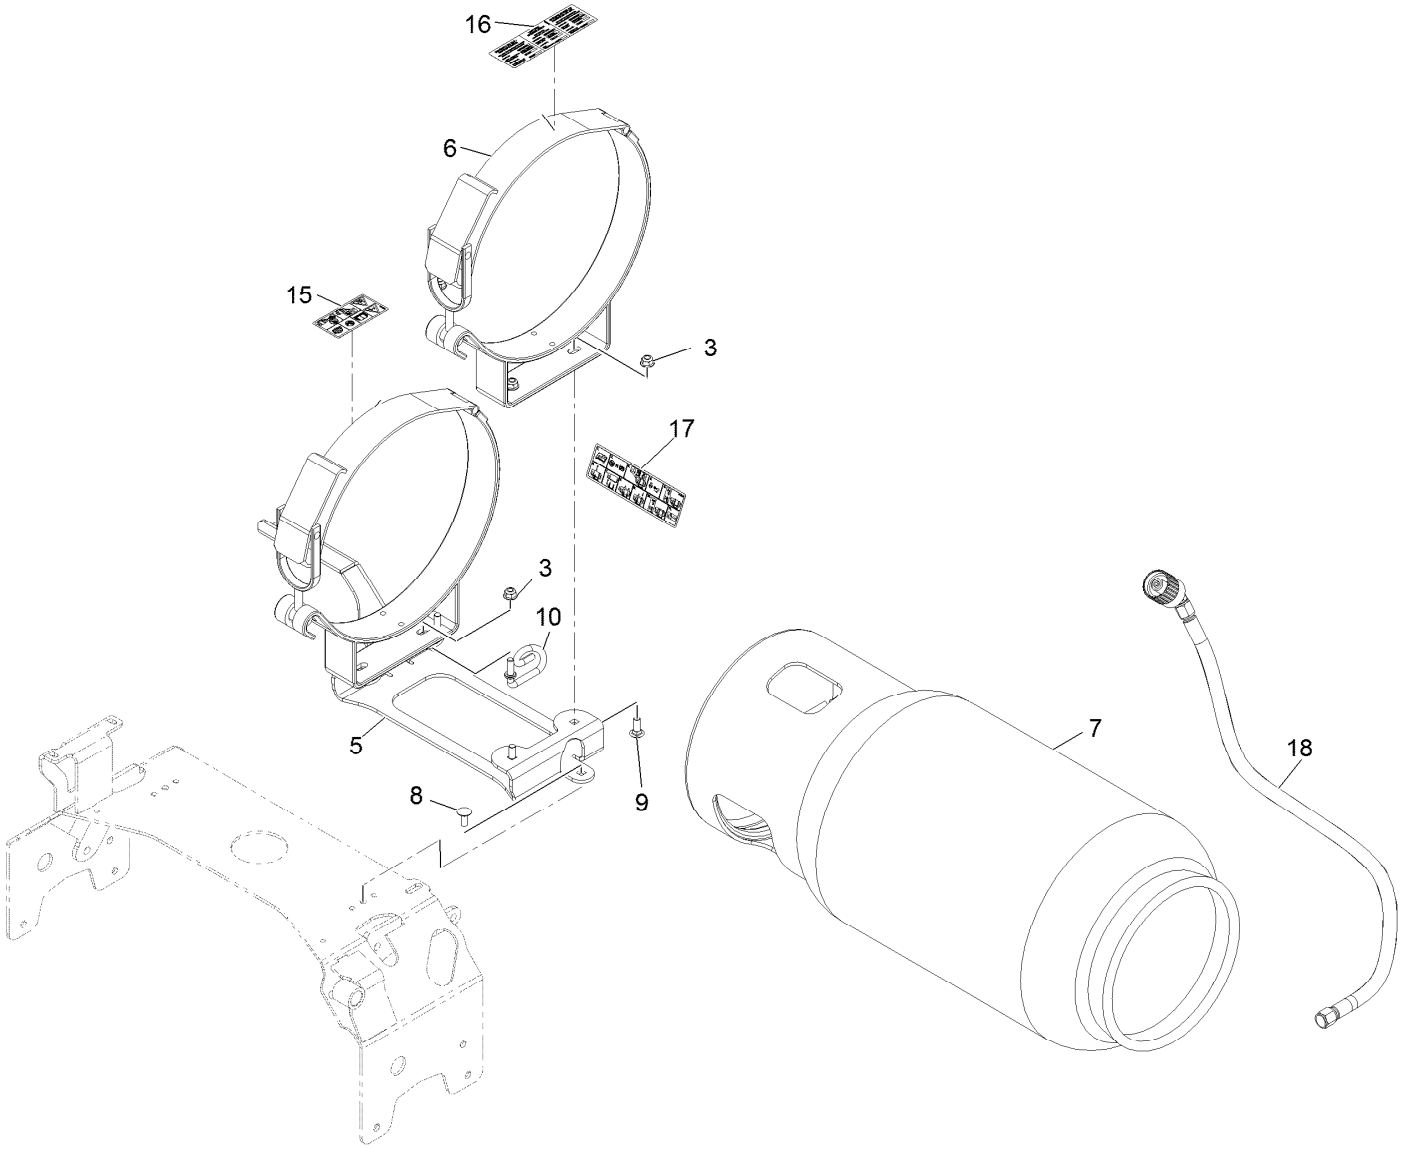

LPG Fuel Assembly (continued)

Ref.	Part Number	Qty.	Description
3	104-8300	4	Nut-Nyloc 5/16-18 Flg
5	126-1491-03	1	Weld, Tank Mount
6	116-1074	2	Brackets, LPG Tank - Horizontal (Pair)
7	126-4506	1	Tank, LP - 33.5 Lb.Horizontal-Al
8	3230-23	2	Bolt-Carriage 5/16-18 X 3/4 Short Neck
9	3230-16	3	Bolt-Carriage 5/16-18 X 7/8
10	126-1921	1	Retainer, LP Hose
15	126-3275	1	Decal-LPG Warning
16	126-3276	1	Decal-LPG Horiz Tank Spec
17	126-3277	1	Decal-LPG Fuel Tank Replacement
18	126-2144	1	ASM, Hose-LPG

Hydro Assembly

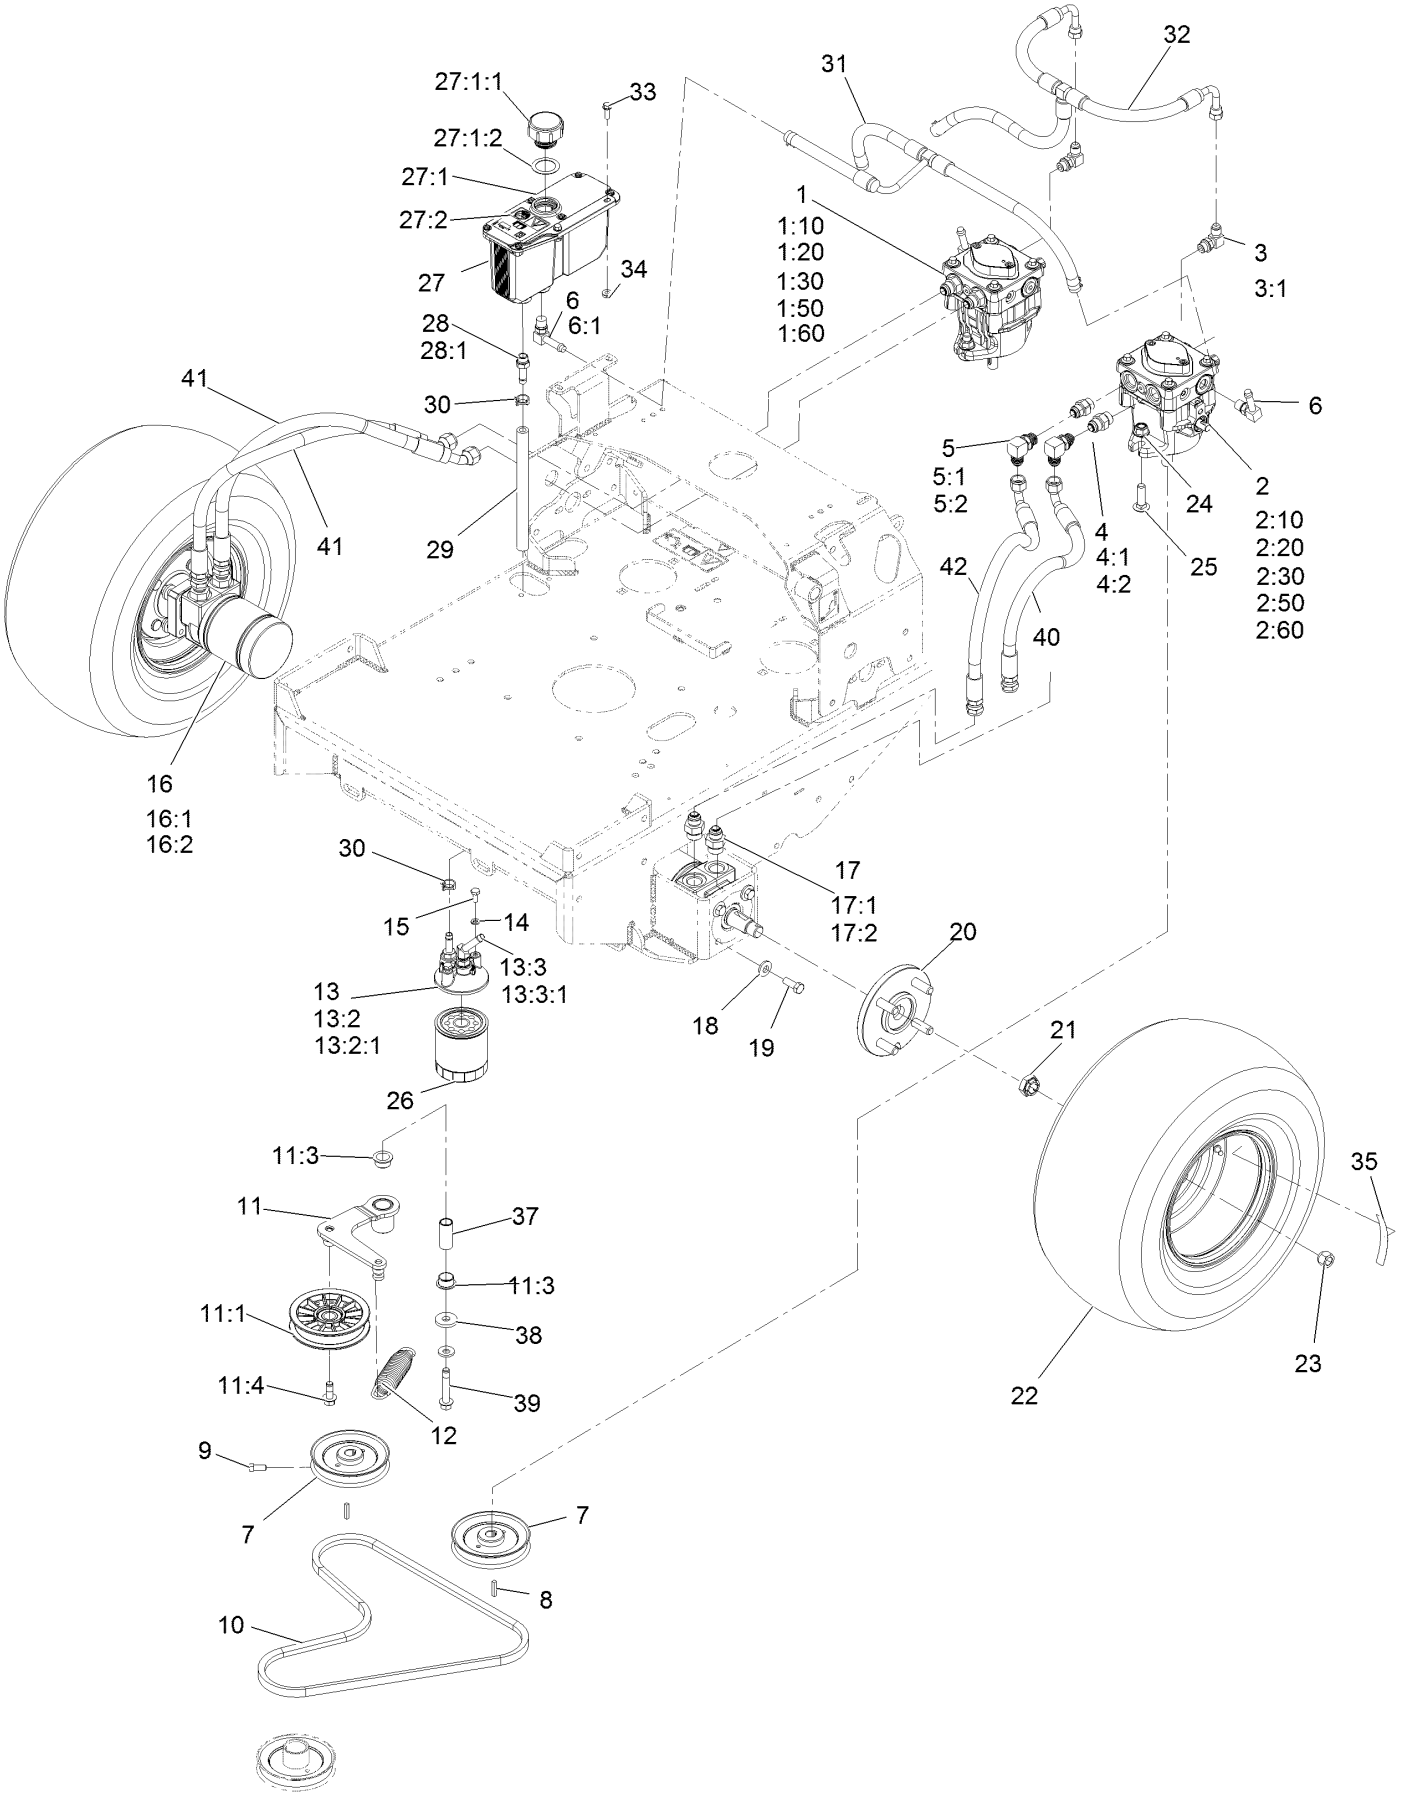


Hydro Assembly (continued)

Ref.	Part Number	Qty.	Description
1	116-2495	1	Pump-HYD Pe RH TTH
1:10	103-2664	1	Input Shaft Kit
1:20	94-6922	1	Bearing-Thrust
1:30	103-2666	1	Cylinder Block Kit
1:50	105-6184	1	Seal Overhaul Kit
1:60	126-2479	1	Kit, 10Cc Pump Kit
2	116-2494	1	Pump-HYD Pe LH TTH
2:10	103-2664	1	Input Shaft Kit
2:20	94-6922	1	Bearing-Thrust
2:30	103-2666	1	Cylinder Block Kit
2:50	105-6184	1	Seal Overhaul Kit
2:60	126-2479	1	Kit, 10Cc Pump Kit
3	103-1802	2	Fitting-HYD, 90 DEG
3:1	1-603921	1	O-Ring-Sae #6
4	1-603990	2	Adapter-Straight
4:1	1-603920	1	O-Ring-Sae #8
4:2	1-603992	1	O-Ring-37 Flare #8
5	103-2153	2	Elbow-90°
5:1	1-603920	1	O-Ring-Sae #8
5:2	1-603992	1	O-Ring-37 Flare #8
6	100-4887	3	Fitting-Barbed, 90 DEG
6:1	237-42	1	O-Ring
7	1-413010	2	Sheave ASM
8	1-807272	2	Key-5Mm X 5Mm X 25Mm
9	120-6474	4	Screw-Set, SQH 5/16-18 X 3/4
10	103-4761	1	Belt
11	126-2531	1	ASM, Pump Idler
11:1	109-4077	1	Pulley-Idler, Flat
11:3	109-8054	2	Bushing-Flanged
11:4	126-1680	1	Screw-Hfh
12	116-6316	1	Spring-Extension
13	126-0621	1	ASM, Filter Head
13:2	103-1912	1	Adapter-Straight
13:2:1	237-42	1	O-Ring
13:3	103-1807	1	Fitting-Barbed, 45 DEG
13:3:1	237-42	1	O-Ring
14	1-805004	2	Washer-Lock 1/4 Heavy
15	321-3	2	Screw-HH 1/4-20 X 5/8
16	1-603718	2	HYD Motor ASM
16:1	1-000119	1	Seal Kit
16:2	1-000138	1	Bearing And Seal Kit
17	1-603991	4	Adapter-Straight
17:1	237-80	1	O-Ring
17:2	1-603992	1	O-Ring-37 Flare #8
18	98-5975	9	Washer-Spring Disc 3/8
19	323-6	8	Screw-HH 3/8-16 X 1
20	112-9049	2	Wheel Hub ASM
21	116-2839	2	Nut-Lock
22	103-1715	2	Tire And Wheel Assy
23	242-50	8	Nut-Lug 1/2-20
24	114-8417	4	Nut-HF, NI
25	3232-3	4	Bolt-Carriage 7/16-14 X 1 1/2
26	109-4180	1	Element, Oil Filter
27	126-1248	1	ASM, HYD Reservoir ■
27:1		1	Reservoir-HYD ●
27:1:1	103-1948	1	Cap-Reservoir, HYD
27:1:2	103-1949	1	Gasket-Cap
27:2	115-4212	1	Decal-Warning
28	103-1912	1	Adapter-Straight
28:1	237-42	1	O-Ring
29	109-1010	1	Hose, Hydraulic
30	103-1988	6	Clamp-Hose 11/16
31	126-2550	1	Hose, Case
32	126-2555	1	Hose, Charge
33	32105-15	2	Screw-Machine 1/4-20 X 3/4
34	32128-33	2	Nut-Whizlock 1/4-20
35	126-2056	2	Decal-Torque Wheel Lug-Hub
37	126-2954	1	Pivot, Idler
38	1-373034	1	Washer
39	126-2956	1	Screw-HHF W/ Patch
40	126-3311	1	ASM, HP Hose
41	116-8646	2	Hose,Hydraulic W/Cover
42	119-7827	1	HYD Hose ASM

● Not serviced separately

■ Use Exmark Premium Hydro Oil P/N 109-9828 (32oz)

Electrical Assembly

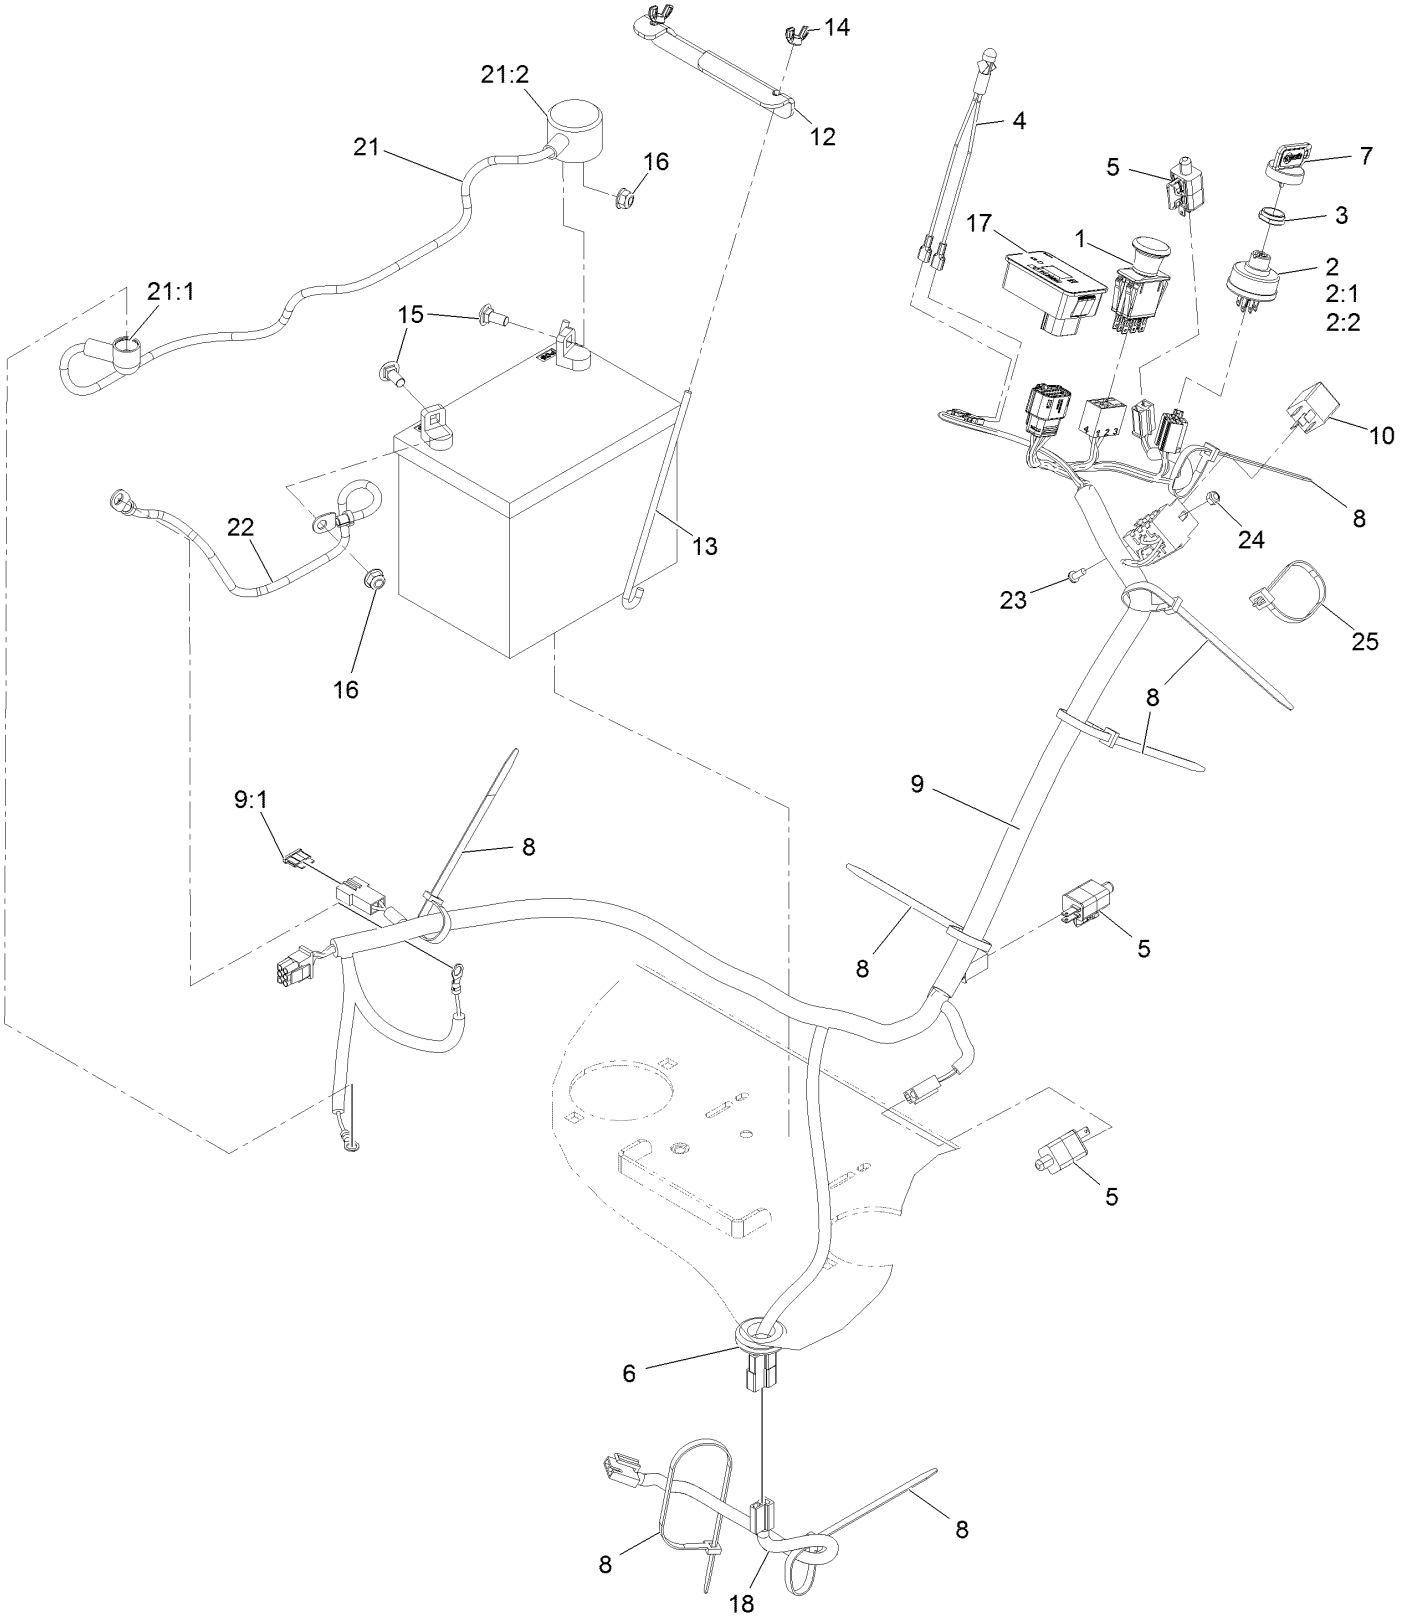

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description
1	103-5221	1	Switch-PTO
2	103-0206	1	Switch-Ignition W/Keys
2:1	3254-5	1	Washer-Tooth, Internal
2:2	218-461	1	Nut-HH
3	103-0498	1	Nut-Ignition
4	1-643267	1	Indicator-Red Led
5	110-6765	3	Switch
6	1-543286	1	Grommet
7	103-2106	1	Key-Exmark Logo
8	1-303335	7	Tie-Cable 7 15/16 (Large)
9	126-3011	1	Harness-Main Ttx Kohler Efi ■
9:1	1-816001	1	Fuse-Blade Type, 20 Amp
10	1-643275	1	Relay-12Vdc 40 Amp
12	126-0008	1	Bracket, Battery Hold Down
13	1-633651	2	Bolt-Holddown
14	1-543792	2	Wingnut-Nyloc 1/4-20
15	3230-1	2	Bolt-Carriage 5/16-18 X 3/4
16	104-8300	2	Nut-Nyloc 5/16-18 Flg
17	116-8893	1	Module-Hour Meter
18	126-0624	1	Harness-Clutch Pigtail
21	109-7621	1	Positive Battery Cable ASM
21:1	1-543393	1	Insulator-Solenoid
21:2	109-2407	1	Insulator-Battery
22	1-413540	1	Cable-Battery, Negative ●
23	1-803071	1	Screw-Machine #10-24 X 1/2
24	3296-2	1	Nut-Nyloc #10-24
25	1-643115	1	Tie-Cable 11.4

● Not illustrated
■ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

Notes:

EXMARK® MAINTENANCE

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK.

4-CYCLE PREMIUM ENGINE OIL
Part No. 116-3373

Both SAE 30 and SAE 10W-30 in one bottle.

Contains increased levels of zinc and phosphorus for better lubricity.

No Viscosity Index Improvers that tend to shear down in high heat.

Synthetic formulation.

Gas & Diesel compatible.

Anti-corrosion additives.


API 'SL' and JASO rated with wet clutch compatibility for other machines.

PREMIUM HYDRO OIL
Part No. 109-9828

Commercial quality for tough, high-heat conditions.

Designed specifically for zero-turn mower hydraulic systems.

Superior shear resistance under heavy loads.

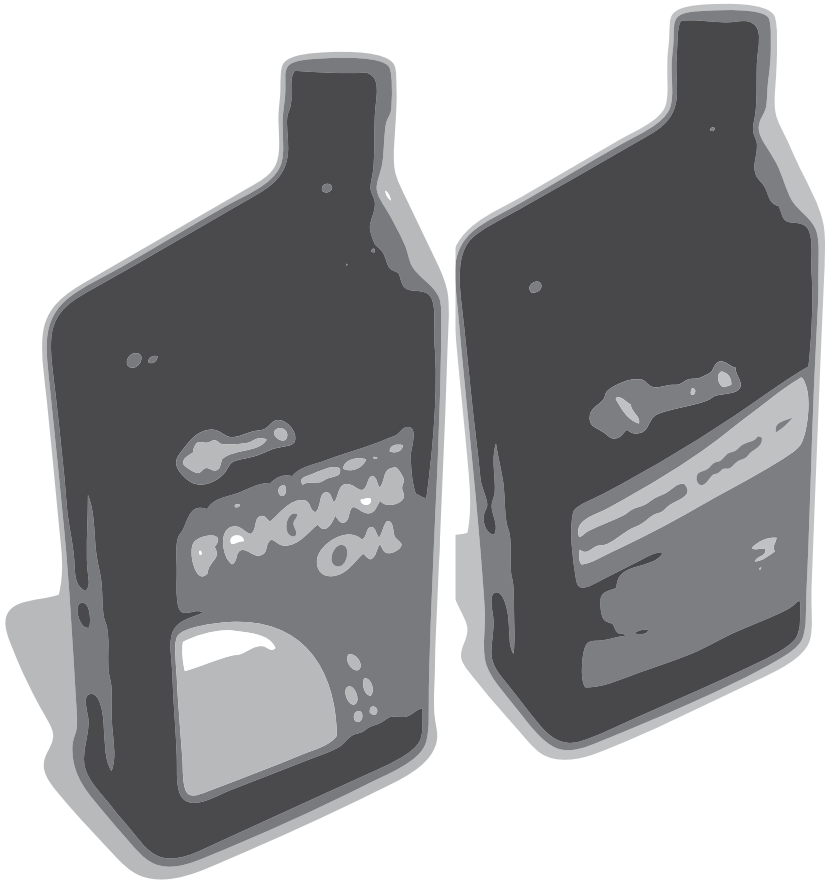

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
FULL SUSPENSION SEAT
DECK LIFT ASSIST KIT
HITCH KIT
LIGHT KIT
12V POWER PORT
MICRO-MULCH SYSTEM
OPERATOR CONTROLLED DISCHARGE
SUN SHADE
TRASH CONTAINER
TURF STRIPER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM
DUAL-TAIL WHEEL
FLOOR PAN EXTENDER
HITCH KIT
LIGHT KIT
MICRO-MULCH SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)
SNOW BLADE
SNOWBLOWER
SUN SHADE
TRASH CONTAINER
ULTRA VAC COLLECTION SYSTEM
ULTRA VAC QUICK DISPOSAL SYSTEM
WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER
MICRO-MULCH SYSTEM
TURF STRIPER
STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No. Label Here (Included in the Literature Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2014 Exmark Mfg. Co., Inc.
All Rights Reserved

Industrial Park Box 808
Beatrice, NE 68310
(402) 223-6300
Fax (402) 223-5489

Part No. 4502-041 Rev. A
Printed in the USA.





www.exmark.com