




LAZER Z[®] DS-SERIES

Model No. LZDS902K605—Serial No. 31300000 and Up

Picture below may not reflect actual product.

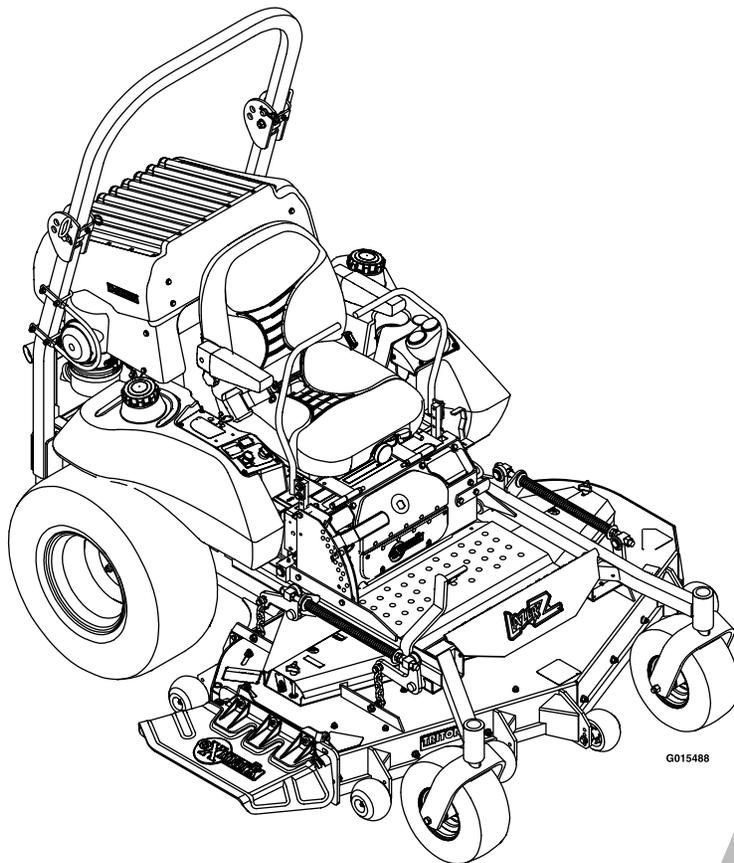

Parts Manual

Part No. 4501-506 Rev. B

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HJ: hex jam	PRH: phillips round head
ASM: assembly	HLH: hex lag head	PTH: phillips truss head
BBC: blade brake control	HOC: height-of-cut	PTO: power-take-off
BHTF: button head thread forming	HSBH: hex socket button head	RH: right hand
CARR: carriage	HSFH: hex socket flat head	ROPS: roll-over protection system
CCW: counter clockwise	HSH: hex socket head	RRB: rear roller brush
CW: clockwise	HWH: hex washer head	SFH: slotted fillister head
DEG: degrees	HWHTF: hex washer head thread forming	SHH: slotted hex head
DPA: Dual Point Adjustment	HYD: hydraulic	SHWH: slotted hex washer head
ECM: electronic control module	LH: left hand	SPH: slotted pan head
EXT: external	LP: Liquefied Petroleum Gas	SQH: square head
FH: flat head	LPG: Liquefied Petroleum Gas	SRH: slotted round head
GA: gauge	NI: nylon insert	STD: standard
HD: heavy-duty	NPTF: national pipe thread fine	TAP: self tapping
HF: hex flange	PFH: phillips flat head	TTH: torx truss head
HH: hex head	PPH: phillips pan head	
HHF: hex head flange	PPHTF: phillips pan head thread forming	
HHFTF: hex head flange thread forming		

Touch Up Paint

Exmark black touch up spray paint – gloss black.


Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).



If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents


Complete Deck Assembly	4
Deck Assembly No. 116-9148	5
Deck W/Decals Assembly No. 109-2100	7
Idler Arm W/Bearings Kit No. 109-2095	8
Cutter Housing Assembly No. 103-9539	9
Main Frame Assembly	10
Front Frame Assembly No. 116-9498	11
Front Frame Assembly (cont)	12
Wheel and Tire Assembly No. 109-9127	13
Front Frame Spring Assembly No. 109-4995	14
Main Frame Assembly	15
Engine Deck W/Decals Assembly No. 109-3984	16
Motion Control Assembly	17
LH Motion Control Assembly No. 109-3979	18
RH Motion Control Assembly No. 109-3978	19
Tracking Rod Assembly No. 103-3062	20
RH Hydro Connecting Link Assembly No. 103-5190	21
Park Brake Assembly	22
Seat Assembly	23
Seat W/Tracks Assembly No. 116-8912	24
Seat Frame Single Latch Assembly	25
Fuel Assembly	26
Fuel Valve Hose Assembly	27
Engine Assembly	28
Cooling Assembly	30
Latch Plate Assembly No. 109-8427	32
Mule Drive Assembly	33
Tightener Arm W/Pulley Assembly No. 116-9286	34
Hydraulic Assembly	35
Electrical Assembly	37

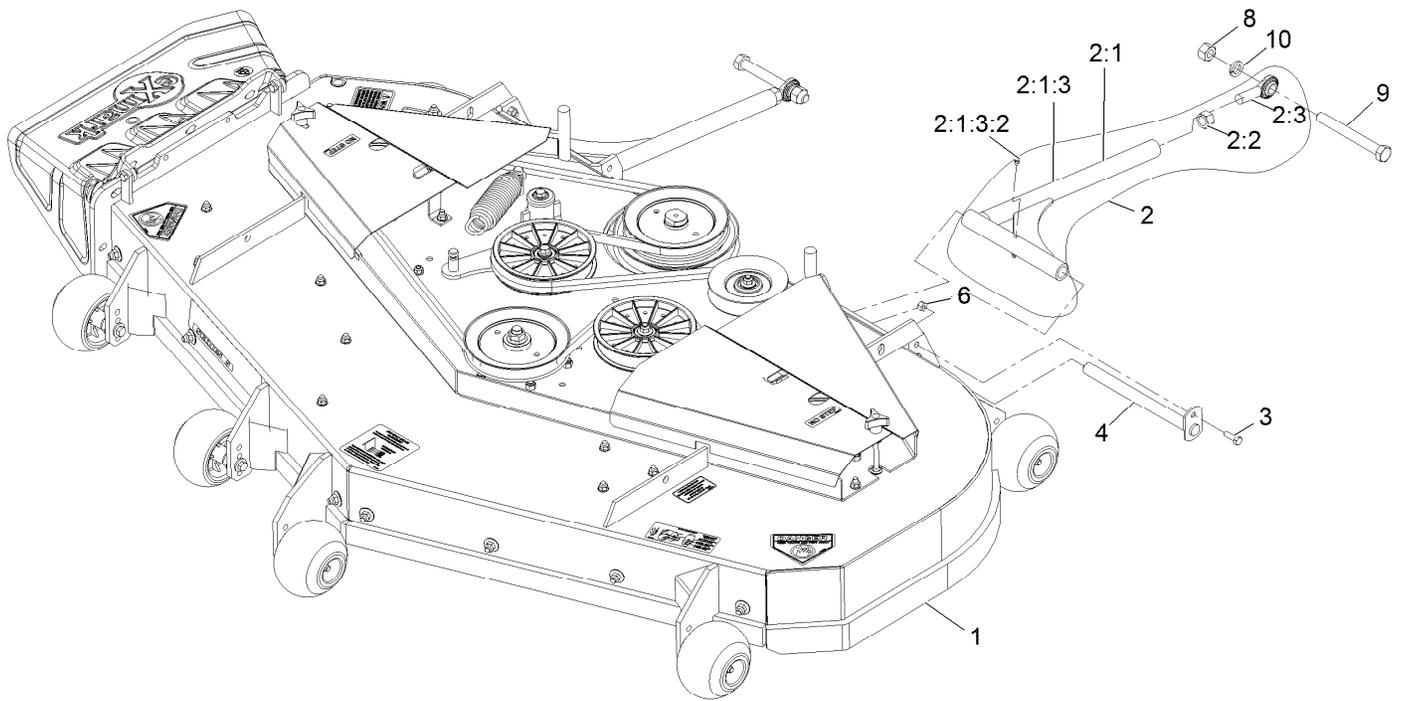

Complete Deck Assembly

Ref.	Part Number	Qty.	Description
1	116-9148	1	ASM-Deck Complete 605
2	103-8543	2	Asm, Strut 60"
2:1	109-1184	1	Wld, Deck Strut-Std 60
2:1:3		1	Tube And Zerk ASM ●
2:1:3:2	109-1380	2	Fitting-Grease
2:2	3219-6	1	Nut-Hex 5/8-18
2:3	1-633029	1	Balljoint
3	322-5	2	Screw-HH 5/16-18 X 1
4	1-632199-01	2	Pin-Strut
6	3296-29	2	Nut-Nyloc 5/16-18
8	3217-11	2	Nut-Hex 5/8-11
9	327-28	2	Screw-HH 5/8-11 X 5 1/2
10	3253-8	2	Washer-Lock 5/8

● Not serviced separately

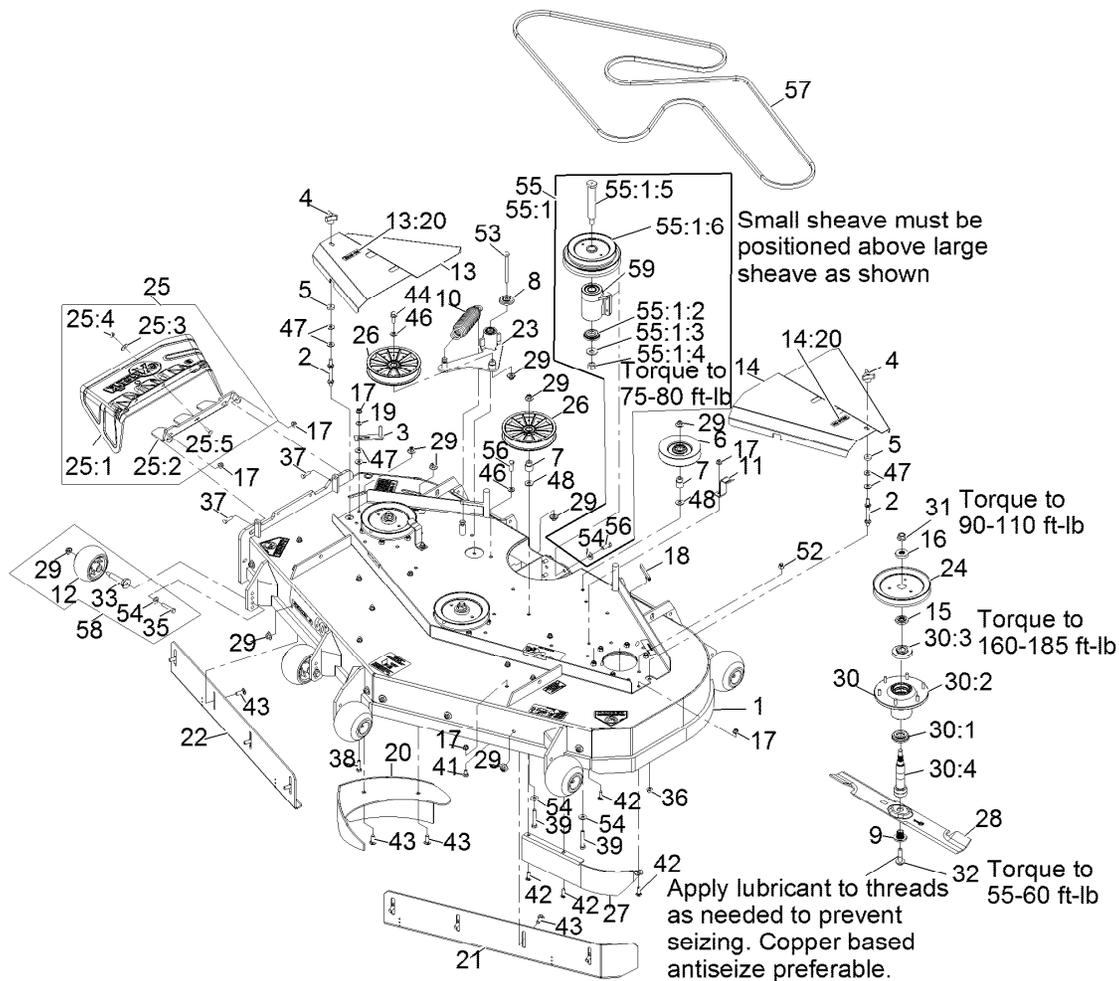


Deck Assembly No. 116-9148

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-2100	1	Asm, Deck W/Decals 60"	21	109-0701-01	1	Wld, Baffle Front Adj LH 60"
2	1-303537	2	Stud-Shield, Belt (Short)	22	109-0704-01	1	Wld, Baffle Front Adj RH 60"
3	1-322110	1	Guide-Belt	23	109-2095	1	Kit, Idler Arm W/Bearings
4	1-323385	2	Knob-3 Prong	24	109-1023	3	Sheave, Blade Drive 46"
5	1-323417	2	Washer	25	109-2099	1	Asm, Discharge Chute
6	1-603805	1	Pulley-Idler	25:1	109-2739	1	Chute, Discharge Lz
7	1-633456	2	Bushing, Idler	25:2	109-0498-01	1	Hinge, Grass Discharge
8	103-2916	1	Guard-Top	25:3	3256-82	3	Washer-Flat
9	103-3037	3	Bushing, Splined	25:4	104-8300	3	Nut-Flange, NI
10	116-6317	1	Spring-Extension	25:5	3230-22	3	Screw-CARR
11	103-8103-01	2	Latch, Belt Shield	26	109-2796	2	Pulley, Idler 6"
12	103-8415	6	Roller, Anti-Scalp 46" And 50"	27	109-5424-01	1	Baffle, Scroll 60"
13	109-2097	1	Asm, Shield W/Decal 60" RH	28	116-5499	3	Blade-Extreme 2, 20.75
13:20	1-513742	1	Decal, No Step	28	109-5396	3	Blade, Mulch 20.75 Mk605 ■
14	109-2096	1	Asm, Shield W/Decal 60" LH	28	103-8240	3	Blade, Low Lift 60"
14:20	1-513742	1	Decal, No Step	28	109-6463	3	Blade, High Lift Notched 20.75
15	103-9522	3	Spacer, Splined Stepped	28	109-6469	3	Blade-High Lift Solid, 20.75
16	103-9523	3	Spacer, Splined	29	109-6658	20	Nut-Flange, NI
17	104-8300	18	Nut-Flange, NI	30	109-6917	3	ASM, Spindle Housing
18	105-7699	4	Strip-Seal	30:1	103-9504	1	Guard, Bottom
19	1-303334	1	Washer-Spring	30:2	103-9539	1	Asm, Cutter Housing
20	109-0694-01	1	Wld, Dogleg 60"	30:3	109-0916	1	Nut, Spindle 7/8-14
				30:4	109-6881	1	Spindle, Double Spline ▲

● Not serviced separately

■ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

▲ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator's manual for locations.

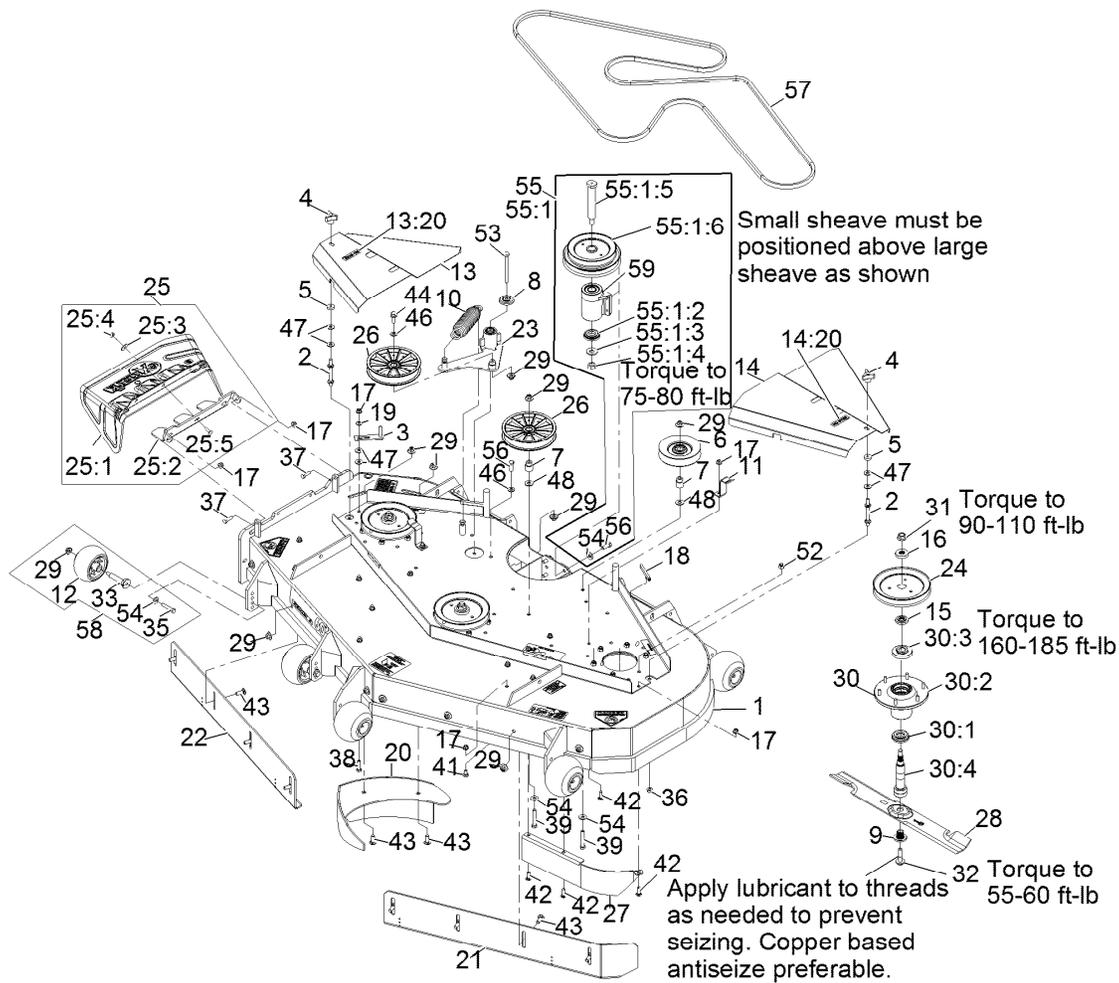


Deck Assembly No. 116-9148 (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
31	109-7033	3	Nut-Flange, Centerlock	52	3296-39	18	Nut-Lock, NI
32	109-9220	3	Screw,Sems (1/2-20 X 2.19, Gr5)	53	98-5961	1	Screw-HH
33	109-9851	6	Axle, Anti-Scalp Roller	54	98-5975	12	Washer-Belleville
35	3211-46	6	Screw-HH	55	103-3249	1	Jackshaft Assy
36	32128-20	2	Nut-HF	55:1		1	ASM, Jackshaft 60 & 72 - 3750 ●
37	322-5	2	Screw-HH	55:1:2	103-2535	1	Spacer-Guard, Bottom
38	322-6	1	Screw-HH	55:1:3	1-513208	1	Washer-Spring
39	323-11	2	Screw-HH	55:1:4	3219-6	1	Nut-Hex
41	3230-18	10	Screw-CARR	55:1:5	1-643393	1	Jackshaft ▲
42	3230-22	5	Screw-CARR	55:1:6	103-3046	1	Sheave, Jackshaft Double ▲
43	3231-22	10	Screw-CARR	56	323-6	5	Screw-HH
44	3234-11	1	Screw-HHF	57	1-633127	1	Belt, Blade Drive 60" Deck
46	3256-24	2	Washer-Flat	58	109-2098	6	Kit, Antiscalp 46" And 50"
47	3256-3	6	Washer-Flat	59	103-9746	1	Asm, Jackshaft Housing
48	3256-4	2	Washer-Flat				

● Not serviced separately


■ Requires installation of mulch kit for proper mulching. See your Exmark dealer for details.

▲ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.

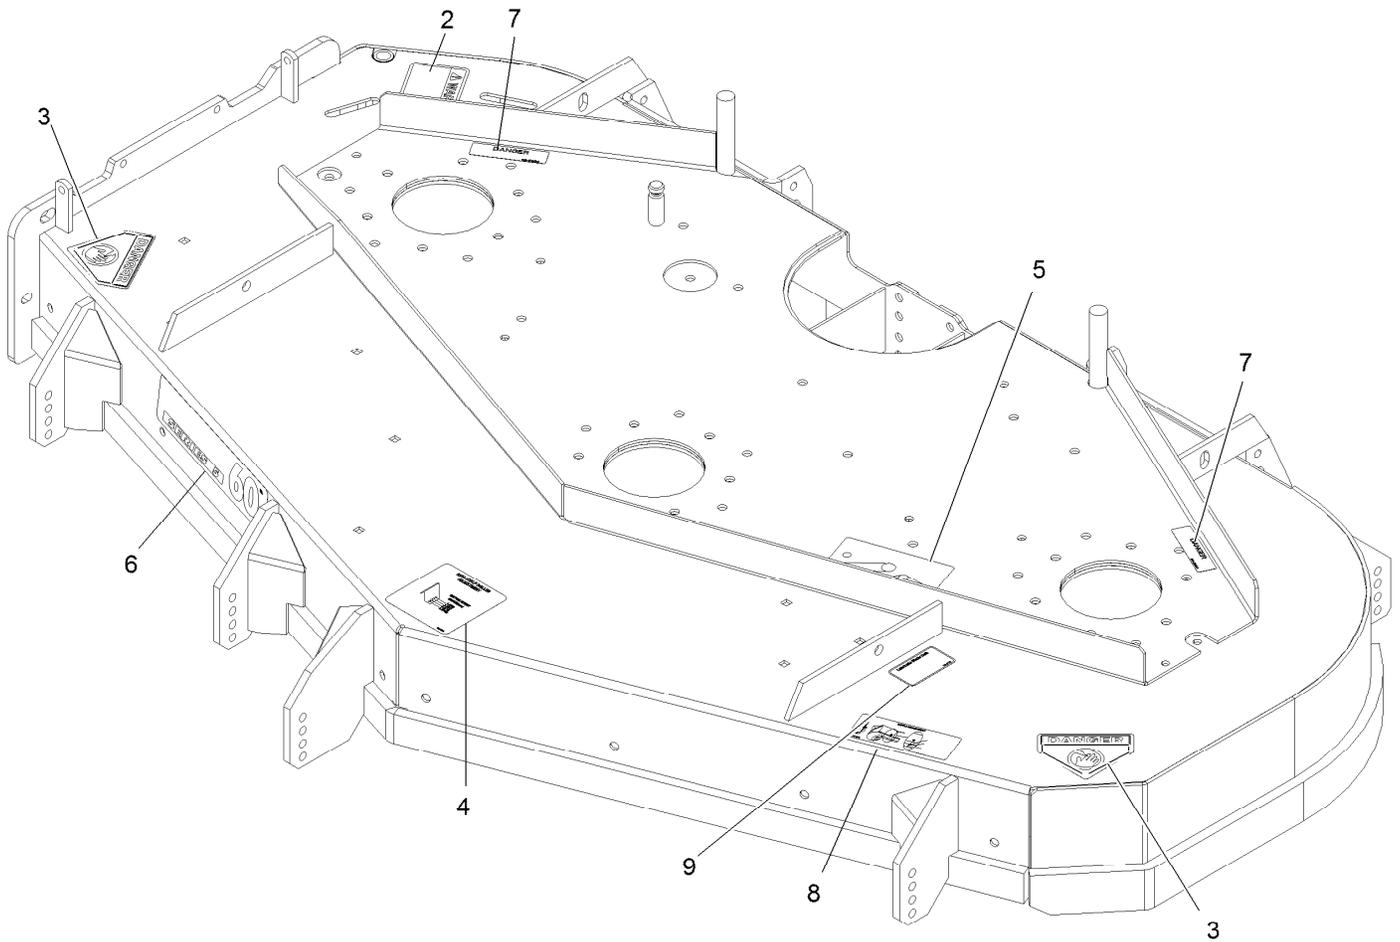

Deck W/Decals Assembly No. 109-2100


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	1-303508	1	Decal-Warning, Discharge
3	1-403005	2	Decal-Danger
4	109-1399	1	Decal, Anti-Scalp
5	109-2219	1	Decal, Belt Routing
6	116-7117	1	Decal, Series 5 - 60
7	98-5954	2	Decal-Cover, Missing
8	109-0872	1	Decal, Baffle Adjustment
9	109-3148	1	Decal, Bolt Torque

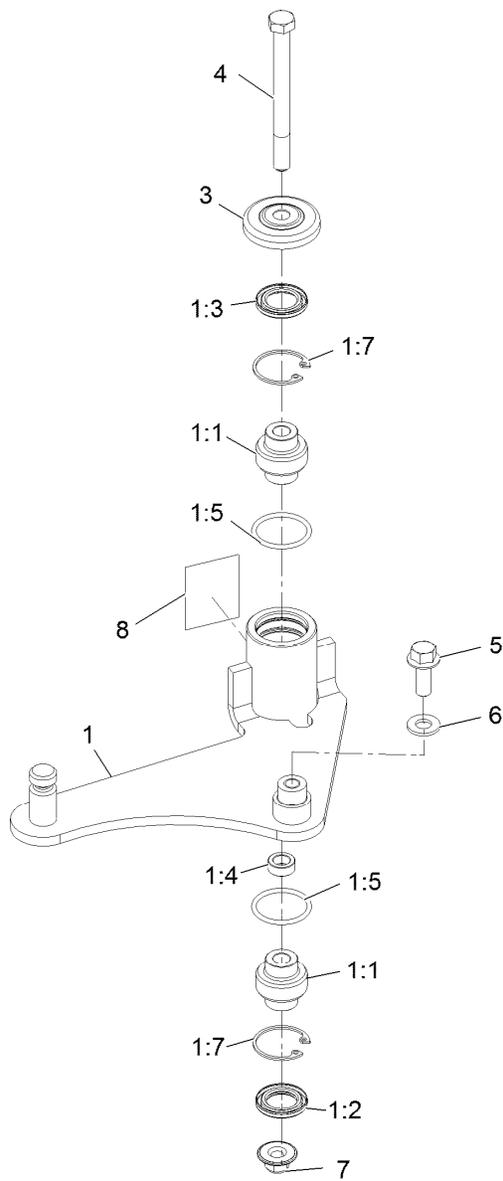

Idler Arm W/Bearings Kit No. 109-2095


Ref.	Part Number	Qty.	Description
1		1	ASM,Deck Idler ●
1:1	103-3504	2	Bearing-Spherical
1:2	103-3505	1	Seal-Double Lip
1:3	103-3506	1	Seal-Single Lip
1:4	103-5677	1	Spacer
1:5	106-7159	2	O-Ring
1:7	32120-10	2	Ring-Retaining
3	103-2916	1	Guard-Top
4	98-5961	1	Screw-HH 3/8-16 X 4 Gr8
5	3234-11	1	Screw-HH Flg 3/8-16 X 1
6	3256-24	1	Washer-3/8 Sae
7	109-6658	1	Nut-Nyloc 3/8-16 Flg
8	103-5858	1	Decal,Grease

● Not serviced separately

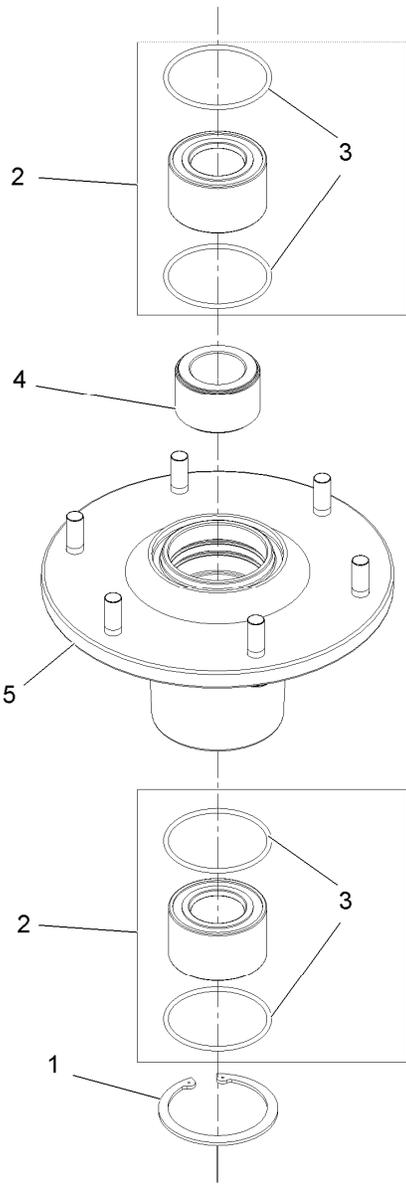


Cutter Housing Assembly No. 103-9539

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	92-5581	1	Ring-Retaining
2	109-2064	1	Asm, Bearing W/O-Rings
3	103-5895	4	O-Ring
4	103-9506	1	Spacer, Bearing
5	109-0764	1	Asm, Housing W/Studs

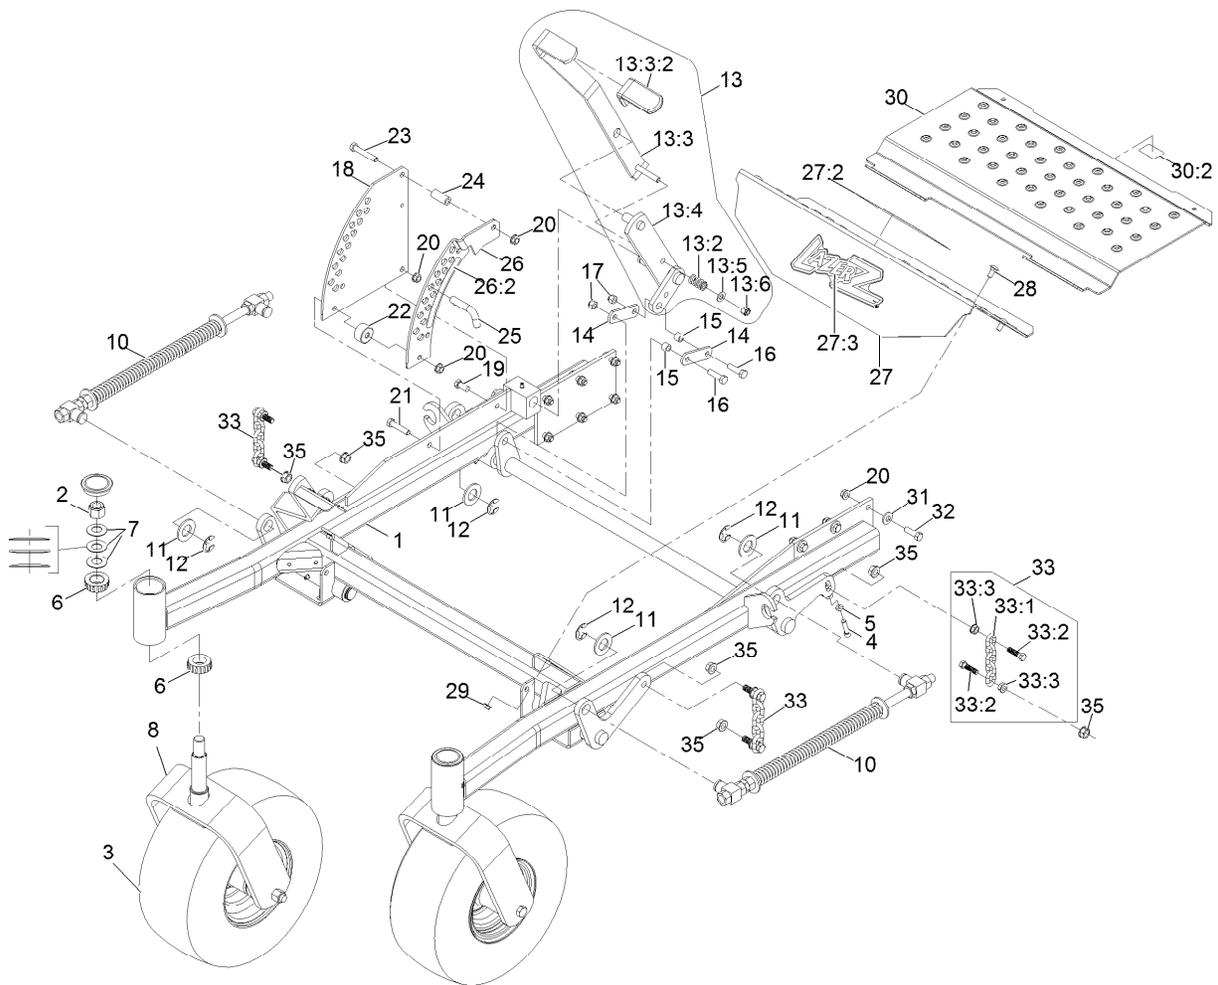

Main Frame Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	116-9498	1	ASM-Frt Frm 605	20	3290-357	15	Nut-Whizlock 3/8-16
2	3296-51	2	Nut-Nyloc 3/4-10	21	323-9	1	Screw-HH 3/8-16 X 1 3/4
3	109-9127	2	Wheel And Tire ASM	22	109-3193	1	Stop, Deck Height
4	3274-18	2	Screw-Sh 5/16-18 X 1 1/4	23	323-11	1	Screw-HH 3/8-16 X 2 1/4
5	3218-2	2	Nut-Jam 5/16-18	24	1-633082	1	Bushing
6	1-543509	4	Cone-Bearing Tapered Roller	25	116-5584	1	Pin-HOC
7	1-633508	6	Washer-Spring Disc	26	116-9124	1	Plate-Lift, Deck W/Decal
8	116-6707-01	2	Caster	26:2	1-633706	1	Decal-Height, Deck
10	109-4995	2	Asm, Front Frame Spring	27	109-1903	1	Asm, Floorpan (103-8274-01) W/Decals
11	3256-29	4	Washer-7/8 Sae	27:2	103-3113	1	Decal, Lazer Model
12	32151-103	5	E-Ring	27:3	116-3303	1	Decal-Slope
13	109-4488	1	ASM,Deck Lift Handle	28	3230-1	4	Bolt-Carriage 5/16-18 X 3/4
13:2	1-633325	1	Spring-Compression	29	32128-20	4	Nut-Whizlock 5/16-18
13:3	103-2084	1	Lift Lever/Grip ASM	30	109-1902	1	Asm, Floorpan, Liftout (103-8276-01) W/Decal
13:3:2	1-633295	1	Grip-Lever, Lift	30:2	1-513748	1	Decal-Guard
13:4	109-4487	1	Wld,Arm Deck Lift	31	98-5975	12	Washer-Spring Disc 3/8
13:5	3256-24	1	Washer-3/8 Sae	32	323-7	12	Screw-HH 3/8-16 X 1 1/4
13:6	3296-39	1	Nut-Nyloc 3/8-16	33	103-9792	4	Deck Chain ASM
14	1-633068	2	Arm-Lift, Deck	33:1	1-633447	1	Chain-Lift, Deck
15	103-1918	2	Bushing	33:2	103-1898	2	Screw-HH 7/16-20 X 1-5/8 Sp
16	323-29	2	Screw-HH 3/8-16 X 1 3/8	33:3	32128-37	2	Nut-Whizlock 7/16-14
17	3296-39	2	Nut-Nyloc 3/8-16	35	32128-37	8	Nut-Whizlock 7/16-14
18	116-9122-01	1	Plate-Deck Lift Notched Outer				
19	323-5	1	Screw-HH 3/8-16 X 7/8				

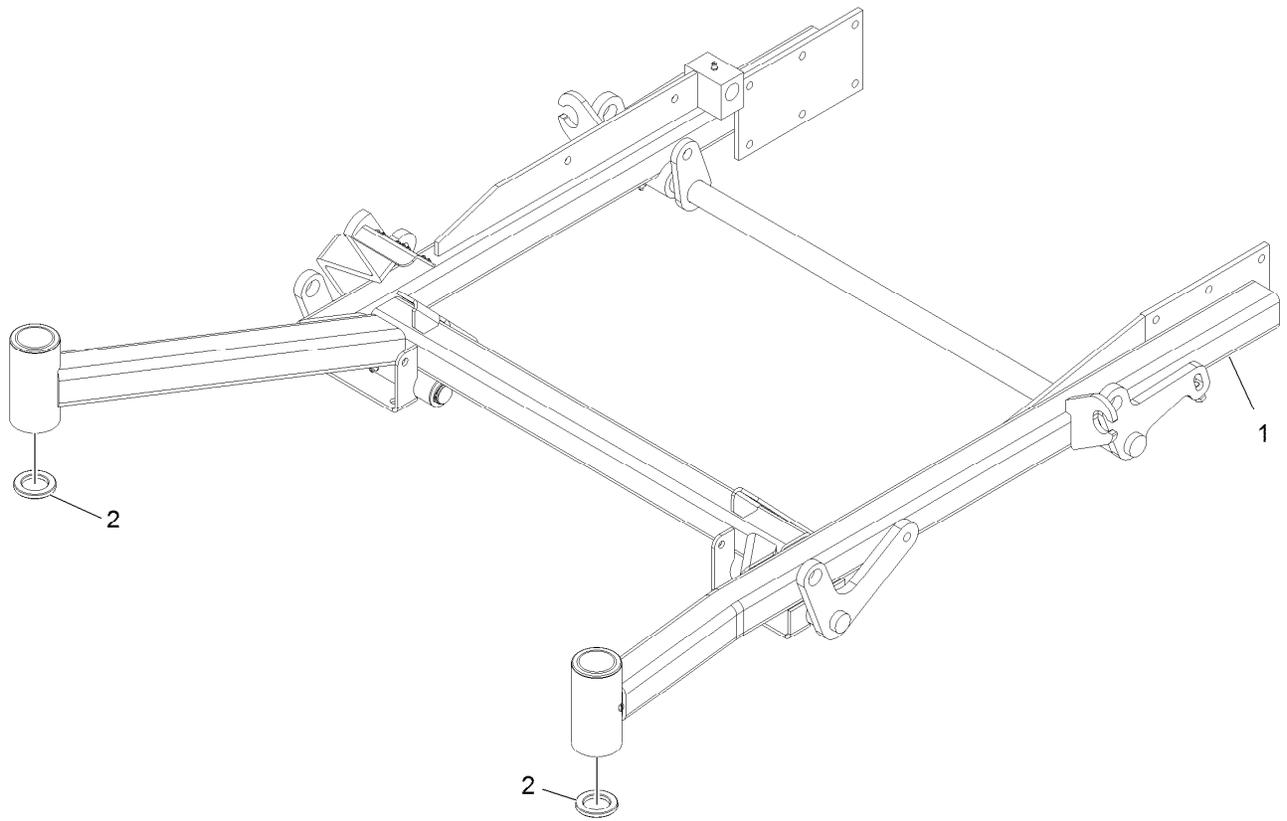

Front Frame Assembly No. 116-9498


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	ASM-Front Frame 605 ●
2	1-543511	2	Seal-Grease

● Not serviced separately

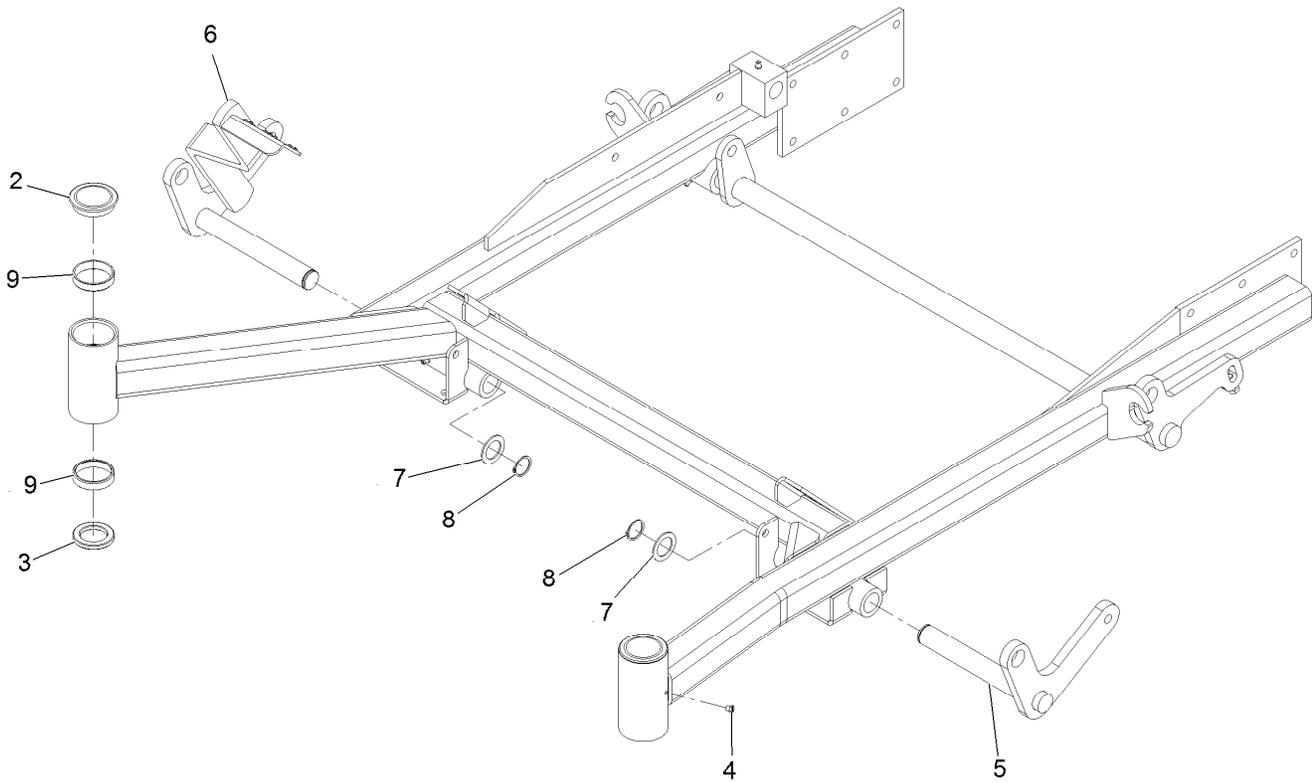

Front Frame Assembly (cont)

Ref.	Part Number	Qty.	Description
2	103-4882	2	Cap-Grease
3	116-5647	2	Seal-Grease
4	1-811010	2	Plug
5	103-9741-01	1	Weldmt, Front Lift Shaft (LH)
6	103-9740-01	1	Weldmt, Front Lift W/Lever(RH)
7	1-523157	2	Washer
8	32151-29	2	Ring-Retaining
9	1-543508	4	Cup-Bearing Tapered Roller

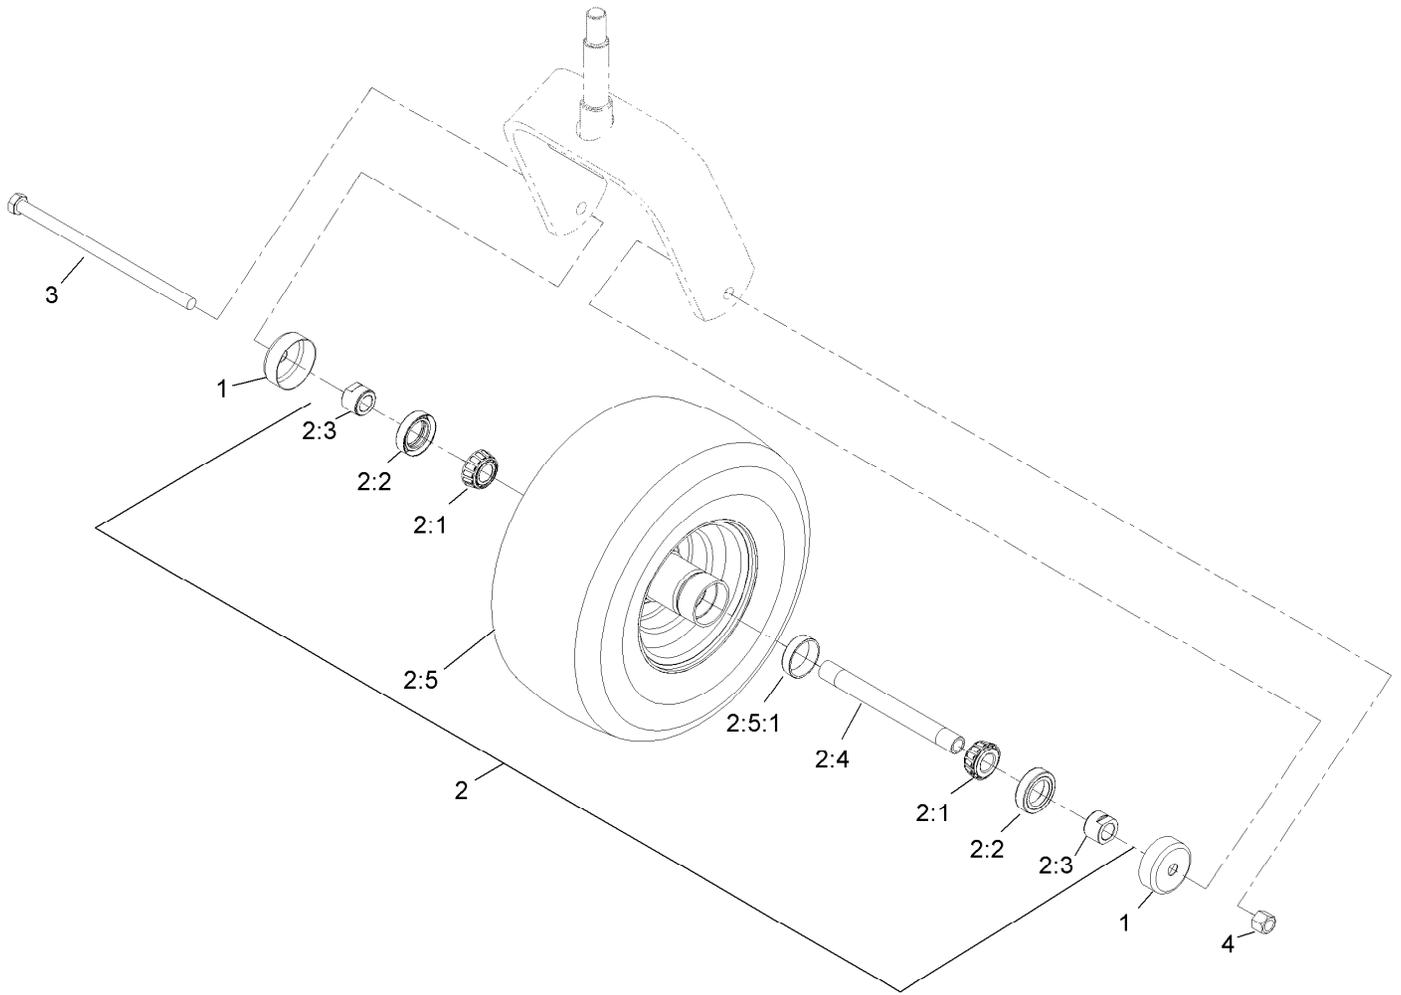


Wheel and Tire Assembly No. 109-9127

Ref.	Part Number	Qty.	Description
1	103-2768	2	Guard-Seal
2		1	Wheel And Tire ASM ●
2:1	1-633585	2	Bearing-Cone Tapered Roller
2:2	103-0063	2	Seal-Double Lip
2:3	103-3051	2	Spacer-Nut ■
2:4	103-5156	1	Axle-Caster
2:5		1	Wheel And Tire ASM ●
2:5:1	1-633584	1	Bearing-Cup
3	325-39	1	Screw-HH 1/2-13 X 9 1/2
4	3296-23	1	Nut-Nyloc 1/2-13


● Not serviced separately

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

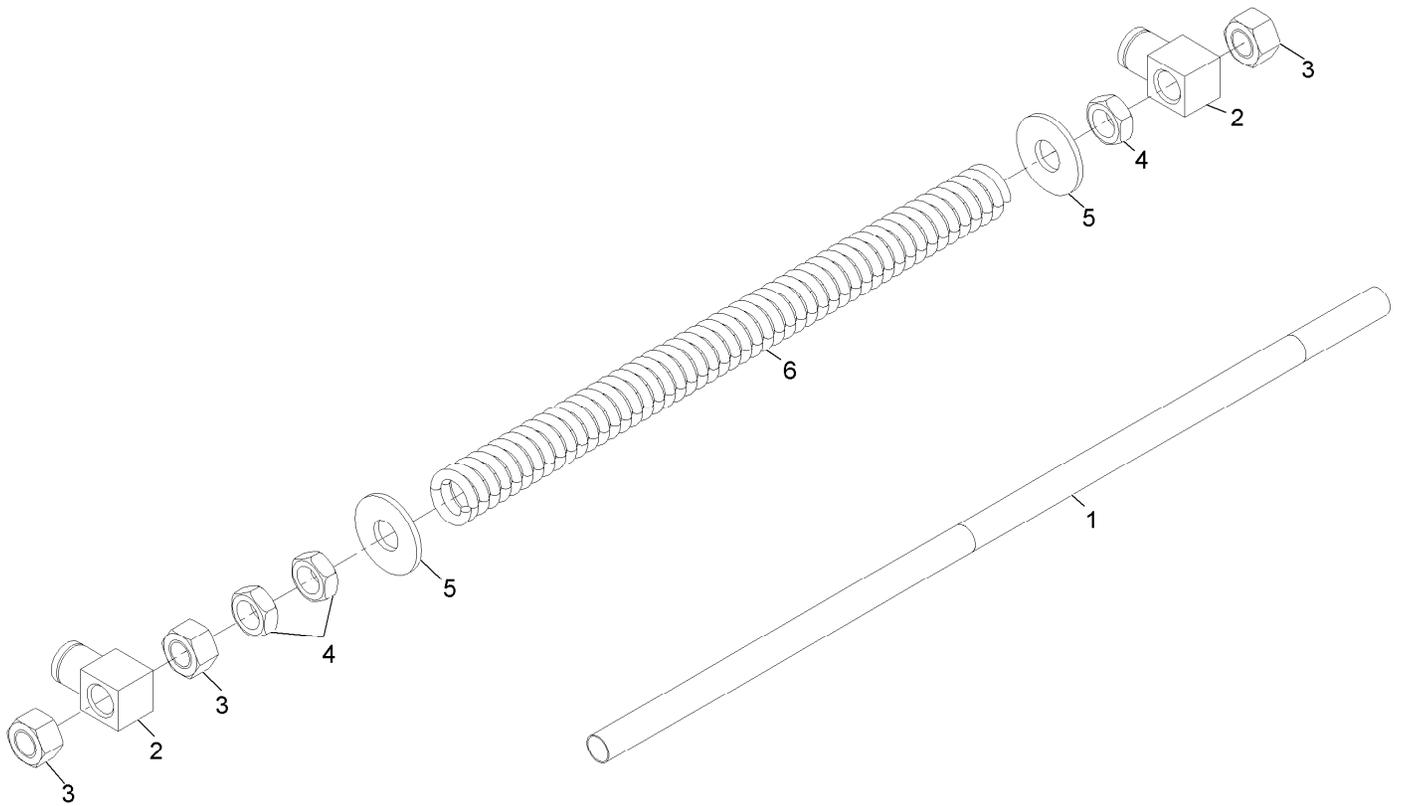

Front Frame Spring Assembly No. 109-4995


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-633096	1	Rod-Lift, Deck
2	1-633441	2	Swivel-Deck Mount, Rear
3	3217-11	3	Nut-Hex 5/8-11
4	3218-6	3	Nut-Jam 5/8-11
5	3256-7	2	Washer-5/8 Std
6	109-4963	1	Spring, Deck Support

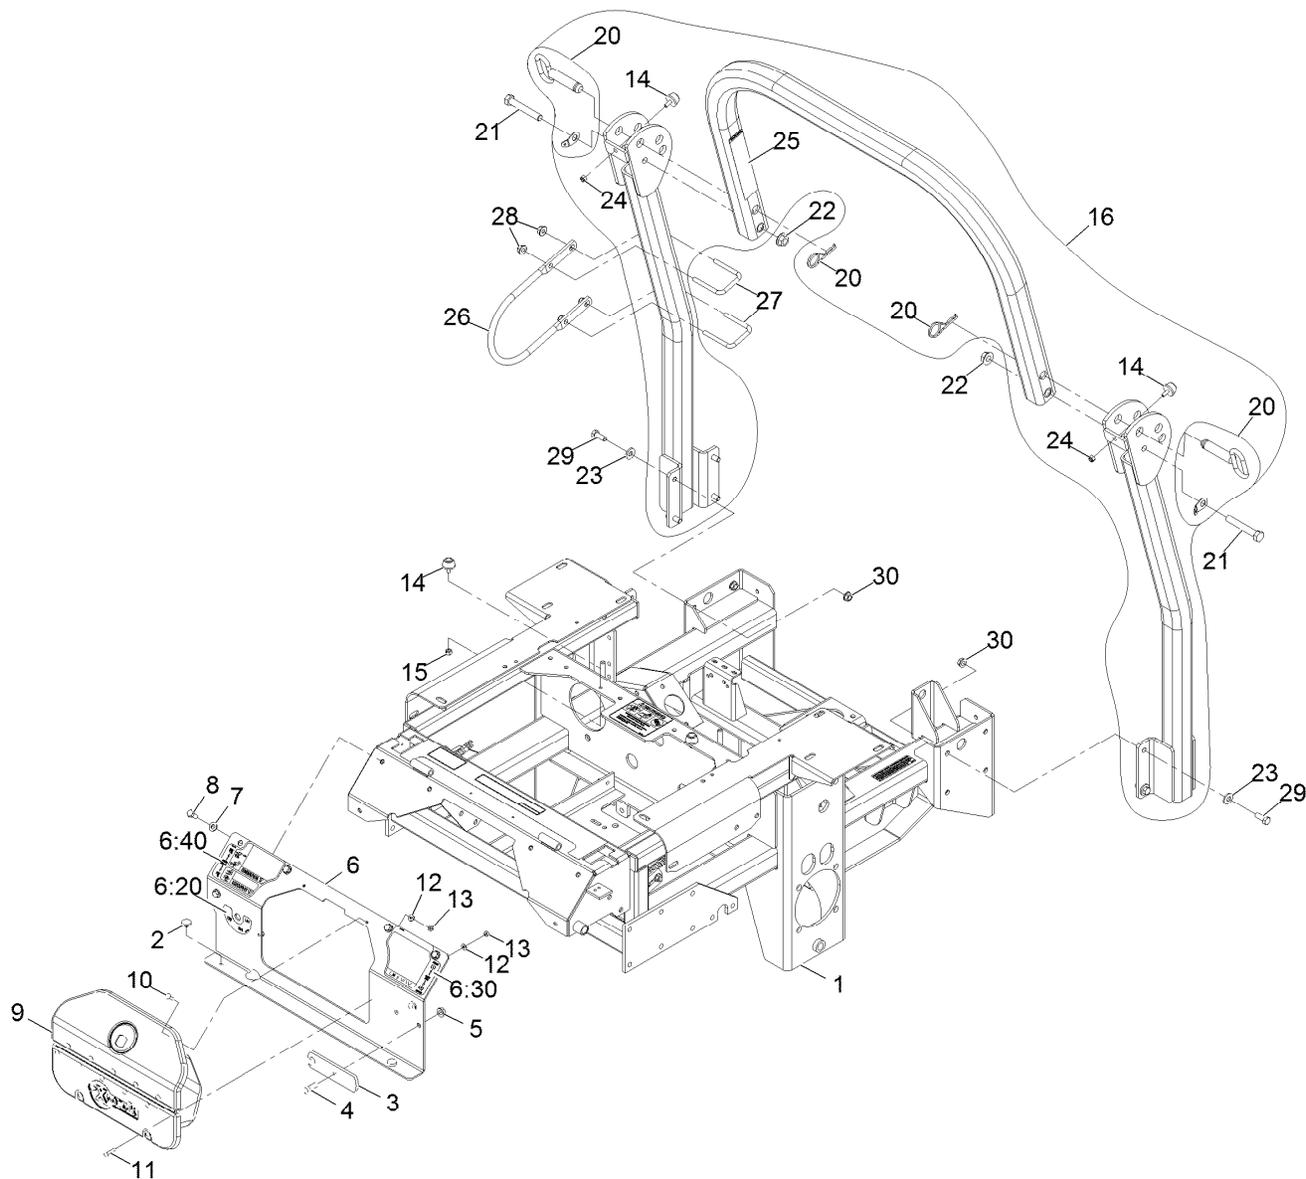

Main Frame Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-3984	1	Asm, Engine Deck (109-3985-03) W/Decals	12	3256-14	6	Washer-#10 Std
2	1-513658	2	Bumper	13	3296-2	6	Nut-Nyloc #10-24
3	1-633964-03	1	Stop-Brake, Park	14	109-2365	4	Bumper-Rubber
4	323-6	2	Screw-HH 3/8-16 X 1	15	3296-42	2	Nut-Nyloc 1/4-20
5	3290-357	2	Nut-Whizlock 3/8-16	16	109-0060	1	Kit, Xp Rops ●
6	109-2075	1	Asm, Console(103-8273-03) W/Decals	20	103-4553	2	Pin-Fold, ROPS
6:20	109-1215	1	Decal, Cutting Height	21	325-13	2	Screw-HH 1/2-13 X 3 1/4
6:30	109-1214	1	Decal, Park Brake	22	32128-23	2	Nut-Hex 1/2-13 Side Lock
6:40	103-0261	1	Decal-Valve, Fuel	23	98-5975	8	Washer-Spring Disc 3/8
7	3256-23	6	Washer-5/16 Sae	24	3296-73	2	Nut-Nyloc 1/4-20
8	322-3	6	Screw-HH 5/16-18 X 3/4	25	107-2102	1	Decal-Warning, Folding ROPS
9	103-3666	1	Asm, Cubby	26	103-7599-03	1	Guard
10	1-803075	2	Screw-Truss Head #10-24 X 3/4	27	109-2394	2	U-Bolt
11	32122-28	4	Screw-Truss HD #10-24 X 1	28	104-8301	4	Nut-Nyloc 3/8-16 Flg
				29	323-6	8	Screw-HH 3/8-16 X 1
				30	3290-357	8	Nut-Whizlock 3/8-16

● Includes seat belt assembly

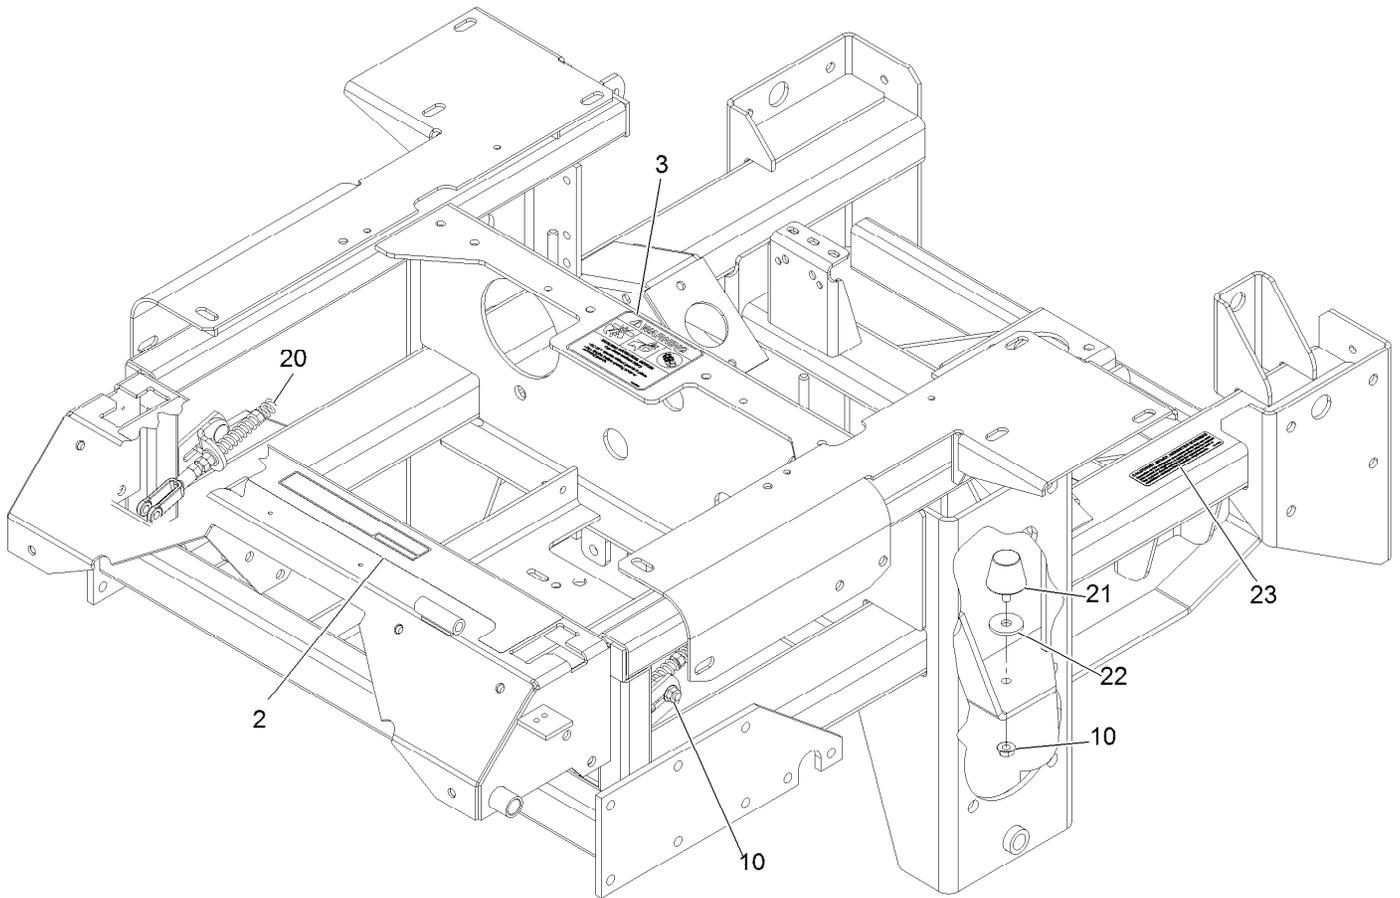

Engine Deck W/Decals Assembly No. 109-3984


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	107-9866	1	Decal-Console, Top
3	109-2264	1	Decal, Warning
10	32128-20	3	Nut-Whizlock 5/16-18
20	109-3903	2	Neutral Return ASM
21	1-543963	1	Bumper, Rubber
22	63-8410	1	Washer
23	117-2718	1	Decal-Arrester, Spark

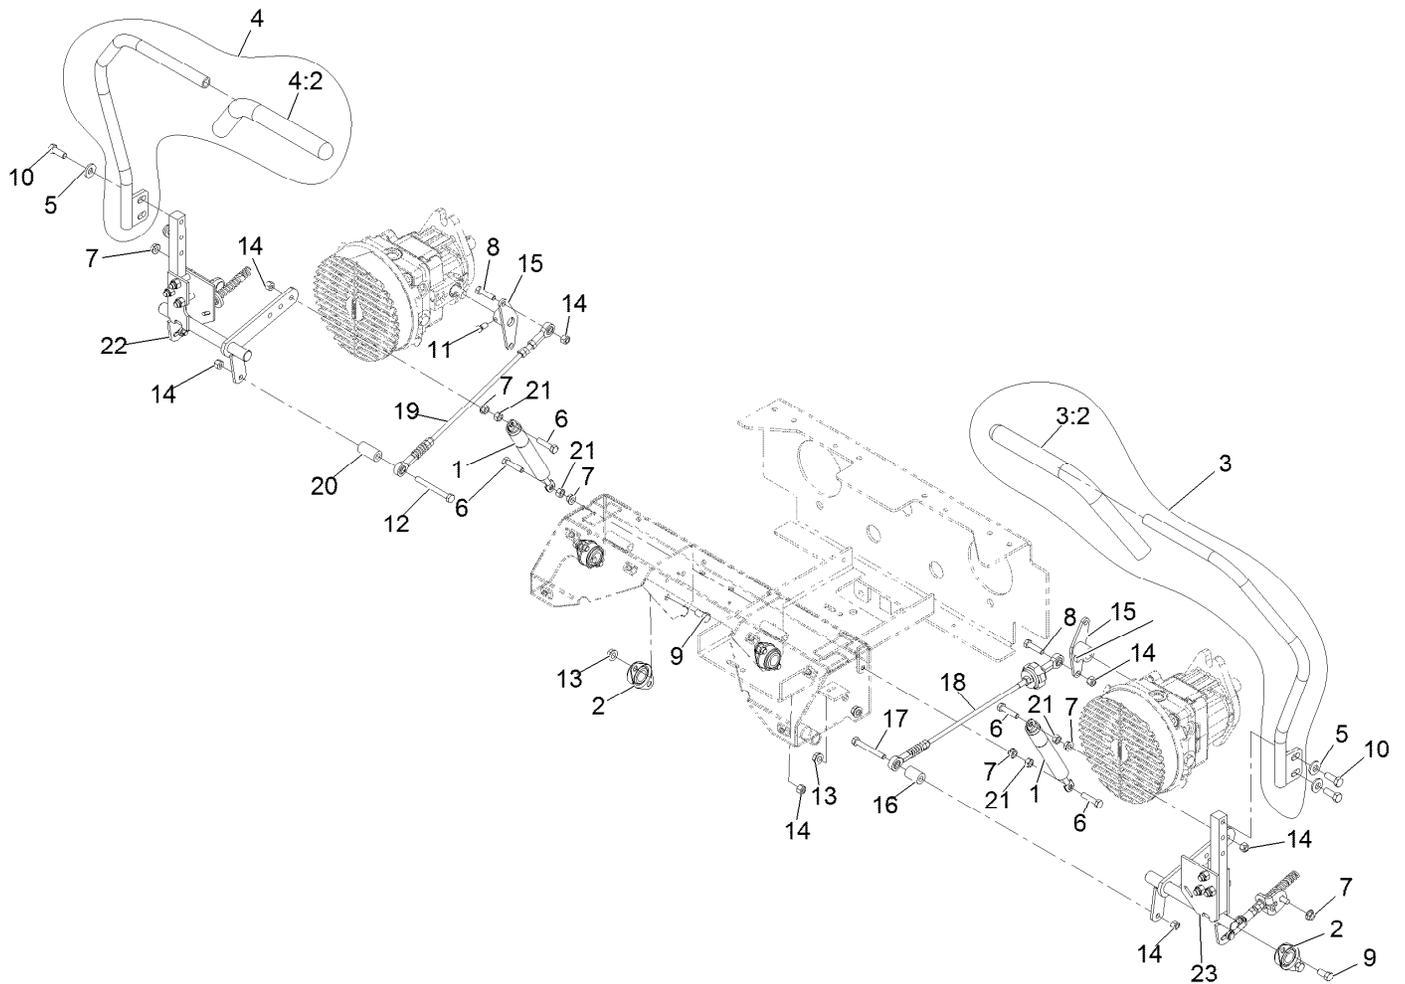

Motion Control Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-2339	2	Damper-Control, Motion	10	323-6	4	Screw-HH 3/8-16 X 1
2	1-633102	4	Bearing-Flanged	11	1-803022	2	Setscrew-5/16-18 X 5/8 ●
3	103-3457	1	Handle (103-3326-03) W/Grip (LH)	12	322-14	1	Screw-HH 5/16-18 X 3
3:2	103-3456	1	Grip, Motion Control Handle	13	3290-357	8	Nut-Whizlock 3/8-16
4	103-3458	1	Handle (103-3327-03) W/Grip (RH)	14	3296-29	8	Nut-Nyloc 5/16-18
4:2	103-3456	1	Grip, Motion Control Handle	15	103-0194-03	2	Arm-Control, Hydro
5	98-5975	4	Washer-Spring Disc 3/8	16	103-1361	1	Spacer
6	1-403180	4	Screw-HH 5/16-18 X 1 3/8 Special	17	322-12	1	Screw-HH 5/16-18 X 2 1/2
7	32128-20	6	Nut-Whizlock 5/16-18	18	103-3062	1	Tracking Rod ASM
8	322-6	2	Screw-HH 5/16-18 X 1 1/4	19	103-5190	1	RH HYD Connect Link ASM
9	323-4	8	Screw-HH 3/8-16 X 3/4	20	103-5192	1	Spacer-Control, HYD
				21	3217-6	4	Nut-Hex 5/16-18
				22	109-3978	1	RH Motion Control ASM
				23	109-3979	1	LH Motion Control ASM

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

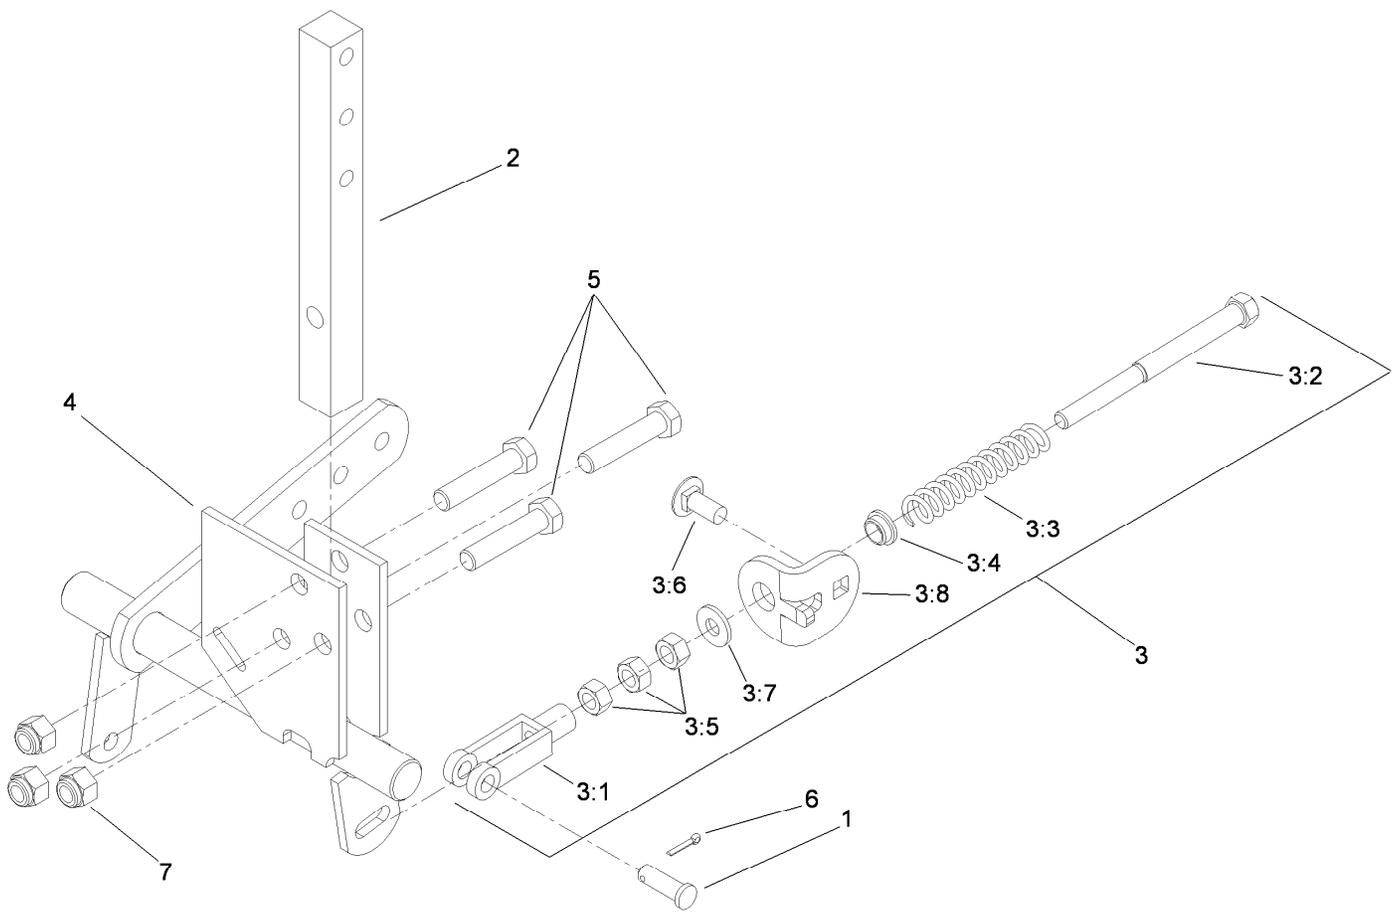


LH Motion Control Assembly No. 109-3979

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-808280	1	Pin-Clevis
2	103-0407	1	Arm-Shaft, Control
3	109-3903	1	Neutral Return ASM
3:1	1-303105	1	Yoke-Adjustable
3:2	1-603737	1	Bolt-Return, Neutral
3:3	1-603807	1	Spring-Return, Neutral
3:4	109-3769	1	Bushing-Nylon, Flanged
3:5	3219-2	3	Nut-Hex
3:6	3230-23	1	Screw-CARR
3:7	3256-2	1	Washer-Flat
3:8	109-3908	1	Tab-Adjustment
4	109-3983	1	Control-Motion, LH
5	323-9	3	Screw-HH
6	3272-5	1	Pin-Cotter
7	3296-39	3	Nut-Lock, NI

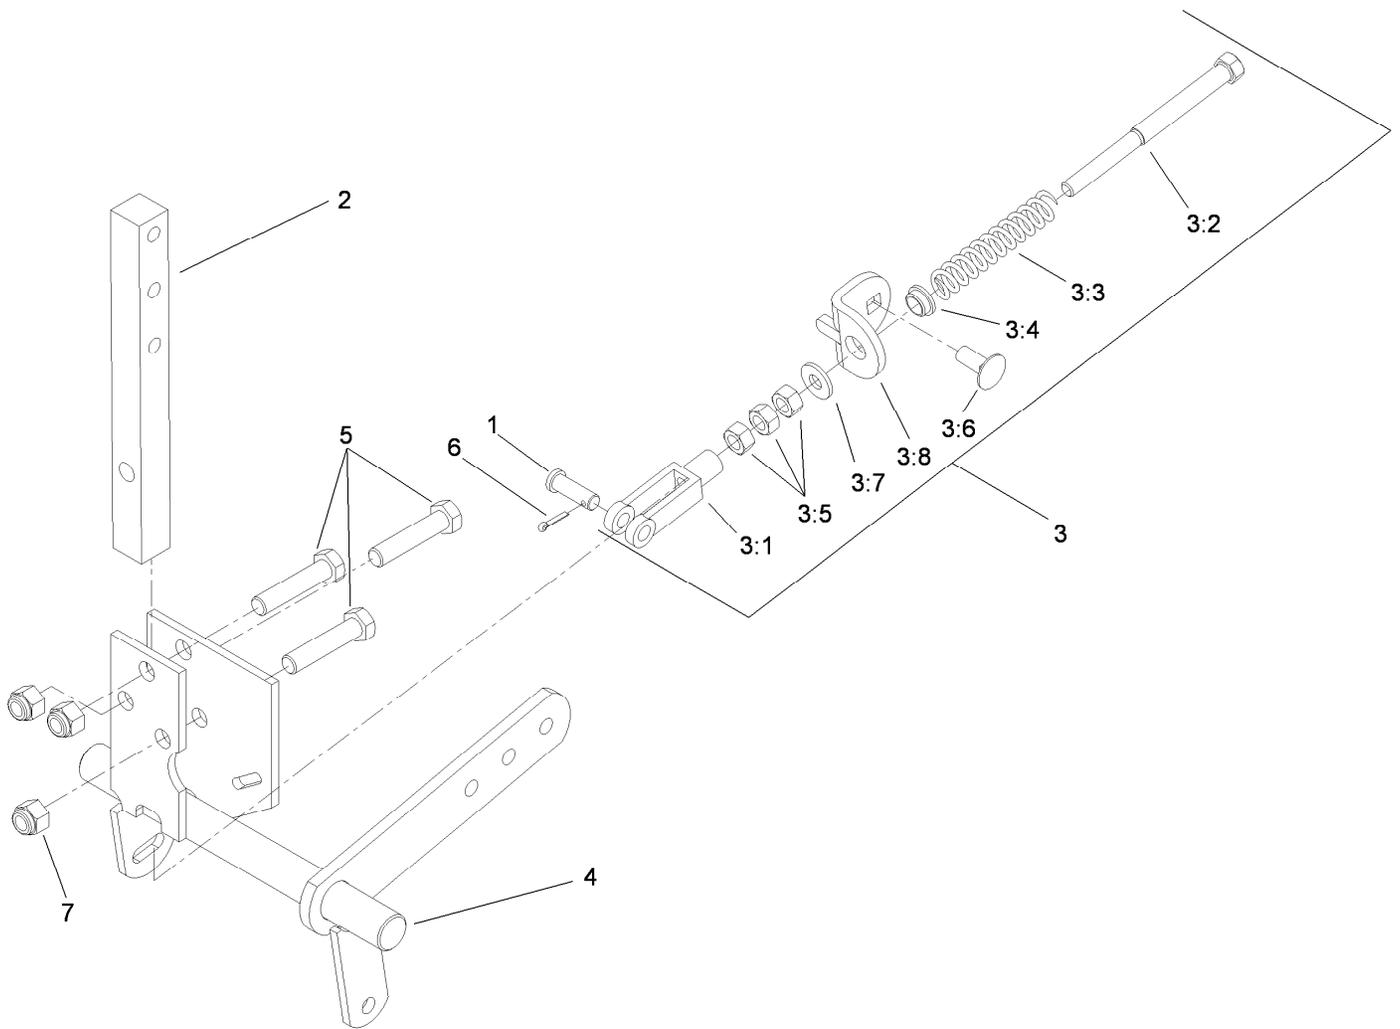


RH Motion Control Assembly No. 109-3978

Ref.	Part Number	Qty.	Description
1	1-808280	1	Pin-Clevis
2	103-0407	1	Arm-Shaft, Control
3	109-3903	1	Neutral Return ASM
3:1	1-303105	1	Yoke-Adjustable
3:2	1-603737	1	Bolt-Return, Neutral
3:3	1-603807	1	Spring-Return, Neutral
3:4	109-3769	1	Bushing-Nylon, Flanged
3:5	3219-2	3	Nut-Hex
3:6	3230-23	1	Screw-CARR
3:7	3256-2	1	Washer-Flat
3:8	109-3908	1	Tab-Adjustment
4	109-3980	1	Control-Motion, RH
5	323-9	3	Screw-HH
6	3272-5	1	Pin-Cotter
7	3296-39	3	Nut-Lock, NI

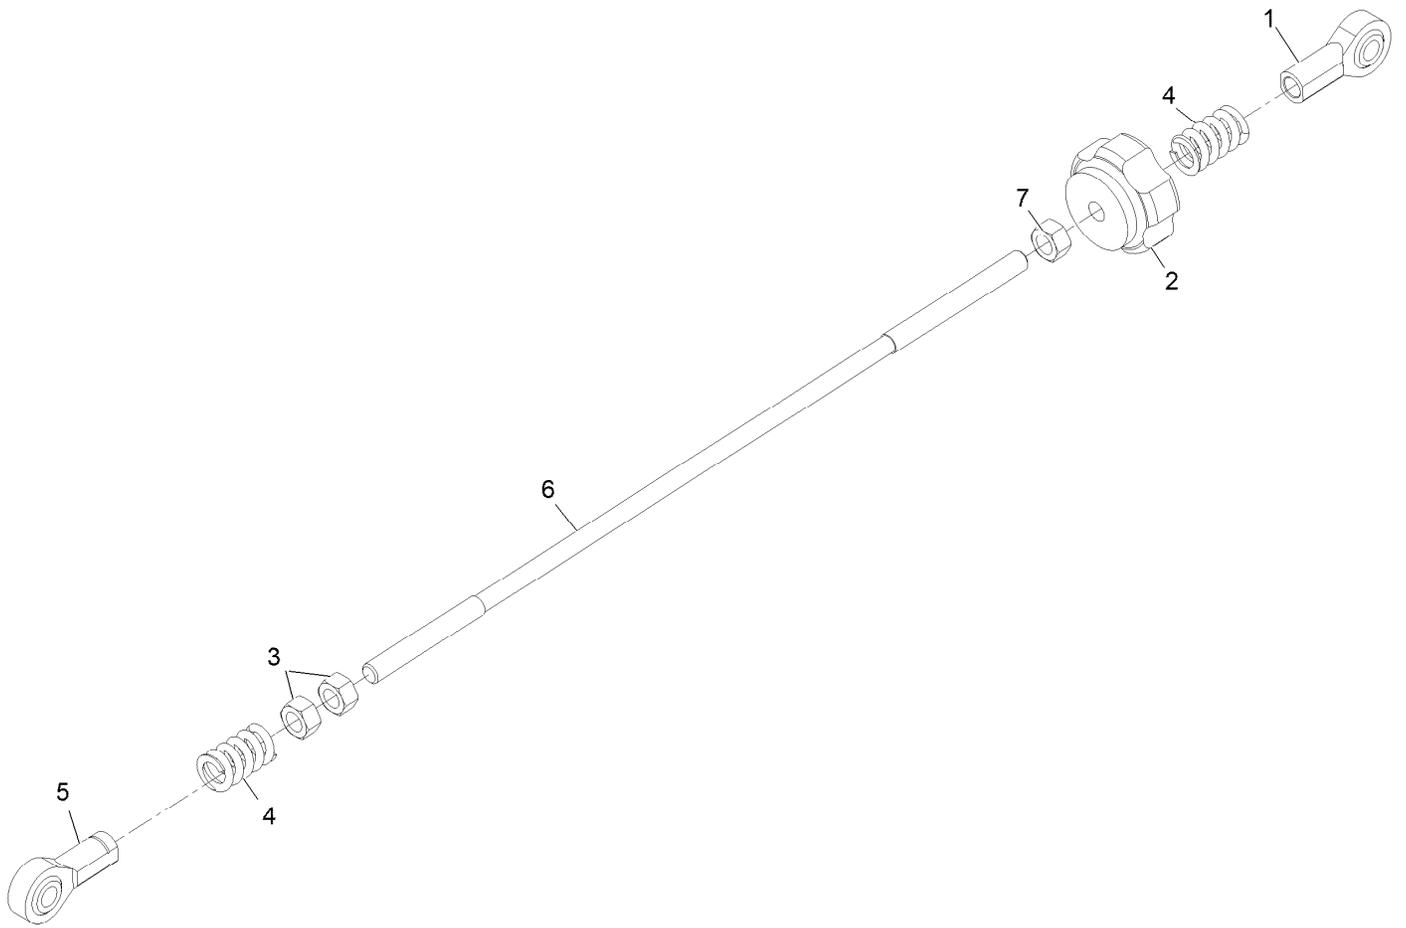


Tracking Rod Assembly No. 103-3062

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-543017	1	Balljoint
2	103-3060	1	Knob-Tracking
3	1-804524	2	Nut-Hex 5/16-24 (LH)
4	1-323245	2	Spring-Compression
5	1-633152	1	Balljoint
6	103-3065	1	Link, Hydro Connecting (LH)
7	3219-2	1	Nut-Hex 5/16-24

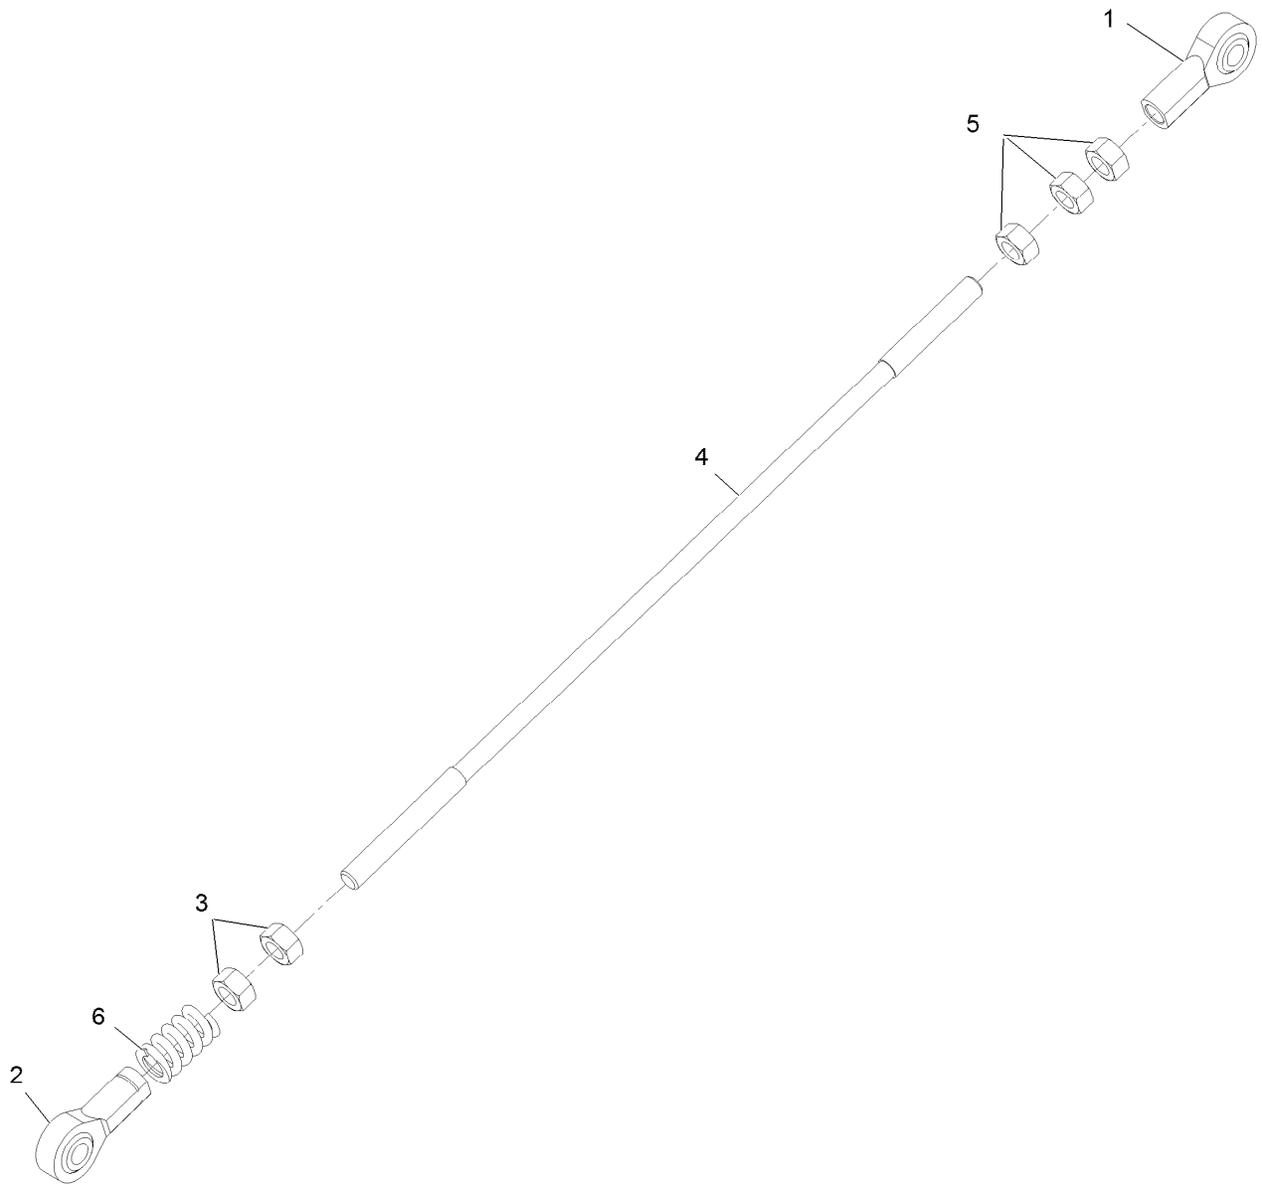


RH Hydro Connecting Link Assembly No. 103-5190

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-543017	1	Balljoint
2	1-633152	1	Balljoint
3	1-804524	2	Nut-Hex 5/16-24 (LH)
4	103-5182	1	Link, Hydro Connecting (RH)
5	3219-2	3	Nut-Hex 5/16-24
6	1-323245	1	Spring-Compression

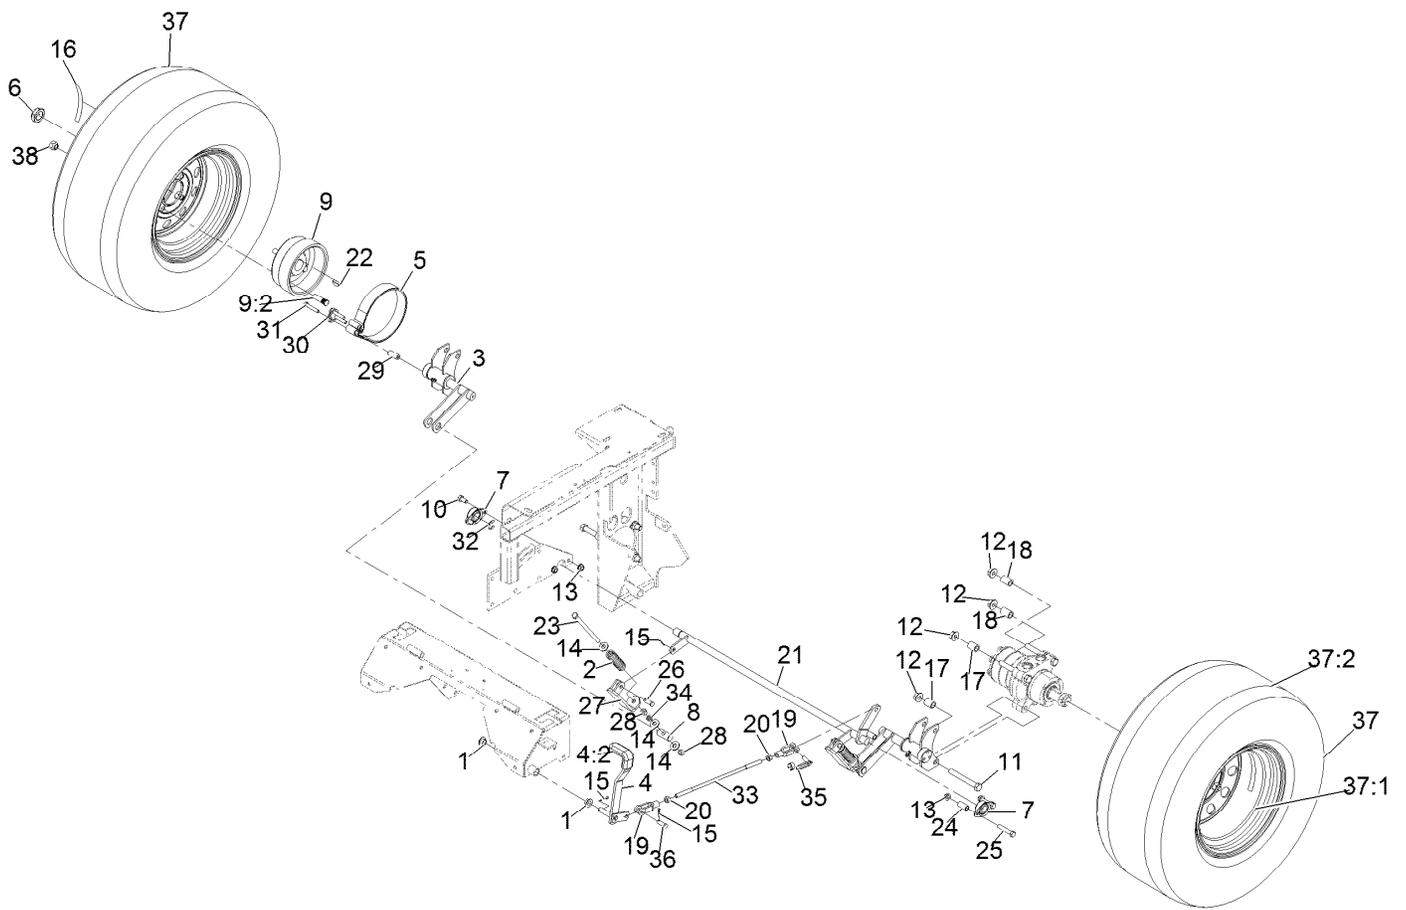

Park Brake Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-513140	2	Bearing	20	3219-3	2	Nut-Hex 3/8-24
2	109-2230	2	Spring-Compression	21	103-5243-03	1	Shaft-Brake
3	103-0844-03	2	Brake-Narrow	22	3257-42	2	Key-Woodruff 5/16 X 1
4	103-0197	1	Brake Lever And Grip ASM	23	323-58	2	Bolt-HH 3/8-16 X 6 Tap
4:2	1-633268	1	Grip-Lever	24	103-0051	2	Spacer-Retainer, Brake
5	103-9761	2	Band, Brake	25	323-10	2	Screw-HH 3/8-16 X 2
6	116-1399	2	Locknut	26	1-808284	2	Pin-Clevis
7	1-633102	2	Bearing-Flanged	27	103-1117-03	2	Linkage-Brake, Lower
8	1-633144	2	Pin-Trunion	28	3296-39	4	Nut-Nyloc 3/8-16
9	116-2291	2	Hub W/Studs ASM	29	103-0384	6	Spacer
9:2	1-633926	4	Stud-Wheel	30	103-0374	2	Retainer-Band, Brake
10	323-4	2	Screw-HH 3/8-16 X 3/4	31	322-9	6	Screw-HH 5/16-18 X 1 3/4
11	325-17	8	Screw-HH 1/2-13 X 4	32	32151-48	1	E-Ring
12	32128-49	8	Nut-Whizlock 1/2-13	33	103-1708	1	Rod-Brake
13	3290-357	4	Nut-Whizlock 3/8-16	34	3218-3	2	Nut-Jam 3/8-16
14	3256-4	6	Washer-3/8 Std	35	103-2399	1	Pin-Clevis Spring 3/8
15	3272-10	4	Pin-Cotter 1/8 X 3/4	36	1-808285	1	Pin-Clevis 3/8 X 1 1/8
16	116-2643	2	Decal-Wheel Nut Torque	37	109-3157	2	Wheel And Tire ASM
17	1-633380	4	Spacer-Wheel, Short	37:1	109-3156	1	Rim
18	1-633382	4	Spacer-Wheel, Long	37:2	103-4963	1	Tire
19	1-633131	2	Yoke-Linkage, Brake	38	242-50	8	Nut-Lug 1/2-20

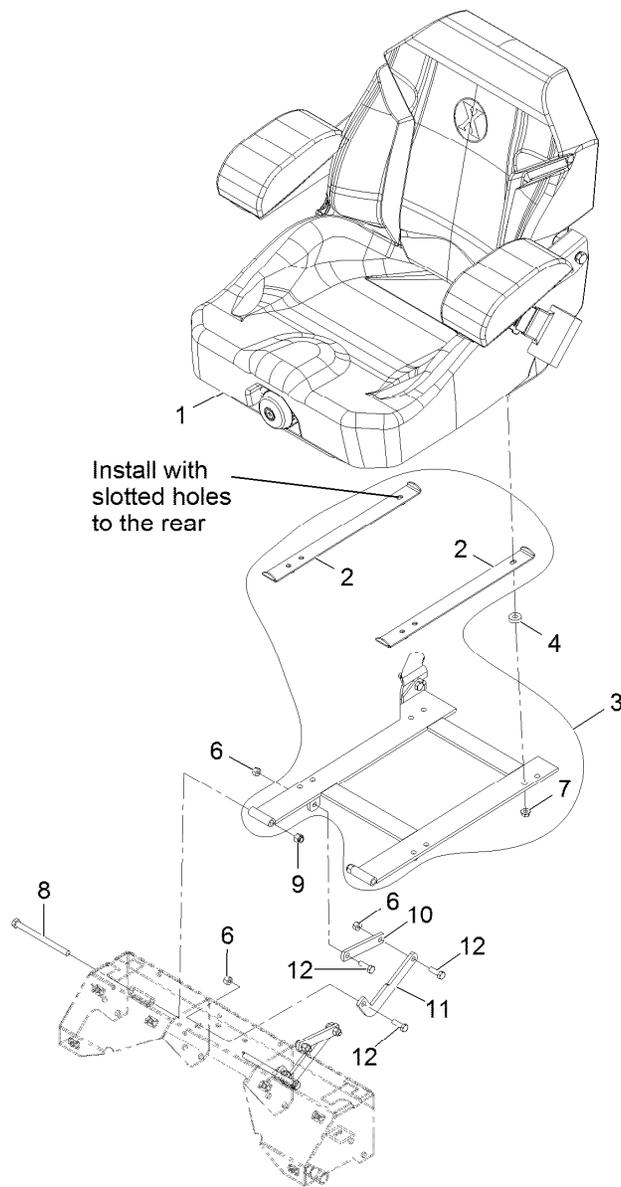

Seat Assembly


Ref.	Part Number	Qty.	Description
1	116-8912	1	Kit-Suspension Seat
2	1-653282-03	2	Stop/Spacer-Seat
3	109-9228	1	Kit,Seat Frame Service ●
4	26-4840	4	Spacer-Pin, Mounting
6	3296-29	6	Nut-Nyloc 5/16-18
7	32128-20	4	Nut-Whizlock 5/16-18
8	323-39	2	Screw-HH 3/8-16 X 5
9	3296-39	2	Nut-Nyloc 3/8-16
10	103-5161	2	Link-Stop, Seat
11	109-2759	2	Link-Stop, Seat
12	322-5	6	Screw-HH 5/16-18 X 1

● Includes seat belt assembly

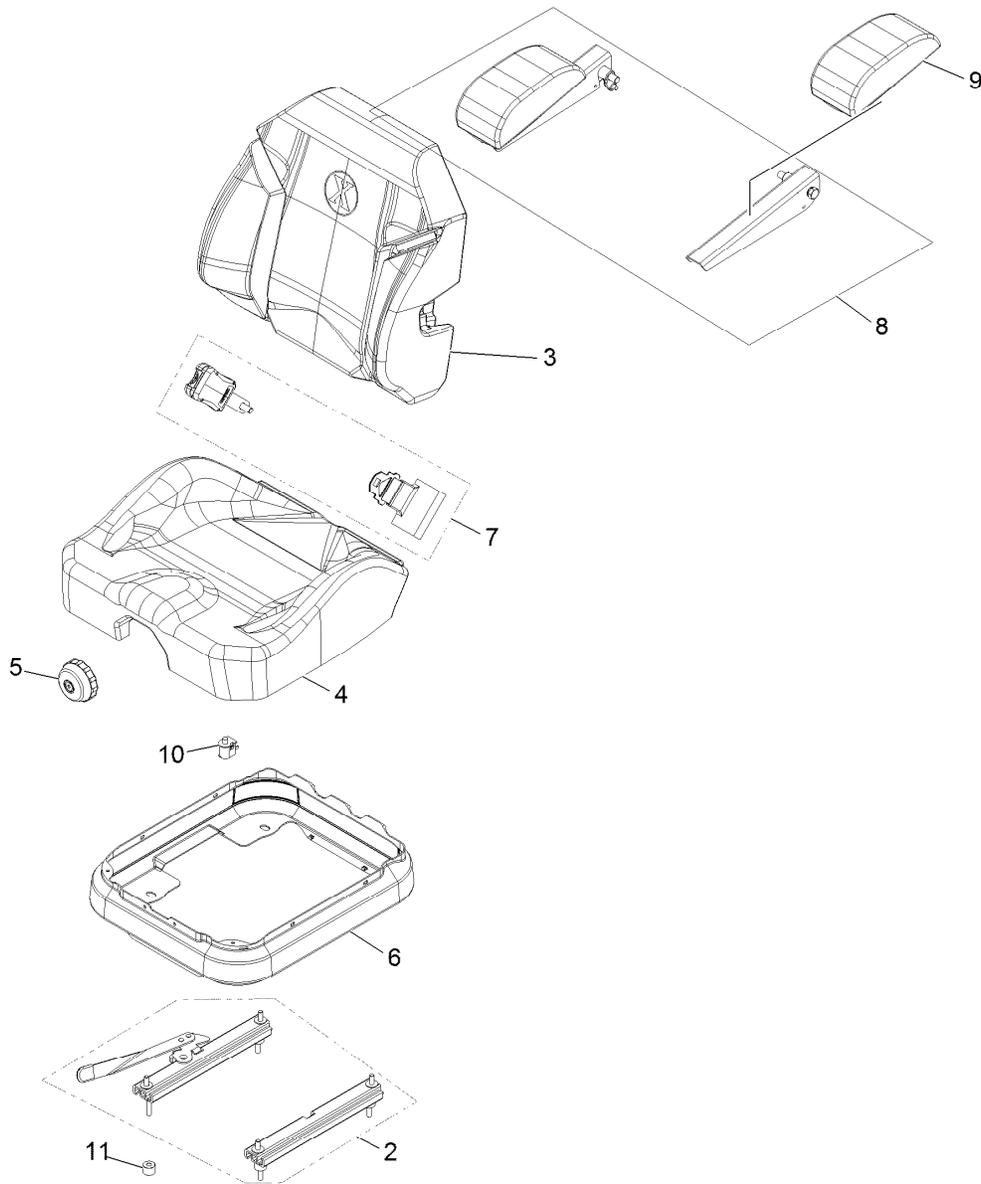

Seat W/Tracks Assembly No. 116-8912


Ref.	Part Number	Qty.	Description
2	116-8910	1	Seat Track Set
3	116-8908	1	Cover-Back 311463Vn500
4	116-8909	1	Cover-Cushion 311464Vn500
5	116-8911	1	Knob-Adjuster
6	116-5659	1	Cover-Suspension Bellows
7	109-9805	1	Seat Belt Kit
8	116-8906	1	Kit-Arm Rest Set
9	116-8905	1	Kit-Arm Rest Pads
10	82-2190	1	Switch
11	116-9329	4	Spacer

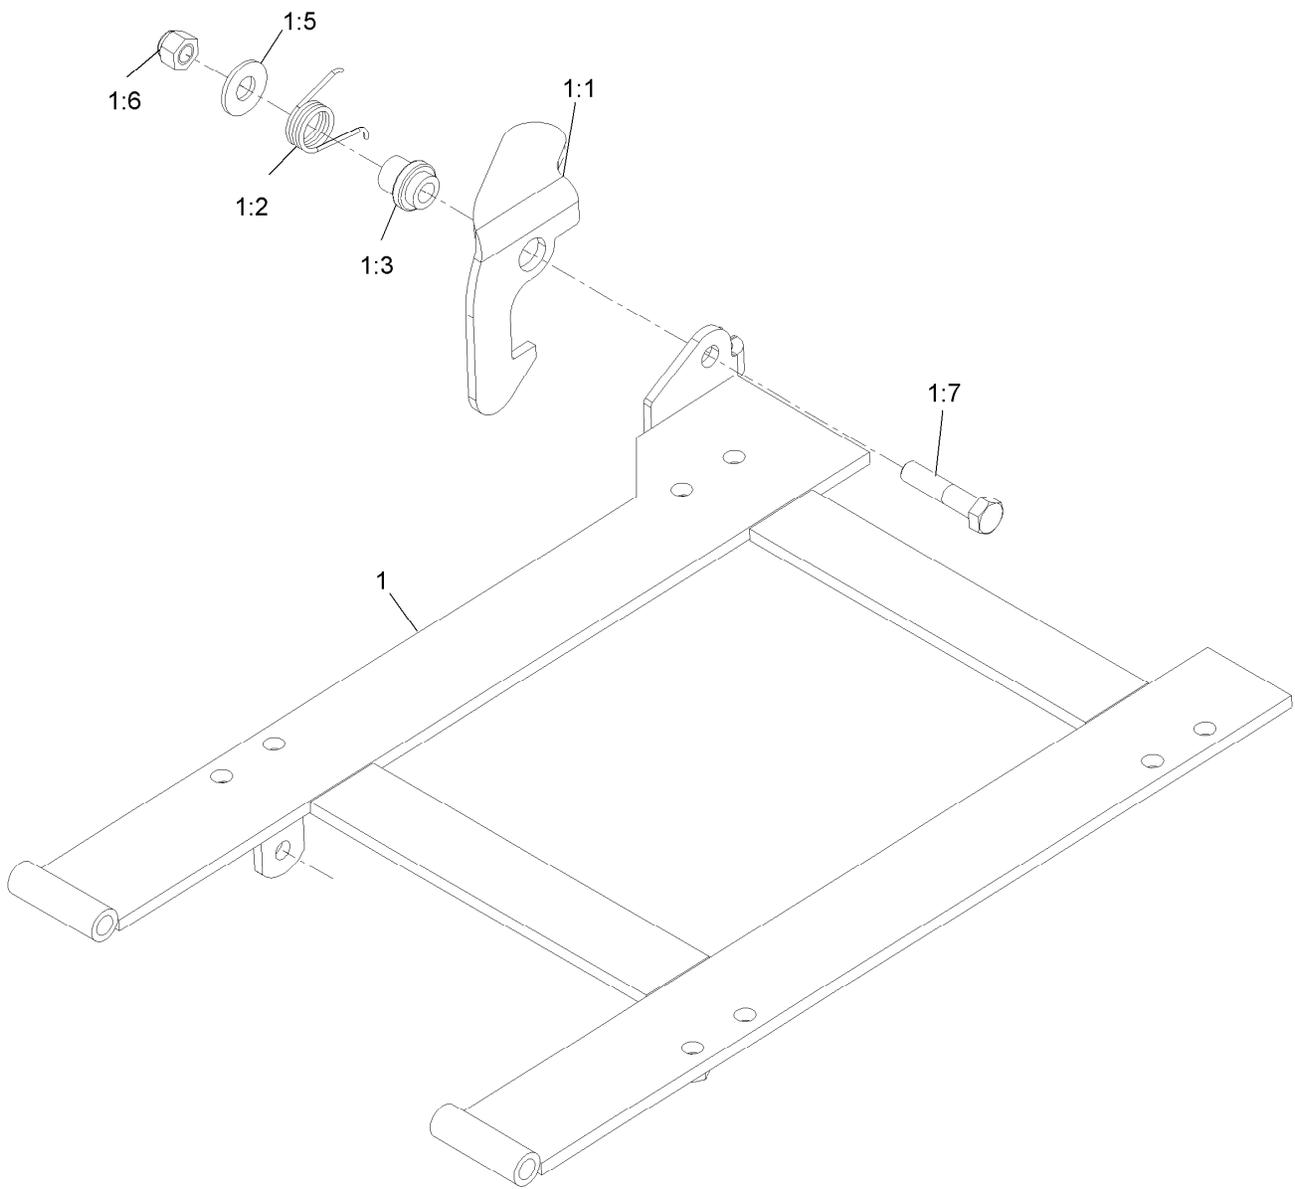

Seat Frame Single Latch Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Seat Frame Single Latch ASM ●
1:1	103-5520	1	Catch-Latch, Single
1:2	103-5519	1	Spring-Torsion, Latch
1:3	107-0075	1	Bushing
1:5	3256-4	1	Washer-3/8 Std
1:6	3296-39	1	Nut-Nyloc 3/8-16
1:7	323-9	1	Screw-HH 3/8-16 X 1 3/4

● Not serviced separately

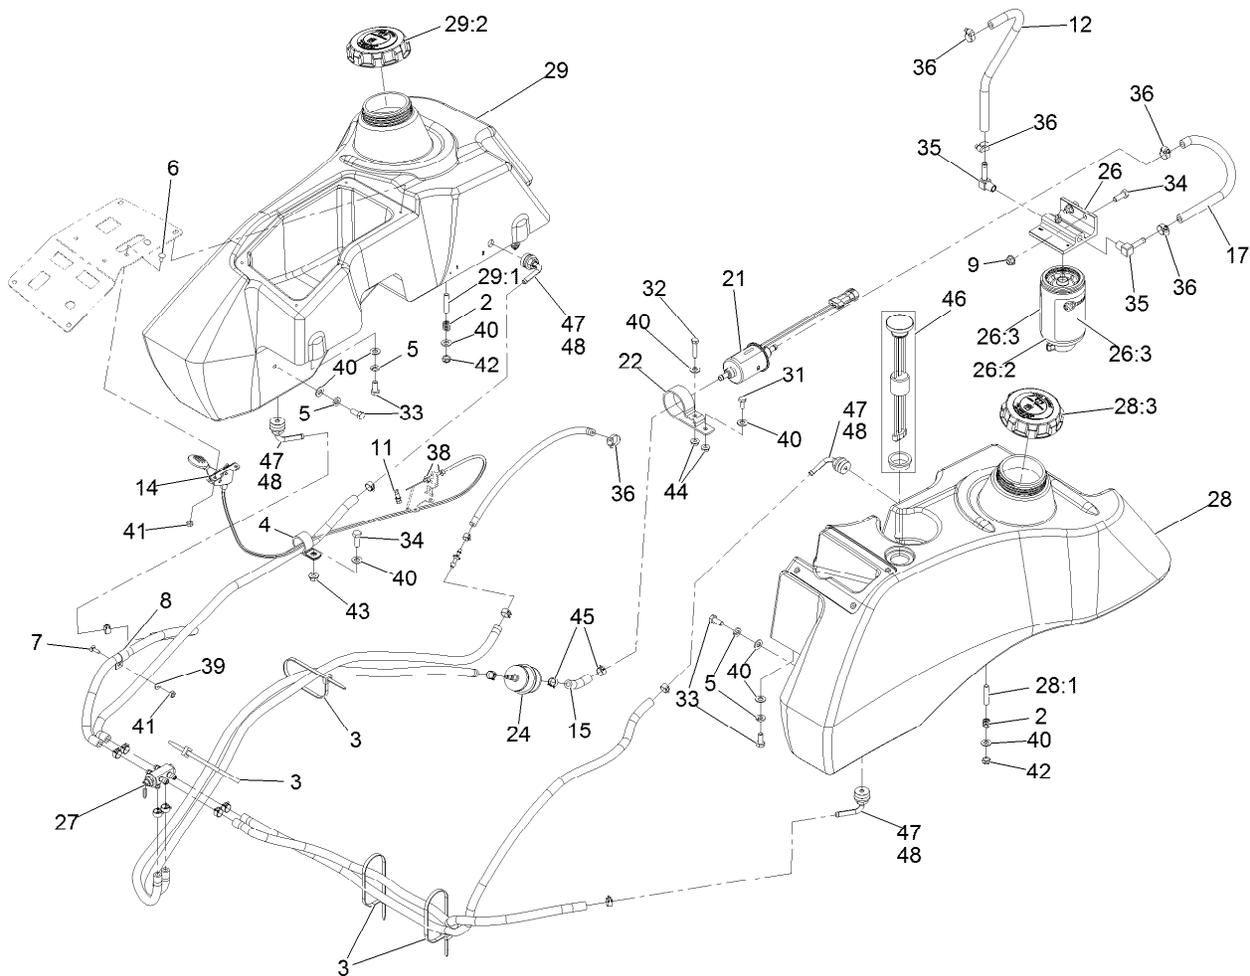


Fuel Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
2	1-633349	6	Spring-Tank, Fuel	28:3	114-5062	1	Cap-Biodiesel
3	1-643115	4	Tie-Plastic	29	116-0142	1	ASM, Fuel Tank Lxs RH
4	1-643312	1	Clip-Loom	29:1	1-633023	3	Stud ▲
5	1-805005	4	Washer-Lock	29:2	114-5062	1	Cap-Biodiesel
6	1-807513	2	Bolt-CARR	31	321-3	1	Screw-HH
7	1-807533	1	Bolt-CARR	32	321-8	1	Screw-HH
8	103-1193	1	Clip-Half, Loom	33	322-3	4	Screw-HH
9	104-8300	2	Nut-Flange, NI	34	322-4	3	Screw-HH
11	108-5928	1	Swivel-Stop, Cable	35	353-707	2	Fitting-HYD, 90 DEG
12	109-0274	1	Hose-Fuel	36	2412-108	5	Clamp-Worm
14	109-6652	1	Cable, Throttle	38	3220-1	2	Nut-Jam
15	110-0047	1	Hose-Fuel	39	3256-14	1	Washer-Flat
17	110-4104	1	Hose-Fuel	40	3256-23	13	Washer-Flat
21	110-8806	1	Pump-Fuel	41	3296-2	3	Nut-Lock, NI
22	110-8817	1	Bracket-Pump, Fuel	42	3296-47	6	Nut-Lock, NI
24	112-7836	1	Filter-Inline	43	32128-20	1	Nut-HF
26	116-0290	1	ASM,Fuel Filter	44	32128-33	2	Nut-HF
26:2	116-0289	1	Filter,Fuel	45	92-2379	2	Clamp-Hose
26:3	116-1559	2	Decal,Exmark Filter	46	103-6564	1	Kit, Fuel Gauge
27		1	ASM, Fuel Valve-Hoses ●	47	116-0968	1	Fitting,Fuel Bulkhead W/O Screen ■
28	116-0141	1	ASM,Fuel Tank Lxs LH	48	103-2784	1	O-Ring
28:1	1-633023	3	Stud ▲				

● Not serviced separately


■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

▲ Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on threads.

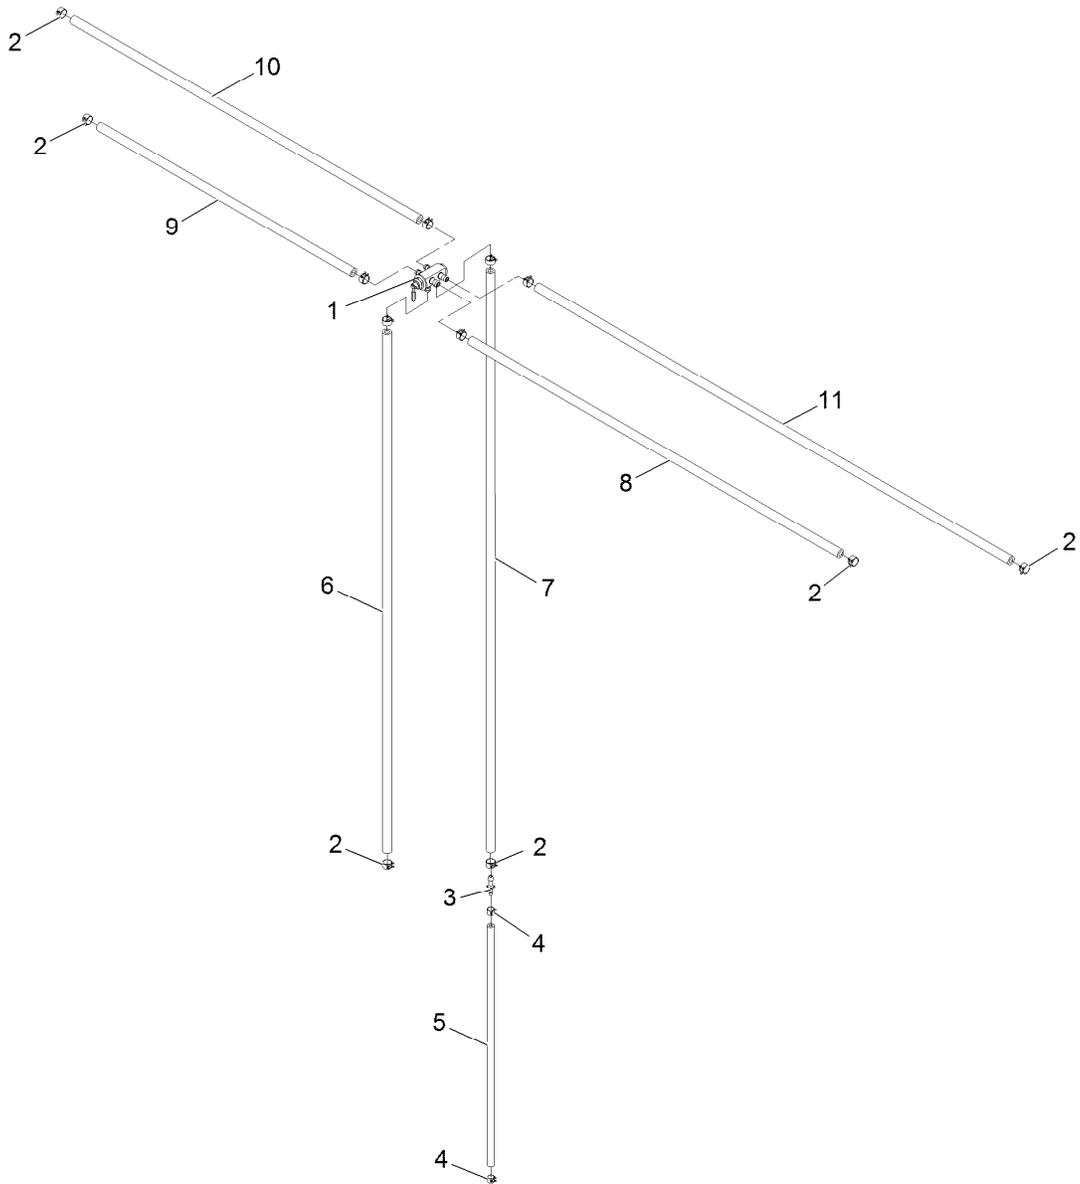

Fuel Valve Hose Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	116-0973	1	Valve,Fuel Selector 5/16
2	92-2379	12	Clamp-Hose
3	121-2573	1	Fitting-Straight
4	2412-80	2	Clamp-Hose
5	68-3633	1	Hose-Fuel
6	110-4114	1	Hose-Fuel
7	110-4100	1	Hose-Fuel
8	115-2370	1	Hose-Fuel
9	108-3284	1	Hose-Fuel
10	110-6186	1	Hose-Fuel
11	109-0277	1	Hose-Fuel

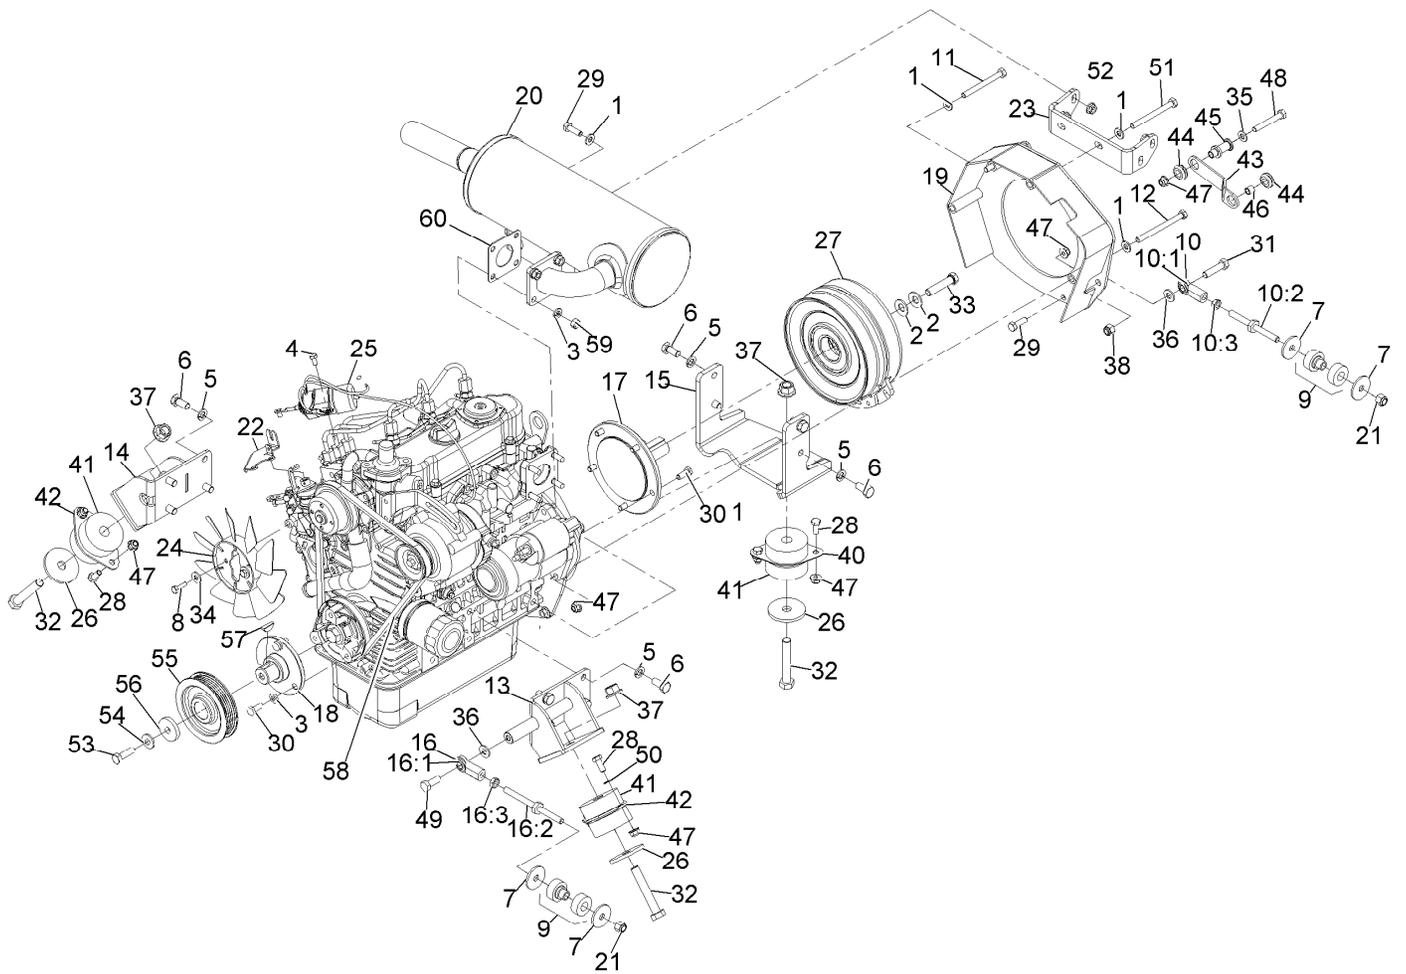

Engine Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-303334	8	Washer-Spring Disc 5/16	16	109-8528	1	Asm, A-T Link
2	1-603610	2	Washer-Spring Disc 7/16	16:1	103-0608	1	Joint-Ball, End
3	1-805005	7	Washer-Lock 5/16 Heavy	16:2	103-7544	1	Link, Rear A-T Axial
4	33113-012	2	Screw-HH M6-1 X 12Mm	16:3	3220-3	1	Nut-HJ
5	42-9600	12	Washer-Lock M10	17	109-9873	1	Shaft,Kubota 902 Stub
6	63-7790	12	Screw-HH M10-1.25 X 1.25Mm	18	103-7556	1	Hub, Pump Drive
7	93-6099	4	Washer	19	116-5089-03	1	Wld,Flywheel Cover
8	33113-020	2	Screw-HH M6-1 X 12Mm	20	116-7108	1	Muffler Kit - Kubota
9	103-3568	2	Isolator-Link	21	3296-6	2	Nut-Nyloc 3/8-24
10	103-3745	1	Ball Joint Link ASM	22	108-5922	1	Bracket-Support, Throttle
10:1	103-0608	1	Joint-Ball, End	23	116-6179-03	1	Support-Muffler
10:2	103-3567	1	Link, A-T	24	109-0789	1	Fan
10:3	3220-3	1	Nut-HJ	25	109-1211	1	Solenoid, Fuel.
11	33114-080	1	Screw-HH M8-1.25 X 80Mm	26	116-5142	3	Washer
12	322-23	1	Screw-HH 5/16-18 X 3 3/4	27	116-1610	1	Clutch, Cms250 Kd
13	116-4514-03	1	Engine Mount-LH	28	322-3	6	Screw-HH 5/16-18 X 3/4
14	116-4513-03	1	Engine Mount-RH	29	322-5	5	Screw-HH 5/16-18 X 1
15	116-2638-03	1	Bracket,Engine Mount	30	33114-020	8	Screw-HH M8-1.25 X 20Mm


● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

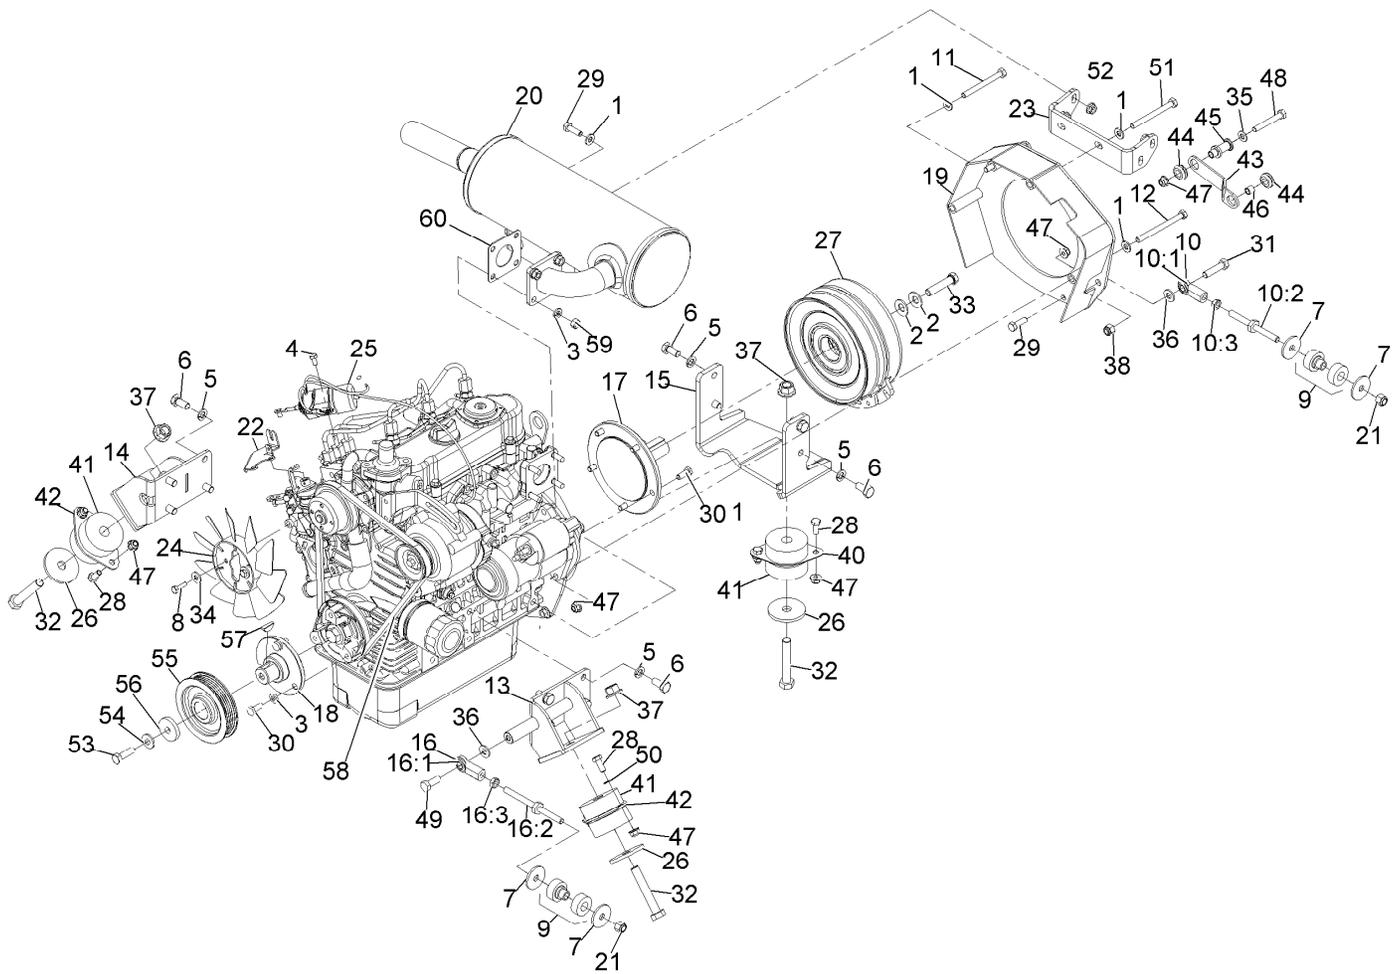

Engine Assembly (continued)


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
31	323-8	1	Screw-HH 3/8-16 X 1 1/2	47	104-8300	9	Nut-Nyloc 5/16-18 Flg
32	325-12	3	Screw-HH 1/2-13 X 3	48	322-11	1	Screw-HH 5/16-18 X 2 1/4
33	3212-8	1	Screw-HH 7/16-20 X 2 ●	49	3235-22	1	Screw-HH, Lock
34	3256-2	2	Washer-1/4 Std	50	3255-8	1	Washer-Lock 5/16 (Ext-Tooth)
35	3256-23	1	Washer-5/16 Sae	51	119-4866	2	Screw-HH ●
36	3256-24	2	Washer-3/8 Sae	52	32128-20	4	Nut-Whizlock 5/16-18
37	99-5107	3	Nut-Lock 1/2-13	53	323-7	1	Screw-HH 3/8-16 X 1 1/4
38	3296-39	1	Nut-Nyloc 3/8-16	54	98-5975	1	Washer-Spring Disc 3/8
40	116-2641-03	1	Flange ASM	55	103-4718	1	Sheave, Engine
41	116-4433	3	Isolator,Engine	56	1-543610	1	Washer
42	116-2725-03	2	Flange-11GA	57	1-807014	1	Key-Woodruff 1/4 X 7/8
43	116-5296-03	1	Clutch Link	58	109-2901	1	Belt
44	1-633630	2	Grommet	59	33014-00	4	Nut-Hex
45	116-5295	1	Clutch Standoff	60	99-8343	1	Gasket-Muffler
46	1-633545	1	Spacer				

● Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on threads.

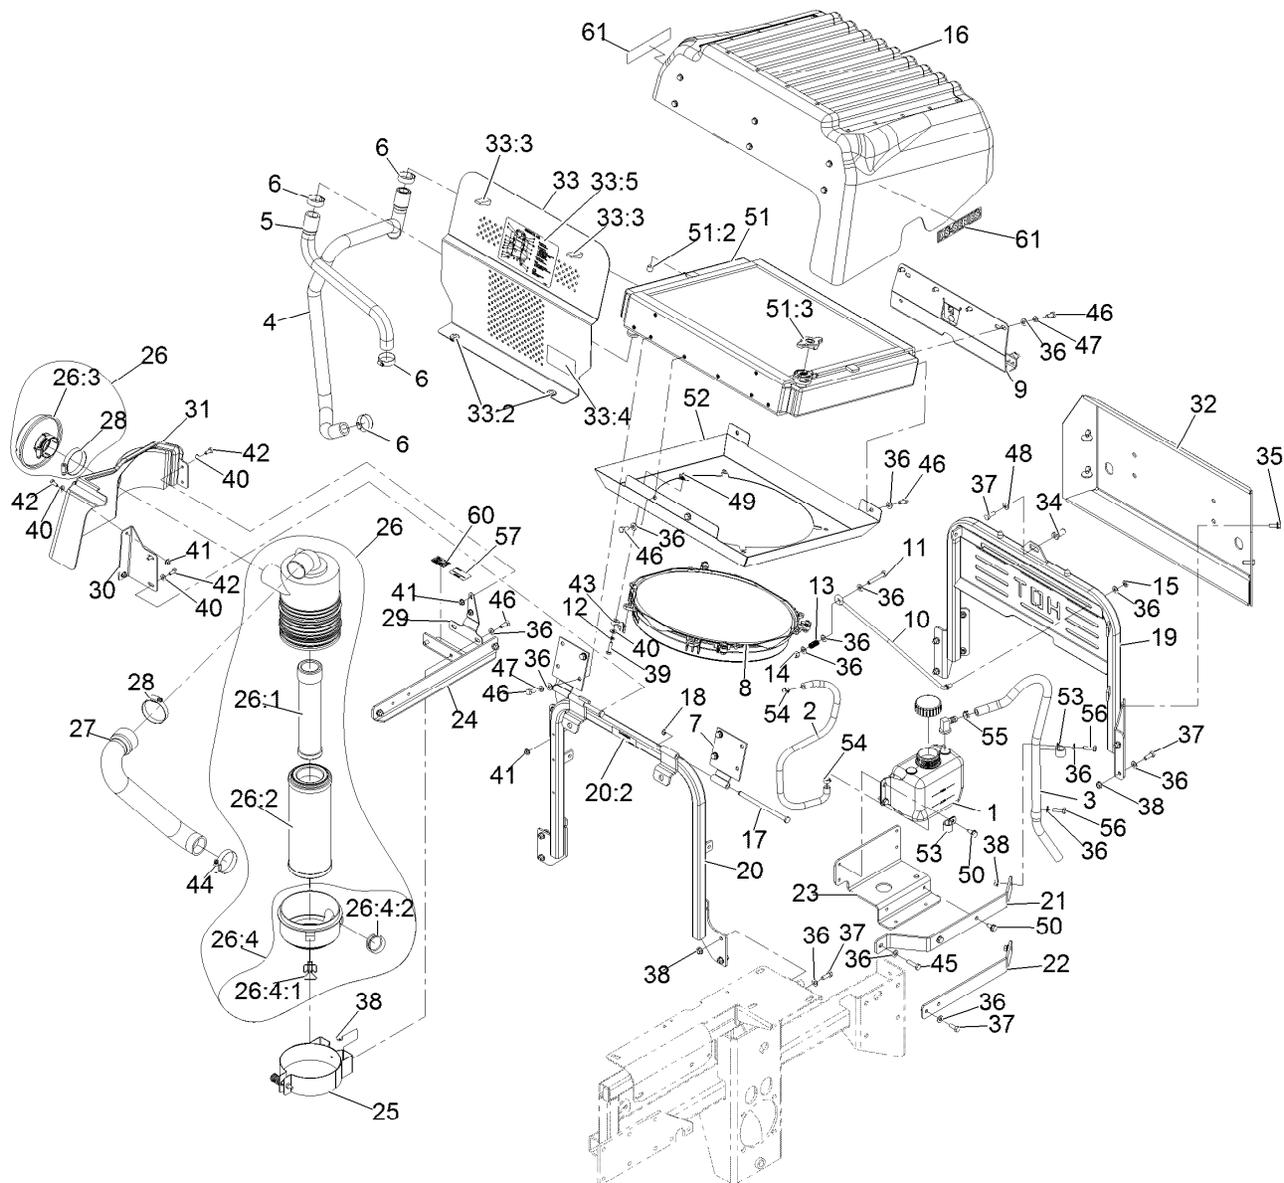


Cooling Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	116-7124	1	Tank, Overflow W/Cap	20	109-2804	1	Asm, Front Radiator Mount (103-7582-03) W/Decals
2	116-7204	1	Hose, .313 I.D.X 25.0 Reinforced Epdm	20:2	98-5954	1	Decal-Cover, Missing
3	116-7245	1	Hose, .500 I.D. X 30" Epdm	21	103-7558-03	1	Rib, Top
4	109-3142	1	Hose, Radiator	22	103-7579-03	1	Rib, Bottom
5	103-7532	1	Hose, Radiator	23	116-4822-03	1	Bracket, Bottle-Hydro Tank
6	2412-34	4	Clamp-Hose	24	103-9248-03	1	Wld, Air Cleaner Mount
7	109-3179-03	2	Wld, Hinge Plate	24	109-3257	1	Asm, Air Cleaner Brkt W/Decals
8	116-6274	1	Fan- Electric	25	103-1058	1	Bracket-Filter, Air
9	109-8427	1	ASM-Latch Plate	26	103-5178	1	Asm-Canister Air Filter W/Hood
10	103-9207	1	Rod, Prop	26:1	103-1326	1	Filter-Air, Safety
11	322-10	1	Screw-HH 5/16-18 X 2	26:2	103-1327	1	Filter-Air
12	3253-3	4	Washer-Lock 1/4	26:3	100-2436	1	Asm-Hood Air Intake W/Clamp
13	103-6643	1	Spring	26:4	103-1060	1	Cover-Filter, Air
14	3296-29	1	Nut-Nyloc 5/16-18	26:4:1	99-3174	2	Clip-Cleaner, Air
15	109-0917	1	Nut-Push 5/16	26:4:2	109-2820	1	Ejector-Air Cleaner
16	116-6394	1	Hood ASM, D902	27	103-7597	1	Hose, Air Intake
17	103-9218	2	Pin, Cover Pivot	28	2412-42	1	Clamp-Hose
18	32120-18	2	E-Ring				
19	109-8546-03	1	Wld, Rear Radiator Mount				

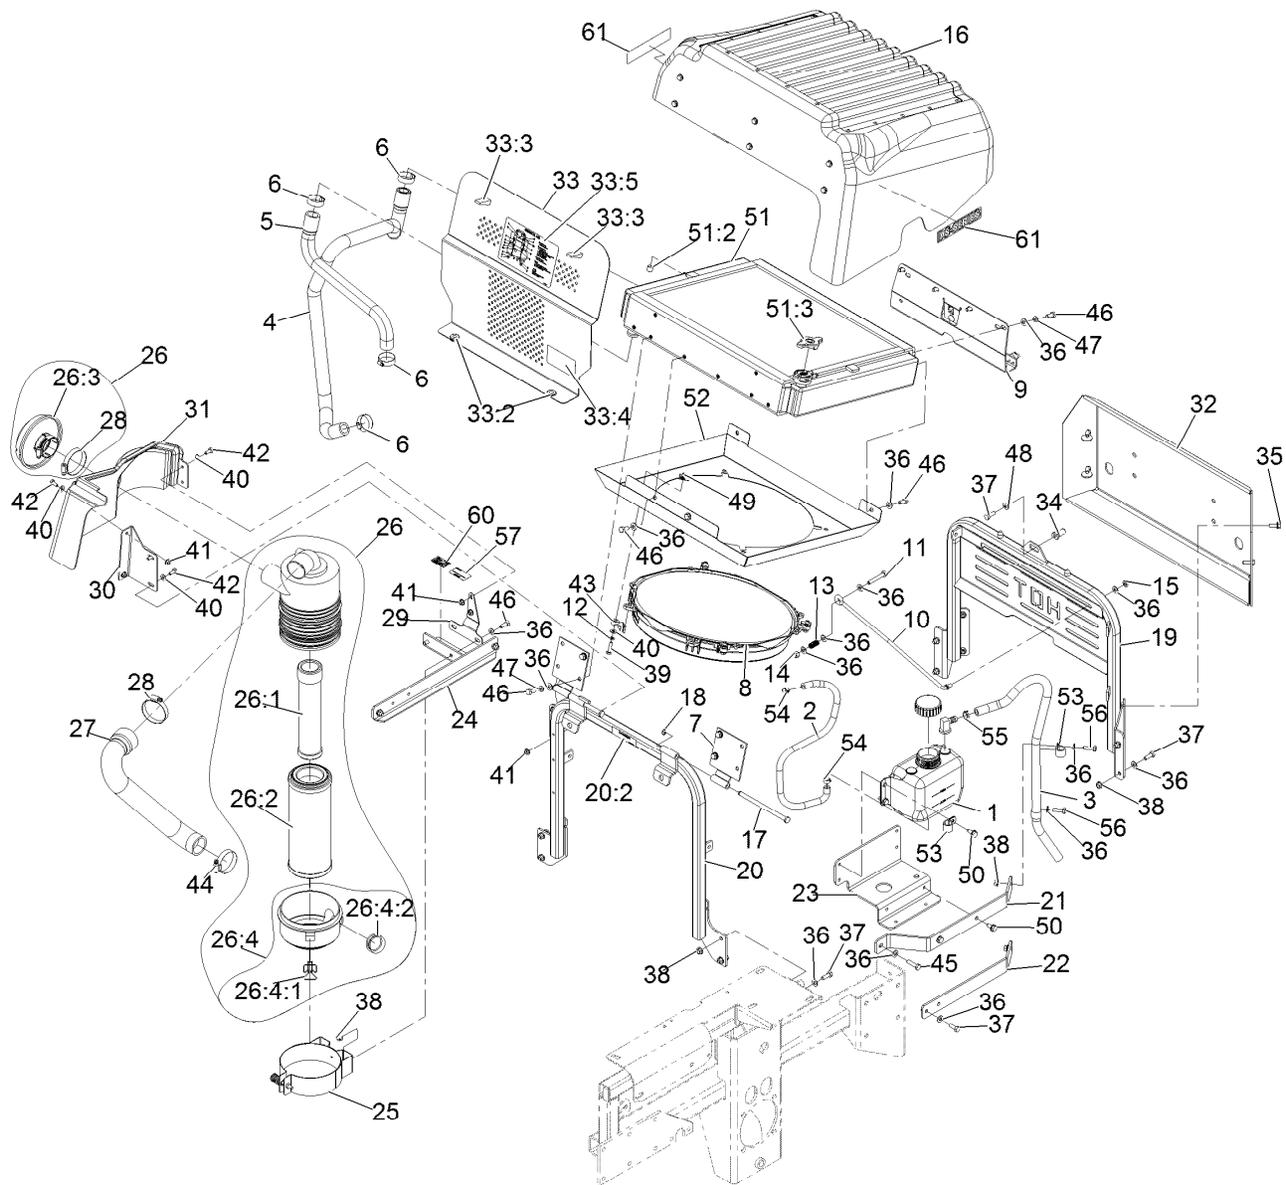


Cooling Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
29	103-9222-03	1	Bracket, Rear Cover	44	1-643009	1	Clamp-Hose
30	103-9206-03	1	Bracket, Front Cover	45	322-6	1	Screw-HH 5/16-18 X 1 1/4
31	103-9221	1	Panel, Side	46	322-3	14	Screw-HH 5/16-18 X 3/4
32	103-1479-03	1	Bumper, Rear	47	3253-4	8	Washer-Lock 5/16
33	116-0136	1	ASM,Panel W/ Decals Lxs Lc Kd	48	1-303334	1	Washer-Spring Disc 5/16
33:2	109-0023	2	Grommet	49	107069	4	Nut-Retainer-Panel 1/4-20
33:3	74-5950	2	Latch	50	32144-70	6	Screw-HWH 5/16-18 X 3/4 Tf
33:4	116-0127	1	Decal,Hydro Belt Routing	51	116-5303	1	Radiator ASM, AI D902
33:5	116-0997	1	Decal, Check Service	51:2	99-8551	1	Plug-Pipe
34	109-8432	1	Pin, Latch	51:3	1-643161	1	Cap-Radiator
35	3234-47	4	Screw-HH Flg 5/16-18 X 3/4	52	116-6296-03	1	Fan Shroud,16
36	3256-23	32	Washer-5/16 Sae	53	1-633396	3	Clip-Loom 5/8
37	322-4	12	Screw-HH 5/16-18 X 7/8	54	92-2379	2	Clamp-Hose
38	32128-20	16	Nut-Whizlock 5/16-18	55	110-6242	1	Clamp-Hose
39	321-6	4	Screw-HH 1/4-20 X 1	56	322-5	2	Screw-HH 5/16-18 X 1
40	3256-22	10	Washer-1/4 Sae	57	110-0806	1	Decal-Caution
41	32128-33	6	Nut-Whizlock 1/4-20	60	103-2076	1	Decal-Caution
42	321-3	6	Screw-HH 1/4-20 X 5/8	61	116-6992	2	Decal, Ds Series
43	109-2950	4	Mount, Fan				

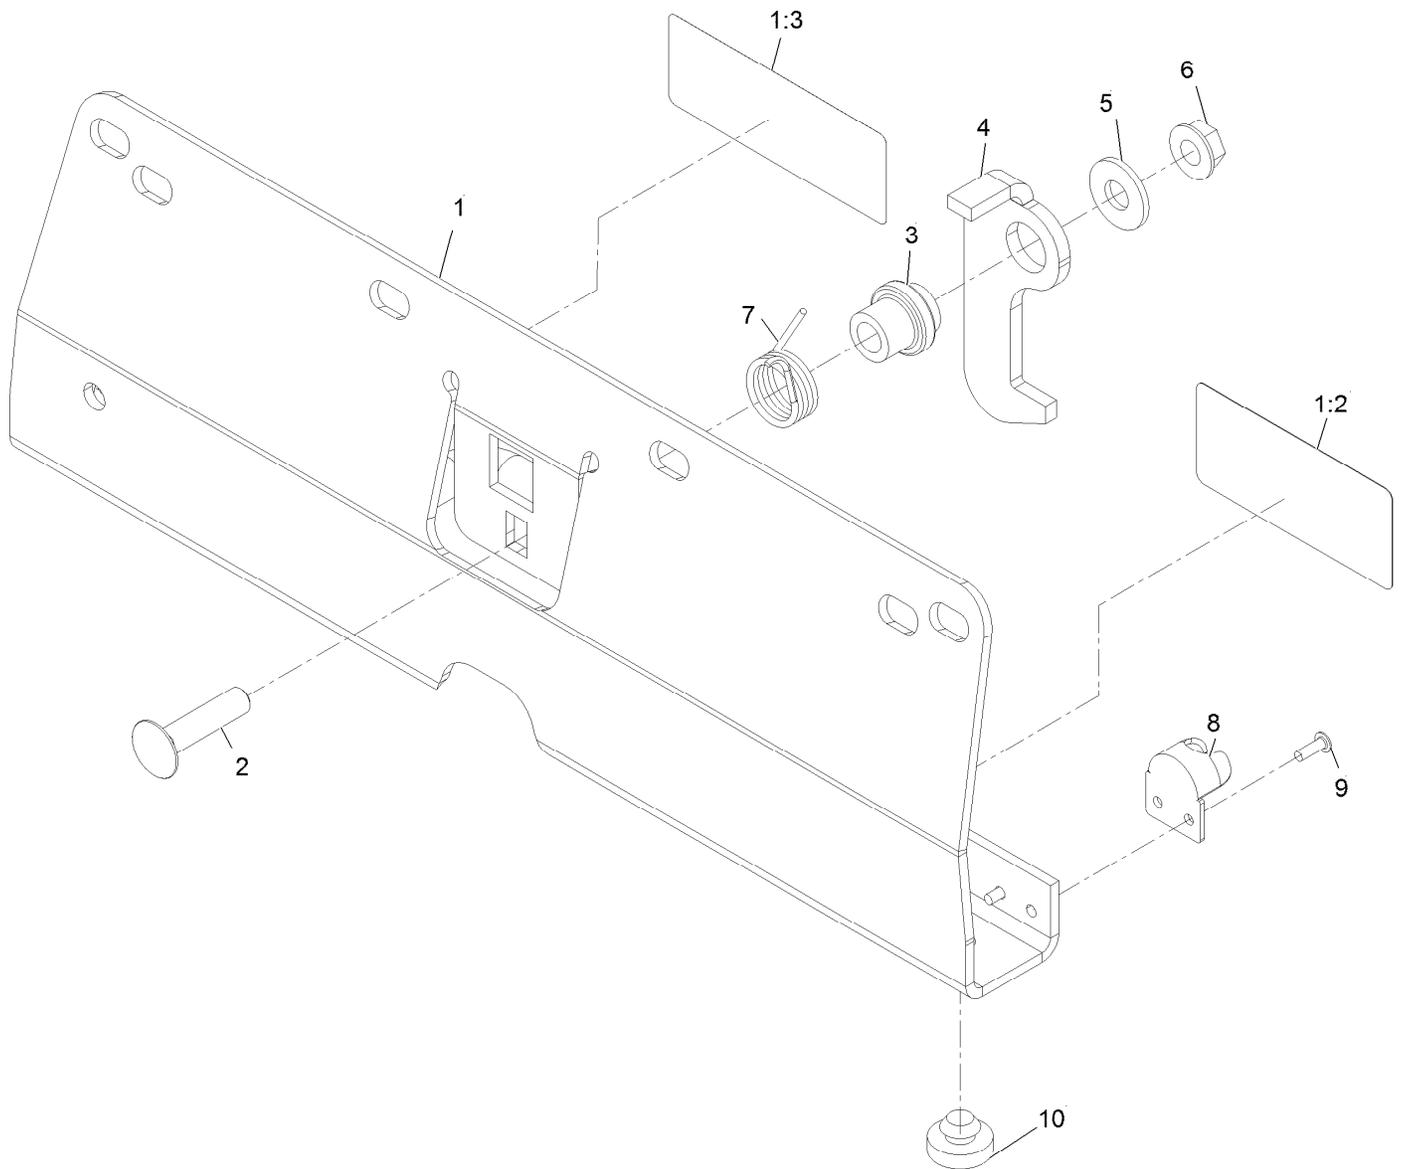

Latch Plate Assembly No. 109-8427


Ref.	Part Number	Qty.	Description
1	109-8539	1	Asm, Latch Plate W/Decals
1:2	110-3842	1	Decal-Antifreeze
1:3	109-2263	1	Decal, Pump Fan Warning
2	112-6950	1	Bolt-Carriage 5/16-18 X 1 3/8 Short Neck
3	107-0075	1	Bushing
4	109-8431	1	Hook, Latch
5	3256-3	1	Washer-5/16 Std
6	32128-25	1	Nut-Hex 5/16-18 Side Lock
7	109-8430	1	Spring
8	1-643189	2	Keeper-Latch, Rubber
9	923786	4	Rivet
10	1-513658	2	Bumper

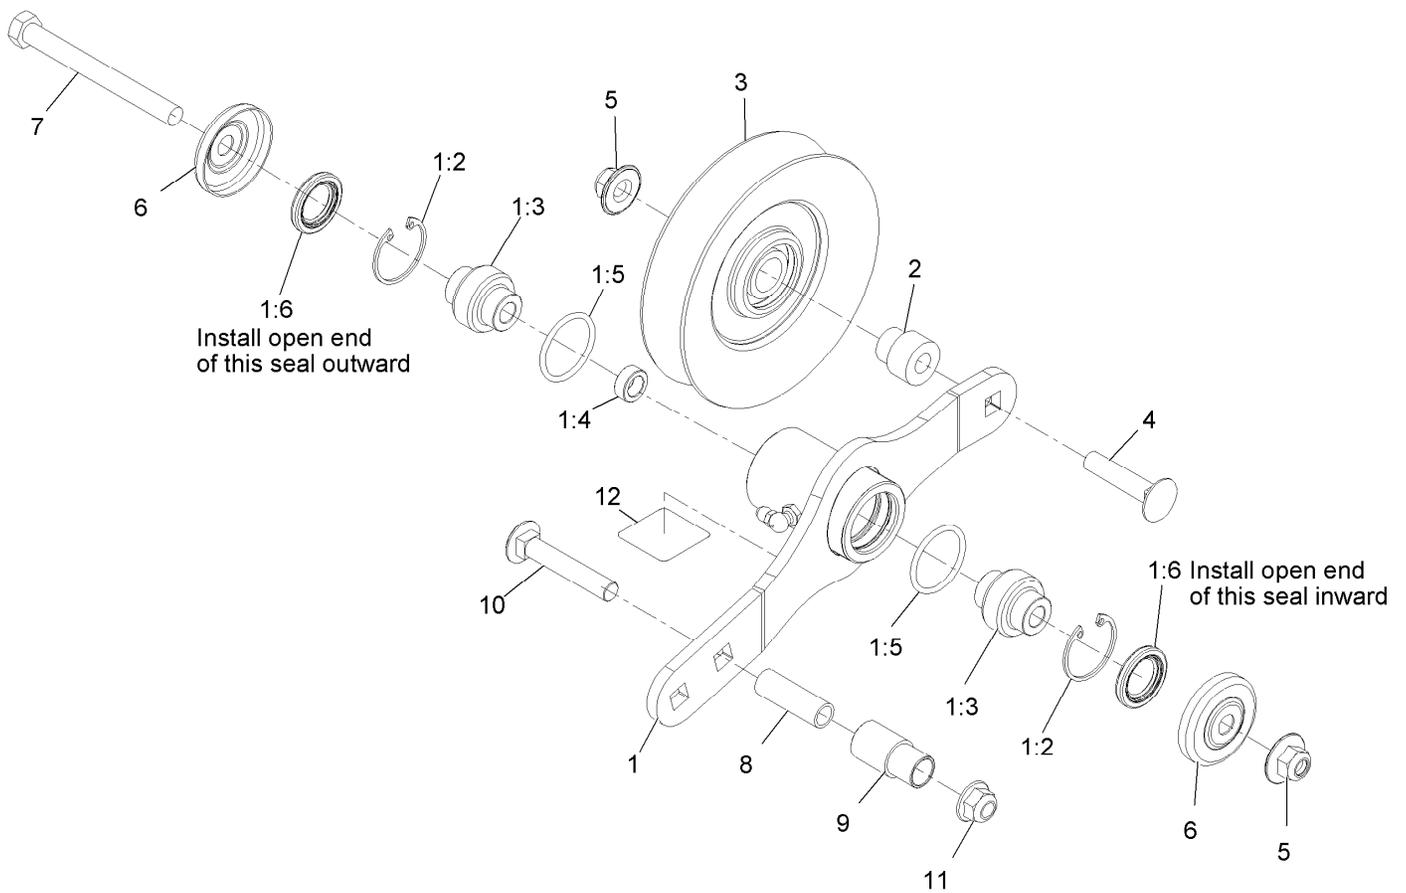

Tightener Arm W/Pulley Assembly No. 116-9286

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	ASM-Ttnr Arm W/Bearings ●	5	109-6658	2	Nut-Nyloc 3/8-16 Flg
1:2	32120-10	2	Ring-Retaining	6	103-2916	2	Guard-Top
1:3	103-3504	2	Bearing-Spherical	7	323-42	1	Screw-HH 3/8-16 X 3 3/4
1:4	103-5677	1	Spacer	8	109-8754	1	Spacer
1:5	106-7159	2	O-Ring	9	109-8866	1	Bushing, Plastic
1:6	103-3506	2	Seal-Single Lip	10	3231-7	1	Bolt-Carriage 3/8-16 X 2 1/4
2	1-603496	1	Bushing-Idler	11	104-8301	1	Nut-Nyloc 3/8-16 Flg
3	1-603805	1	Pulley-Idler	12	103-5858	1	Decal,Grease
4	3231-5	1	Bolt-Carriage 3/8-16 X 1 3/4				


● Not serviced separately

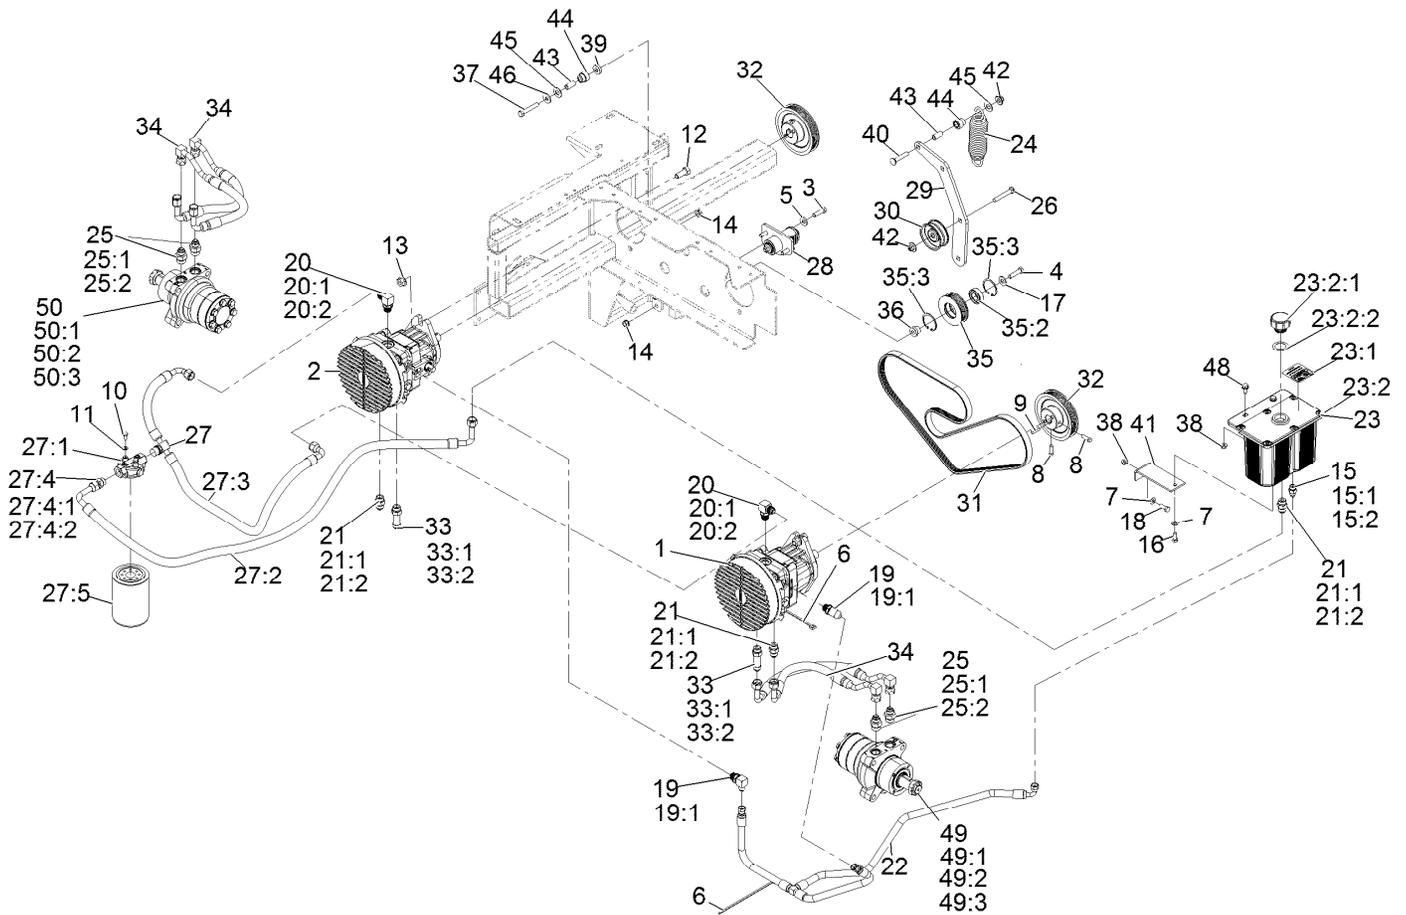

Hydraulic Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	109-7543	1	Pump, Hydro	21:1	1-603920	1	O-Ring-Sae #8
2	109-7544	1	Pump, Hydro	21:2	1-603992	1	O-Ring-37 Flare #8
3	323-7	3	Screw-HH 3/8-16 X 1 1/4	22	109-0087	1	Asm-Case Drain Hose
4	323-8	1	Screw-HH 3/8-16 X 1 1/2	23	109-0582	1	Hydraulic Tank ASM
5	98-5975	3	Washer-Spring Disc 3/8	23:1	116-0404	1	Decal-Hydraulic Tank
6	1-303335	2	Tie-Cable 7 15/16 (Large)	23:2		1	Tank-Hydraulic ●
7	3256-23	2	Washer-5/16 Sae	23:2:1	103-1948	1	Cap-Reservoir, HYD
8	30-1710	4	Setscrew-5/16-18 X 1	23:2:2	103-1949	1	Gasket-Cap
9	1-807259	2	Key-Machine 1/4 X 1/4 X 1	24	116-6317	1	Spring-Extension
10	321-3	2	Screw-HH 1/4-20 X 5/8	25	1-603991	4	Adapter-Straight
11	1-805004	2	Washer-Lock 1/4 Heavy	25:1	237-80	1	O-Ring
12	325-5	4	Screw-HH 1/2-13 X 1 1/4	25:2	1-603992	1	O-Ring-37 Flare #8
13	32128-49	4	Nut-Whizlock 1/2-13	26	3231-31	1	Bolt-Carriage 3/8-16 X 2 1/2
14	3290-357	4	Nut-Whizlock 3/8-16	27	109-6905	1	Asm, Charge Hose
15	103-2156	1	Adapter-Straight	27:1	103-2259	1	Head-Filter
15:1	1-603921	1	O-Ring-Sae #6	27:2	109-6904	1	Asm, Filter Inlet Hose
15:2	103-1020	1	O-Ring-37 Flare #6	27:3	109-6903	1	Hose, Pump Inlet
16	322-3	1	Screw-HH 5/16-18 X 3/4	27:4	1-603990	1	Adapter-Straight
17	3256-4	1	Washer-3/8 Std	27:4:1	1-603920	1	O-Ring-Sae #8
18	322-4	1	Screw-HH 5/16-18 X 7/8	27:4:2	1-603992	1	O-Ring-37 Flare #8
19	103-1014	2	Elbow-90°	27:5	103-2146	1	Element-Hydraulic Oil Filter
19:1	1-603920	1	O-Ring-Sae #8	28	109-3250	1	Asm, Pump Idler W/Bearings
20	103-2153	2	Elbow-90°	29	103-7569-03	1	Arm, Pump Idler
20:1	1-603920	1	O-Ring-Sae #8	30	116-0888	1	Idler, Flanged
20:2	1-603992	1	O-Ring-37 Flare #8	31	109-7582	1	Belt, Hydro Pump Drive
21	1-603990	3	Adapter-Straight				


● Not serviced separately

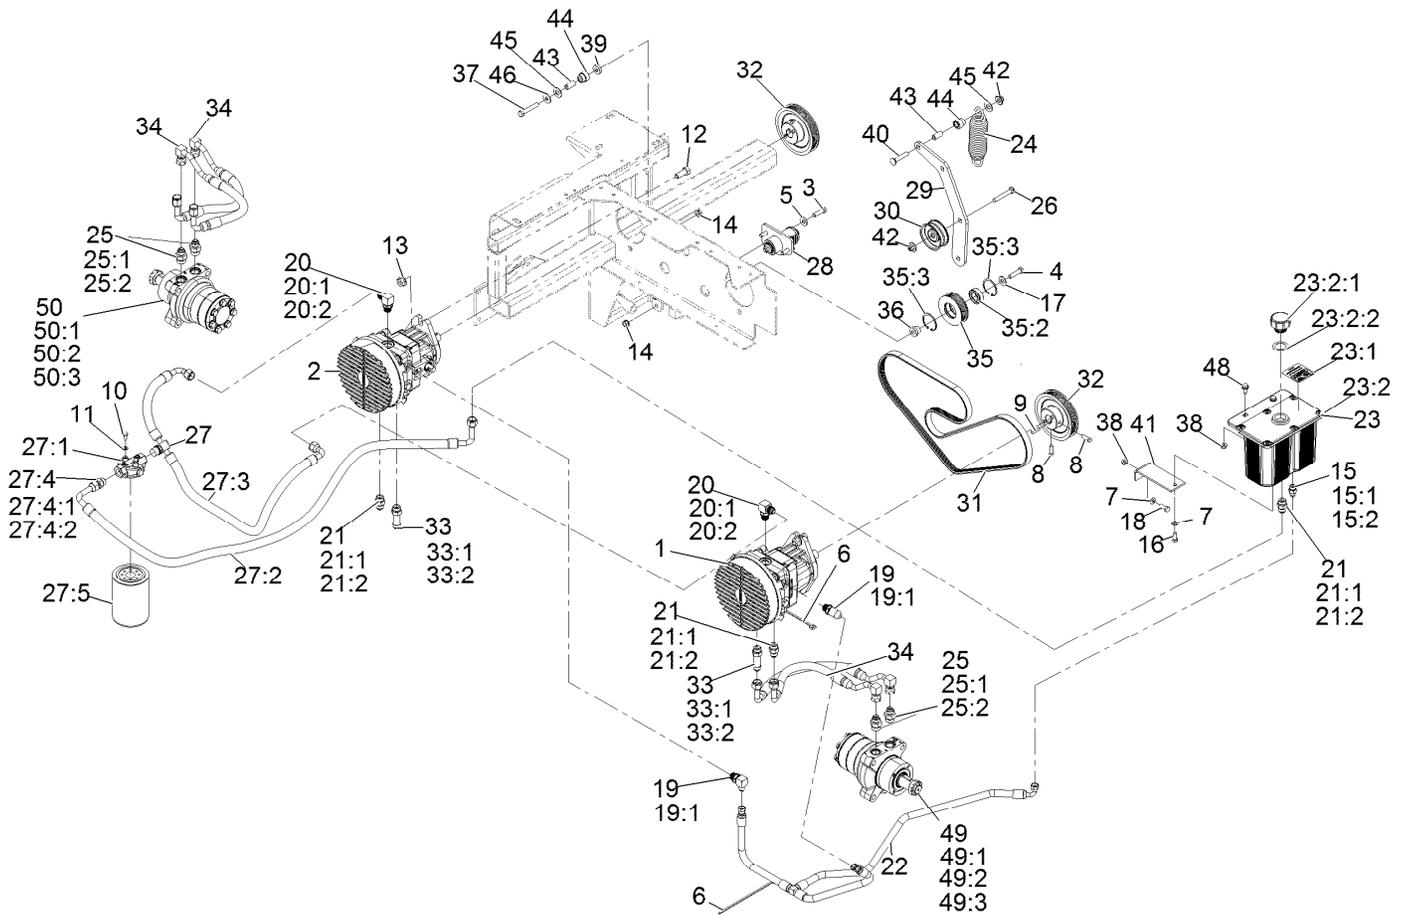

Hydraulic Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
32	109-7561	2	Sheave, Hydro Pump	43	109-8753	2	Spacer
33	103-1940	2	Adapter-Straight	44	109-8752	2	Spacer
33:1	237-79	1	O-Ring	45	112-9771	2	Washer-Teflon
33:2	1-603992	1	O-Ring-37 Flare #8	46	5-0838	1	Washer
34	103-4680	4	HYD Hose ASM	48	32144-70	2	Screw-HWH 5/16-18 X 3/4 Tf
35	103-4728	1	Asm, Lower Frame Idler	49	112-8358	1	HYD Motor ASM (CW)
35:2	251-347	1	Bearing-Ball Deep Groove	49:1	3257-42	1	Key-Woodruff 5/16 X 1
35:3	32151-13	2	Ring-Retaining	49:2	1-809036	1	Nut-Slotted 1-20
36	103-4566	1	Spacer, Lower Frame Idler	49:3	109-5966	1	Wheel Motor Seal Kit
37	323-11	1	Screw-HH 3/8-16 X 2 1/4	50	112-8357	1	HYD Motor ASM (CCW)
38	32128-20	3	Nut-Whizlock 5/16-18	50:1	3257-42	1	Key-Woodruff 5/16 X 1
39	103-3186	1	Spacer-Bracket, Guide	50:2	1-809036	1	Nut-Slotted 1-20
40	3231-6	1	Bolt-Carriage 3/8-16 X 2	50:3	109-5966	1	Wheel Motor Seal Kit
41	109-0089-03	1	Bracket, Hydraulic Tank				
42	109-6658	2	Nut-Nyloc 3/8-16 Flg				

● Not serviced separately

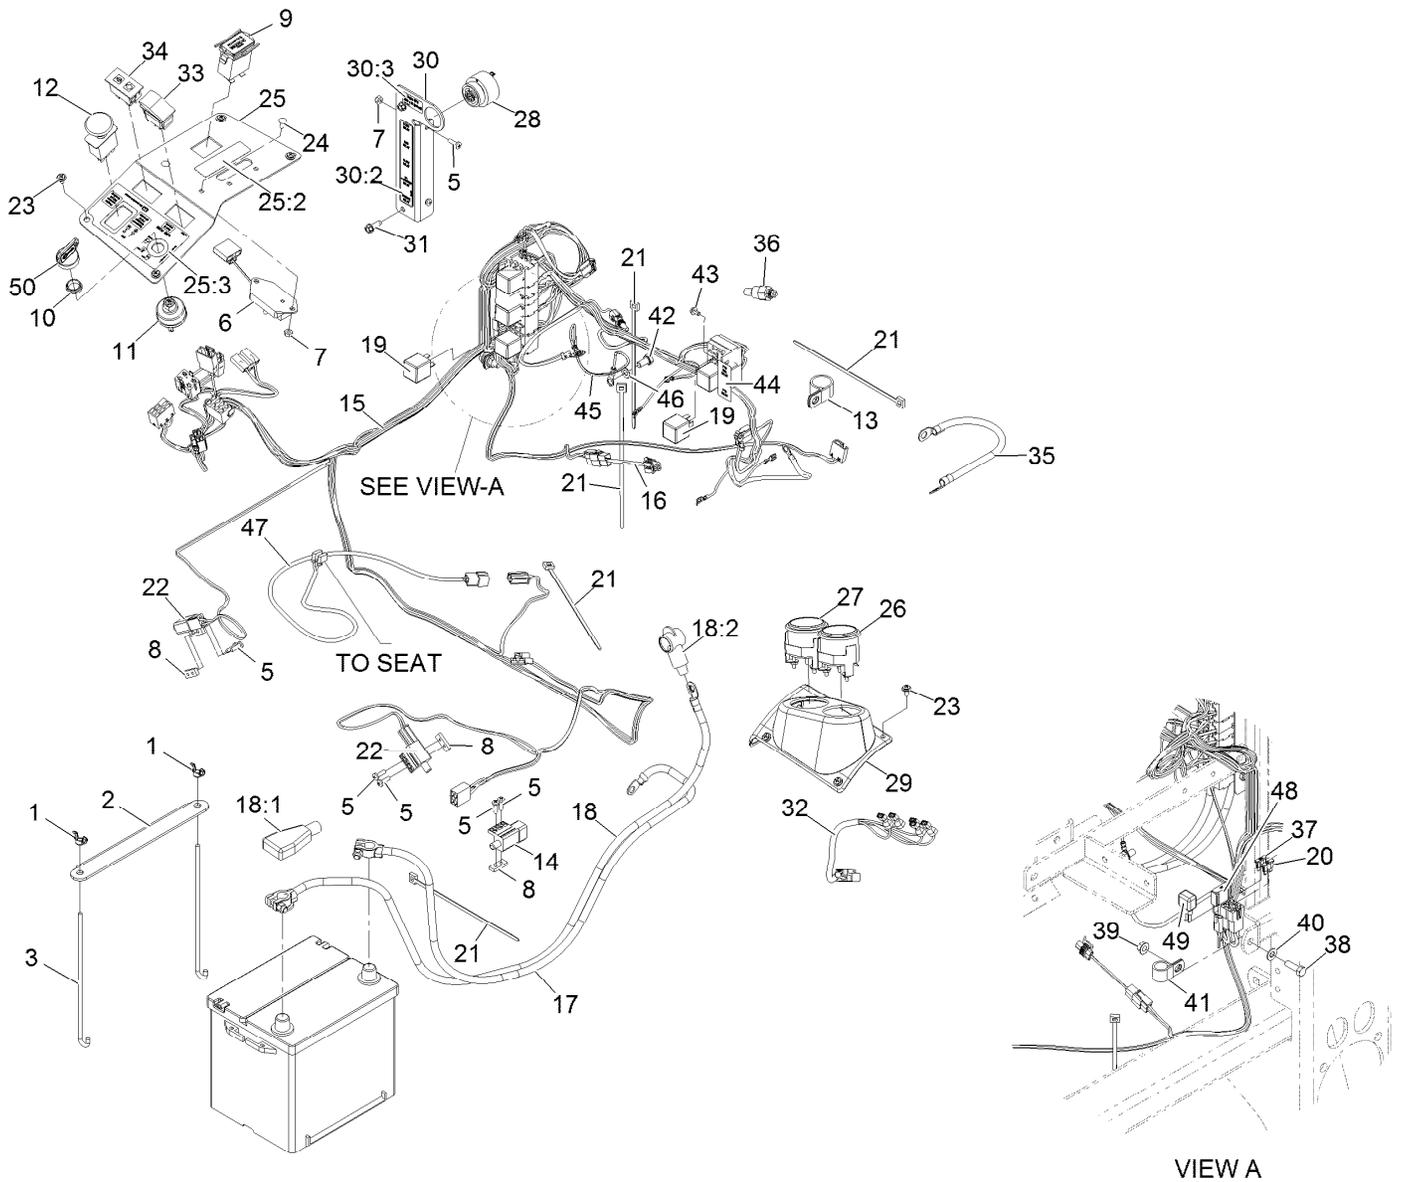


Electrical Assembly

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	1-543792	2	Wingnut-Nyloc 1/4-20	18	109-7607	1	Asm, Cable-Battery (+) ●
2	103-1311-03	1	Holddown-Battery	18:1	103-1340	1	Insulator-Terminal, Battery
3	103-1312	2	Bolt-Holddown	18:2	103-1420	1	Insulator-Starter
5	3290-500	8	Screw-PPH #10-24 X 5/8	19	1-643275	7	Relay-12Vdc 40 Amp
6	103-5218	1	Module-Delay, Seat	20	1-816001	1	Fuse-Blade Type, 20 Amp
7	3296-2	4	Nut-Nyloc #10-24	21	1-303335	5	Tie-Cable 7 15/16 (Large)
8	1-633181	3	Plate-Tapped	22	1-513051	2	Switch-N.O.
9	1-513374	1	Meter-Engine Hours	23	109-2661	8	Screw-PPH #10-24 X 1/2
10	103-0498	1	Nut-Ignition	24	1-807513	2	Bolt-Carriage #10-24 X 1/2
11	103-0206	1	Switch-Ignition W/Keys	25	116-5139	1	Control Panel W/Decals
12	114-0279	1	Switch-PTO	25:2	103-1798	1	Decal, Throttle
13	1-643312	1	Clip-Loom	25:3	116-5185	1	Decal-Control Panel
14	1-633111	1	Switch	26	1-643021	1	Gauge-Temperature
15	116-8236	1	Harness,Wiring-Lzds Kubota ▲	27	1-643037	1	Gauge-Voltmeter
16	110-8808	1	Harness-Wire	28	103-0205	1	Alarm-Dual Tone 12Vdc
17	109-3074	1	Cable, Ground (-)	29	103-3684	1	Bezel, Gauge
				30	109-3495	1	Asm, Relay Mount Bracket

● Includes insulators

■ Use a Teflon Pipe Sealant or equivalent on threads.

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

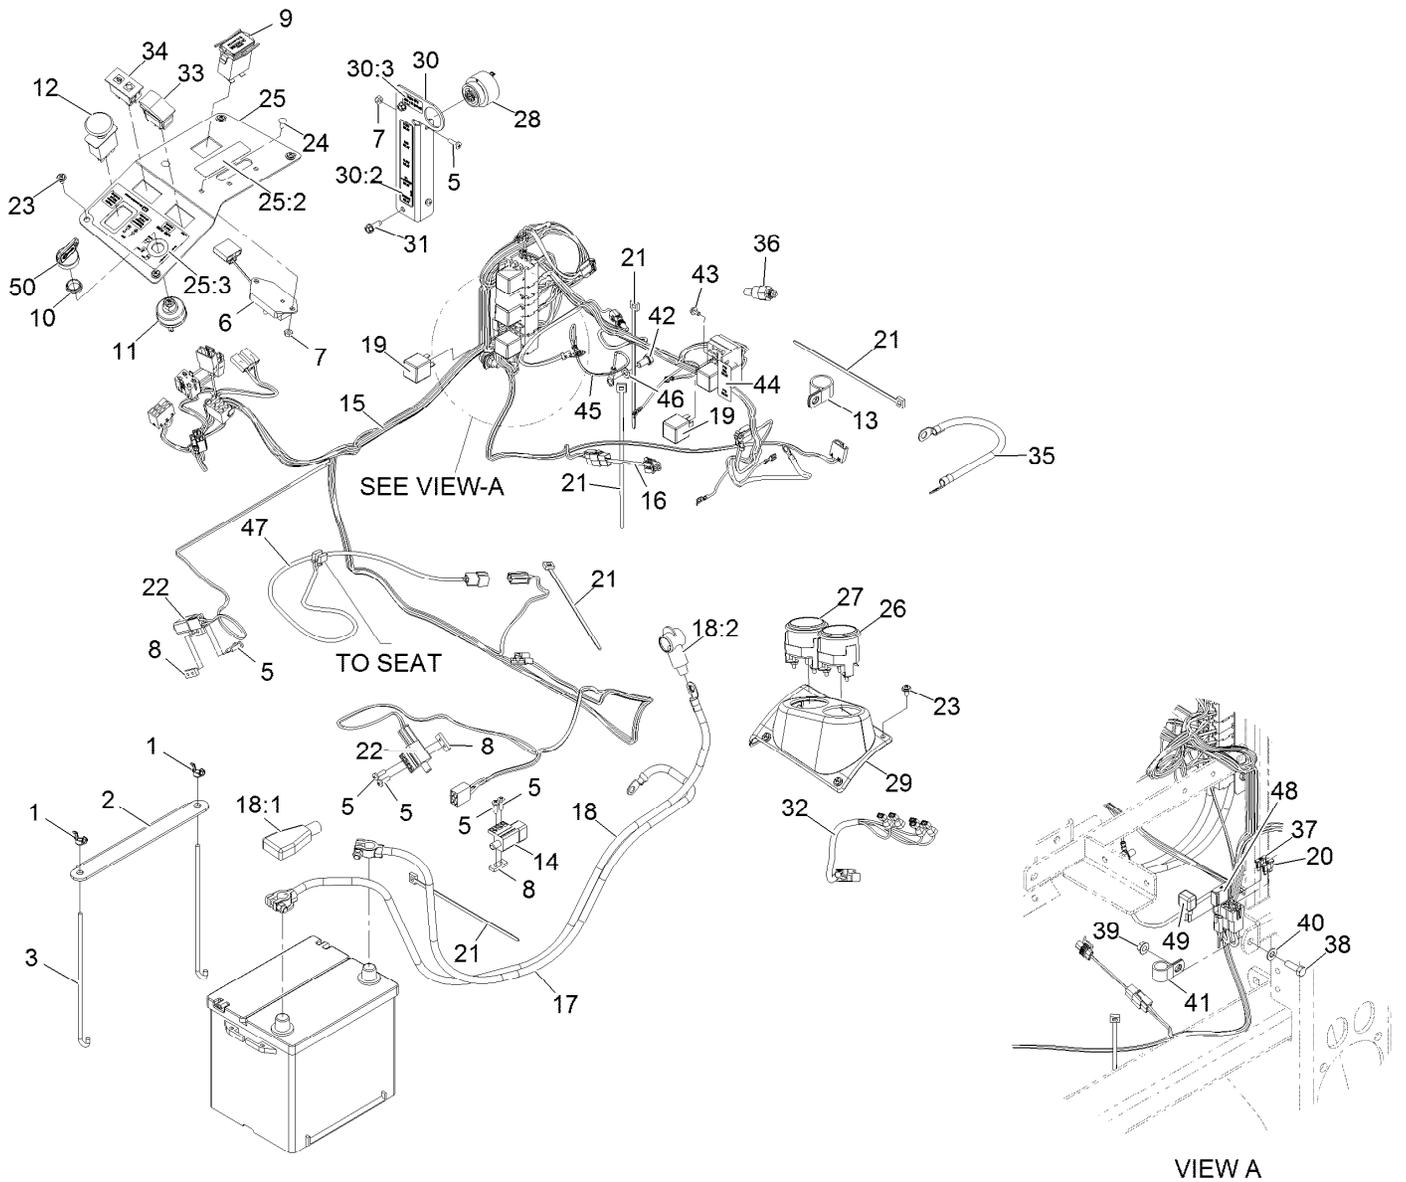

Electrical Assembly (continued)

Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
30:2	109-2951	1	Decal, Relay	41	1-633396	1	Clip-Loom 5/8
30:3	109-2478	1	Decal, 3850 Rpm	42	33114-016	1	Screw-HH M8-1.25 X 16Mm
31	49-2040	2	Screw-HWH 1/4-20 X 3/4 Tf	43	104-2065	2	Screw-HWH #10-24 X 3/8
32	103-4339	1	Harness-Gauge ▲	44	116-5074	1	Decal-Relay Diesel
33	110-0811	1	Switch-Rocker	45	116-5163	1	Ground Wire ASM
34	109-2488	1	Cluster, Lights	46	3255-8	1	Washer-Lock 5/16 (Ext-Tooth)
35	103-1349	1	Cable-Engine Negative	47	103-1227	1	Harness-Wiring, Seat ▲
36	103-7886	1	Sender, Temperature ■	48	94-8002	1	Fuse-Blade, 50 Amp
37	103-1368	1	Fuse-40 Amp	49	100-4918	1	Diode-Over Molded
38	322-5	1	Screw-HH 5/16-18 X 1	50	103-2106	1	Key-Exmark Logo
39	32128-20	1	Nut-Whizlock 5/16-18				
40	3256-23	1	Washer-5/16 Sae				

● Includes insulators

■ Use a Teflon Pipe Sealant or equivalent on threads.

▲ Use dielectric grease on all unsealed connectors and terminals only. Do not apply in sealed connectors.

EXMARK® MAINTENANCE

MAXIMIZE THE PERFORMANCE OF YOUR EXMARK.

4-CYCLE PREMIUM ENGINE OIL

Part No. 116-3373

Both SAE 30 and SAE 10W-30 in one bottle.

Contains increased levels of zinc and phosphorus for better lubricity.

No Viscosity Index Improvers that tend to shear down in high heat.

Synthetic formulation.

Gas & Diesel compatible.

Anti-corrosion additives.

API 'SL' and JASO rated with wet clutch compatibility for other machines.


PREMIUM HYDRO OIL

Part No. 109-9828

Commercial quality for tough, high-heat conditions.

Designed specifically for zero-turn mower hydraulic systems.

Superior shear resistance under heavy loads.

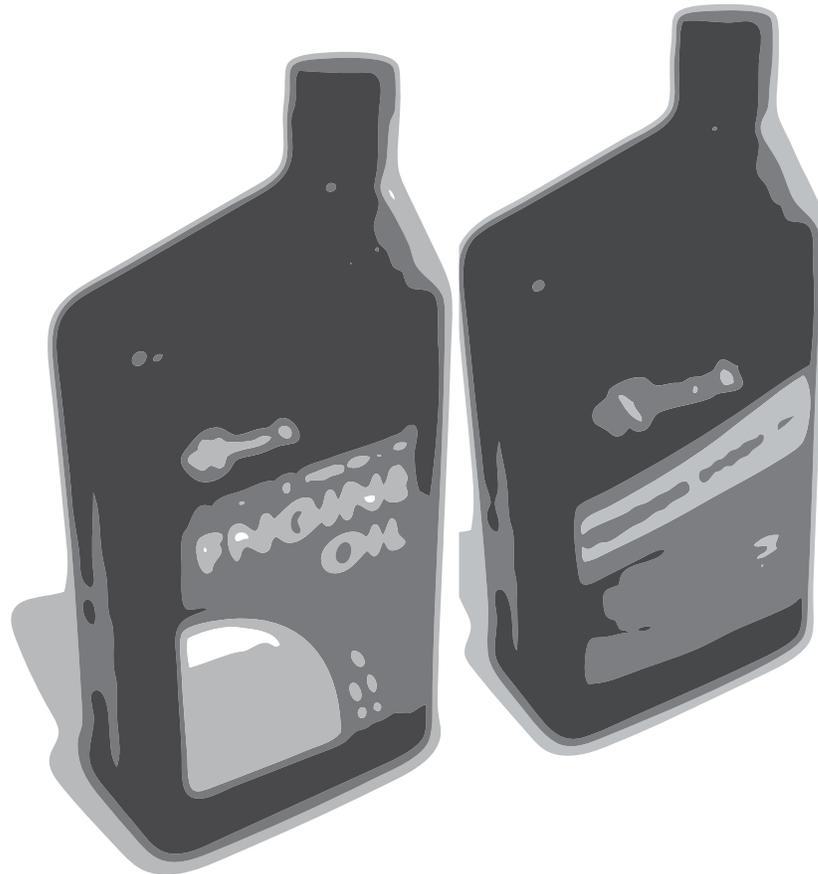

Available from your local Exmark dealer. Find your closest dealer at exmark.com

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2013 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4501-506 Rev. B
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.

