




ULTRAVAC®

Model No. LZUV2B—Serial No. 316000000 and Up

Picture below may not reflect actual product.

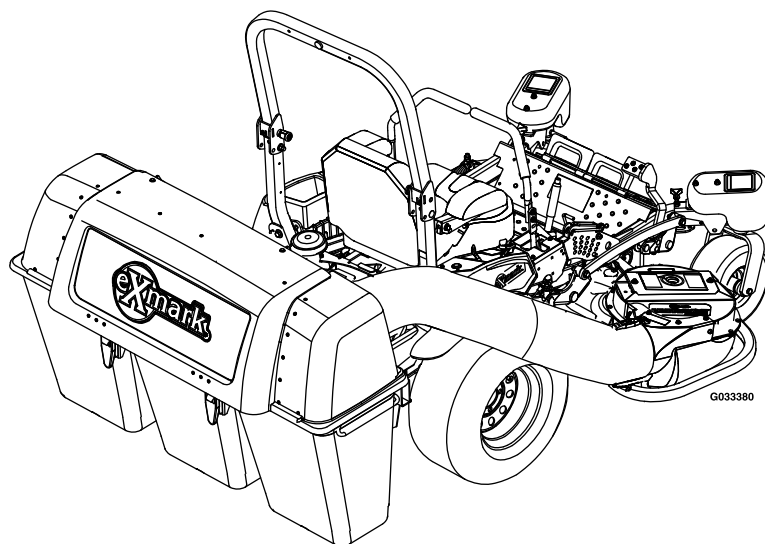

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

List of Abbreviations

AR: as required	HLH: hex lag head	PTH: phillips truss head
ASM: assembly	HOC: height-of-cut	PTO: power-take-off
BBC: blade brake control	HP: high pressure	RH: right hand
BHTF: button head thread forming	HSBH: hex socket button head	ROPS: roll-over protection system
CARR: carriage	HSFH: hex socket flat head	RRB: rear roller brush
CCW: counter clockwise	HSH: hex socket head	SFH: slotted fillister head
CW: clockwise	HWH: hex washer head	SHH: slotted hex head
DEG: degrees	HWHTF: hex washer head thread forming	SHWH: slotted hex washer head
DPA: Dual Point Adjustment	HYD: hydraulic	SPH: slotted pan head
ECM: electronic control module	LH: left hand	SQH: square head
EXT: external	LP: low pressure	SRH: slotted round head
FH: flat head	LPG: Liquefied Petroleum Gas	STD: standard
GA: gauge	NI: nylon insert	TAP: self tapping
HD: heavy-duty	NPTF: national pipe thread fine	TTH: torx truss head
HF: hex flange	PFH: phillips flat head	
HH: hex head	PPH: phillips pan head	
HHF: hex head flange	PPHTF: phillips pan head thread forming	
HHFTF: hex head flange thread forming	PRH: phillips round head	
HJ: hex jam		

Touch Up Paint

Exmark black touch up spray paint – gloss black.

Exmark red touch up paint (spray paint – P/N 1-850337 - .6 oz liquid bottle – P/N 103-9140).




If your Exmark dealer does not have the Exmark part in stock, Exmark will get the parts to the dealer the next business day or the part will be FREE Guaranteed!! (Some restrictions apply. See your participating Exmark Dealer for details.)

Contents

LZUV2B Assembly	4
Hood and Frame Assembly No. 109-5941	6
Hood Assembly No. 1-654597	8
Bag Support Frame Assembly No. 103-5166	10
Bag Assembly No. 116-0754	12
Blower Assembly No. 109-9832	14
Idler Assembly	16
Lower Tube Assembly No. 109-2043	18
Completing Kit No. 109-9622	20
Completing Kit No. 109-9623	22
Completing Kit No. 109-9624	24
Completing Kit No. 109-9625	26
Completing Kit No. 116-2084	28
Completing Kit No. 116-2085	30

LZUV2B Assembly

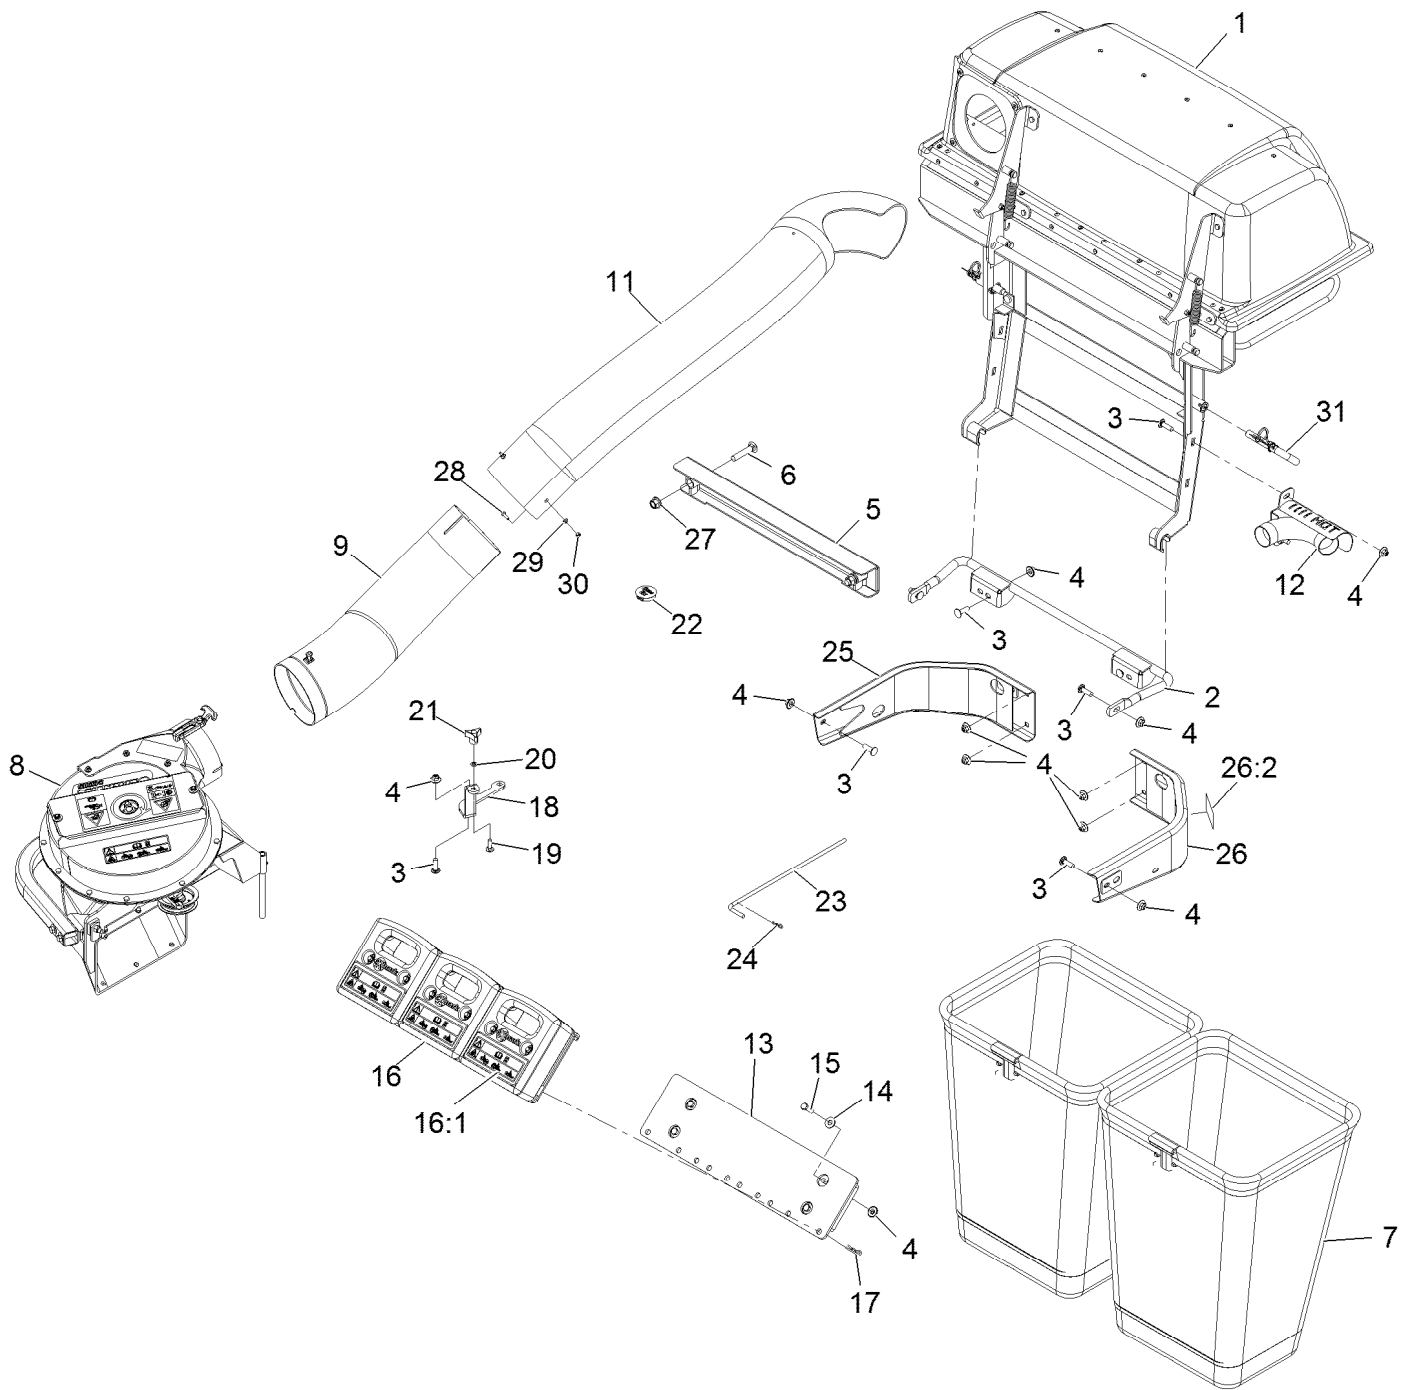


LZUV2B Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	ASM,Hood Uv 2-Bag ●	16:1	126-4661	1	Decal-Warning Weight
2	109-9248	1	Mount-Bagger, Lower	17	9335124	6	Hairpin-Cotter
3	3231-28	10	Bolt-Carriage 3/8-16 X 1 1/4	18	116-0161-01	1	Bracket, Small Uv Belt Cover
4	109-6658	18	Nut-Nyloc 3/8-16 Flg	19	3230-2	1	Bolt-Carriage 5/16-18 X 1
5	116-0473-03	1	Mount-Bagger, Upper	20	109-5667	1	Ring-Bolt Retaining
6	3233-34	2	Bolt-Carriage 1/2-13 X 2 1/2	21	1-323385	1	Knob-3 Prong
7	116-0754	2	Bag And Frame ASM	22	103-1279	1	Plug
8	109-9832	1	ASM, Blower Small - Svc Only	23	109-3458	1	Pin, Chute Pivot
9	109-2043	1	Lower Tube ASM	24	1-806003	1	Hairpin-Cotter
11	109-2036	1	Tube-Upper	25	116-0057-03	1	Bumper-RH
12	116-2804	1	Exhaust Diverter ASM	26	116-0180	1	LH Bumper ASM
13	116-1129-01	1	Wld, Mount Toeboard Weight	26:2	106-5517	1	Decal-Warning, Hot Surface
14	3256-4	4	Washer-3/8 Std	27	99-5107	2	Nut-Lock 1/2-13
15	323-7	4	Screw-HH 3/8-16 X 1 1/4	28	32105-13	3	Screw-HWH #10-24 X 3/4
16	103-6363	3	Asm, Weight (103-6364-01) W/Decals	29	3256-14	3	Washer-#10 Std
				30	3296-2	3	Nut-Nyloc #10-24
				31	116-0458	2	Pin-Mount, Bagger

● Not serviced separately

Hood and Frame Assembly No. 109-5941

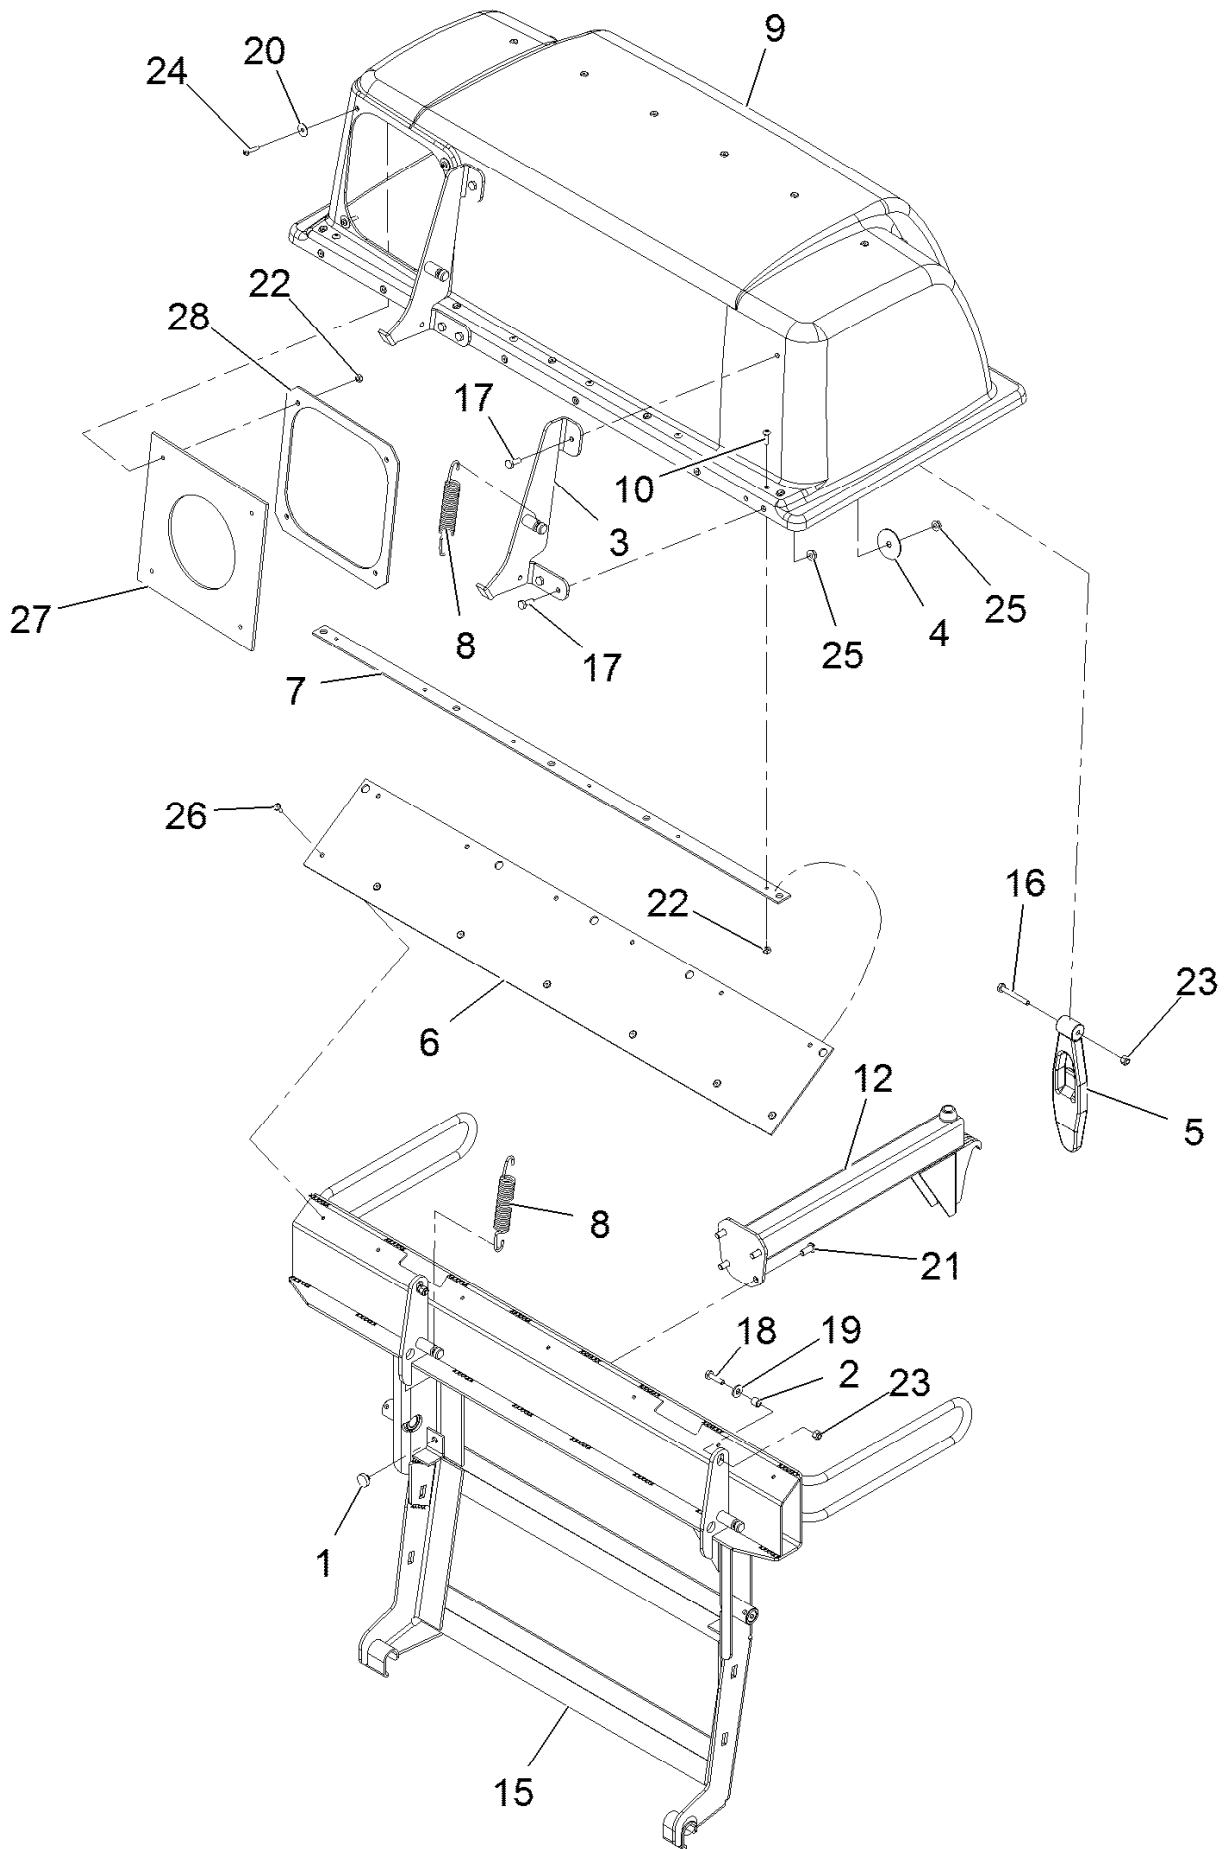


Hood and Frame Assembly No. 109-5941 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-513658	2	Bumper
2	1-633545	2	Spacer
3	1-652395-03	2	Hinge ASM
4	1-653036	2	Washer
5	1-653403	1	Latch
6	1-653425	1	Seal
7	1-653528-03	1	Plate-Backing
8	1-653544	2	Spring-Extension
9	1-654597	1	Hood Assembly - Service Only
10	1-803075	6	Screw-Truss Head #10-24 X 3/4
12	103-5166	1	Bag Support ASM
15	109-8705-03	1	Frame-2-Bag, Uv

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
16	321-11	1	Screw-HH 1/4-20 X 2
17	321-4	6	Screw-HH 1/4-20 X 3/4
18	321-6	2	Screw-HH 1/4-20 X 1
19	3256-2	2	Washer-1/4 Std
20	3256-61	4	Washer
21	3274-55	4	Screw-Button Head 5/16-18 X 3/4
22	3296-2	10	Nut-Nyloc #10-24
23	3296-42	3	Nut-Nyloc 1/4-20
24	3250-27	4	Screw-PPH #10-24 X 7/8
25	32128-33	6	Nut-Whizlock 1/4-20
26	114439	7	Rivet
27	1-653561	1	Seal-Chute
28	1-653598-03	1	Clamp-Seal

Hood Assembly No. 1-654597

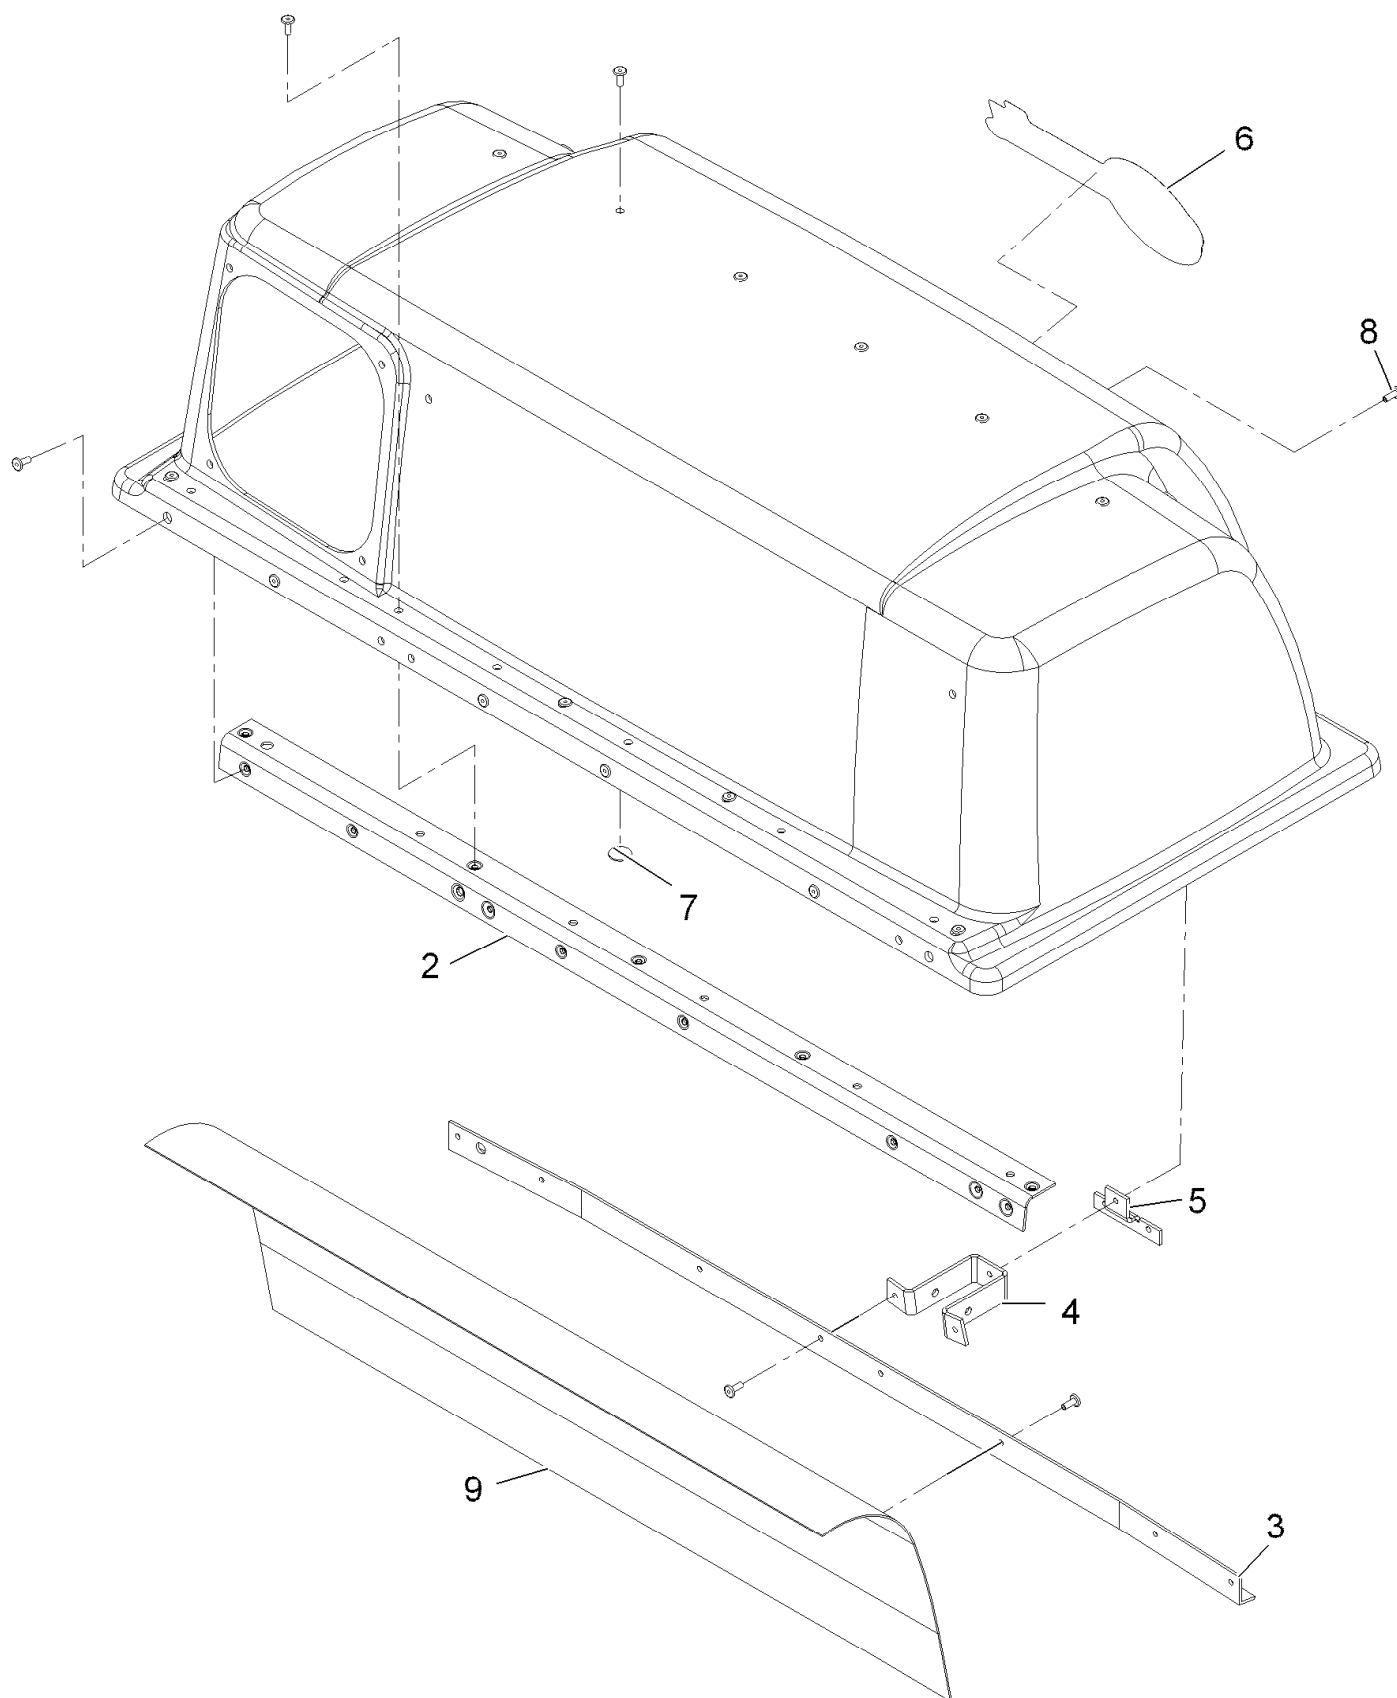


Hood Assembly No. 1-654597 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	1-653397-03	1	Stiffener-Bagger, Top
3	1-653400-03	1	Support-Screen
4	1-653519	1	Anchor-Latch
5	1-653535	1	Reinforcement-Latch

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	126-6991	1	Decal-Exmark Logo
7	3256-61	10	Washer
8	114439	31	Rivet
9	114967	1	Screen-Bagger

Bag Support Frame Assembly No. 103-5166

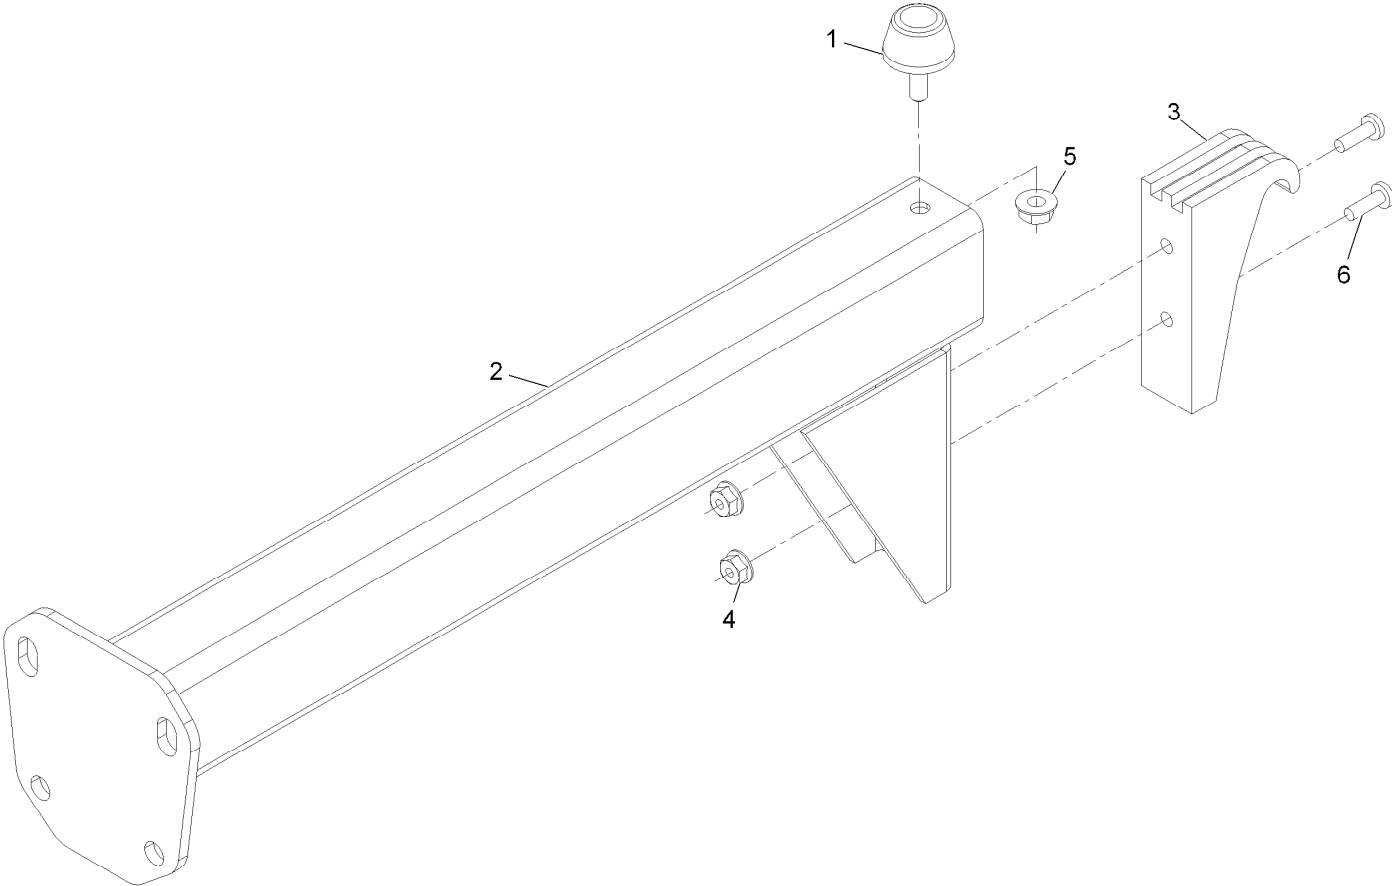


Bag Support Frame Assembly No. 103-5166 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-523420	1	Bumper
2	103-5124-03	1	Support-Bag
3	1-653404	1	Catch

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	3290-148	2	Nut-Whizlock #10-24
5	32128-33	1	Nut-Whizlock 1/4-20
6	3290-500	2	Screw-PPH #10-24 X 5/8

Bag Assembly No. 116-0754

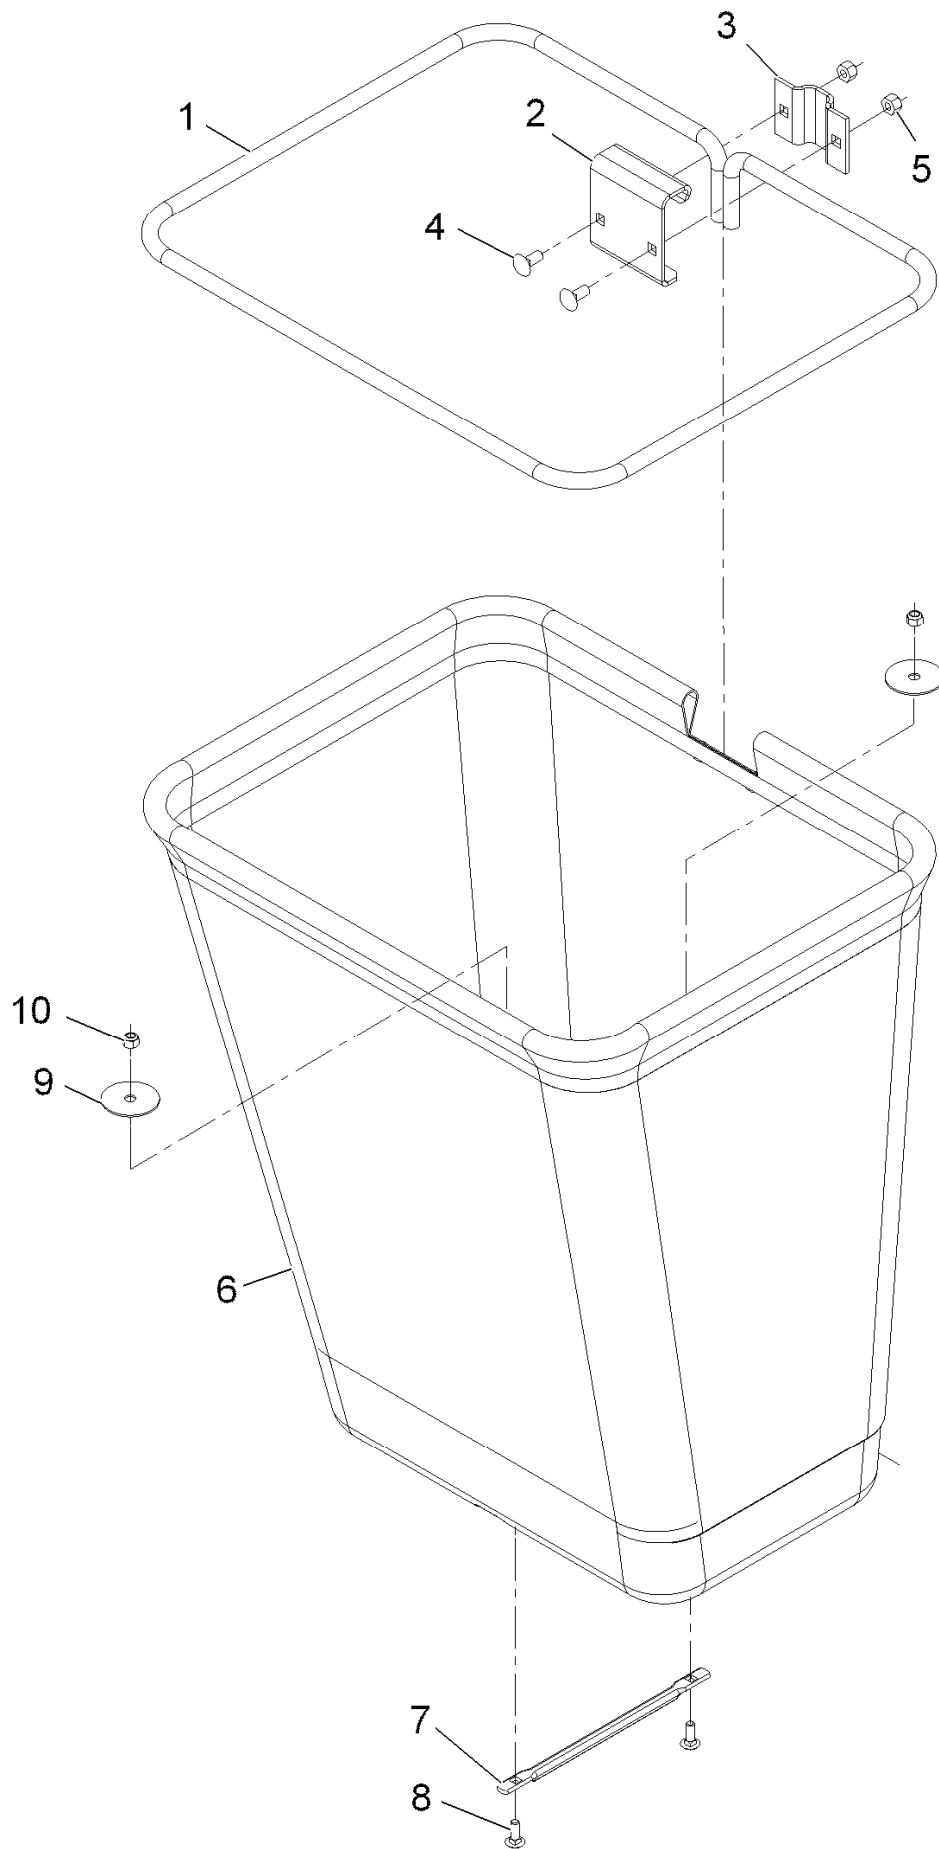


Bag Assembly No. 116-0754 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653529-03	1	Frame-Bag
2	114973-03	1	Hanger-Bag
3	114974-03	1	Clamp
4	3230-1	2	Bolt-Carriage 5/16-18 X 3/4
5	3296-29	2	Nut-Nyloc 5/16-18

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	116-0757	1	Bag ASM
7	1-653566	1	Handle-Bag
8	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
9	1-653036	2	Washer
10	3296-42	2	Nut-Nyloc 1/4-20

Blower Assembly No. 109-9832

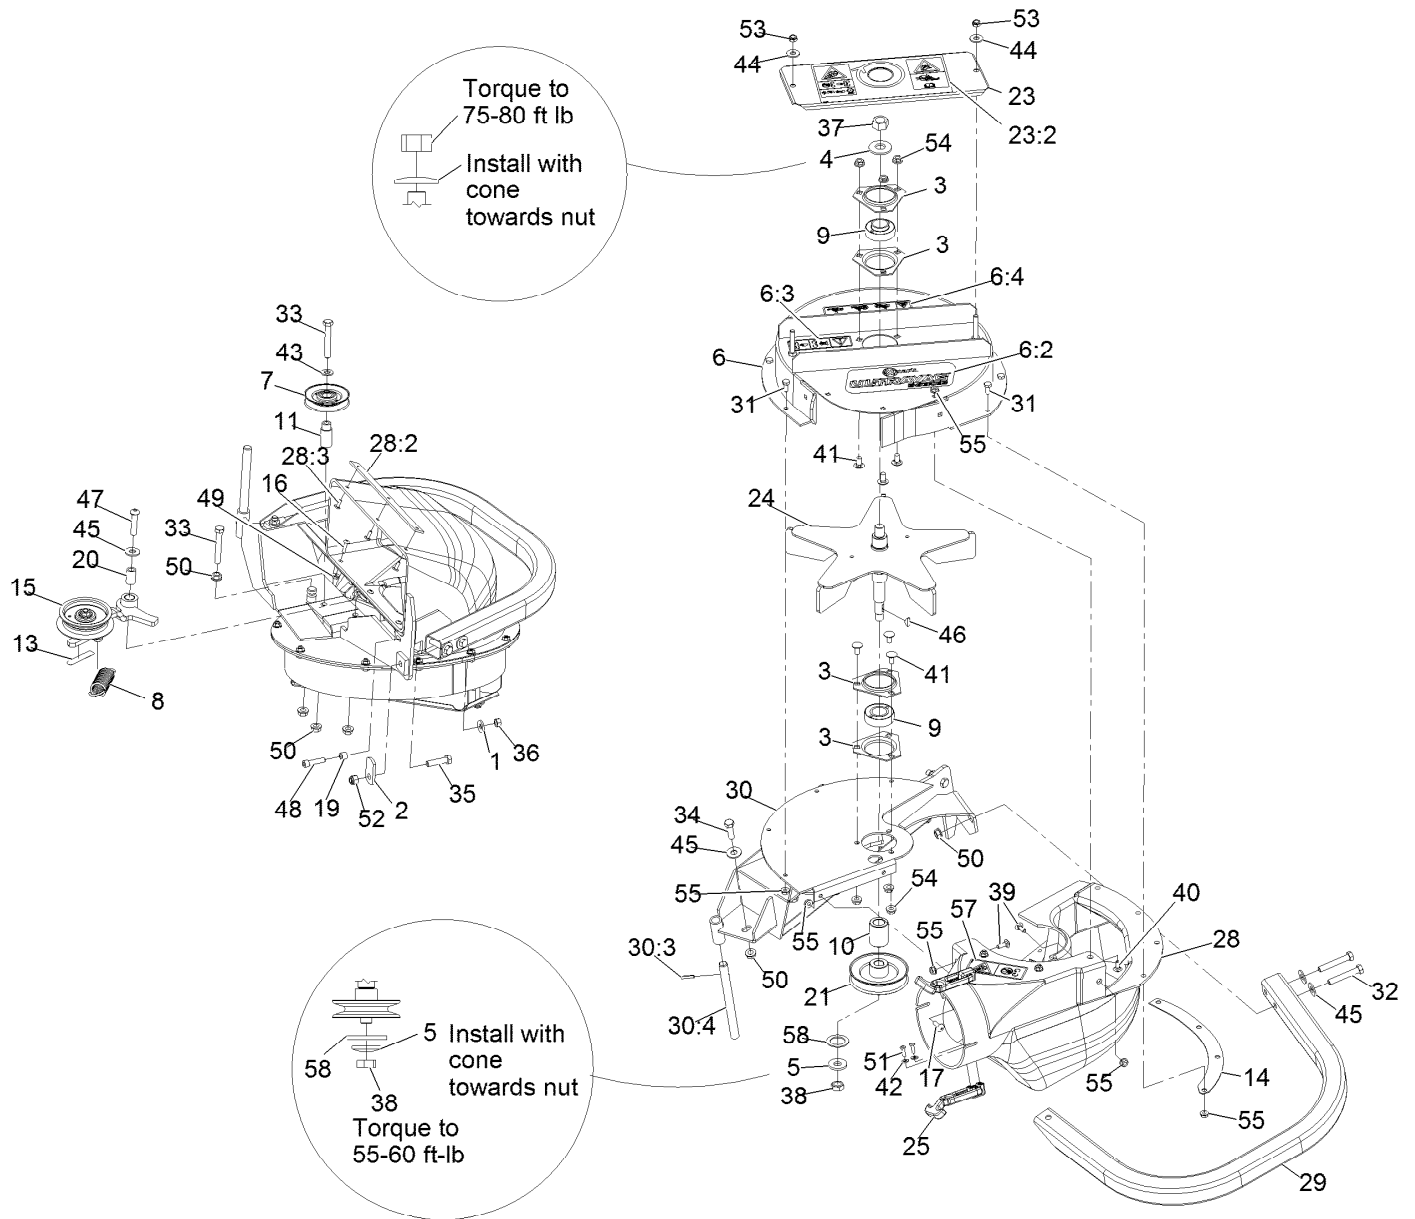

Blower Assembly No. 109-9832 (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-303334	1	Washer-Spring Disc 5/16	30	109-9362-03	1	Weld, Frame Sm Blower
2	1-353054	1	Latch-Catcher, Grass	30:3	1-806323	1	Rollpin 3/16 X 7/8
3	1-513013	4	Housing-Flange	30:4	1-353050	1	Shaft-Catcher, Grass
4	1-513208	1	Washer-Spring Disc 5/8	31	321-3	8	Screw-HH 1/4-20 X 5/8
5	1-513435	1	Washer-Spring Disc 1/2	32	323-11	2	Screw-HH 3/8-16 X 2 1/4
6	116-4817	1	ASM-Upper Housing Small	33	323-12	2	Screw-HH 3/8-16 X 2 1/2
6:2	126-7211	1	Decal-Ultravac S-Series	34	323-7	1	Screw-HH 3/8-16 X 1 1/4
6:3	112-9028	1	Decal-Missing, Cover	35	323-8	1	Screw-HH 3/8-16 X 1 1/2
6:4	126-4661	1	Decal-Warning Weight	36	3217-6	1	Nut-Hex 5/16-18
7	1-653322	1	Idler-Inside	37	3219-6	1	Nut-Hex 5/8-18
8	1-653331	1	Spring	38	3220-5	1	Nut-Jam 1/2-20
9	1-653346	2	Bearing ▲	39	3229-1	2	Bolt-Carriage 1/4-20 X 3/4
10	1-653365	1	Spacer	40	3229-11	3	Bolt-Carriage 1/4-20 X 5/8
11	1-653366	1	Spacer	41	3230-18	6	Bolt-Carriage 5/16-18 X 5/8
13	126-4659	1	Decal-Warning Hot Pulley	42	3256-14	4	Washer-#10 Std
14	1-653596-03	1	Plate-Backing, Blower	43	3256-24	1	Washer-3/8 Sae
15		1	ASM, Idler ●	44	3256-3	2	Washer-5/16 Std
16	1-803075	3	Screw-Truss Head #10-24 X 3/4	45	3256-4	4	Washer-3/8 Std
17	1-803076	2	Screw-PPH 1/4-20 X 3/4	46	3257-32	1	Key-Woodruff 3/16 X 5/8
19	103-0126	1	Bushing	47	3274-107	1	Screw-Button Head 3/8-16 X 1 3/4
20	103-0130	1	Bushing-Pivot, Idler	48	3274-18	1	Screw-Sh 5/16-18 X 1 1/4
21	103-1047	1	Sheave-Blower ▲	49	3290-148	3	Nut-Whizlock #10-24
23	103-3585	1	Cover, Bearing	50	3290-357	7	Nut-Whizlock 3/8-16
23:2	126-4584	1	Decal-Warning	51	3290-500	4	Screw-PPH #10-24 X 5/8
24	103-3815	1	Impeller	52	3296-39	1	Nut-Nyloc 3/8-16
25	103-4080	2	Latch-Rubber ■	53	3296-47	2	Nut-Nyloc 5/16-18 Thin
28	109-1985	1	Chute, Blower (46, 50 And 56)	54	32128-20	6	Nut-Whizlock 5/16-18
28:2	103-4752-03	1	Plate, Reinforcing (Below S/N 260,000)	55	32128-33	15	Nut-Whizlock 1/4-20
28:3	114439	3	Rivet	57	126-4853	1	Decal-Blower-Impeller Hazard
29	109-1122-01	1	Bumper	58	1-523157	1	Washer

● Not serviced separately

■ Kit No. 103-4188 - Contains catch, rubber latch, and mounting hardware

▲ Apply Mobil HTS grease (P/N 103-5217 1.5 oz packet) (or a food-grade anti-seize). See operator s manual for locations.


Idler Assembly

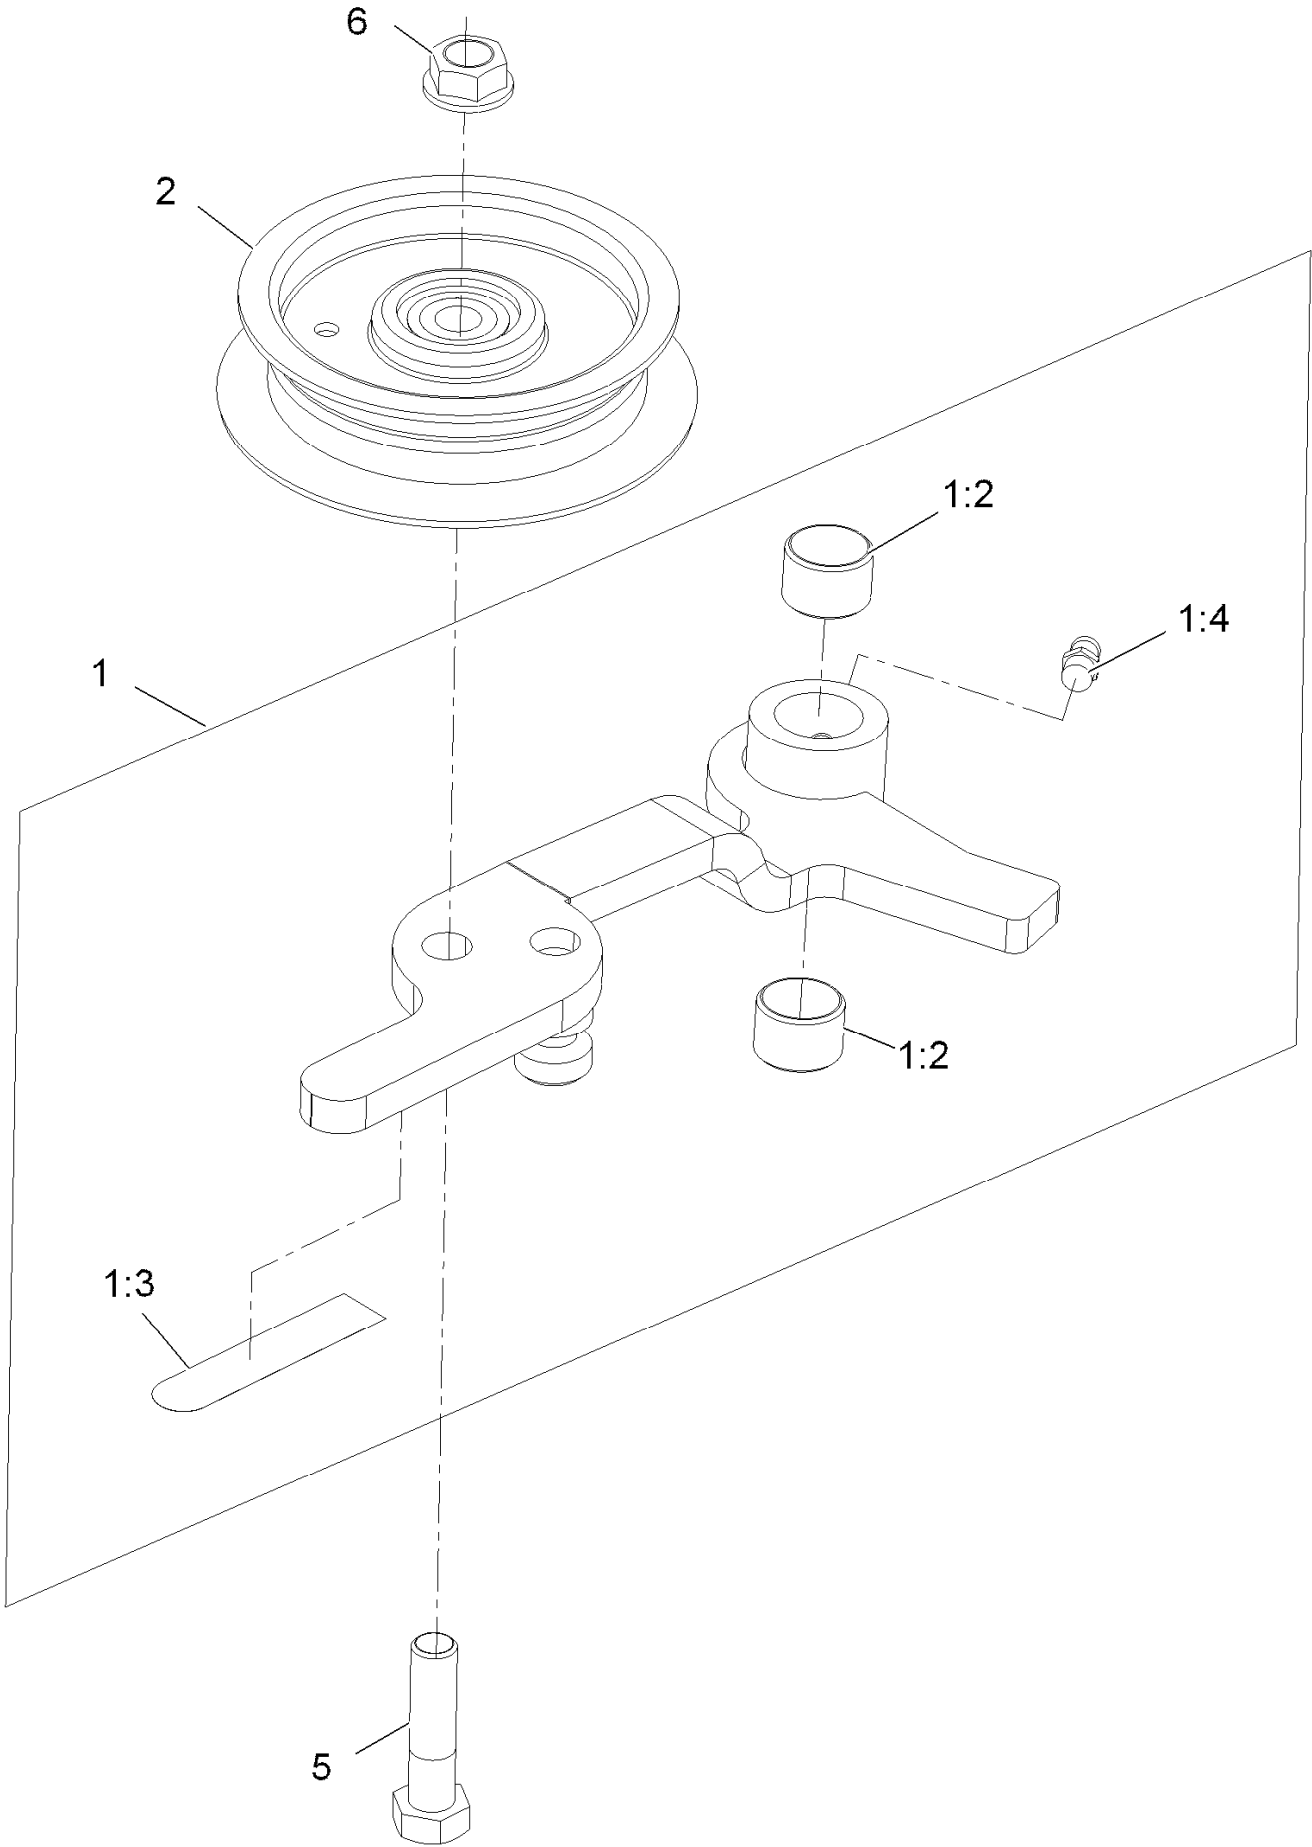

Idler Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-2876	1	Idler Assy With Bushings, Zerk, And Decal	1:4	302-19	1	Zerk-1/4-28 Str
1:2	1-653600	2	Bearing	2	103-1103	1	Idler-Flat
1:3	126-4659	1	Decal-Warning Hot Pulley	5	323-8	1	Screw-HH 3/8-16 X 1 1/2
				6	3290-357	1	Nut-Whizlock 3/8-16

Lower Tube Assembly No. 109-2043

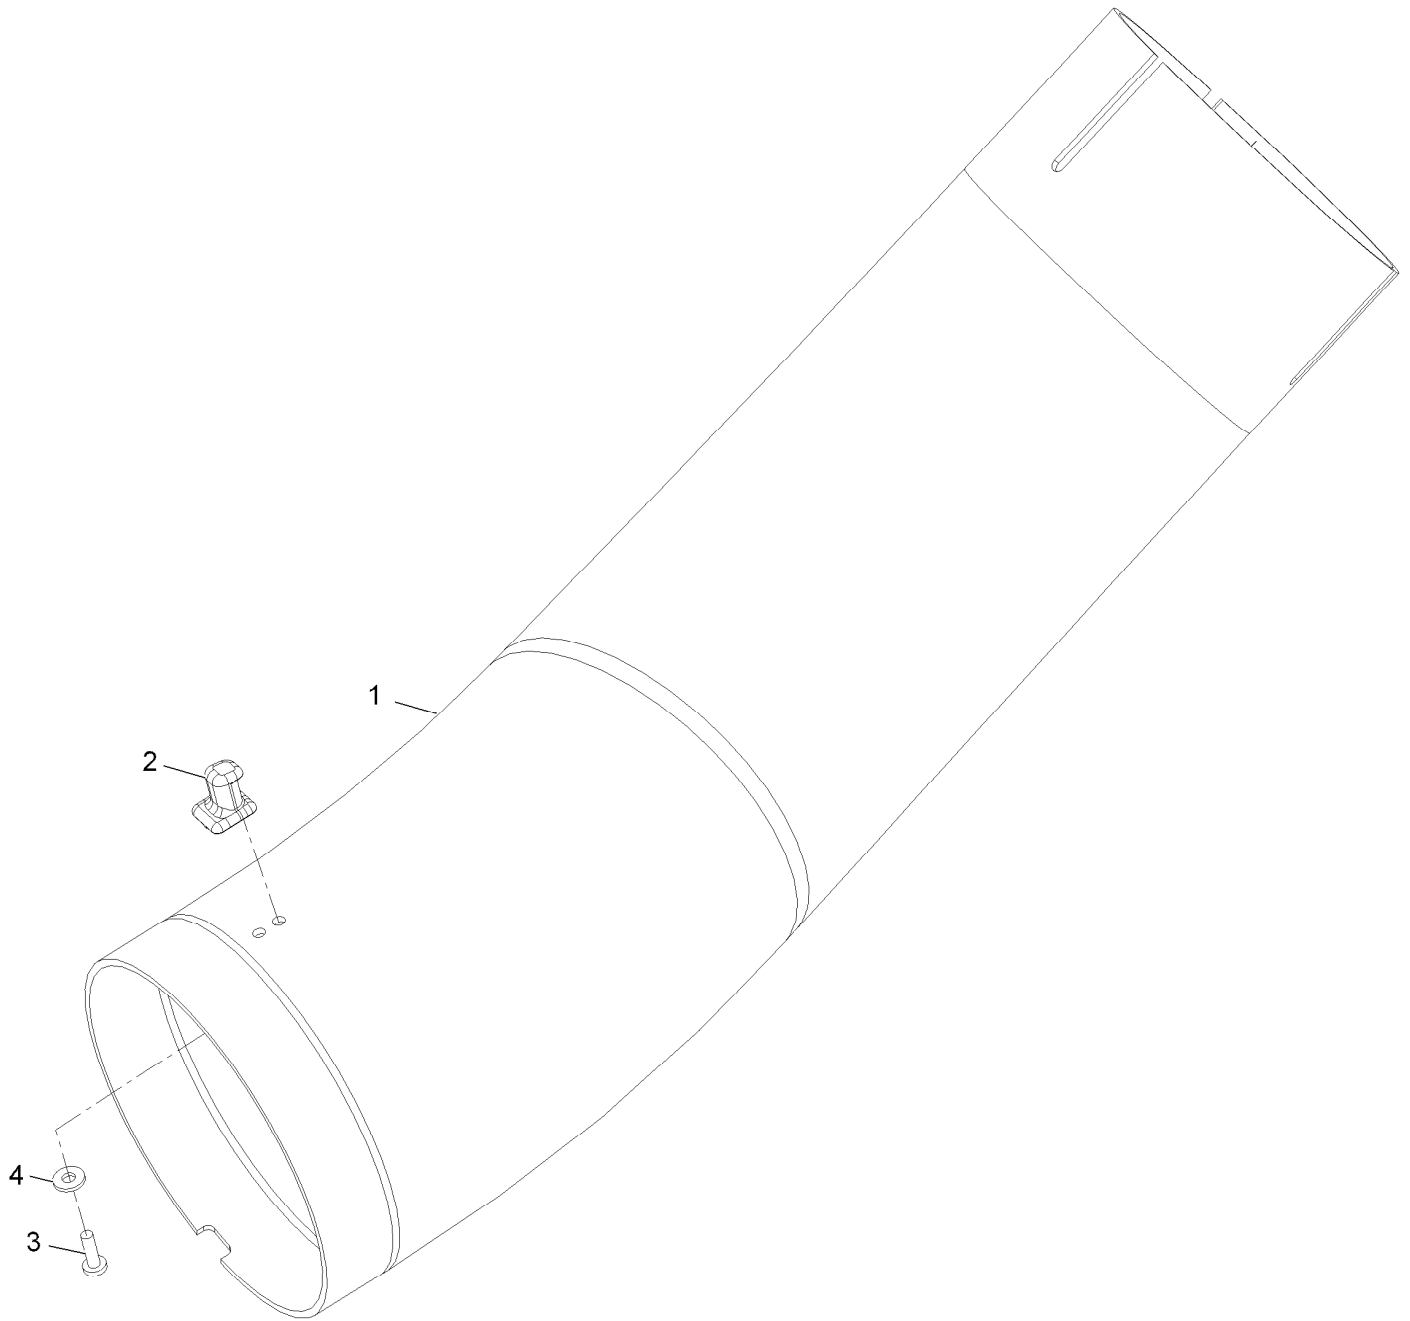


Lower Tube Assembly No. 109-2043 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	109-2038	1	Tube, Lower Short
2	103-4081	2	Latch-Keeper ●


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	3290-500	2	Screw-PPH #10-24 X 5/8
4	3256-14	2	Washer-#10 Std

● Kit No. 103-4188 - Contains catch, rubber latch, and mounting hardware

Completing Kit No. 109-9622

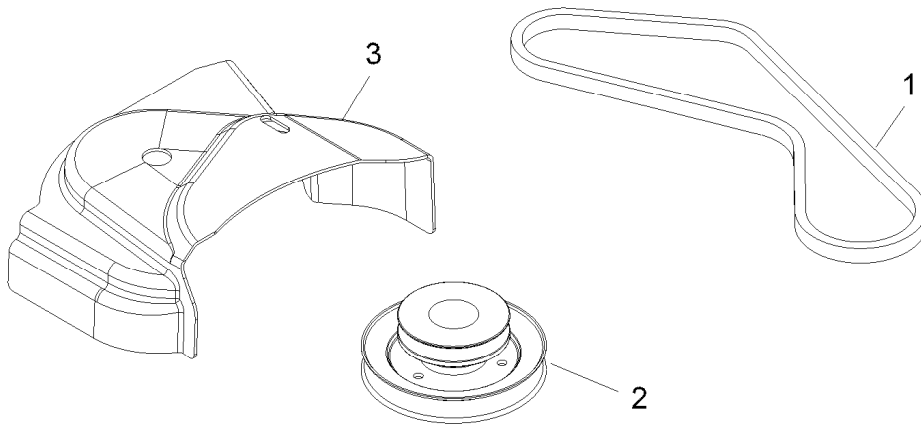


Completing kit fits all
Lazer Z Advantage Series (LZAS)
Serial Nos. 790,000-919,999
with 48 inch decks

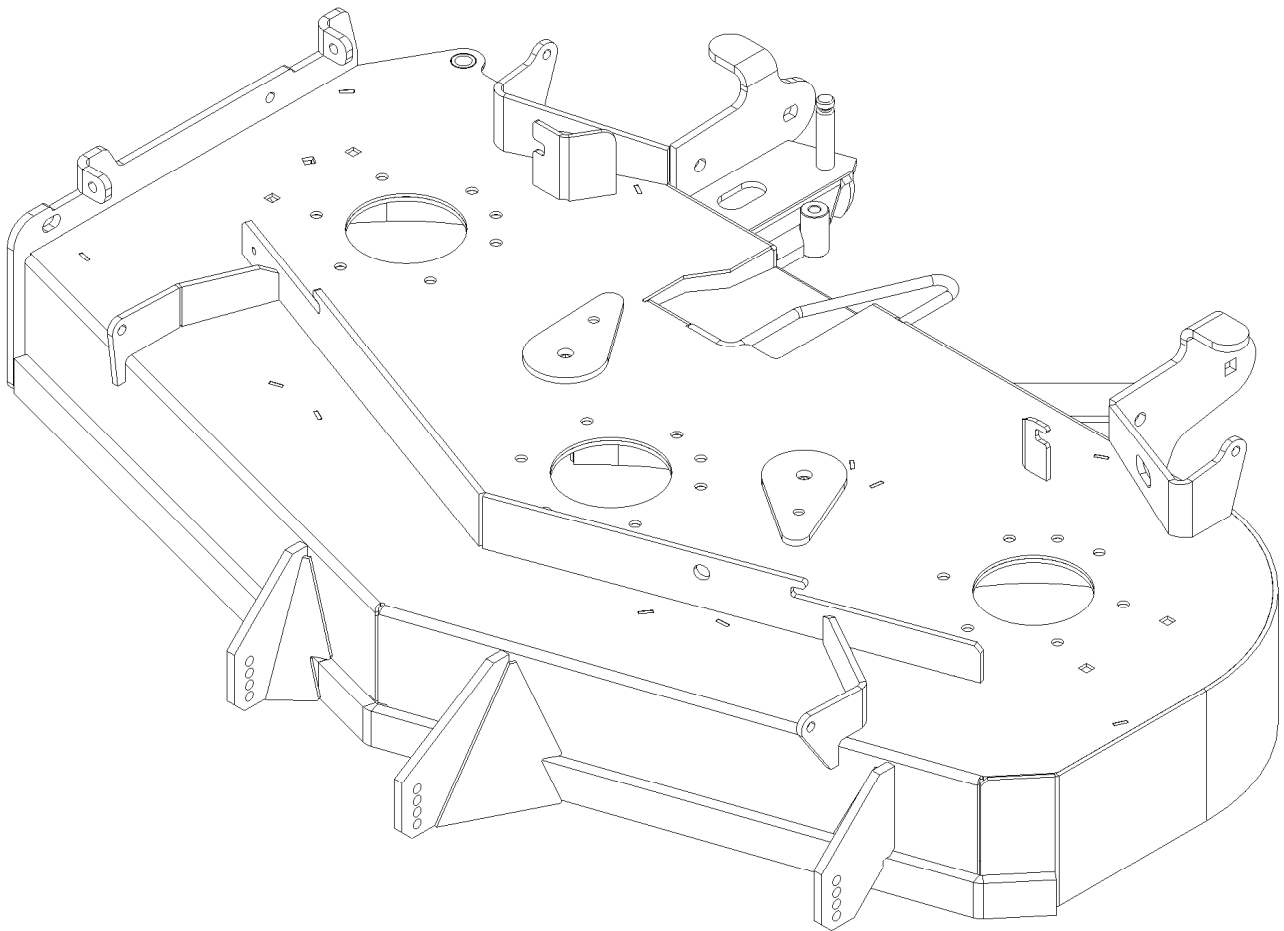


Completing Kit No. 109-9622 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653333	1	Belt, Blower (48")
2	116-1649	1	Jackshaft,Uv Drive 484
3	109-9382	1	Cover,Belt Uv 48

Completing Kit No. 109-9623

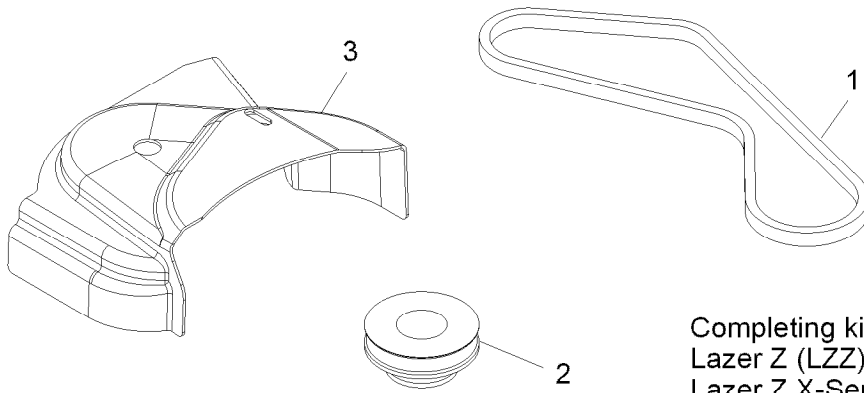


Completing kit fits all
Lazer Z (LZZ) Serial Nos. 790,000-919,999 and
Lazer Z X-Series (LZX) Serial Nos. 920,000 and Higher
with 48 inch decks

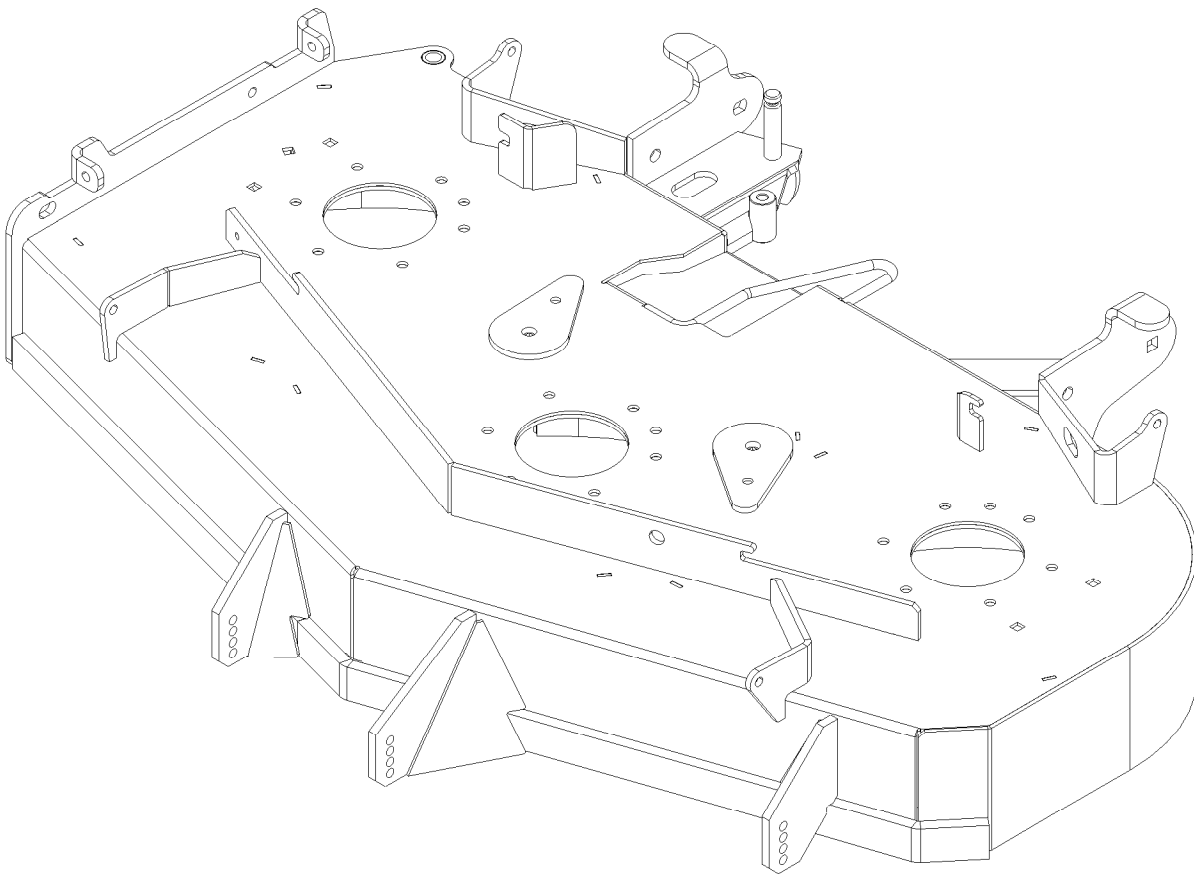


Completing Kit No. 109-9623 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653333	1	Belt, Blower (48")
2	109-9631	1	Blade, Extreme 72
3	109-9382	1	Cover,Belt Uv 48

Completing Kit No. 109-9624

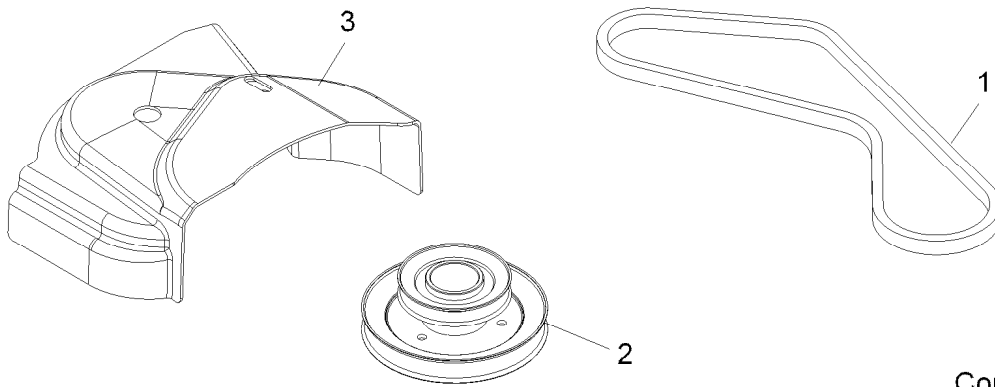


Completing kit fits all
Lazer Z Advantage Series (LZAS)
Serial Nos. 790,000-919,999
with 52 inch decks

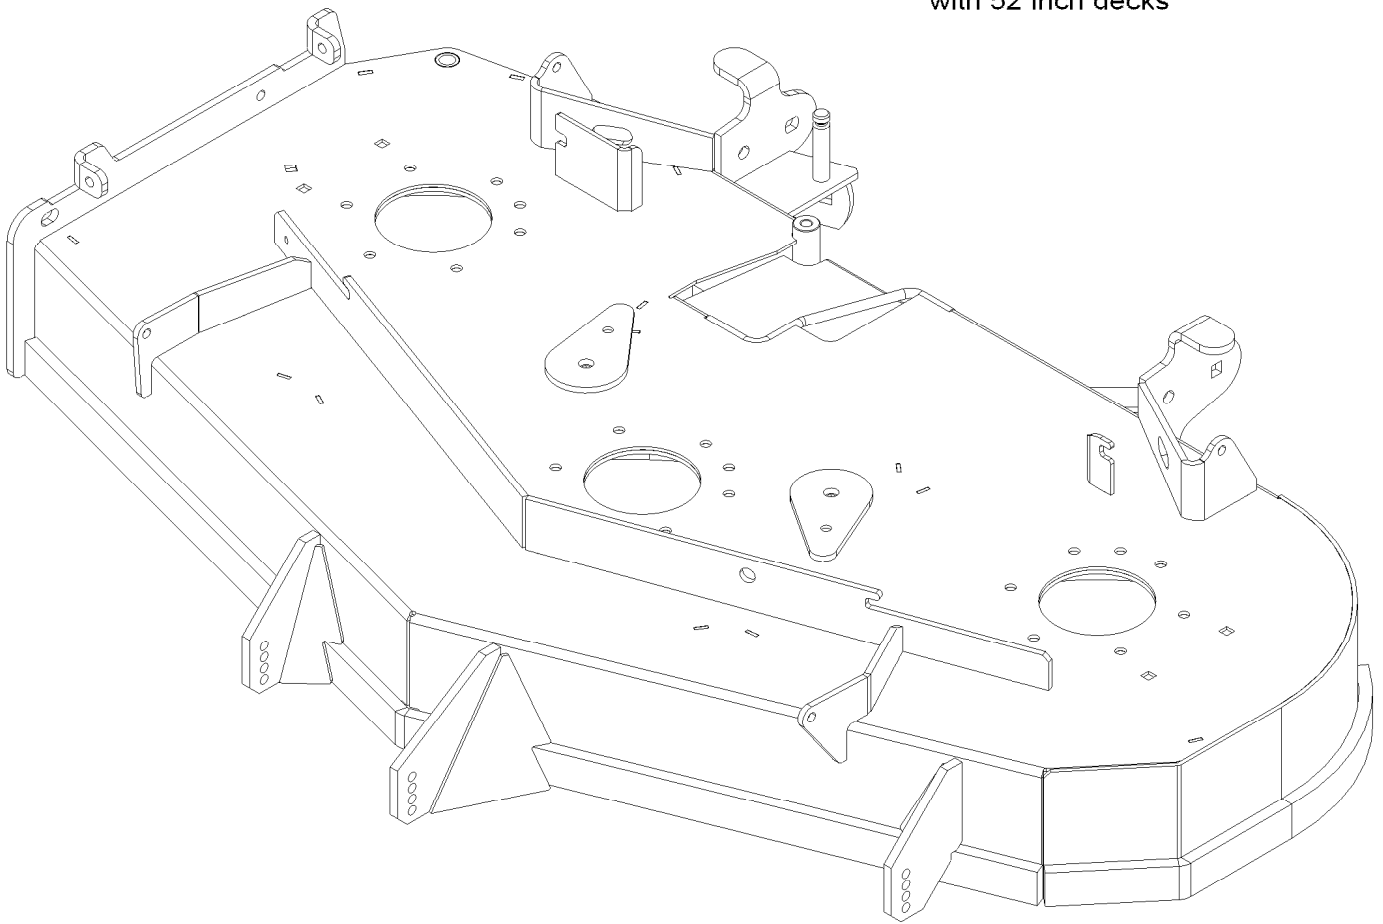


Completing Kit No. 109-9624 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653438	1	Belt, Blower Drive 52
2	109-9632	1	Sheave
3	109-8487	1	Cover,Belt Uv 52

Completing Kit No. 109-9625

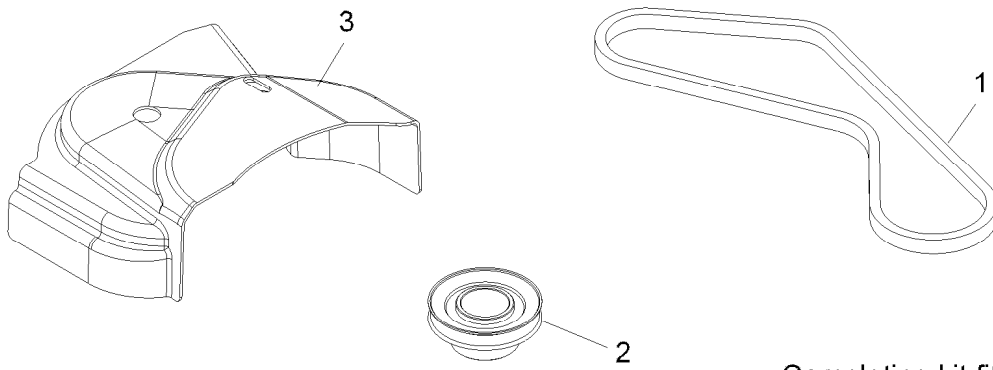


Completing kit fits all
Lazer Z (LZZ) Serial Nos. 790,000-919,999 and
Lazer Z X-Series (LZX) Serial Nos. 920,000
and Higher with 52 inch decks

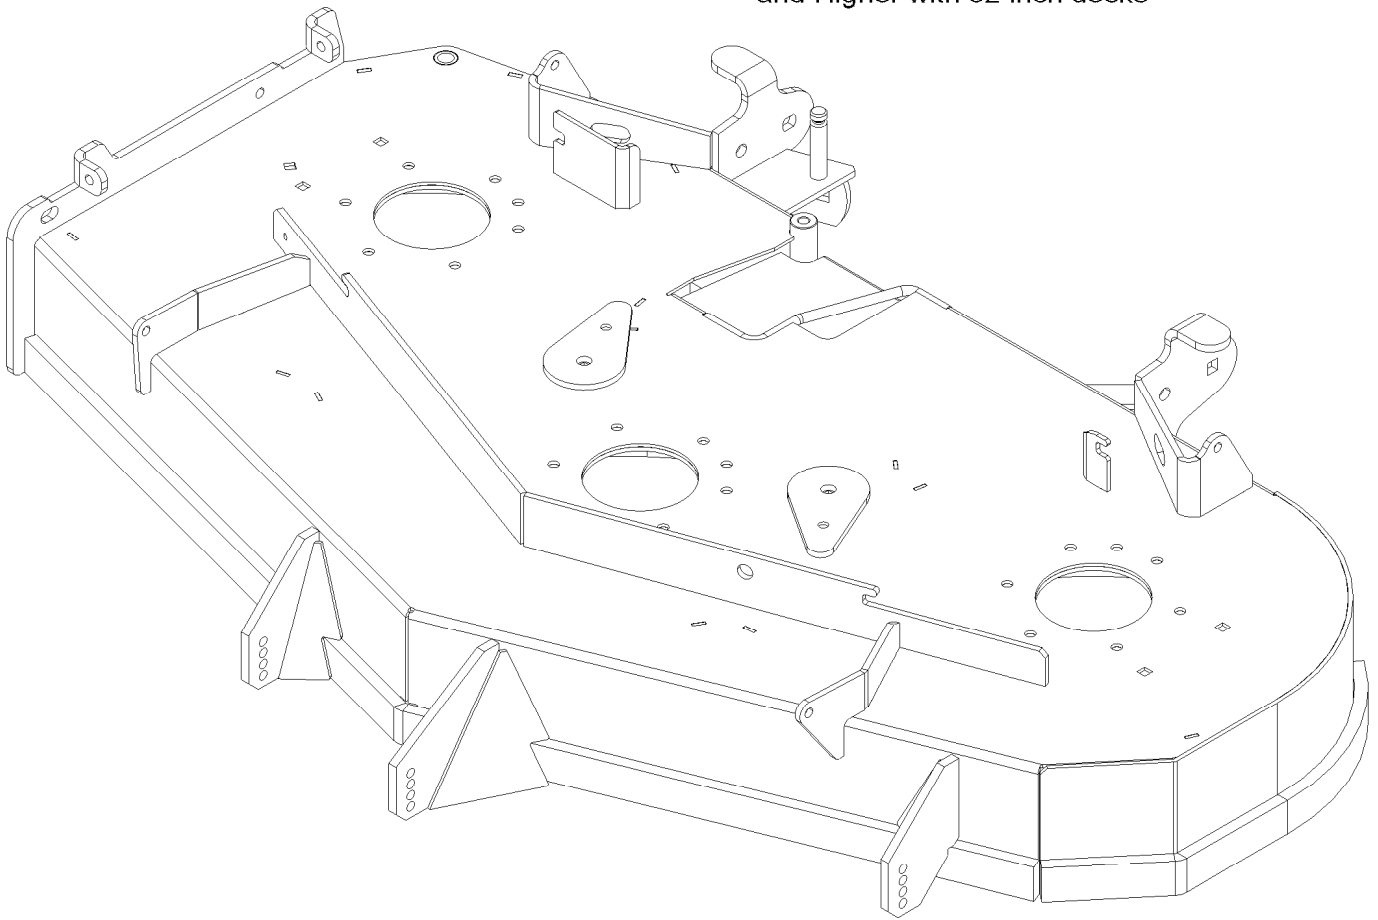


Completing Kit No. 109-9625 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653438	1	Belt, Blower Drive 52
2	109-9633	1	Sheave, Drive Lzuv 526
3	109-8487	1	Cover, Belt Uv 52

Completing Kit No. 116-2084

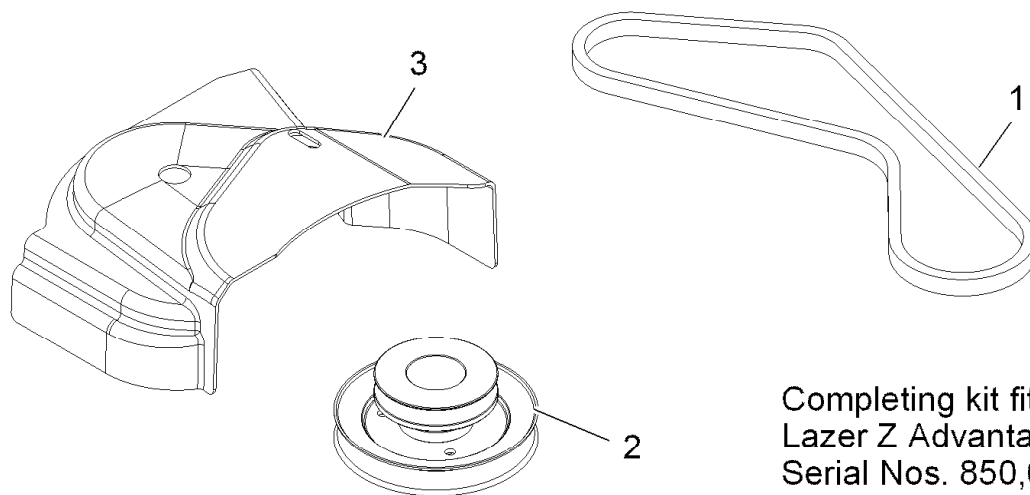


Completing kit fits all
Lazer Z Advantage Series (LZA)
Serial Nos. 850,000-919,999 and
Lazer Z E-Series (LZE) and
Lazer Z S-Series (LZS) Serial Nos.
920,000 and Higher with 48 inch decks

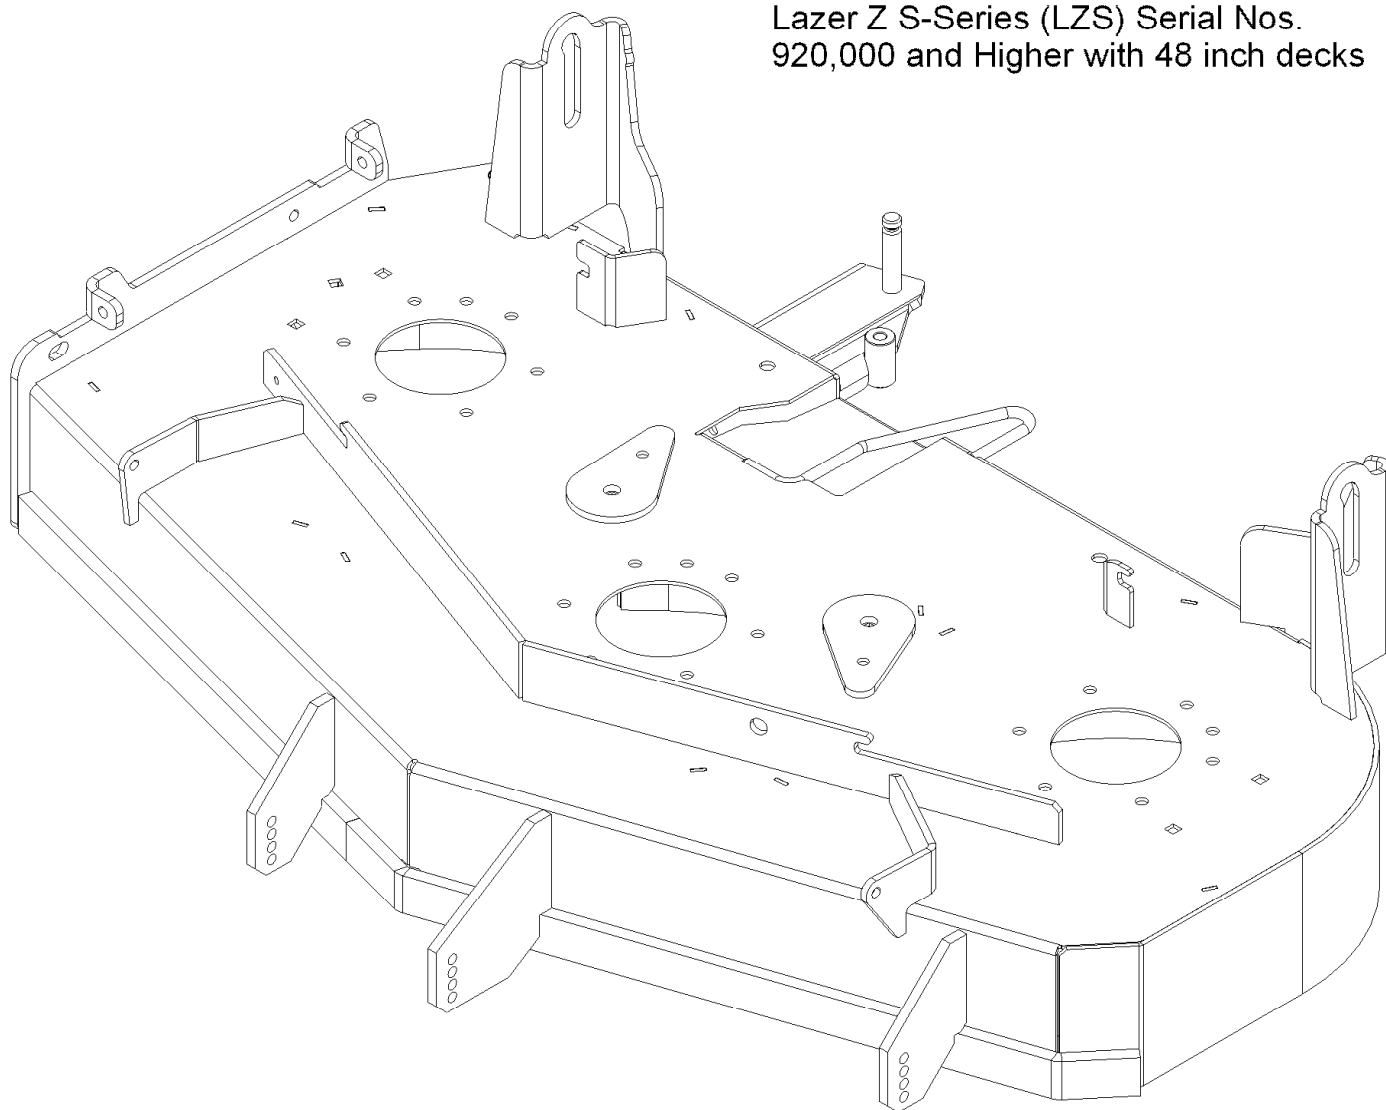


Completing Kit No. 116-2084 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653333	1	Belt, Blower (48")
2	116-2088	1	Jackshaft-Uv Drive, 484 Splined
3	109-9382	1	Cover,Belt Uv 48

Completing Kit No. 116-2085

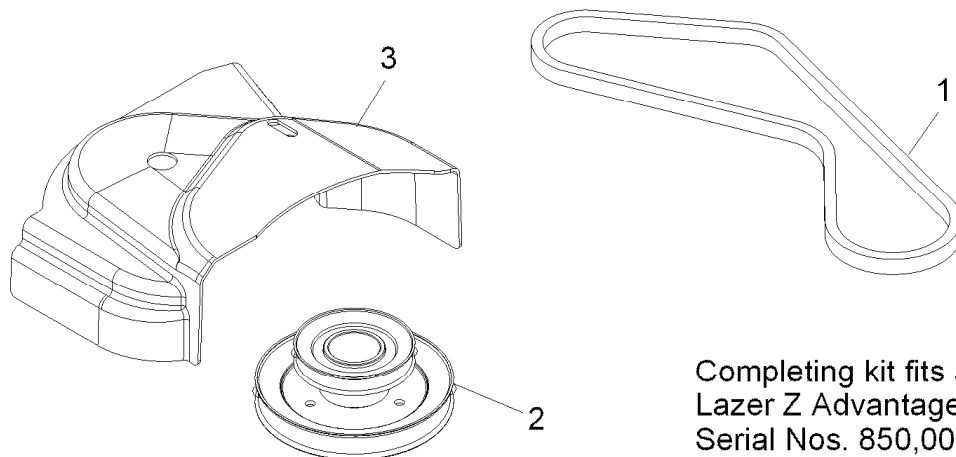

Completing kit fits all
Lazer Z Advantage Series (LZA)
Serial Nos. 850,000-919,999 and
Lazer Z E-Series (LZE) and
Lazer Z S-Series (LZS) Serial Nos.
920,000 and Higher with 52 inch decks

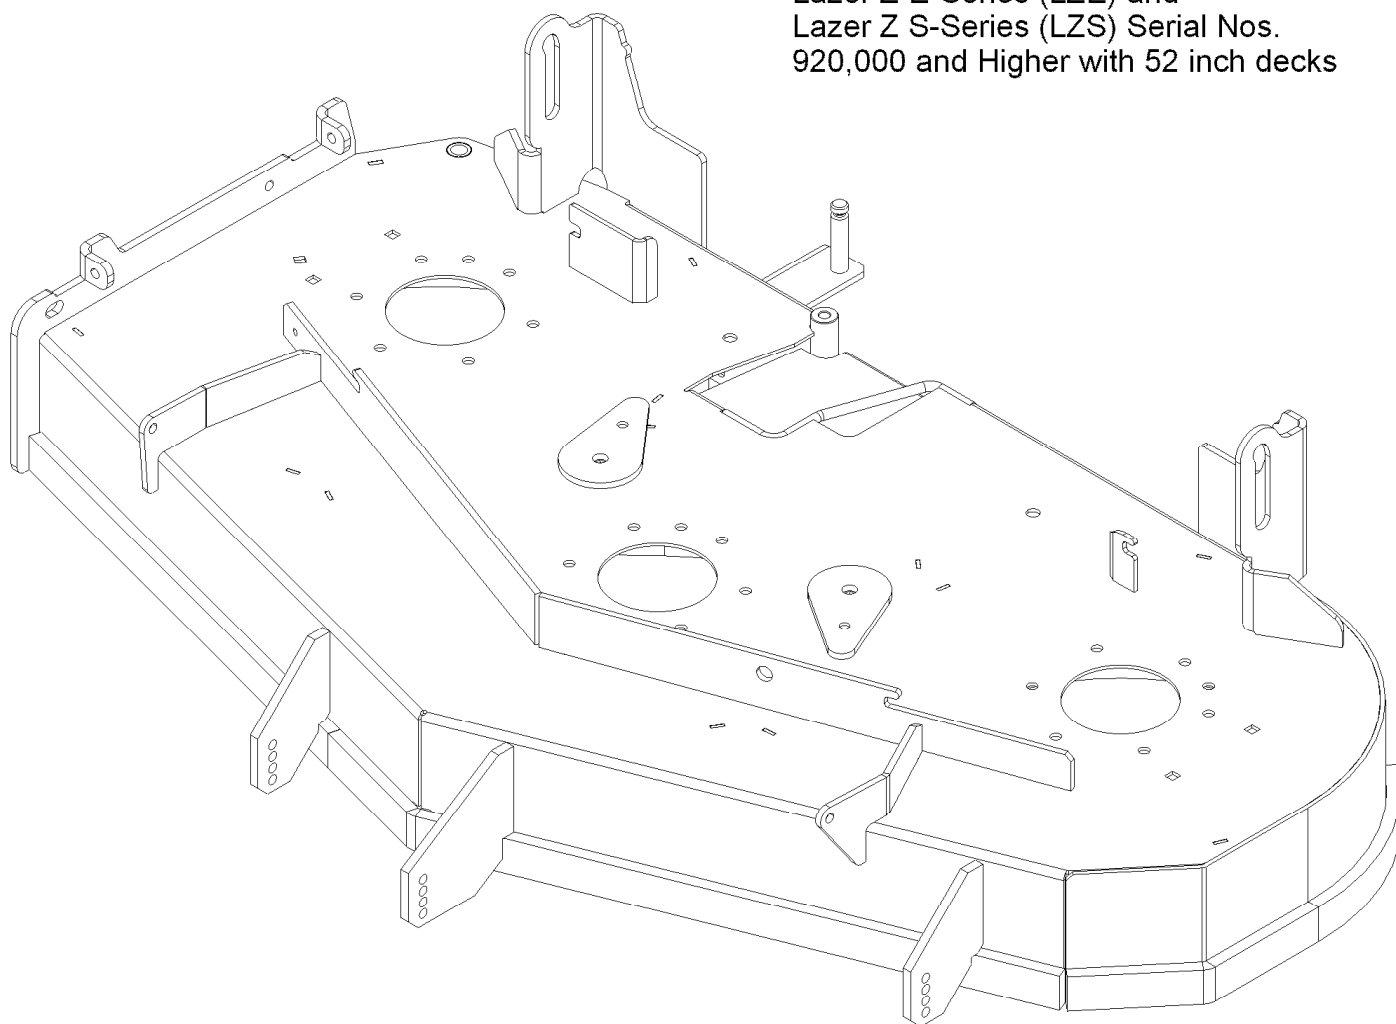

Completing Kit No. 116-2085 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-653438	1	Belt, Blower Drive 52
2	116-2089	1	Jackshaft,Uv Drive 524 Splined
3	109-8487	1	Cover,Belt Uv 52

EXMARK ACCESSORIES AND OPTIONS*

MID-MOUNT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	OPERATOR CONTROLLED DISCHARGE
FULL SUSPENSION SEAT	SUN SHADE
DECK LIFT ASSIST KIT	TRASH CONTAINER
HITCH KIT	TURF STRIPER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
12V POWER PORT	ULTRA VAC QUICK DISPOSAL SYSTEM
MICRO-MULCH SYSTEM	

OUT-FRONT RIDING ACCESSORIES AND OPTIONS

CUSTOM RIDE SEAT SUSPENSION SYSTEM	SNOW BLADE
DUAL-TAIL WHEEL	SNOWBLOWER
FLOOR PAN EXTENDER	SUN SHADE
HITCH KIT	TRASH CONTAINER
LIGHT KIT	ULTRA VAC COLLECTION SYSTEM
MICRO-MULCH SYSTEM	ULTRA VAC QUICK DISPOSAL SYSTEM
ROLL OVER PROTECTION SYSTEM (ROPS)	WEATHER CAB

WALK-BEHIND ACCESSORIES AND OPTIONS

GRASS CATCHER	TURF STRIPER
MICRO-MULCH SYSTEM	STANDON

*Some accessories and options not available for some models.

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____

© 2016 Exmark Mfg. Co., Inc.
Industrial Park Box 808
Beatrice, NE 68310
All Rights Reserved

Part No. 4502-750 Rev. A
(402) 223-6300
Fax (402) 223-5489
Printed in the USA.



www.exmark.com