Form No. 3404-219 Rev A

Weight Bracket Kit

Groundsmaster® 7200 Series Mower with Polar Trac® Cab

Model No. 132-8170

Model No. 132-8174

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Left weight bracket	1	Install the weight bracket for a Toro cab.
	Right weight bracket	1	
	Weight lock	2	
	Flange nut (3/8 inch)	4	
	Carriage bolt (1/2 x 1-1/2 inches)	5	
	Locknut (1/2 inch)	5	
2	Left weight bracket	1	Install the weight brackets.
	Right weight bracket	1	
	Weight lock	2	
	Flange nut (3/8 inch)	4	
	Carriage bolt (1/2 x 3 inches)	2	
	Carriage bolt (1/2 x 3-1/2 inches)	2	
	Locknut (1/2 inch)	4	
	Washer	2	

⚠ WARNING

CALIFORNIA
Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

© 2016—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the USA
All Rights Reserved

3404-219 A

1

Installing the Weight Brackets for Polar Track Cab

2015 and After Cabs

Parts needed for this procedure:

1	Left weight bracket
1	Right weight bracket
2	Weight lock
4	Flange nut (3/8 inch)
5	Carriage bolt (1/2 x 1-1/2 inches)
5	Locknut (1/2 inch)

Procedure

1. Mark the location and drill the holes into the cab as shown in Figure 1.

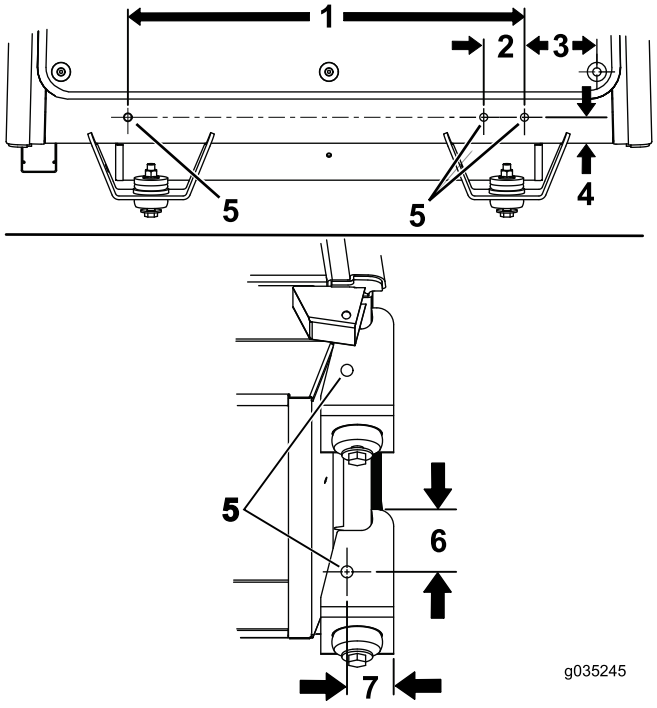


Figure 1

1. 68 cm (26-3/4 inches)
2. 70 mm (2-3/4 inches)
3. 124 mm (4-7/8 inches)
4. 44 mm (1-3/4 inches)
5. Mark and drill 17/32 inch holes here
6. 71 mm (21/64 inches)
7. 53 mm (19/64 inches)

2. Install the weight brackets as shown in Figure 2.

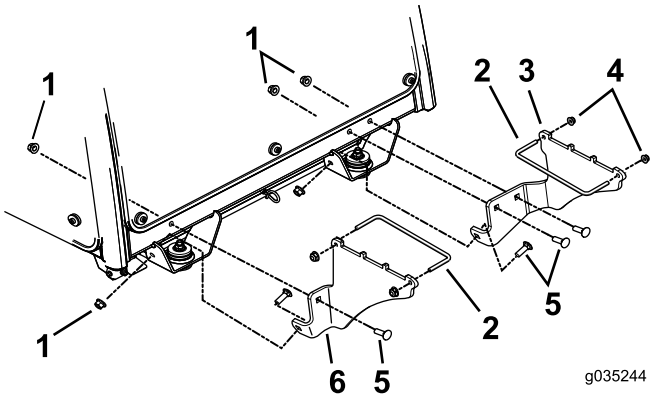


Figure 2

1. Locknut (1/2 inch)
2. Weight lock
3. Right weight bracket
4. Flange nut (3/8 inch)
5. Carriage bolt (1/2 x 1-1/2 inches)
6. Left weight bracket

2

Installing the Weight Brackets for Polar Track Cab


2014 and Before Cabs

Parts needed for this procedure:

1	Left weight bracket
1	Right weight bracket
2	Weight lock
4	Flange nut (3/8 inch)
2	Carriage bolt (1/2 x 3 inches)
2	Carriage bolt (1/2 x 3-1/2 inches)
4	Locknut (1/2 inch)
2	Washer

Procedure

1. Mark the location and drill the holes into the cab as shown in Figure 3.

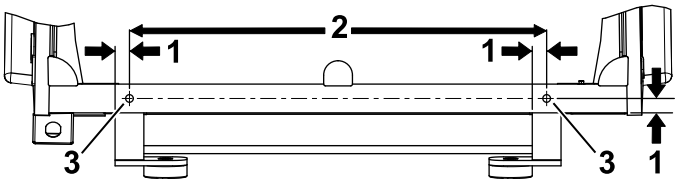

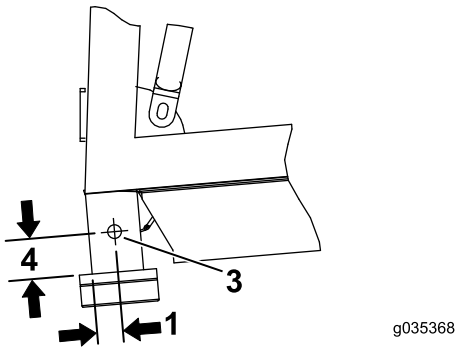


Figure 3

1. 25 mm (1 inch)
2. 74 cm (29 inches)
3. Mark and drill 17/32 inch holes here
4. 40 mm (1-9/16 inches)

2. Install the weight brackets as shown in Figure 4.

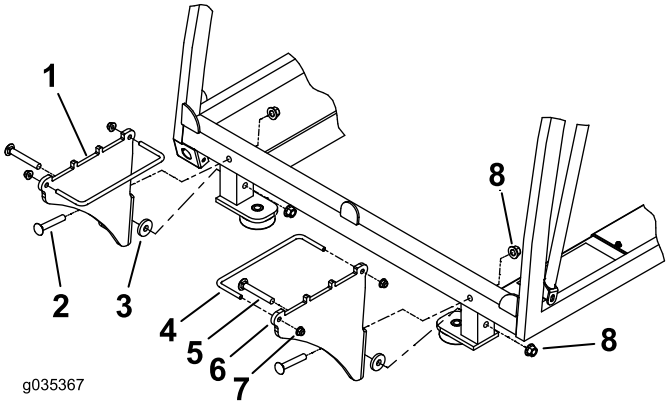


Figure 4

1. Left weight bracket
2. Carriage bolt (1/2 x 3 inches)
3. Washer
4. Weight lock
5. Carriage bolt (1/2 x 3-1/2 inches)
6. Right weight bracket
7. Flange nut (3/8 inch)
8. Locknut (1/2 inch)



Count on it.