Form No. 3415-648 Rev A

# Universal Sunshade Mount Kit

## Serial Number 400000000 and After Groundsmaster® 4500 or 4700 Series Traction Unit

**Model No. 136-1830**

**Installation Instructions**

**WARNING**

**CALIFORNIA**
**Proposition 65 Warning**

**This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.**

# Installation

## Loose Parts

Use the chart below to verify that all parts have been shipped.

| Description | Qty. | Use |
|---|---|---|
| Left ROPS-mounting bracket | 1 | Install the mounting bracket. |
| Right ROPS-mounting bracket | 1 | |
| U-bolt (3-1/2 x 5 inches) | 4 | |
| U-bolt (4-1/2 x 3 inches) | 4 | |
| Bolt (3/4 x 4 inches) | 2 | |
| Locknut (3/4 inch) | 2 | |
| Washer | 4 | |

© 2017—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the USA
All Rights Reserved

*3415-648* A

# Installing the Mounting Bracket

1. Park the machine on a level surface, engage the parking brake, shut off the engine, and remove the key.
2. Use the 8 flange nuts (3/8 inch) from the sunshade kit and the 4 U-bolts (3-1/2 x 5 inches) to loosely install the brace brackets to the roll bar (Figure 1).

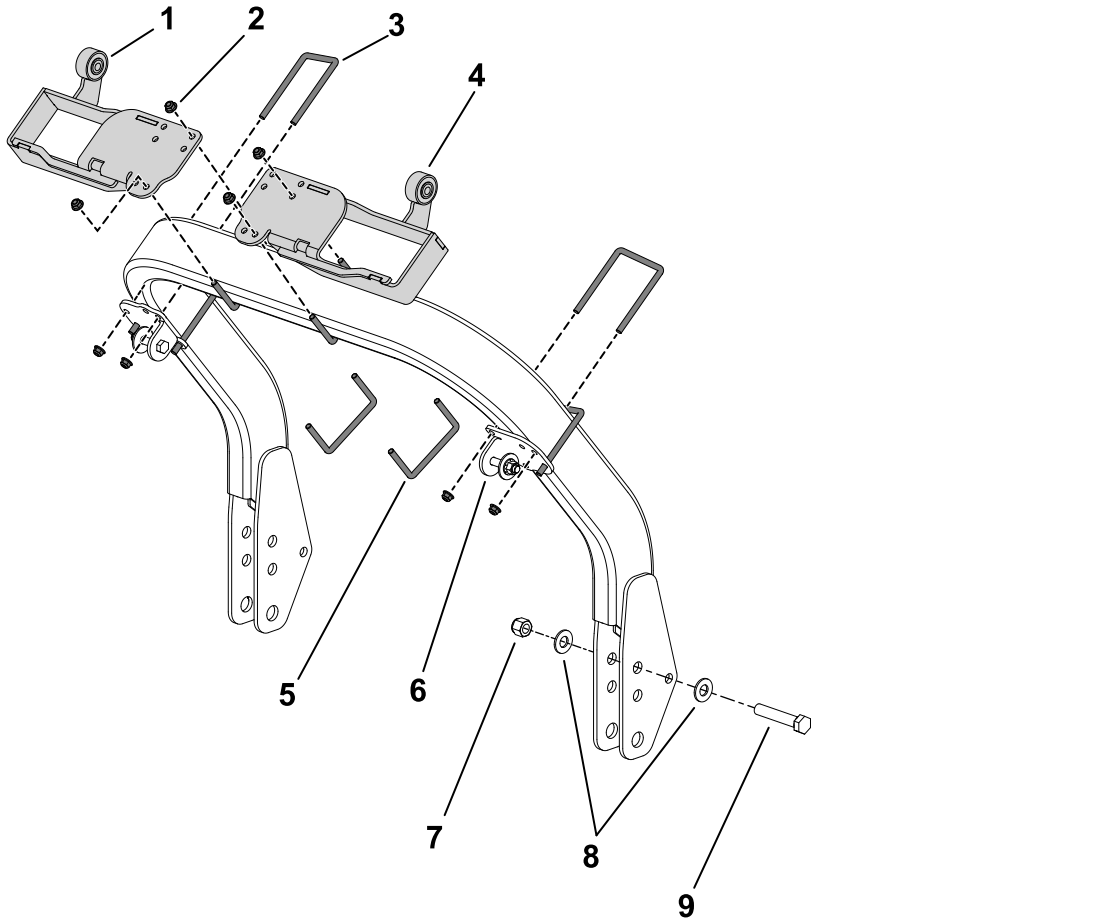



**Figure 1**

1. Left ROPS-mounting bracket
2. Flange nut (3/8 inch)—from the sunshade kit
3. U-bolt (3-1/2 x 5 inches)
4. Right ROPS-mounting bracket
5. U-bolt (4-1/2 x 3 inches)
6. Brace bracket—from the sunshade kit
7. Locknut (3/4 inch)
8. Washers
9. Bolt (3/4 x 4 inches)

---

3. Use the 8 flange nuts (3/8 inch) from the sunshade kit and the 4 U-bolts (4-1/2 x 3 inches) to loosely install the ROPS-mounting brackets to the roll bar (Figure 1).
4. Use the 2 bolts, nuts, and 4 washers included to secure the rollbar in the correct position (Figure 1).
5. Follow the procedure in the installation instruction from the sunshade kit to complete the bracket installation.