FORM NO. 3321–255

TORO®

PART NO. 98–0990

INSTALLATION INSTRUCTIONS

# CE UPDATE KIT
## For Sand Pro® 5020

**1.** Remove capscrew securing rear of left front panel to frame tube (Fig. 1).

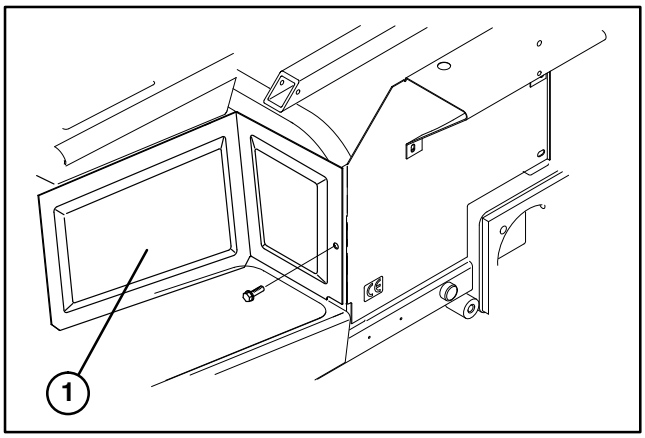



**Figure 1**
1. Left front panel

**2.** Insert front of left fender extension between rear of left front panel and frame tube while positioning remainder of fender extension under panel.

**Note:** Front panel may be completely removed if necessary.

**3.** Align slot in front of fender extension with panel and frame tube mounting hole (Fig. 2).

**4.** Using the fender extension as a template, locate, mark and drill (2) 3/8" dia. holes in underside of left rear panel (Fig. 2).

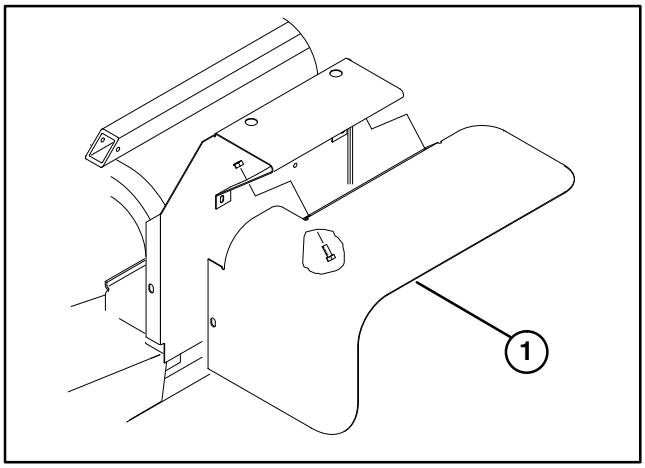



**Figure 2**
1. Left fender extension

**5.** Secure front of fender and rear of front panel to frame tube with capscrew previously removed.

**6.** Mount remainder of fender extension to underside of left rear panel with (2) capscrews and locknuts (Fig. 2).

**7.** Remove air cleaner cover, element plate, element and air cleaner base from engine (Fig. 3).

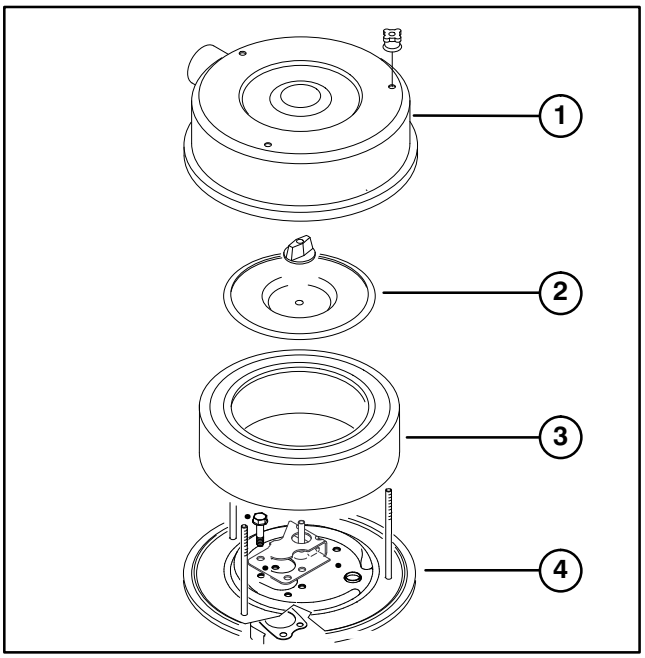



**Figure 3**
1. Air cleaner cover
2. Element plate
3. Element
4. Air cleaner base

**8.** Disconnect choke and throttle cables from engine.

**9.** Remove knobs from choke and throttle controls, mounted to right fender (Fig. 4).

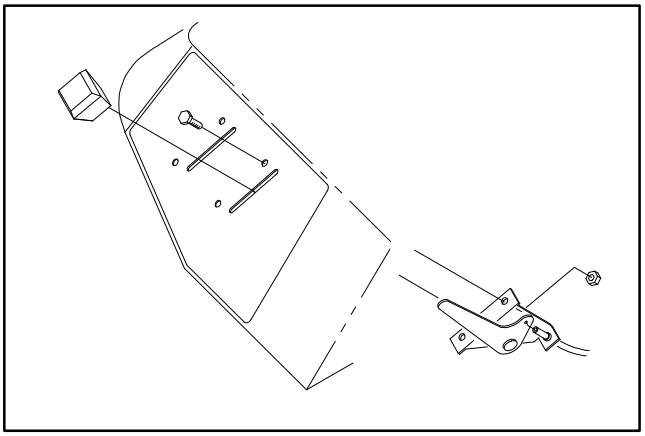


**Figure 4**

**10.** Remove capscrews and nuts securing choke and throttle controls to right fender. Remove controls.

**11.** Remove capscrew securing rear of right front panel to frame tube (Fig. 5).

© The TORO Company – 1998

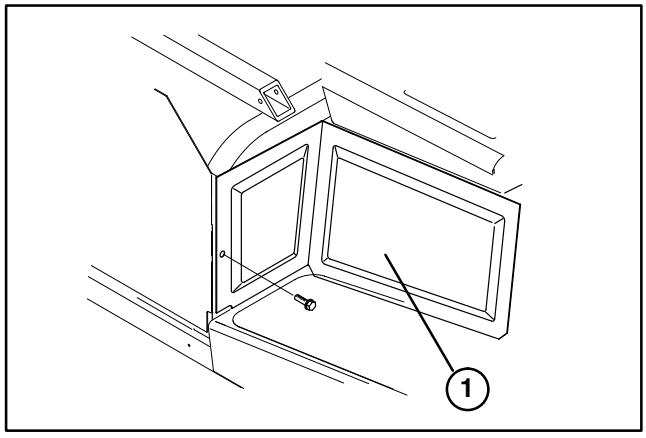



**Figure 5**
**1. Right front panel**

**12.** Insert grommet into hole in top of right fender extension (Fig. 6).

**13.** Insert front of right fender extension between rear of right front panel and frame tube while positioning remainder of fender extension under fender (Fig. 6).

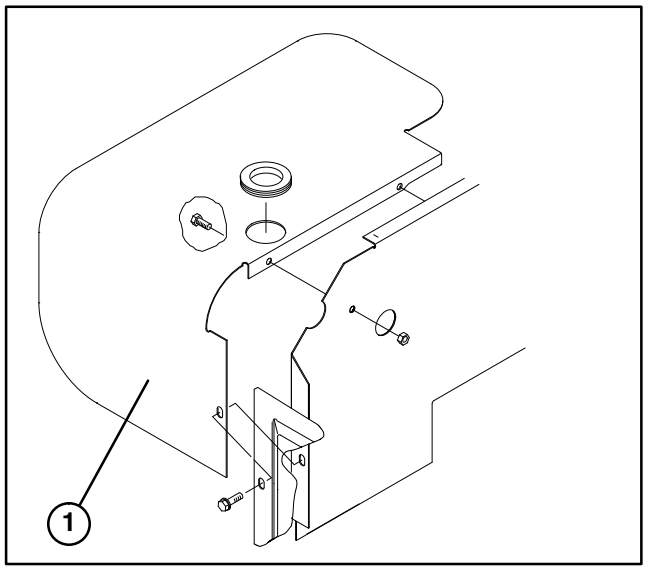



**Figure 6**
**1. Right fender extension**

**Note:** Front panel may be completely removed if necessary.

**14.** Align slot in front of fender extension with panel and frame tube mounting hole.

**15.** Using the fender extension as a template, locate, mark and drill (2) 3/8" dia. holes in right rear panel.

**16.** Secure front of fender extension and rear of front panel to frame tube with capscrew previously removed (Fig. 6).

**17.** Mount remainder of fender extension to right rear panel with (2) capscrews and locknuts (Fig. 6).

**18.** Route throttle and choke cables thru fender extension grommet and panel to engine. Connect cables to engine.

**19.** Re−install throttle and choke controls to fender. Adjust control cables.

**20.** Re−install air cleaner components to engine.

**21.** Affix blank decal over service decal, located on underside of seat base (Fig. 7).

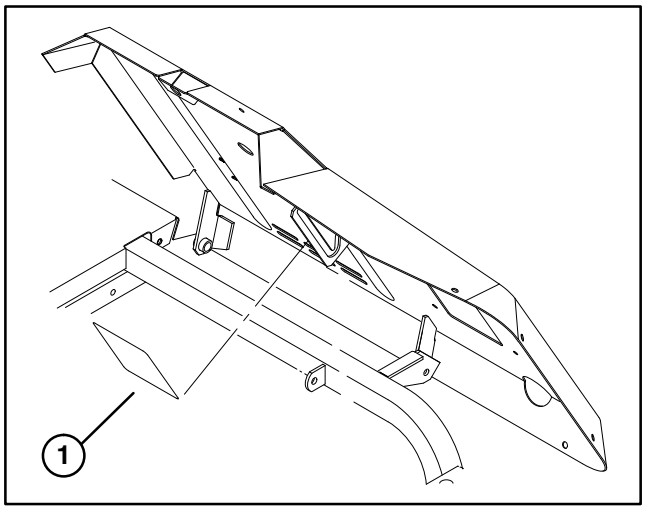



**Figure 7**
**1. Blank decal**