FORM NO. 3314-399

TORO

MODEL NO. 30505

ADDENDUM

15 CU-FT HOPPER


CHUTE MODIFICATION

IMPORTANT: When the chute in the Blower Kit is used with a 15 cubic foot Hopper Kit, you must cut off a section of the chute to assure proper fit between the blower and the hopper.


1. Using dimensions shown in illustrations below, use a tape measure and mark the chute.
2. Draw lines around all sides of the chute and cut off with a saw.

Note: For convenience, some chutes have a light scribe mark where the chute must be cut off.

62" BLOWER CHUTE

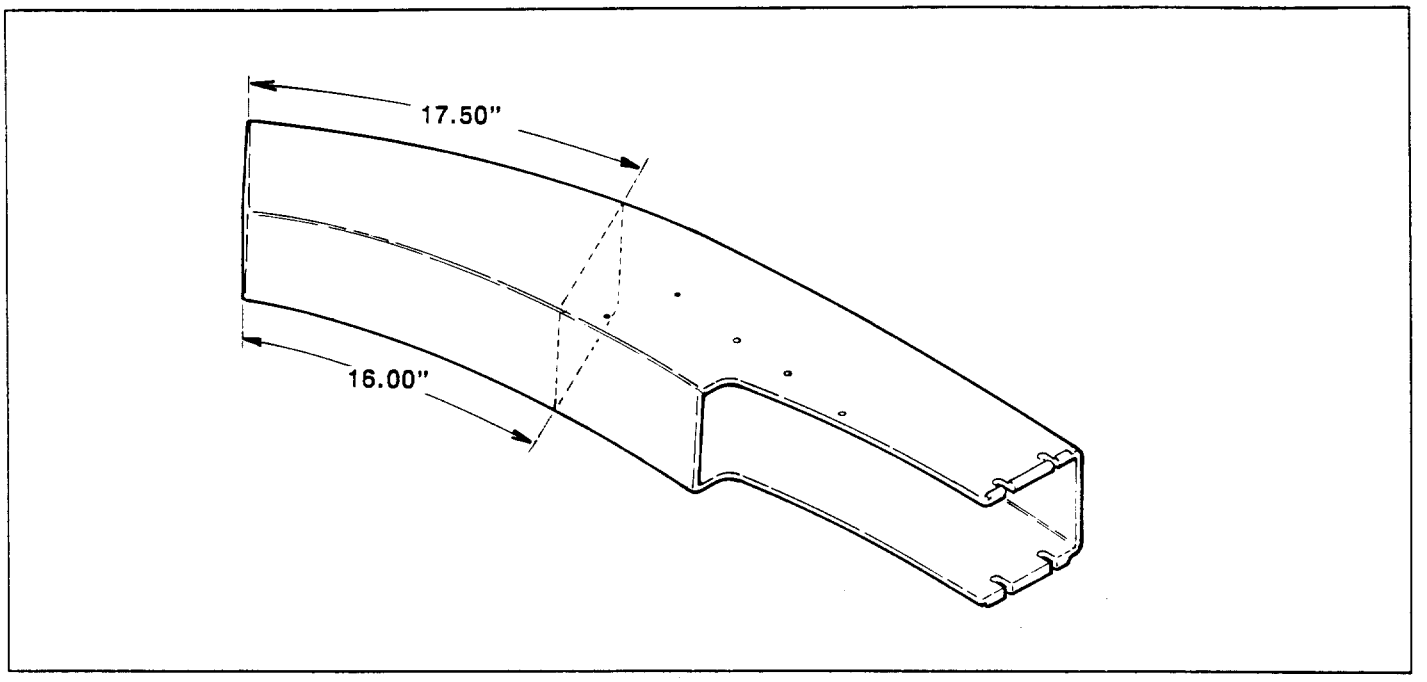

52" BLOWER CHUTE

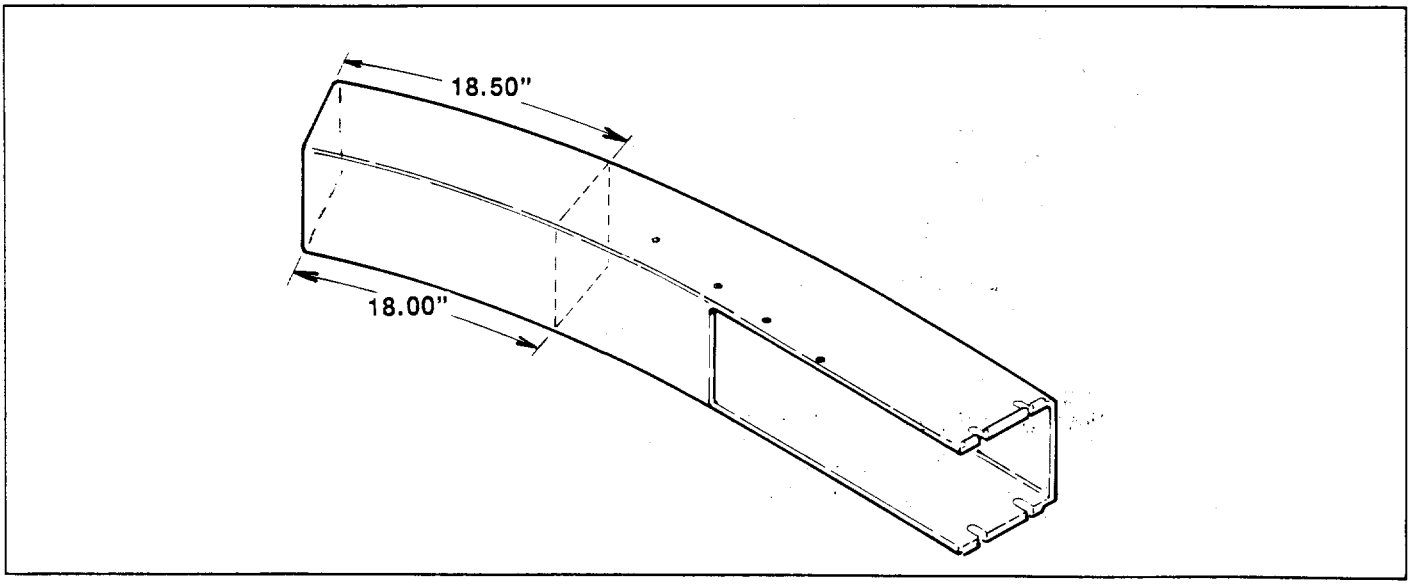

©The TORO Company - 1990

TPS