Form No. 3439-743 Rev A

Wireless Hour Meter Kit

Workman® GTX Lithium Utility Vehicle or Serial Number 403448001 and After Workman® GTX Electric Utility Vehicle

Model No. 139-4627

Installation Instructions

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
No parts required	–	Prepare the machine.
Wireless hour meter wire harness Relay (48 V) Screw (#4 x 3/4 inch)	1 1 2	Install the wireless hour meter.

Preparing the Machine

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the machine and remove the key.
4. Disconnect the main negative battery cable (black) that connects the bank of batteries to the ground point of the machine; refer to the *Operator's Manual*.

© 2020—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

CE

Original Instructions (EN)
Printed in the USA
All Rights Reserved

3439-743 A

Installing the Wireless Hour Meter

1. **For Electric GTX machines only:** Disconnect the existing female 2-socket connector from the existing hour meter and plug it into the male 2-pin connector on the wireless hour meter wire harness (Figure 1 and Figure 3).

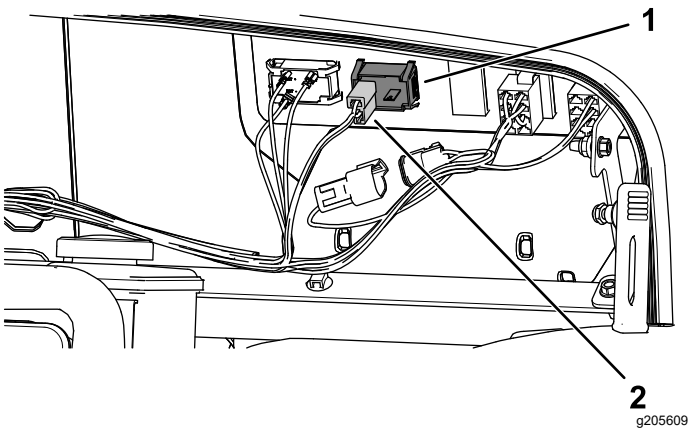


Figure 1

1. Existing hour meter
2. Existing female 2-socket connector

2. **For Lithium GTX machines only:** Connect the existing female 2-socket connector on the machine wire harness to the male 2-pin connector on the wireless hour meter wire harness (Figure 2).

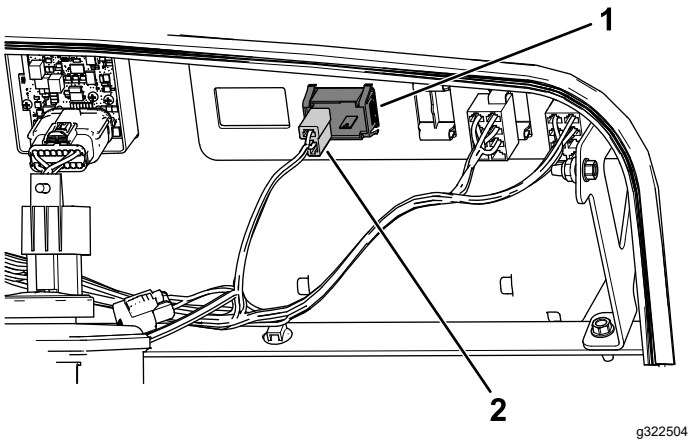


Figure 2

1. Male 2-pin connector (wireless hour meter wire harness)
2. Existing female 2-socket connector

3. Connect the female 2-socket connector on the wireless hour meter wire harness to the existing hour meter (Figure 3).
4. Connect the female 6-socket connector from the wireless hour meter wire harness to the new wireless hour meter (Figure 3).

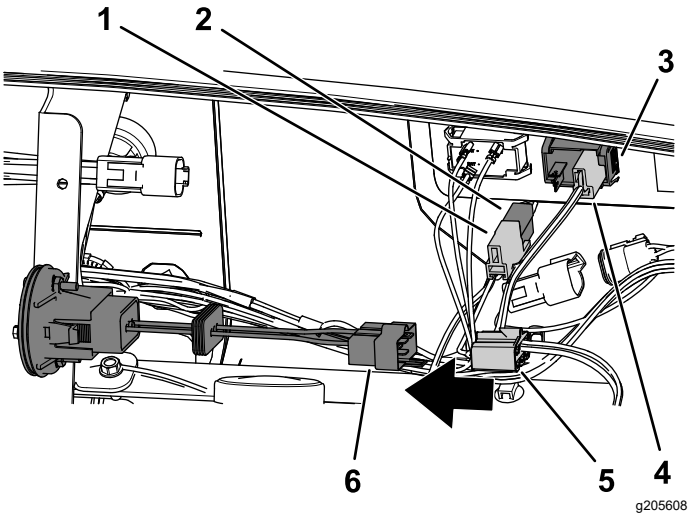


Figure 3

1. Male 2-pin connector (wireless hour meter wire harness)
2. Existing female 2-socket connector
3. Existing hour meter
4. Female 2-socket connector (wireless hour meter wire harness)
5. Female 6-socket connector (wireless hour meter wire harness)
6. Wireless hour meter

5. Disconnect the machine wire harness from the existing converter.
6. Connect the female 4-socket connector on the wireless hour meter wire harness to the existing converter (Figure 4).

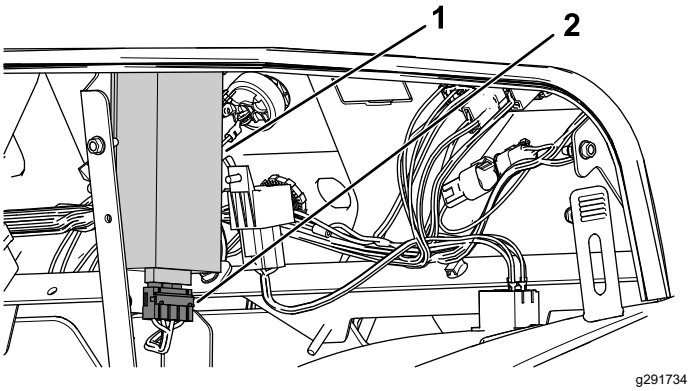


Figure 4

1. Converter
2. 4-socket connector

7. Connect the male 4-pin connector on the wireless hour meter wire harness to the female 4-socket connector on the machine harness (Figure 5).

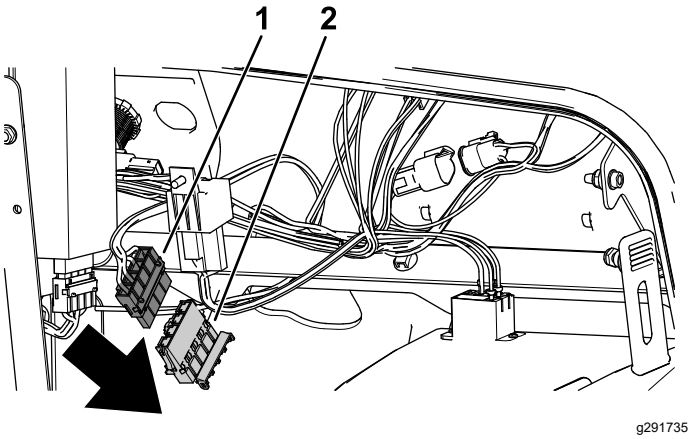


Figure 5

1. 4-pin connector (wireless hour meter wire harness)
2. 4-socket connector (machine harness)

8. Install the relay to the left fender using 2 screws (#4 x 3/4 inch) as shown in Figure 6.

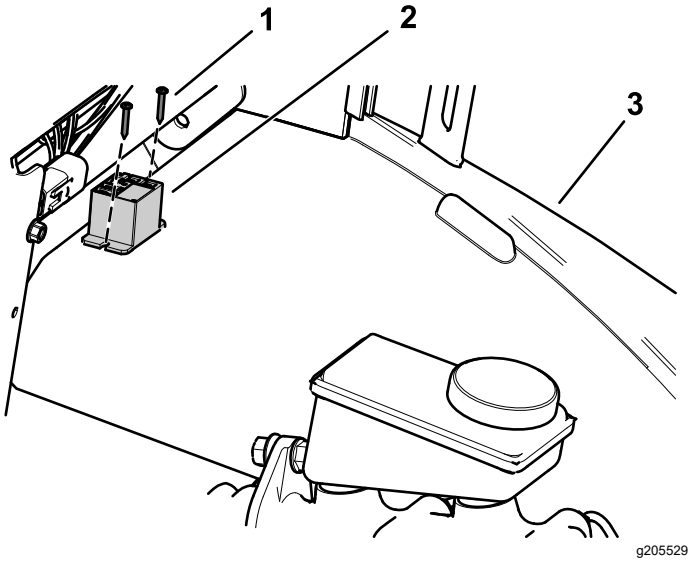


Figure 6

1. Screw (#4 x 3/4 inch)
2. Relay
3. Left fender

9. Connect the wireless hour meter wire harness connectors to the relay as shown in Figure 7.

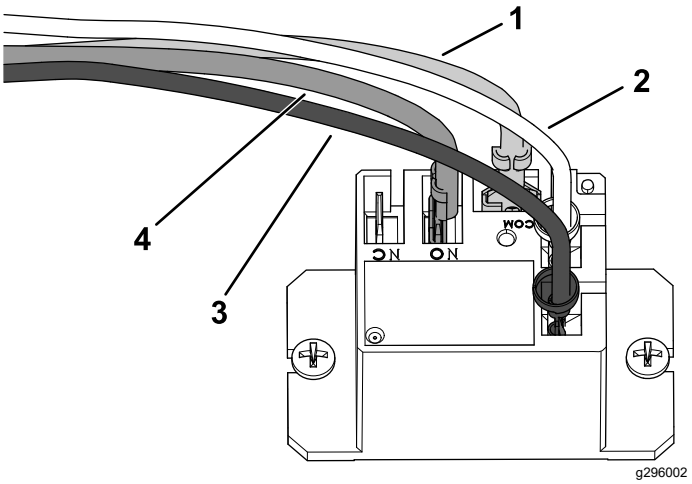


Figure 7

1. Pink wire
2. White wire
3. Brown wire
4. Blue wire



Count on it.