Form No. 3439-841 Rev A

# Tub Service Kit

## Mud Buggy

**Model No. 139-7216**

**Installation Instructions**

1. Park the machine on a level surface, engage the parking brake, lower the hopper, shut off the engine, and remove the key.
2. Remove the existing tub.
3. Secure the new tub to the frame using 4 bolts, 4 washers, and 4 nuts.

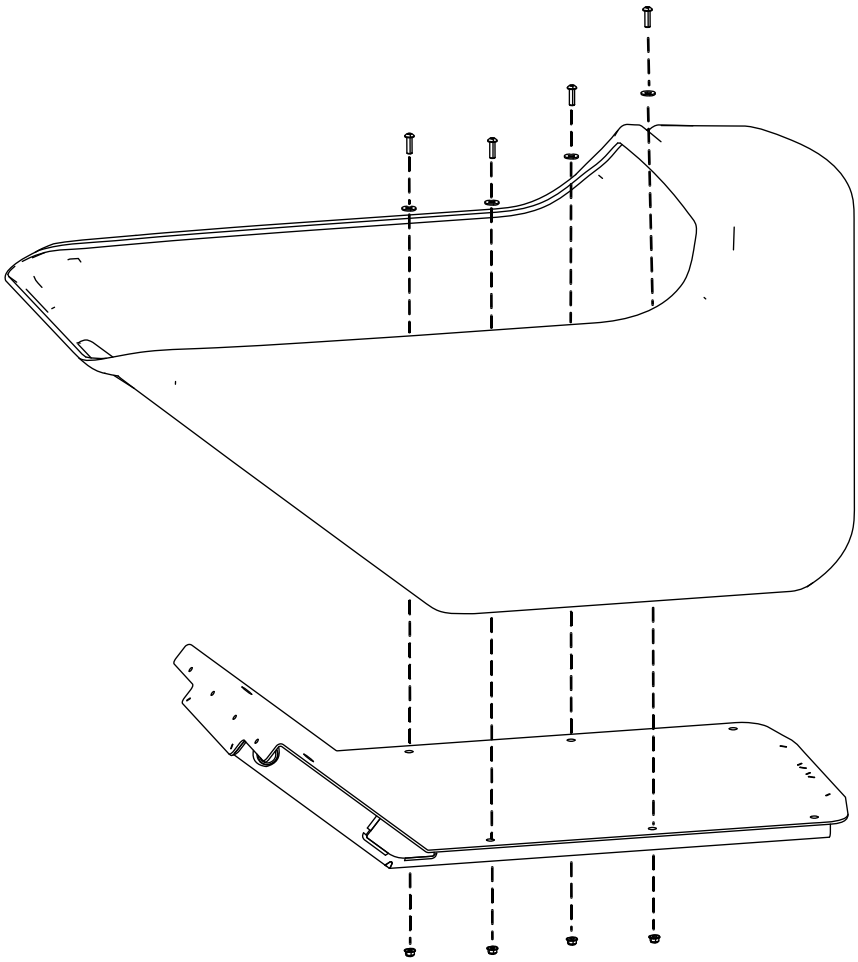

g322995

**Figure 1**

© 2020—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

Original Instructions (EN)
Printed in the USA
All Rights Reserved

*3439-841* A

4. Using the new tub as a template, mark and drill 2 holes (9/16 inch).

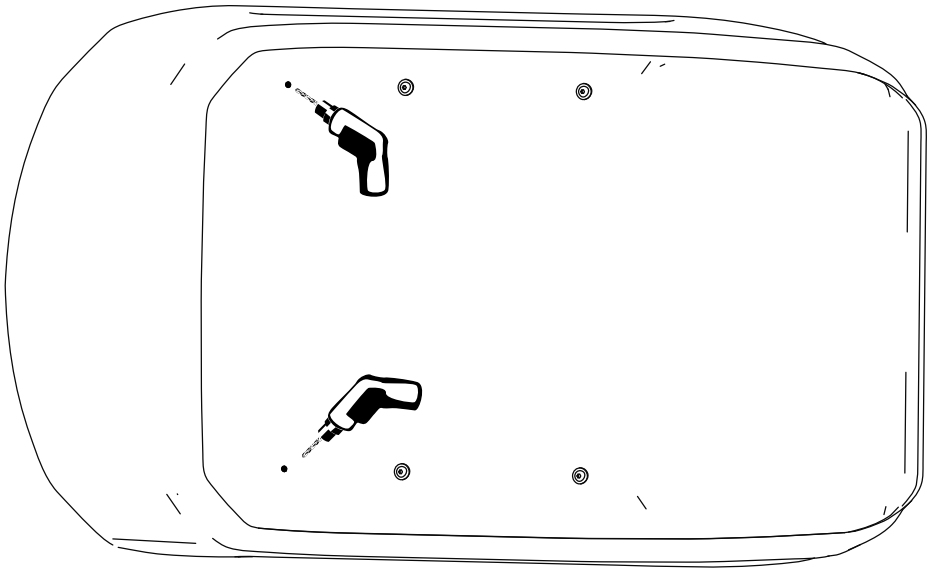

g322994

**Figure 2**

5. Install the remaining hardware to secure the tub to the frame.

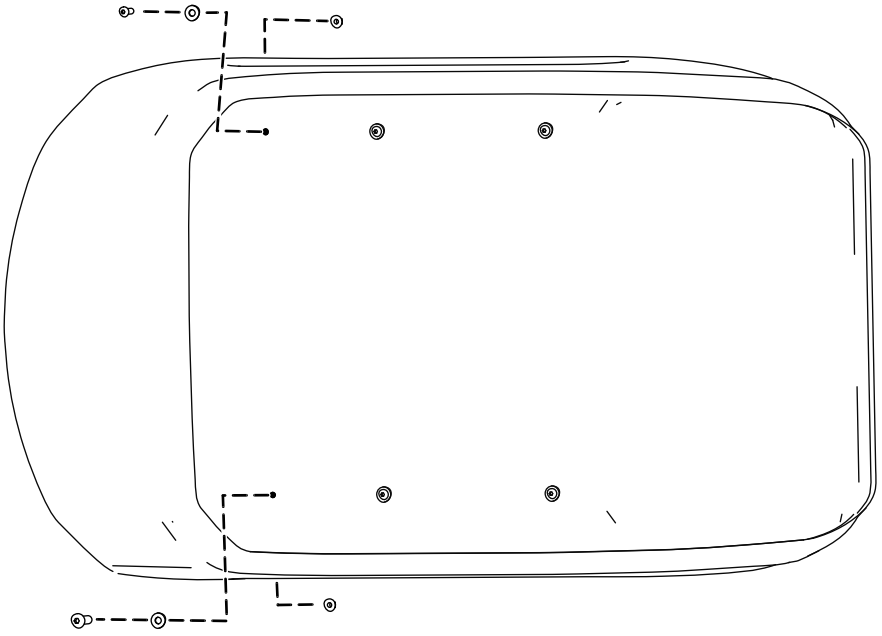

g322996

**Figure 3**

6. Torque the bolt to 37 to 45 N·m (27 to 33 ft-lb).