Form No. 3419-931 Rev B

CE Latch Kit

Groundsmaster® 3500/3505/4500/4700 and Reelmaster® 3100 Traction Unit

Model No. 119-2004

Installation Instructions

Loose Parts

Use the chart below to verify that all parts have been shipped.

Description	Qty.	Use
Lock bracket (Part No. 119-2003)	1	Install the kit.
Rivet (Part No. 107-0333)	2	
Washer (Part No. 3296-10)	2	
Screw, 1/4 x 2 inches (Part No. 322-10)	1	
Locknut, 1/4 inch (Part No. 3296-47)	1	
CE Decal	1	

Installing the Kit

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the engine and remove the key.
4. Unhook the hood latch from the hood-latch bracket (Figure 1).

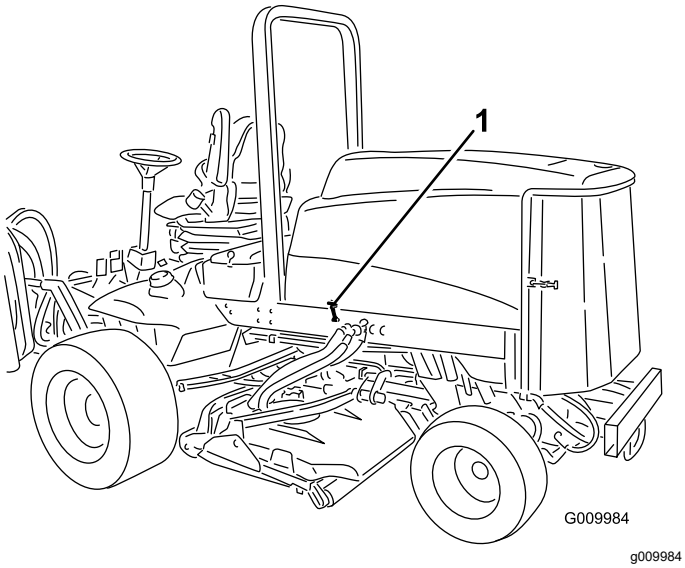


Figure 1

1. Hood latch

5. Remove the rivets securing the hood-latch bracket to the hood (Figure 2). Remove the hood-latch bracket from the hood.

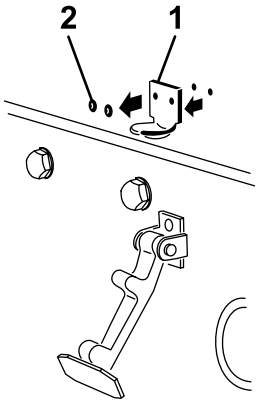


Figure 2

1. Hood-latch bracket
2. Rivets

© 2023—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Register at www.Toro.com.

Original Instructions (EN)
Printed in the USA
All Rights Reserved

3419-931

6. While aligning the mounting holes, position the CE-lock bracket and the hood-latch bracket onto the hood. The lock bracket must be against the hood (Figure 3). Do not remove bolt and nut assembly from the lock-bracket arm.

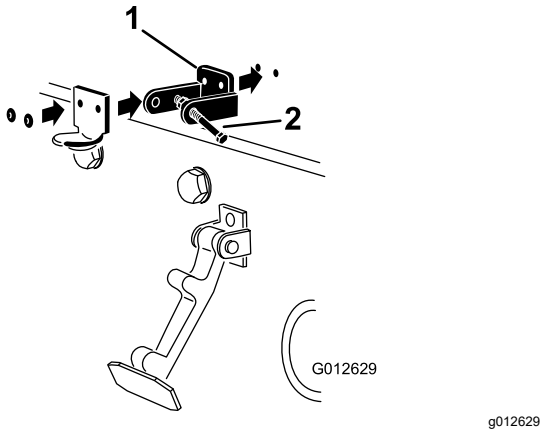


Figure 3

1. CE-lock bracket
2. Bolt and nut assembly

7. Align the washers with the holes on the inside of the hood.
8. Rivet the brackets and the washers to the hood (Figure 3).
9. Hook the latch onto the hood-latch bracket (Figure 4).

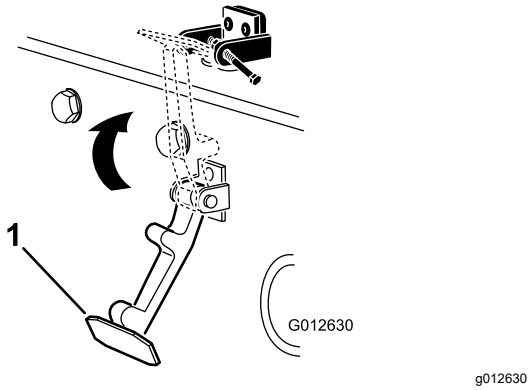


Figure 4

1. Hood latch

10. Screw the bolt into the other arm of hood-lock bracket to lock the latch in position (Figure 5). Tighten bolt securely but do not tighten the nut.

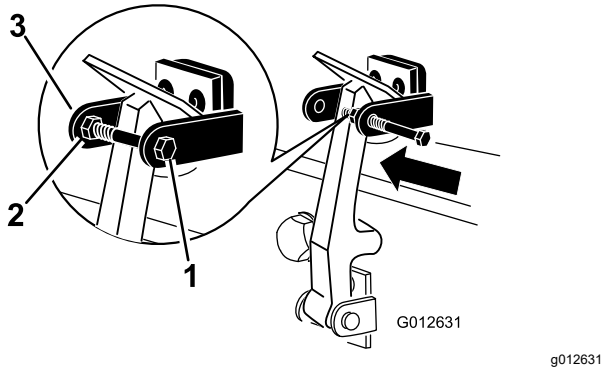


Figure 5

1. Bolt
2. Nut
3. Arm of hood-lock bracket

11. Install the CE decal to the hood near the latch in a visible place (Figure 6).

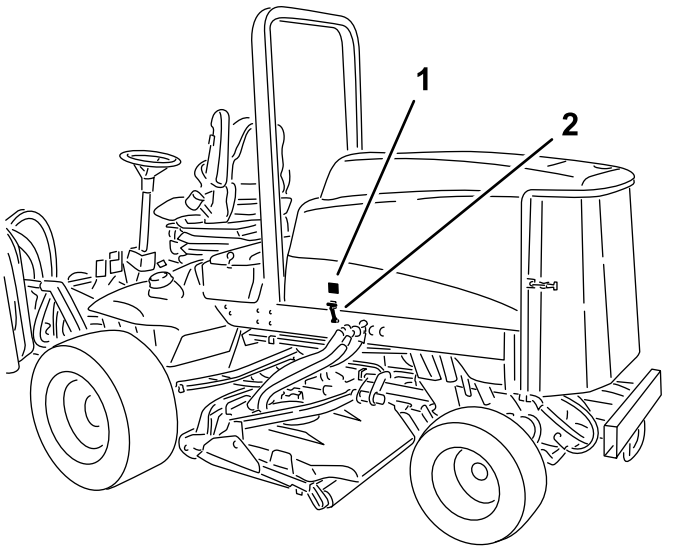


Figure 6

1. CE decal
2. CE latch