Form No. 3328–196

# Speedometer Kit

## Multi Pro 5600

**Part No. 106–1247**

## Installation Instructions

**Note:** This accessory is intended for use on a MULTI PRO® 5600 Vehicle equipped with a manual spray system. For vehicles equipped with Pro Control Spray Systems, the speedometer can be installed to accompany the manual switches, providing a back–up manual system in case of Pro Control console failure. If the vehicle is equipped with a Pro Control System, it must be disconnected, and the control console and hole grommet must be removed prior to installing the speedometer.

1. Install the speedometer in vehicle's dash as shown in figure 1.
2. Install speedometer wire harness on the right side of vehicle following the main vehicle harness. Unplug the main harness from the wheel motor plug. Connect speedometer harness to wheel motor plug using the three pin Weather Pac plug end. Secure wire harness.
3. Under the dash, attach the harness' two ring terminals to the coolant gauge on the Multi–Pro 5600® vehicle. They will share the threaded post of the coolant gauge with the terminals already connected; red wire ring terminal to the positive side. (Stud closest to driver side); Black wire ring terminal to the negative or ground stud. (Middle stud on the gauge). Remove and re–use existing nuts and tighten. (Fig. 2).
4. Connect speedometer plug into harness plug.

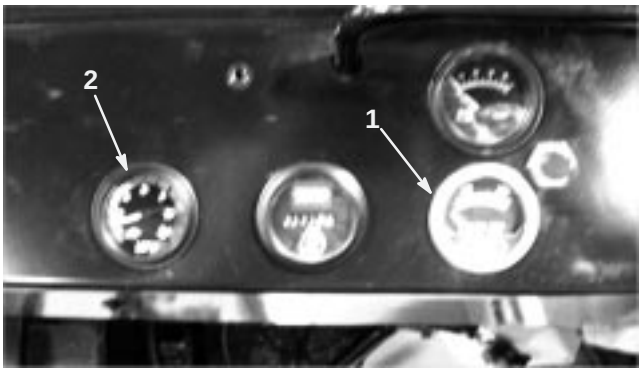


**Figure 1**

1. Coolant gauge
2. Speedometer

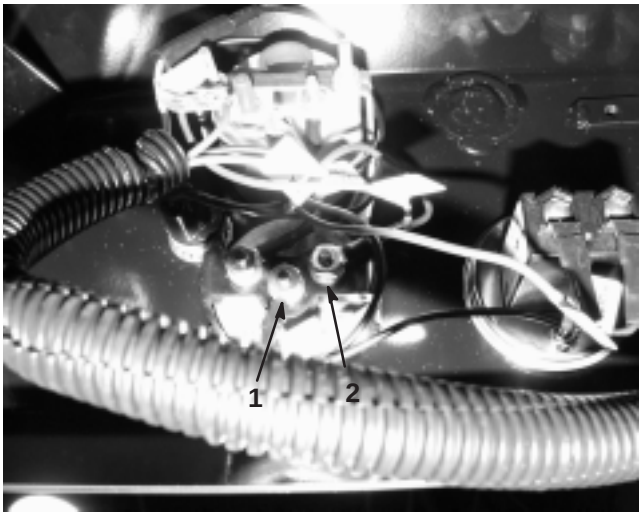


**Figure 2**

1. Negative or ground (–) black wire
2. Positive (+) red wire

© 2002 by The Toro Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196



All Rights Reserved
Printed in the USA