Form Number 3328-776 Rev A

44in SFS Side Discharge Mower
ProLine Mid-Size Traction Unit

Model No. 30149 - 240000001 and up.

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Contents

Description	Page	Description	Page
Deck and Cover Assembly	 3	Carrier Frame Assembly	 7
Spindle and Idler Assembly	 4	Belt and Decal Assembly	 8
Spindle Housing Assembly No. 67-7600	 5		
Spindle Housing Assembly No. 67-7660	 6		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR. . . . . as required
ASM. . . . . assembly
CARR. . . . . carriage
DEG. . . . . degrees
FH. . . . . flat head
GA. . . . . gauge
HF. . . . . hex flange
HH. . . . . hex head
HHF. . . . . hex head flange
HHFTF. . . . . hex head flange thread forming
HJ. . . . . hex jam
HLH. . . . . hex lag head
HOC. . . . . height-of-cut
HS. . . . . hex
HSBH. . . . . hex socket button head
HSFH. . . . . hex socket flat head
HSH. . . . . hex socket head
HWH. . . . . hex washer head
HWHTF. . . . . hex washer head thread forming
HYD. . . . . hydraulic
INC. . . . . incorporated
LH. . . . . left hand
NI. . . . . nylon insert
PPH. . . . . phillips pan head
PTH. . . . . phillips truss head
PTO. . . . . power take off
RH. . . . . right hand
SFH. . . . . slotted fillister head
SHH. . . . . slotted hex head
SHWH. . . . . slotted hex washer head
SPH. . . . . slotted pan head
SQH. . . . . square head
SRH. . . . . slotted round head
STD. . . . . standard
TAP. . . . . self tapping
TTH. . . . . torx truss head
WH. . . . . wing head

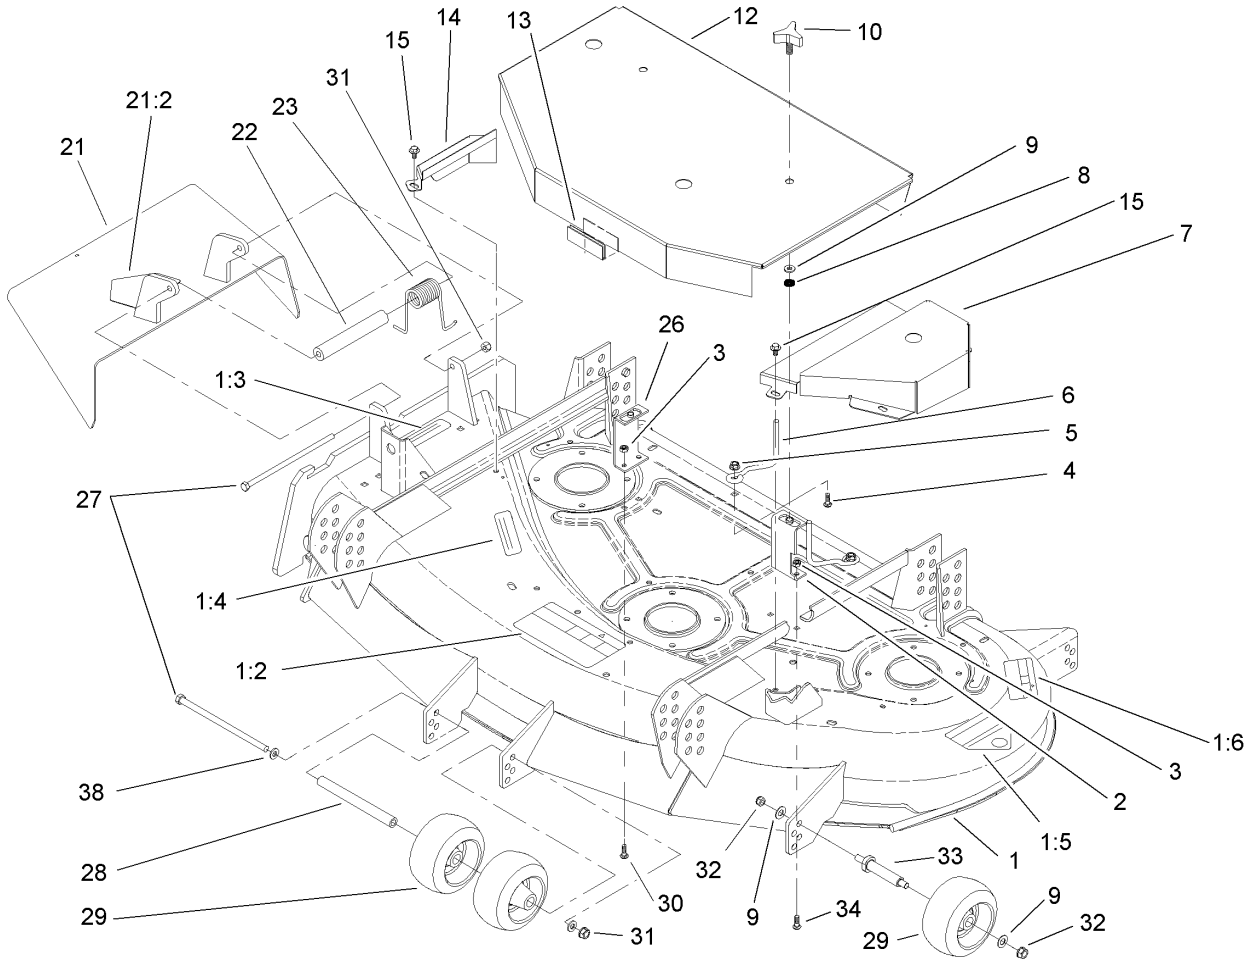

Deck and Cover Assembly

Ref	Part No.	Qty.	Description
1	106-0747	1	44in Deck W/ Decals
1:2	66-1340	1	Decal-Danger
1:3	66-6380	1	Decal-Danger
1:4	67-5360	1	Decal-Danger
1:5	43-8480	1	Decal-Danger
1:6	68-8340	1	Decal-Torque
2	54-3240-03	1	LH Cover Bracket ASM
3	3296-42	4	Nut-Lock, NI
4	3230-2	2	Bolt-CARR
5	32128-13	2	Nut-HF
6	52-4780	2	Rod-Belt
7	54-2220-01	1	Cover-Deck, LH
8	32151-72	2	Ring-Retaining
9	3256-24	6	Washer-Flat
10	62-6520	2	Knob
12	54-3190-01	1	Cover-Center
13	29-0641	5	Trim-Jiffy
14	54-2250-01	1	Cover-Deck, RH
15	9266714	5	Screw-HWH
21	105-4625	1	Deflector ASM
21:2	93-1122	1	Decal-Danger
22	105-4622	1	Spacer
23	104-8554	1	Spring-Torsion
26	54-3230-03	1	RH Cover Bracket ASM

Ref	Part No.	Qty.	Description
27	322-50	2	Screw-HH
28	98-5967	1	Spacer-Wheel
29	68-2730	4	Wheel-Gage
30	3229-1	2	Screw-CARR
31	3296-29	2	Nut-Lock, NI
32	3296-39	4	Nut-Lock, NI
33	99-2842	2	Spacer
34	3229-3	2	Screw-CARR
38	3256-23	2	Washer-Flat

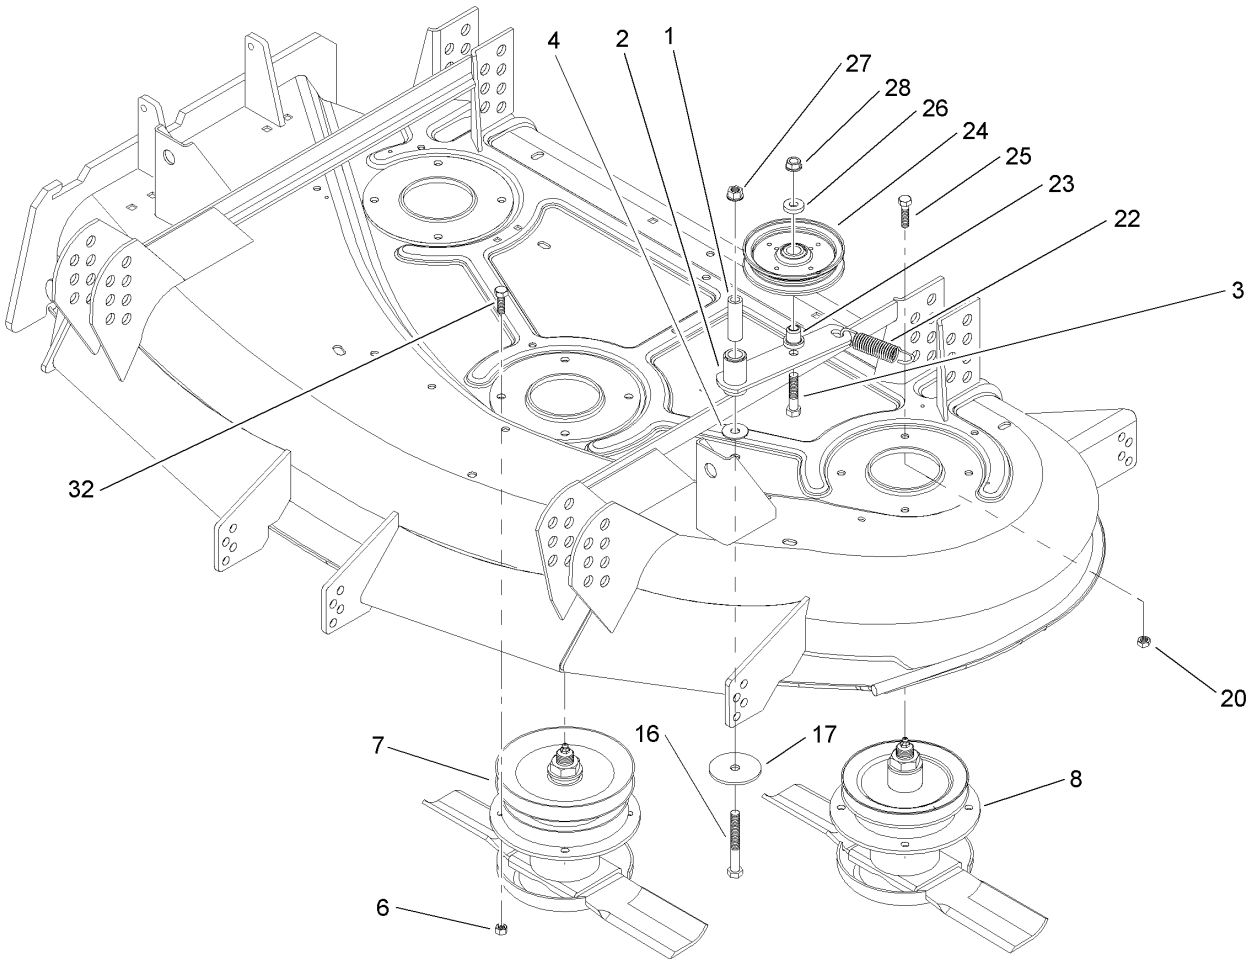

Spindle and Idler Assembly

Ref	Part No.	Qty.	Description
1	79-2760	1	Spacer
2	92-1657	1	Idler Arm ASM
3	3211-8	1	Screw-HH
4	52-2860	1	Washer
6	32152-1	12	Nut-Lock, NI
7	67-7600	1	Spindle Housing ASM
8	67-7660	2	Spindle Housing ASM
16	323-13	1	Screw-HH
17	20-9530	1	Washer-End
20	3218-2	1	Nut-Jam
22	54-2730	1	Spring-Extension
23	65-5950	1	Bushing-Pulley
24	65-5940	1	Pulley-Idler
25	322-6	1	Screw-HH
26	7-0081	1	Washer-Flat
27	32128-19	1	Nut-HF
28	3296-5	1	Nut-Lock, NI
32	322-4	11	Screw-HH

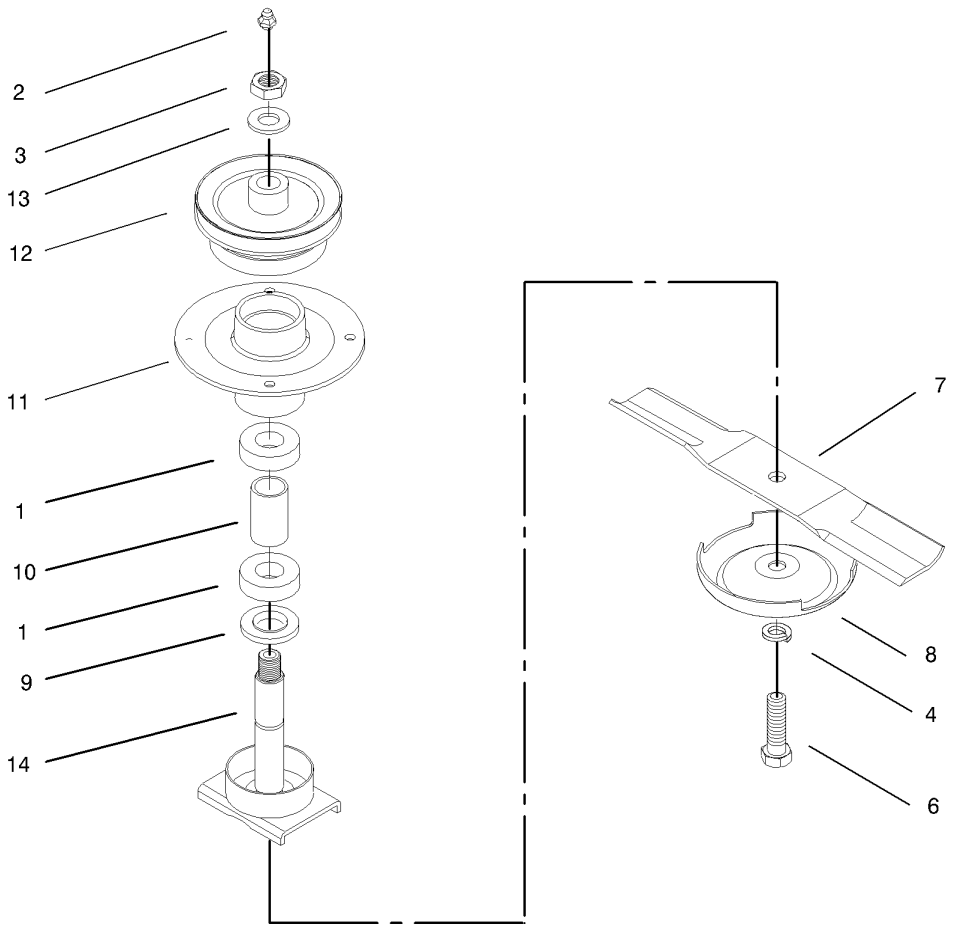

Spindle Housing Assembly No. 67-7600

Ref	Part No.	Qty.	Description
1	251-257	2	Bearing-Ball
2	302-2	1	Fitting-Grease
3	32146-20	1	Nut-Jam
4	3253-8	1	Washer-Lock
6	51-4060	1	Screw-Blade
7	54-0010-03	1	Blade
8	67-7561	1	Cup-Scalp, Anti
9	67-7570	1	Spacer-Spindle
10	67-7580	1	Spacer-Bearing
11	67-7590	1	Housing-Spindle
12	67-7650	1	Pulley-Center
13	106-0776	1	Washer-Pinion
14	71-2790-03	1	Spindle ASM

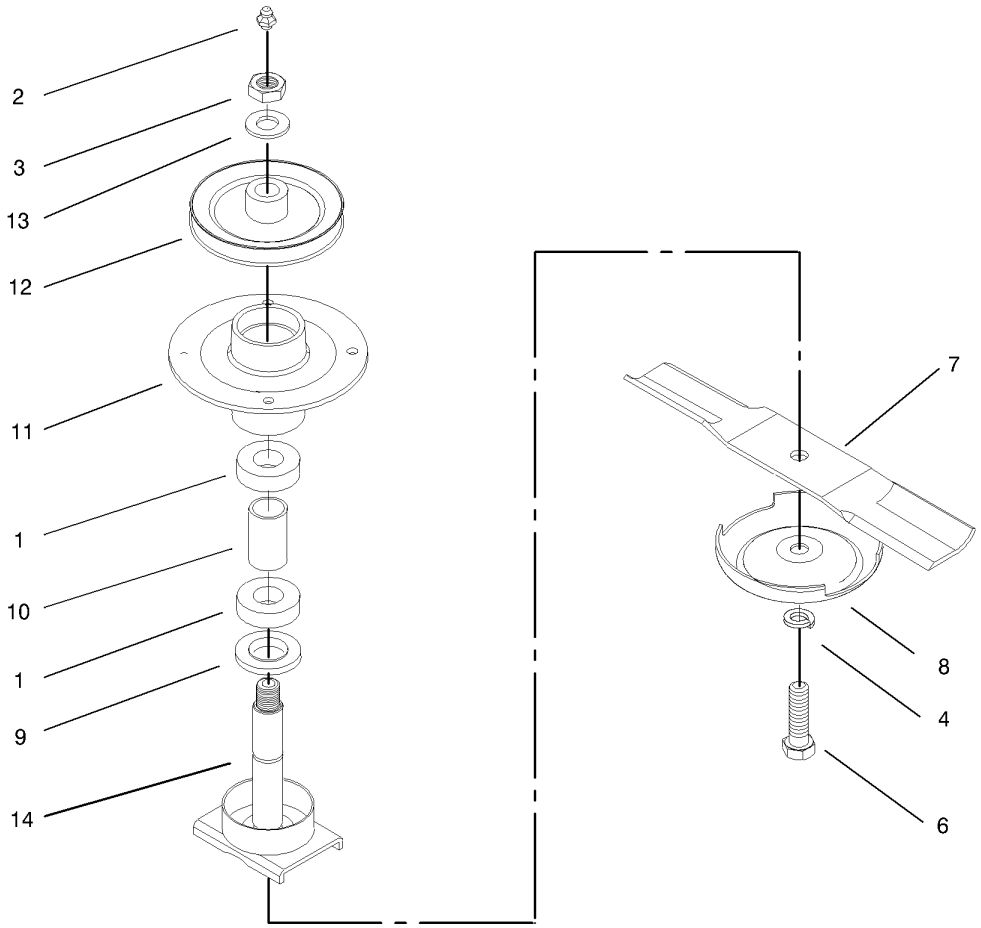

Spindle Housing Assembly No. 67-7660

Ref	Part No.	Qty.	Description
1	251-257	2	Bearing-Ball
2	302-2	1	Fitting-Grease
3	32146-20	1	Nut-Jam
4	3253-8	1	Washer-Lock
6	51-4060	1	Screw-Blade
7	54-0010-03	1	Blade
8	67-7561	1	Cup-Scalp, Anti
9	67-7570	1	Spacer-Spindle
10	67-7580	1	Spacer-Bearing
11	67-7590	1	Housing-Spindle
12	67-7690	1	Pulley-Deck
13	106-0776	1	Washer-Pinion
14	71-2780-03	1	Spindle Shaft ASM

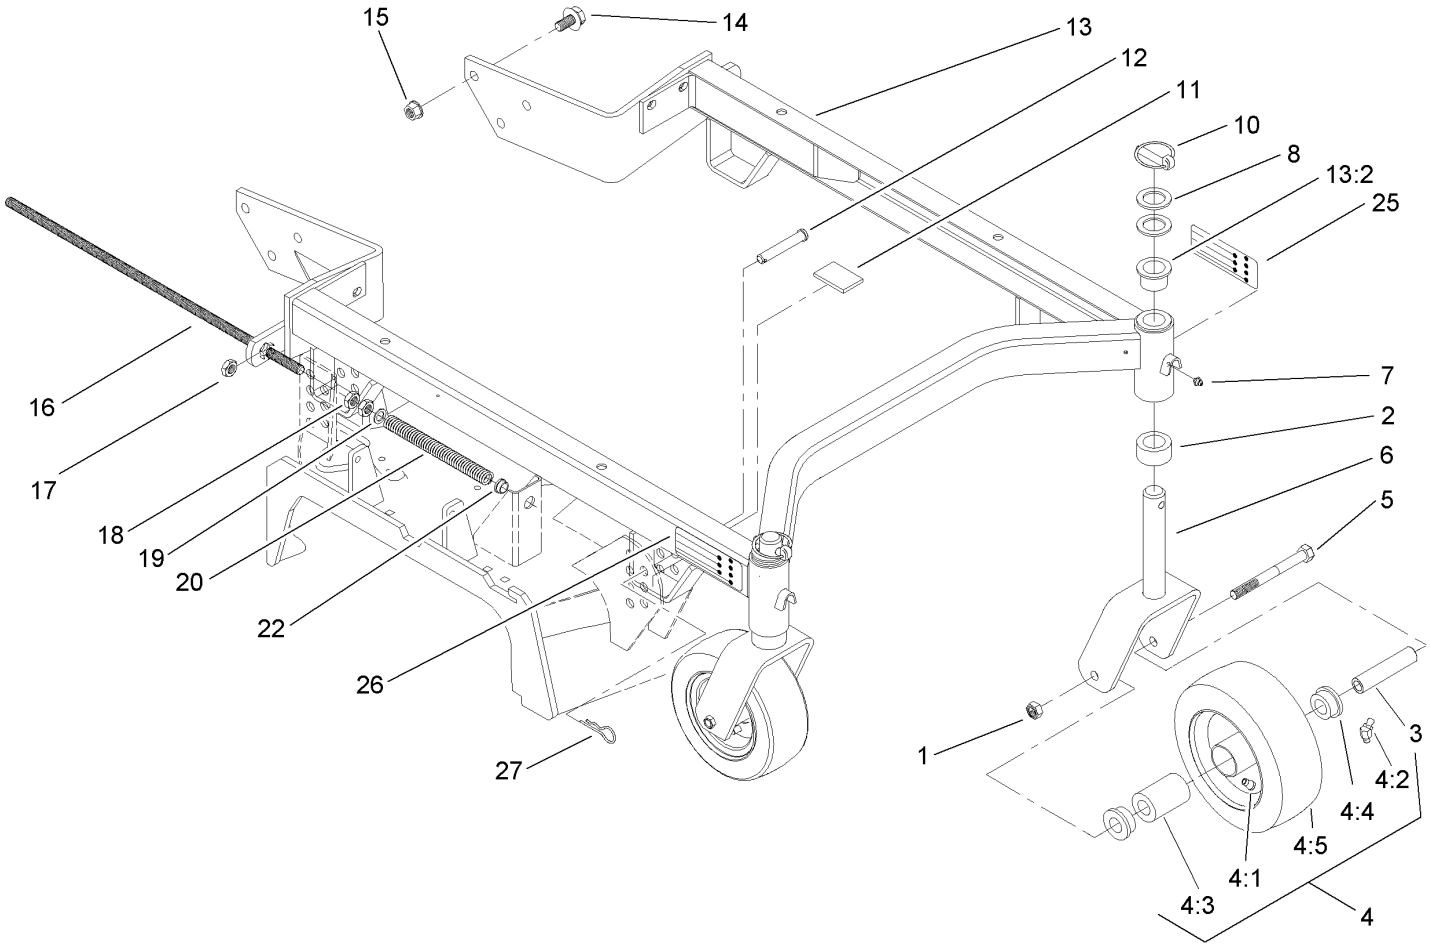

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	32153-5	2	Nut-Lock
2	93-1166	2	Spacer-Castor
3	100-6453	2	Bushing-Spanner
4	100-6451	2	Castor Wheel ASM
4:1	232-27	1	Stem-Valve
4:2	302-11	1	Fitting-Lube, 45 DEG
4:3	83-4740	1	Bearing
4:4	62-5580	2	Bearing-Outside
4:5	100-6452	1	Tire-Tubeless
5	325-19	2	Screw-HH
6	100-6455-01	2	Castor Fork ASM
7	302-5	2	Fitting-Grease
8	3-6781	8	Washer-Thrust
10	3290-384	2	Pin-Lynch
11	74-0340	4	Cushion-Rubber
12	283-55	4	Pin-Clevis
13	94-4175	1	44in Frame ASM
13:2	94-1291	4	Bushing
14	3234-6	6	Screw-HHF
15	32128-23	6	Nut-HF
16	74-0310	2	Shaft-Adjusting
17	3296-45	2	Nut-Lock, NI
18	3218-5	4	Nut-Jam
19	41-8440	2	Washer

Ref	Part No.	Qty.	Description
20	74-0290	2	Spring
22	256-156	2	Bushing-Flange
25	85-7450	1	Decal-Hoc, LH
26	85-7460	1	Decal-Hoc, RH
27	3290-355	4	Pin-Hair

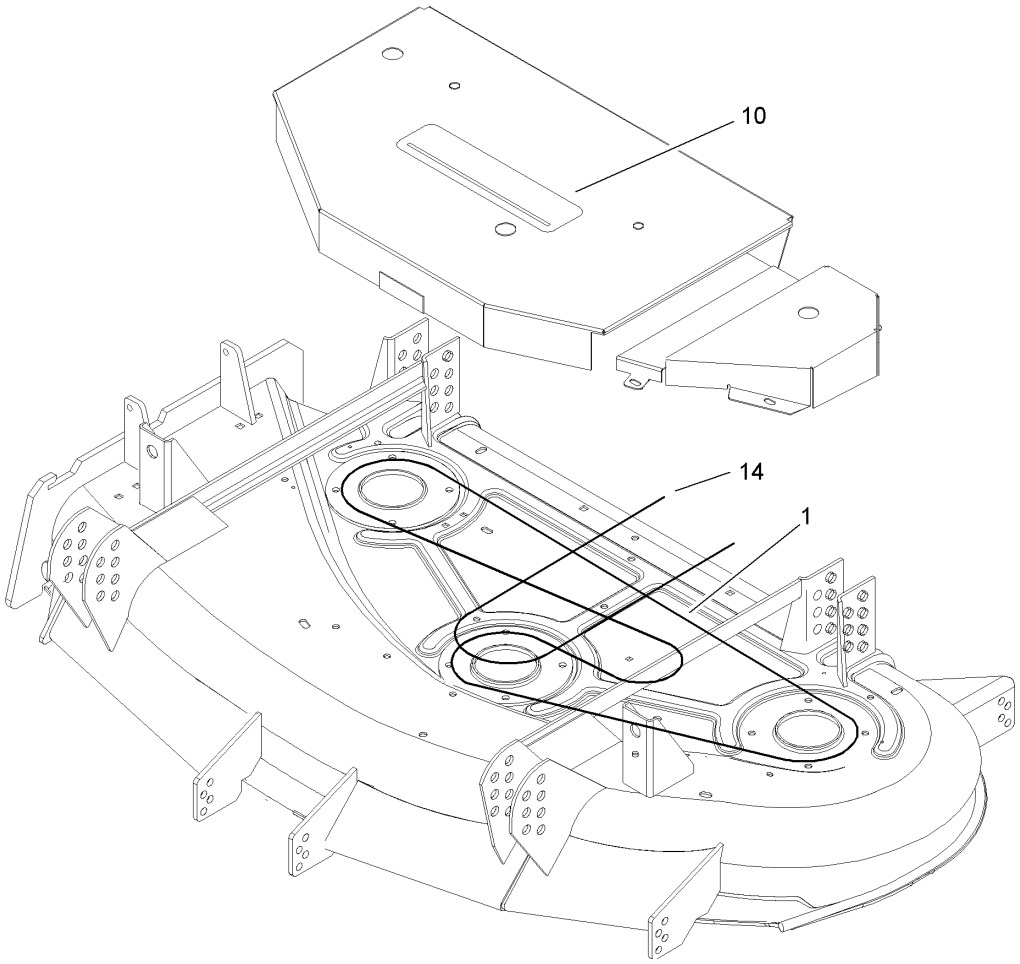

Belt and Decal Assembly

Ref	Part No.	Qty.	Description
1	27-1160	1	V-Belt
10	106-0704	1	Decal
14	54-2750	1	V-Belt, Drive

NOTES

NOTES

NOTES

TORO®