Form Number 3350-735 Rev A

Mid-Size ProLine, T-Bar, Gear Drive
15 HP with 52in Side Discharge Mower

Model No. 30319 - 250000001 and up.

Parts Catalog

Ordering Replacement Parts
To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers
Each Identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers
Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

©The Toro Company - 2004
All Rights Reserved

Register your product at www.Toro.com

Contents

Description	Page
Engine Installation Assembly	3
Fuel Tank Assembly	4
Lower Control Assembly	5
Transmission Drive Assembly	6
Wheel Drive and Brake Assembly	7
Upper Handle Assembly	8
Control Panel Assembly	9
Carrier Frame Assembly	10
Spindle, Pulley and Belt Assembly	11
Outer Spindle Assembly 106-0787	12
Spindle Assembly No. 106-0785	13
Deck Assembly	14
Deflector Assembly No. 107-4194	15
Drive Belt and Tensioner Assembly	16
Crankshaft Assembly Kohler CV15T-41629	17
Crankcase Assembly Kohler CV15T-41629	18
Oil Pan/Lubrication Assembly Kohler CV15T-41629	19
Head/Valve/Breather Assembly Kohler CV15T-41629	20
Ignition/Electrical Assembly Kohler CV15T-41629	21
Blower Housing and Baffle Assembly Kohler CV15T-41629	22
Starting System Assembly Kohler CV15T-41629	23
Fuel System Assembly Kohler CV15T-41629	24
Engine Control Assembly Kohler CV15T-41629	25
Air Intake/Filtration Assembly Kohler CV15T-41629	26
Exhaust Assembly Kohler CV15T-41629	27
Attachments and Accessories List	28

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HHFTF	hex head flange thread forming
HJ	hex jam
HLH	hex lag head
HOC	height-of-cut
HS	hex
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming
HYD	hydraulic
INC	incorporated
LH	left hand
NI	nylon insert
PPH	phillips pan head
PTH	phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SHWH	slotted hex washer head
SPH	slotted pan head
SQH	square head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	torx truss head
WH	wing head

Footnotes

❶ Not illustrated

❷ Not serviced separately

❸ Obtain Parts From Your Local Kohler Dealer

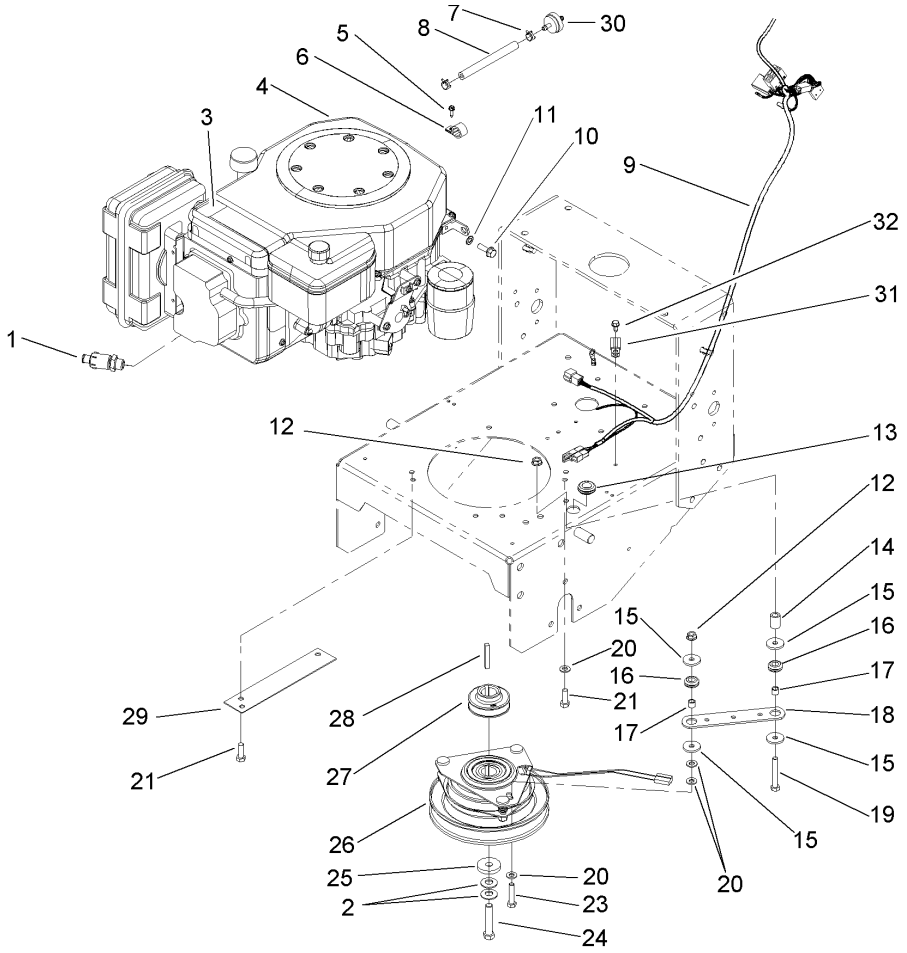

Engine Installation Assembly

Ref	Part No.	Qty.	Description
1	92-6877	1	Valve-Drain, Oil
2	1-603610	2	Washer-Spring
3	106-0699	1	Decal-Warning, Hot Surfaces
❷4		1	Engine-Kohler, Cv15t-41629
5	32144-19	1	Screw-SHWH
6	2412-87	1	Clamp-Cable
7	2412-98	2	Clamp
8	47-2982	1	Hose-Fuel
9	104-8136	1	Harness-Wire
10	33104-025	1	Screw-HHF
11	3255-8	1	Washer-Lock
12	32128-20	2	Nut-HF
13	237-124	1	Grommet
14	104-6373	1	Tube-Retainer
15	1-613235	4	Washer
16	1-633630	2	Grommet-Brake
17	1-633545	2	Spacer
18	1-633543-03	1	Strap-Clutch, Brake
19	322-11	1	Screw-HH
20	3256-23	5	Washer-Flat
21	33114-025	4	Screw-HH
23	322-7	1	Screw-HH
24	3212-9	1	Screw-HH
25	107-4136	1	Washer

Ref	Part No.	Qty.	Description
26	105-2635	1	Clutch / Brake
27	107-4112	1	Pulley-Drive
28	608006	1	Key-Square
29	94-5847-01	1	Cover-Pulley
30	56-6360	1	Filter-Fuel
31	2412-134	1	R-Clamp
32	12-3270	1	Screw
❶99	103-1964	1	Hose-Drain, Oil

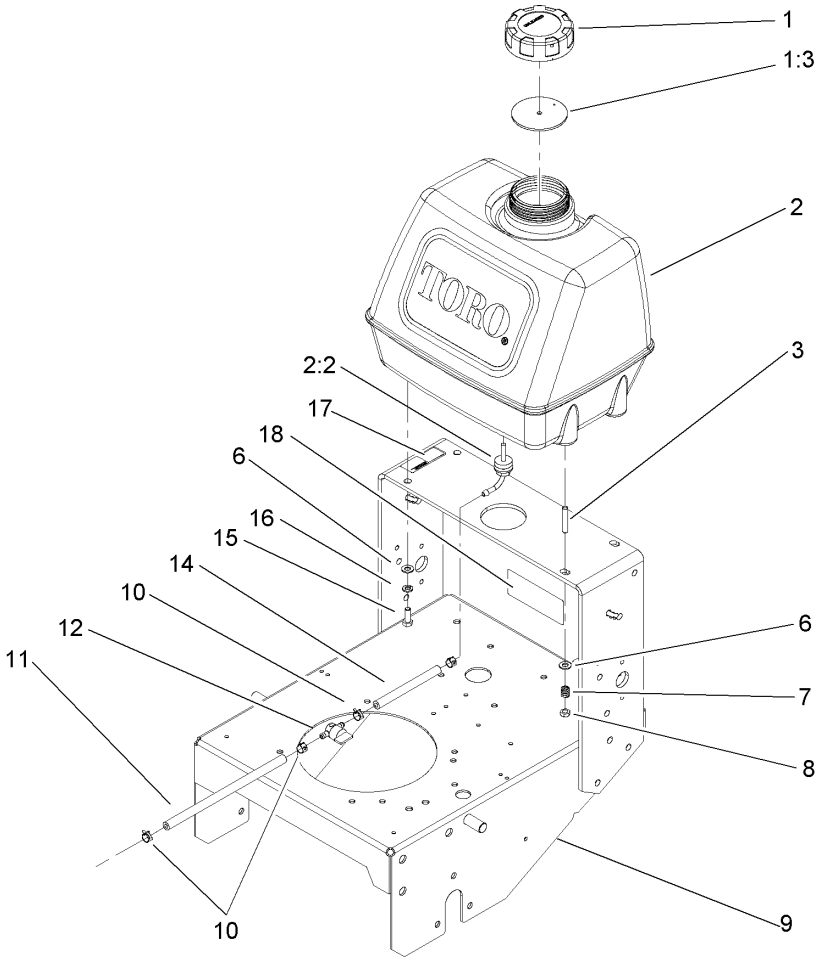

Fuel Tank Assembly

Ref	Part No.	Qty.	Description
1	88-3980	1	Gas Cap ASM
1:3	88-4010	1	Gasket-Cap, Gas
2	106-0730	1	Fuel Tank ASM
2:2	103-2605	1	Fitting-Fuel, Bulkhead
3	104-8121	2	Stud-Threaded
6	3256-23	4	Washer-Flat
7	1-633349	2	Spring-Tank, Fuel
8	3296-47	2	Nut-Lock, NI
9	106-0546-01	1	Gear Frame ASM
10	2412-98	4	Clamp
11	47-2982	1	Hose-Fuel
12	1-603770	1	Valve-Fuel
14	47-2966	1	Hose-Fuel
15	322-4	2	Screw-HH
16	3253-4	2	Washer-Lock
17	95-2814	1	Decal-Shut Off, Fuel
18	98-0776	1	Decal-Caution

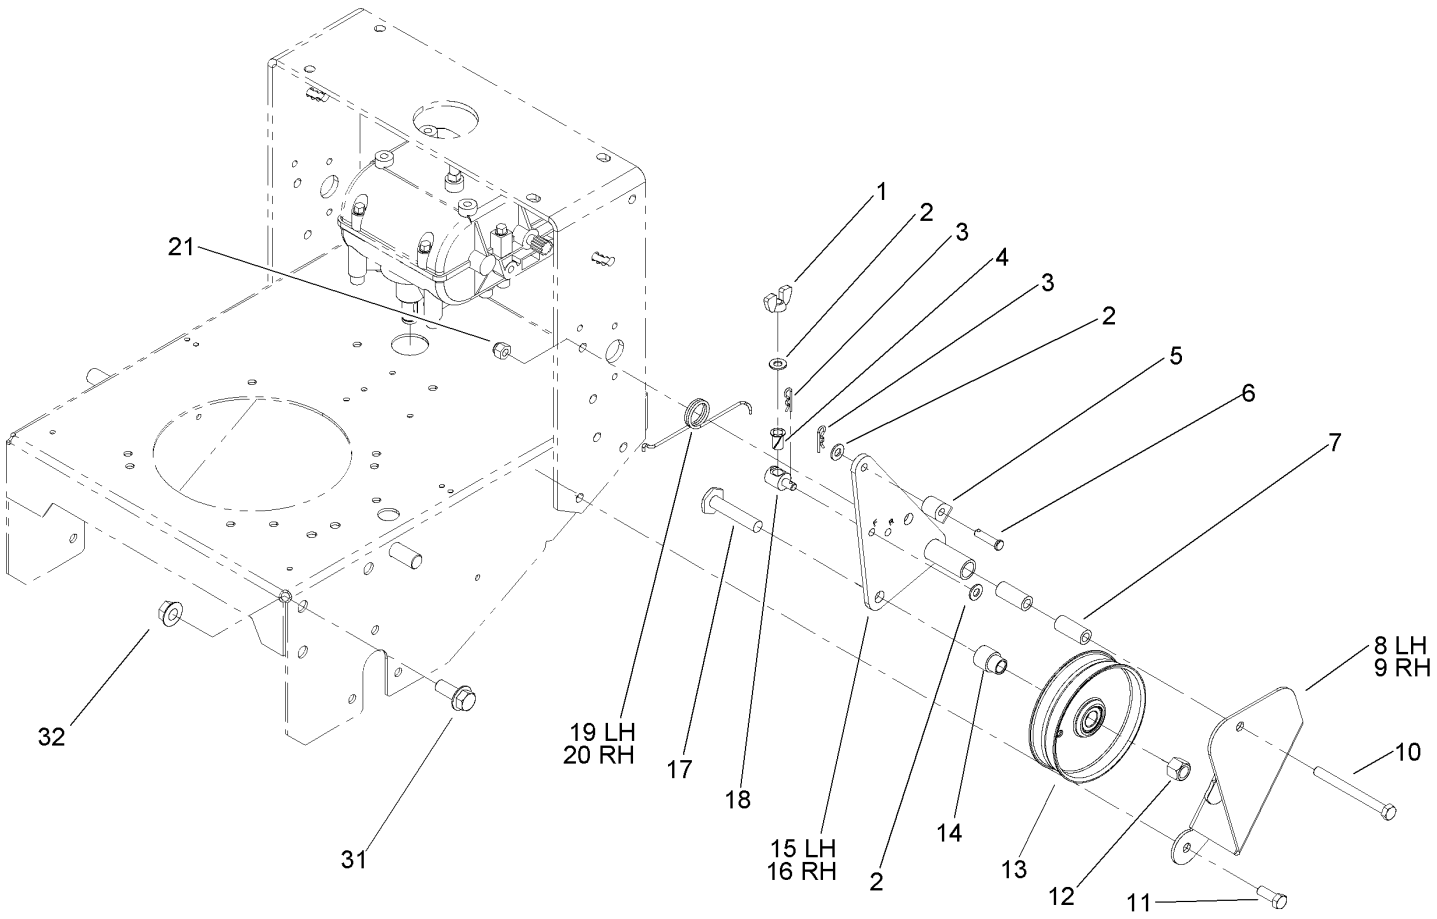

Lower Control Assembly

Ref	Part No.	Qty.	Description
1	32103-25	2	Nut-Wing
2	3256-23	6	Washer-Flat
3	3290-307	4	Pin-Hair
4	52-2890	2	Bushing-Nylon
5	74-0521	2	Fitting-Rod
6	283-6	2	Pin-Clevis
7	74-0040	4	Spacer-Pivot, Idler
8	67-6380-01	1	Bracket-Support, LH
9	67-6370-01	1	Bracket-Support, RH
10	323-16	2	Screw-HH
11	323-6	4	Screw-HH
12	3296-23	2	Nut-Lock, NI
13	95-2800	2	Pulley-Idler
14	95-2801	2	Spacer-Pulley
15	74-0220-01	1	Bracket-Idler, LH
16	74-0230-01	1	Bracket-Idler, RH
17	51-4450	2	Screw-Leveler
18	68-9690	2	Fitting-Rod
19	51-4380	1	Spring-Torsion, LH
20	51-4370	1	Spring-Torsion, RH
21	3296-39	6	Nut-Lock, NI
31	3234-32	6	Screw-HHF
32	32128-23	6	Nut-HF

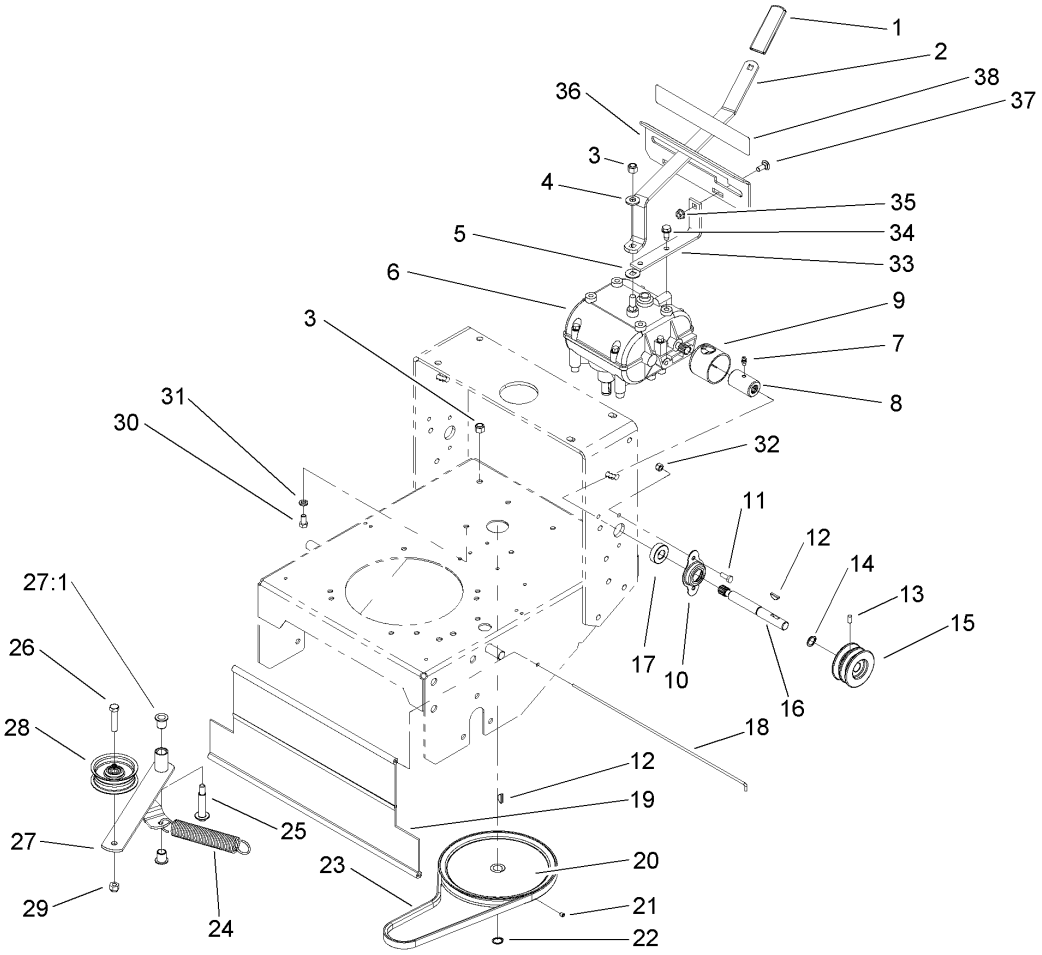

Transmission Drive Assembly

Ref	Part No.	Qty.	Description
1	47-1970	1	Grip
2	98-3274-03	1	Lever-Shift
3	3296-6	2	Nut-Lock
4	98-5975	1	Washer-Belleville
5	1-323379	1	Washer
6	1-323500	1	Transmission
7	302-5	2	Fitting-Grease
8	1-323680	2	Coupler
9	51-4220	2	Guard-Coupler
10	1-323254	2	Flange-Output
11	321-4	4	Screw-HH
12	3257-5	3	Key-Woodruff
13	3245-9	2	Screw-Set
14	32151-62	2	Ring-Retaining
15	105-2698	2	Pulley-Transmission
16	104-1102	2	Shaft-Output
17	1-323252	2	Bearing-Shaft
18	95-1529	1	Rod-Shield
19	95-1526	1	Shield-Trailing
20	105-5646	1	Pulley-Driven
21	3245-1	1	Screw-Set, HSH
22	32120-64	1	Ring-Snap, External
23	105-5668	1	V-Belt
24	68-2190	1	Spring

Ref	Part No.	Qty.	Description
25	27-6230	1	Bolt-Wheel
26	323-9	1	Screw-HH
27	16-7509	1	Lever-Idler
27:1	256-155	2	Bushing-Flange
28	62-4540	1	Pulley
29	3296-39	1	Nut-Lock, NI
30	322-2	4	Screw-HH
31	3253-4	4	Washer-Lock
32	3296-42	4	Nut-Lock, NI
33	1-323389-03	2	Bracket-Plate, Shift
34	9264964	4	Screw-Hwh, Thread Cut
35	32128-20	2	Nut-HF
36	1-323387-03	1	Plate-Shift
37	3230-1	2	Bolt-CARR
38	98-3256	1	Decal-Speed, Ground

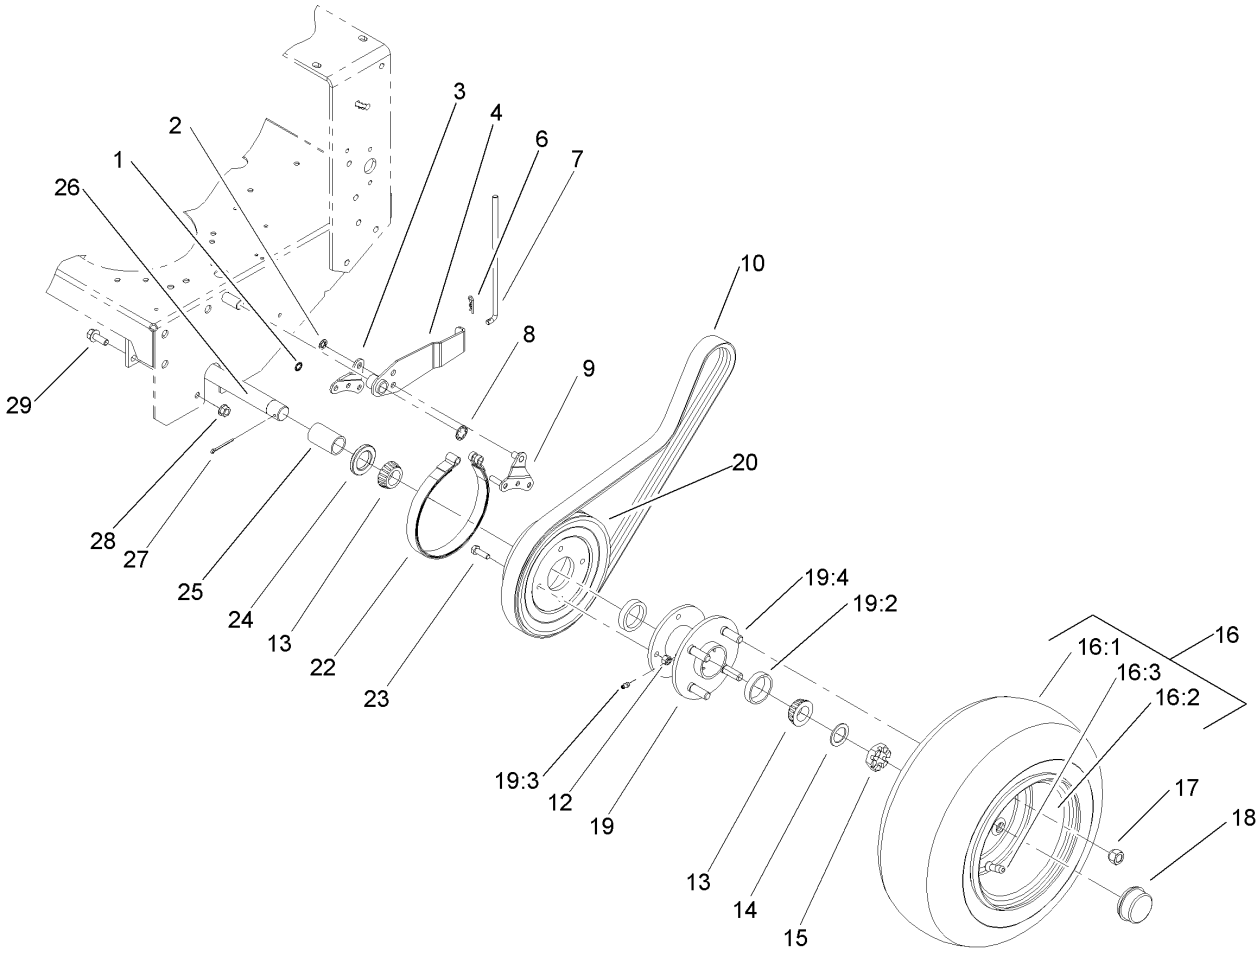

Wheel Drive and Brake Assembly

Ref	Part No.	Qty.	Description
1	32151-72	4	Ring-Retaining
2	32151-56	2	Ring-Retaining, External
3	106-8792	2	Plate-Link, Brake
4	106-8779-01	2	Brake Arm ASM
6	3290-307	2	Pin-Hair
7	51-4580	2	Rod-Brake
8	32151-40	2	Ring-Retaining
9	106-8773	2	Brake Link ASM
10	51-4290	2	V-Belt
12	3296-29	8	Nut-Lock, NI
13	254-94	4	Bearing-Cone, Tapered
14	1-523157	2	Washer-Spacer
15	1-809082	2	Nut-SHH
16	106-0892	2	Wheel And Tire ASM
16:1	104-6322	1	Tire
16:2	106-0893	1	Wheel
16:3	232-27	1	Stem-Valve
17	242-50	8	Nut-Lug
18	241-119	2	Cap-Dust
19	1-413333	2	Hub/wheel ASM
19:2	254-72	2	Bearing-Cup, Tapered
19:3	302-19	1	Fitting-Grease
19:4	1-633926	4	Stud-Wheel
20	106-5544	2	Pulley-Wheel

Ref	Part No.	Qty.	Description
22	1-323262	2	Band-Brake
23	322-5	8	Screw-HH
24	1-543511	2	Seal-Grease
25	104-1197	2	Spacer-Wheel
26	104-1196-01	1	Axle ASM
27	1-806800	2	Pin-Cotter
28	32128-21	6	Nut-HF
29	3234-11	6	Screw-HHF

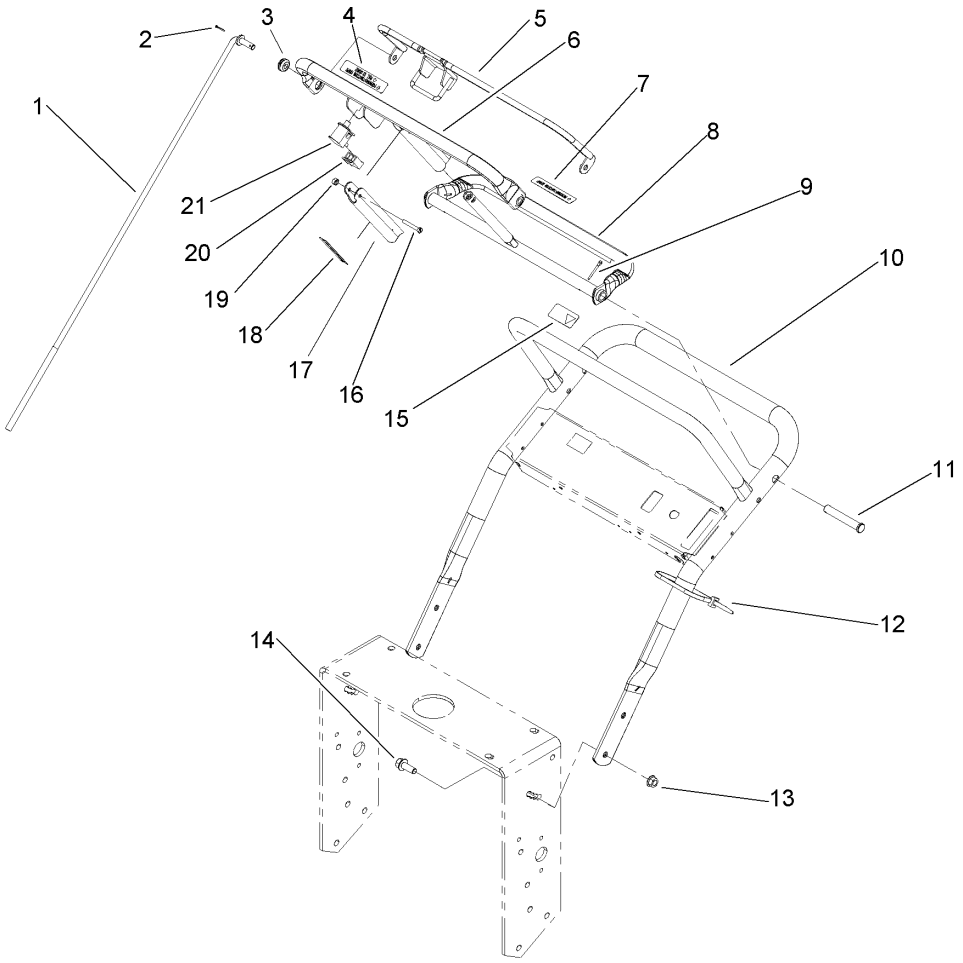

Upper Handle Assembly

Ref	Part No.	Qty.	Description
1	105-4677	2	Rod-Control
2	3272-4	2	Pin-Cotter
3	237-141	2	Grommet-Rubber
4	82-2290	1	Decal
5	82-7680-03	1	Bail ASM
6	82-7690-03	1	Bar-Control
7	82-2280	1	Decal
8	106-5477-03	1	Control Pivot ASM
9	3272-11	2	Pin-Cotter
10	105-3158-03	1	Upper Handle ASM
11	283-55	2	Pin-Clevis
12	3290-378	1	Tie-Cable
13	32128-21	4	Nut-HF
14	3234-11	4	Screw-HHF
15	98-4387	1	Decal-Protection, Ear
16	32105-1	1	Screw-SHH
17	51-4850-03	1	Lever-Brake, Parking
18	52-2010	1	Decal-Lever, Parking
19	3296-2	1	Nut-Lock
20	218-595	1	Connector-Body
21	82-2190	1	Switch-Bail

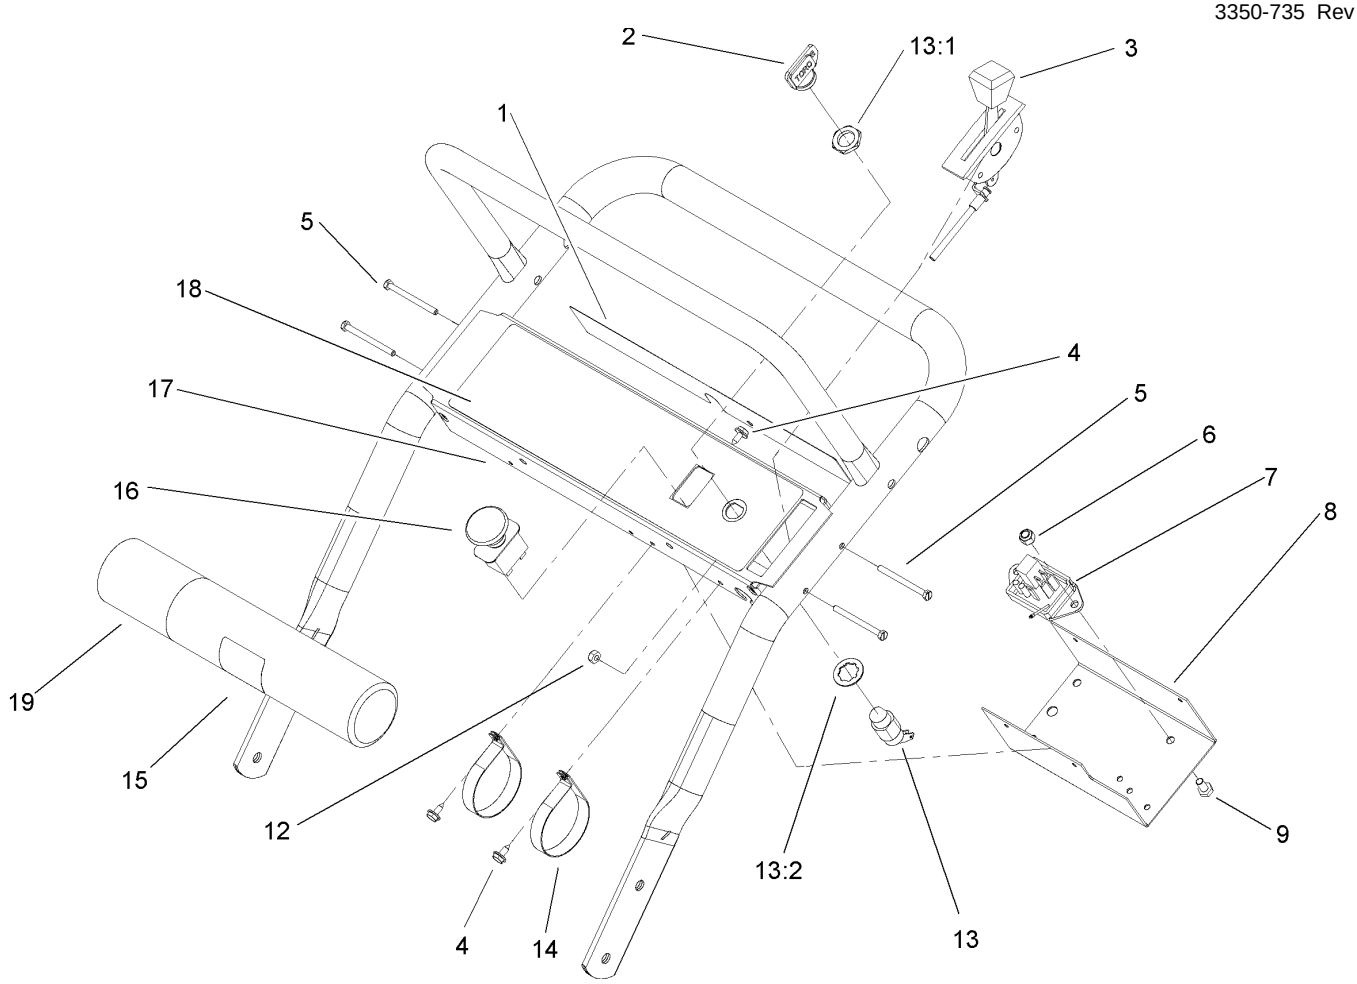

Control Panel Assembly

Ref	Part No.	Qty.	Description
1	105-0884	1	Decal-Danger
2	63-8360	1	Key-Ignition
3	107-4102	1	Cable-Throttle
4	32104-76	4	Screw
5	32105-14	4	Screw-SHH
6	3296-42	1	Nut-Lock, NI
7	104-8141	1	Module-Delay
8	93-1187-03	1	Panel-Bottom
9	321-2	1	Screw-HH
12	3296-2	4	Nut-Lock
13	29-5560	1	Switch-On/off
13:1	218-461	1	Nut-HH
13:2	3254-5	1	Washer-Tooth
14	2412-120	2	R-Clamp
15	104-7050	1	Housing-Manual
16	104-8140	1	Switch-PTO
17	104-8177-03	1	Panel-Control
18	106-5499	1	Decal-Control Panel
19	104-7048	1	Cap-Housing

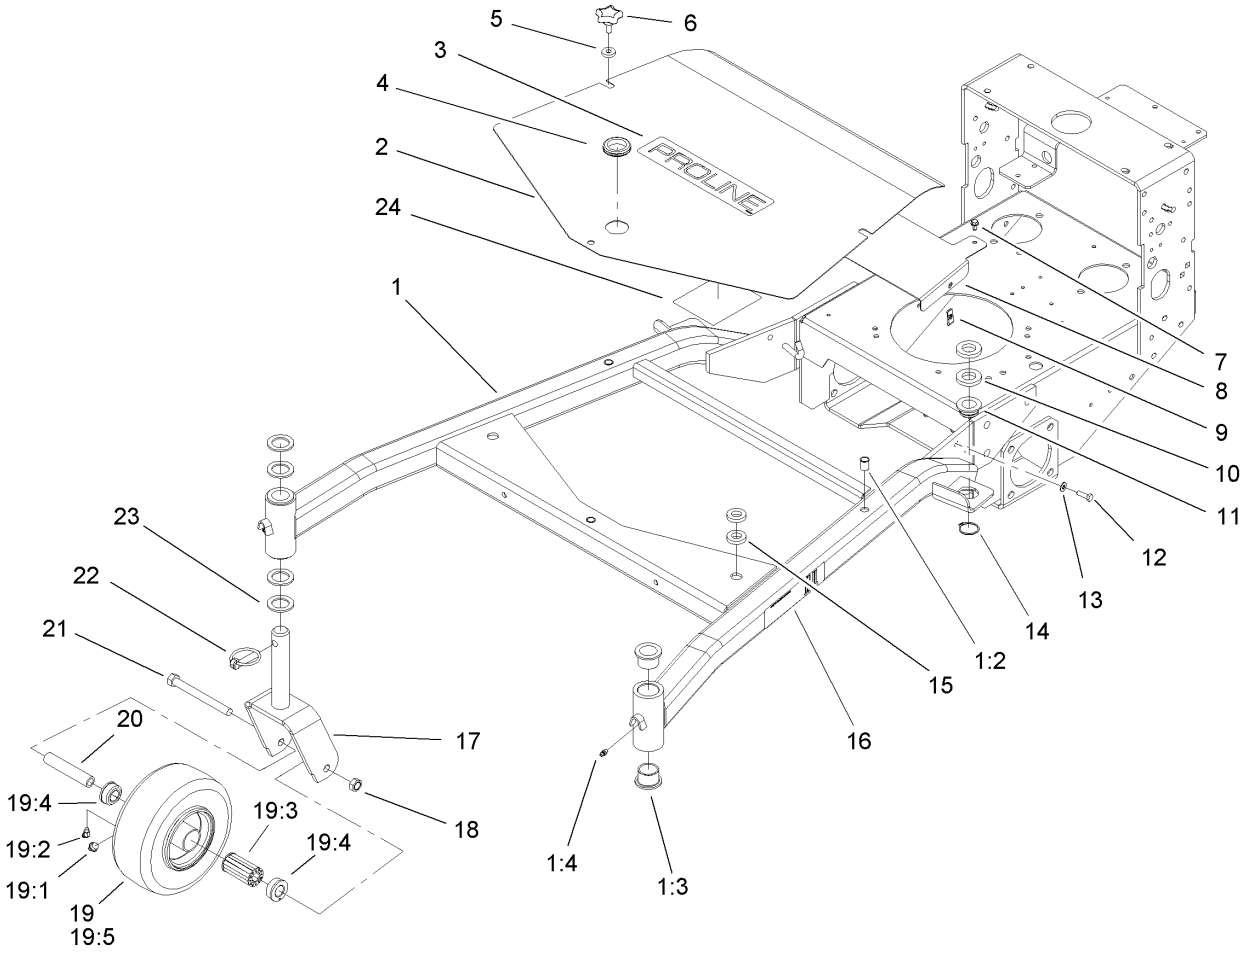

Carrier Frame Assembly

Ref	Part No.	Qty.	Description
1	106-0708	1	Carrier Frame ASM
1:2	32148-9	3	Insert-Nut
1:3	94-1291	4	Bushing
1:4	302-5	2	Fitting-Grease
2	106-3360-01	1	Cover-Frame, Carrier
3	106-0719	1	Decal
4	240-3	1	Grommet-Rubber
5	106-0565	3	Washer-Rubber
6	106-0887	3	Knob
7	12-3270	2	Screw
8	106-3361-01	1	Shield-Heat
9	3290-199	2	Nut-Speed
10	104-1105	4	Spacer-Support, Deck
11	1-513336	2	Bushing-Deck
12	321-5	2	Screw-HH
13	3256-22	2	Washer-Flat
14	32120-33	2	Ring-Retaining
15	105-0842	4	Spacer
16	106-0635	2	Decal-HOC
17	105-3159-01	2	Castor Fork ASM
18	32153-5	2	Nut-Lock, Side
19	100-6451	2	Castor Wheel ASM
19:1	232-27	1	Stem-Valve
19:2	302-11	1	Fitting-Lube, 45 DEG

Ref	Part No.	Qty.	Description
19:3	83-4740	1	Bearing
19:4	62-5580	2	Bearing-Outside
19:5	100-6452	1	Tire-Tubeless
20	100-6453	2	Bushing-Spanner
21	325-19	2	Screw-HH
22	283-71	2	Pin-Lynch
23	3-6781	8	Washer-Thrust
24	106-5503	1	Decal-Service, Hydro Tbar
24	106-5505	1	Decal-Service, Gear Tbar
24	106-5511	1	Decal-Service, Gear Pistol Grip
24	106-5513	1	Decal-Service, Hydro Pistol Grip

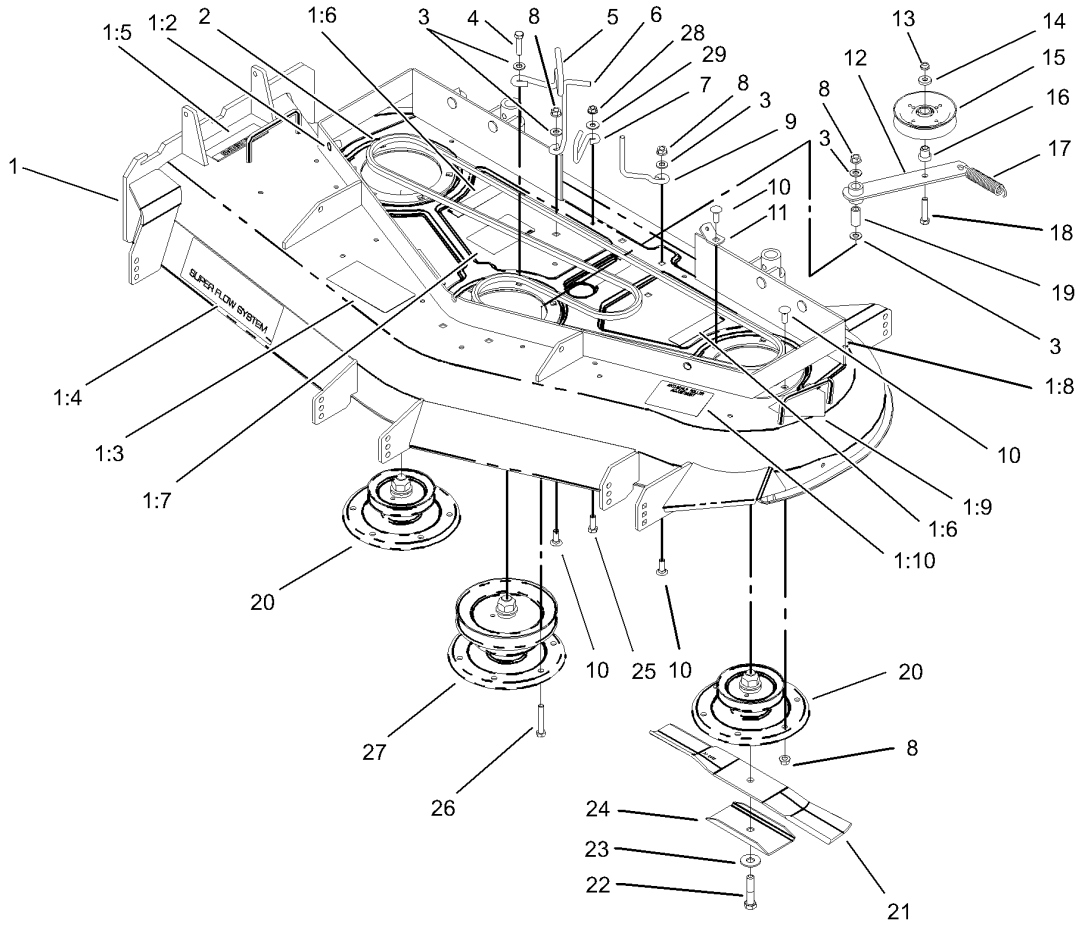

Spindle, Pulley and Belt Assembly

Ref	Part No.	Qty.	Description
1	106-0619	1	Deck ASM
1:2	32148-10	2	Insert-Threaded
1:3	66-1340	1	Decal-Danger
1:4	106-0705	1	Decal
1:5	93-1122	1	Decal-Danger
1:6	67-5360	3	Decal-Danger
1:7	104-8186	1	Decal-Routing, Belt
1:8	68-8340	1	Decal-Torque
1:9	43-8480	1	Decal-Danger
1:10	106-5532	1	Decal-Scalp, Anti
2	104-6397	1	V-Belt
3	3256-24	5	Washer-Flat
4	323-8	1	Screw-HH
5	105-0850	1	Guide-Belt
6	98-5980	1	Guide-Belt
7	104-6396	1	Guide-Belt
8	32128-21	20	Nut-HF
9	52-4780	1	Rod-Belt
10	3231-22	18	Screw-CARR
11	104-6374	1	Plate-Spring
12	104-6375	1	Idler Arm ASM
13	3296-5	1	Nut-Lock
14	7-0081	1	Washer-Flat
15	65-5940	1	Pulley-Idler

Ref	Part No.	Qty.	Description
16	104-6379	1	Bushing-Pulley
17	51-3650	1	Spring-Extension
18	3211-8	1	Screw-HH
19	51-3640	1	Sleeve
20	106-0787	2	Spindle Housing ASM
21	27-0990-03	3	Blade
22	44-2200	3	Screw-Blade
23	3256-6	3	Washer-Flat
24	92-9820	3	Stiffener-Blade
25	323-6	1	Screw-HH
26	323-11	1	Screw-HH
27	106-0785	1	Spindle Housing ASM
28	32128-25	1	Nut-HF
29	3256-3	1	Washer-Flat

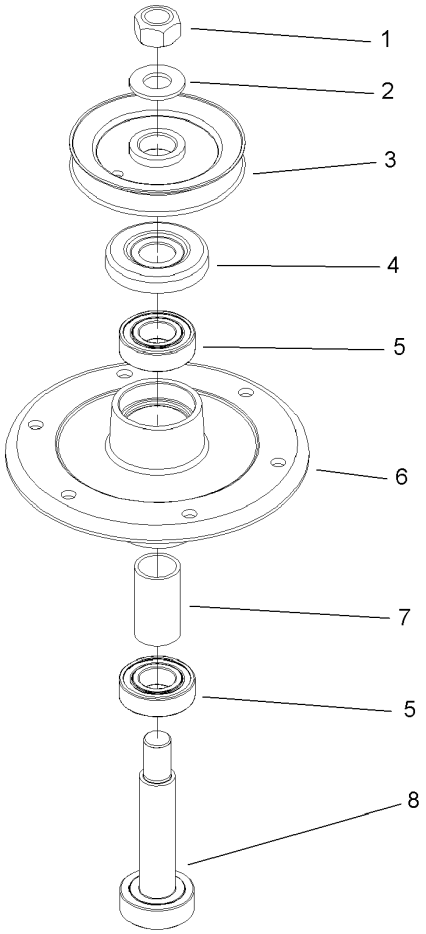

Outer Spindle Assembly 106-0787

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1118	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0782	1	Shaft-Spindle

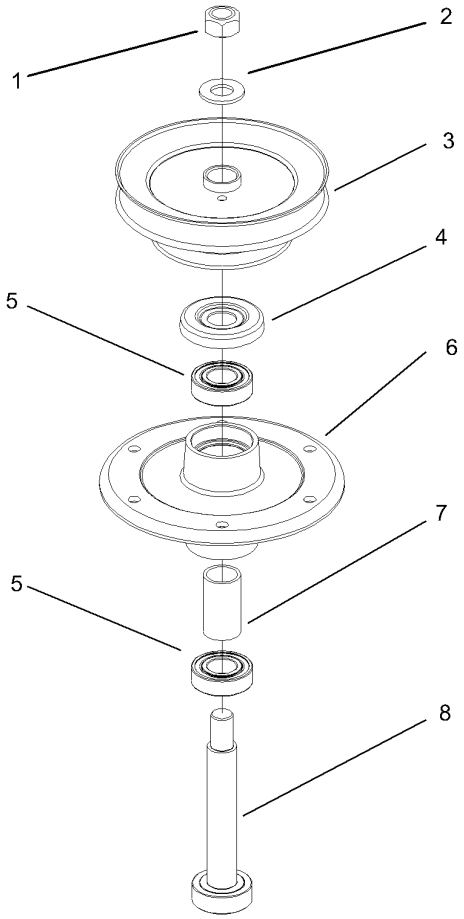

Spindle Assembly No. 106-0785

Ref	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer
3	104-1117	1	Pulley And Hub ASM
4	106-0873	1	Shield-Bearing
5	104-6325	2	Bearing
6	106-0819	1	Housing-Spindle
7	106-0795	1	Spacer-Bearing
8	106-0781	1	Shaft-Spindle

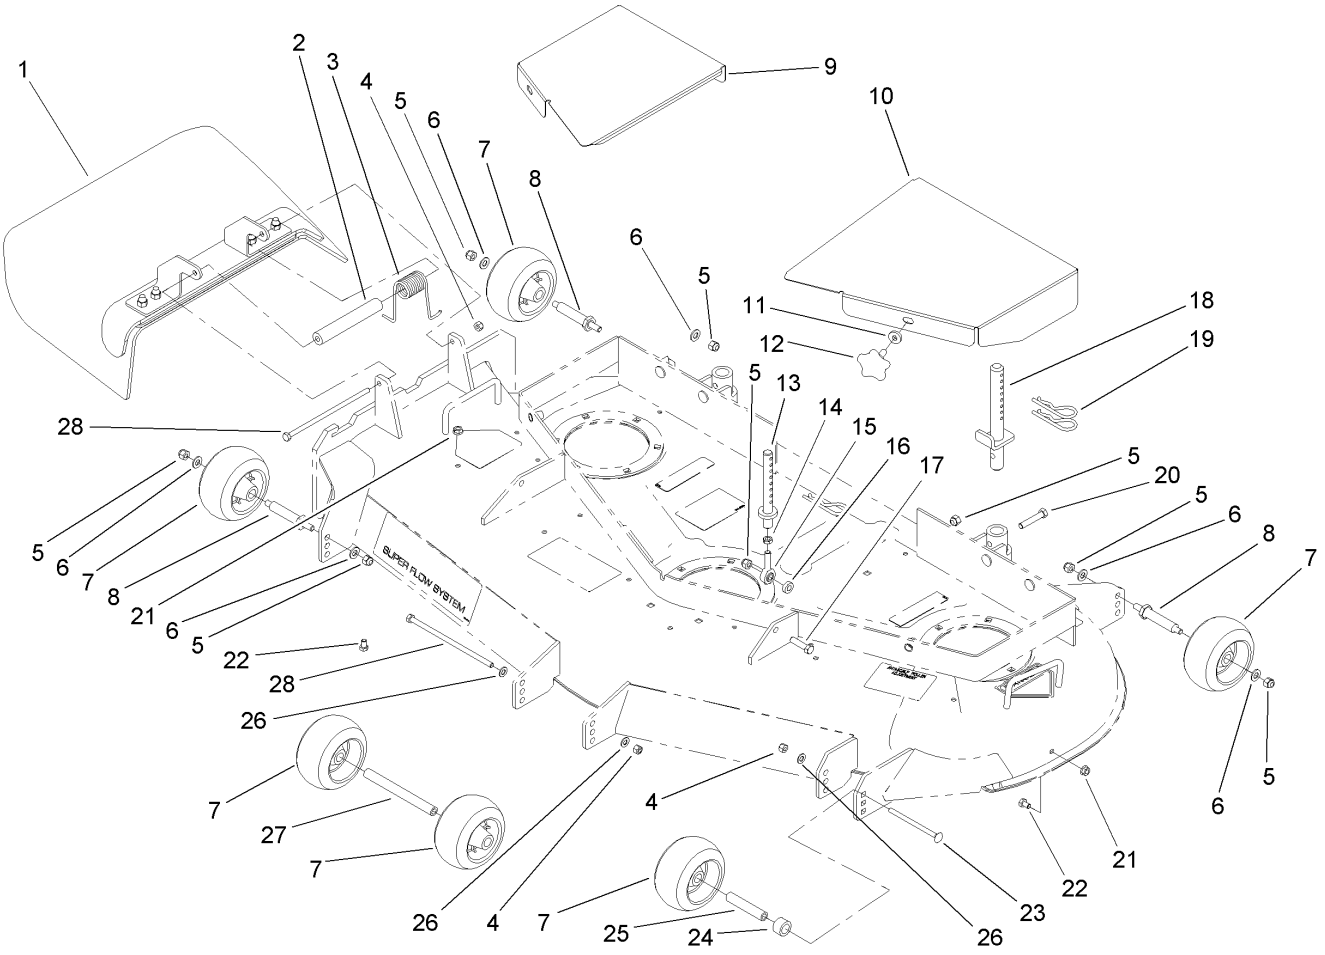

Deck Assembly

Ref	Part No.	Qty.	Description
1	107-4194	1	Deflector ASM
2	105-4622	1	Spacer
3	104-8554	1	Spring-Torsion
4	3296-29	3	Nut-Lock, NI
5	3296-39	10	Nut-Lock, NI
6	3256-24	6	Washer-Flat
7	1-603299	6	Roller-Anti Scalp
8	99-2842	3	Spacer
9	106-3363-01	1	Cover-Belt, RH
10	106-3362-01	1	Cover-Belt, LH
11	106-0565	2	Washer-Rubber
12	106-0887	2	Knob
13	106-0684	2	Front Pin ASM
14	3220-3	2	Nut-Jam
15	1-613204	2	Balljoint
16	104-1156	2	Spacer
17	323-8	2	Screw-HH
18	106-3365	2	Rear Pin ASM
19	3290-256	6	Pin-Hair
20	323-10	2	Screw-HH
21	32128-20	6	Nut-HF
22	322-1	6	Screw-HH
23	3230-30	1	Screw-CARR
24	106-0563	1	Spacer-Wheel

Ref	Part No.	Qty.	Description
25	106-0545	1	Bushing-Roller
26	3256-23	3	Washer-Flat
27	98-5967	1	Spacer-Wheel
28	322-50	2	Screw-HH

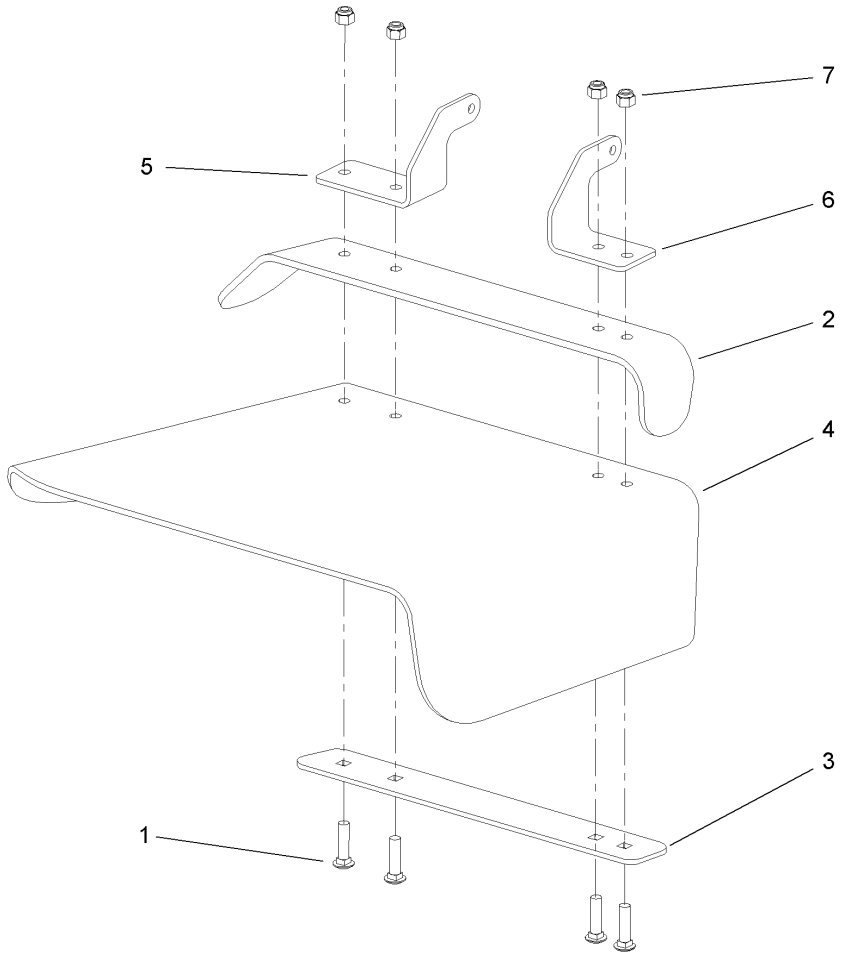

Deflector Assembly No. 107-4194

Ref	Part No.	Qty.	Description
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	108-5029	1	Deflector-Rubber
5	107-4197-01	1	Bracket-Hinge, Rear
6	107-4196-01	1	Bracket-Hinge, Front
7	3296-39	4	Nut-Lock, NI

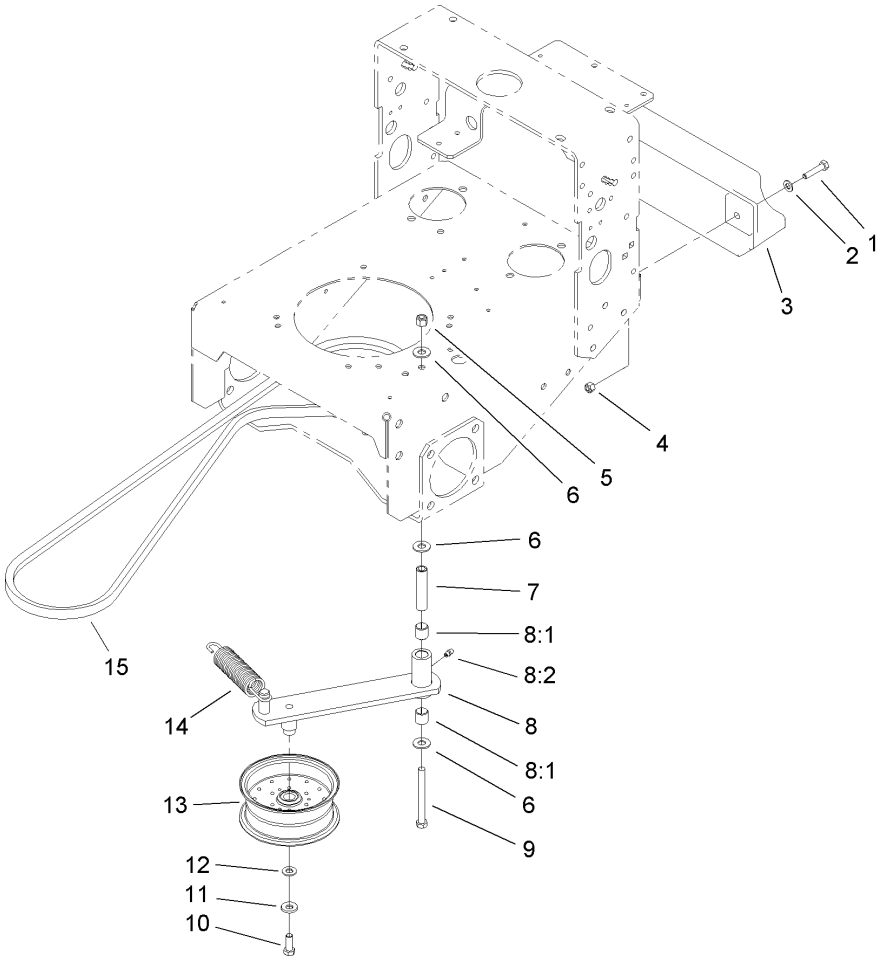

Drive Belt and Tensioner Assembly

Ref	Part No.	Qty.	Description
1	322-7	2	Screw-HH
2	3256-23	2	Washer-Flat
3	105-3173-01	1	Weight-Rear
4	3296-29	2	Nut-Lock, NI
5	3296-39	1	Nut-Lock, NI
6	52-2860	3	Washer
7	104-6377	1	Tube-Idler
8	106-0734	1	Idler Arm ASM
8:1	1-513034	2	Sleeve-Bearing
8:2	302-5	1	Fitting-Grease
9	323-42	1	Screw-HH
10	323-6	1	Screw-HH
11	98-5975	1	Washer-Belleville
12	3256-24	1	Washer-Flat
13	1-413099	1	Pulley-Idler
14	105-8443	1	Spring-Extension
15	106-0632	1	V-Belt

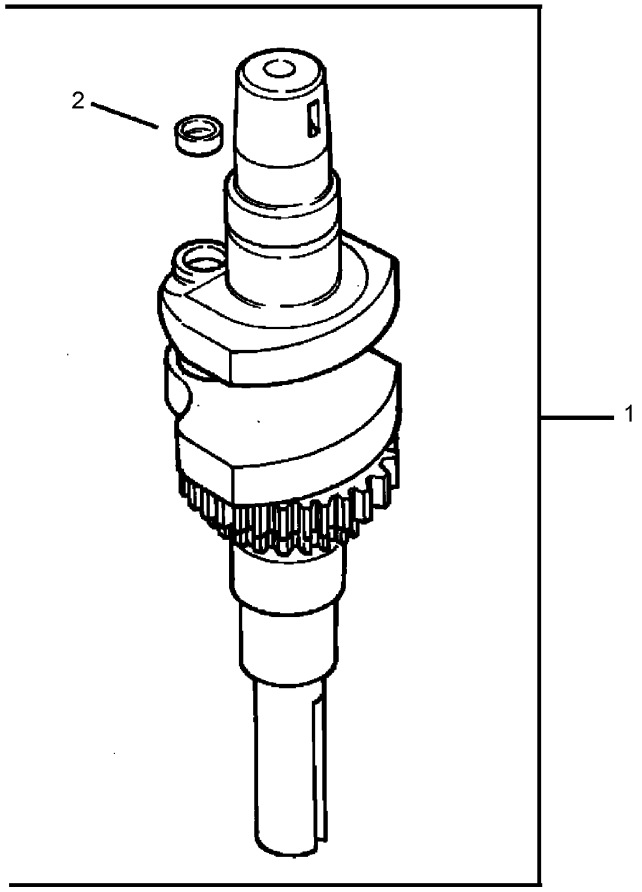

Crankshaft Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 014 30-S	1	Crankshaft (Includes 2)
❸2	12 139 01-S	1	Plug-Cup

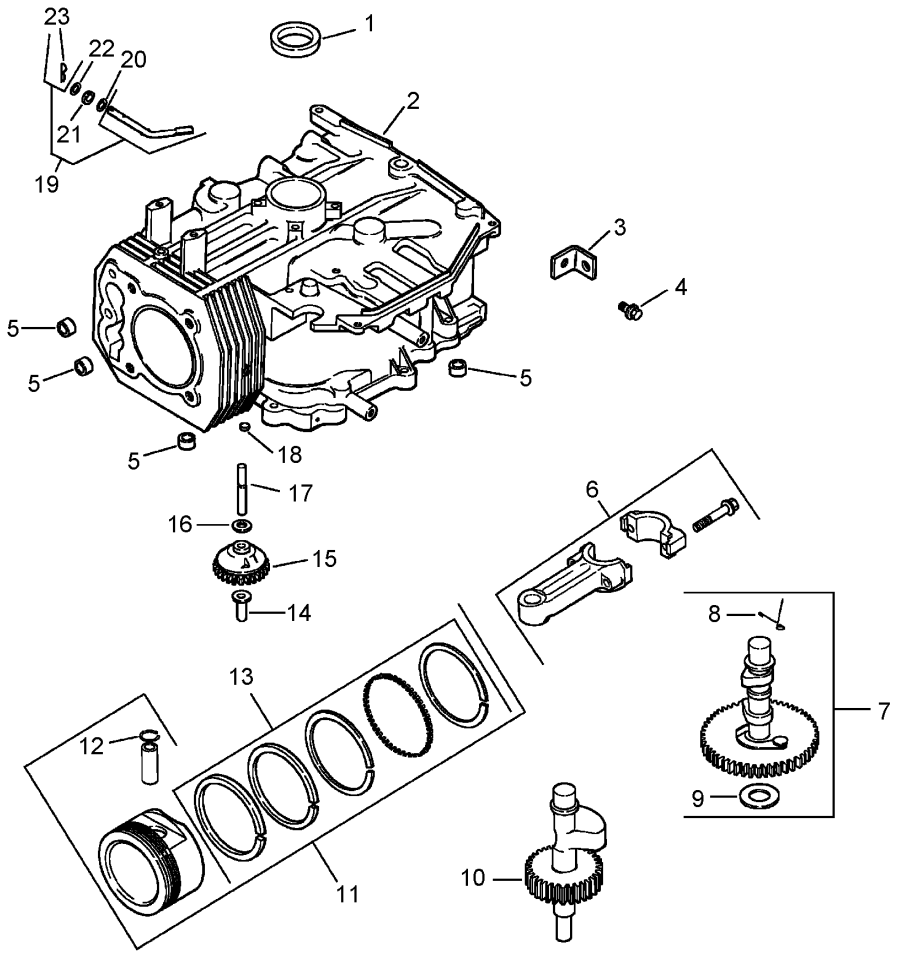

Crankcase Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 032 03-S	1	Seal-Oil, Front
❸2		1	Crankcase (Use: Short Block 12 522 18)
❸3	12 445 02-S	1	Strap-Lifting
❸4	M-839025-S	1	Screw-Hex Flange, M8x1.25x25
❸5	24 380 13-S	4	Pin-Locating
❸6	12 067 05-S	1	Rod-Connecting (Std.)
❸	12 067 06-S	1	Rod-Connecting (.25)
❸7	12 755 49-S	1	Kit, Camshaft (Includes 8,9)
❸8	12 089 31-S	1	Spring-Actuating
❸9	12 422 08-S	1	Shim-Camshaft, Blue
❸	12 422 09-S	1	Shim-Camshaft, Red
❸	12 422 10-S	1	Shim-Camshaft, Yellow
❸	12 422 11-S	1	Shim-Camshaft, Green
❸	12 422 12-S	1	Shim-Camshaft, Gray
❸	12 422 13-S	1	Shim-Camshaft, Black
❸	12 422 07-S	1	Shim-Camshaft, White
❸10	12 144 27-S	1	Shaft-Balance
❸11	12 874 07-S	1	Piston W/ring Set (Std) (Includes 12,13)
❸	12 874 11-S	1	Piston W/ring Set (.08)
❸	12 874 08-S	1	Piston W/ring Set (.25)
❸	12 874 09-S	1	Piston W/ring Set (.50)
❸12	12 018 02-S	2	Retainer-Pin, Piston

Ref	Part No.	Qty.	Description
❸13	12 108 07-S	1	Ring Set (Std. & .08)
❸	12 108 08-S	1	Ring Set (.25)
❸	12 108 09-S	1	Ring Set (.50)
❸14	12 380 01-S	1	Pin-Governor Regulating
❸15	12 043 05-S	1	Gear-Governor
❸16	M-631005-S	1	Washer-Plain (6 Mm)
❸17	12 144 02-S	1	Shaft-Governor Gear
❸18	52 139 09-S	1	Plug-Cup
❸19	12 755 64-S	1	Kit, Governor Cross Shaft W/clip (Includes 23)
❸20	X-25-102-S	1	Washer-Plain, 1/4in
❸21	12 032 01-S	1	Seal-Cross Shaft, Governor
❸22	M-631015-S	1	Washer-Plain, 6mm
❸23	12 154 05-S	1	Clip-Pin, Hitch

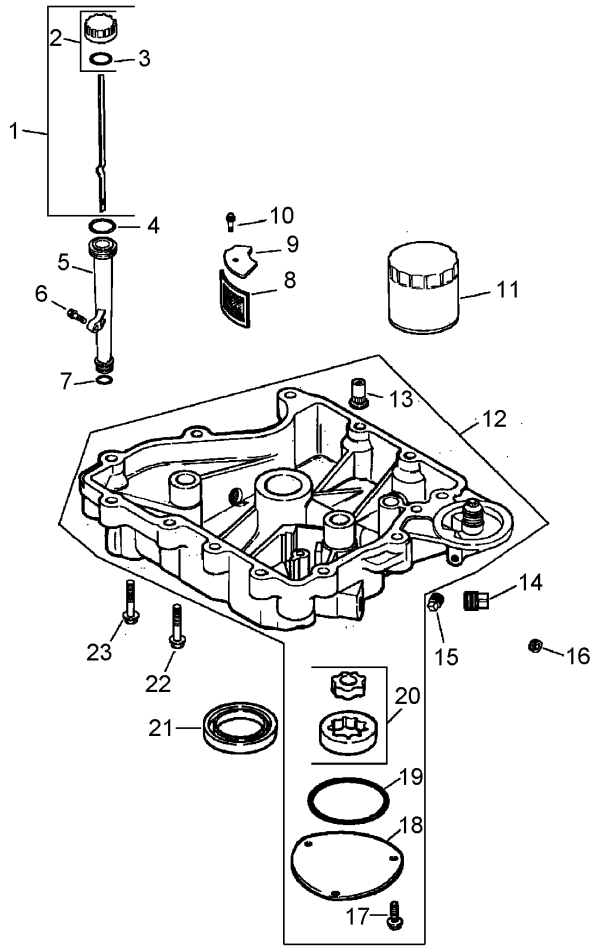

Oil Pan/Lubrication Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 038 01-S	1	Dipstick ASM (Includes 2,3)
❸2	25 755 13-S	1	Kit, Oil Fill Cap (Includes 3)
❸3	25 153 02-S	1	O-Ring
❸4	12 153 02-S	1	O-Ring (Upper Oil Fill Tube)
❸5	12 123 04-S	1	Tube-Fill, Oil
❸6	M-545020-S	1	Screw-Hex Flange, M5x0.8x20
❸7	12 153 01-S	1	O-Ring (Lower Oil Fill Tube)
❸8	25 162 07-S	1	Screen-Pickup, Oil
❸9	12 096 03-S	1	Cover-Screen, Oil Pickup
❸10	M-545016-S	1	Screw-Hex Flange, M5x0.8x16
❸11	12 050 01-S	1	Filter-Oil
❸12	12 199 50-S	1	Pan Asm, Oil (Includes 13, 16-19)
❸13	25 462 09-S	1	Valve-Relief, Oil Pressure
❸14	25 139 57-S	2	Plug-Sq. Hd. 3/8 N.p.t.f.
❸15	25 139 52-S	1	Plug-Pipe, 1/8in
❸16	25 139 62-S	1	Plug, Pipe 3/8in Hex Ctsk
❸17	M-545016-S	3	Screw-Hex Flange, M5x0.8x16
❸18	12 096 34-S	1	Cover-Pump, Oil
❸19	12 153 06-S	1	O-Ring (Oil Pump Cover)
❸20	12 393 01-S	1	Oil Pump ASM
❸21	12 032 03-S	1	Seal-Oil, Front
❸22	24 086 16-S	10	Screw-Hex Flange, M8x1.25x45
❸23	24 086 17-S	1	Screw-Hex Flange, M8x1.25x45

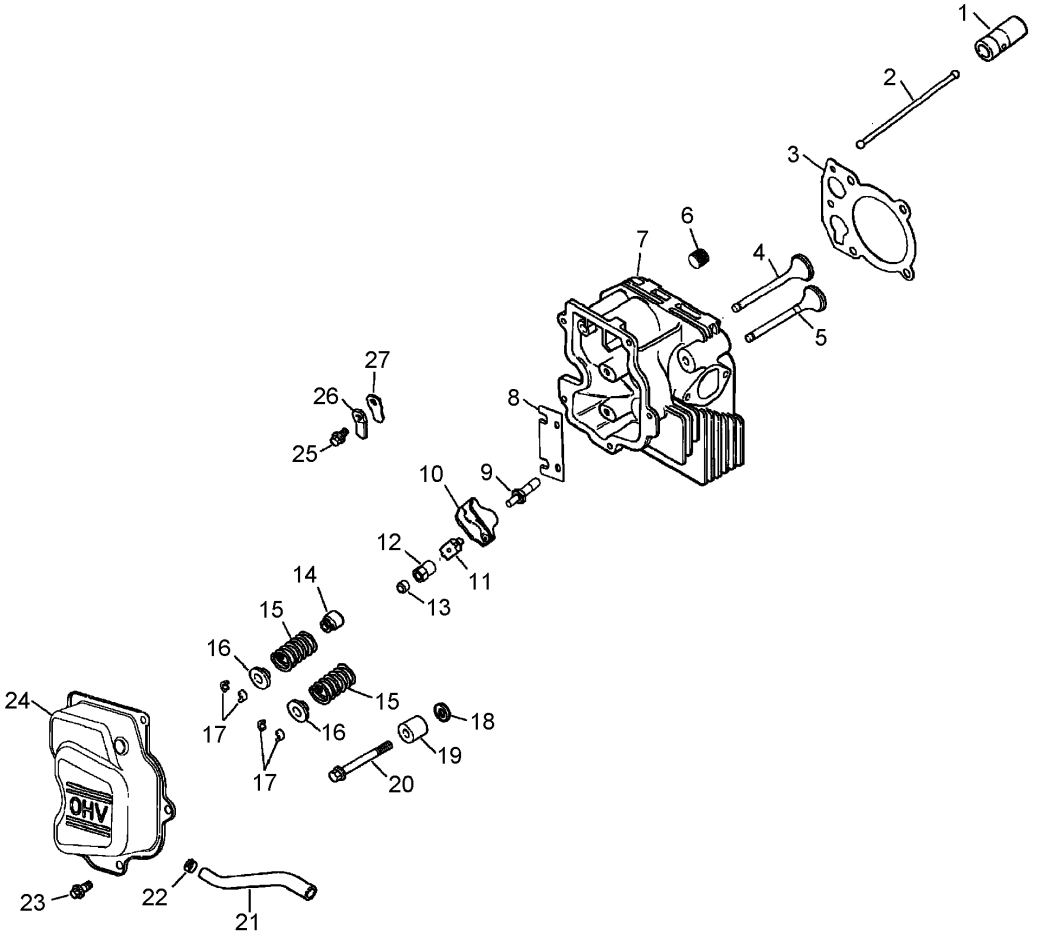

Head/Valve/Breather Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	25 351 01-S	2	Lifter-Valve
❸2	12 411 04-S	2	Rod-Push
❸3	12 041 10-S	1	Gasket-Head, Cylinder
❸4	12 017 01-S	1	Valve-Intake (Std.)
❸5	12 016 01-S	1	Valve-Exhaust (Std.)
❸6	25 139 60-S	1	Plug-Pipe, 1/8in Allen Head
❸7	12 318 19-S	1	Head-Cylinder
❸8	12 146 22-S	2	Plate-Guide
❸9	25 072 12-S	2	Stud-Rocker
❸10	25 186 01-S	2	Arm-Rocker
❸11	12 599 03-S	2	Pivot-Arm, Rocker
❸12	25 100 29-S	2	Nut-Hex
❸13	25 086 112-S	2	Screw-Set
❸14	66 032 05-S	2	Seal-Valve Stem
❸15	12 089 34-S	2	Spring-Valve
❸16	12 173 01-S	2	Cap-Spring, Valve
❸17	12 755 03-S	2	Retainer Kit
❸18	12 468 05-S	1	Washer-Plain, 13/32in
❸19	12 112 13-S	1	Spacer-Head Bolt, Exhaust Port
❸20	20 086 02-S	5	Screw-Hf, M10x1.5x81
❸21	25 237 14-S	1	Clamp-Breather
❸22	12 326 18-S	1	Hose-Breather
❸23	M-645016-S	3	Screw-Hex Flange, M6x1.0x16
❸24	12 096 47-S	1	Cover-Valve

Ref	Part No.	Qty.	Description
❸25	M-545010-S	1	Screw-Hex Flange, M5x0.8x10
❸26	66 018 04-S	1	Retainer-Breather Reed
❸27	12 402 02-S	1	Reed-Breather
❶❸	12 017 02-S	1	Valve-Intake (.25)
❶❸	12 016 02-S	1	Valve-Exhaust (.25)
❶❸	12 041 01-S	1	Gasket-Carburetor
❶❸	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 041 03-S	1	Gasket-Manifold, Exhaust

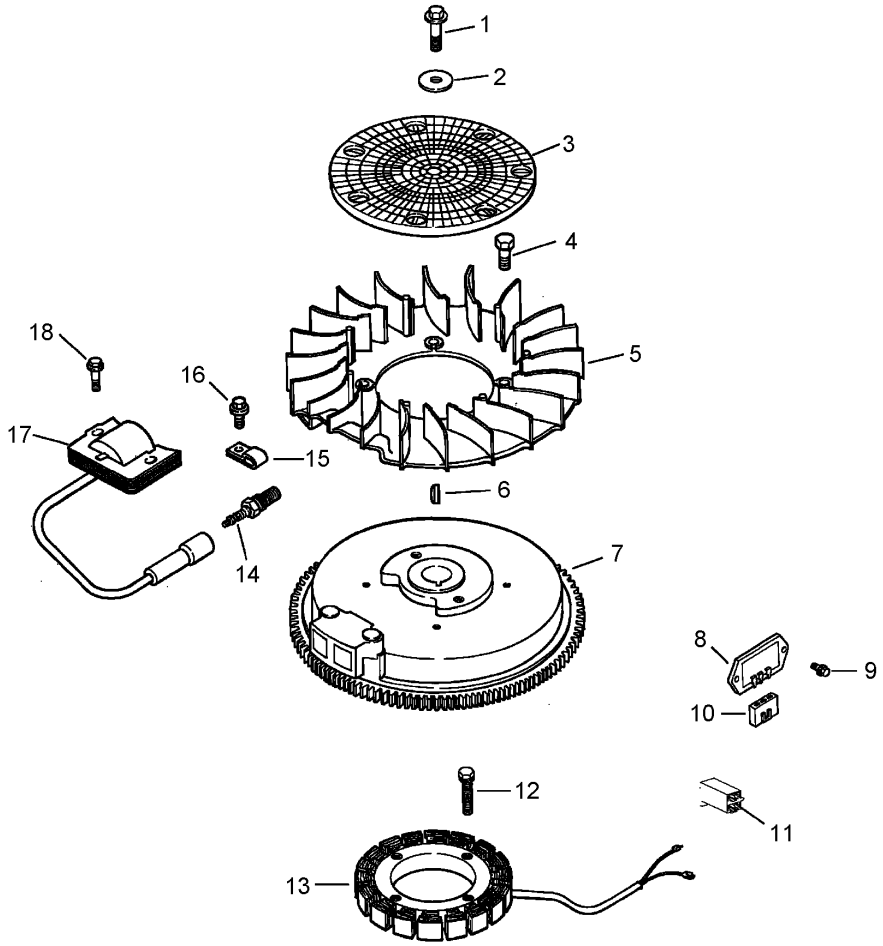

Ignition/Electrical Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 086 14-S	1	Screw-Hex Flange, M10x1.5x46
❸2	12 468 03-S	1	Washer-Plain (3/8)
❸3	24 162 03-S	1	Screen-Grass
❸4	25 086 47-S	4	Bolt-Shoulder, M6x1.0x16
❸5	12 157 03-S	1	Fan
❸6	X-42-15-S	1	Key
❸7	12 025 56-S	1	Flywheel
❸8	12 403 01-S	1	Rectifier-Regulator
❸9	M-639016-S	2	Screw-Hf, M6x1.0x16
❸10	236602-S	1	Connector (3 Contact)
❸11	41 155 03-S	1	Connector–contact, Two
❸12	M-548025-S	2	Screw-Hex. Cap, M5x0.8x25
❸13	237878-S	1	Kit, Stator (Includes 25 452 01-S)
❸14	12 132 02-S	1	Spark Plug
❸15	X-728-1-S	2	Clip
❸16	M-545010-S	2	Screw-Hex Flange, M5x0.8x10
❸17	12 584 05-S	1	Module-Ignition
❸18	M-545020-S	2	Screw-Hex Flange, M5x0.8x20
❶❸	X-22-11-S	1	Washer-Lock, 1/4in
❶❸	12 518 01-S	1	Lead, White, Ground To Kill (19in, 18 Gauge, Fully Insulated Push On Tab And Uninsulated Push On Tab Terminals)
❶		1	Female Terminal And Uninsulated Female Terminal)
❶❸	25 518 05-S	1	Lead-Black, Rectifier To Connector (5in, 14 Gauge, Uninsulated Push On Tab Terminals)
		1	Terminals)
❶❸	24 518 12-S	1	Lead-Black (5in, 12 Gauge, Insulated Grip Barrel Eyelet Terminals)
		1	Barrel Eyelet Terminal)
❶❸	25 452 01-S	1	Terminal

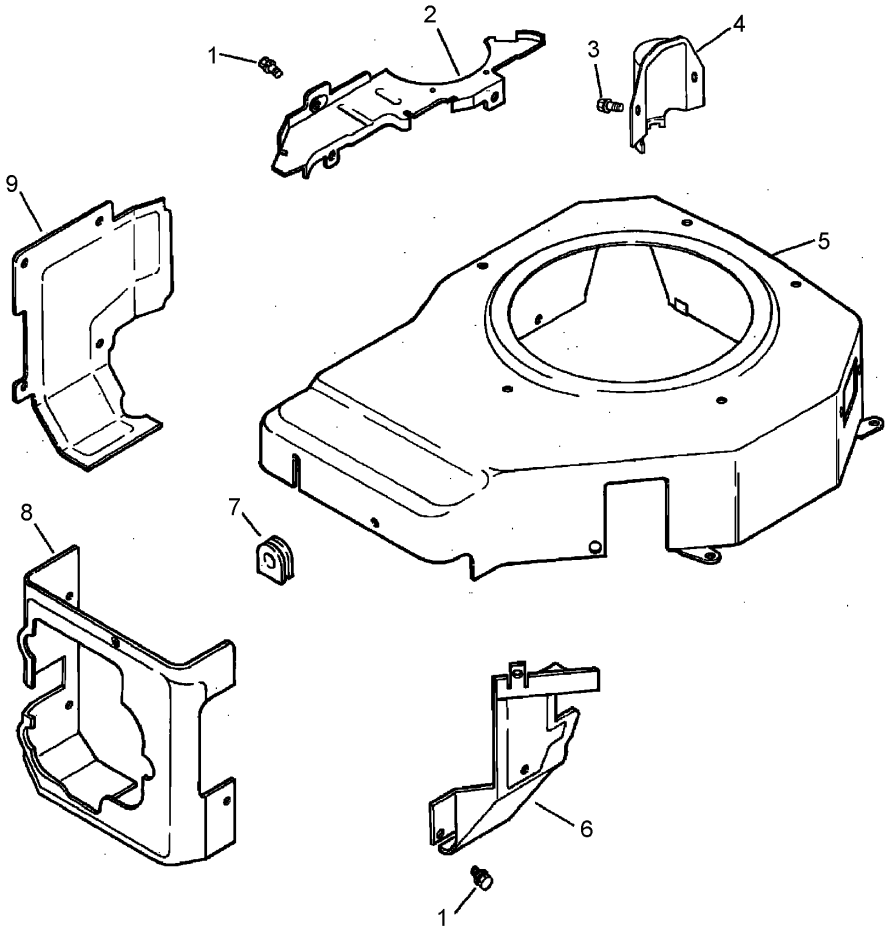

Blower Housing and Baffle Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-545010-S	9	Screw-Hex Flange, M5x0.8x10
❸2	12 146 07-S	1	Plate-Housing, Blower
❸3	M-550010-S	6	Screw-Hf, M5x0.8x10
❸4	12 096 29-S	1	Cover-Starter
❸5	12 027 68-S	1	Housing, Blower
❸6	12 063 10-S	1	Baffle-Side, Intake
❸7	12 313 03-S	1	Grommet-Spark Plug
❸8	12 063 08-S	1	Baffle-Head, Cylinder
❸9	12 063 19-S	1	Baffle (Cylinder)
❸	12 113 124-S	1	Decal-15hp
❸	25 113 39-S	1	Decal-Clear Lamination

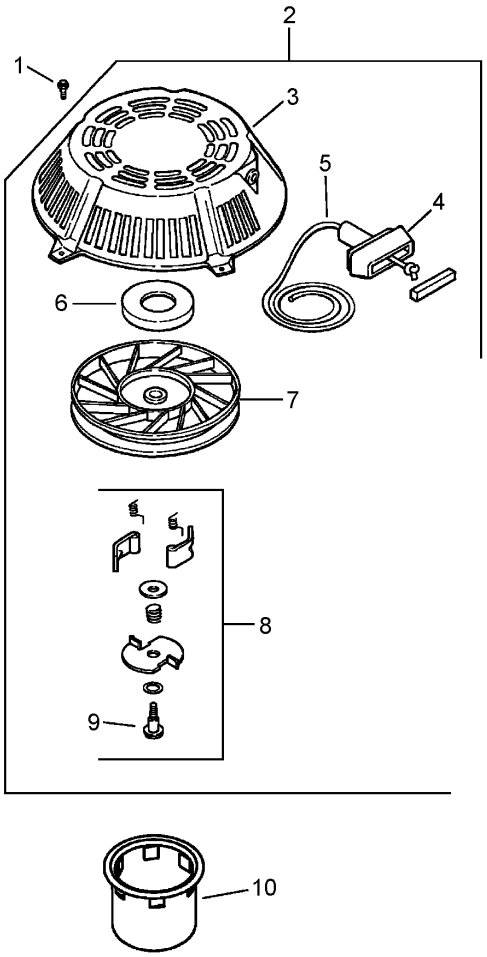

Starting System Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-550010-S	5	Screw-Hf, M5x0.8x10
❸2	12 165 01-S	1	Starter, Retractable (Includes 3-9)
❸3	12 081 01-S	1	Housing-Starter
❸4	25 166 01-S	1	Handle-Start, Recoil
❸5	12 160 01-S	1	Rope-Starter
❸6	12 089 06-S	1	Spring And Keeper
❸7	12 093 01-S	1	Pulley
❸8	12 757 06-S	1	Dog Repair Kit
❸9	41 086 09-S	1	Screw-Pozidriv
❸10	15 109 01-S	1	Cup, Drive
❶❸	12 113 07-S	1	Decal-Starting

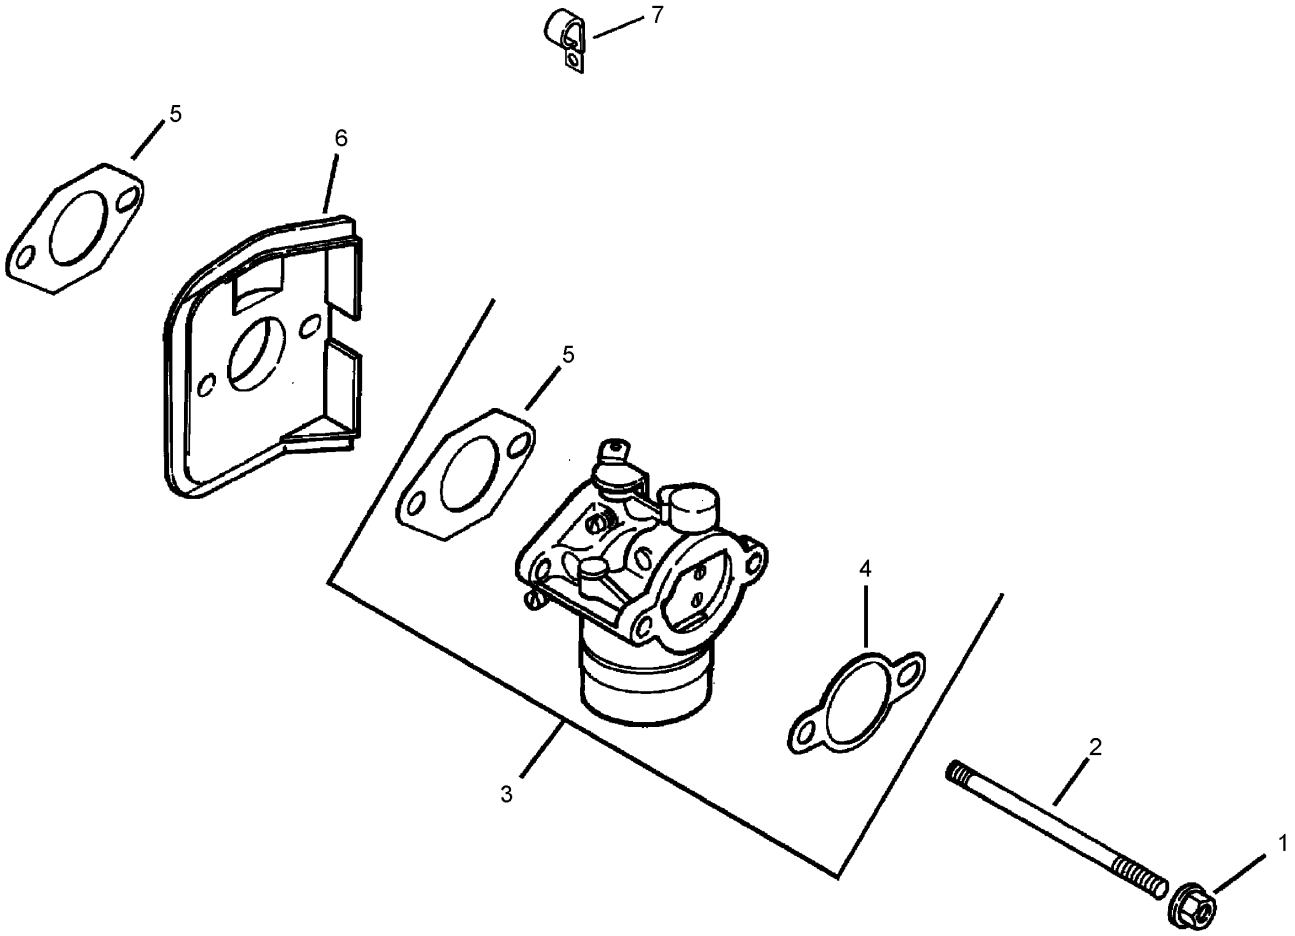

Fuel System Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-641060-S	2	Nut-Hex Flange, M6x1.0
❸2	M-629116-S	2	Stud-M6x1.0x116
❸3	12 853 140-S	1	Kit, Carburetor W/gaskets (Includes 4,5 [qty 1])
❸4	12 041 02-S	1	Gasket-Base, Air Cleaner
❸5	12 041 01-S	2	Gasket-Carburetor
❸6	12 265 04-S	1	Deflector-Heat
❸7	47 154 01-S	1	Clip-Cable
❶❸	12 757 02-S	1	Float Kit
❶❸	12 757 03-S	1	Carburetor Repair Kit
❶❸	12 757 08-S	1	Choke Repair Kit
❶❸	12 757 36-S	1	Throttle Shaft Bearing Kit
❶❸	12 757 37-S	1	Bowl Replacement Kit
❶❸	12 755 92-S	1	High Altitude Kit

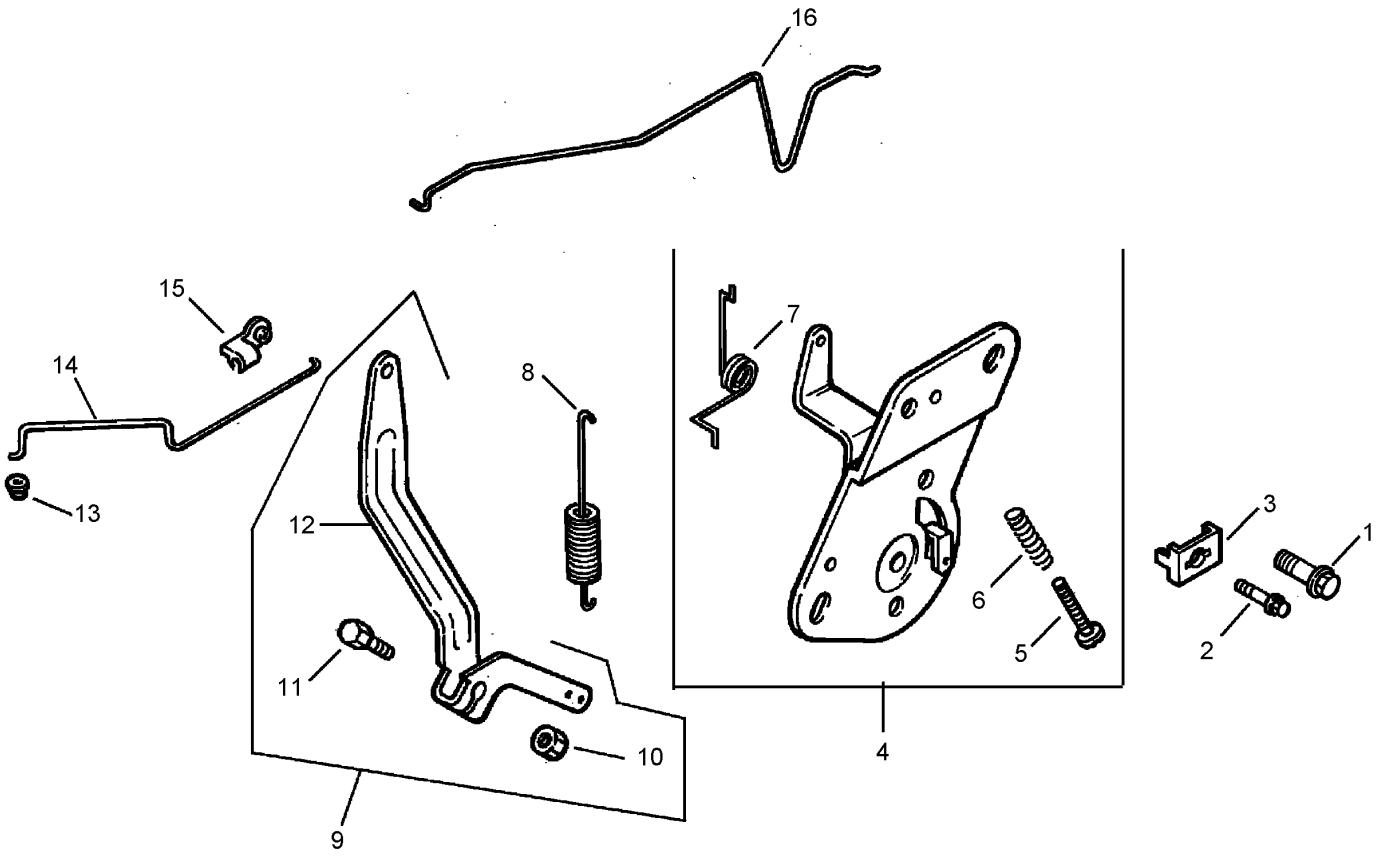

Engine Control Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	M-664020-S	2	Screw-Lobed Socket, M6x1.0x20
❸2	M-545016-S	1	Screw-Hex Flange, M5x0.8x16
❸3	12 237 01-S	1	Clamp-Cable
❸4	12 536 01-S	1	Control, Speed ASM (Includes 5-7)
❸5	12 086 39-S	1	Screw-Pan Head (W/loctite)
❸6	12 089 11-S	1	Spring-Control, Speed
❸7	12 089 23-S	1	Spring-Return, Choke
❸8	12 089 19-S	1	Spring-Governor
❸9	12 755 83-S	1	Kit, Governor Lever (Includes 10-12)
❸10	12 100 07-S	1	Nut-Hf, M6x1.0
❸11	52 211 04-S	1	Screw-Hf, M6x1.0x25
❸12	12 090 28-S	1	Lever-Governor
❸13	25 158 08-S	1	Bushing-Linkage Retaining
❸14	12 079 01-S	1	Linkage-Throttle
❸15	25 158 11-S	1	Bushing-Linkage Retaining
❸16	12 079 07-S	1	Linkage-Choke

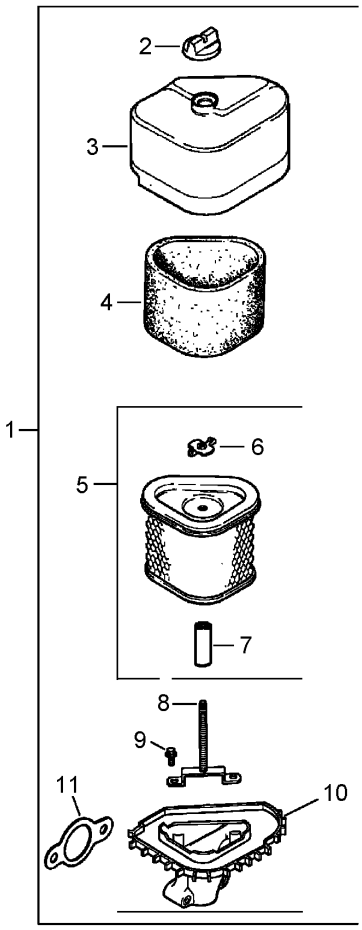

Air Intake/Filtration Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 743 04-S	1	Kit, Air Cleaner (Includes 2-11)
❸2	20 341 01-S	1	Knob-Cover
❸3	12 096 44-S	1	Cover-Cleaner, Air
❸4	12 083 12-S	1	Precleaner
❸5	12 083 10-S	1	Element, Air Cleaner (Includes 6)
❸6	12 100 01-S	1	Nut-Wing
❸7	12 032 11-S	1	Seal
❸8	12 072 04-S	1	Stud-Plate, Mounting
❸9	12 086 01-S	2	Screw
❸10	12 094 14-S	1	Base-Cleaner, Air
❸11	12 041 02-S	1	Gasket-Base, Air Cleaner
❶❸	12 113 04-S	1	Decal-Cleaner, Air

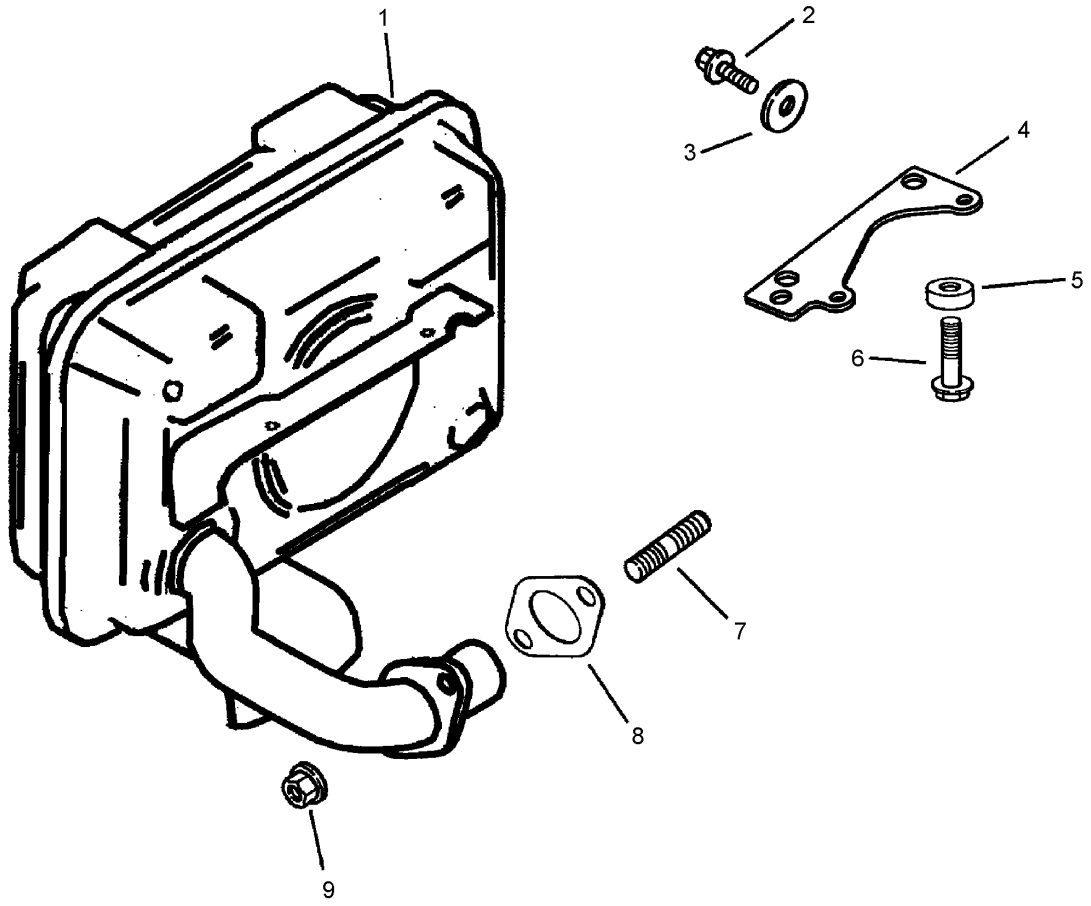

Exhaust Assembly
Kohler CV15T-41629

Ref	Part No.	Qty.	Description
❸1	12 068 44-S	1	Muffler
❸2	M-645016-S	2	Screw-Hex Flange, M6x1.0x16
❸3	X-25-78-S	2	Washer-Plain, 1/4in
❸4	12 126 71-S	1	Bracket-Muffler
❸5	12 112 20-S	2	Spacer
❸6	M-645025-S	2	Screw-Hex Flange, M6x1.0x25
❸7	25 072 04-S	2	Stud, M8x1.25x33
❸8	12 041 03-S	1	Gasket-Manifold, Exhaust
❸9	M-841080-S	2	Nut-Hex Flange, M8x1.25
❶❸	M-545016-S	1	Screw-Hex Flange, M5x0.8x16
❶❸	12 522 18	1	Block-Short
❶❸	12 755 93-S	1	Gasket Set

Attachments and Accessories

For 30319 - Mid-Size ProLine T-Bar Gear, 15 HP with 52in Side Discharge Mower

Product Name	Model/Part
Blade-Atomic	104-1301
Electric Starter Kit	104-8580
Striping Kit	106-3370
Soft Bag (3 Bushel)	30104
Steel Grass Catcher	30107
Tru Trak Sulky	30110
Extra High Lift Blade	56-2390
Recycler Kit	59225
Z Recycler Kit	59227
Blade-Recycler	92-7961

NOTES

NOTES

NOTES

TORO®