FORM NO. 3313-959

TORO

MODEL NO. 03744

INSTALLATION INSTRUCTIONS

SIDE SKID KIT

(Reelmaster 450 D)

1. Mount right and left skid brackets to rear collar assemblies, using (3) 5/16–18x5/8" lg. capscrews and lockwashers on each side of cutting unit.

2. Secure rear of each skid to inside of each skid bracket with a 1/2–13x1" lg. capscrew. Use upper mounting hole in skid bracket for height–of–cut settings above 1 –1/4". Use lower mounting hole in skid bracket for settings below 1 –1/4".

Note: Steps 3 and 4 are not required if side guard is already is installed on cutting unit.

3. Remove (2) locknuts securing rear roller adjusters to cutting unit sideplates.

4. Install a side guard onto rear roller adjuster bolts and secure with locknuts previously removed.

5. Secure front of skid to inside of sideplate and bottom, front hole in side guard with a 1/2–13x2" lg. flange screw, spacer and locknut as shown in figure.

6. Secure top of side guard to sideplate with a 1/2–13x1 – 3/4" lg. capscrew, spacer and locknut as shown in figure.

7. Adjust rear roller to desired height–of–cut as instructed in cutting unit operators manual, then adjust each skid so skid bottom is parallel to top of cutting unit side plates.

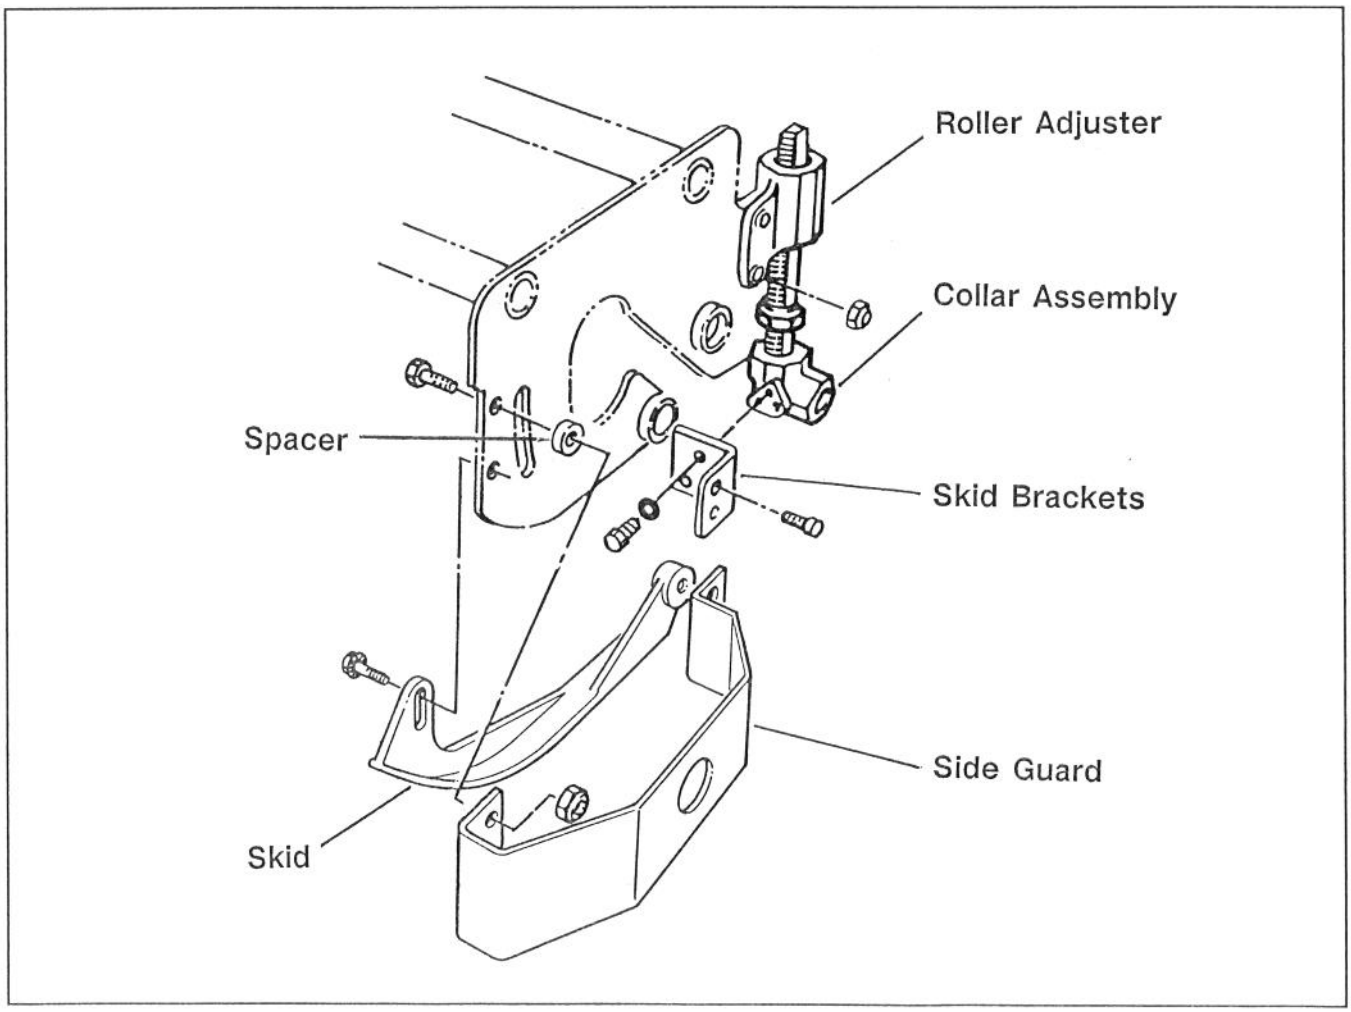


Figure 1

©The TORO Company – 1991