FORM NO. 3312-906

TORO®

MODEL NO. 03744

INSTALLATION INSTRUCTIONS

SIDE SKID KIT

(Reelmaster 450 D)

1. Mount right and left skid brackets to rear collar assemblies, using (3) 5/16-18x5/8" lg. capscrews and lockwashers on each side of cutting unit.

2. Secure rear of each skid to inside of each skid bracket with a 1/2-13x1" lg. capscrew. Use upper mounting hole in skid bracket for height-of-cut settings above 1 -1/4". Use lower mounting hole in skid bracket for settings below 1 -1/4".

3. Remove (2) locknuts securing rear roller adjusters to cutting unit sideplates .

4. Install a side guard onto rear roller adjuster bolts and secure with locknuts previously removed.

5. Secure front of skid to inside of sideplate and bottom, front hole in side guard with a 1/2-13x2" lg. flange screw and locknut.

6. Secure top of side guard to sideplate with a 1/2-13x1 - 3/4" lg. capscrew and locknut.

7. Adjust rear roller to desired heigth-of-cut as instructed in cutting unit operators manual, then adjust each skid so skid bottom is parallel to top of cuttitng unit side plates.

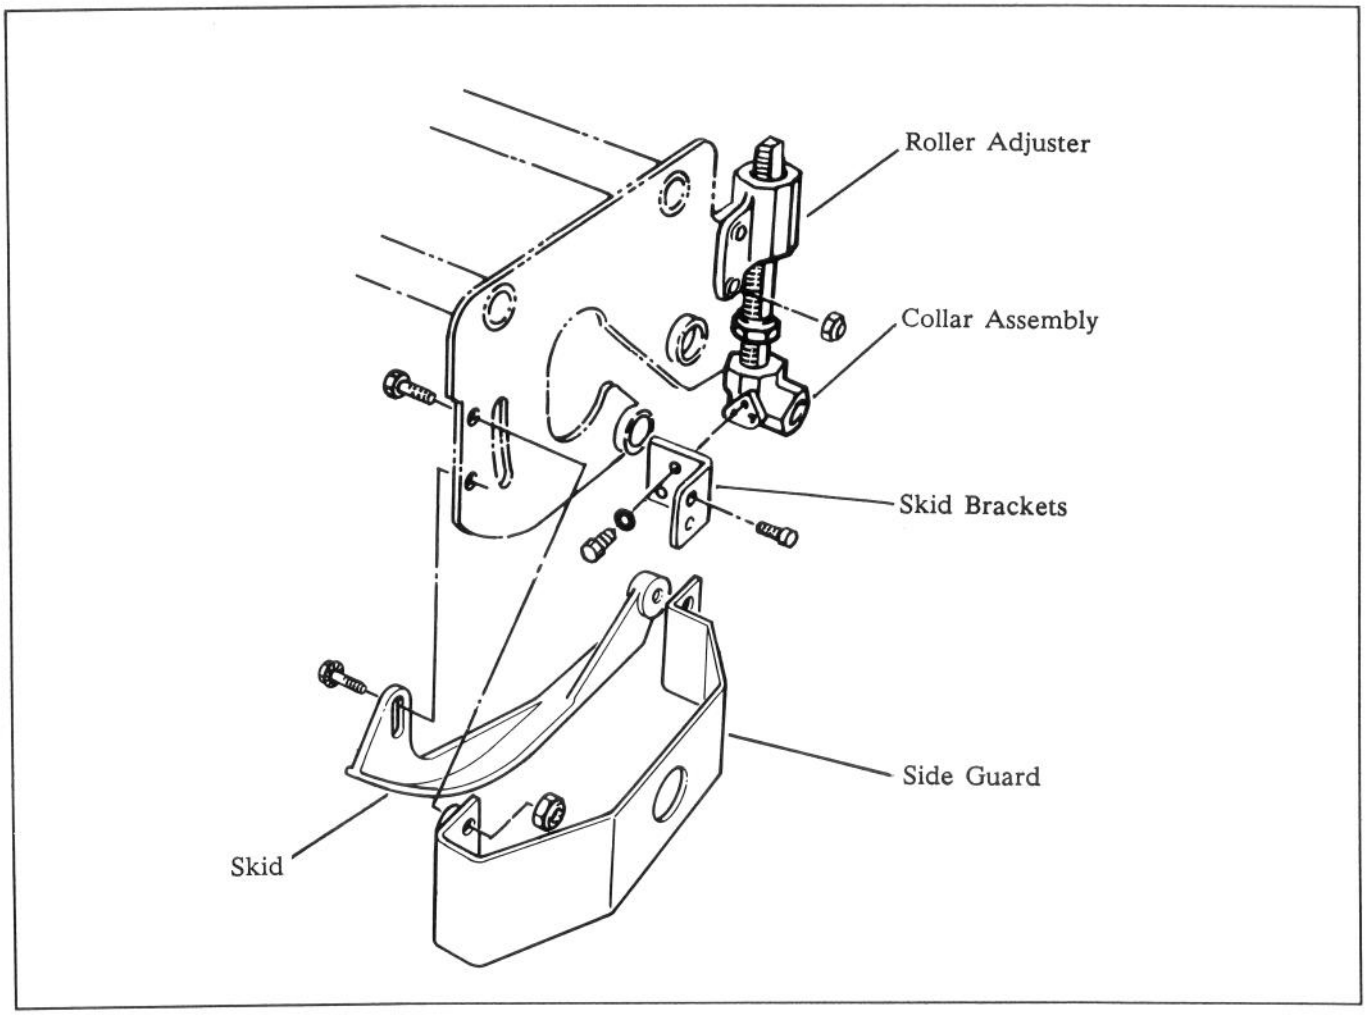


Figure 1

©The TORO Company - 1986

PRICE $1.00