FORM NO. 3318–808

TORO

PART NO. 94–5252
PART NO. 94–5253
PART NO. 94–5254

INSTALLATION INSTRUCTIONS

AIR CLEANER RETROFIT KIT
WORKMAN

CAUTION

Before servicing or making adjustments to the machine, stop engine and remove key from the switch.

1. Remove clamps securing S–hose to side of air cleaner and radiator shroud (Fig. 1). Remove and discard hose but retain clamps.

2. Remove clamps securing intake hose to top of air cleaner and engine (Fig. 1). Remove and discard hose but retain clamps.

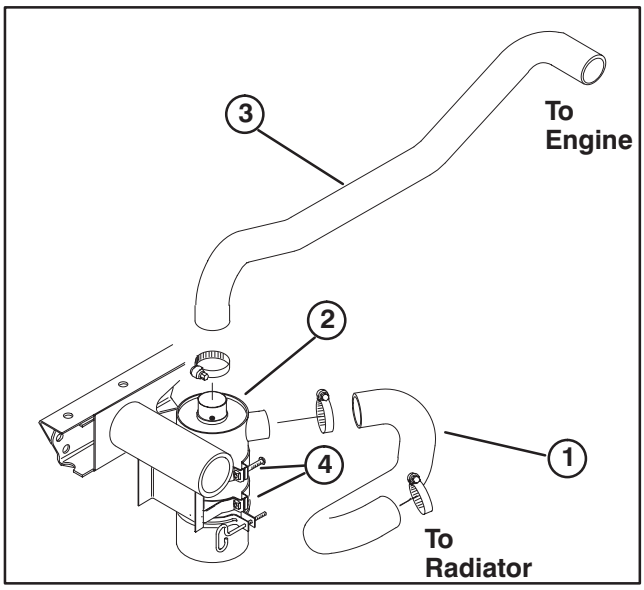


Figure 1
1. S–hose
2. Air cleaner
3. Intake hose
4. Mounting clamps

3. Loosen air cleaner mounting clamps and rotate air cleaner so inlet port points to rear of machine (Fig. 1). Make sure evacuator valve on air cleaner cup also points to rear of machine.

4. Loosely mount new air intake hose to top of air cleaner and engine with clamps previously removed (Fig. 2). Route new hose over inlet hood and secure with cable ties before securing.

Note: On Workman 3200 & 4200 units, make sure there is at least 1 inch clearance between air intake hose and governor pulley.

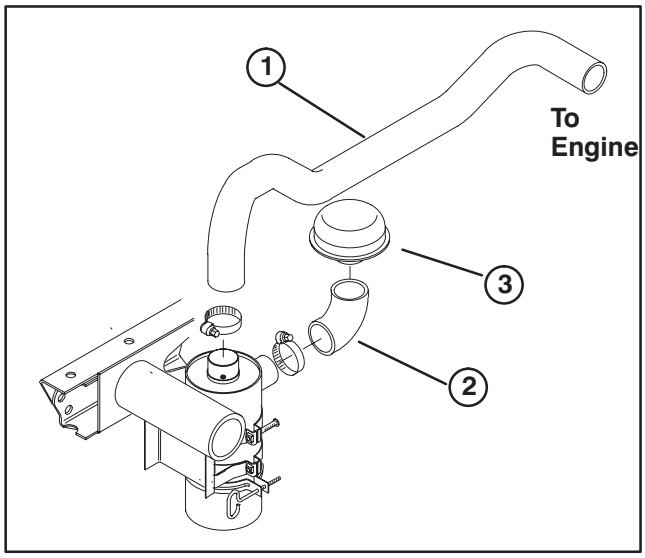


Figure 2
1. Intake hose
2. Air intake elbow
3. Air inlet hood

Note: On machines with a full bed installed, make sure box spacer mounting bolt heads are positioned inward to provide maximum clearance for air intake hose (Fig. 3).

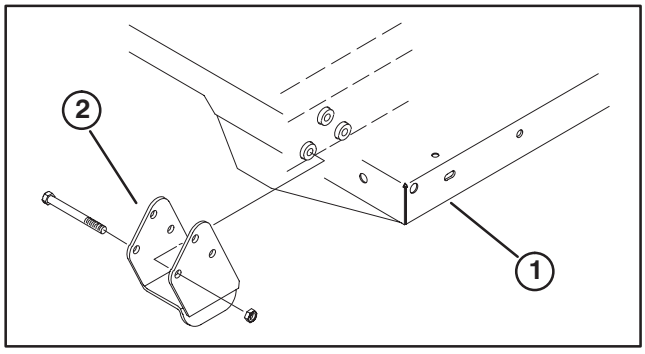


Figure 3
1. Full bed
2. Box spacer

5. Tighten all hose and air cleaner mounting clamps.

6. Secure air intake elbow to inlet port of air cleaner with clamp previously removed (Fig. 2).

7. Insert air inlet hood into air intake elbow (Fig. 2).

Note: Opening in radiator where hose was removed may be plugged, if desired.

© The TORO Company – 1996