FORM NO. 3313–558

TORO®

PART NO. 68–7210

INSTALLATION INSTRUCTIONS

BAFFLE KIT

FOR USE ON 52" CUTTING UNIT MODELS 30555, 30152 30753 ONLY

1. Position the baffle under the deck and against inside front wall of housing. Baffle should follow contour of housing as shown in figure 1. The bottom edge of the baffle should be 3/4" below the front lip of the deck.

NOTE: MAKE SURE BAFFLE IS LEVEL AND NOT BENT. A BENT BAFFLE COULD AFFECT QUALITY OF CUT.

2. Using the baffle as a template, locate and mark the position of the (5) mounting holes in deck. Drill (5) 7/16" dia. holes thru deck wall at locations marked.

3. Secure the baffle to the deck with (5) carriage bolts and locknuts supplied in kit. Locknuts to be positioned on outside of deck.

CAUTION: IF BAFFLE IS REMOVED FROM DECK, PLUG THE MOUNTING HOLES WITH (5) 5/16" CAPSCREWS.

NOTE: The baffle kit is useful in the collection of leaves, debris and other dry materials and it reduces the amount of dry debris and dust dispersed from front of deck. Not recommended for use in taller grass (lush) conditions.

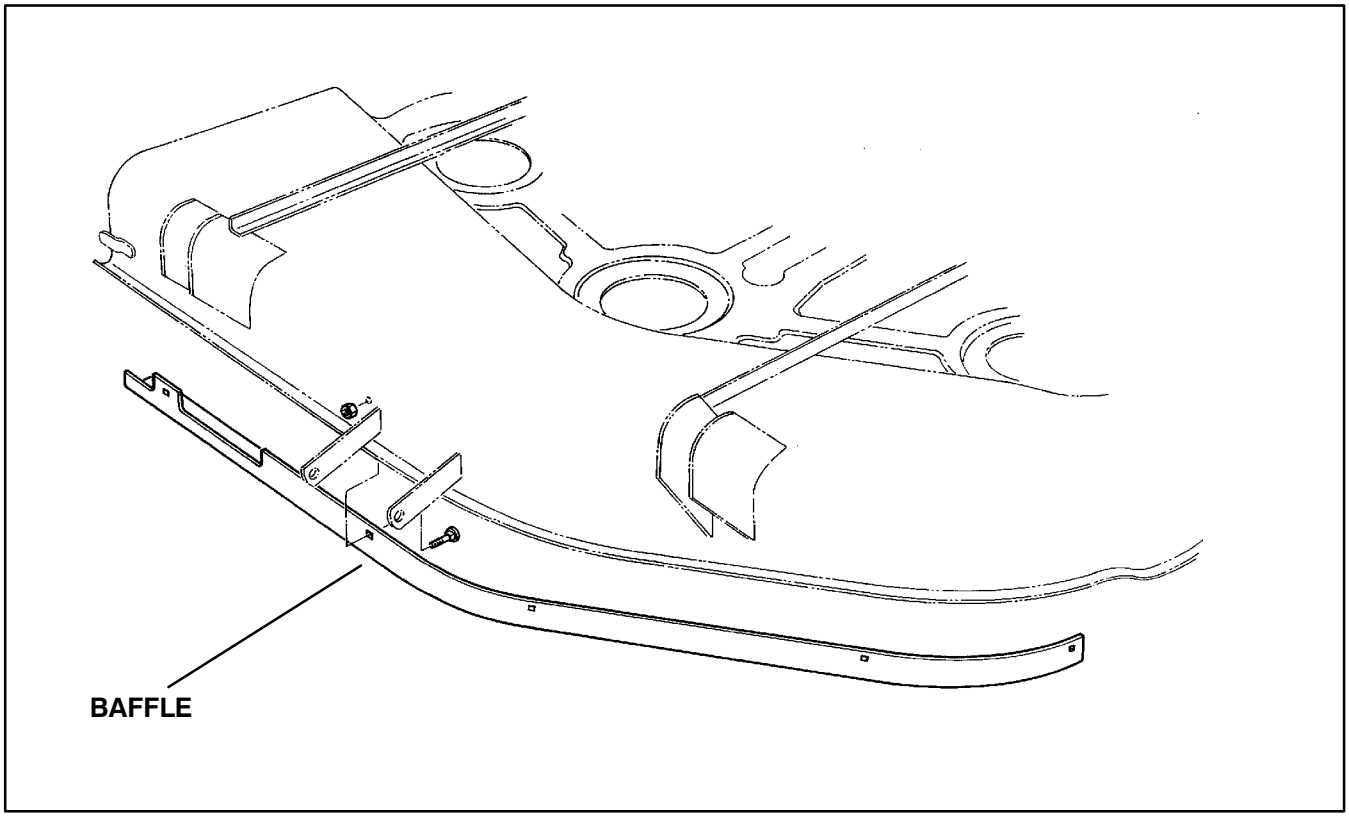

Figure 1

© The TORO Company – 1988