FORM NO. 3315-829

TORO

MODEL NO. 79261 - 3900001 & UP	OPERATOR'S MANUAL ADDENDUM

Snowthrower Retainer Clip

42 in. (107cm) Snowthrower

The following instructions replace those found on page 2 in your 42 in. Snowthrower Operator's Manual. Form No. 3315-428.

Instead of installing lift rod in hole in cross shaft arm (as described in the second and third paragraphs below Fig. 7), position lift rod in cross shaft arm notch area (Fig. 1 below). Secure lift rod in place with retainer clip and hair pun cotter. (Fig. 1 below).

The purpose of this revised mounting location is to reduce the effort required to raise the snowthrower.

Note: To allow snowthrower to travel throughout a wide range of ground contours, do not install any washers on the lift tube. If more transport height is ever desired, a washer or two could be installed on the lift tube, but this reduces the snowthrower's downward range of travel.

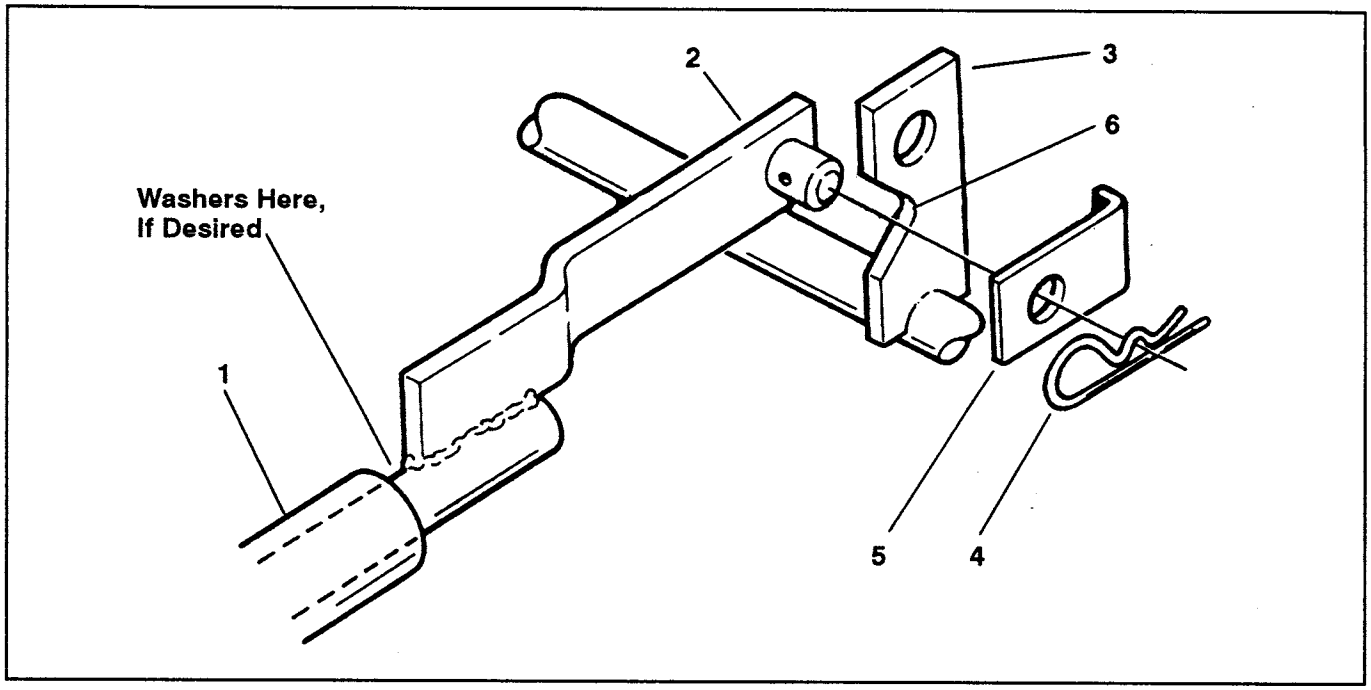


Fig. 1

1. Lift Tube
2. Lift Rod
3. Cross Shaft Arm
4. Hair Pin Cotter
5. Retainer Clip
6. Notch Area

© The TORO Company - 1992