FORM NO. 3318–654

TORO®

PART NO. 94–5082

INSTALLATION INSTRUCTIONS

# WIEHLE ROLLER SCRAPER KIT

## For Reelmaster® 2300D

**⚠ CAUTION**

**Before servicing or making adjustments to the machine, stop engine and remove key from the switch.**

**1.** Loosely secure a capscrew, (2) washers, a lock nut and a jam nut to each end of roller scraper as shown in figure 1.

**Note:** Scraper can be mounted to back side of front or rear roller.

**2.** Thread each capscrew into roller brackets until desired clearance between scraper and roller is attained. Make sure scraper is parallel to roller.

**3.** Slide roller scraper from side to side to ensure scraper teeth are centered between the discs of the wiehle roller.

**4.** Tighten locknuts securing scraper to capscrews and jam nuts securing scraper to roller.

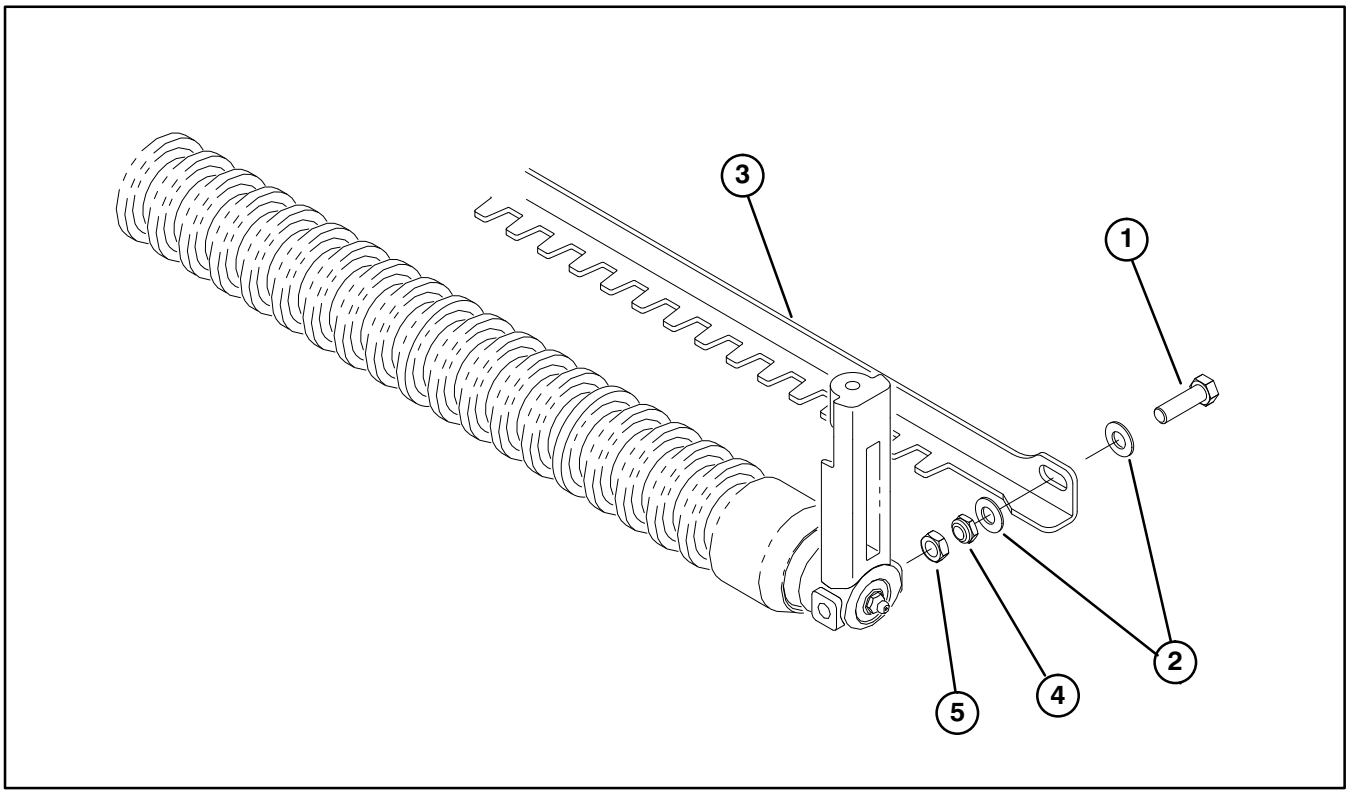



**Figure 1**

1. Capscrew
2. Washer
3. Scraper
4. Lock nut
5. Jam nut

© The TORO Company – 1999