FORM NO. 3318–624

TORO®

CE UPDATE KIT

44” ProLine Mowers

Model No. 30546 – 690001 & Up

INSTALLATION INSTRUCTIONS

Loose Parts

Note: Use the chart below to identify parts used for assembly.

DESCRIPTION	QTY.	USE
Discharge deflector	1	Install discharge chute extension
Bolt 5/16–18 x 3/4” (19 mm)	2	
Lock nut (thin)	2	
Baffle	1	Install front baffle
Bolt 5/16–18 x 3/4” (19 mm)	7	
Lock nut (thin)	7	

Installing Discharge Chute Extension

1. Position discharge deflector over end of discharge chute (Fig. 1). Overlap end of chute 1 inch.
2. Using discharge deflector as a template drill (2) 9 mm holes in discharge chute
3. Secure discharge chute extension to discharge chute with (2) 5/16 x 19 mm bolts, through from the bottom and thin lock nuts (Fig. 1).

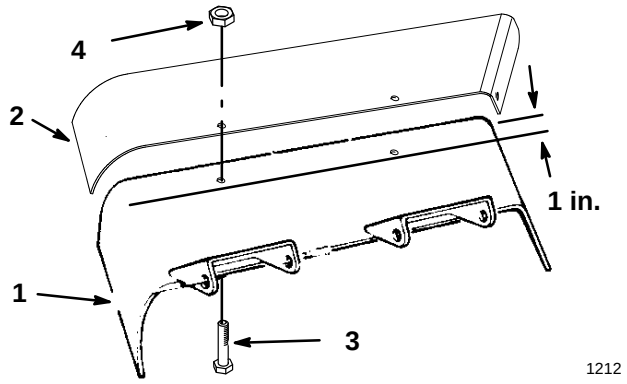


Figure 1

1. Discharge chute
2. Discharge deflector
3. Bolt 5/16–18 x 3/4” (19 mm)
4. Lock nut (thin)

Installing Front Baffle

1. Position front baffle inside mower deck level with left edge of mower (Fig. 2).

2. Using front baffle as a template drill 9 mm holes in mower.

3. Secure front baffle to mower with (7) 5/16 x 19 mm bolts, through from the inside and thin lock nuts (Fig. 2).

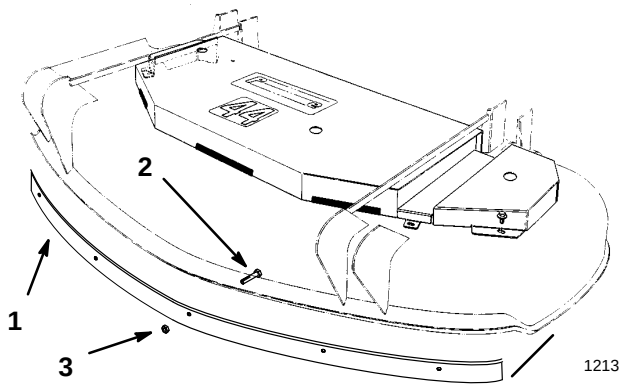


Figure 2

1. Front baffle
2. Bolt 5/16–18 x 3/4” (19 mm)
3. Lock nut (thin)