



Customer Service Bulletin Commercial Business Group

Groundsmaster® 300 Series

<u>Model/Serial Range:</u>	<u>Model Number:</u>	<u>Serial Numbers:</u>
	ALL	80001-29999

Subject: Alternate Traction Pedal design for Operator comfort.

Traction Pedal Kit (93-3149) offers greater Operator comfort and is available for installation on the Traction Units listed above. The Kit contains installation instructions and an illustrated parts page. A copy of the installation instructions is attached for your reference. Parts and assistance with this installation are available through your local Toro distributor.



PART NO. 93-3149

INSTALLATION INSTRUCTIONS

TRACTION PEDAL KIT Groundsmaster 300 Series

Helping you put quality into play.™



CAUTION

Before servicing or making adjustments to the machine, stop engine and remove key from switch.

1. Remove nut securing front end of pump control rod to traction pedal pivot bracket (Fig. 1).

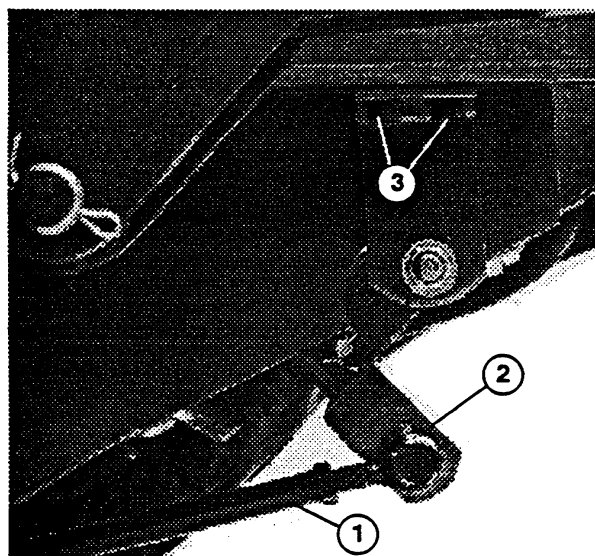


Figure 1

1. Pump control rod
2. Traction pedal pivot bracket
3. Self tapping screws

2. Remove (2) self tapping screws securing top of traction pedal pivot bracket to frame (Fig. 1). Remove traction pedal assembly.

3. Using dimensions shown in figure 2, locate, mark and drill 11/32" dia. hole in floor plate.

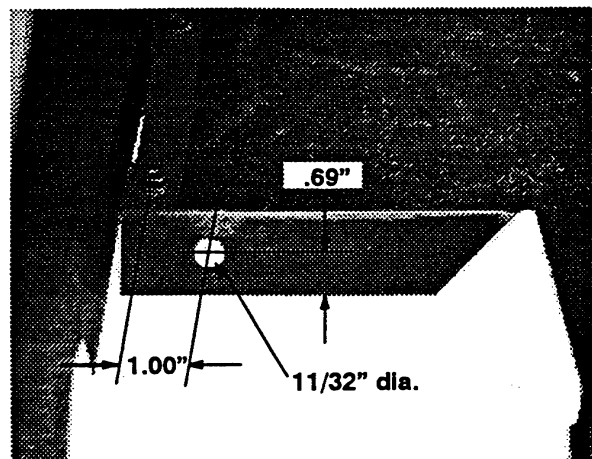


Figure 2

4. Place new traction pedal assembly into position and secure traction pedal pivot bracket to frame with (2) new self tapping screws (Fig. 3).

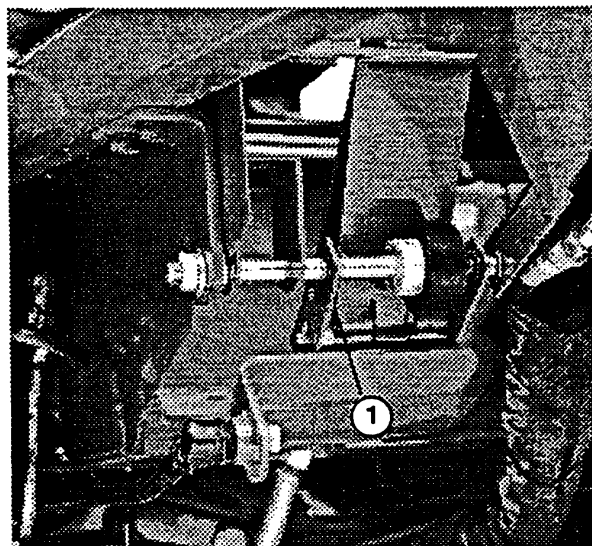


Figure 3

1. Traction pedal assembly

5. Connect pump control rod to traction pedal pivot bracket with nut previously removed (Fig. 3).

6. Press down on front of traction pedal and check travel. There should be approximately 3.50" clearance between end of pedal and floor plate when pedal in fully depressed (Fig. 4). Adjust pump control rod to attain dimension.

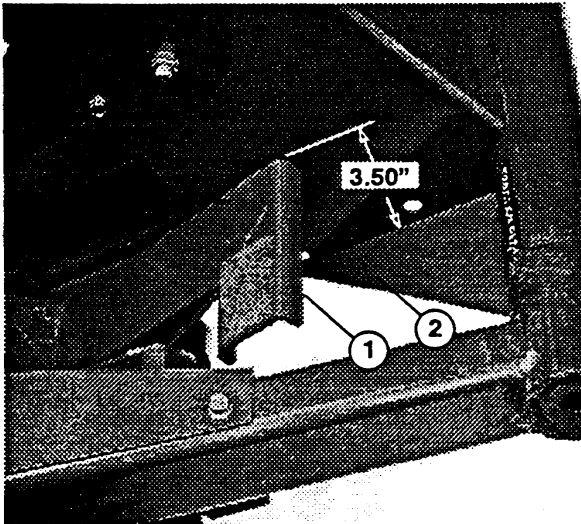


Figure 4

- 1. End of pedal
- 2. Floor plate

7. Mount footrest to footrest bracket and floor plate with (2) carriage bolts and locknuts (Fig. 5).

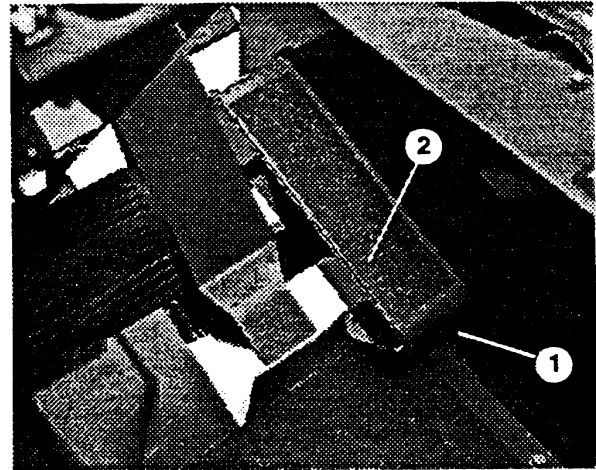


Figure 5

- 1. Foot rest
- 2. Foot rest pad

8. Affix foot rest pad to top of foot rest (Fig. 5).