Form No. 3471-264 Rev A

TORO®

Count on it.

Operator's Manual

Greensmaster® e1021, e1026, and eFlex® 1021 Greensmower

Model No. 04835—Serial No. 418100000 and Up
Model No. 04845—Serial No. 418100000 and Up
Model No. 04865—Serial No. 418200000 and Up

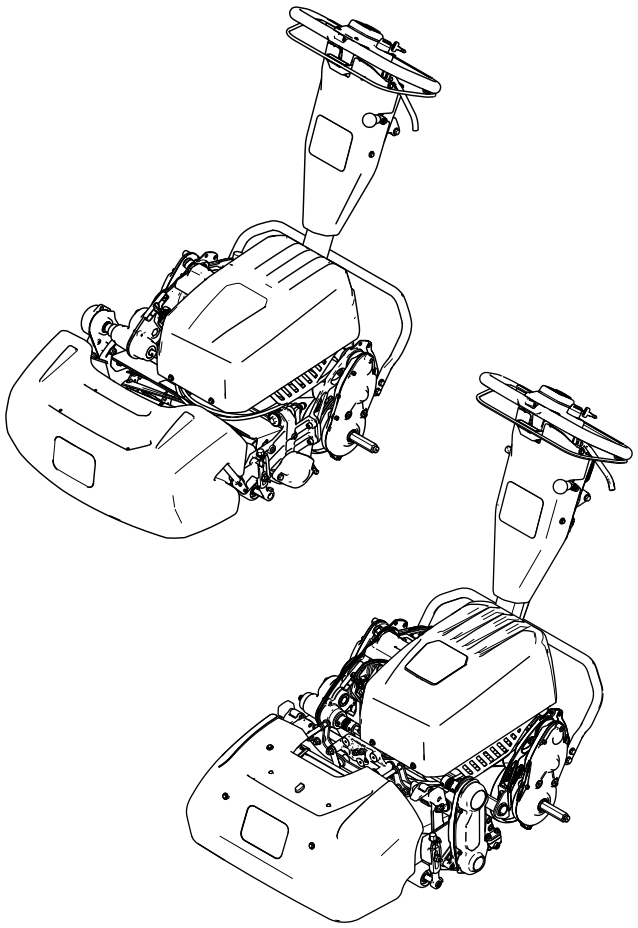

Register at www.Toro.com.
Original Instructions (EN)

CE UK CA

3471-264

This product complies with all relevant European directives; for details, please see the separate product specific Declaration of Conformity (DOC) sheet.

If this machine is equipped with a telematics device, refer to your authorized Toro distributor for instructions to activate the device.

Electromagnetic Compatibility Certification

Domestic: This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference that may be received, including interference that may cause undesirable operation.

FCC ID: OF7RTS24

IC: 3575A-RTS24

This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Argentina

H-31399

Australia

Morocco

AGREE PAR L'ANRT MAROC

Numero d'agrement: MR00003613ANRT2024

Delivre d'agrement: 22/08/2024

⚠ WARNING

CALIFORNIA
Proposition 65 Warning

The power cord on this product contains lead, a chemical known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling.

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Use of this product may cause exposure to chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Introduction

This machine is a walk-behind, reel-blade lawn mower intended to be used by professional, hired operators in commercial applications. It is primarily designed for cutting grass on well-maintained turf. Using this product for purposes other than its intended use could prove dangerous to you and bystanders.

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

Visit www.Toro.com for product safety and operation training materials, accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 identifies the location of the model and serial numbers on the product. Write the numbers in the space provided.

Important: **With your mobile device, you can scan the QR code (if equipped) on the serial number decal to access warranty, parts, and other product information.**

© 2025—The Toro® Company
8111 Lyndale Avenue South
Bloomington, MN 55420

Contact us at www.Toro.com.
Printed in the USA
All Rights Reserved

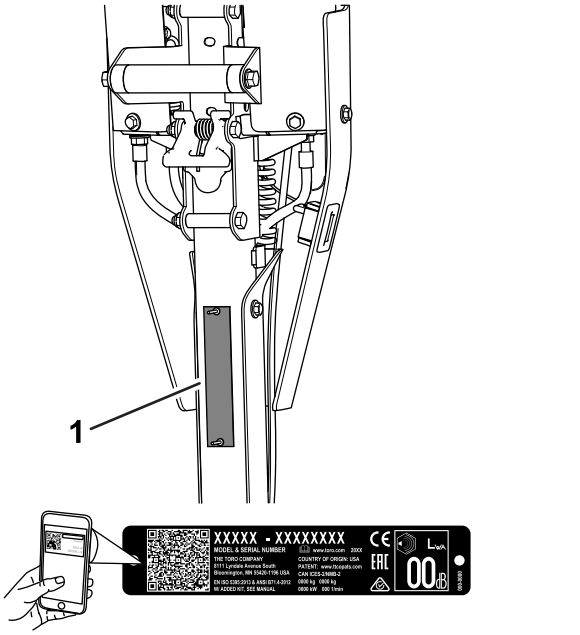

g271512

Figure 1

1. Model and serial number location

Model No. _____

Serial No. _____

This manual identifies potential hazards and has safety messages identified by the safety-alert symbol (Figure 2), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.

g000502

Figure 2

Safety-alert symbol

This manual uses 2 words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Contents

Safety 5
General Safety 5
Safety and Instructional Decals 5
Setup 8
1 Adjusting and Installing the Cutting Unit 9
2 Installing the Transport Wheels 11
3 Installing the Grass Basket 12
4 Adjusting the Latch Bolt for the Handle-Height Adjuster 13
5 Mounting the Battery Charger on a Wall 13
Product Overview 15
Controls 16
Specifications 18
Attachments/Accessories 18
Before Operation 19
Before Operation Safety 19
Performing Daily Maintenance 19
Adjusting the Clip Rate 19
Adjusting the Reel Speed 19
Adjusting the Traction-Drum Position 20
Adjusting the Handle Height 20
Transporting the Machine to a Job Site 20
Removing the Transport Wheels 21
During Operation 21
During Operation Safety 21
Starting the Machine 22
Using the InfoCenter Display 23
Operating Tips 26
Shutting Off the Machine 27
After Operation 27
After Operation Safety 27
Operating the Controls after Mowing 28
Transporting the Machine 28
Installing the Transport Wheels 29
Engaging or Disengaging the Transmission 29
Maintaining the Lithium-Ion Battery Pack 30
Caring for the Battery Pack 30
Understanding the Battery Charger 31
Maintenance 33
Maintenance Safety 33
Recommended Maintenance Schedule(s) 33
Daily Maintenance Checklist 34
Pre-Maintenance Procedures 34
Preparing the Machine for Maintenance 34
Electrical System Maintenance 35
Electrical System Safety 35
Servicing the Battery Pack 35
Disposing of the Battery 35
Maintaining the Battery Charger 35
Replacing Fuses 36
Acknowledging the Battery Interface Panel 36
Drive System Maintenance 37
Changing the Transmission Fluid 37
Controls System Maintenance 37
Adjusting the Service/Parking Brake 37
Cutting Unit Maintenance 38
Blade Safety 38
Installing the Cutting Unit (Models 04835 and 04845) 38
Installing the Cutting Unit (Model 04865) 39
Removing the Cutting Unit (Models 04835 and 04845) 39
Removing the Cutting Unit (Model 04865) 40
Backlapping the Cutting Unit 40
Cleaning 41
Cleaning the Machine 41
Storage 42
Storage Safety 42
Storing the Machine 42
Battery Storage Requirements 42
Storing the Charger 42

Safety

General Safety

This product is capable of amputating hands and feet and of throwing objects.

- Read and understand the contents of this *Operator's Manual* before starting the machine.
- Use your full attention while operating the machine. Do not engage in any activity that causes distractions; otherwise, injury or property damage may occur.
- Do not put your hands or feet near moving components of the machine.
- Do not operate the machine without all guards and other safety protective devices in place and functioning properly on the machine.
- Keep bystanders and children out of the operating area. Never allow children to operate the machine.
- Park the machine on a level surface, engage the parking brake, shut off the machine, remove the key (if equipped), and wait for all movement to stop before you leave the operator's position. Allow the machine to cool before adjusting, servicing, cleaning, or storing it.

Improperly using or maintaining this machine can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety-alert symbol ⚠, which means Caution, Warning, or Danger—personal safety instruction. Failure to comply with these instructions may result in personal injury or death.

Safety and Instructional Decals

Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.

decal120-9570

120-9570

1. Warning—stay away from moving parts, keep all guards and shields in place.

decal133-8061

133-8061

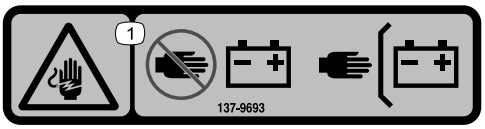

decal137-9693

137-9693

1. Electrical shock hazard—stay away from the battery; keep all guards and shields in place.

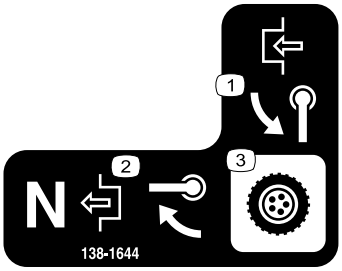

decal138-1644

138-1644

1. Rotate the handle to engage.
2. With the machine in the Neutral position, rotate the handle to disengage.
3. Transmission control

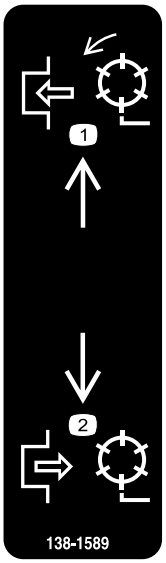

decal138-1589

138-1589

1. Engage the reels.
2. Disengage the reels.

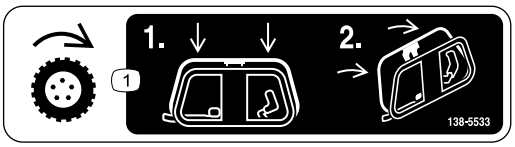

decal138-5533

138-5533

1. Traction control—press the traction control down then pull it to the handle.



decal138-5534

138-5534

1. Slow
2. Fast

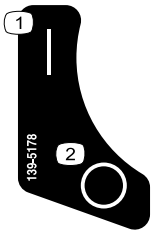

decal139-5178

139-5178

1. On
2. Off

decal138-5532

138-5532

1. Pull up to release the brake.
2. Pull down to apply the brake.
3. Parking brake—locked
4. Parking brake—unlocked
5. Warning—read the *Operator's Manual*.
6. Warning—do not operate this machine unless you are trained.
7. Warning—wear hearing protection.
8. Thrown object hazard—keep bystanders away.
9. Warning—stay away from moving parts; keep all guards and shields in place.
10. Do not tow the machine.

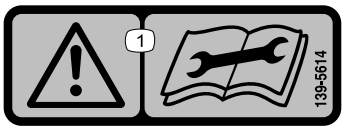

decal139-5614

139-5614

1. Warning—read the *Operator's Manual* before performing maintenance.

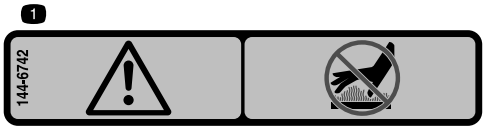

decal144-6742

144-6742

1. Warning-Do not touch the hot surface.



decal147-2310

147-2310

1. Electrical shock hazard—turn the key switch to the OFF position and remove the key from the key switch; read the *Operator's Manual* before performing maintenance.

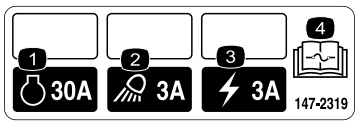

decal147-2319

147-2319

1. Motor
2. Work lights
3. Electrical power
4. Refer to the *Operator's Manual* for fuse information.

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Cutting unit (order separately; contact your authorized Toro distributor) Coupler (Model 04835 and 04845) Reel driveshaft (Model 04835 and 04845) Socket-head screw (Model 04835 and 04845) Hex tube (Model 04865) Spring (Model 04865) Collar (Model 04865)	1 1 1 4 1 1 1	Adjust and install the cutting unit to the machine.
2	Transport Wheel Kit (order separately; contact your authorized Toro distributor)	1	Install the transport wheels (optional).
3	Grass basket	1	Install the grass basket.
4	No parts required	–	Adjust the latch bolt for the handle-height adjuster.
5	No parts required	–	Mount the battery charger on a wall (optional).

Media and Additional Parts

Description	Qty.	Use
Operator's Manual Certificate of Compliance	1 1	Read or view the items before operating the machine.

Note: Determine the left and right sides of the machine from the normal operating position.

1

Adjusting and Installing the Cutting Unit

Parts needed for this procedure:

1	Cutting unit (order separately; contact your authorized Toro distributor)
1	Coupler (Model 04835 and 04845)
1	Reel driveshaft (Model 04835 and 04845)
4	Socket-head screw (Model 04835 and 04845)
1	Hex tube (Model 04865)
1	Spring (Model 04865)
1	Collar (Model 04865)

Installing the Cutting Unit

Models 04835 and 04845

1. Perform the following steps to remove the existing reel driveshaft on your cutting unit:

   A. Remove the hardware that secures the reel-drive assembly to the side plate (Figure 3).

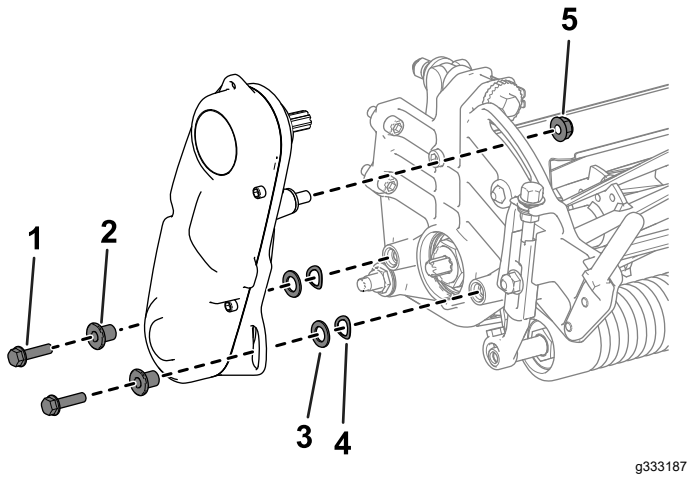

g333187

Figure 3

1. Socket-head screw
2. Spacer
3. Washer
4. Spring washer
5. Nut

   B. Remove the reel-drive assembly, flat washers, spring washers, and spacers from the side plate (Figure 3).

   C. Remove the belt cover to expose the belt (Figure 4).

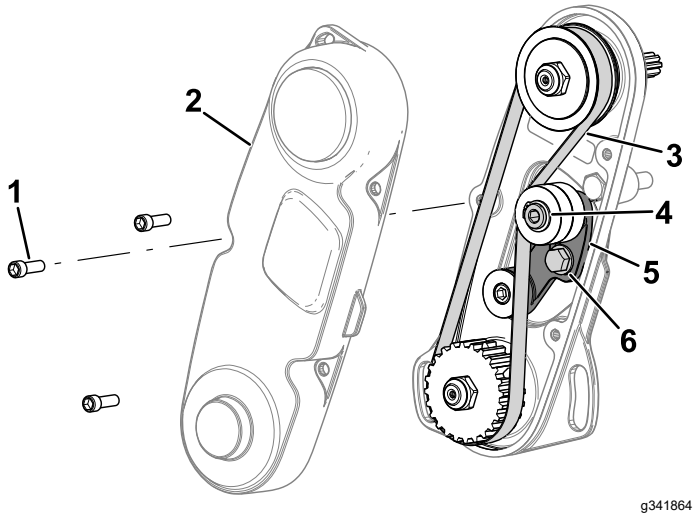

g341864

Figure 4

1. Socket-head screw
2. Belt cover
3. Belt
4. Idler-arm internal hex
5. Idler arm
6. Idler-arm bolt

   D. Loosen the idler-arm bolt and rotate the idler arm (Figure 4) to release tension on the belt.

   E. Remove the belt (shown in Figure 4).

   F. Remove the nut, pulley, spacer, and key (Figure 5).

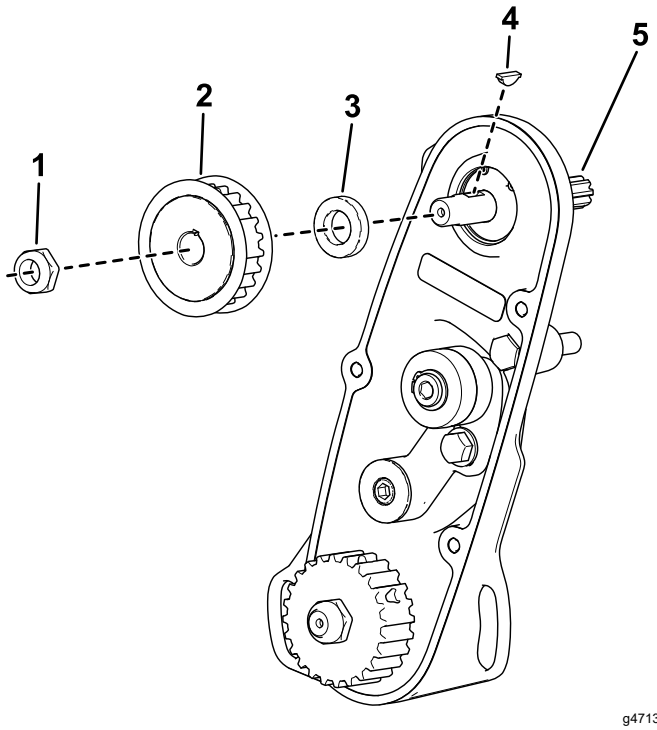

g471333

Figure 5

1. Nut
2. Pulley
3. Spacer
4. Key
5. Existing reel driveshaft

G. Remove the existing reel driveshaft (Figure 5).

2. Perform the following steps to install the new reel driveshaft:

   A. Install the new reel driveshaft (included in the loose-parts bag).

      Take care to not damage the seal.

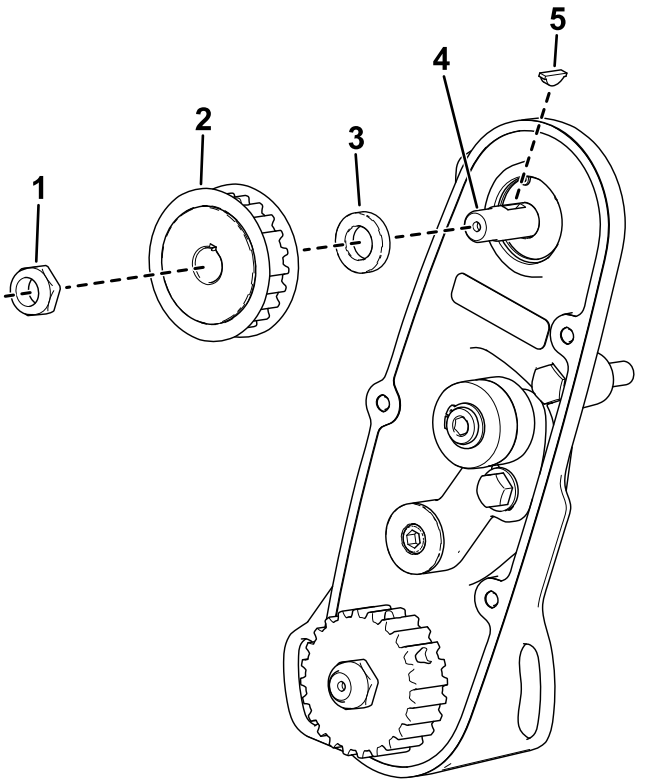

g471334

Figure 6

1. Nut
2. Pulley
3. Spacer
4. New reel driveshaft
5. Key

   B. Install the spacer (Figure 6).

   C. Install the key into the driveshaft keyway (Figure 6).

   D. Install the pulley (Figure 6).

   E. Use the nut to secure the new reel driveshaft to the assembly (Figure 6).

   F. Torque the nut to 37 to 45 N·m (27 to 33 ft-lb).

   G. Install the belt and tension the belt by applying 6 to 7 N·m (55 to 60 in-lb) to the idler-arm internal hex shown in Figure 4.

   H. Tighten the idler-arm bolt and use the previously removed socket-head screws to install the belt cover.

3. Perform the following steps to adjust and install the cutting unit:

   A. Use 4 socket-head screws to install the cutting unit to the machine (Figure 7).

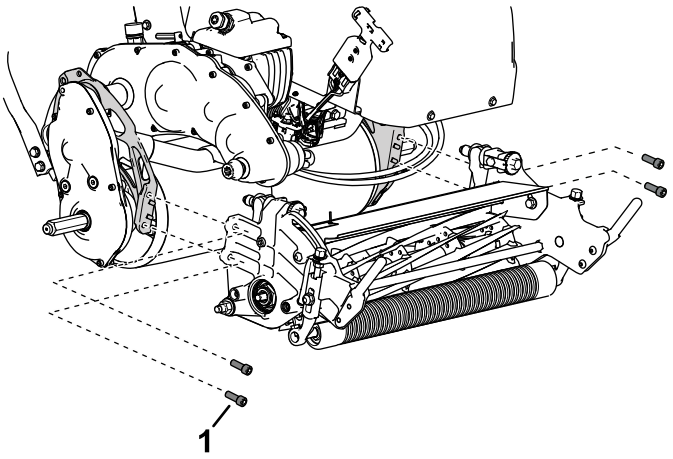

g343380

Figure 7

1. Socket-head screw

   B. Determine your appropriate height-of-cut setting and adjust the traction drum to this setting; refer to Adjusting the Traction-Drum Position (page 20).

   C. Adjust the cutting unit to your desired settings; refer to the adjustment procedures in your cutting unit *Operator's Manual*.

   D. Install the coupler to the transmission driveshaft (Figure 8).

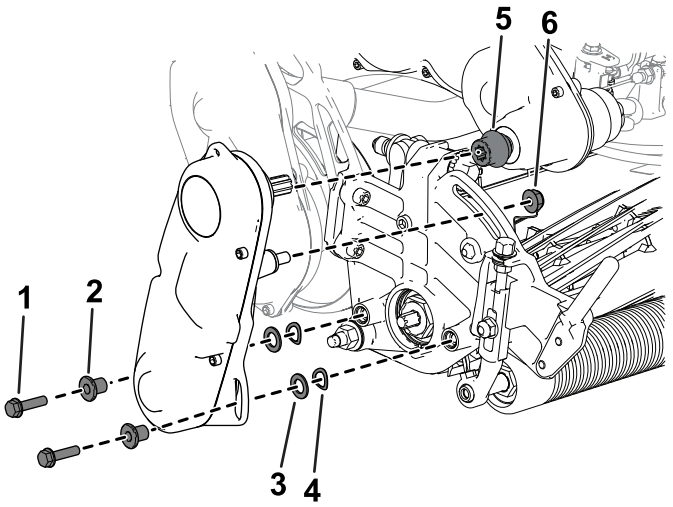

g333165

Figure 8

1. Socket-head screw
2. Spacer
3. Washer
4. Spring washer
5. Coupler
6. Nut

   E. Use the previously removed hardware to install the reel-drive assembly to the cutting unit (Figure 8).

F. Ensure that the coupler (Figure 8) can easily move back-and-forth on the transmission driveshaft.

Installing the Cutting Unit

Model 04865

1. Adjust the cutting unit to your desired settings; refer to the cutting unit *Operator's Manual*.
2. Install the spring, collar, and hex tube to the transmission coupler shaft (Figure 9).

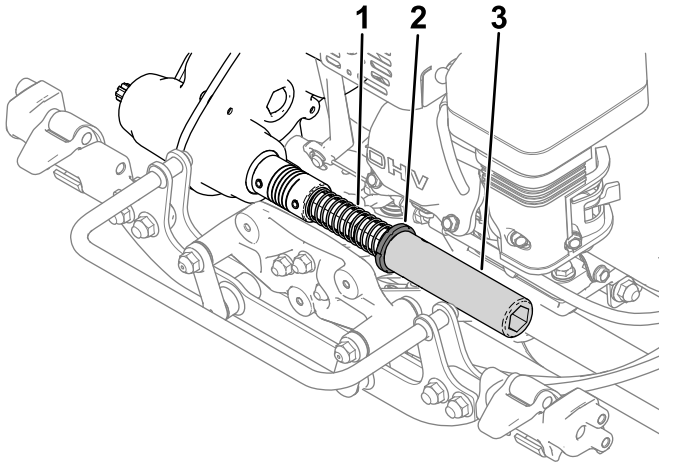

g307641

Figure 9

1. Spring
2. Collar
3. Hex tube

3. Install the cutting unit to the machine; refer to Installing the Cutting Unit (Model 04865) (page 39).

2

Installing the Transport Wheels

Optional

Parts needed for this procedure:

1	Transport Wheel Kit (order separately; contact your authorized Toro distributor)

Procedure

To install the transport wheels, you must first acquire the Transport Wheel Kit (Model 04123). Contact your authorized Toro distributor for this kit.

1. Install the transport wheels; refer to Installing the Transport Wheels (page 29).
2. Ensure that the tires are inflated to 83 to 103 kPa (12 to 15 psi).

3

Installing the Grass Basket

Parts needed for this procedure:

1	Grass basket

Procedure

- **Models 04835 and 04845:**

  Grasp the basket by the top lip and slide it onto the basket mounting rods (Figure 10).

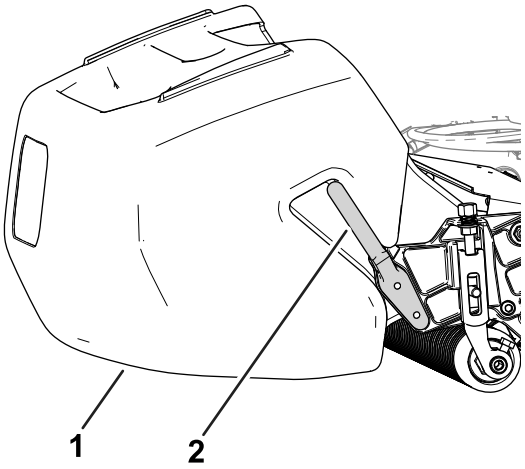

g343519

Figure 10

1. Grass basket
2. Basket mounting rod

- **Model 04865:**

  1. Grasp the basket by the handle.
  2. Guide the basket lip between the cutting unit side plates and over the front roller (Figure 11).

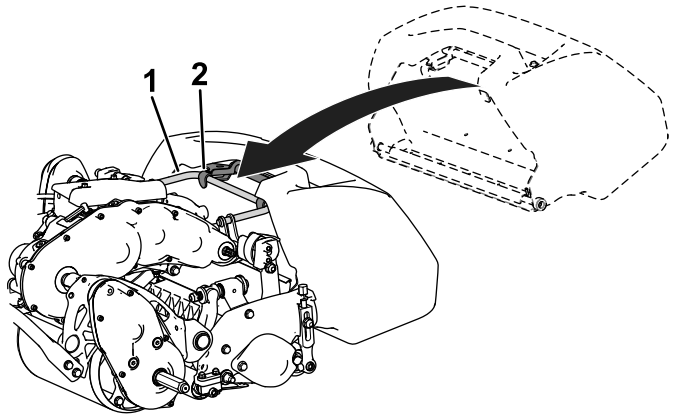

g308471

Figure 11

1. Basket hooks

  3. Install the basket hooks over the frame loop (Figure 11).

Important: **If you drop the basket, examine the pitch-arm contact points near the lower lip of the basket for damage (Figure 12). Straighten them before using the basket.**

Using the basket with bent pitch-arm contact points may cause contact between the basket and cutting unit, causing undesired noise and/or damage to the basket and cutting unit.

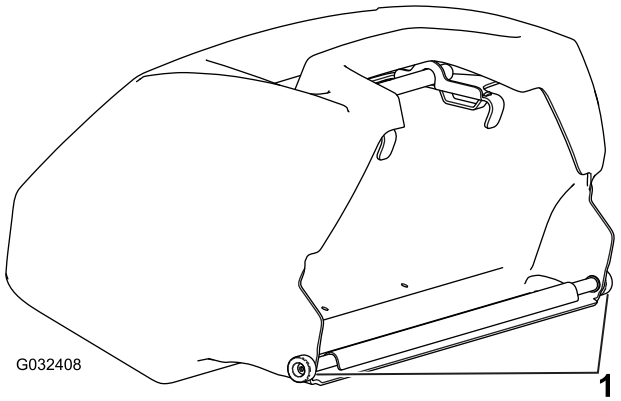

g032408

Figure 12

1. Pitch-arm contact point

4

Adjusting the Latch Bolt for the Handle-Height Adjuster

No Parts Required

Procedure

If the handle-height adjuster is not parallel with the upper receiver weldment, perform the following steps to adjust the bolt:

1. Loosen the nut on the latch bolt so that the bolt head can move freely just beyond the pivot stop (Figure 13).

   Note: You can apply pressure to the handle-height-adjuster spring to reduce tension on the bolt.

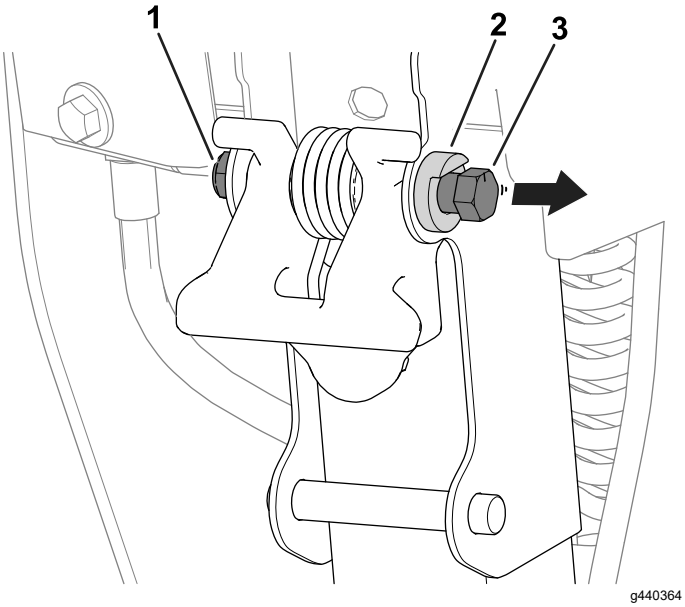

Figure 13

1. Nut
2. Pivot stop
3. Latch bolt

2. Rotate the bolt clockwise or counter-clockwise to adjust the angle of the handle-height adjuster in or out. The handle-height adjuster should be parallel to the upper receiver weldment as shown in Figure 14.

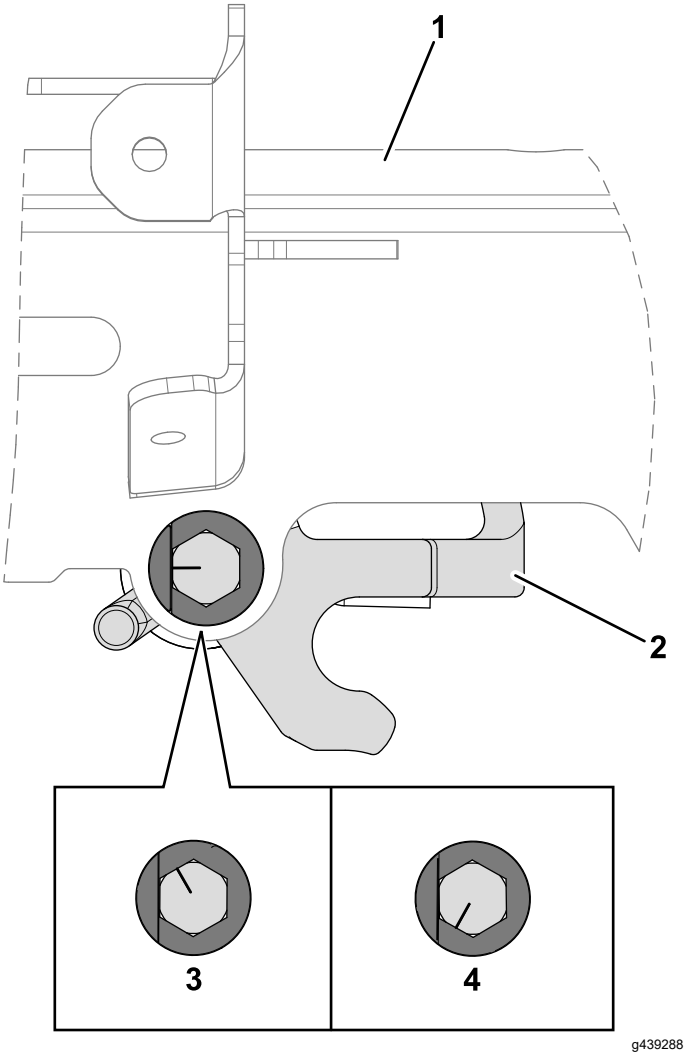

Figure 14

1. Upper receiver weldment
2. Handle-height adjuster
3. Bolt—clockwise orientation
4. Bolt—counter-clockwise orientation

3. Tighten the nut on the latch bolt (Figure 13) so that the new bolt position is secured against the pivot stop.

5

Mounting the Battery Charger on a Wall

Optional

No Parts Required

Procedure

You can mount the charger on a wall using the wall-mount key holes cut into the back of the unit. Use screws that have a 6 mm (1/4 inch) diameter shaft and a head diameter of 11 mm (0.45 inch).

Important: **Survey your work area and determine a location that best meets the criteria for safe and effective operation of the charger.**

Product Overview

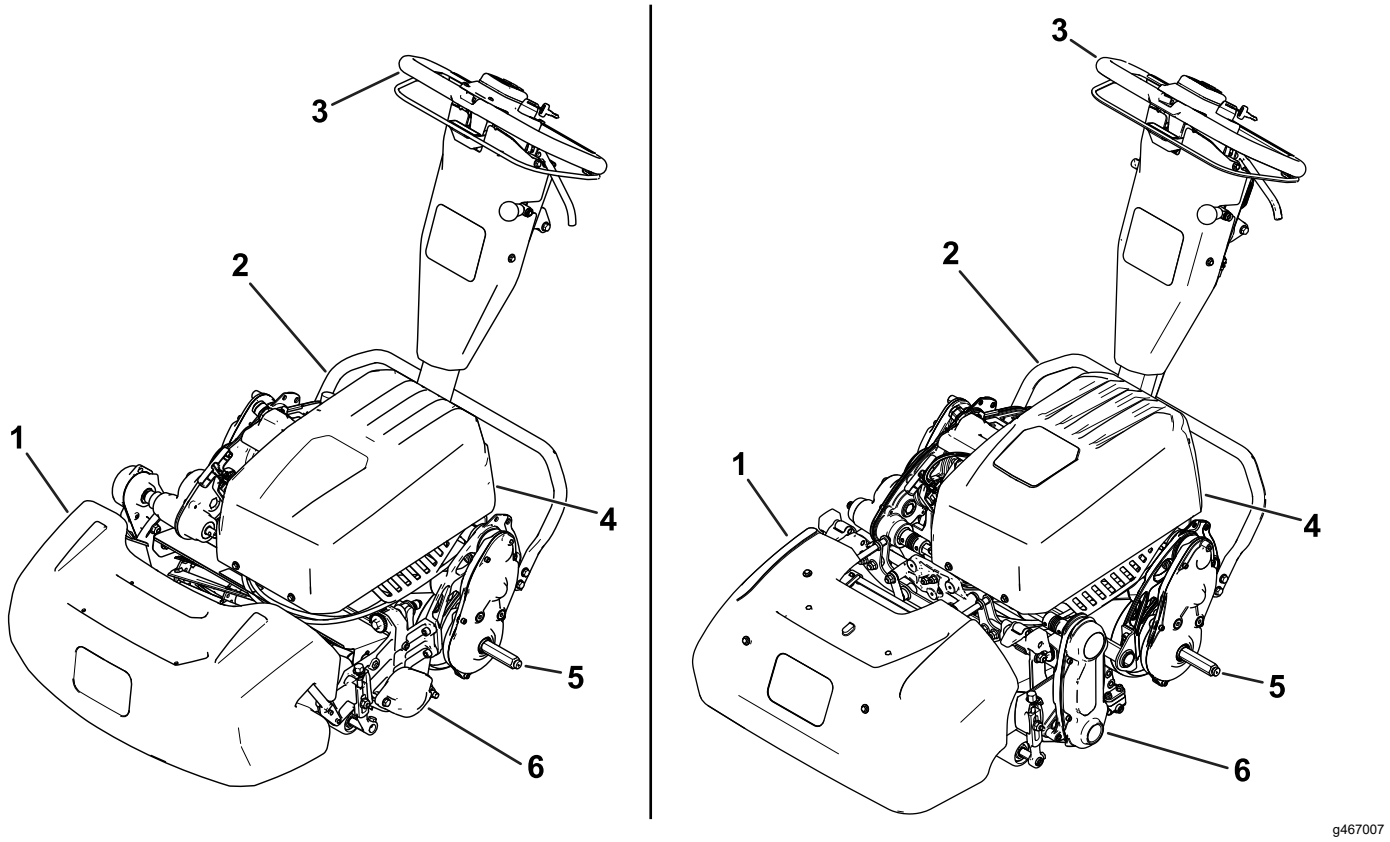

Figure 15
Model 04835 and 04845 shown on left; Model 04865 shown on right.

1. Grass basket
2. Kickstand
3. Handle
4. Battery pack
5. Transport-wheel axle
6. Cutting unit

Controls

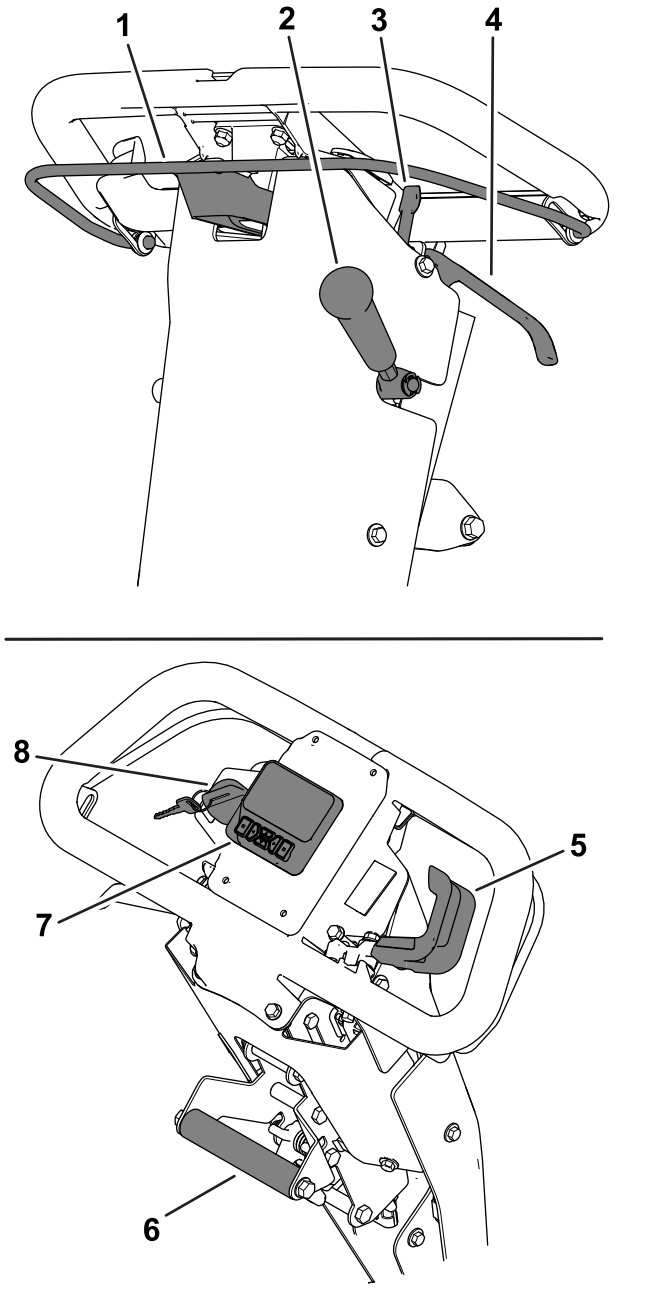

Figure 16

1. Clutch bail
2. Cutting-unit-drive lever
3. Parking-brake latch
4. Service-brake lever
5. Speed control
6. Lift-assist handle
7. InfoCenter
8. Key switch

Clutch Bail

Use the clutch bail (Figure 16) to engage or disengage the traction drive.

- **Engage the traction drive:** Pull up and hold the bail to the handle.

  Traction speed can vary by how far you pull up the bail. Pulling the bar up to handle will move the machine at the maximum set speed; pulling it slightly up will move the machine at a slower speed.
- **Disengage the traction drive:** Release the bail.

Speed Control

Use the speed control (Figure 16) to adjust the machine speed.

- **Increase the machine speed:** Rotate the lever down.
- **Decrease the machine speed:** Rotate the lever up.

Key Switch

The switch (Figure 16) allows you to start or shut off the machine.

- **Start the machine:** Move the key to the ON position.
- **Shut off the machine:** Move the key to the OFF position.

Service-Brake Lever

Use the service brake (Figure 16) to slow or stop the machine. Pull the lever toward the handle to engage the service brake.

Parking-Brake Latch

Use the parking-brake latch (Figure 16) to engage the parking brake while you are away from the machine.

- **Engage the parking brake:** Engage and hold the service-brake lever and rotate the parking-brake latch toward you.
- **Disengage the parking brake:** Pull the service-brake lever toward the handle.

Cutting-Unit-Drive Lever

Use the cutting-unit-drive lever (Figure 16) to engage or disengage the cutting unit.

- **Engage the cutting unit:** With the clutch bail in the neutral (disengaged) position, move the lever down.
- **Disengage the cutting unit:** Move the lever up.

InfoCenter LCD Display

The InfoCenter LCD display shows information about your machine and battery pack, such as the current battery charge, speed, diagnostics information, and more (Figure 16).

For more information, refer to Using the InfoCenter Display (page 23).

Lift-Assist Handle

Use the lift-assist handle (Figure 16) to help with adjusting the handle height or to raise and lower the kickstand.

Handle-Height Adjuster

Use the handle-height adjuster (Figure 17) to move the handle height to a comfortable operating position. Pull up on the adjuster and use the lift-assist handle to raise or lower the handle height.

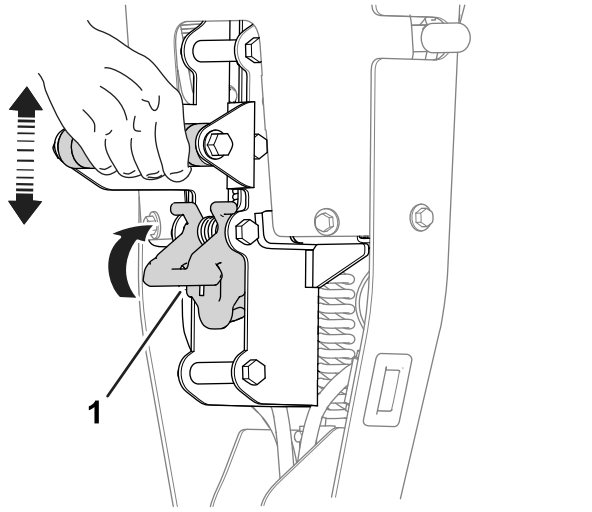

Figure 17

1. Handle-height adjuster

Kickstand

The kickstand (Figure 18) is mounted to the rear of the machine. Use the kickstand when you install or remove the transport wheels or the cutting unit.

- **TRANSPORT-WHEEL-SERVICE position:**

  To use the kickstand to install the transport wheels, put your foot on the kickstand while pulling up and back on the lift-assist handle (Figure 18).

⚠ CAUTION

The machine is heavy and can cause back strain if lifted improperly.

Put your foot pressure down on the kickstand and use only the lift-assist handle to raise the machine. Attempting to raise the machine onto the kickstand any other way can cause injury.

- **CUTTING-UNIT-SERVICE position:**

  To prevent the machine from tipping backward when removing the cutting unit, lower the kickstand and push out the spring pin so that it keeps the kickstand in the position shown in Figure 19.

- **Retracting the kickstand to the STORAGE position:**

  1. Keep your foot on the kickstand while lowering the traction drum to the ground.
  2. Remove your foot from the kickstand and allow space for the kickstand to retract to the STORAGE position.

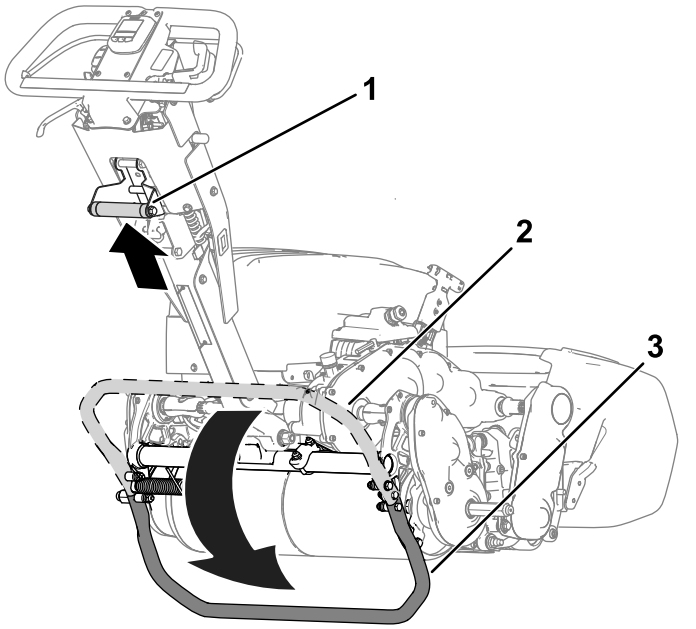

Figure 18

1. Lift-assist handle
2. Kickstand—STORAGE position
3. Kickstand—TRANSPORT-WHEEL SERVICE position

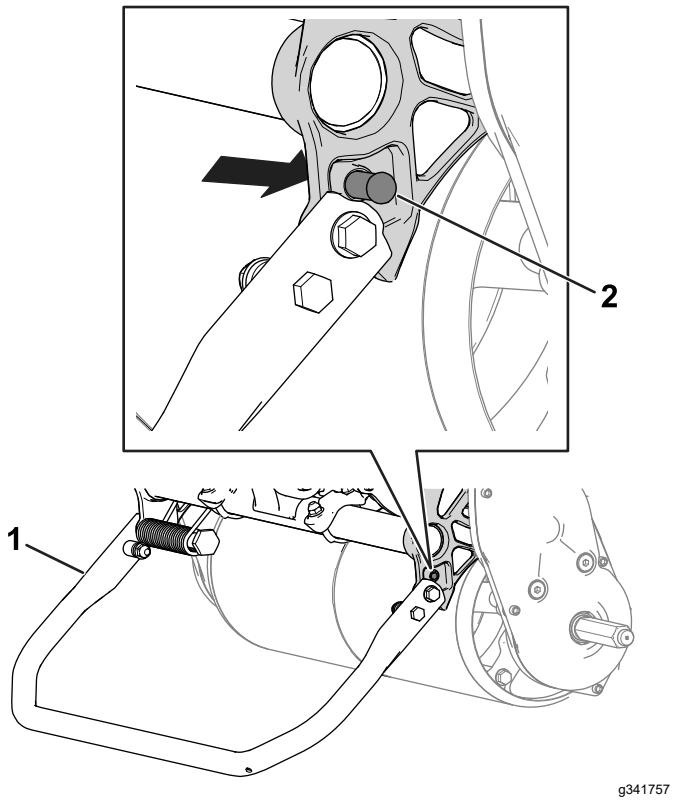

Figure 19

1. Kickstand—CUTTING-UNIT SERVICE position
2. Spring pin

Specifications

Model	04835	04845	04865
Width	91 cm (36 inches)	104 cm (41 inches)	91 cm (36 inches)
Dry weight*	78 kg (172 lb)	81 kg (178 lb)	92 kg (202 lb)
Width of cut	53 cm (21 inches)	66 cm (26 inches)	53 cm (21 inches)
Height of cut	Dependent on traction-drum position and use of High Height-of-Cut Kit.		Refer to your cutting unit *Operator's Manual*.
Clip	Dependent on reel speed and reel-drive-pulley position.		
Mowing speed	3.2 km/h (2 mph) to 5.6 km/h (3.5 mph)		
Transport speed	8.5 km/h (5.3 mph)		
***Traction unit only. Refer to the cutting unit *Operator's Manual* for the weight of each cutting unit.			

Electrical Specifications

Voltage	48 V
Current	DC (⎓)
Amp Hours	28.4 AH
IP Rating	IP65

Attachments/Accessories

A selection of Toro approved attachments and accessories is available for use with the machine to enhance and expand its capabilities. Contact your Authorized Service Dealer or authorized Toro distributor or go to www.Toro.com for a list of all approved attachments and accessories.

To ensure optimum performance and continued safety certification of the machine, use only genuine Toro replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous, and such use could void the product warranty.

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

Before Operation

Before Operation Safety

General Safety

- Never allow children or untrained people to operate or service the machine. Local regulations may restrict the age of the operator. The owner is responsible for training all operators and mechanics.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- Park the machine on a level surface, engage the parking brake, shut off the machine, remove the key (if equipped), and wait for all movement to stop before you leave the operator's position. Allow the machine to cool before adjusting, servicing, cleaning, or storing it.
- Know how to stop the machine and shut off the machine quickly.
- Check that operator-presence controls, safety switches, and safety protective devices are attached and functioning properly. Do not operate the machine unless they are functioning properly.
- Inspect the area where you will use the machine and remove all objects that the machine could throw.

Performing Daily Maintenance

Perform the daily maintenance procedures; refer to Maintenance (page 33).

Adjusting the Clip Rate

The clip rate is determined by the following machine settings:

- **Reel speed**: You can adjust the reel speed to a high or low setting; refer to Adjusting the Reel Speed (page 19).
- **Reel-drive-pulley position**: You can set the reel-drive pulleys in 2 positions; refer to your cutting unit *Operator's Manual*.

To determine the reel speed and reel-drive-pulley position for the appropriate clip, refer to the following table:

Clip Rate

Reel Speed	Belt Position	Cutting Unit		
		8-blade	***11-blade***	***14-blade***
Low	***Low***	7.3 mm (0.286 inch)	5.3 mm (0.208 inch)	4.2 mm (0.164 inch)
Low	***High***	8.7 mm (0.241 inch)	4.4 mm (0.175 inch)	3.5 mm (0.137 inch)
High	***Low***	5.9 mm (0.233 inch)	4.3 mm (0.169 inch)	3.4 mm (0.133 inch)
High	***High***	5.0 mm (0.196 inch)	3.6 mm (0.142 inch)	2.8 mm (0.112 inch)

Adjusting the Reel Speed

Use the reel-speed-control knob (Figure 20) to adjust the reel speed.

- **High reel speed**: Rotate the knob so that the "H" on the knob is directed toward the front of the machine.
- **Low reel speed**: Rotate the knob so that the "L" on the knob is directed toward the front of the machine.

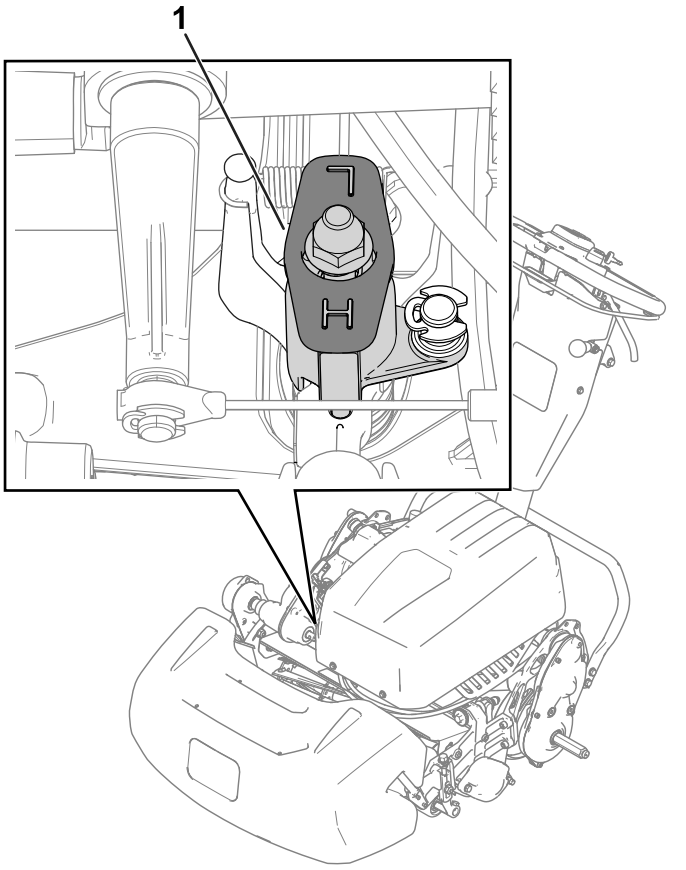

Figure 20

1. Reel-speed-control knob (shown in the high-reel-speed position)

Adjusting the Traction-Drum Position

Model 04835 and Model 04845

For Model 04835 and Model 04845 machines, the traction drum can be adjusted to 2 positions:

- **LOW** position: Use this position for mowing at a lower height of cut (e.g., mowing a golf-course green).
- **HIGH** position: Use this position for mowing at a higher height of cut (e.g., mowing a golf-course tee box).

1. Move the kickstand to the CUTTING-UNIT SERVICE position.
2. Remove the shoulder bolts (Figure 21) on each side of the machine that secure the drum drive housing to the chassis.

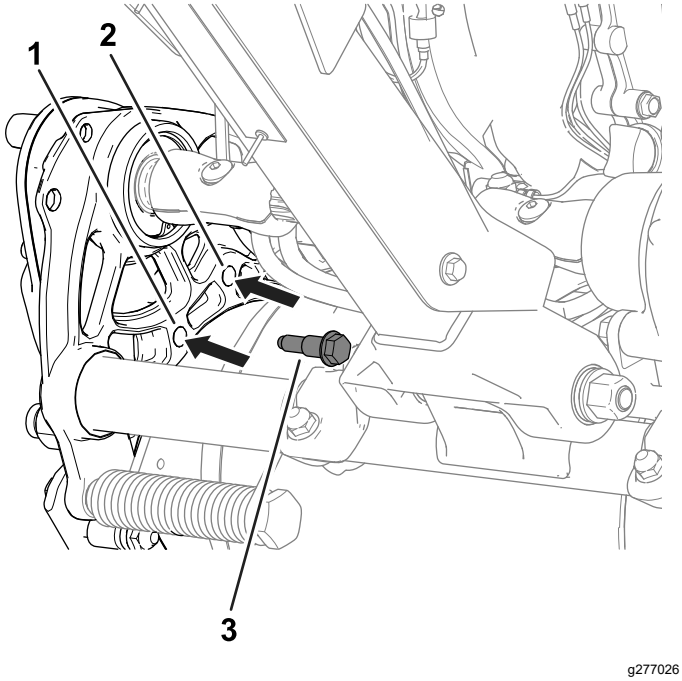

Figure 21

Left side of the machine shown

1. Insert shoulder bolt here for the LOW position.
2. Insert shoulder bolt here for the HIGH position.
3. Shoulder bolt

3. Align the holes in the chassis with the holes in the drive housing.
4. Use the previously removed shoulder bolts to secure the drive housing to the chassis (Figure 21).
5. Move the kickstand to the STORAGE position.

Adjusting the Handle Height

Use the handle-height adjuster to adjust the handle height to a comfortable operating position; refer to Handle-Height Adjuster (page 17).

Transporting the Machine to a Job Site

Transporting the Machine Using Transport Wheels

Use the transport wheels to transport the machine a shorter distance.

1. Install the transport wheels; refer to Installing the Transport Wheels (page 29).

2. Ensure that the traction and reel-drive controls are in the NEUTRAL position.
3. Start the machine; refer to Starting the Machine (page 22).
4. Set the speed control to SLOW, tip the front of the machine up, gradually engage the traction drive, and slowly increase the machine speed.
5. Adjust the speed control to operate the mower at the desired ground speed and transport the machine to the desired destination.

Transporting the Machine Using a Trailer

Use a trailer to transport the machine a considerable distance. Use caution while loading and unloading the machine onto the trailer.

1. Carefully drive the machine onto the trailer.
2. Shut off the machine and engage the parking brake.
3. Use a full-width ramp for loading the machine into a trailer or truck.
4. Securely fasten the machine to the trailer.

Note: You can use the Toro Trans Pro trailer to transport the machine. For instructions on loading the trailer, refer to your trailer *Operator's Manual*.

Removing the Transport Wheels

1. Release the clutch bail, use the speed control to lower the machine speed, and shut off the machine.
2. Move the kickstand to the TRANSPORT-WHEEL-SERVICE position; refer to Kickstand (page 17).
3. Remove the transport wheels by pushing the wheel-locking clips out of the axles (Figure 22).

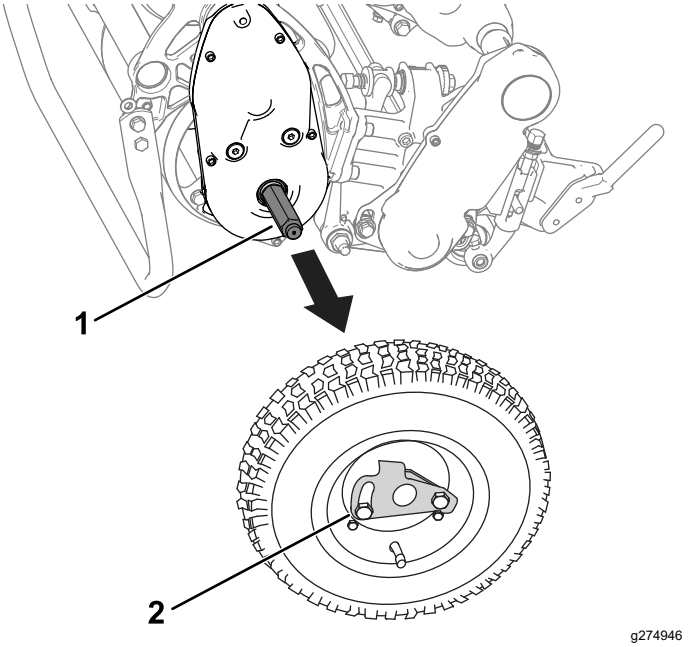

Figure 22

1. Axle
2. Wheel-locking clip

4. Carefully lower the machine off of the kickstand by pushing forward slowly or by lifting the lower handle support, allowing the kickstand to spring back to the STORAGE position; refer to Kickstand (page 17).

During Operation

During Operation Safety

General Safety

- The owner/operator can prevent and is responsible for accidents that may cause personal injury or property damage.
- Wear appropriate clothing, including eye protection; long pants; substantial, slip-resistant footwear; and hearing protection. Tie back long hair and do not wear loose clothing or loose jewelry.
- Do not operate the machine while ill, tired, or under the influence of alcohol or drugs.
- Use your full attention while operating the machine. Do not engage in any activity that causes distractions; otherwise, injury or property damage may occur.
- Before you turn on the machine, ensure that all drives are in neutral, the parking brake is engaged, and you are in the operating position.
- Keep bystanders and children out of the operating area. If co-workers must be present, use caution

and ensure that the grass basket is installed on the machine.

- Operate the machine only in good visibility to avoid holes or hidden hazards.
- Do not operate the machine when there is the risk of lightning.
- Use care when mowing on wet grass. Poor footing could cause a slip-and-fall accident.
- Keep your hands and feet away from the cutting unit.
- Look behind and down before backing up to be sure of a clear path.
- Use extreme caution when reversing or pulling the machine toward you.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure your vision.
- Stop the cutting unit whenever you are not mowing.
- Disengage the drive to the cutting unit and shut off the machine before adjusting the height of cut.
- Never leave a running machine unattended.
- Before you leave the operator's position, do the following:
  - Park the machine on a level surface.
  - Disengage the cutting unit(s).
  - Engage the parking brake.
  - Shut off the machine and remove the key (if equipped).
  - Wait for all movement to stop.
- Shut off the machine before emptying the basket.
- Shut off the machine and disengage the drive to the cutting unit in the following situations:
  - Before charging
  - Before clearing blockages
  - Before removing the grass basket
  - Before checking, cleaning, or maintaining the cutting unit
  - After striking a foreign object or if an abnormal vibration occurs. Inspect the cutting unit for damage and make repairs before starting and operating the machine
  - Before leaving the operating position
- Use only accessories and attachments approved by The Toro® Company.

Slope Safety

- Slopes are a major factor related to loss of control and rollover accidents, which can result in severe injury or death. You are responsible for safe slope operation. Operating the machine on any slope requires extra caution. Before using the machine on a slope, do the following:
  - Review and understand the slope instructions in the manual and on the machine.
  - Evaluate the site conditions of the day to determine if the slope is safe for machine operation. Use common sense and good judgment when performing this evaluation. Changes in the terrain, such as moisture, can quickly affect the operation of the machine on a slope.
- Operate across slopes, never up and down. Avoid operation on excessively steep or wet slopes. Poor footing could cause a slip-and-fall accident.
- Identify hazards at the base of the slope. Do not operate the machine near drop-offs, ditches, embankments, water, or other hazards. The machine could suddenly roll over if a wheel goes over the edge or the edge collapses. Keep a safe distance between the machine and any hazard. Use a handheld tool to operate in these areas.
- Avoid starting, stopping, or turning the machine on slopes. Avoid making sudden changes in speed or direction; turn slowly and gradually.
- Do not operate a machine under any conditions where traction, steering, or stability is in question. Be aware that operating the machine on wet grass, across slopes, or downhill may cause the machine to lose traction. Loss of traction to the drive may result in sliding and a loss of braking and steering. The machine can slide even if you stop the drive.
- Remove or mark obstacles such as ditches, holes, ruts, bumps, rocks, or other hidden hazards. Tall grass can hide obstacles. Uneven terrain could overturn the machine.
- If you lose control of the machine, step away from the direction of travel of the machine.
- Always keep the machine in gear when going down slopes. Do not coast downhill (applicable only to gear-drive units).

Starting the Machine

Note: For illustrations and descriptions of the controls referenced in this section, refer to Controls (page 16).

1. Ensure that the T-handle connector on the main wire harness is connected to the main power supply connector
2. Ensure that the clutch bail is disengaged.
3. Move the key switch to the On position.

Using the InfoCenter Display

The InfoCenter display (Figure 23) shows information about your machine, such as the operating status, various diagnostics, and other information about the machine.

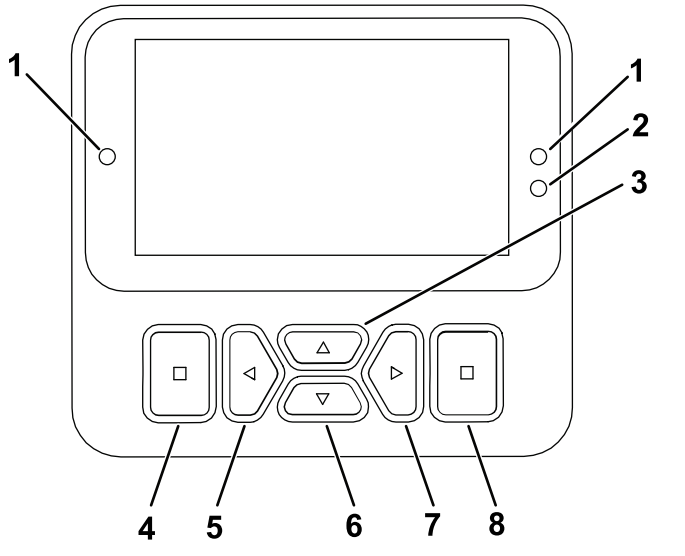

g471371

Figure 23

1. Indicator light
2. Display brightness sensor
3. Navigational button—up
4. Back/exit button
5. Navigational button—decrease/ left
6. Navigational button—down
7. Navigational button—increase/ right
8. Enter/select button

Note: The purpose of each button may change depending on what is required at the time. Each button is labeled with an icon displaying its current function.

Use the navigational buttons to navigate between several screens and menu items:

- **Splash screen**: shows current machine information for a few seconds after you move the key to the ON position.
- **Main information screen** (Figure 24): shows current machine information while the key is in the ON position.

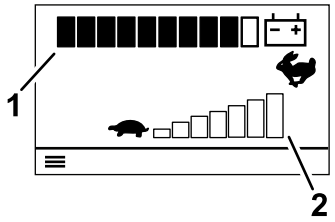

g532340

Figure 24

1. Battery charge indicator
2. Speed control setting

- **Main menu**: refer to Using the Menus (page 24).

InfoCenter Icon Description

	Fast
	Slow
	The parking brake is engaged.
	The PTO is on.
	The PTO is disengaged.
	Battery
	Active
	Inactive
	Previous
	Next
	Increase
	Decrease
	Previous screen

InfoCenter Icon Description (cont'd.)

	Next screen
	Increase value
	Decrease value
	Menu
	Scroll up/down
	Scroll left/right

Using the Menus

To access the InfoCenter menu system, press the menu access button while at the main screen. This will bring you to the main menu. Refer to the following tables for a synopsis of the options available from the menus:

Main Menu	
Menu Item	**Description**
Faults	The Faults menu contains a list of the recent machine faults. Refer to the *Service Manual* or your authorized Toro distributor for more information on the Faults menu.
Service	The Service menu contains information on the machine such as hours of use and battery usage and status.
Diagnostics	The Diagnostics menu lists various states that the machine currently has. You can use this to troubleshoot certain issues as it will quickly tell you which machine controls are on and which are off.
Settings	The Settings menu allows you to customize the InfoCenter display.
About	The About menu lists the model number, serial number, and software version of your machine.

Service Menu	
Menu Item	**Description**
Hours	Lists the total number of hours that the machine has been turned on.
Power Use	Lists the instantaneous power delivered by the battery in Watts.
Battery Charge	Lists the current battery charge as a percent of capacity.
Battery Current	Lists the instantaneous current delivered by the battery in Amps.
Battery Volts	Lists the battery potential in volts.
Total Usage	Lists the total amount of battery usage in watt hours.
Capacity	List the current battery capacity in amp hours.
Backlap	Sets the machine in Backlap Mode.

Settings Menu	
Menu Item	**Description**
Enter PIN	Allows a person (superintendent/mechanic) authorized by your company with the PIN code to access protected menus
Protect Settings 🔒	Controls the protected menus.
Reset Defaults 🔒	Resets the InfoCenter to default settings.
Backlight	Use this setting to increase or decrease the brightness of the InfoCenter.
Language	Use this setting to change the language used on the InfoCenter.
Units	Use this setting to change the units used by the InfoCenter. The menu choices are English and Metric.

About Menu	
Menu Item	**Description**
Model	Lists the model number of the machine.
SN	Lists the serial number of the machine.
S/W Rev	Lists the revision number of the machine software.
Battery	Lists the software revision of the battery.
XDM-2700 🔒	Lists the software revision of the InfoCenter
Cutting Unit 1 🔒	Lists the software revision of the cutting unit.

Note: 🔒 Protected under Protected Menus—accessible only by entering PIN; refer to Accessing Protected Menus (page 25).

Note: If you inadvertently change the language or contrast to a setting where you can no longer understand or view the display, contact your authorized Toro distributor for assistance in resetting the display.

Viewing and Changing the Protected Menu Settings

1. In SETTINGS, scroll down to PROTECT SETTINGS.
2. To view and change the settings without entering a PIN code, use the select button to change the PROTECT SETTINGS to ☐ (Off).
3. To view and change the settings with a PIN code, use the select button to change the PROTECT SETTINGS to ☑ (On), set the PIN code, and turn the key in the ignition switch to the OFF position and then to the ON position.

Accessing Protected Menus

Note: The factory default PIN code for you machine is either 0000 or 1234.

If you changed the PIN code and forgot the code, contact your authorized Toro distributor for assistance.

1. From the MAIN MENU, scroll down to the SETTINGS menu and press the select button (Figure 25).

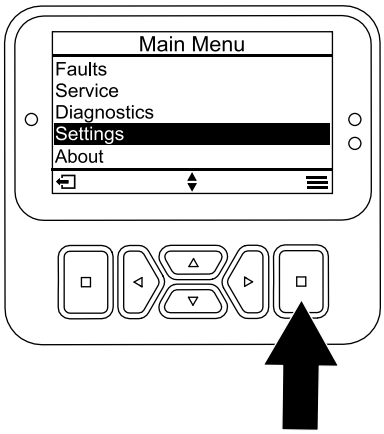

g534624

Figure 25

2. In the SETTINGS menu, scroll to ENTER PIN and press the select button (Figure 26A).

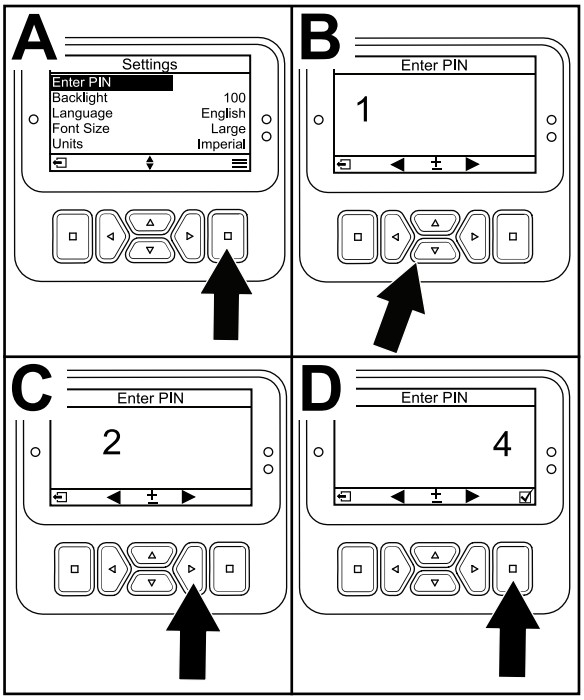

g471350

Figure 26

3. To enter the PIN code, press the up/down navigation buttons until the correct first digit appears, then press the right navigation button to move on to the next digit (Figure 26B and Figure 26C). Repeat this step until the last digit is entered.
4. Press the select button (Figure 26D).

   Note: If the display accepts the PIN code and the protected menu is unlocked, **PIN** displays in the upper right corner of the screen.
5. To lock the protected menu, rotate the key switch to the OFF position and then to the ON position.

Understanding the Diagnostic Light

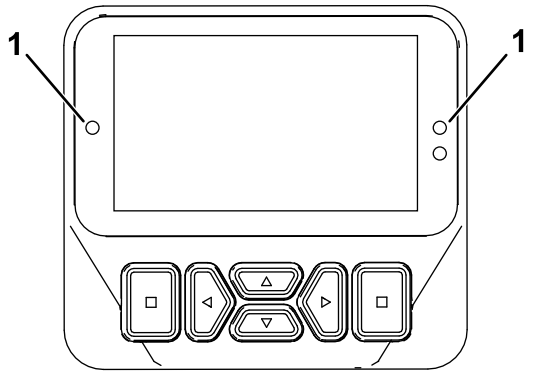

g462666

Figure 27

1. Diagnostic light

- Flashing red—active fault
- Solid red—active advisory
- Solid blue—calibration/dialog messages
- Solid green—normal operation

Operating Tips

Important: **Grass clippings act as a lubricant when mowing. Operating the cutting unit excessively without grass clippings can damage the cutting unit.**

- Mow the greens in a straight back-and-forth direction across the green.
- Avoid circular mowing or turning the machine on the greens areas to prevent scuffing.
- Turn the machine off the green by raising the cutting reel (pushing the handle down) and performing a tear-shaped turn on the traction drum (Figure 28).

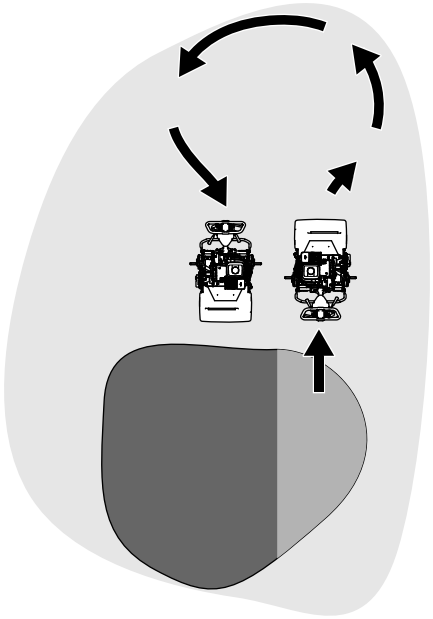

g271799

Figure 28

- Mow at a normal walking pace. Fast speeds saves little time and results in an inferior mowing job.
- To assist in maintaining a straight line across the green and to keep the machine an equal distance from the edge of the previous cut, use the alignment stripes on the basket (Figure 29).

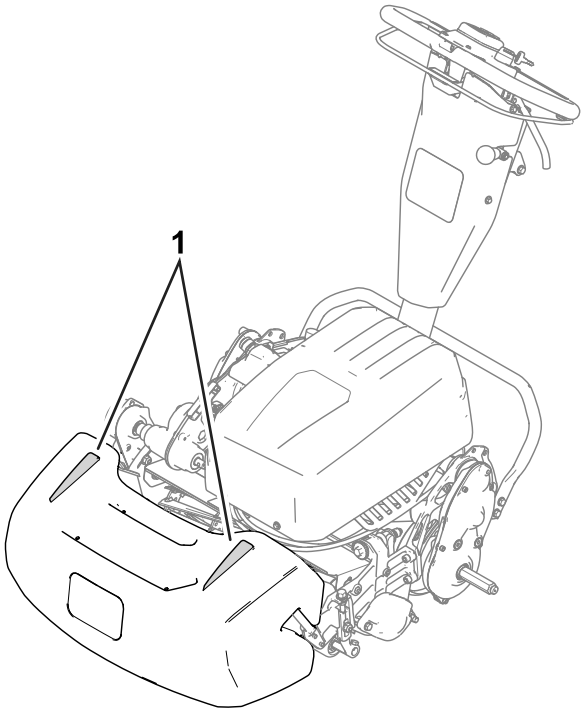

g341513

Figure 29

1. Alignment stripes

Operating the Machine in Low Light Conditions

Use the LED Light Kit when you operate the machine in low light conditions. Contact your authorized Toro distributor for this kit.

Important: **Do not use other light systems with this machine; they may damage the battery pack or electrical system.**

Operating the Controls while Mowing

1. Start the machine, set the speed control to a reduced speed, push down on the handle to raise the cutting unit, and engage the traction drive to transport the machine onto the collar or approach of the green.
2. Stop the machine on the collar or approach.
3. Use the speed control to increase the machine speed, engage the cutting unit, engage the traction drive to move the machine onto the green, lower the cutting unit to the ground, and begin mowing.

Shutting Off the Machine

1. Release the clutch bail.
2. Move the speed control to the SLOW position.
3. Move the key switch to the OFF position and remove the key.

After Operation

After Operation Safety

General Safety

- Park the machine on a level surface, engage the parking brake, shut off the machine, remove the key (if equipped), and wait for all movement to stop before you leave the operator's position. Allow the machine to cool before adjusting, servicing, cleaning, or storing it.
- Clean grass and debris from the machine to help prevent fires.
- Allow the machine to cool before storing the machine in any enclosure.
- Do not store the machine where there is an open flame, spark, or pilot light, such as on a water heater or on other appliances.

Battery and Charger Safety

General

- Improperly using or maintaining the battery charger could result in injury. To reduce this potential, comply with the all safety instructions.
- Use only the supplied charger for battery charging.
- Confirm the voltage that is available in your country before using the charger.
- For connection to a supply not in the US, use an attachment plug adapter of the proper configuration for the power outlet, if needed.
- Do not get the charger wet; keep it protected from rain and snow.
- A risk of fire, electric shock, or injury may result from using an accessory not recommended or sold by Toro.
- To reduce risk of a battery explosion, follow these instructions and the instructions for any equipment that you intend to use near the charger.
- Batteries could emit explosive gasses if they are significantly overcharged.

Training

- Never allow children or untrained people to operate or service the charger. Local regulations

may restrict the age of the operator. The owner is responsible for training all operators and mechanics.

- Read, understand, and follow all instructions on the charger and in the manual before operating the charger. Be familiar with the proper use of the charger.

Preparation

- Keep bystanders and children away while charging.
- Wear appropriate clothing while charging, including eye protection; long pants; and substantial, slip-resistant footwear.
- Shut off the machine and wait 5 seconds until the machine has completely powered down before charging. Failure to do this may cause arcing.
- Ensure that the area is well ventilated while charging.
- Read and follow all precautions for charging.
- The charger is for use only on nominal 120 and 240 VAC circuits, and is equipped with a grounding plug for 120 VAC operation. For use with 240 V circuits, contact your authorized Toro distributor for the correct power cord.

Operation

- Do not charge a frozen battery.
- Do not abuse the cord. Do not carry the charger by the cord or yank on the power supply cord to disconnect the charger from the receptacle. Keep the cord from heat, oil, and sharp edges.
- Connect the charger directly to a grounding receptacle. Do not use the charger on an ungrounded outlet, even with an adaptor.
- Do not alter the provided power cord or plug.
- Avoid dropping a metal tool near or onto a battery; it might cause a spark or short-circuit an electrical part that could lead to an explosion.
- Remove metal items such as rings, bracelets, necklaces, and watches when working with a lithium-ion battery. A lithium-ion battery can produce enough current to cause a severe burn.
- Never operate the charger without good visibility or light.
- Use an appropriate extension cord.
- If the power supply cord is damaged while it is plugged in, disconnect the cord from the wall receptacle and contact an authorized Toro distributor for a replacement.
- Unplug the charger from the electrical outlet when not in use, before moving it to another location, or prior to servicing it.

Maintenance and Storage

- Store the charger indoors in a dry, secure place that is out of the reach of unauthorized users.
- Do not disassemble the charger. Take the charger to an authorized Toro distributor when service or repair is required.
- Unplug the power cord from the outlet before starting any maintenance or cleaning to reduce risk of electric shock.
- Maintain or replace safety and instruction labels as needed.
- Do not operate the charger with a damaged cord or plug. Replace a damaged cord or plug immediately.
- If the charger has received an impact, been dropped, or otherwise damaged, do not use it; take it to an authorized Toro distributor.

Operating the Controls after Mowing

1. Drive the machine off of the green, push down on the handle to raise the cutting unit, release the clutch bail, disengage the cutting unit, and shut off the machine.
2. Remove the grass basket and empty the basket of clippings.
3. Install the grass basket on the machine and transport the machine to storage.

Transporting the Machine

After mowing, transport the machine away from the job site; refer to Transporting the Machine Using Transport Wheels (page 20) or Transporting the Machine Using a Trailer (page 21).

Installing the Transport Wheels

1. Move the kickstand to the TRANSPORT-WHEEL-SERVICE position; refer to Kickstand (page 17)
2. Slide a wheel onto an axle (Figure 30).

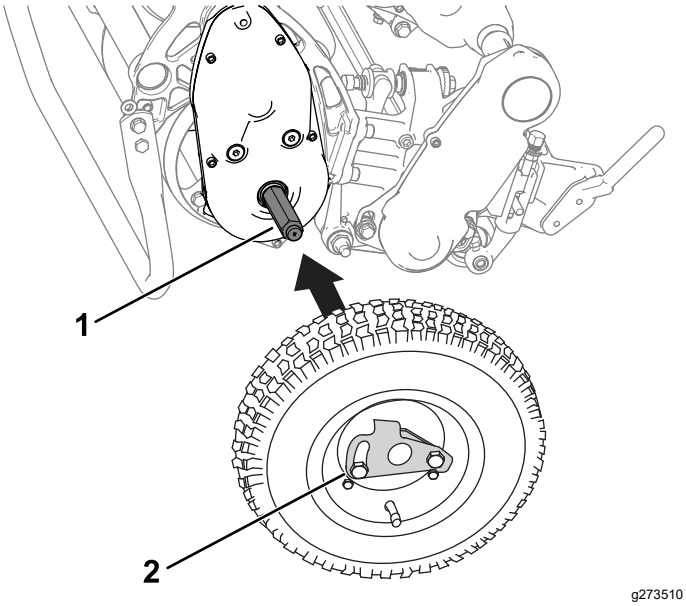

Figure 30

1. Axle
2. Wheel-locking clip

3. Pivot the wheel-locking clip (Figure 30) away from center of the wheel, allowing it to slide farther onto the axle.
4. Rotate the wheel back and forth until it slides completely onto the axle and the locking clip is secured in the groove on the axle shaft.
5. Repeat the procedure on the opposite side of the machine.
6. Carefully lower the machine off the kickstand.

Engaging or Disengaging the Transmission

You can disengage the drum from the transmission to allow the machine to be maneuvered. Disengage the transmission when you need to move the machine without starting the machine (e.g., performing maintenance in an enclosed area).

Before you operate the machine, ensure that you engage the transmission.

1. Locate the traction-engagement lever on the transmission gearbox (Figure 28).

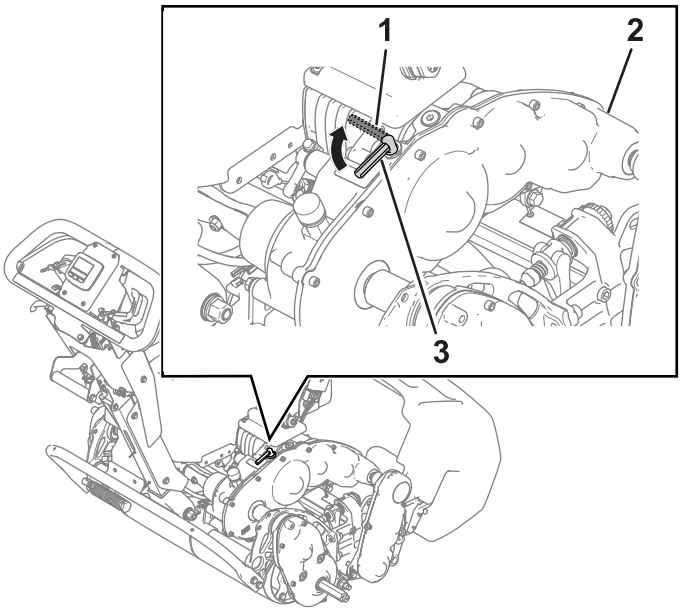

Figure 31

1. Traction-engagement lever—DISENGAGED position
2. Transmission gearbox
3. Traction-engagement lever—ENGAGED position

2. Perform the following step to engage or disengage the transmission:
   - **Disengage the transmission:** Rotate the lever to the DISENGAGED position.
   - **Engage the transmission:** Rotate the lever to the ENGAGED position.

Maintaining the Lithium-Ion Battery Pack

⚠ WARNING

The battery pack contains high voltage, which could burn or electrocute you.

- **Do not attempt to open the battery pack.**
- **Do not place anything in the battery-pack connector other than the wire-harness connector that came with the product.**
- **Use extreme care when handling a battery pack with a cracked case.**
- **Use only the charger designed for the battery pack.**

Transporting the Battery Pack

The US Department of Transportation and international transportation authorities require that lithium ion batteries be transported using special packaging and only be transported by carriers certified to haul them. In the US, you are allowed to transport the battery when it is installed on the machine as battery powered equipment, with some regulatory requirements. Contact the US Department of Transportation or the appropriate government body in your country for detailed regulations on transportation of your eFlex or eFlex battery.

For detailed information on shipping a battery, contact your authorized Toro distributor.

Caring for the Battery Pack

The lithium-ion battery holds a sufficient charge to perform intended work during its life span. As time goes by, the total amount of work the battery is able to complete on a single charge gradually diminishes. The following table lists the approximate expected work that the machine should be capable of over the first 4 years of use:

Year	Area Cut Per Full Charge
1	3,809 m^2 (41,000 ft^2)
2	3,623 m^2 (39,000 ft^2)
3	3,252 m^2 (35,000 ft^2)
4	3,066 m^2 (33,000 ft^2)

Note: Your results may vary depending on the distance you need to transport the machine, the contact setting of the bedknife, and other factors as discussed in this section.

To achieve maximum life and use from your battery, apply the following care guidelines:

- Do not open the battery pack. There are no user-serviceable parts inside.
- Store/park the machine in a clean, dry garage or storage area, **away from direct sunlight and heat sources.** Do not store it in a location where the temperature drops below -30°C (-22°F) or rises above 60°C (140°F). **Temperatures outside of this range will damage your battery.** High temperatures during storage, especially at a high state of charge, reduces the life of the batteries.
- When storing the machine, follow the steps listed in Battery Storage Requirements (page 42).
- If you are mowing in hot conditions or in sunlight, the battery may overheat. If this happens, a high-temperature alert will appear on the InfoCenter LCD display. In this condition, the machine no longer operates with the reel engaged and the machine slows down.

  Immediately drive the machine to a cool location out of the sun, turn off the machine, and allow the battery to cool fully before resuming operation.
- Keep the battery pack cover clean. The white color reflects sunlight and slows the heat buildup in the battery pack. A dirty cover increases the heat in the battery pack each day and reduces the energy capacity.
- Adjust the bedknife-to-reel contact to be as light as possible. This reduces the power needed to run the reel and increases the amount of work the machine performs on each charge.

Understanding the Battery Charger

Refer to Figure 32 for an overview of the battery-charger displays and cords.

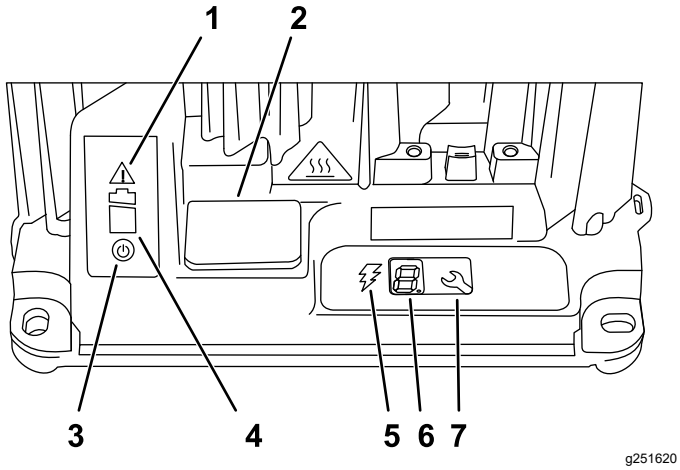

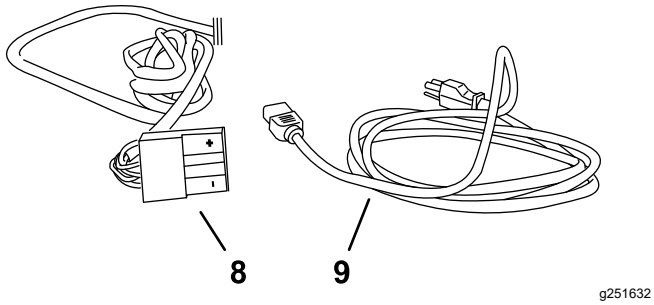

Figure 32

1. Error indicator light
2. USB port cover
3. AC Power indicator light
4. Battery charging indicator light
5. Charging output indicator light
6. LCD display
7. Select button
8. Output connector and cord
9. Power-supply cord

Connecting to a Power Source

To reduce the risk of electric shock, this charger has a 3-prong grounded plug (type B). If the plug does not fit into the wall receptacle, other grounded plug types are available; contact an authorized Toro distributor.

Do not change the charger or the power supply cord plug in any way.

⚠ DANGER

Contact with water while operating the machine could cause electric shock, causing injury or death.

Do not handle the plug or the charger with wet hands or while standing in water.

Important: **Check the power supply cord periodically for holes or cracks in the insulation. Do not use a damaged cord. Do not run the cord through standing water or wet grass.**

1. Insert the charger plug on the power supply cord into the matching input power socket on the charger.

   ⚠ WARNING

   A damaged charger cord can cause an electrical shock or a fire.

   Thoroughly inspect the power supply cord before using the charger. If the cord is damaged, do not operate the charger until you obtain a replacement.

2. Insert the wall plug end of the power supply cord into a grounded electrical outlet.

Charging the Battery Pack

Recommended charging range: 0° to 45°C (32° to 113°F)

Note: The battery shuts down and does not charge at temperatures below 0°C (32°F) and above 50°C (122°F).

1. Park the machine in the location designated for overnight charging.
2. Engage the parking brake.
3. Shut off the machine and remove the key.
4. Disconnect the T-handle connector from the main wire harness to the main-power-supply connector on the battery base (Figure 33).

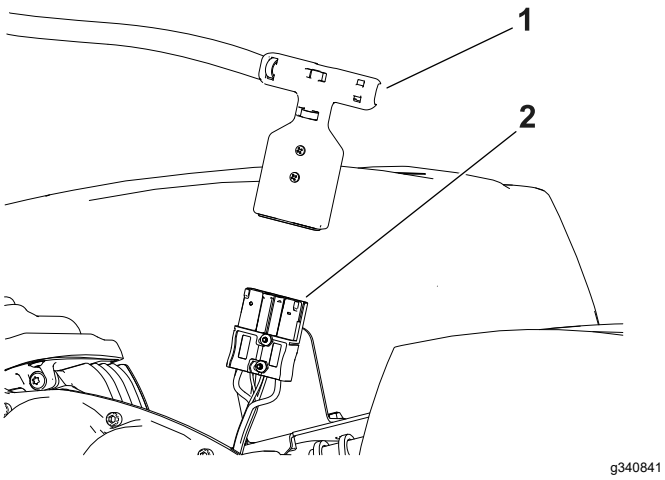

Figure 33

1. T-handle connector
2. Main-power-supply connector

5. Clean and dry both the battery pack and charger connectors.

   Important: **Do not use strong solvents that will degrade the strength of the connector plastic. Do not use dielectric grease on the connector or battery contacts.**

6. Align the positive connectors (marked with a “+”) of the charger connector and the power supply connector and push them together until they lock.

Monitoring the Charging Process and Troubleshooting

Note: The LCD status display displays messages during the course of charging. Most are routine.

If there is a fault, the error indicator light will flash amber, or light solid red. An error message will appear in the LCD display (Figure 32) 1 digit at a time, starting with the letter E or F (for example, E-0-1-1).

To correct an error, refer to the machine *Service Manual*. If none of these solutions correct the issue, contact an authorized Toro distributor.

Disconnecting the Charger

1. Disconnect the charger T-handle connector from the main battery power supply connector affixed to the battery tray.

   Important: **Do not pull on the cables**

2. Place the charger T-handle and cord in a storage position that will avoid damage.

Maintenance

⚠ WARNING

Failure to properly maintain the machine could result in premature failure of machine systems, causing possible harm to you or bystanders.

Keep the machine well maintained and in good working order as indicated in these instructions.

Note: Determine the left and right sides of the machine from the normal operating position.

Maintenance Safety

- Before you leave the operator's position, do the following:
  - Park the machine on a level surface.
  - Disengage the cutting unit(s).
  - Ensure that the traction is in neutral.
  - Engage the parking brake.
  - Shut off the machine and remove the key (if equipped).
  - Wait for all movement to stop.
- Allow machine components to cool before performing maintenance.
- If possible, do not perform maintenance while the machine is running. Keep away from moving parts.
- If the machine must be on to perform a maintenance adjustment, keep your hands, feet, clothing, and any parts of the body away from the cutting unit, attachments, and any moving parts. Keep bystanders away.
- Clean grass and debris from the cutting unit, drive, motor, and battery to help prevent fires.
- Keep all parts in good working condition. Replace all worn, damaged, or missing parts and decals. Keep all hardware tight to ensure that the machine is in safe working condition.
- Check the grass catcher components frequently and replace them when necessary.
- To ensure safe, optimal performance of the machine, use only genuine Toro replacement parts. Replacement parts made by other manufacturers could be dangerous, and such use could void the product warranty.
- If major repairs are ever needed or if assistance is desired, contact an authorized Toro distributor.

Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
After each use	• Clean the machine.
Every 750 hours	• Change the transmission fluid.

Daily Maintenance Checklist

Important: **Duplicate this page for routine use.**

Maintenance Check Item	For the week of:						
	Mon.	Tues.	Wed.	Thurs.	Fri.	Sat.	Sun.
Check the brake-lock-lever operation.							
Check for unusual operating noises.							
Check the reel-to-bedknife adjustment.							
Check the height-of-cut adjustment.							
Touch up damaged paint.							
Clean the machine.							

Notation for Areas of Concern

Inspection performed by:		
Item	**Date**	**Information**

Pre-Maintenance Procedures

Preparing the Machine for Maintenance

⚠ WARNING

While you are maintaining or adjusting the machine, someone could start the machine. Accidentally starting the machine could seriously injure you or other bystanders.

Release the traction bail, engage the parking brake, remove the key, and disconnect the battery before you do any maintenance.

Perform the following before servicing, cleaning, or making any adjustments to the machine:

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Shut off the machine.
4. Wait for all moving parts to stop before servicing, storing, or making repairs.
5. Disconnect the battery by pulling the T-handle connector off of the main-power-supply connector (Figure 34).

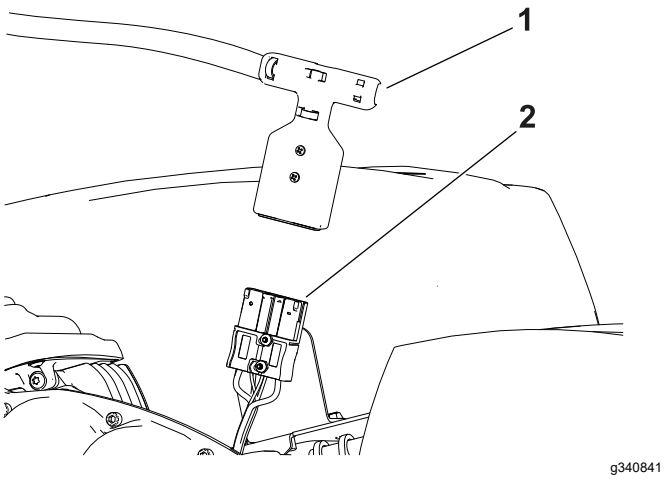

Figure 34

1. T-handle connector
2. Main-power-supply connector

Electrical System Maintenance

Electrical System Safety

- Disconnect the battery before repairing the machine.
- Charge the battery in an open, well-ventilated area, away from sparks and flames. Unplug the charger before connecting or disconnecting the battery. Wear protective clothing and use insulated tools.

Servicing the Battery Pack

The only user serviceable parts in the battery pack are the labels. If you attempt to open the main compartment of the battery pack or the master controller you will void your warranty. If you are having problems with your battery pack, contact your authorized Toro distributor for help.

⚠ WARNING

The battery pack contains high voltage which could burn or electrocute you.

- **Do not attempt to open the battery pack.**
- **Do not place anything in the connector of the battery pack other than the wire harness connector that came with the product.**
- **Use extreme care when handling a battery pack with a cracked case.**
- **Only use the charger designed for the battery pack**

Disposing of the Battery

The lithium-ion battery must be disposed of or recycled in accordance with local and federal regulations.

Maintaining the Battery Charger

Important: **All electrical repairs should be performed by an authorized Toro distributor only.**

The operator can perform very little maintenance other than protecting the charger from damage and weather.

Maintaining the Battery-Charger Cords

- Clean the cords with a slightly damp cloth after each use.
- Coil the cords when not in use.
- Periodically examine the cords for damage, and replace them when necessary with Toro-approved parts.

Cleaning the Battery-Charger Case

Clean the case with a slightly damp cloth after each use.

Replacing Fuses

If the machine does not turn on, even after charging, check the machine fuses as follows:

1. Turn off the machine and disconnect the battery pack.
2. Remove the 4 screws (Figure 35) that secure the battery-pack cover and remove the cover.

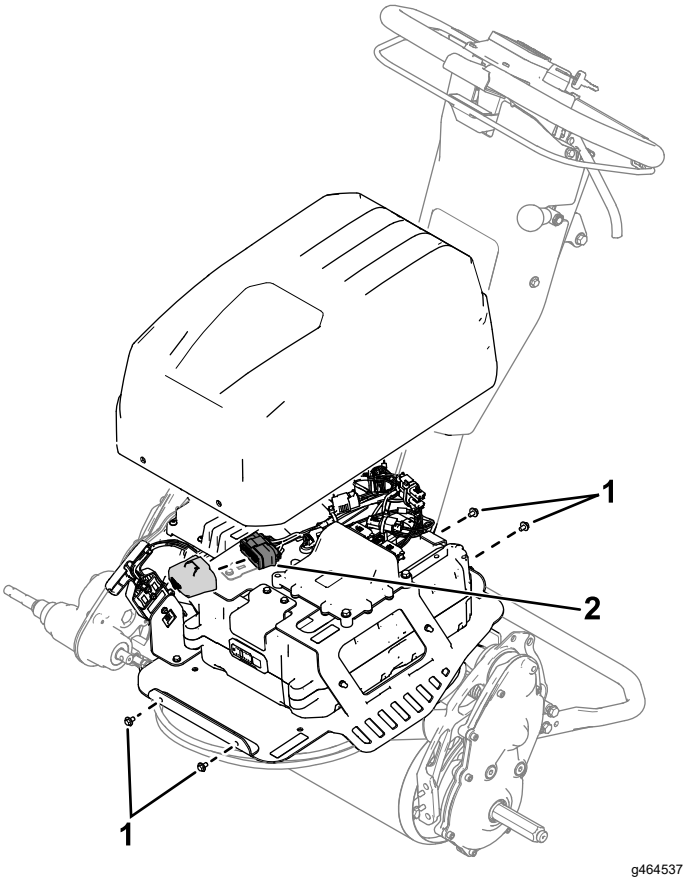

g464537

Figure 35

1. Screws
2. Fuse block

3. Check the fuses in the fuse block (Figure 36).

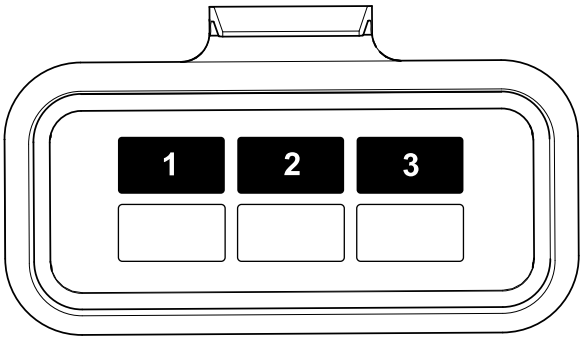

g464538

Figure 36

1. Motor (30 A)
2. Work lights (3 A)
3. Electrical power (3 A)

4. If any fuse is blown, replace them with a fuse of the appropriate voltage and amperage. Refer to the traction unit *Service Manual* for specific fuse part numbers.

   Important: **All fuses on the machine are rated for 80 V. Do not use 12 V automotive fuses.**

Acknowledging the Battery Interface Panel

An interface panel on the battery emits lights that indicate the battery state, including charging status, state of charge, faults, and battery updates. Refer to your authorized Toro distributor for more information about the battery interface panel.

Drive System Maintenance

Changing the Transmission Fluid

Service Interval: Every 750 hours/Yearly (whichever comes first)

Note: Refer to Figure 37 for this procedure.

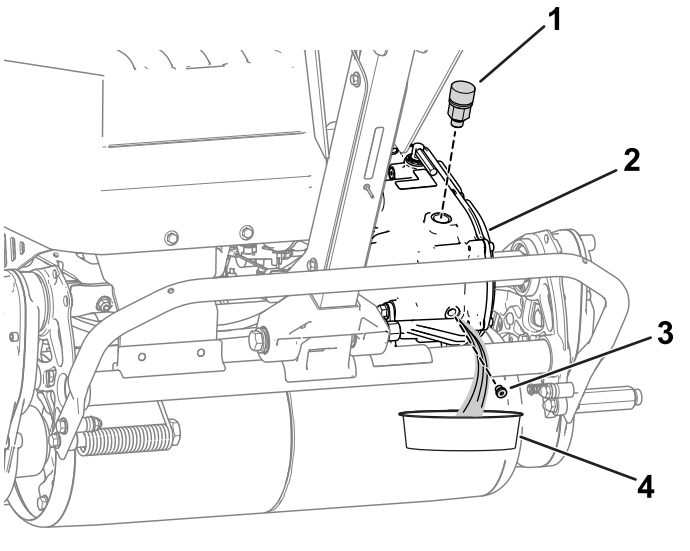

Figure 37

1. Breather vent and adapter assembly
2. Transmission
3. Drain plug
4. Drain pan

1. Remove the breather vent and adapter assembly from the transmission.
2. Have an assistant tip the machine backwards and place a pan under the transmission.

   Note: Use the pan to collect the transmission fluid.
3. Remove the drain plug from the transmission and let the fluid drain out.
4. Install the drain plug.
5. Torque the drain plug to 4 to 5 N·m (32 to 42 in-lb).
6. Add 473 ml (16 fl oz) of Dexron VI synthetic transmission fluid through the adapter vent.
7. Install the breather vent and adapter assembly and tighten it to 12 to 15 N·m (110 to 130 in-lb).

Controls System Maintenance

Adjusting the Service/Parking Brake

Adjust the service/parking brake if it slips during operation.

1. Disengage the parking brake.
2. Measure the free play at the end of the parking-brake handle (Figure 38).

   The handle free play should be between 12.7 to 25.4 mm (0.50 to 1 inch). If the free play is not within this amount, proceed to step 3 to adjust the brake cable.

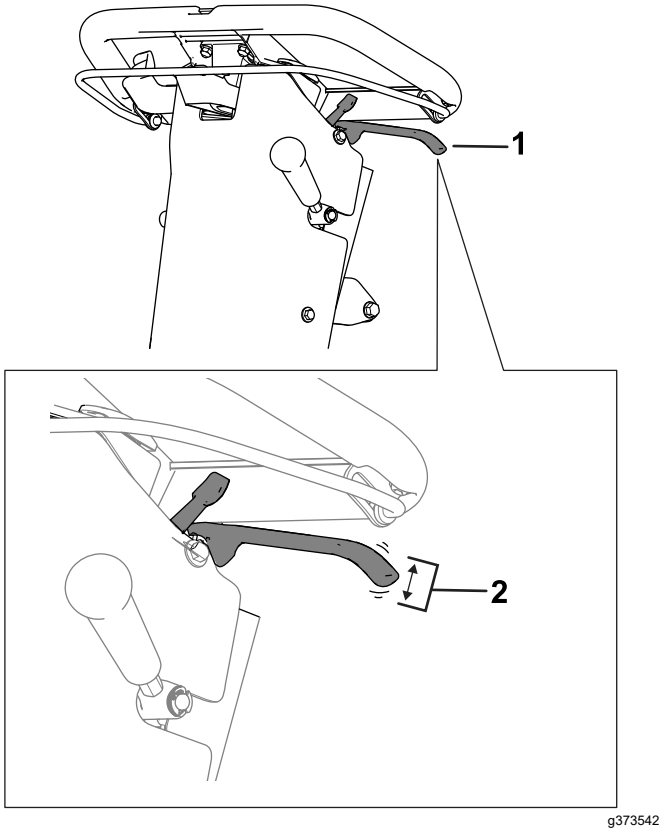

Figure 38

1. Parking-brake handle
2. Appropriate free play of 12.7 to 25.4 mm (0.50 to 1 inch).

3. Perform the following steps to adjust the brake-cable tension:
   - To increase the cable tension, loosen the front-cable jam nut and tighten the rear jam nut (Figure 39). Repeat step 2 and adjust the tension if necessary.
   - To decrease the cable tension, loosen the rear jam nut and tighten the front-cable jam

nut (Figure 39). Repeat step 2 and adjust the tension if necessary.

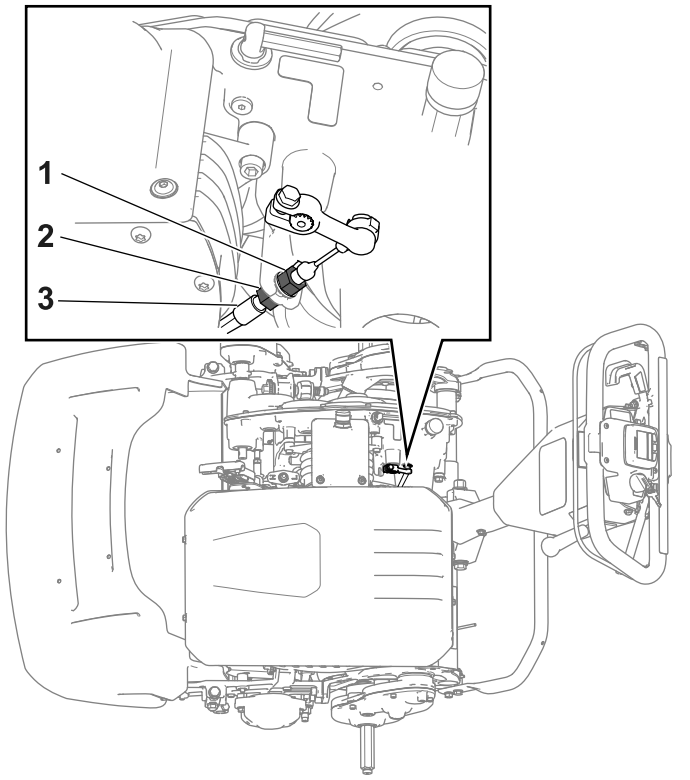

Figure 39

1. Front-cable jam nut
2. Rear jam nut
3. Brake cable

Cutting Unit Maintenance

Blade Safety

- Use care when checking the reel cutting-unit. Wear gloves and use caution when servicing the reel.
- A worn or damaged blade or bedknife can break, and a piece could be thrown toward you or bystanders, resulting in serious personal injury or death.
- Inspect the blades and bedknives periodically for excessive wear or damage.
- Use care when checking the blades. Wear gloves and use caution when servicing them. Only replace or backlap the blades and bedknives; never straighten or weld them.
- When servicing the blades, be aware that you can still move the blades after you disconnect the power.

Installing the Cutting Unit (Models 04835 and 04845)

1. Move the kickstand to the CUTTING-UNIT-SERVICE position.
2. Remove the hardware that secures the reel-drive assembly to the side plate (Figure 40).

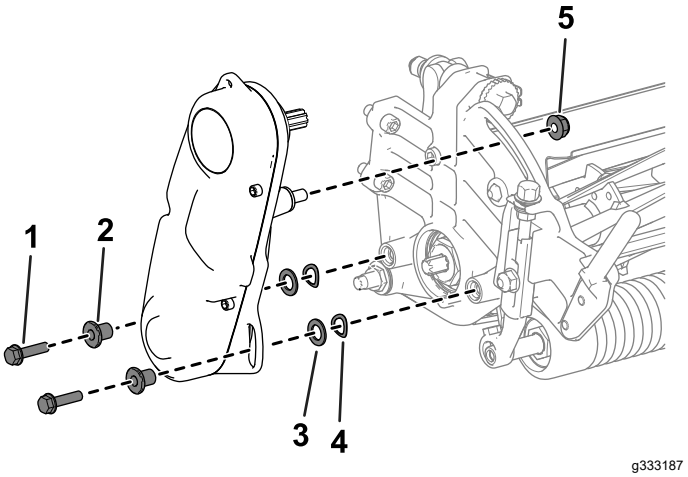

Figure 40

1. Socket-head screw
2. Spacer
3. Washer
4. Spring washer
5. Nut

3. Remove the reel-drive assembly, flat washers, spring washers, and spacers from the side plate (Figure 40).
4. Align the cutting unit to the frame.
5. Use 4 socket-head screws to secure the cutting unit to the frame (Figure 41).

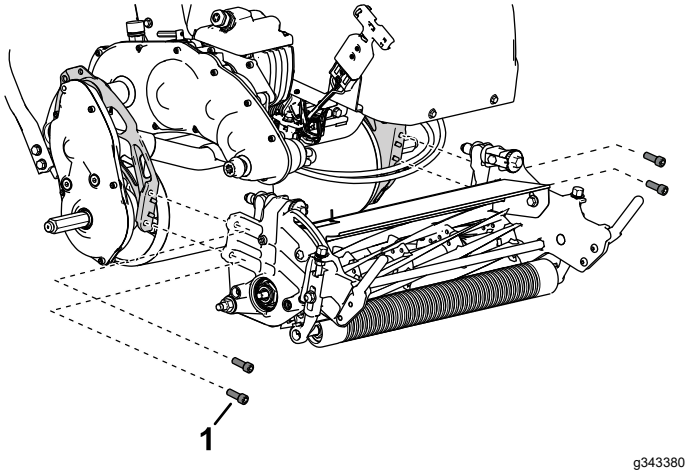

g343380

Figure 41

1. Socket-head screw

6. Use the previously removed socket-head screws, washers, and spacers to secure the reel-drive assembly to the cutting-unit side plate (Figure 42).

   Ensure that the reel-drive-assembly driveshaft is installed to the transmission-driveshaft coupler (Figure 42).

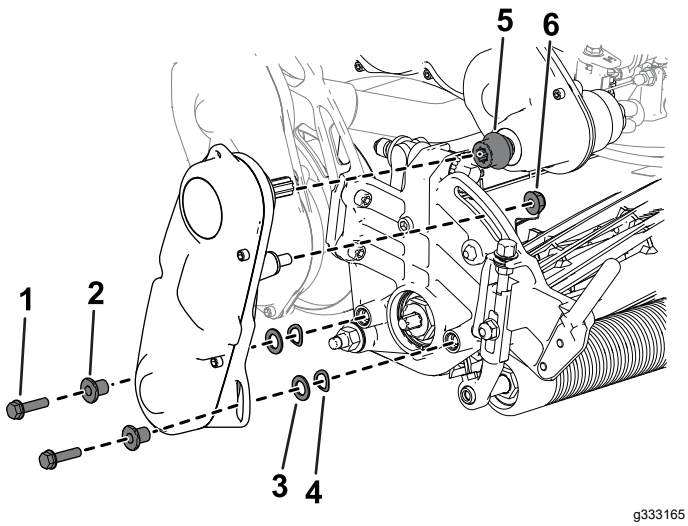

g333165

Figure 42

1. Socket-head screw
2. Spacer
3. Washer
4. Spring washer
5. Coupler
6. Nut

Installing the Cutting Unit (Model 04865)

1. Move the kickstand to the CUTTING-UNIT-SERVICE position.
2. Align the cutting unit to the frame.
3. Move the suspension latches down to secure the cutting unit to the machine (Figure 43).

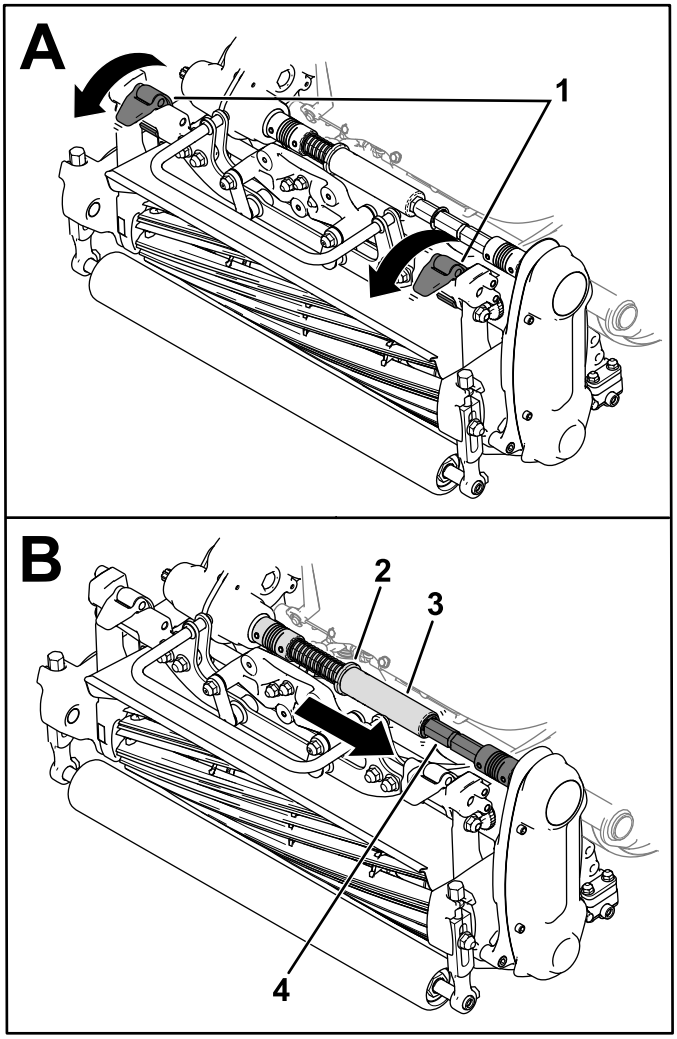

g307906

Figure 43

1. Latches
2. Collar
3. Hex tube
4. Coupler shaft

4. Move the collar out of the transmission-coupler-shaft groove and insert the hex tube into the cutting-unit coupler shaft (Figure 43).
5. Install the grass basket.

Removing the Cutting Unit (Models 04835 and 04845)

1. Move the kickstand to the CUTTING-UNIT-SERVICE position.
2. Remove the grass basket (if equipped).
3. Remove the reel-drive assembly from the cutting unit (Figure 44) and retain the hardware.

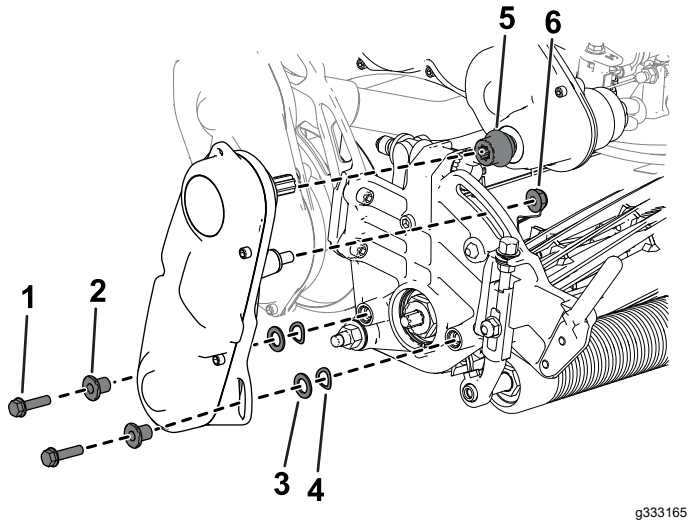

g333165

Figure 44

1. Socket-head screw
2. Spacer
3. Washer
4. Spring washer
5. Coupler
6. Nut

4. Remove the socket-head screws that secure the cutting unit to the frame (Figure 45).

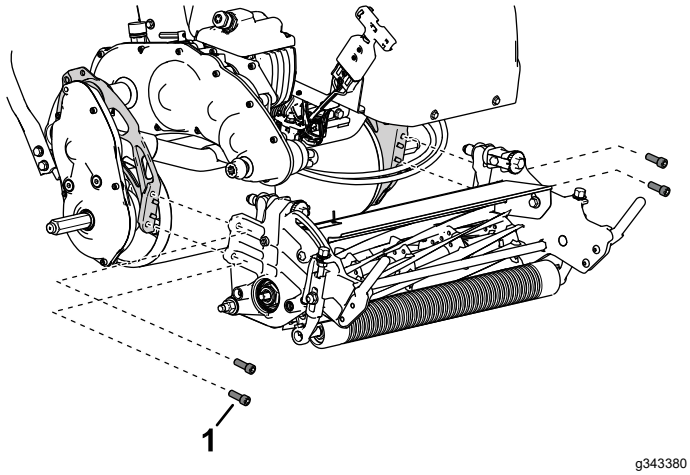

g343380

Figure 45

1. Socket-head screw

5. Remove the cutting unit from the frame.

Removing the Cutting Unit (Model 04865)

Note: The hex tube disengages if you engage the reel drive when the cutting unit is removed.

1. Move the kickstand to the CUTTING-UNIT-SERVICE position.
2. Remove the grass basket (if equipped).
3. Move the collar (Figure 46) into the transmission-shaft groove.

   Note: This releases tension from the spring.

4. Slide the hex tube off of the cutting-unit coupler shaft (Figure 46).

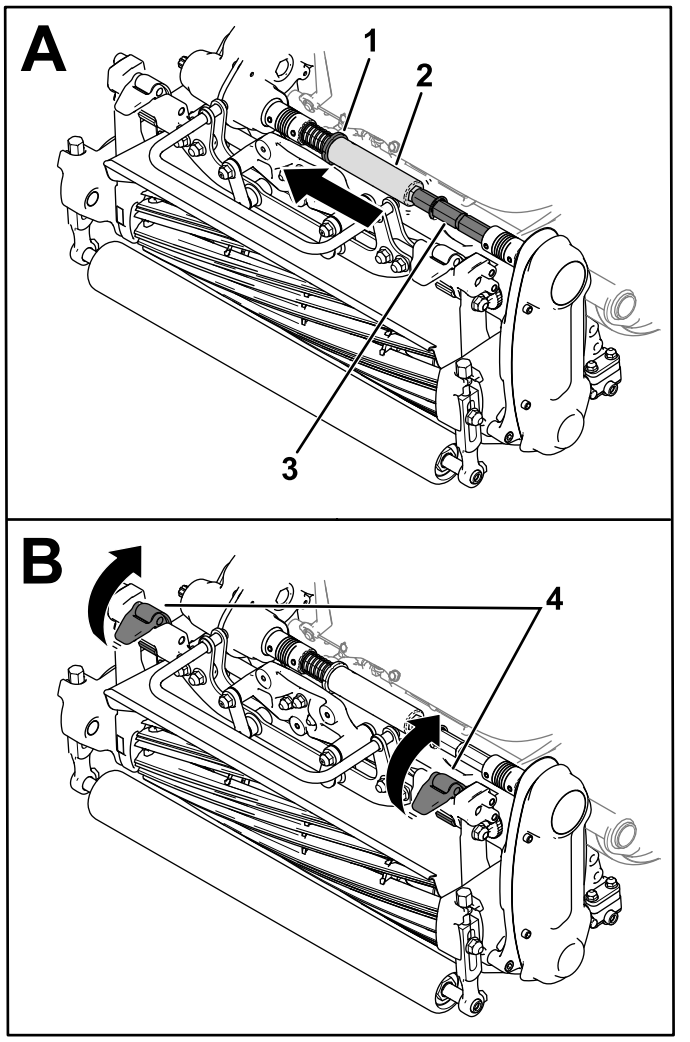

g307907

Figure 46

1. Collar
2. Hex tube
3. Coupler shaft
4. Latches

5. Move the suspension latches up to release the cutting unit from the machine (Figure 46).
6. Remove the cutting unit from the frame.

Backlapping the Cutting Unit

To backlap the cutting unit, perform 1 of the following options:

- Install the Access Backlap Kit (Model 139-4342) and use a backlapping machine. Contact your authorized Toro distributor to acquire this kit.
- Use the InfoCenter to enter Backlap Mode.

  To enter Backlap Mode, select BACKLAP from the SERVICE menu. Follow the InfoCenter prompts to backlap the cutting unit.

Note: Once the bail is released, Backlap Mode is disengaged. You can use the bail-catch fork (shipped in the loose-parts bag) to secure the bail in the engaged position.

Remove the bail-catch fork after your backlapping is completed.

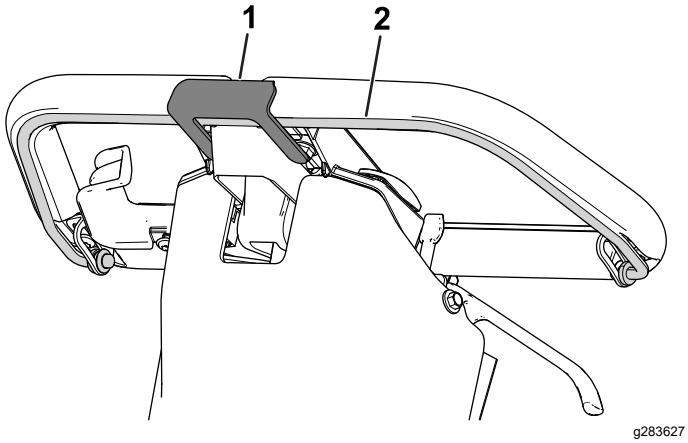

Figure 47

1. Bail-catch fork
2. Bail

Cleaning

Cleaning the Machine

Service Interval: After each use

After each use, wash the machine with mild detergent and water. Do not pressure wash the machine. Avoid excessive use of water, especially near the shift-lever plate, the InfoCenter, the power center, and the machine power connector. Clean the motor to provide proper cooling during operation. Also, keep the battery pack as clean as possible so that it maintains a white color. This reflects sunlight and keeps the battery from overheating in the sun.

Important: **Do not use brackish or reclaimed water to clean the machine.**

Important: **Always store or park the machine out of direct sunlight, as heating from the sun reduces the battery-pack life span.**

Storage

Storage Safety

- Park the machine on a level surface, engage the parking brake, shut off the machine, remove the key (if equipped), and wait for all movement to stop before you leave the operator's position. Allow the machine to cool before adjusting, servicing, cleaning, or storing it.
- Do not store the machine where there is an open flame, spark, or pilot light, such as on a water heater or other appliance.

Storing the Machine

1. Clean the machine; refer to Cleaning the Machine (page 41).

   Important: **You can wash the machine with mild detergent and fresh clean water. Do not pressure-wash the machine. Avoid excessive use of water, especially near the shift-lever plate, the InfoCenter, the power center, and the machine power connector.**
2. Check and tighten all fasteners. Repair or replace any part that is worn or damaged.
3. Paint all scratched or bare metal surfaces with paint available from your authorized Toro distributor.
4. For prolonged storage, follow the battery storage requirements; refer to Battery Storage Requirements (page 42).
5. Cover the machine to protect it and keep it clean.

Battery Storage Requirements

Note: You do not need to remove the battery from the machine for storage.

Refer to the temperature requirements for storage in the following table:

Temperature Requirements for Storage

Storage Conditions	Temperature Requirement
Normal storage conditions	-20° to 45°C (-12° to 113°F)
Extreme heat—1 month or less	45° to 60°C (113° to 140°F)
Extreme cold—3 months or less	-30° to -20°C (-22° to -12°F)

Important: **Temperatures outside of this range can damage your battery.**

The temperature that the battery is stored at will affect the battery life. Storage for long periods of time at extreme temperatures will reduce the battery life. Store the machine in a cool (not below freezing) location.

- Before you store the machine, charge or discharge the battery between 40% to 60%.

  Note: A 50% charge is optimal to ensure a maximum battery life. When the battery is charged to 100% before storage, the battery life shortens.

  If you anticipate that the machine will be stored for a longer period of time, charge the battery to around 60%.
- For every 6 months of storage, check the battery-charge level and ensure that it is between 40% to 60%. If the charge is below 40%, charge the battery between 40% to 60%.
- After charging the battery, disconnect the battery charger from power. Disconnect the power connector during storage to minimize the discharging of the battery.
- If you leave the charger on the machine, it will shut off after the battery is fully charged and does not turn back on unless the charger is disconnected and reconnected.

Storing the Charger

1. Complete the procedure for Disconnecting the Charger (page 32).
2. Disconnect the power supply cord from the charger and coil it securely.
3. Examine the power supply cord thoroughly for signs of wear or damage. Replace it if it is worn or damaged.
4. Examine the charger thoroughly for worn, loose, or damaged parts. To repair or replace parts, contact your authorized Toro distributor for assistance.
5. Store the charger with the power supply cord in a clean, dry place where it will not be bumped or damaged and not exposed to caustic fumes.

Notes:

California Proposition 65 Warning Information

What is this warning?

You may see a product for sale that has a warning label like the following:

WARNING: Cancer and Reproductive Harm—www.p65Warnings.ca.gov.

What is Prop 65?

Prop 65 applies to any company operating in California, selling products in California, or manufacturing products that may be sold in or brought into California. It mandates that the Governor of California maintain and publish a list of chemicals known to cause cancer, birth defects, and/or other reproductive harm. The list, which is updated annually, includes hundreds of chemicals found in many everyday items. The purpose of Prop 65 is to inform the public about exposure to these chemicals.

Prop 65 does not ban the sale of products containing these chemicals but instead requires warnings on any product, product packaging, or literature with the product. Moreover, a Prop 65 warning does not mean that a product is in violation of any product safety standards or requirements. In fact, the California government has clarified that a Prop 65 warning "is not the same as a regulatory decision that a product is 'safe' or 'unsafe.'" Many of these chemicals have been used in everyday products for years without documented harm. For more information, go to https://oag.ca.gov/prop65/faqs-view-all.

A Prop 65 warning means that a company has either (1) evaluated the exposure and has concluded that it exceeds the "no significant risk level"; or (2) has chosen to provide a warning based on its understanding about the presence of a listed chemical without attempting to evaluate the exposure.

Does this law apply everywhere?

Prop 65 warnings are required under California law only. These warnings are seen throughout California in a wide range of settings, including but not limited to restaurants, grocery stores, hotels, schools, and hospitals, and on a wide variety of products. Additionally, some online and mail order retailers provide Prop 65 warnings on their websites or in catalogs.

How do the California warnings compare to federal limits?

Prop 65 standards are often more stringent than federal and international standards. There are various substances that require a Prop 65 warning at levels that are far lower than federal action limits. For example, the Prop 65 standard for warnings for lead is 0.5 µg/day, which is well below the federal and international standards.

Why don't all similar products carry the warning?

- Products sold in California require Prop 65 labelling while similar products sold elsewhere do not.
- A company involved in a Prop 65 lawsuit reaching a settlement may be required to use Prop 65 warnings for its products, but other companies making similar products may have no such requirement.
- The enforcement of Prop 65 is inconsistent.
- Companies may elect not to provide warnings because they conclude that they are not required to do so under Prop 65; a lack of warnings for a product does not mean that the product is free of listed chemicals at similar levels.

Why does Toro include this warning?

Toro has chosen to provide consumers with as much information as possible so that they can make informed decisions about the products they buy and use. Toro provides warnings in certain cases based on its knowledge of the presence of one or more listed chemicals without evaluating the level of exposure, as not all the listed chemicals provide exposure limit requirements. While the exposure from Toro products may be negligible or well within the "no significant risk" range, out of an abundance of caution, Toro has elected to provide the Prop 65 warnings. Moreover, if Toro does not provide these warnings, it could be sued by the State of California or by private parties seeking to enforce Prop 65 and subject to substantial penalties.