

**TORO®**


**Count on it.**

# Operator's Manual

## GT2200 & GT2300 Garden Tractors

Model No. 14AQ81RP544

Model No. 14AK81RK544

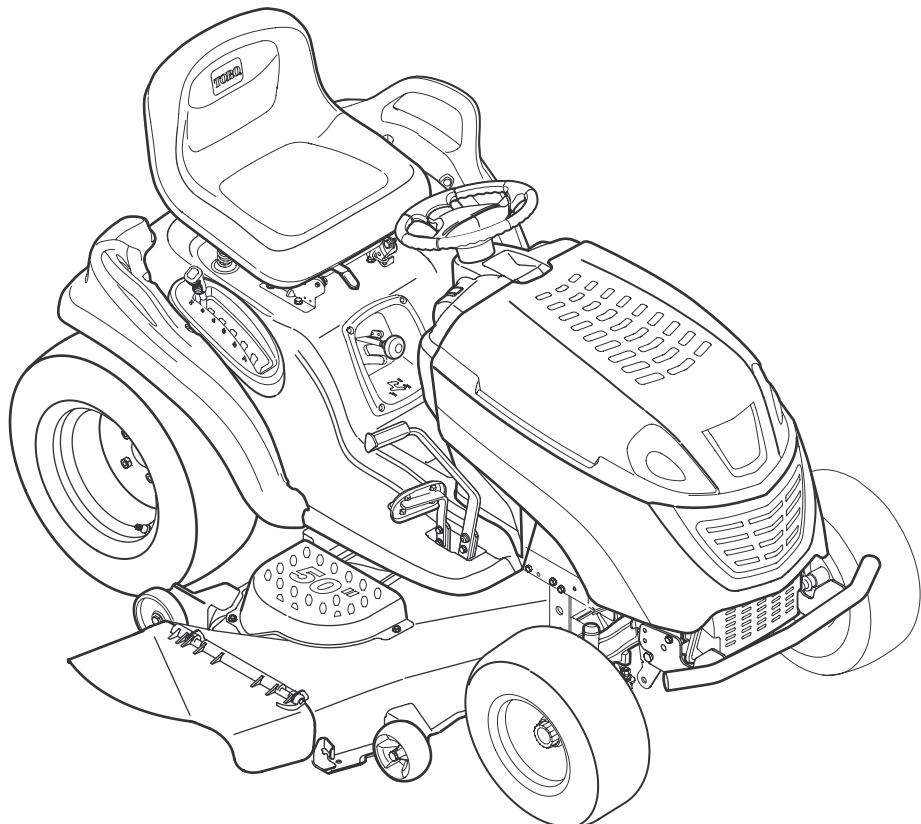

## TABLE OF CONTENTS

<b>Content</b>	<b>Page</b>	<b>Content</b>	<b>Page</b>
Important Safe Operation Practices	3	Lubrication	21
Safety Labels	6	Service	22
Slope Gauge	7	Off-season Storage	25
Tractor Set-up	8	Maintenance Chart	26
Know Your Garden Tractor	10	Troubleshooting	27
Operating Your Garden Tractor	13	Specifications	28
Making Adjustments	17	Warranty Information	29
Maintaining Your Garden Tractor	20		

## FINDING MODEL NUMBER

This Operator's Manual is an important part of your new garden tractor. It will help you assemble, prepare and maintain the unit for best performance. Please read and understand what it says.



**Before you start assembling your new equipment**, please locate the model plate on the equipment and copy the information from it in the space provided below. A sample model plate is also illustrated below. You can locate the model plate by looking at the underside of the tractor's seat. This information will be necessary to use the manufacturer's web site and/or help from a Toro Service Dealer.

MODEL NUMBER	SERIAL NUMBER	DOM
 THE TORO COMPANY 8111 LYNDALE AVE. SOUTH BLOOMINGTON, MINNESOTA 55420-1196 TOLL FREE PHONE NUMBER: 1-888-384-9942 USA TOLL FREE PHONE NUMBER: 1-888-848-4073 Canada		

**Copy the model number here:** \_\_\_\_\_

**Copy the serial number here:** \_\_\_\_\_

## CUSTOMER SUPPORT

***Please do NOT return the unit to the retailer without first contacting Customer Support.***

If you have difficulty assembling this product or have any questions regarding the controls, operation or maintenance of this unit, you can seek help from the experts. Choose from the options below:

	Visit <a href="http://www.toro.com">www.toro.com</a> for many useful suggestions. Click on Customer Care in the Homeowners section of the Toro Solutions Center and help is immediately available.	
	 <a href="http://www.toro.com">Count on it.</a>	<input type="text" value="Site Search:"/> <input type="button" value="GO"/>
	<a href="#">Homeowner</a>  <a href="#">Golf Course Management</a> <a href="#">Professional Contractor</a> <a href="#">Sports Fields &amp; Grounds</a> <a href="#">Irrigation Solutions</a>	
	<h3>Toro Solutions Center</h3> <p>Toro offers a variety of online tools to customers who currently own or are interested in purchasing a Toro product. Refer to the list below for the tools available to Homeowner customers.</p> 	
	If you have questions concerning your tractor, please call us at 1-888-384-9942 (U.S.) or 1-888-848-4073 (Canada).	

---

## SECTION 1: IMPORTANT SAFE OPERATION PRACTICES



**WARNING:** This symbol points out important safety instructions which, if not followed, could endanger the personal safety and/or property of yourself and others. Read and follow all instructions in this manual before attempting to operate this machine. Failure to comply with these instructions may result in personal injury. When you see this symbol—heed its warning.



**DANGER:** This machine was built to be operated according to the rules for safe operation in this manual. As with any type of power equipment, carelessness or error on the part of the operator can result in serious injury. This machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

### GENERAL OPERATION

1. Read, understand, and follow all instructions on the machine and in the manual(s) before attempting to assemble and operate. Keep this manual in a safe place for future and regular reference and for ordering replacement parts.
2. Be familiar with all controls and their proper operation. Know how to stop the machine and disengage them quickly.
3. Never allow children under 14 years old to operate this machine. Children 14 years old and over should read and understand the operation instructions and safety rules in this manual and should be trained and supervised by a parent.
4. Never allow adults to operate this machine without proper instruction.
5. To help avoid blade contact or a thrown object injury, keep bystanders, helpers, children and pets at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.
6. Thoroughly inspect the area where the equipment is to be used. Remove all stones, sticks, wire, bones, toys, and other foreign objects which could be picked up and thrown by the blade(s). Thrown objects can cause serious personal injury.
7. Plan your mowing pattern to avoid discharge of material toward roads, sidewalks, bystanders and the like. Also, avoid discharging material against a wall or obstruction which may cause discharged material to ricochet back toward the operator.
8. Always wear safety glasses or safety goggles during operation and while performing an adjustment or repair to protect your eyes. Thrown objects which ricochet can cause serious injury to the eyes.
9. Wear sturdy, rough-soled work shoes and close-fitting slacks and shirts. Loose fitting clothes and jewelry can be caught in movable parts. Never operate this machine in bare feet or sandals.
10. Be aware of the mower and attachment discharge direction and do not point it at anyone. Do not operate the mower without the discharge cover or entire grass catcher in its proper place.

11. Do not put hands or feet near rotating parts or under the cutting deck. Contact with the blade(s) can amputate hands and feet.
12. A missing or damaged discharge cover can cause blade contact or thrown object injuries.
13. Stop the blade(s) when crossing gravel drives, walks, or roads and while not cutting grass.
14. Watch for traffic when operating near or crossing roadways. This machine is not intended for use on any public roadway.
15. Do not operate the machine while under the influence of alcohol or drugs.
16. Mow only in daylight or good artificial light.
17. Never carry passengers.
18. Disengage blade(s) before shifting into reverse. Back up slowly. Always look down and behind before and while backing to avoid a back-over accident.
19. Slow down before turning. Operate the machine smoothly. Avoid erratic operation and excessive speed.
20. Disengage blade(s), set parking brake, stop engine and wait until the blade(s) come to a complete stop before removing grass catcher, emptying grass, unclogging chute, removing any grass or debris, or making any adjustments.
21. Never leave a running machine unattended. Always turn off blade(s), place transmission in neutral, set parking brake, stop engine and remove key before dismounting.
22. Use extra care when loading or unloading the machine into a trailer or truck. This unit should not be driven up or down ramp(s), because the unit could tip over, causing serious personal injury. The unit must be pushed manually on ramp(s) to load or unload properly.
23. Muffler and engine become hot and can cause a burn. Do not touch.
24. Check overhead clearances carefully before driving under low hanging tree branches, wires, door openings etc., where the operator may be struck or pulled from the unit, which could result in serious injury.

25. Disengage all attachment clutches, depress the brake pedal completely and shift into neutral before attempting to start engine.
26. Your machine is designed to cut normal residential grass of a height no more than 10". Do not attempt to mow through unusually tall, dry grass (e.g., pasture) or piles of dry leaves. Dry grass or leaves may contact the engine exhaust and/or build up on the mower deck presenting a potential fire hazard.
27. Use only accessories and attachments approved for this machine by the machine manufacturer. Read, understand and follow all instructions provided with the approved accessory or attachment.
28. Data indicates that operators, age 60 years and above, are involved in a large percentage of riding mower-related injuries. These operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from serious injury.
29. If situations occur which are not covered in this manual, use care and good judgment. Contact your authorized dealer for assistance.

## **SLOPE OPERATION**

Slopes are a major factor related to loss of control and tip-over accidents which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

For your safety, use the slope gauge included as part of this manual to measure slopes before operating this unit on a sloped or hilly area. If the slope is greater than 15 degrees as shown on the slope gauge, do not operate this unit on that area or serious injury could result.

### **DO:**

1. Mow up and down slopes, not across. Exercise extreme caution when changing direction on slopes.
2. Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
3. Use slow speed. Choose a low enough speed setting so that you will not have to stop or shift while on the slope. Tires may lose traction on slopes even though the brakes are functioning properly. Always keep machine in gear when going down slopes to take advantage of engine braking action.
4. Follow the manufacturer's recommendations for wheel weights or counterweights to improve stability.
5. Use extra care with grass catchers or other attachments. These can change the stability of the machine.

6. Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction. Rapid engagement or braking could cause the front of the machine to lift and rapidly flip over backwards which could cause serious injury.
7. Avoid starting or stopping on a slope. If tires lose traction, disengage the blade(s) and proceed slowly straight down the slope.

### **DO NOT:**

1. Do not turn on slopes unless necessary; then, turn slowly and gradually downhill, if possible.
2. Do not mow near drop-offs, ditches or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff, ditch, or if an edge caves in.
3. Do not try to stabilize the machine by putting your foot on the ground.
4. Do not use a grass catcher on steep slopes.
5. Do not mow on wet grass. Reduced traction could cause sliding.
6. Do not shift to neutral and coast downhill. Over-speeding may cause the operator to lose control of the machine resulting in serious injury or death.
7. Do not tow heavy pull behind attachments (e.g. loaded dump cart, lawn roller, etc.) on slopes greater than 5 degrees. When going down hill, the extra weight tends to push the tractor and may cause you to lose control. (e.g. tractor may speed up, braking and steering ability are reduced, attachment may jack-knife and cause tractor to overturn).

## **CHILDREN**

1. Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. They do not understand the dangers. Never assume that children will remain where you last saw them.
  - a. Keep children out of the mowing area and in watchful care of a responsible adult other than the operator.
  - b. Be alert and turn machine off if a child enters the area.
  - c. Before and while backing, look behind and down for small children.
  - d. Never carry children, even with the blade(s) shut off. They may fall off and be seriously injured or interfere with safe machine operation.
  - e. Use extreme care when approaching blind corners, doorways, shrubs, trees or other objects that may block your vision of a child who may run into the machine.
  - f. To avoid back-over accidents, always disengage the cutting blade(s) before shifting

- into reverse. The "Reverse Caution Mode" should not be used when children or others are around.
- g. Keep children away from hot or running engines. They can suffer burns from a hot muffler.
  - h. Remove key when machine is unattended to prevent unauthorized operation.
2. Never allow children under 14 years old to operate the machine. Children 14 years old and over should read and understand the operation instructions and safety rules in this manual and should be trained and supervised by a parent.

## TOWING

1. Tow only with a machine that has a hitch designed for towing. Do not attach towed equipment except at the hitch point.
2. Follow the manufacturers recommendation for weight limits for towed equipment and towing on slopes.
3. Never allow children or others in or on towed equipment.
4. On slopes, the weight of the towed equipment may cause loss of traction and loss of control.
5. Travel slowly and allow extra distance to stop.
6. Do not shift to neutral and coast downhill.

## SERVICE

### SAFE HANDLING OF GASOLINE:

1. **To avoid personal injury or property damage** use extreme care in handling gasoline. **Gasoline is** extremely flammable and the vapors are explosive. Serious personal injury can occur when gasoline is spilled on yourself or your clothes which can ignite. Wash your skin and change clothes immediately.
  - a. Use only an approved gasoline container.
  - b. Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
  - c. When practical, remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment on a trailer with a portable container, rather than from a gasoline dispenser nozzle.
  - d. Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
  - e. Extinguish all cigarettes, cigars, pipes and other sources of ignition.
  - f. Never fuel machine indoors.
  - g. Never remove gas cap or add fuel while the engine is hot or running. Allow engine to cool at least two minutes before refueling.

- h. Never over fill fuel tank. Fill tank to no more than  $\frac{1}{2}$  inch below bottom of filler neck to allow space for fuel expansion.
- i. Replace gasoline cap and tighten securely.
- j. If gasoline is spilled, wipe it off the engine and equipment. Move unit to another area. Wait 5 minutes before starting the engine.
- k. To reduce fire hazards, keep machine free of grass, leaves, or other debris build-up. Clean up oil or fuel spillage and remove any fuel soaked debris.
- l. Never store the machine or fuel container inside where there is an open flame, spark or pilot light as on a water heater, space heater, furnace, clothes dryer or other gas appliances.
- m. Allow a machine to cool at least 5 minutes before storing.

### GENERAL SERVICE:



1. Never run an engine indoors or in a poorly ventilated area. Engine exhaust contains carbon monoxide, an odorless, and deadly gas.
2. Before cleaning, repairing, or inspecting, make certain the blade(s) and all moving parts have stopped. Disconnect the spark plug wire and ground against the engine to prevent unintended starting.
3. Periodically check to make sure the blades come to complete stop within approximately (5) five seconds after operating the blade disengagement control. If the blades do not stop within the this time frame, your unit should be serviced professionally by an authorized dealer.
4. Check brake operation frequently as it is subjected to wear during normal operation. Adjust and service as required.
5. Check the blade(s) and engine mounting bolts at frequent intervals for proper tightness. Also, visually inspect blade(s) for damage (e.g., excessive wear, bent, cracked). Replace the blade(s) with the original equipment manufacturer's (O.E.M.) blade(s) only, listed in this manual. "Use of parts which do not meet the original equipment specifications may lead to improper performance and compromise safety!"
6. Mower blades are sharp. Wrap the blade or wear gloves, and use extra caution when servicing them.
7. Keep all nuts, bolts, and screws tight to be sure the equipment is in safe working condition.
8. Never tamper with the safety interlock system or other safety devices. Check their proper operation regularly.
9. After striking a foreign object, stop the engine, disconnect the spark plug wire(s) and ground against the engine. Thoroughly inspect the machine for any damage. Repair the damage before starting and operating.

10. Never attempt to make adjustments or repairs to the machine while the engine is running.
11. Grass catcher components and the discharge cover are subject to wear and damage which could expose moving parts or allow objects to be thrown. For safety protection, frequently check components and replace immediately with original equipment manufacturer's (O.E.M.) parts only, listed in this manual. "Use of parts which do not meet the original equipment specifications may lead to improper performance and compromise safety!"
12. Do not change the engine governor settings or over-speed the engine. The governor controls the maximum safe operating speed of the engine.
13. Maintain or replace safety and instruction labels, as necessary.
14. Observe proper disposal laws and regulations for gas, oil, etc. to protect the environment.



**WARNING: YOUR RESPONSIBILITY** Restrict the use of this power machine to persons who read, understand and follow the warnings and instructions in this manual and on the machine.


## SECTION 2: SAFETY LABELS

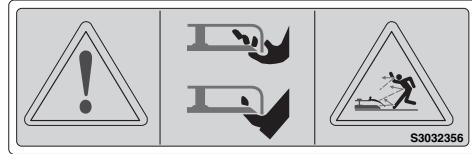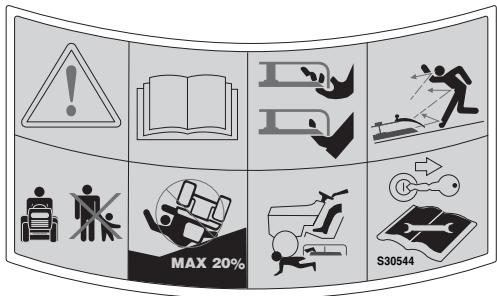

Safety Labels found on your unit

## SECTION 3: SLOPE GAUGE

USE THIS PAGE AS A GUIDE TO DETERMINE SLOPES WHERE YOU MAY NOT OPERATE SAFELY.

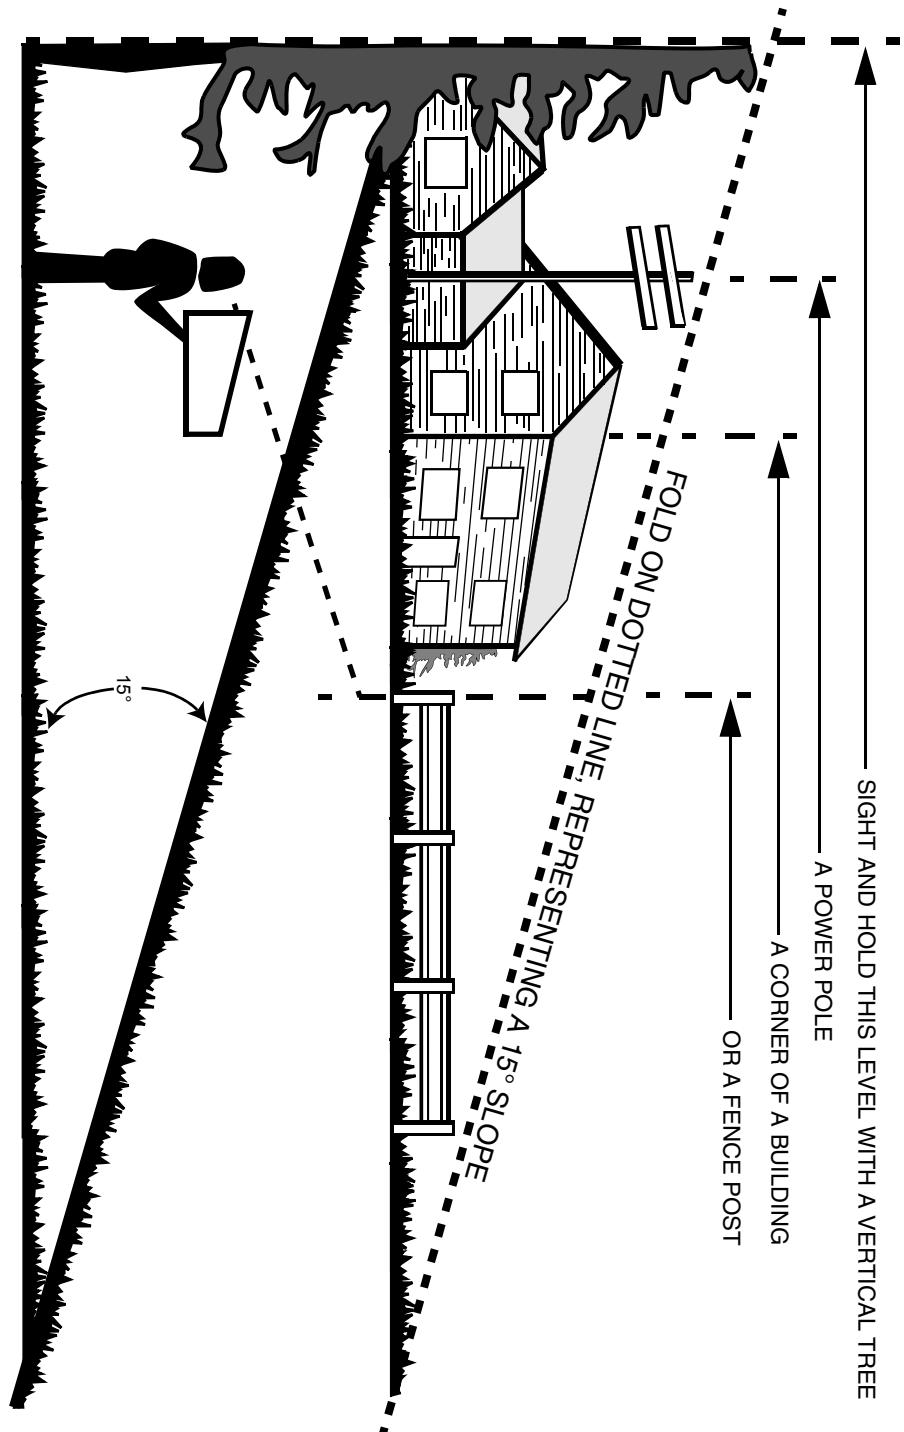

Do not mow on inclines with a slope in excess of 15 degrees (a rise of approximately 2-1/2 feet every 10 feet). A riding mower could overturn and cause serious injury. If operating a walk-behind mower on such a slope, it is extremely difficult to maintain your footing and you could slip, resulting in serious injury. Operate RIDING mowers up and down slopes, never across the face of slopes.

## SECTION 4: TRACTOR SET-UP

**NOTE:** Reference to *RIGHT* or *LEFT* side of the tractor in this manual is observed from operator's position.

### ATTACHING THE BATTERY CABLES

**NOTE:** The battery cables may or may not be attached on your unit. If the cables are not attached, please follow the instructions below.

**NOTE:** The positive battery terminal is marked Pos. (+). The negative battery terminal is marked Neg. (-).

- The positive cable (heavy red wire) is secured to the positive battery terminal (+) with a hex bolt and hex nut at the factory. Make certain that the rubber boot covers the terminal to help protect it from corrosion.
- Remove the hex bolt and wing nut from the negative cable.
- Remove the black plastic cover, if present, from the negative battery terminal and attach the negative cable (heavy black wire) to the negative battery terminal (-) with the bolt and wing nut.
- Make certain the battery retainer rod is in position over the battery, securing it in place. See Figure 1.

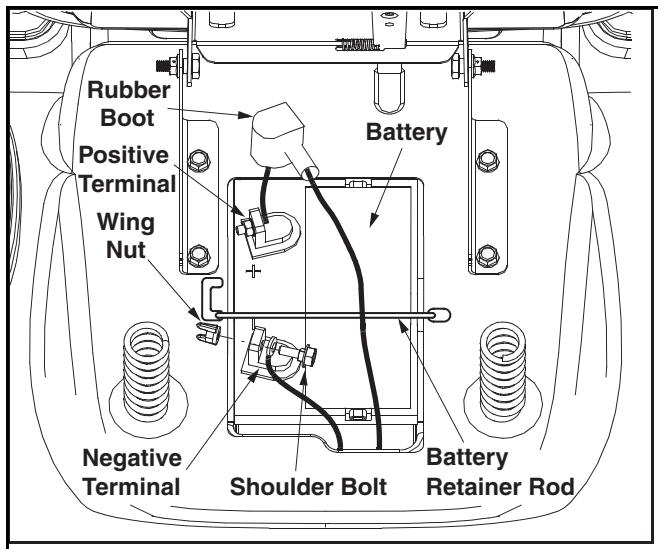


Figure 1

**NOTE:** If the battery is put into service after the date shown on top of battery, charge the battery as instructed on page 23 of this manual prior to operating the tractor.

### ATTACHING THE STEERING WHEEL

In the event your tractor was crated with the steering wheel and the seat removed for shipping reasons, use the following instructions to properly assemble the parts.



**WARNING:** Do NOT operate the tractor without first attaching both the steering wheel AND the seat. Doing so could result in serious injury to the operator.

**NOTE:** There are two different styles of steering wheel cap. See Figure 2. *Styles vary by model.*

- Using your hands, place the tractor's front tires in position for straight-ahead travel.
- Remove the steering wheel cap from the center of the steering wheel. Be careful not to lose the hex screw and cupped washer found beneath it.
- Place the steering wheel (in position for straight-ahead travel) directly onto the steering shaft found in the center of the tractor's dash.
- Place the cupped washer (cupped side DOWN) over the steering shaft.
- Thread the hex screw into the steering shaft and tighten securely.
- Reinsert the steering wheel cap in the center of the steering wheel. Refer to Figure 2.

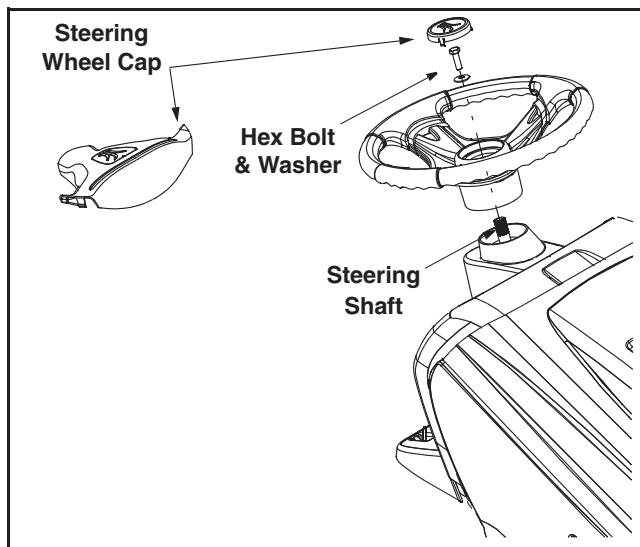


Figure 2

### ATTACHING THE SEAT

Refer to Figures 3 and 4 to identify your tractor's seat style and follow applicable instructions.

**NOTE:** For shipping reasons, seats are either fastened to the tractor seat's pivot bracket with a plastic tie, or mounted backward to the pivot bracket. In either case, free the seat from its shipping position and remove the two hex screws (or knobs, on models so equipped) from the bottom of seat before proceeding with applicable instructions below.

## Quick Adjustment Seat

**NOTE:** If your seat was shipped mounted backwards on the seat pivot bracket, pull out the tab found on the seat stop and hold it open while sliding the seat off the seat pivot bracket. See Figure 3.

- Line up the plastic seat spacers with the slots in seat pivot bracket.
- Slide seat in until front seat spacer engages the seat stop. See Figure 3.

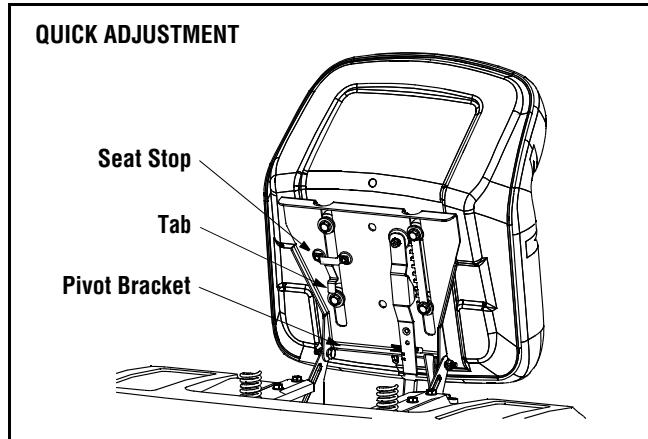


Figure 3



**WARNING:** Before operating this machine, make sure the seat is engaged in the seat stop, stand behind the machine and pull back on seat until fully engaged into stop.

## Knob Adjustment Seat

- Position the shoulder screws (found on the base of the seat) inside the slot openings in the seat pivot bracket. See Figure 4.
- Slide the seat slightly rearward in the seat pivot bracket, lining up the rear slots in the pivot bracket with the remaining two holes in the seat's base.
- Select desired position for the seat, and secure with the two knobs removed earlier. See Figure 4.

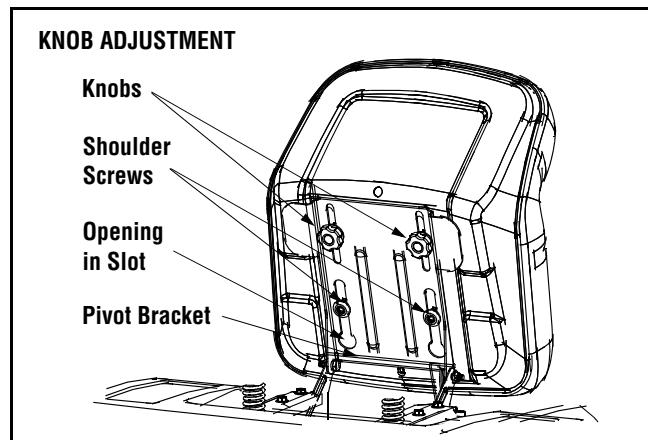


Figure 4

## GAS AND OIL FILL-UP

The gasoline tank is located under the hood and has a capacity of either two or three gallons. Do not overfill.



**WARNING:** Use extreme care when handling gasoline. Gasoline is extremely flammable and the vapors are explosive. Never fuel machine indoors or while the engine is hot or running. Extinguish cigarettes, cigars, pipes, and other sources of ignition.

**Service the engine with gasoline and oil as instructed in the separate engine manual packed with your tractor. Read instructions carefully.**

**IMPORTANT:** Your tractor is shipped with oil; however, you **MUST** check the oil level before operating. Be careful not to overfill. Overfilling with oil may cause the engine to smoke. This will result in poor engine performance and could cause permanent engine damage.



**WARNING:** The mowing deck is capable of throwing objects. Failure to operate the riding mower without the discharge cover in the proper operating position could result in serious personal injury and/or property damage.


## TIRE PRESSURE



**WARNING:** Maximum tire pressure under any circumstances is 30 p.s.i. Equal tire pressure should be maintained at all times.

The tires on your unit may be over-inflated for shipping purposes. Reduce the tire pressure before operating the tractor. Recommended operating tire pressure is approximately 10 p.s.i for the rear tires & 14 p.s.i. for the front tires. Check the sidewall of tire for maximum p.s.i.

## SECTION 5: KNOW YOUR GARDEN TRACTOR

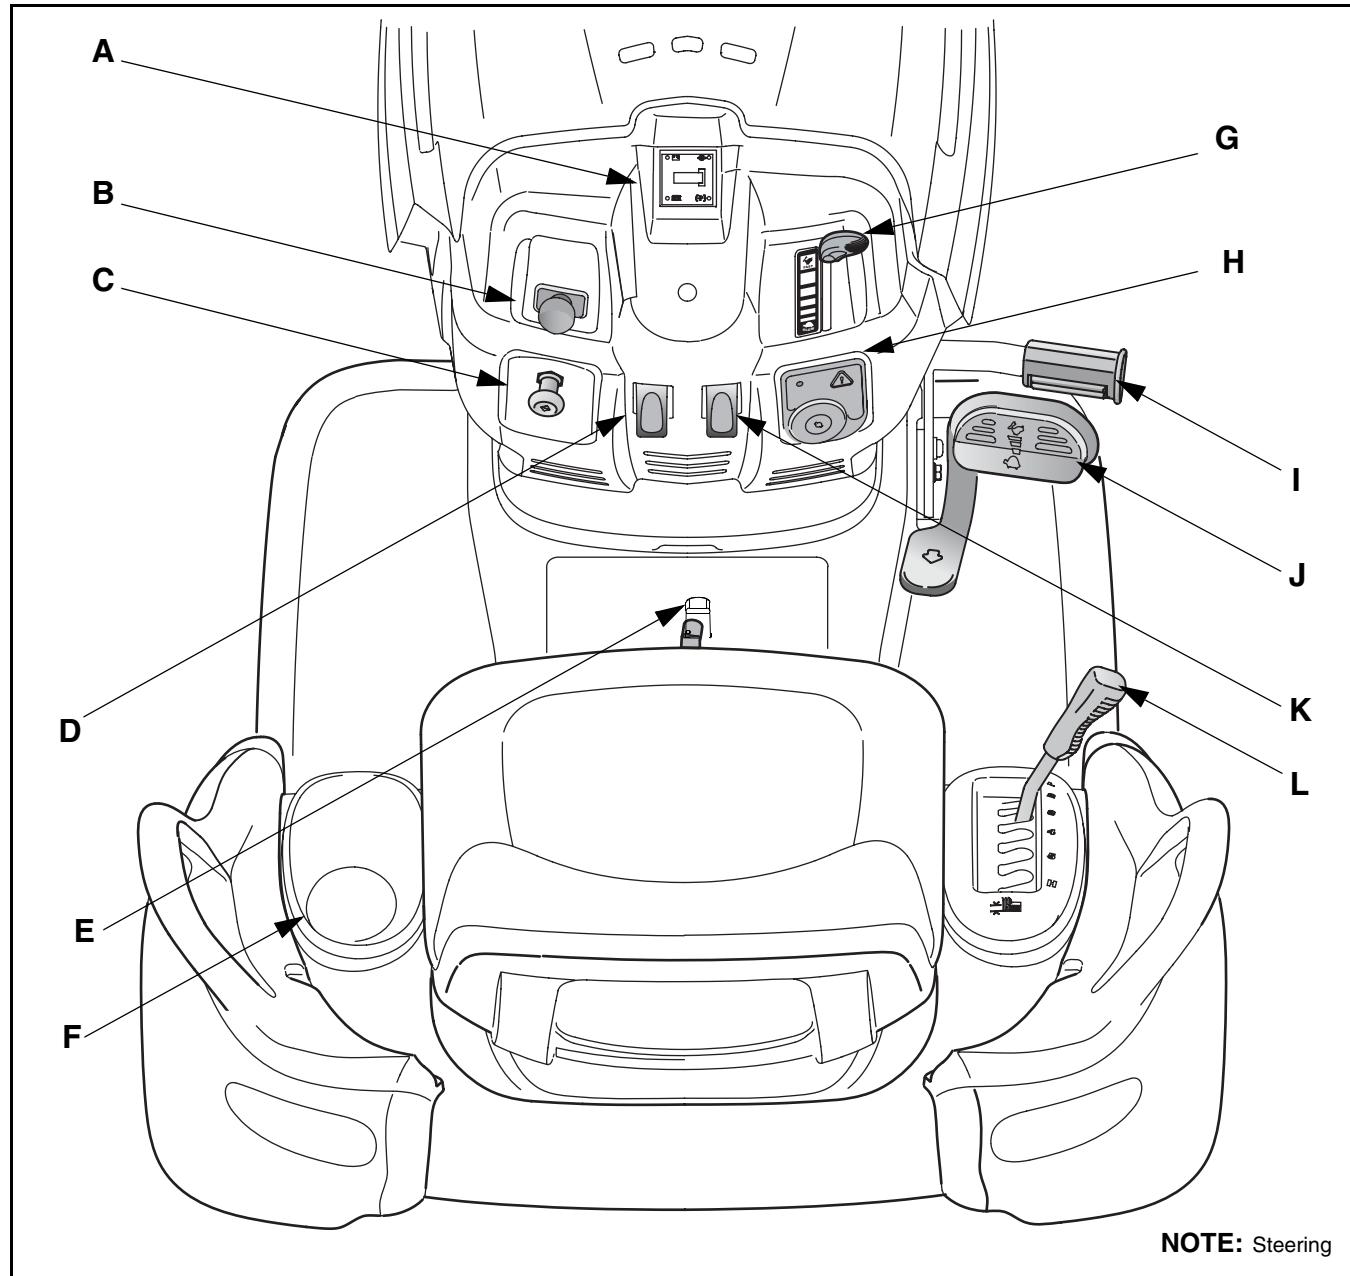

- A Systems Indicator Monitor/Hour Meter
- B PTO (Blade Engage) Knob
- C Choke Control
- D Parking Brake Lever
- E Seat Adjustment Lever
- F Cup Holder

- G Throttle Control
- H Ignition Switch Module
- I Brake Pedal
- J Drive Pedal
- K Cruise Control Lever
- L Deck Lift Lever

**NOTE:** Any reference in this manual to the *RIGHT* or *LEFT* side of the tractor is observed from operator's position

## THROTTLE CONTROL LEVER

The throttle control lever is located on the right side of the tractor's dash panel. This lever controls the speed of the engine and, on some models, when pushed all the way forward, the choke control also. When set in a given position, the throttle will maintain a uniform engine speed. See Figure 5.


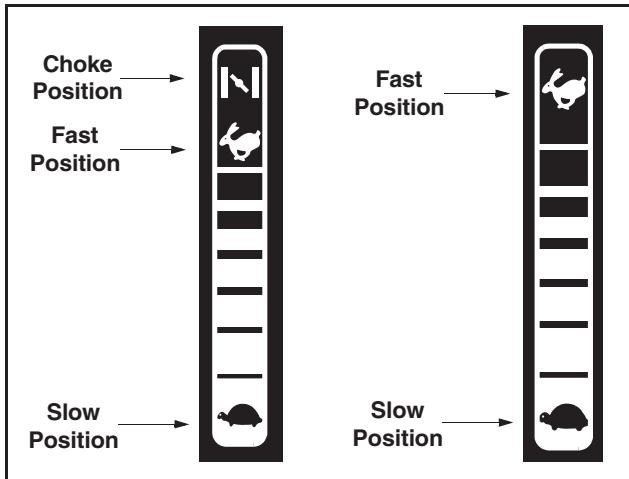


Figure 5

**IMPORTANT:** When operating the tractor with the cutting deck engaged, be certain that the throttle lever is always in the FAST (rabbit) position.


## CHOKE CONTROL

The choke control can be found on the left side of the dash panel and is activated by pulling the knob outward. Activating the choke control closes the choke plate on the carburetor and aids in starting the engine. Refer to STARTING THE ENGINE in the OPERATION section of this manual for detailed starting instructions.

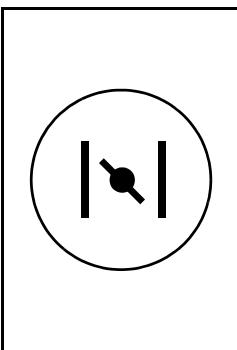

## BRAKE PEDAL

The brake pedal is located on the right front side of the tractor above the drive pedal along the running board. The brake pedal can be used for sudden stops or setting the parking brake.

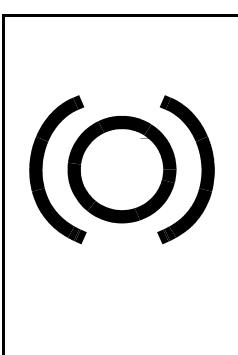

**NOTE:** The brake pedal must be fully depressed to activate the safety interlock switch when starting the tractor.

## IGNITION SWITCH



**WARNING:** Never leave a running machine unattended. Always disengage PTO, move shift lever into neutral position, set parking brake, stop engine and remove key to prevent unintended starting.

To start the engine, insert the key into the ignition switch and turn clockwise to the **START** position. Release the key into the **NORMAL MOWING MODE** position once the engine has fired.

To stop the engine, turn the ignition key counterclockwise to the **STOP** position. See Figure 6.


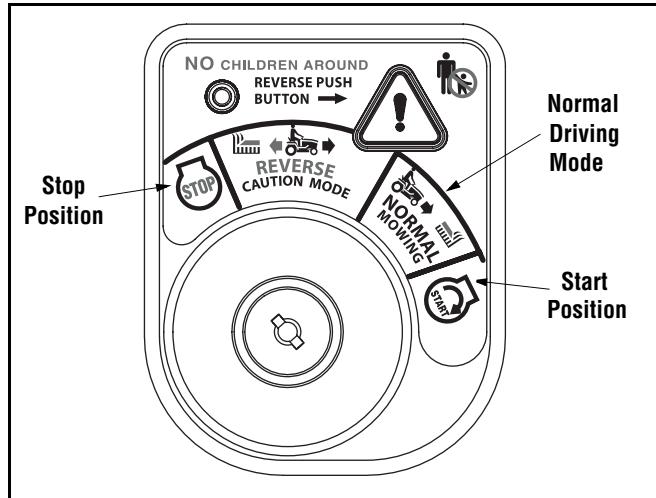


Figure 6

**IMPORTANT:** Prior to operating the tractor, refer to both **Safety Interlock Switches, page 13** and **Starting The Engine, page 14** of this manual for detailed instructions regarding the Ignition Switch Module and operating the tractor in **REVERSE CAUTION MODE**.

## DRIVE PEDAL

The drive pedal is located below the brake pedal on the right front side of the tractor along the running board. Depress the upper portion of the drive pedal forward to cause the tractor to travel forward. Depress the lower portion of the drive pedal with the ball of your right foot (NOT your heel) to cause the tractor to travel in reverse. Ground speed is also controlled with the drive pedal. The further forward or rearward that the pedal is pivoted, the faster the tractor will travel. The pedal will return to its original position when it's not depressed.

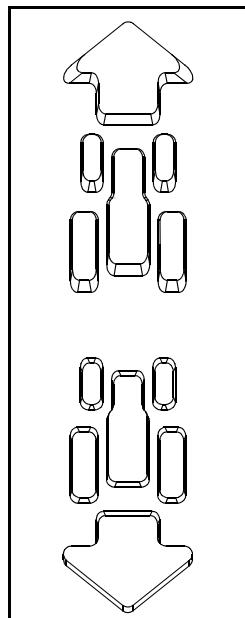

**IMPORTANT:** Always set the parking brake when leaving the tractor unattended.

## SYSTEMS INDICATOR MONITOR

### LCD

Located in the center of the tractor's console, the systems indicator monitor records, and displays on its LCD, hours of tractor operation whenever the ignition key is rotated out of the STOP position.

The indicator Monitor will also remind the operator of maintenance intervals for changing the engine oil. The LCD will alternately flash the recorded hours, "CHG" and "OIL" for five minutes, after every 50 hours of recorded operation elapse. The maintenance interval lasts for two hours (from 50-52, 100-102, 150-152, etc.). The LCD will also flash as described above for five minutes every time the tractor's engine has been started during this maintenance interval. Before the interval expires, change the crankcase oil level as instructed in this Operator's Manual.

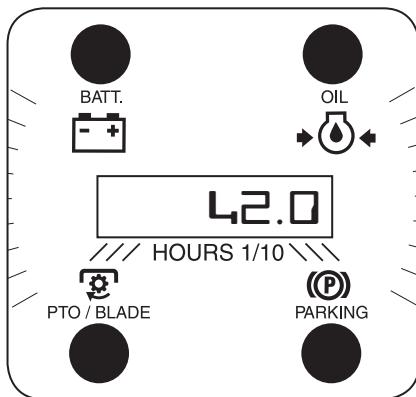


Figure 7

If the Brake light or PTO light illuminates when attempting to start the unit, proceed as follows:

**Brake** — Engage the parking brake.

**PTO** — Move the PTO lever into the disengaged (Blade Stop) position.

It is normal for the Oil light and the Battery light to illuminate while the engine is **cranking**, but if either illuminates while the **engine is running**, proceed as follows:

**Oil** — Stop the tractor immediately and check the crankcase oil level as instructed in the Engine Owner's Manual included with your unit. Add oil as required.


**Battery** — If this light illuminates while the engine is running, it indicates that the battery is in need of a charge OR that the engine's charging system is not generating sufficient amperage. Refer to the MAINTENANCE section of this manual for the proper battery charging procedure or have the engine's charging system checked by a *authorized* dealer.

On units so equipped, the **ammeter** measures the electrical output of the engine's charging system. Under normal operating conditions, with the engine at full throttle, the ammeter's needle should measure a positive charge.

The **hour meter**, on units so equipped, operates whenever the engine is running and records the actual hours of tractor operation.


### ELECTRIC PTO (POWER TAKE-OFF) KNOB

To engage the power to the cutting deck or other (separately available) attachments on models so equipped with an electric PTO, pull outward on the PTO knob. Push the PTO knob inward to disengage the power to the cutting deck.

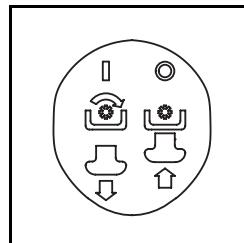

**NOTE:** The PTO knob **must** be in the disengaged (Blade Stop) position when starting the engine.

### PTO (POWER TAKE-OFF) LEVER

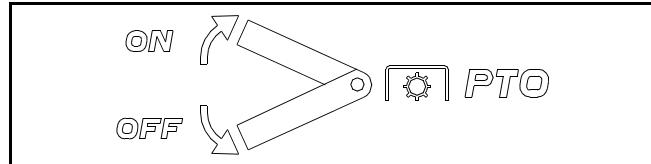

On models equipped with a manual PTO, the PTO lever is located on the left side of the dashboard next to the steering wheel. Move the PTO lever forward to engage the power to the cutting deck or other (separately available) attachments; move the PTO lever rearward to disengage the power.

**NOTE:** The PTO lever **must** be in the disengaged (Blade Stop) position when starting the engine.

### SEAT ADJUSTMENT LEVER

To adjust the seat forward or backward on units equipped with a quick-adjust seat, slide the seat adjustment lever to the left and reposition the seat to the desired position. Once a comfortable position is found, release the seat adjustment lever to lock the seat in place. Refer to SEAT ADJUSTMENTS in the MAKING ADJUSTMENTS section of this manual for more detailed instructions.

### DECK LIFT LEVER


Found on your tractor's right fender, the deck lift lever is used to change the height of the cutting deck. To use, move the lever to the left, then place in the notch best suited for your application.

### CUP HOLDER

The tractor's cup holder is located on the fender to the left of the seat, just to the rear of the parking brake lever.

## CRUISE CONTROL BUTTON


The cruise control button is located on the tractor dash panel to the left of the ignition switch. Push the cruise control button while traveling forward at a desired speed. While holding the button in, release pressure from the drive pedal. This will engage the cruise control and allow the tractor to remain at that speed without applying pressure to the drive pedal. Depress the brake pedal or the drive pedal to deactivate cruise control. Refer to OPERATION SECTION of this manual for detailed instructions regarding the cruise control feature.

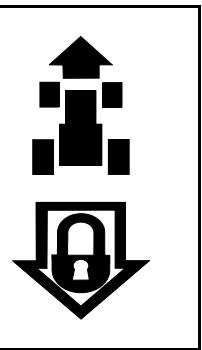

**NOTE:** *Cruise control can NOT be engaged at the tractor's fastest ground speed. If the operator should attempt to do so, the tractor will automatically decelerate to the fastest optimal mowing ground speed.*

## PARKING BRAKE BUTTON

To set the parking brake, fully depress the brake pedal and push the parking brake button in. Hold the button in while taking your foot off the brake pedal. Both the parking button and the brake pedal will then stay depressed. To release the parking brake, depress the brake pedal slightly.

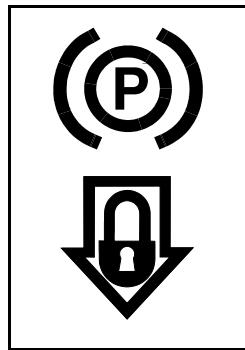

The parking brake button will then return to its original position.

**NOTE:** *The parking brake must be set if the operator leaves the seat with the engine running or the engine will automatically shut off.*

**IMPORTANT:** Always set the parking brake when leaving the tractor unattended.

## SECTION 6: OPERATING YOUR GARDEN TRACTOR



### WARNING

#### AVOID SERIOUS INJURY OR DEATH

- GO UP AND DOWN SLOPES, NOT ACROSS.
- AVOID SUDDEN TURNS.
- DO NOT OPERATE THE UNIT WHERE IT COULD SLIP OR TIP.
- IF MACHINE STOPS GOING UPHILL, STOP BLADE(S) AND BACK DOWNHILL SLOWLY.
- DO NOT MOW WHEN CHILDREN OR OTHERS ARE AROUND.
- NEVER CARRY CHILDREN, EVEN WITH BLADES OFF.
- LOOK DOWN AND BEHIND BEFORE AND WHILE BACKING.
- KEEP SAFETY DEVICES (GUARDS, SHIELDS, AND SWITCHES) IN PLACE AND WORKING.
- REMOVE OBJECTS THAT COULD BE THROWN BY THE BLADE(S).
- KNOW LOCATION AND FUNCTION OF ALL CONTROLS.
- BE SURE BLADE(S) AND ENGINE ARE STOPPED BEFORE PLACING HANDS OR FEET NEAR BLADE(S).
- BEFORE LEAVING OPERATOR'S POSITION, DISENGAGE BLADE(S), PLACE THE SHIFT LEVER IN NEUTRAL, ENGAGE BRAKE LOCK, SHUT ENGINE OFF AND REMOVE KEY.

#### READ OPERATOR'S MANUAL



**WARNING:** Read, understand, and follow all instructions and warnings on the machine and in this manual before operating.

### SAFETY INTERLOCK SWITCHES

This tractor is equipped with a safety interlock system for the protection of the operator. If the interlock system should ever malfunction, do not operate the tractor. Contact an authorized service dealer.

- The safety interlock system prevents the engine from cranking or starting unless the parking brake is engaged, and the PTO (Blade Engage) knob (or lever) is in the disengaged (OFF) position. To check

for proper operation, move the PTO (Blade Engage) knob into the engaged (ON) position and release the parking brake. Attempts to start the tractor's engine should fail.

- The engine will automatically shut off if the operator leaves the seat before engaging the parking brake. To check for proper operation, start the tractor's engine, release the parking brake and momentarily raise yourself from the seat. The engine should stall.

#### Models with Manual PTO (Blade Engage)

- The engine will automatically shut off if the operator leaves the tractor's seat with the PTO (Blade Engage) lever in the engaged (ON) position, regardless of whether the parking brake is engaged. To check for proper operation, start the tractor's engine, move the PTO (Blade Engage) lever in the engaged (ON) position and momentarily raise yourself from the seat. The engine should stall.

- With the ignition key in the **NORMAL MOWING** position, the engine will automatically shut off if the PTO (Blade Engage) lever is moved into the engaged (ON) position with the the drive pedal in position for Reverse travel. To check for proper operation, start the tractor's engine with the ignition key in the **NORMAL MOWING** position, move the PTO (Blade Engage) knob in the engaged (ON) position and place the the drive pedal in position for Reverse travel. The cutting deck should disengage.

## Models with Electric PTO (Blade Engage)

- The electric PTO (Blade Engage) clutch will automatically shut off if the operator leaves the tractor's seat with the PTO (Blade Engage) knob in the engaged (ON) position, regardless of whether the parking brake is engaged. To check for proper operation, start the tractor's engine, move the PTO (Blade Engage) lever in the engaged (ON) position and momentarily raise yourself from the seat. The engine should stall.
- With the ignition key in the **NORMAL MOWING** position, the electric PTO (Blade Engage) clutch will automatically shut off if the PTO (Blade Engage) knob is moved into the engaged (ON) position with the drive pedal in position for Reverse travel. To check for proper operation, start the tractor's engine with the ignition key in the **NORMAL MOWING** position, move the PTO (Blade Engage) knob in the engaged (ON) position and place the the drive pedal in position for Reverse travel. The cutting deck should disengage.



**WARNING:** Do not operate the tractor if the interlock system is malfunctioning. This system was designed for your safety and protection.

## REVERSE CAUTION MODE

The **REVERSE CAUTION MODE** position of the key switch module allows the tractor to be operated in reverse with the blades (PTO) engaged.

**IMPORTANT:** *Mowing in reverse is not recommended.*



**WARNING:** Use extreme caution while operating the tractor in the **REVERSE CAUTION MODE**. Always look down and behind before and while backing. Do not operate the tractor when children or others are around. Stop the tractor immediately if someone enters the area.

To use the **REVERSE CAUTION MODE**:

**IMPORTANT:** *The operator MUST be seated in the tractor seat.*

- Start the engine as previously instructed in this Operator's Manual.
- Turn the key from the **NORMAL MOWING** (Green) position to the **REVERSE CAUTION MODE** (Yellow) position of the key switch module. See Figure 8.
- Depress the **REVERSE PUSH BUTTON** (Orange, Triangular Button) at the top, right corner of the key switch module. The red indicator light at the top, left corner of the key switch module will be **ON** while activated. See Figure 8.
- Once activated (indicator light ON), the tractor can be driven in reverse with the cutting blades (PTO) engaged.

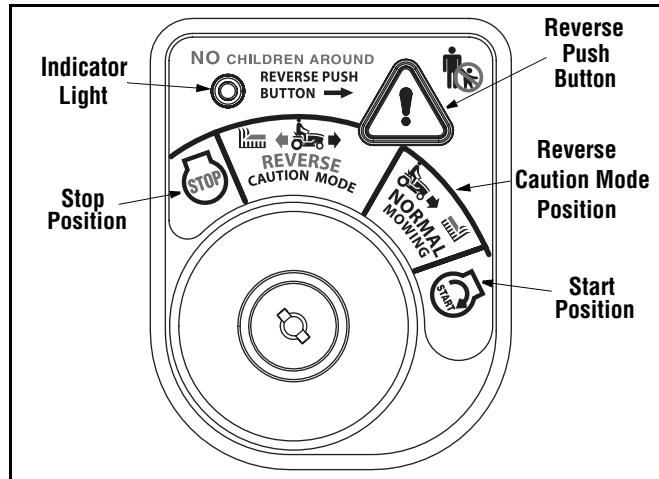


Figure 8

- Always look down and behind before and while backing to make sure no children are around
- After resuming forward motion, return the key to the **NORMAL MOWING** position.

**IMPORTANT:** The **REVERSE CAUTION MODE** will remain activated until:

- The key is placed in either the **NORMAL MOWING** position or **STOP** position.
- The operator leaves the seat (Models with Electric PTO ONLY).
- The operator engages the parking brake by fully depressing the brake pedal and holding it down while gently pushing the parking brake button inward (Models with Manual PTO ONLY).

## SETTING THE CUTTING HEIGHT

Select the height position of the cutting deck by placing the deck lift lever in any of the six different cutting height notches on the right side of the fender. Then adjust the deck wheels so that they are between  $\frac{1}{4}$ -inch and  $\frac{1}{2}$ -inch above the ground when the tractor is on a smooth, flat surface such as a driveway.



**WARNING:** Keep hands and feet away from the discharge opening of the cutting deck.

**NOTE:** *The deck wheels are an anti-scalp feature of the deck and are not designed to support the weight of the cutting deck.*

Refer to the ADJUSTMENTS section of this manual for more detailed instructions regarding various deck adjustments.

## STARTING THE ENGINE



**WARNING:** Do not operate the tractor if the interlock system is malfunctioning. This system was designed for your safety and protection.

**NOTE:** *Refer to the TRACTOR SET-UP section of this manual for Gasoline and Oil fill-up instructions.*

- Insert the tractor key into the ignition switch.
- Place the PTO knob (or lever) in the disengaged (Blade Stop) position.
- Engage the tractor's parking brake.
- Move the throttle control lever into the FAST (rabbit), or CHOKE position, if so equipped.
- Pull out the choke control knob, if so equipped. A warm engine may not require choking.
- Turn the ignition key clockwise to the START position. After the engine starts, release the key. It will return to the **NORMAL MOWING** position.

**IMPORTANT:** Do **NOT** hold the key in the START position for longer than ten seconds at a time. Doing so may cause damage to your engine's electric starter.

**NOTE:** If starting problems are encountered, refer to the TROUBLESHOOTING section of this manual.

- After the engine starts, deactivate the choke control.

**NOTE:** Do **NOT** leave the choke control on while operating the tractor. Doing so will result in a "rich" fuel mixture and cause the engine to run poorly.

## STOPPING THE ENGINE



**WARNING:** If you strike a foreign object, stop the engine, disconnect the spark plug wire(s) and ground against the engine. Thoroughly inspect the machine for any damage. Repair the damage before restarting and operating.

- If the blades are engaged, place the PTO/Blade Engage knob (or lever) in the disengaged (Blade Stop) position.
- Move the throttle control into the SLOW position and allow the engine to "idle down" for ten seconds, then turn the ignition key counterclockwise to the OFF position.
- Remove the key from the ignition switch to prevent unintended starting.

## ENGAGING THE PARKING BRAKE

To engage the parking brake:

- Fully depress the brake pedal and hold it there while gently pushing the parking brake button inward.
- Hold the parking brake button in while removing your foot from the brake pedal.
- Once engaged, the parking brake button and the brake pedal will lock in the "down" position.

To disengage the parking brake:

- Slightly depress the brake pedal.

**NOTE:** The parking brake must be engaged if the operator leaves the seat with the engine running or the engine will automatically shut off.

## DRIVING THE TRACTOR

**WARNING:** Avoid sudden starts, excessive speed and sudden stops.

**WARNING:** Do not leave the seat of the tractor without first placing the PTO knob (or lever) in the disengaged (OFF) position, depressing the brake pedal and engaging the parking brake. If leaving the tractor unattended, also turn the ignition key off and remove the key.

- Briefly depress the brake pedal to release the parking brake. Move the throttle lever into the FAST (rabbit) position.
- To travel FORWARD, slowly depress the upper portion of the drive pedal forward until the desired speed is achieved. See Figure 9.
- To travel in REVERSE, check that the area behind is clear then slowly depress the lower portion of the drive pedal with the ball of your foot (NOT your heel) until the desired speed is achieved. See Figure 9.

**IMPORTANT:** Do NOT attempt to change the direction of travel when the tractor is in motion. Always bring the tractor to a complete stop before pivoting the drive pedal from forward to reverse or vice versa.

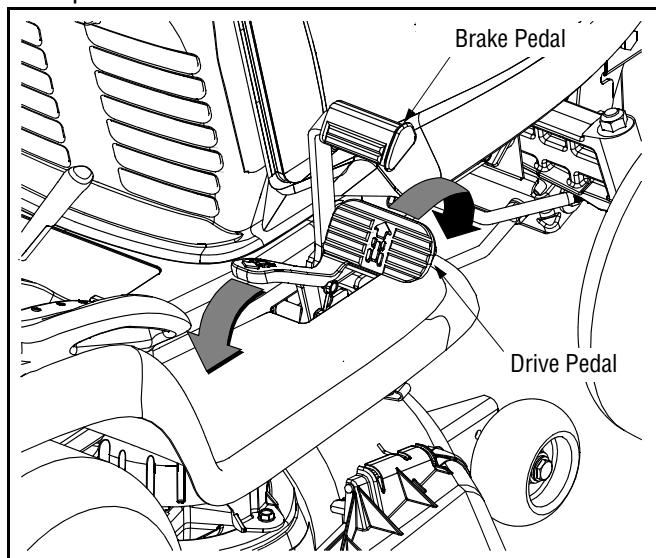


Figure 9

## DRIVING ON SLOPES

Refer to the SLOPE GAUGE on page 7 to help determine slopes where you may not operate safely.



**WARNING:** Do not mow on inclines with a slope in excess of 15 degrees (a rise of approximately 2-1/2 feet every 10 feet). The tractor could overturn and cause serious injury.

- Mow up and down slopes, **NEVER** across.

- Exercise extreme caution when changing direction on slopes.
- Watch for holes, ruts, bumps, rocks, or other hidden objects. Uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Avoid turns when driving on a slope. If a turn must be made, turn down the slope. Turning up a slope greatly increases the chance of a roll over.
- Avoid stopping when driving up a slope. If it is necessary to stop while driving up a slope, start up smoothly and carefully to reduce the possibility of flipping the tractor over backward.

## SETTING THE CRUISE CONTROL

**NOTE:** *The cruise control feature should only be utilized while traveling in the forward direction.*

- Slowly depress the upper portion of the drive pedal until the desired speed is achieved.
- Lightly depress the cruise control button.
- While continuing to hold the cruise button in, lift your foot from the drive pedal (you should feel the cruise latch engage).
- Once engaged, the cruise control button and the drive pedal will lock in the "down" position, and the tractor will maintain the same forward speed.

**NOTE:** *Cruise control cannot be engaged at the tractor's fastest ground speed. If the operator should attempt to do so, the tractor will automatically decelerate to the fastest optimal mowing ground speed.*

Disengage the cruise control using one of the following methods:

- Depress the brake pedal to disengage the cruise control and stop the tractor.
- Lightly depress the drive pedal.

To change the direction of travel to reverse when operating with cruise control, depress the brake pedal to disengage the cruise control and bring the tractor to a complete stop. Then slowly depress the lower portion of the drive pedal with the ball of your foot to travel in reverse.

## MOVING THE TRACTOR MANUALLY

Your tractor's transmission is equipped with a hydrostatic relief valve for occasions when it is necessary to move the tractor manually. Activating this valve forces the fluid in the transmission to bypass its normal route, allowing the rear tires to "freewheel." To engage the hydrostatic relief valve, proceed as follows:

- Locate the hydrostatic bypass rod in the rear of the tractor. See Figure 10.
- Pull the hydrostatic bypass rod outward, then down, to lock it in place.

**NOTE:** *The transmission will NOT engage when the hydrostatic bypass rod is pulled out. Return the rod to*

*its normal position prior to operating the tractor.*

**IMPORTANT:** Never attempt to move the tractor manually without first engaging the hydrostatic relief valve. Doing so will result in serious damage to the tractor's transmission.

## ENGAGING THE PTO

Engaging the PTO transfers power to the cutting deck or other (separately available) attachments. To engage the PTO, proceed as follows:

- Move the throttle control lever to the FAST (rabbit) position.

### Models with manual PTO

- Grasp the PTO lever and pivot it all the way forward into the engaged (ON) position.

### Models with electric PTO

- Pull the PTO knob outward into the engaged (ON) position. See Figure 11.

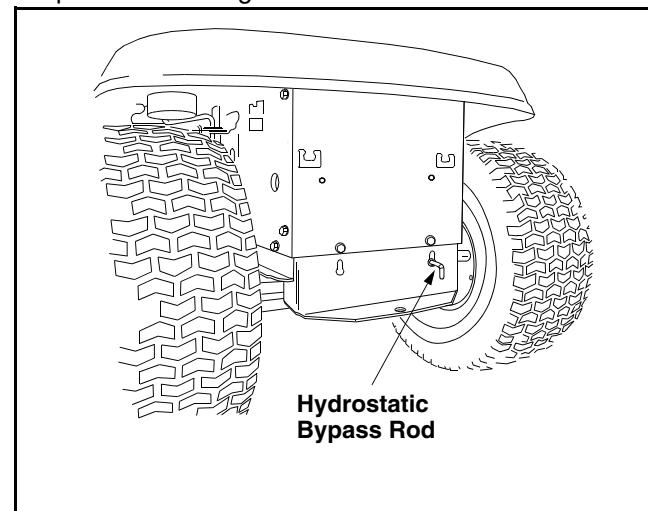


Figure 10

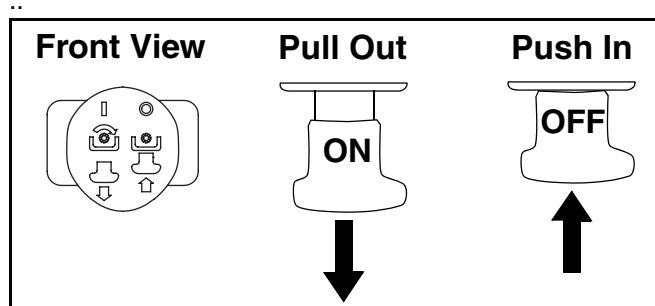


Figure 11

**NOTE:** *Keep the throttle lever in the FAST (rabbit) position for the most efficient use of the cutting deck or other (separately available) attachments.*

**IMPORTANT:** With the ignition key in the NORMAL MOWING position, the engine or electric PTO clutch will automatically shut off if the PTO is engaged with the drive pedal in position for reverse travel. Refer to SAFETY INTERLOCK SWITCHES earlier in this section.

- To disengage the PTO, push the PTO knob in, or move the PTO lever to the “Blade Stop” position. This will cut off power to deck or other attachments.

## USING THE LIFT LEVER

To raise the cutting deck, move the lift lever to the left, then place it in the notch best suited for your application. Refer to SETTING THE CUTTING HEIGHT earlier in this section.

## MOWING



**WARNING:** To help avoid blade contact or a thrown object injury, keep bystanders, helpers, children and pets at least 75 feet from the machine while it is in operation. Stop machine if anyone enters the area.

This tractor is equipped with a high quality cutting deck. The following information will be helpful when using the cutting deck with your tractor.

- Do not mow at high ground speed, especially if a mulch kit or grass collector is installed.



**WARNING:** Plan your mowing pattern to avoid discharge of materials toward roads, sidewalks, bystanders and the like. Also, avoid discharging material against a wall or obstruction which may cause discharged material to ricochet back toward the operator.

- For best results it is recommended that the first two laps be cut with the discharge thrown towards the center. After the first two laps, reverse the direction to throw the discharge to the outside for the balance of cutting. This will give a better appearance to the lawn.
- Do not cut the grass too short. Short grass invites weed growth and yellows quickly in dry weather.
- Mowing should always be done with the engine at full throttle.
- Under heavier conditions it may be necessary to go back over the cut area a second time to get a clean cut.
- Do NOT attempt to mow heavy brush and weeds and extremely tall grass. Your tractor is designed to mow lawns, NOT clear brush.
- Keep the blades sharp and replace the blades when worn. Refer to the SERVICE section of this manual for proper blade sharpening instructions.

## SECTION 7: MAKING ADJUSTMENTS



**WARNING:** Never attempt to make any adjustments while the engine is running, except where specified in the operator's manual.



**WARNING:** Disconnect the spark plug wire(s) and ground against the engine before performing any adjustments, repairs or maintenance.

## LEVELING THE DECK

**NOTE:** Check the tractor's tire pressure before performing any deck leveling adjustments. Refer to TIRES in the maintenance section of this manual for further information regarding tire pressure.

### Front To Rear

The front of the cutting deck is supported by a stabilizer bar that can adjusted to level the deck from front to rear. The front of the deck should be between 1/4-inch and 3/8-inch lower than the rear of the deck. Adjust if necessary as follows:

- With the tractor parked on a firm, level surface, place the deck lift lever in the top notch (highest position) and rotate the blade nearest the discharge chute so that it is parallel with the tractor.

- Measure the distance from the front of the blade tip to the ground and the rear of the blade tip to the ground.
- The first measurement taken should be between 1/4" and 3/8" less than the second measurement.
- Determine the approximate distance necessary for proper adjustment and proceed, if necessary, to the next step.
- From the front of the tractor, loosen the outermost hex lock nut on the end of the deck hanger rod. See Figure 12A.
- Tighten the inner hex nut front against the front hanger bracket to raise the front of the deck; loosen the hex nut to lower the front of the deck. See Figure 12A.
- Retighten the two lock nuts against the inner hex nuts when proper adjustment is achieved.

### Side to Side

If the cutting deck appears to be mowing unevenly, a side to side adjustment can be performed. Adjust if necessary as follows:

- With the tractor parked on a firm, level surface, place the deck lift lever in the top notch (highest position) and rotate both blades so that they are perpendicular with the tractor.
- Measure the distance from the outside of the left blade tip to the ground and the distance from the outside of the right blade tip to the ground. Both

measurements taken should be equal. If they're not, proceed to the next step.

- Loosen, but do **NOT** remove, the hex cap screw on the left deck hanger bracket. See Figure 12B.
- Balance the deck by using a wrench to turn the adjustment gear (found immediately behind the hex

cap screw just loosened) clockwise/up or counterclockwise/down.

- The deck is properly balanced when both blade tip measurements taken earlier are equal.
- Retighten the hex cap screw on the left deck hanger bracket when proper adjustment is achieved.

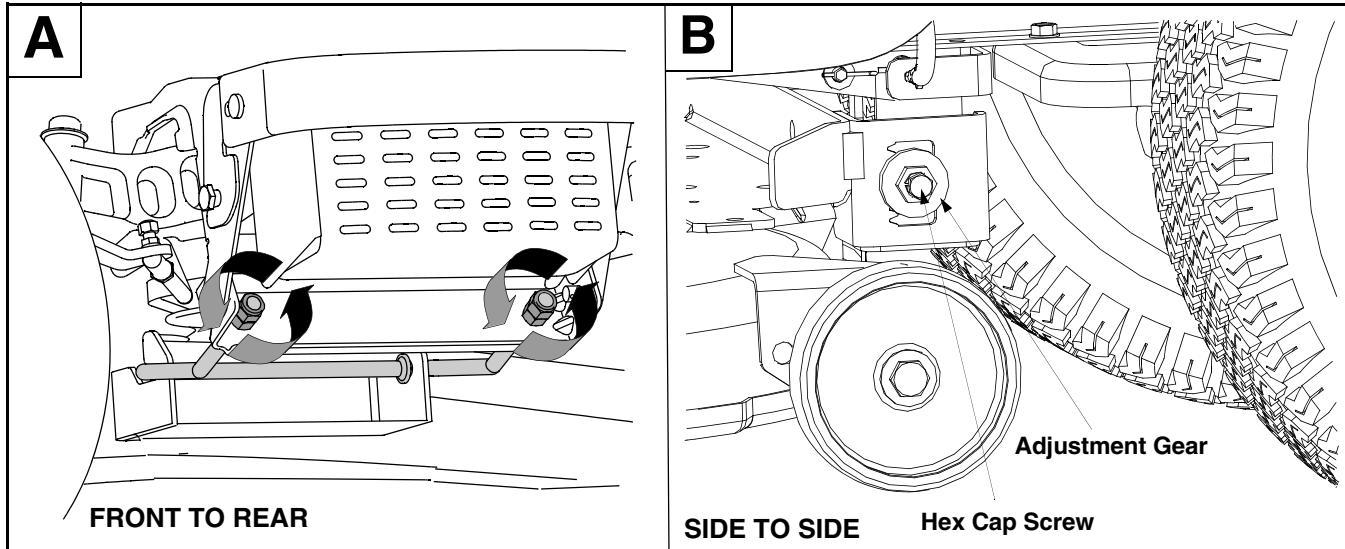


Figure 12

## SEAT ADJUSTMENT



**WARNING:** Before operating this machine, make sure the seat is engaged in the seat stop, stand behind the machine and pull back on seat until fully engaged into stop.

### Quick-Adjust Seat (If so equipped)

To adjust the position of the seat, move the seat adjustment lever to the left and slide the seat forward or rearward. Make sure seat is locked into position before operating the tractor. See Figure 13.

### Knob Adjustment Seat (If so equipped)

To adjust the position of the seat on models so equipped, loosen the two knobs on the bottom of the seat. Slide the seat forward or backward as desired. Retighten the two knobs.

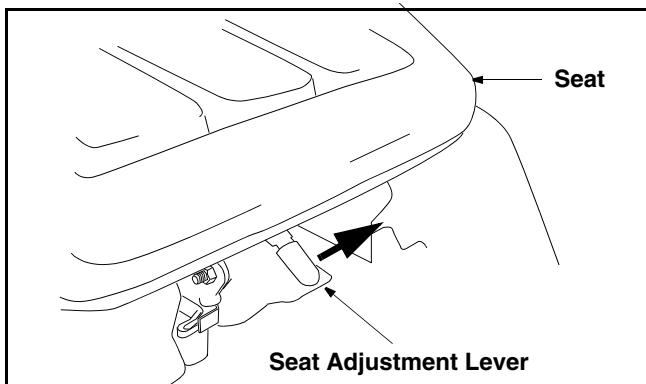


Figure 13


## PARKING BRAKE ADJUSTMENT



Never attempt to adjust the brakes while the engine is running. Always disengage PTO, move shift lever into neutral position, stop engine and remove key to prevent unintended starting.

If the tractor does not come to a complete stop when the brake pedal is completely depressed, or if the tractor's rear wheels can roll with the parking brake applied, the brake is in need of adjustment. The brake disc can be found on the right side of the transmission in the rear of the tractor. Adjust if necessary as follows:

- Looking at the transmission from the right side of the tractor, locate the compression spring and brake disc. See Figure 14.
- Carefully remove the cotter pin from the crown nut on the right side of the brake assembly.
- Using a feeler gauge, check the gap between the brake disc and the brake puck. Proper gap is 0.011".
- Tighten the crown nut until the proper gap is achieved.
- Install a new cotter pin (part 714-0111) on the crown nut.

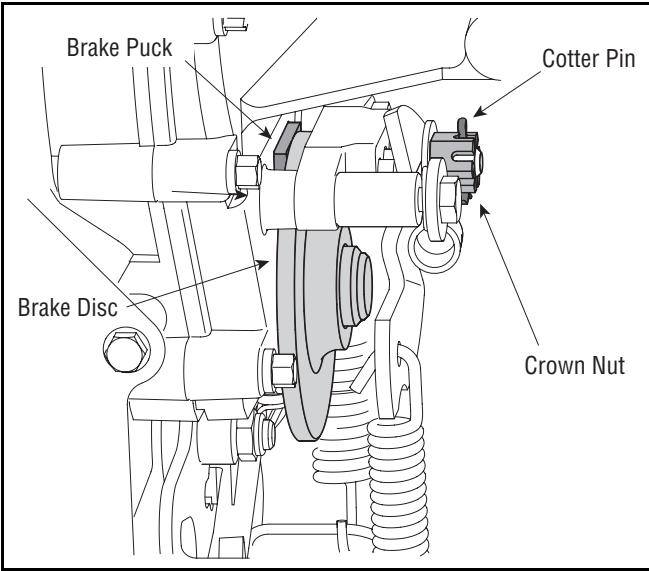

**Figure 14**


## STEERING ADJUSTMENT

If the tractor turns tighter in one direction than the other, or if the ball joints are being replaced due to damage or wear, the steering drag links may need to be adjusted.

Adjust the drag links so that equal lengths are threaded into the ball joint on the left side and the ball joint on the right side:

- Loosen the jam nut found on the drag link at the rear of the ball joint. See Figure 15.
- Remove the hex nut and lock washer on the top of ball joint. See Figure 15.
- Thread the ball joint toward the jam nut to shorten the drag link. Thread the ball joint away from the jam nut to lengthen the drag link.
- Replace hex nut and lock washer and retighten the jam nut after proper adjustment is achieved.

**NOTE:** Threading the ball joints too far onto the drag links will cause the front tires to "toe-in" too far. Proper toe-in is between  $1/16"$  and  $5/16"$ .

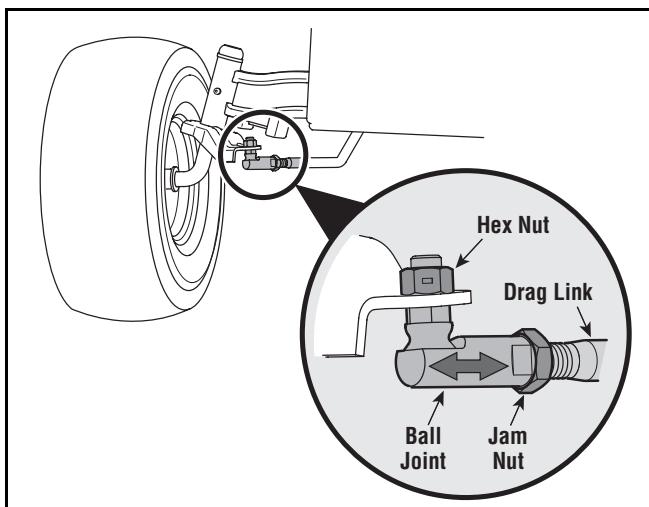

**Figure 15**

Front tire toe-in can be measured as follows:

- Place the steering wheel in position for straight ahead travel.
- In front of the axle, measure the distance horizontally from the inside of the left rim to the inside of the right rim. Note the distance.
- Behind the axle, measure the distance horizontally from the inside of the left rim to the inside of the right rim. Note the distance.
- The measurement taken in front of the axle should be between  $1/16"$  and  $5/16"$  less than the measurement taken behind the axle.
- Adjust if necessary.

## SETTING THE GAUGE WHEELS

Select the height position of the cutting deck by placing the deck lift lever in any of the six different cutting height notches on the right fender.


Adjust the deck wheels so that they are between  $\frac{1}{4}$ -inch and  $\frac{1}{2}$ -inch above the ground as follows.



**WARNING:** Keep hands and feet away from the discharge opening of the cutting deck.

Place the tractor on a firm and level surface, preferably pavement. Refer to Figure 16, and proceed as follows:

- Place the tractor's deck lift handle in the normally desired mowing height setting, then check the gauge wheels for contact or excessive clearance with the surface below.
- If the wheels contact the surface adjust as follows:
  - a. Raise the deck lift handle to its highest setting.
  - b. Remove the lock nuts and shoulder screws which secure the front gauge wheels to the deck.

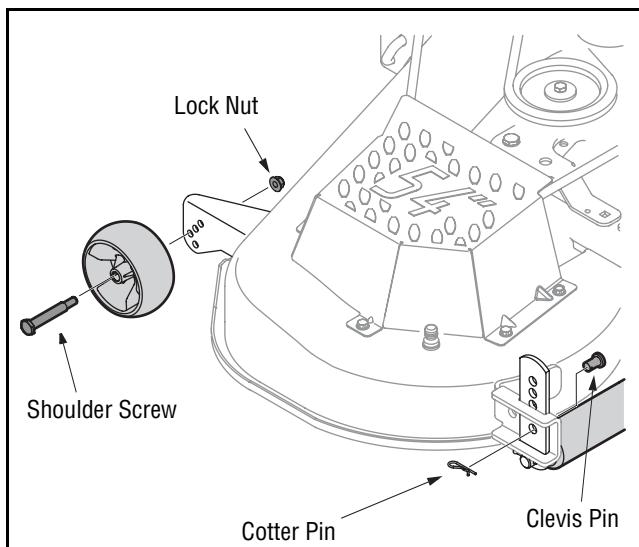

**Figure 16**

- c. Place the deck lift handle in the desired mowing height setting.

- d. Insert the shoulder screw with the rear gauge wheel into the index hole that leaves approximately 1/2" between the bottom of the wheel and the pavement.
- e. Note the position of the index hole used; then install the other rear gauge wheel and the front ball wheels into the corresponding index hole of the other gauge wheel brackets.
- If the gauge wheels have excessive clearance with the surface below, lower the wheels to the index hole that provides the approximate 1/2" clearance as described above.

#### **Roller (Model GT2300)**

To adjust the height of the rollers found on the rear of the mowing deck upward or downward, proceed as

follows:

- Place the deck lift lever in the lowest position.
- Remove the clevis pins and hairpin clips from the deck roller brackets on the left and right sides of the cutting deck. See Figure 16.
- Position the deck roller brackets up or down through the slots on the rear of the deck until desired position is reached, then re-attach with the clevis pins and hairpin clips just removed.

**IMPORTANT:** Be certain that the left roller bracket and the right roller bracket are set in the same position.

Refer to **Leveling the Deck** of this manual for more detailed instructions regarding various deck adjustments.

## **SECTION 8: MAINTENANCE**



**WARNING:** Before performing any maintenance or repairs, disengage PTO, move shift lever into neutral position, set parking brake, stop engine and remove key to prevent unintended starting.

### **CLEANING THE ENGINE AND DECK**

Any fuel or oil spilled on the machine should be wiped off promptly.

Do NOT allow debris to accumulate around the cooling fins of the engine or on any other part of the machine, especially the belts and pulleys.

**IMPORTANT:** The use of a pressure washer or garden hose to clean your tractor is NOT recommended. It may cause damage to electrical components, spindles, pulleys, bearings or the engine. The use of water will result in a shortened life of the tractor and reduce its serviceability.

### **ENGINE**

Refer to the separate engine manual for engine maintenance instructions.


Check **engine oil level** before each use as instructed in the separate engine manual packed with your unit. Read and follow instructions carefully.

### **CHANGING ENGINE OIL**

**NOTE:** Depending on the engine model found on your tractor, it may be necessary to remove the tractor's side panel in order to replace the oil filter (if so equipped).

- Unscrew oil fill cap and remove dipstick from the oil fill tube. See Figure 17.
- Pop open the protective cap on the end of the oil drain valve to expose the oil drain port. See Figure 17.

- Push oil drain hose (packed with unit) onto the oil drain port. Route the opposite end of the hose into an appropriate oil collection container with a capacity great enough to collect the used oil.
- Push the oil drain valve in slightly, then rotate counterclockwise and pull outward to begin draining oil. See Figure 17.

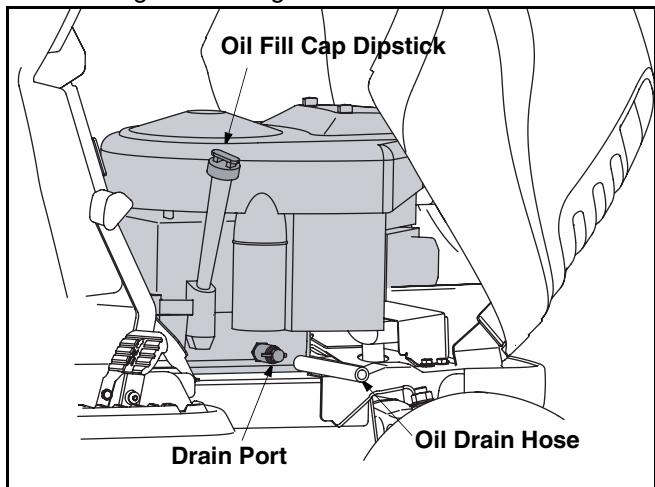

**Figure 17**

- Service the **oil filter** (if so equipped) as instructed in the separate engine manual packed with your unit.

Perform the above steps in the opposite order after oil has finished draining.

- Refill the engine with new motor oil.

**IMPORTANT:** Refill the engine with the proper capacity and weight of motor oil as instructed in the separate engine manual.

Service **air cleaner** every 25 hours under normal conditions. Clean every few hours under extremely dusty condition. To service the air cleaner, refer to the separate engine manual packed with your unit.

The **spark plug(s)** should be cleaned and the gap reset once a season. Spark plug replacement is recommended at the start of each mowing season; check engine manual for correct plug type and gap specifications.

## DECK WASH SYSTEM™ (Optional)

A hex plug can be found on your tractor's deck surface. This plug can be replaced with a water port to be used as part of a separately-available deck wash system. Use the Deck Wash System to rinse grass clippings from the deck's underside and prevent build-up of corrosive chemicals. Complete the following steps after each mowing:

1. Drive the tractor to a level, clear spot on your lawn, near enough to a water sillcock (spigot) for your garden hose to reach.
- IMPORTANT:** Make certain the tractor's discharge chute is directed away from your house, parked cars, etc.
2. Disengage PTO, set the parking brake, and stop engine.
3. Thread the hose coupler (packaged with this manual) onto the end of your garden hose.
4. Attach the hose coupler to the water port on your deck's surface. See Figure 19.
5. Turn the water on.
6. While sitting in the operator's position on the tractor, re-start the engine and place the throttle lever in the FAST (rabbit) position.
7. Engage the tractor's PTO.
8. **Remain in the operator's position** with the cutting deck engaged for a minimum of two minutes, allowing the underside of the cutting deck to thoroughly rinse.
9. Disengage the tractor's PTO.
10. Turn the ignition key to the STOP position to turn

the tractor's engine off.

11. Turn the water off and detach the hose coupler from the water port on your decks surface. Repeat step 4-11 on the opposite side of the cutting deck.

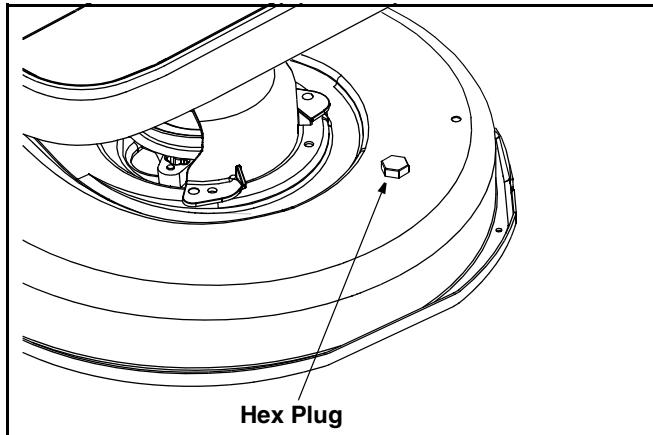


Figure 18

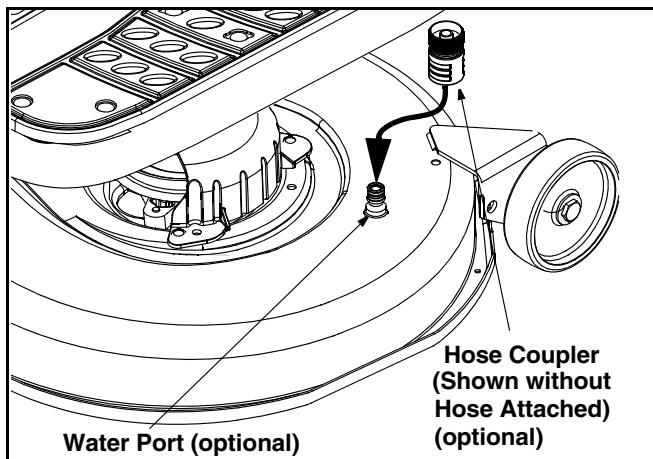


Figure 19

---

## SECTION 9: LUBRICATION



**WARNING:** Before lubricating, repairing, or inspecting, always disengage PTO, move shift lever into neutral position, set parking brake, stop engine and remove key to prevent unintended starting.

### Engine

Lubricate the engine with motor oil as instructed in the Engine Owner's Manual packed with your unit.

### Pivot Points & Linkage

Lubricate all the pivot points on the drive system, parking brake and lift linkage at least once a season with light oil.

### Front Wheels

Each of the front wheel axles is equipped with a grease fitting. Lubricate with a grease gun after every 25 hours of tractor operation. See Figure 20.

### Rear Wheels

The rear wheels should be removed from the axles once a season. Lubricate the axles and the rims well with an all-purpose grease before re-installing them.

### Deck Idler (Model GT2200 Only)

A grease fitting can be found on the pivoting idler bracket on the deck. Lubricate with a No. 2 multi-purpose grease applied with a grease gun after every 25 hours of tractor operation. See Figure 21.

### Deck Spindles

Grease fittings can be found on the front of each deck spindle. After every 25 hours of tractor operation, lubricate with 251H EP grease or an equivalent No. 2 multi-purpose lithium grease. Using a grease gun, apply two strokes (minimum) or sufficient grease to each spindle.

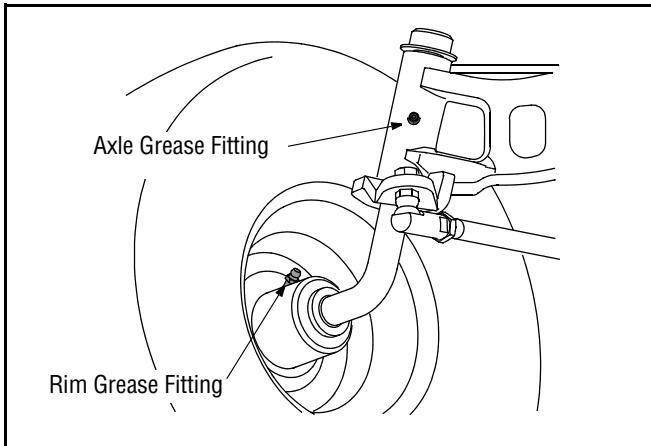


Figure 20

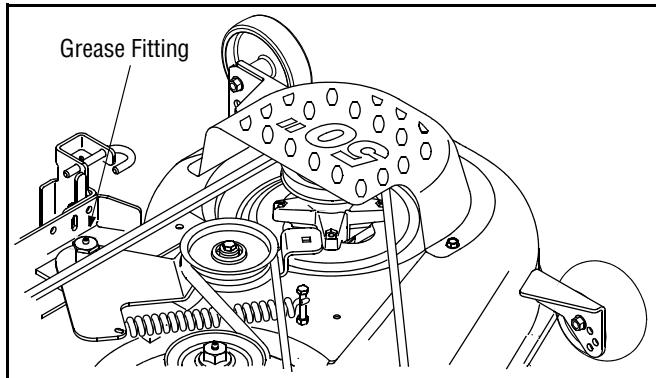


Figure 21

## SECTION 10: SERVICE

### TIRES



**WARNING:** Never exceed the maximum inflation pressure shown on the sidewall of the tire.

The recommended operating tire pressure is 10 psi for the rear tires and 14 psi for the front tires. Refer to the tire sidewall for exact tire manufacturer's recommended or maximum psi. Do not overinflate. Uneven tire pressure could cause the cutting deck to mow unevenly.

### CUTTING BLADES



**WARNING:** Be sure to shut the engine off, remove ignition key, disconnect the spark plug wire(s) and ground against the engine to prevent unintended starting before removing the cutting blade(s) for sharpening or replacement. Protect your hands by using heavy gloves or a rag to grasp the cutting blade.



**WARNING:** Periodically inspect the blade adapter and/or spindle for cracks or damage, especially if you strike a foreign object. Replace immediately if damaged.

The blades may be removed as follows.

- Remove the deck from beneath the tractor, (refer to DECK REMOVAL) then gently flip the deck over to expose its underside.
- Place a block of wood between the center deck housing baffle and the cutting blade to act as a stabilizer. See Figure 22 .
- Use a 15/16" wrench to remove the hex flange nut that secures the blade to the spindle assembly. See Figure 22.

To properly sharpen the cutting blades, remove equal amounts of metal from both ends of the blades along the cutting edges, parallel to the trailing edge, at a 25° to 30° angle. See **IMPORTANT:**

**IMPORTANT:** If the cutting edge of the blade has already been sharpened to within 5/8" of the wind wing radius, or if any metal separation is present, replace the blades with new ones. See Figure 24.

It is important that each cutting blade edge be ground equally to maintain proper blade balance.

A poorly balanced blade will cause excessive vibration and may cause damage to the tractor and result in personal injury.

The blade can be tested by balancing it on a round shaft screwdriver. Grind metal from the heavy side until it balances evenly.


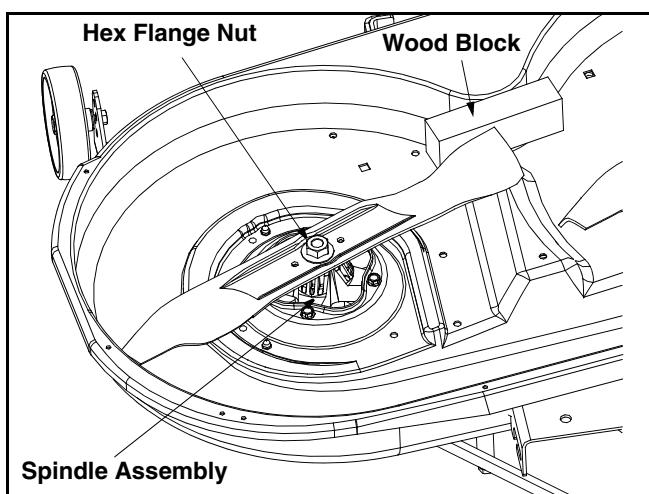


Figure 22

**IMPORTANT:** When replacing the blade, be sure to install the blade with the side of the blade marked "Bottom" (or with a part number stamped in it) facing the ground when the mower is in the operating position.

**IMPORTANT:** Use a torque wrench to tighten blade spindle hex flange nut to between 70 ft-lbs and 90 ft-lbs.

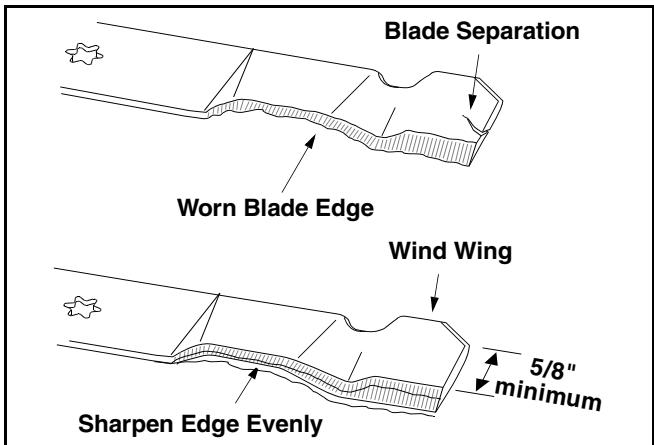

**Figure 23**

## BATTERY

The battery is sealed and is maintenance-free. Acid levels cannot be checked.



**WARNING:** Shield eyes (e.g. goggles, face shield) and protect skin and clothing when handling battery acid or a battery containing acid.

- Always keep the battery cables and terminals clean and free of corrosive build-up.
- After cleaning the battery and terminals, apply a light coat of petroleum jelly or grease to both terminals.
- Always keep the rubber boot positioned over the positive terminal to prevent shorting.

**IMPORTANT:** If removing the battery for any reason, disconnect the NEGATIVE (Black) wire from its terminal first, followed by the POSITIVE (Red) wire. When re-installing the battery, always connect the POSITIVE (Red) wire its terminal first, followed by the NEGATIVE (Black) wire. Be certain that the wires are connected to the correct terminals; reversing them could change the polarity and cause damage to your engine's alternating system.

## IMPORTANT:

1. Battery wires must be connected to the correct terminals. Reversing them could change the polarity and damage engine's alternating system.
2. Do not jump-start a damaged battery.
3. When storing the battery, disconnect the negative terminal and store with full charge.

## CHARGING

If the unit has not been put into use for an extended period of time, charge the battery with an automotive-type 12-volt charger for a minimum of one hour at six amps.



**WARNING:** Batteries give off an explosive gas while charging. Charge battery in a well ventilated area and keep away from an open flame or pilot light as on a water heater, space heater, furnace, clothes dryer or other gas appliances.

## JUMP STARTING



**WARNING:** When removing or installing the battery, follow these instructions to prevent the screwdriver from shorting against the frame.

**IMPORTANT:** Never jump your tractor's dead battery with the battery of a running vehicle.

- Connect end of one jumper cable to the positive terminal of the good battery, then the other end to the positive terminal of the dead battery.
- Connect the other jumper cable to the negative terminal of the good battery, then to the frame of the unit with the dead battery.



**WARNING:** Failure to use this procedure could cause sparking, and the gas in either battery could explode.



**WARNING:** Do not use the tractor battery to start other vehicles.

## CLEANING THE BATTERY

Keep the terminals and the top of the battery clean and free from corrosion. Clean the battery with baking soda and water or a commercial battery cleaner. If necessary, scrape the battery terminals with a wire brush to remove deposits. Coat terminals and exposed wiring with grease or petroleum jelly to prevent corrosion.

**CAUTION:** Do not allow any cleaning solution to get inside the battery.

## BATTERY FAILURES

Some common causes for battery failure are:

- incorrect initial activation
- undercharging
- overcharging
- corroded connections
- freezing

These failures are NOT covered by your tractor's warranty.

## FUSE

A 20 amp fuse is installed in your tractor's wiring harness to protect the tractor's electrical system from damage caused by excessive amperage.

If the electrical system does not function, or your tractor's engine will not crank, first check to be certain that the fuse has not blown.

It can be found under the hood mounted between the dash panel and fuel tank on the right-hand support bar.

**IMPORTANT:** Always use a 20 amp fuse for replacement.

## CUTTING DECK REMOVAL

To properly remove the cutting deck, proceed as follows:

- Place the PTO/Blade Engage knob (or lever) in the disengaged (Blade Stop) position and engage the parking brake.
- Lower the deck by moving the deck lift lever into the bottom notch on the right fender.
- Remove the PTO belt from around the electric PTO clutch and from around the PTO idler pulley(s).
- Looking at the cutting deck from the left side of the tractor, locate the deck support pin on the rear left side of the deck.

**IMPORTANT:** Rotate the pin slightly toward the rear of the tractor and release the pin into the hole provided.

- Pull the deck support pin outward to release the deck from the deck lift arm. See Figure 24.
- Repeat the above steps on the right side of the tractor.

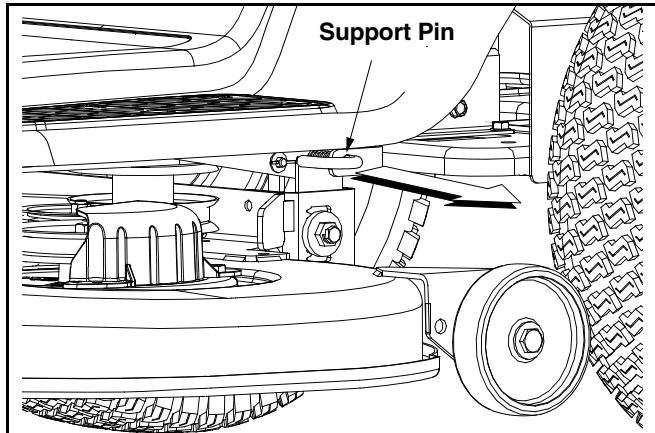


Figure 24

- Move the deck lift lever into the top notch on the right fender to raise the lift arms out of the way.
- Gently slide the cutting deck toward the front of the tractor allowing the hooks on the deck to release themselves from the deck stabilizer rod.
- Gently slide the cutting deck (from the right side) out from underneath the tractor.

## CHANGING THE DECK BELT

**IMPORTANT:** The V-belts found on your tractor are specially designed to engage and disengage safely. A substitute (non-OEM) V-belt can be dangerous by not disengaging completely. For a proper working machine, use factory approved belts.



**WARNING:** Be sure to shut the engine off, remove ignition key, disconnect the spark plug wire(s) and ground against the engine to prevent unintended starting before removing the belt(s). All belts on your tractor are subject to wear and should be replaced if any signs of wear are present.




**WARNING:** Avoid the possibility of a pinching injury. Do not place your fingers on the idler spring or between the belt and the pulley while removing the belt.

To change or replace the deck belts on your tractor, proceed as follows:


- Lower the deck by moving the deck lift lever into the bottom notch on the right fender.
- Remove the belt guards by removing the self-tapping screws that fasten them to the deck.
- To ease in removing the belt in later steps, loosen, but do not remove, the bolt which secures the pivoting idler pulley to the idler bracket.
- Insert a 3/8"-drive ratchet wrench (set to *tighten*, *Model GT2200* or set to *loosen*, *Model GT2300*) into the square hole found in the idler bracket on the left side of the deck's surface. See Figure 25, *Model GT2200* or Figure 26, for *Model GT2300*.
- Grasp the ratchet's handle and pivot it toward the front of the tractor to relieve tension on the belt.
- With belt tension relieved, **carefully remove the belt from around the left-hand spindle pulley**.

**IMPORTANT:** Carefully allow the ratchet to pivot rearward before removing it from the square hole.

- Remove the deck belt from around all pulleys, including the deck idler pulley(s) and the electric PTO clutch.
- Route the new belts (deck belt first). See Figure 27.
- Remount the belt guards removed earlier.

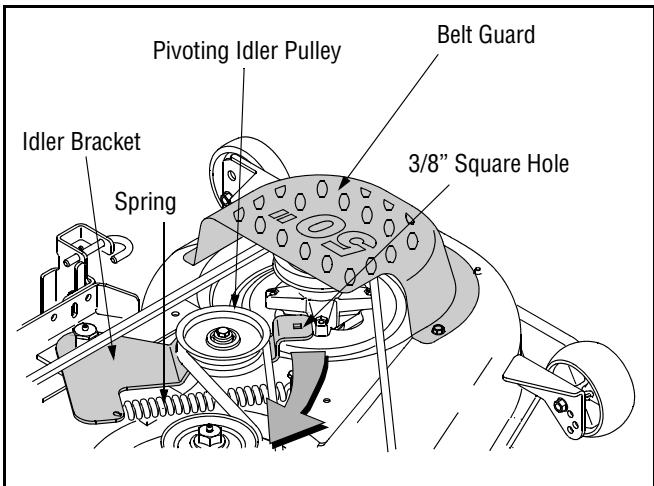

**Figure 25**

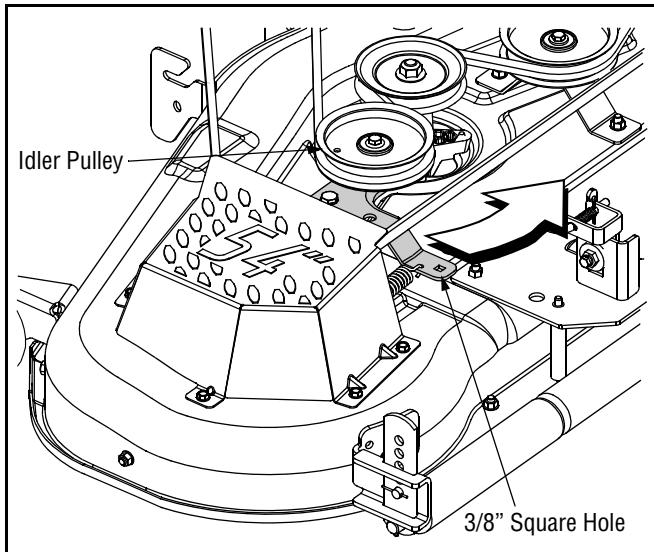

**Figure 26**

## SECTION 11: OFF-SEASON STORAGE



**WARNING:** Never store the machine or fuel container indoors where there is an open flame, spark or pilot light such as on water heater, furnace, clothes dryer or other gas appliance.



**WARNING:** Use a fuel stabilizer additive or drain the fuel into an approved container outdoors, away from an open flame. Allow engine to cool. Extinguish cigarettes, cigars, pipes and other sources of ignition prior to draining fuel.


If the machine is to be inoperative for a period longer than 30 days, prepare for storage as follows.

- Clean the engine and the entire unit thoroughly.
- Lubricate all lubrication points. Wipe the entire machine with an oiled rag to protect the painted metal surfaces.

- Refer to the engine manual for correct engine storage instructions. The engine must be completely drained of fuel to prevent gum deposits from forming on essential carburetor parts, fuel lines and fuel tanks. It is not necessary to remove the battery from the tractor for storage. However, clean the top of the battery and make sure it has full charge. Disconnect the negative terminal of the battery before storing the tractor.
- Store unit in a clean, dry area.

**NOTE:** When storing any type of power equipment in an unventilated or metal storage shed, care should be taken to rustproof the equipment. Using a light oil or silicone, coat the equipment, especially any chains, springs, bearings and cables.

**IMPORTANT:** Recharge the battery before returning it to service after storage. Even if the tractor starts, the engine charging system may not bring the battery up to a full charge, unless it is recharged.

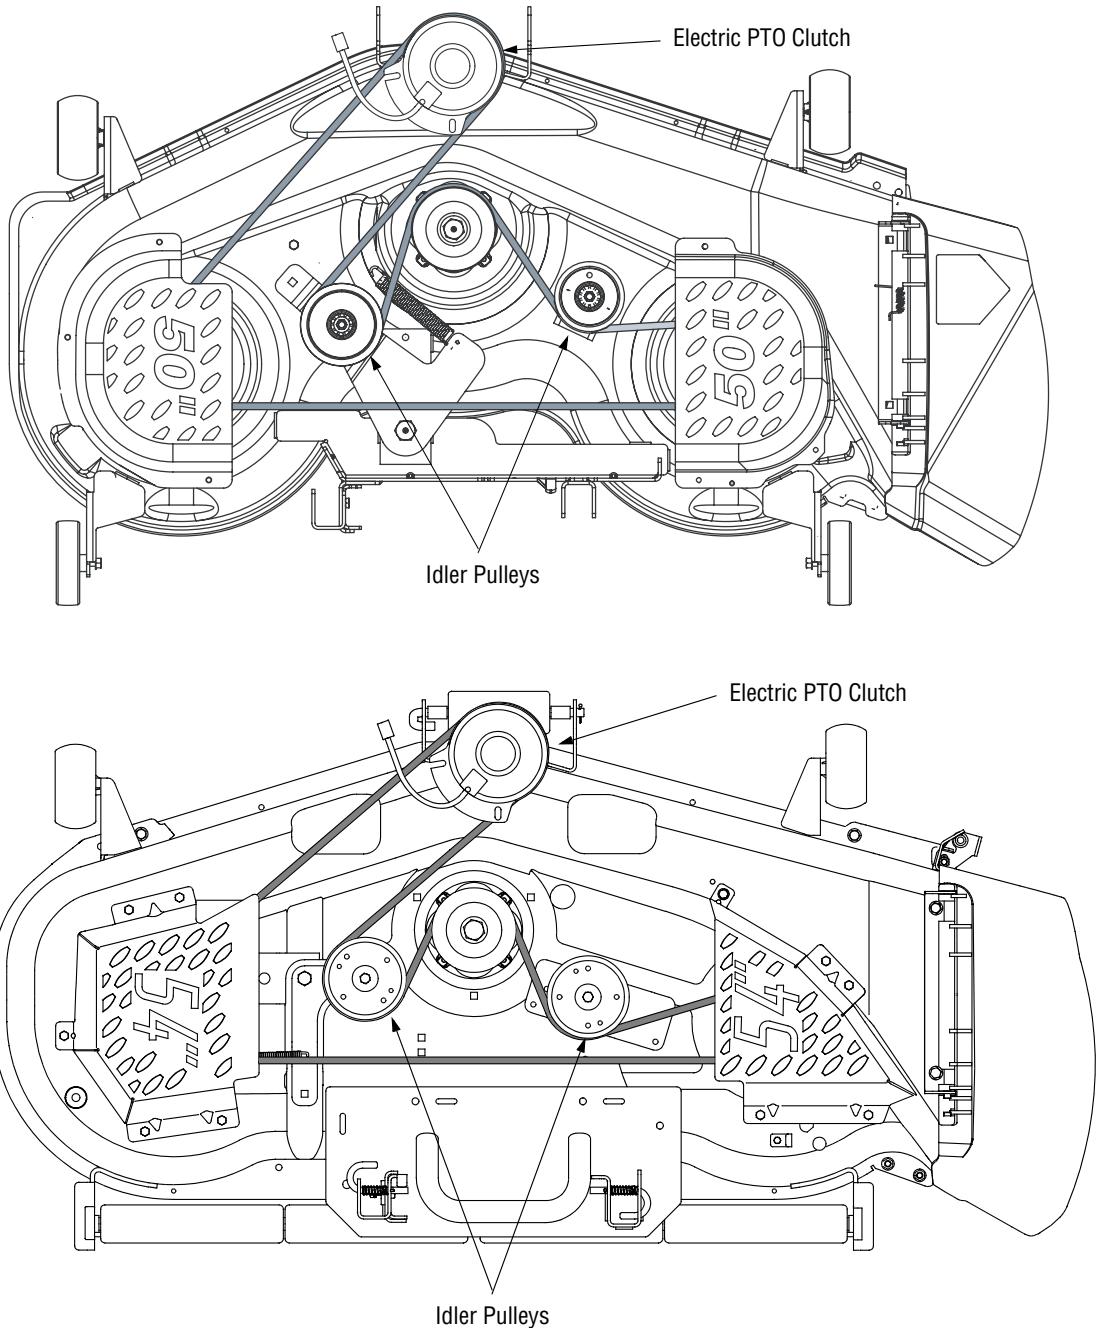

**Figure 27**

## SECTION 12: MAINTENANCE CHART

	Before Each Use	After Initial 24 Hours	Every 10 Hours	Every 25 Hours	Every 50 Hours	Every Season	Prior to Storing
Clean Hood/Dash Louvers			✓				✓
Check Engine Oil Level	✓						
Clean and Re-oil Air Filter's Foam Precleaner				✓			
Replace Air Filter Element						✓	
Change Engine Oil & Filter		✓			✓	✓	
Clean Battery Terminals			✓				✓
Lube Front Axles and Rims				✓			✓
Clean Engine Cooling Fins				✓			✓
Lube Pedal Pivot Points			✓				✓
Lube Deck Spindles				✓			
Check Spark Plugs						✓	✓
Check Safety Interlock System	✓						

\* Toro reserves the right to change product specifications, design, and standard equipment without notice and without incurring obligation

\*\* Kohler's horsepower ratings exceed Society of Automotive Engineers Small Engine Test Code J1940. Actual engine horsepower is lower and affected by, but not limited to, accessories (air cleaner, exhaust, charging, cooling, fuel pump, etc.), application, engine speed and ambient operating conditions (temperature, humidity, and altitude).

## SECTION 13: TROUBLESHOOTING

Trouble	Possible Cause(s)	Corrective Action
Engine fails to start	PTO lever (button) engaged. Parking brake not engaged. Spark plug wire(s) disconnected. Throttle control not in correct position Choke not activated. Fuel tank empty, or stale fuel. Blocked fuel line. Faulty spark plug. Engine flooded.	Place PTO lever (button) in disengaged (Blade Stop) position. Engage parking brake. Connect wire(s) to spark plug. Place throttle lever to <b>fast</b> or <b>choke</b> (if so equipped). Activate choke. Fill tank with clean, fresh (less than 30 days old) gas. Clean fuel line or replace fuel filter, if so equipped. Clean, adjust gap or replace plug. Crank engine with throttle in FAST position.
Engine runs erratic	Unit running with CHOKE applied. Spark plug wire loose. Blocked fuel line or stale fuel.  Vent in gas cap plugged. Water or dirt in fuel system.  Dirty air cleaner.	Place throttle lever in FAST position. Connect and tighten spark plug wire. Clean fuel line; fill tank with clean, fresh (less than 30 days old) gasoline. Replace fuel filter, if so equipped. Clear vent or replace cap if damaged. Drain fuel tank. Refill with clean, fresh (less than 30 days old) gasoline. Replace air cleaner cartridge/element or clean pre-cleaner, if so equipped.
Engine overheats	Engine oil level low. Air flow restricted.	Fill crankcase with proper capacity and weight of oil. Clean grass clippings and debris from around the engine's cooling fins and blower housing.
Engine hesitates at high RPM	Spark plug gap too close.	Remove spark plug and reset the gap to .030".
Idles poorly	Spark plug fouled, faulty or gap too wide. Dirty air cleaner.	Replace spark plug. Set plug gap to .030". Replace air cleaner cartridge/element or clean pre-cleaner, if so equipped.
Excessive vibration	Cutting blade loose or unbalanced or damaged.	Tighten blade and spindle. Balance blade. Replace blade.
Mower will not mulch grass	Engine speed low. Wet grass. Excessively high grass.  Dull blade.	Place throttle in FAST position. Do not mow when grass is wet; wait until later to cut. Mow once at a higher cutting height, then mow again at desired height or make a narrower cutting swath. Sharpen or replace blade.
Uneven cut	Deck not balanced properly. Dull blade. Uneven tire pressure.	Perform side-to-side deck adjustment. Sharpen or replace blade. Check tire pressure in all four tires.

## SECTION 14: SPECIFICATIONS\*

	<b>GT2200</b>	<b>GT2300</b>
<b>Capacities</b>		
Fuel Tank	3.0 gal. (11.4 liters)	3.0 gal. (11.4 liters)
Engine Crankcase (w/ filter)	57.5 oz. (1.7 liters)	57.5 oz. (1.7 liters)
<b>Hydrostatic Transmission</b>		
Make and Model	<i>Hydro-Gear</i> 0510	<i>Hydro-Gear</i> 0510
Gear Ratio	22.2:1	22.2:1
Forward Speed	0 m.p.h. - 5.2 m.p.h.	0 m.p.h. - 5.2 m.p.h.
Reverse Speed	0 m.p.h. - 2.3 m.p.h.	0 m.p.h. - 2.3 m.p.h.
<b>Engine (Air-cooled, 4-cycle)</b>		
Make	<i>Kohler Courage</i>	<i>Kohler Courage</i>
Model	SV730	SV735
Cylinders	Twin	Twin
Bore	3.27 in. (83 mm)	3.27 in. (83 mm)
Stroke	2.64 in. (67 mm)	2.64 in. (67 mm)
Displacement	44.2 cubic in. (725 cc )	44.2 cubic in. (725 cc )
Power @3600 RPM	25 HP** (18.6 kW)	26 HP** (19.4 kW)
Maximum Torque	46.6 ft. lb. (63.2 Nm) @ 2000 RPM	45.2 ft. lb. (61.2) @2400
Compression Ratio	9:0:1	9:0:1
Engine Speed (governed)	3375 RPM	3375 RPM
Low Speed	1200 RPM ( $\pm$ 75 RPM)	1200 RPM ( $\pm$ 75 RPM)
Spark Plug Gap	.030 in. (.76 mm)	.030 in. (.76 mm)
<b>Electrical System</b>		
System Voltage	12-volt Negative Ground	12-volt Negative Ground
Battery	235 CCA (sealed)	235 CCA (sealed)
Alternator	15 Amp Regulated	15 Amp Regulated
Fuse (automotive type)	20 Amp	20 Amp
Headlights	Incandescent	Incandescent
<b>Brakes</b>	Single Disc (Dry)	Single Disc (Dry)
<b>Turf Tires</b>		
Front (inches)	16 x 7.5 x 8	16 x 7.5 x 8
Rear (inches)	23 x 10.5 x 12	23 x 10.5 x 12
<b>Dimensions</b>		
Cutting Width, Deck	50 in. (127.0 cm)	54 in. (137.2 cm)
Wheelbase	46 in. (116.8 cm)	46 in. (116.8 cm)
Length, over all	68 in. (172.7 cm)	68 in. (172.7 cm)
Width, over all	54 in. (137.2 cm)	60 in. (152.4 cm)
Height, over all	43 in. (109.2 cm)	43 in. (109.2 cm)
Ground Clearance	4.5 in. (11.4 cm)	4.5 in. (11.4 cm)
Turning Radius	21 in. (53 cm)	21 in. (53.3 cm)
Weight (approximate)	529 lb. (240 kg.)	529 lb. (240 kg.)

\* Toro reserves the right to change product specifications, design, and standard equipment without notice and without incurring obligation

\*\* Kohler's horsepower ratings exceed Society of Automotive Engineers Small Engine Test Code J1940. Actual engine horsepower is lower and affected by, but not limited to, accessories (air cleaner, exhaust, charging, cooling, fuel pump, etc.), application, engine speed and ambient operating conditions (temperature, humidity, and altitude).



# The Toro Company

## MANUFACTURER'S LIMITED WARRANTY FOR LAWN & GARDEN TRACTORS

**IMPORTANT:** To obtain warranty coverage owner must present an original proof of purchase and applicable maintenance records to the servicing dealer. Please see the operator's manual for information on required maintenance and service intervals.

The limited warranty set forth below is given by **The Toro Company** ("Toro") with respect to new merchandise purchased or leased and used in the United States and/or its territories and possessions, and by Toro with respect to new merchandise purchased or leased and used in Canada and/or its territories and possessions.

Toro warrants this product (excluding its *Normal Wear Parts, Batteries, and Frame and Front Axle* as described below) against defects in material and workmanship for a period of two (2) years or eighty (80) operation hours, whichever comes first, commencing on the date of original retail purchase or lease and will, at its option, repair or replace, free of charge, any part found to be defective in materials or workmanship.

*Normal Wear Parts* are warranted to be free from defects in material and workmanship for a period of thirty (30) days from the date of original purchase or lease. Normal wear parts include, but are not limited to items such as: belts, blades, blade adapters, grass bags, rider deck wheels, seats, and tires.

*Batteries* have a one-year prorated limited warranty against defects in material and workmanship, with 100% replacement during the first three months. After three months, the battery replacement credit is based on the months remaining in the twelve (12) month period dating back to the original date of original sale or lease. Any replacement battery will be warranted only for the remainder of the original warranty period.

This limited warranty shall only apply if this product has been operated and maintained in accordance with the Operator's Manual furnished with the product, and has not been subject to misuse, abuse, commercial use, neglect, accident, improper maintenance, alteration, vandalism, theft, fire, water, or damage because of other peril or natural disaster. Damage resulting from the installation or use of any part, accessory or attachment not approved by Toro for use with the product(s) covered by this manual will void your warranty as to any resulting damage. In addition, Toro may deny warranty coverage if the hour meter, or any part thereof, is altered, modified, disconnected or otherwise tampered with.

**HOW TO OBTAIN SERVICE:** Warranty service is available, WITH PROOF OF PURCHASE AND APPLICABLE MAINTENANCE RECORDS, through your local authorized service dealer. To locate the dealer in your area:

**In the U.S.A. or Canada:**

Check your Yellow Pages, or contact The Customer Care Department, Toro Warranty Company at 8111 Lyndale Avenue South, Bloomington, MN 55420, call 1-888-384-9942 (In Canada 1-888-848-4073).  
or log on to our website at [www.toro.com](http://www.toro.com).

Without limiting the foregoing, this limited warranty does not provide coverage in the following cases:

- a. The engine or component parts thereof. These items may carry a separate manufacturer's warranty. Refer to applicable manufacturer's warranty for terms and conditions.
- b. Routine maintenance items such as lubricants, filters, blade sharpening, tune-ups, brake adjustments, clutch adjustments, deck adjustments, and normal deterioration of the exterior finish due to use or exposure.
- c. Service completed by someone other than an authorized service dealer.
- d. Toro does not extend any warranty for products sold or exported outside of the United States and/or Canada, and their respective possessions and territories, except those sold through Toro's authorized channels of export distribution.
- e. Replacement parts and/or accessories that are not genuine Toro parts.
- f. Transportation charges and service calls.
- g. Toro does not warrant this product for commercial use.

**There are no implied warranties, including without limitation any implied warranty of merchantability or fitness for a particular purpose. No warranties shall apply after the applicable period of express written warranty above. No other express warranties beyond those mentioned above, given by any person or entity, including a dealer or retailer, with respect to any product, shall bind Toro. The exclusive remedy is repair or replacement of the product as set forth above. The terms of this warranty provide the sole and exclusive remedy arising from the sale and/or lease of the products covered hereby. Toro shall not be liable for any incidental or consequential loss or damage including, without limitation, expenses incurred for substitute or replacement lawn care services or for rental expenses to temporarily replace a warranted product.**

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

In no event shall recovery of any kind be greater than the amount of the purchase price of the product sold. **Alteration of safety features of the product shall void this warranty.** You assume the risk and liability for loss, damage, or injury to you and your property and/or to others and their property arising out of the misuse or inability to use the product.

This limited warranty shall not extend to anyone other than the original purchaser or to the person for whom it was purchased as a gift.

**HOW LOCAL LAWS RELATE TO THIS WARRANTY:** This limited warranty gives you specific legal rights, and you may also have other rights that vary in different jurisdictions.

notes . . .

notes . . .

notes . . .

**LES LOIS LOCALES ET CETTE GARANTIE :** Cette garantie limitee vous accorde des droits juridiques spécifiques et vous pouvez bénéficier d'autres droits qui sont différents selon les jurisdictions.

- Les prix des termitages sont plus élevés que les autres techniques.
- Les frais de transport des machines sont élevés et dépendent des techniques.
- Les frais de remontage si elles ne sont pas des pièces très courantes.
- Toro ne garantit pas ce produit si il est utilisé à des fins commerciales.

Trois-neuf garnant pas les produits vendus ou exportés hors des États-Unis-technique agréée. Trop de produits ont été vendus par l'intermédiaire des services d'exportation trop.

Chine ou de son exposition aux intempéries.

D. Les articles d'entretien courant tels que les lubrifiants, filtres, aiguisages de lame et revêtements, les régLAGes des freins, de l'embarayage ou du plateau de course à la déterioration normale de la chaîne qui fait de l'entretien de la machine.

Dure les conditions susmentionnées, cette garantie limitee ne couvre pas :  
a. Le moteur ou ses composants. Ces articles peuvent étre couverts par une  
garantie séparée du fabricant. Consulter la garantie du fabricant pour toute

S DE PELOUSE ET JARDIN

**Aux États-Unis ou au Canada :**  
Consulter les Pages jaunes ou adresser-vous au Customer Care Department, Toro  
Warren Company au 8111 Lyndale Avenue South, Bloomington, MN 55420 ou  
appeler le 1-888-384-9942 (au Canada le 1-888-848-4073) ou visitez le site web

**POUR FAIRE HONORER LA GARANTIE :** Présentez UNE PREUVE D'ACHAT ET LES DOSSIERS D'ENTRETIEN CORRESPONDANTS à la station technique agréée dans votre région ; lorsque vous présentez une station technique agréée dans votre région :

Cette garantie n'est applicable que si ce produit a été utilisé et entretenu conformément aux instructions de la notice d'utilisation qui l'accompagne. De plus, le produit ne doit pas avoir fait l'objet d'un emploi incorrect ou abusif, d'une utilisation à des fins commerciales, d'une négligence, d'un accident, d'un entretien incorrect, d'une modification, d'un acte de vandalisme, d'un vol, d'un incendie, ou d'une inondation ou de tout autre dégât causé par tout incident ou défaillance naturelle. Les dégâts causés par l'installation ou l'utilisation d'une pièce, d'un accessoire ou d'un équipement annexé, dont l'emploi avec le produit faisait l'objet de la notice d'utilisation, sont également exclus de la garantie.

Toro peut aussi refuser d'honorer la garantie si le compteur d'heures, ou une pièce quelconque de celle-ci, a été modifié, changé, débranché ou trafiquée.

D'après les termes de la garantie, Toro rendra la garantie nulle et non avenue. Toro peut aussi refuser d'honorer la garantie si la station technique d'utilisation n'est pas homologuée par Toro, rendant la garantie nulle et non avenue. Toro peut aussi refuser d'honorer la garantie si la station technique d'utilisation n'a pas rendu la garantie nulle et non avenue.

Trois garanties que le produit (à l'exception des Pièces ou composants à usure normale, batteries et châssis et essieu avant tels qu'ils sont décrits ci-dessous) est exempt de tout vice de matière et de fabrication pour une durée de deux (2) ans ou quatre-vingts (80) heures de fonctionnement, selon ce qui survient d'abord, à compter de la date de l'achat initial au détail ou du contrat de location, et s'engage à préparer ou à remplacer, gratuitement et à son choix, toute pièce qui s'avère défectueuse en raison d'un vice de matière ou de fabrication.

**IMPORTANT :** Pour faire honorer la garantie, le propriétaire du tracteur doit présenter une preuve d'achat originale et les dossiers d'enregistrement correspondants à Veuillez consulter la notice d'utilisation pour tous les renseignements concernant l'entretien nécessaire et les intervalles recommandés.

La garantie limite qui est énoncée ci-dessous est offerte par **The Toro Company** aux personnes achetées ou louées et utilisées au Canada et/ou ses territoires et/ou ses marchandises États-Unis et/ou ses territoires et possessions, et par Toro pour les marchandises neuves achetées ou louées et utilisées aux États-Unis et/ou ses territoires et possessions au Canada et/ou ses territoires et posses-

# The Toro Company

## GARANTIE LIMITÉE DU FABRICANT POUR LES TRACTEURS DE PELLOUSE ET JARDIN



\*\* Les puissances des moteurs Kohler surpassent les normes établies pour les petits moteurs par la Society of Automotive Engineers.

\* Trois réserves le droit de modifier, sans préavis et sans obligation, les caractéristiques techniques, le dessin et l'équipement de série.

de travail ambiantes (température, humidité et altitude) et peut être influencée par d'autres facteurs.

échappement, chargement, refroidissement, pompe à essence, etc.), par l'utilisation particulière, le régime du moteur et les conditions Small Engine Test Code J1940. La puissance réelle du moteur est inférieure et est influencée par les accessoires (filtre à air,

Capacités		Transmission hydraulique		Système électrique		Pneus gazon		Dimensions	
Capacité du réservoir d'essence	3,0 gallons (11,4 L)	Hydro-Gear 0510	Hydro-Gear 0510	Carter du moteur (avec filtre)	GT2200	12 Volts, mise à la terre négative	12 Volts, mise à la terre négative	16 x 7,5 x 8	23 x 10,5 x 12
Marge et modèle	SV735	SV730	Kohler Courage	Rapport d'engrenage	GT2300	2,64 po (67 mm)	2,64 po (67 mm)	9,0 à 1	0,030 po (0,76 mm)
Cylindres	deux	deux	deux	Couplage	GT2200	44,2 po <sup>3</sup> (725 cm <sup>3</sup> )	44,2 po <sup>3</sup> (725 cm <sup>3</sup> )	3375 tr/min.	1200 tr/min. (± 75 tr/min.)
Alésage	3,27 po (83 mm)	3,27 po (83 mm)	3,27 po (83 mm)	Couple maximum	GT2300	26 HP (19,4 kW)**	25 HP (17,2 kW)**	45,2 pi-lb (61,2 Nm)	46,6 pi-lb (60,9 Nm)
Cylindrée	deux	deux	deux	Rapport de compression	GT2200	44,2 po <sup>3</sup> (725 cm <sup>3</sup> )	44,2 po <sup>3</sup> (725 cm <sup>3</sup> )	3375 tr/min.	0,030 po (0,76 mm)
Modèle	SV735	SV730	Kohler Courage	Bas régime	GT2300	2,64 po (67 mm)	2,64 po (67 mm)	9,0 à 1	0,030 po (0,76 mm)
Margeur (à 4 temps, à refroidissement par air)	0 à 2,3 miles/h (3,7 km/h)	0 à 2,3 miles/h (3,7 km/h)	0 à 2,3 miles/h (3,7 km/h)	Écartement de la bougie	GT2200	1200 tr/min. (± 75 tr/min.)	1200 tr/min. (± 75 tr/min.)	20 A	15 A (réglable)
Modèle	GT2300	GT2200	GT2200	Phare	GT2300	23 x 10,5 x 12	23 x 10,5 x 12	16 x 7,5 x 8	23 x 10,5 x 12
Capacités	GT2300	GT2200	GT2200	Freins	GT2300	Un disque (sec)	Un disque (sec)	20 A	20 A
Transmission hydraulique	GT2300	GT2200	GT2200	Pneus gazon	GT2300	AVant (en pouces)	Arrière (en pouces)	GT2300	GT2300
Moteur (à 4 temps, à refroidissement par air)	0 à 2,3 miles/h (3,7 km/h)	0 à 2,3 miles/h (3,7 km/h)	0 à 2,3 miles/h (3,7 km/h)	Système électrique	GT2300	12 Volts, mise à la terre négative	12 Volts, mise à la terre négative	GT2300	GT2300
Modèle	GT2300	GT2200	GT2200	Pneus gazon	GT2300	16 x 7,5 x 8	16 x 7,5 x 8	GT2300	GT2300
Capacités	GT2300	GT2200	GT2200	Dimensions	GT2300	16 x 7,5 x 8	16 x 7,5 x 8	GT2300	GT2300

## CHAPITRE 14: CARACTÉRISTIQUES TECHNIQUES\*

PROBLÈME	CAUSE(S) POSSIBLE(S)	MESURE CORRECTIVE
Le moteur ne tourne pas	Manette (ou bouton) de la prise de force est déclenchée. Frein de stationnement déclenché. Enclenchée.	Placez la manette (ou bouton) de la prise de force à la position OFF
Faites la manette de commande de l'obturateur à la position VOL-LET DE DÉPART.	Placez la manette de commande de l'obturateur à la position VOL-LET pas en position de démarrage. Faites le plein avec essence propre et fraîche. Le carburant devient éventuellement après trente jours.	Manette de commande de l'obturateur n'est pas en position de démarrage. Nettoyez la cannalisation ou remplacez le filtre de carburant (si équipée). Bougie défectueuse. Cannulation de carburant bouchée.
Le moteur est noyé.	Nettoyez, réglez l'écarteur ou remplacez le filtre de carburant (si équipée). Démarrez le moteur avec la manette de commande de l'obturateur à la position FAST (rapide).	Démarrer le moteur avec la manette de commande de l'obturateur à la position FAST (rapide). Le moteur est noyé.
Faites la manette de commande de l'obturateur à la position FAST (rapide).	Reservoir de carburant est vide ou essence éventuelle. Faites le plein avec essence propre et fraîche. Le carburant devient éventuellement après trente jours.	Placez la manette de commande de l'obturateur à la position FAST (rapide). Branchez le fil de la bougie.
irrégularité de fonctionnement	Placez la manette de commande de l'obturateur à la position VOL-LET ferme. Fil de la bougie desserré.	Manette de commande de l'obturateur n'est pas en position de démarrage. Placez la manette de commande de l'obturateur à la position VOL-LET
Moteur surchauffe	Cannulation de carburant bouchée ou essence éventuelle. Nettoyez la cannalisation ; faites le plein avec une essence propre.	Nettoyez la cannalisation ; faites le plein avec une essence propre. Faites le plein d'huile est trop bas.
élevée	Ecartement de la bougie trop petit.	Retirez la bougie et réglez l'écartement à 0,030 po.
Le moteur hésite à vitesse moyenne	La bougie est sale, défectueuse ou l'écartement est trop grand.	Remplacez la bougie. Réglez l'écartement à 0,030 po.
irrégularité de mouvement	Filtre à air est sale.	Remplacez le filtre à air ou le pré-filtre (si équipé).
Vibrations excessives	La lame de coupe est desserrée, mal réglée ou déformée.	Serrez la lame et l'adaptateur. Équilibrez la lame. Remplacez la lame.
La tondeuse ne déchiquette pas l'herbe	Vitesse du moteur trop bas. L'herbe est trop haute.	Placez l'herbe à un régime élevé. Puis tondez à nouveau à la hauteur d'origine.
La coupe est irrégulière	Plaieau de coupe non équilibré correctement.	Faites le réglage latéral du plaieau de coupe.
		Verifiez la pression de pneu dans chacun des quatre pneus.

- \* Trop se reserver le droit de modifier, sans préavis et sans obligation, les caractéristiques techniques, le dessin et l'équipement de série.
  - \*\* Les plissances des moteurs Kohler surpassent les normes établies pour les petits moteurs par la Society of Automotive Engineers, Small Engine Test Code 1940. La plissance relative du moteur est inférieure et est influencée par les accessoires (filtre à air, échappement, chargeement, refroidissement, pompe à essence, etc.), par l'utilisation particulière, le régime du moteur et les conditions de travail ambiantes (température, humidité et altitude) et peut être influencée par d'autres facteurs.

## CHAPITRE 12: TABLEAU D'ENTRETIEN

**REMARQUE:** Rechargez la batterie avant de renvoyer au service après la remise. Même si le tracteur démarre, le système de chargement peut ne pas appuyer la batterie jusqu'à une heure.

**REMARQUE:** Assurez-vous de protéger le tracteur contre la rouille s'il doit être entreposé dans un abri métallique non aéré. Recouvez le tracteur, les chaînes, ressorts, roulements et câbles d'une fine couche d'huile ou de silicone.

- Remisez dans un endroit propre et sec.
- negativede la batterie avant de remiser le tracteur.

- Nettoyez le moteur et le tracteur à fond.
- Graissez tous les points de pivotement et essuyez toute la machine avec un chiffon imbibé d'huile pour protéger les surfaces.
- Consultez la notice d'utilisation du moteur quant aux instructions de remise en état. Vitez complètement le carburant pour éviter les dépôts de gomme sur les pièces du carburateur, dans les canalisations et dans le réservoir. Il n'est pas nécessaire de démonter la partie du tracteur pour la remiser. Cependant, nettoyez le dessus de la bâtière et assurez-vous qu'elle est complètement chargée. Débranchez la borne complète.

**Avertissement:** Utilisez un additif de stabilisation du carburant ou videz le réservoir dans un contenant homologué, à l'extérieur et loin d'une flamme nue. Attendez que le moteur soit refroidi. Éteignez toute cigarette, cigare, pipes et autre source de chaleur incandescente avant de vider le carburant.


La machine ou un contenant de carburant à l'intérieur en présence d'une flamme nue, d'étoiles ou d'une veilleuse comme celle d'un chauffe-eau, d'un calorifère, d'un séche-linge ou d'un autre appareil à gaz.



Si vous ne devrez pas utiliser la machine pendant une période supérieure à 30 jours, procédez de la façon suivante:


## CHAPITRE 11: REMISAGE HORS SAISON

Figure 27

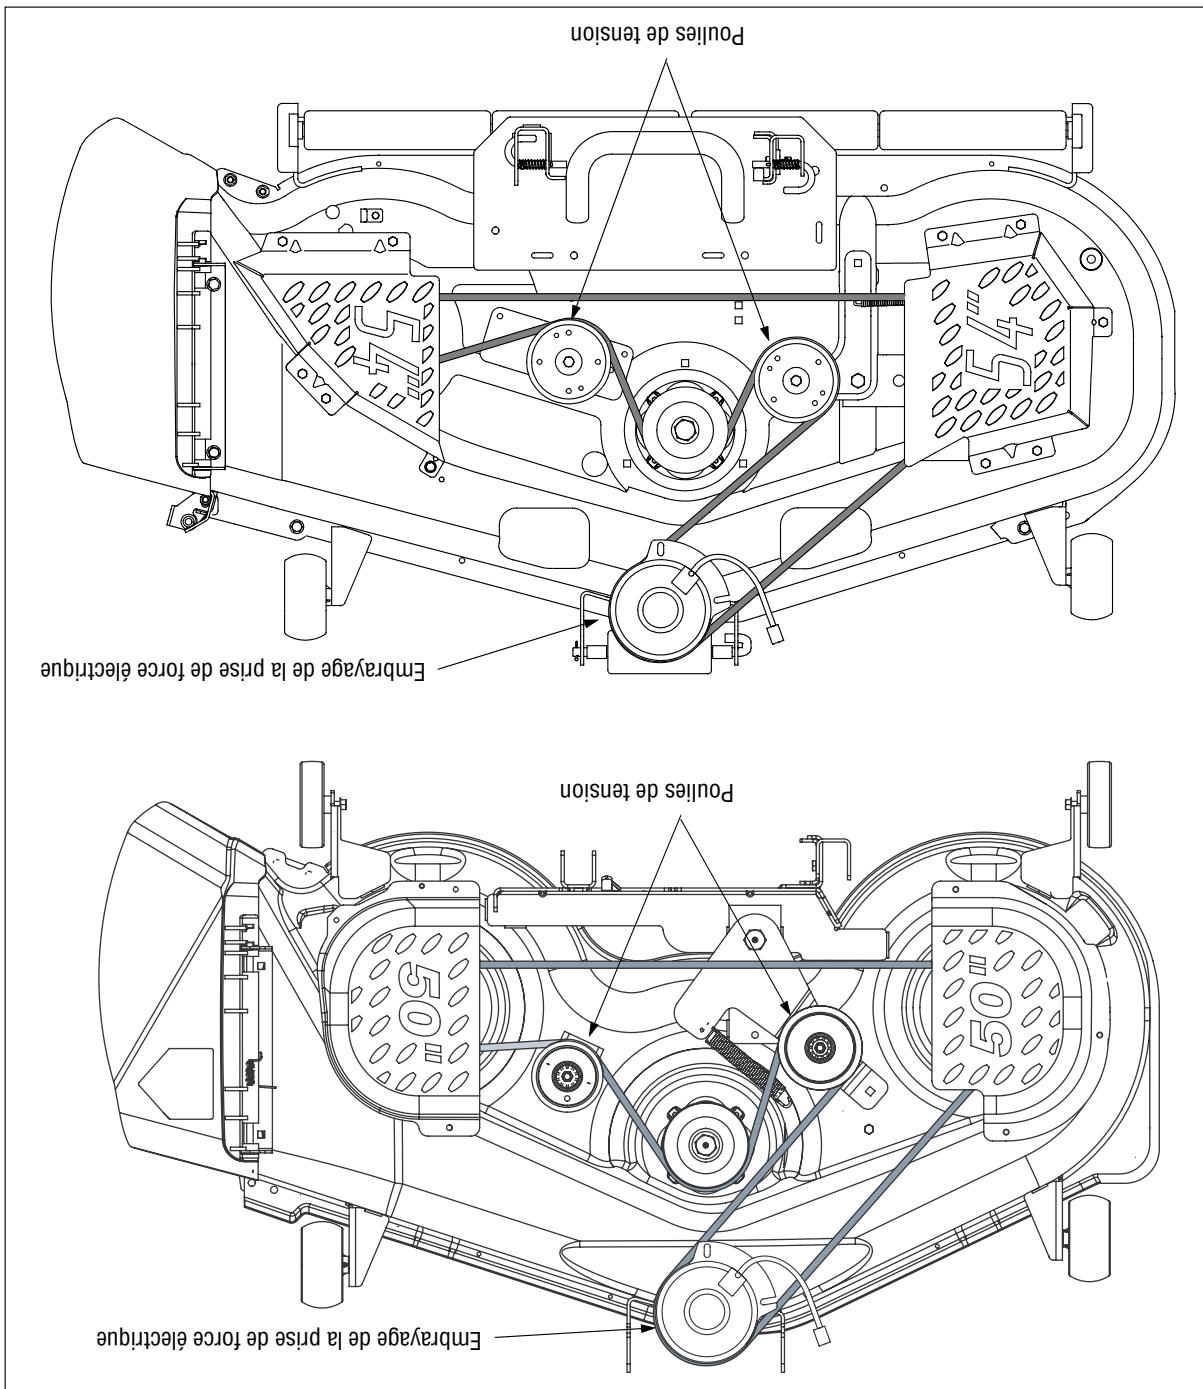


- Dégaggez la courroie du plateau de coupe de toutes les pouilles, y compris la pouille de tension du plateau de coupe et l'embarayage de la prise de force électrique.
  - Installez les courroies neuves. Voir la Figure 26.
  - Remplacez les courroies cassées. Voir la Figure 27.
  - Precededez le remplacement.

Figure 26

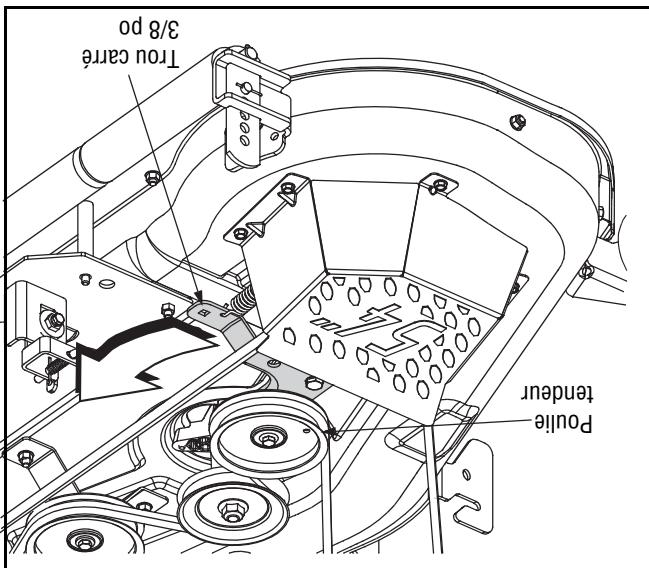

**Figure 25**

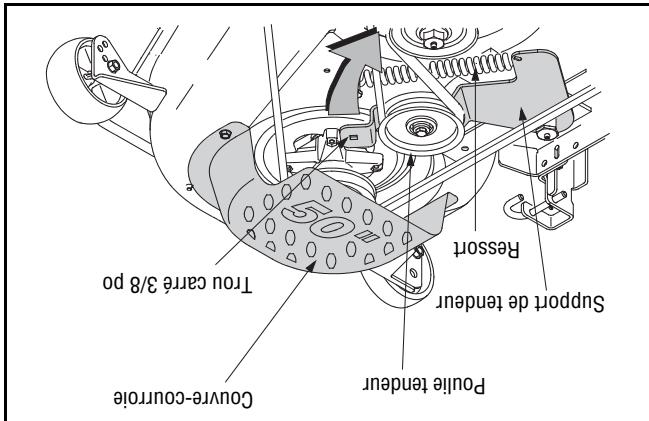

Faites pivoter le manche de la clé à cliquet vers l'avant du tracteur pour détenir la courroie. Quand la courroie est assez lâche, dégagéz-la doucement de la poulie à fusee de gauche.

- IMPORТАНТ:** Les courroies trapézoïdales installées sur le tracteur sont conçues pour un embraiyage et un débrayage sans danger. L'emploi d'une courroie de remplacement (sans l'équipette d'équipement d'origine) peut s'avérer dangereux si cette courroie ne se débraye complètement. Utilisez que des courroies homologuées par l'usine.

Procédez comme suit pour changer ou remplacer les courroies du plateau de coupe.

Abaissez le plateau de coupe en plaquant la manette de relèvement dans l'encoche inférieure du garde-boue de droite.

Retirez les couvre-courroies en enlevant les vis auto-taraudeuses qui les maintiennent sur le plateau de coupe.

Pour faciliter le démontage de la courroie plus tard, desserrez une clé à cliquet de 3/8 po (pour serrer, modèle GT2200 ou pour desserrer, modèle GT2200 ou la Figure 26, Modèle GT2300).

Platéau de coupe.

Retirez les couvre-courroies en enlevant les vis auto-taraudeuses qui les maintiennent sur le plateau de coupe.

Pour faciliter le démontage de la courroie plus tard, desserrez le boulon qui retient la poulie de tension GT2200 dans le trou carré qui se trouve sur le support de la poulie de tension, sur la gauche du platéau de coupe. Voir la Figure 25, Modèle GT2200 ou la Figure 26, Modèle GT2300.

CHANGEMENT DES COURROIES DU


- Glissez lentement le plateau de coupe vers l'avant du tracteur pour que les crochets se déattachent d'eux-mêmes de la tringle de stabilisation du plateau de coupe.
  - Glissez doucement le plateau de coupe (du côté droit) pour le dégager du dessous du tracteur.

Déplacez la manette de relèvement du plateau de coupe dans l'encoche supérieure sur le garde-boue de droite pour relever les triangles de relevage du plateau et les éloigner.

- Répétez les opérations ci-dessus sur la droite du tableau image.

**IMPORTANT :** Pourrez un peu la goupille vers l'arrière et relâchez la goupille dans le trou

Figure 24

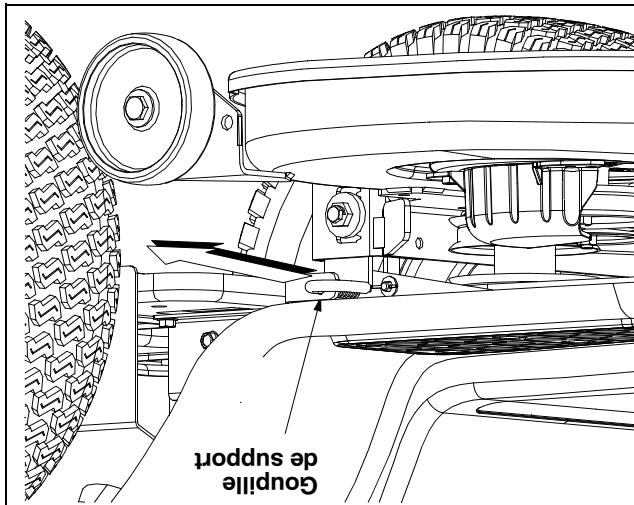

- Placez la manette, ou le bouton, de la prise de force (Embryagé de la lame) à la position OFF (Arrêt) et serrez le frein de stationnement.
- Abaissez le plateau de coupe en plaçant la manette de relèvement dans l'encoche la plus basse du garde-boue de droite.
- Retirez la courroie de la prise de force électrique d'autour de l'embarayage de la prise de force et de les pouilles de tension de la prise de force.
- Placez-vous sur la gauche du plateau de coupe et repérez la goupille de support du plateau sur la partie, à gauche, du plateau de coupe.
- Sortez la goupille de support du plateau pour dégager celle-ci de la tige de relèvement du plateau de coupe. Voir la Figure 24.

#### DÉMONTAGE DU PLATEAU DE COUPE

**IMPORTRAINI**: Remplacez toujours le fusible par un fusible de même ampérage.

Un fusible est installé sous le capot, derrière le haut du tableau de bord, sur la barre de support.

La fusible de 20 ampères installé dans le bras-circuit de fils du tracteur protège en effet le système électrique du tracteur des dégâts causés par un amperage trop élevé.

Si le système électrique ne fonctionne pas, ou si le moteur ne tourne pas, vérifiez d'abord que le fusible n'a pas sauté.

FUSIBLES

Ces panneaux ne sont PAS couverts par la garantie.

- une charge insuffisante  
• une charge excessive  
• des raccoords corrodés  
• le gel

Parmi les causes courantes de pannes de batterie,

PANNES DE LA BATTERIE

nettoyage ne pénètre pas dans la batterie.

**ATTENTION:** Gardez les bornes et le dessus de la batterie propres et évitez toute corrosion. Nettoyez la batterie avec du bicarbonate de soude et de l'eau ou avec un nettoyant commercial pour batteries. Au besoin, graissez les bornes de la batterie avec une brosse métallique pour déloger les saletés. Enduissez les bornes et les fils exposés avec de la graisse ou de la vaseline pour empêcher toute corrosion.

NETTOYAGE DE LA BATTERIE

**AVERTISSEMENT :** N'utilisez pas la batterie de tracteur pour metre en marche d'autres véhicules.

- A rectangular warning label with a black border. The word 'AVERTISSEMENT:' is at the top in bold. The main text describes a potential hazard where the car's negative terminal could come into contact with the body or another metal part, causing a short circuit and damage to the battery. It also notes that the car's body contains lead, which can be harmful if ingested. At the bottom, it says to always use caution when working on the vehicle.

**IMFOHIANI** : Ne faites jamais demander la batterie à plat de votre tracteur avec la batterie d'un véhicule en marche.

pour éviter tout risque de court-circuit par des pièces démontées ou malencontreusement contacté du tournevis avec le châssis.

DEMARRAGE PAR CABLES VOLAIS

**AVERISSEMENT :** Les batteries dégagent des gaz explosifs pendant leur mise en charge et après. Chargez toujours dans un endroit bien aéré et ne les battez pas dans un étincelle ni de flammes à proximité.

Si le tracteur n'a pas été utilisé depuis longtemps, il faudra charger la batterie avec un chargeur automobile électrique de 12 volts pendant au moins une heure à six ampères.

CHARGE DE LA BATTERIE

1. Les fils de la batterie doivent étre branchés correctement sur les bornes. Les interrupteurs risquent de changer la polarité et endommager le système alternatif du moteur.

2. Utilisez pas des câbles volants sur une batterie endommagée.

3. Débranchez la borne négative avant de remiser la batterie complètement chargée.

IMPORTANT:

**IMPORТАНТ:** Si, pour une raison quelconque, il est nécessaire de démonter la batterie, débranchez tous les câbles NEGATIF (noir) de la borne négative, puis le câble POSITIF (rouge). Lors du remontage de la batterie, branchez toujours le câble POSITIF (rouge) sur la borne positive, puis le câble NEGATIF (noir). Veillez que les câbles sont branchés sur les bornes correspondantes. Leur inversion peut changer la polarité et endommager l'alternateur du moteur.

- Vérifiez que les câbles et bornes de la batterie sont toujours propres et ne sont pas corrodés.
- Après avoir nettoyé la batterie et les bornes, appliquez une légère couche de vaseline ou de graisse sur les bornes et sur la gaine de la borne positive.
- Assurez-vous que la gaine est toujours bien placée sur la borne positive pour éviter tout court-circuit.
- Assurez-vous que la gaine est toujours bien placée sur la borne négative pour éviter tout court-circuit.



**AVERTISSEMENT:** Il est recommandé

La batterie est scellée et ne nécessite aucun entretien.

BATTERIE


**IMPORTRANt**: Utilisez une clé dynamométrique pour servir l'écrou à bride à six pans sur la fusee de la lame à un couple de 70 pieds-livre à 90 pieds-livre.

**IMPORTRAINI :** Faites attention, en remplaçant la lame, de tourner le côté «Bottom» (ou sur lequel un numéro de pièce est estampé) vers le sol quand la machine est utilisée.

Vermettez le bon équilibrage de la lame en la plaçant sur la tige ronde d'un tournevis. Meulez le métal du côté plus lourd jusqu'à ce qu'elle soit bien équilibrée.

Il est essentiel d'acquérir également les transchants pour conserver une lame bien équilibrée. En effet, une lame déséquilibrée risque de vibrer excessivement à vitesse élevée. Ceci peut endommager le tracteur et causer des blessures.


Figure 23

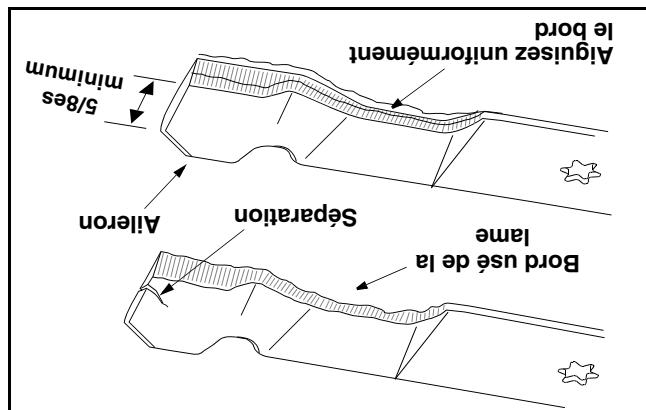

**IMPORtant:** Si le bord tranchant a déjà été aiguisé et qu'il reste moins de 5/8es po à l'alleron, ou si une séparation des couches métalliques s'est produite, remplacez les lames. Voir la Figure 23.

- Pour aiguiser les lames, la même quantité de métal des deux extrémités des lames sur le côté tranchant. Voir la Figure 23. Aiguisez le bord tranchant sur toute sa longueur, parallèlement au bord arrondi, soit à un angle de 25° à 30°.

Figure 22

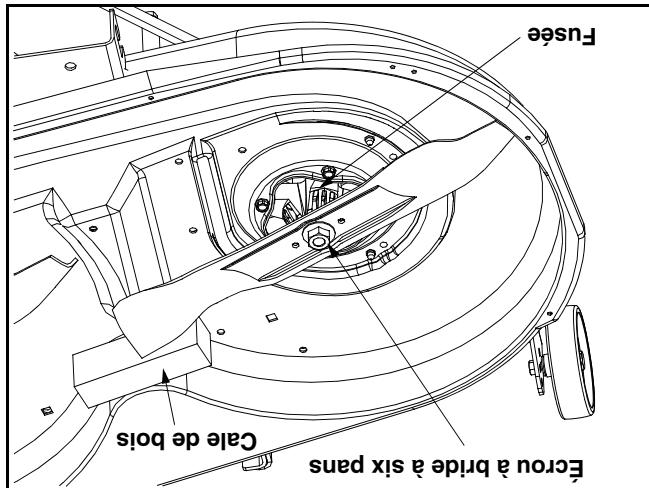

- Procédez comme suit pour démonter les lames : Demontez le plateau de coupe sous le tracteur (voir la partie DÉMONTAGE DU PLATEAU DE COUPE), puis retournez-le pour travailler sur le dessous. Placez une caie de bois entre le déflecteur au milieu du plateau et la lame. Voir la Figure 22.
- Utilisez une clé de 15/16 po pour retirer l'écrou à bride à six pans qui maintient la lame. Voir la Figure 22.

**AVERTISSEMENT:** Examinez régulièrement les fusées pour vous assurer qu'elles ne sont pas fendillées ou endommagées, surtout après avoir heurté un objet quelconque. Remplacez-les immédiatement si elles sont endommagées.

**AVERTISSEMENT:** Arrêtez le moteur, enlevez la clé d'allumage, débranchez le fil accidénel et arrêtez le démarreur tout débrancher tout démarrage moteur pour empêcher tout démarrage de la bougie et mettez-le à la masse contre le fil de la bougie et la masse pour débrancher les fusées pour remplacer. Portez toujours des gants épais ou utilisez un chiffon pour manipuler les lames.



## LAMES

Figure 21


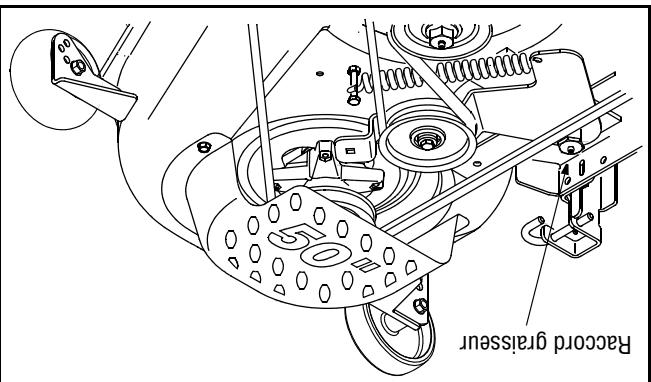


Figure 20

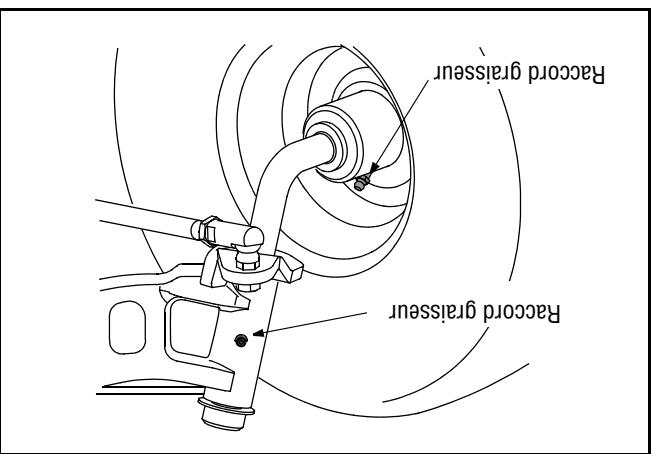

**AVERTISSEMENT:** Avant de lubrifier, préparez ou inspectez, débrayez la prise de force, placez le sélecteur de vitesse au point mort, serrez le frein de stationnement, arrêtez moteur, et enlevez la clé pour éviter tout démarrage accidentel. Sufficientement pour appliquer deux coups (minimum) sur la partie avant avec une huile à machine. Lubrifiez le moteur avec une huile à moteur de qualité recommandée dans la notice d'utilisation du moteur fournie avec la machine.

## PNEUS

### CHAPITRE 10: SERVICE



Des raccords graisseurs se trouvent devant chaque roue. Utilisez un pistolet graisseur pour lubrifier avec une huile pour coupe de la plateau de coupe.

#### Fusées du plateau de coupe

Tout usage après les 25 premières heures de fonctionnement du tracteur. Voir la Figure 21. Un raccord graisseur se trouve sur le support pivotant de la poignée de tension du plateau de coupe. Utilisez un pistolet graisseur toutes les 25 heures d'utilisation du tracteur ou au moins une fois par saison. See Figure 20.

#### Poignée de tension du plateau de coupe

Les essieux et jantes des roues avant sont équipées d'un raccord graisseur. Lubrifiez-les avec un pistolet graisseur toutes les 25 heures d'utilisation du tracteur ou au moins une fois par saison. See Figure 20.

#### Roue avant


Démontez les roues arrière des essieux une fois par saison. Lubrifiez bien les essieux et les roues avant avec une huile à nouvelle.



**AVERTISSEMENT:** Avant de lubrifier, préparez ou inspectez, débrayez la prise de force, placez le sélecteur de vitesse au point mort, serrez le frein de stationnement, arrêtez moteur, et enlevez la clé pour éviter tout démarrage accidentel.

## CHAPITRE 9: LUBRIFICATION

**Figure 19**

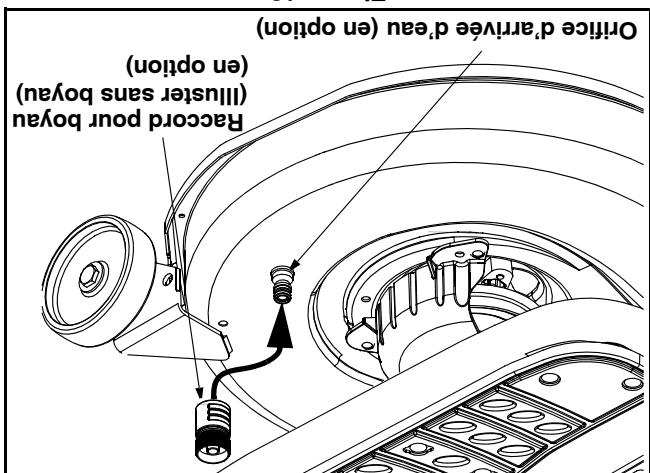

Debrayez la prise de force ; forcez le levier de vitesses au point mort ; serrez le frein de stationnement et coupez le moteur.

Vissez le racCORD pour boyau d'arrosage (fourni avec cette notice d'utilisation) sur l'extreme du boyau d'arrosage.

Attachez le racCORD pour boyau d'arrosage à l'orifice aménagé sur la surface du plateau de coupe. Voir la Figure 19.

Ouvrez le robinet d'eau.

Retournez au poste de conduite et remettez le tracteur en marche, puis placez la commande de roue arrière à la position <<FAST>> (Rapide - Lapin).


Embrayez la prise de force du tracteur.

**Restez au poste de conduite** pendant un minimum de deux minutes après avoir embrayé le plateau de coupe pour que le dessous du plateau soit rincé à fond.

9. 10. Tournez la clé de contact à la position <<STOP>> (Arrêt) pour couper le moteur.

11. Fermez le robinet d'eau et débranchez le racCORD du boyau d'arrosage de l'orifice sur la surface du plateau de coupe. Répétez les instructions 4 à 11 pour nettoyer l'autre côté du plateau de coupe.

Figure 18

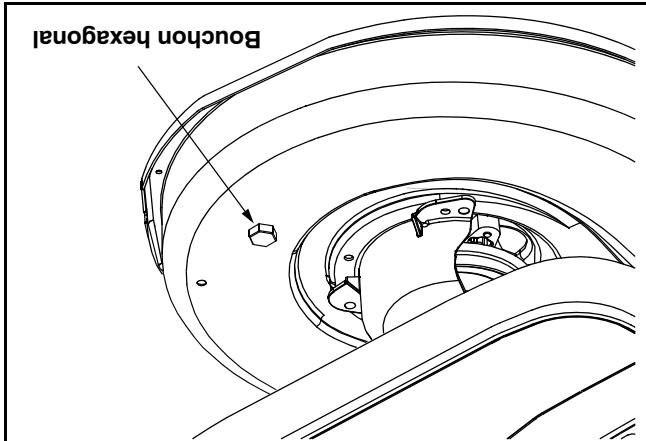

**IMPORtant:** Utilisez la huile recommandée dans la quantité et la qualité d'huile recommandées dans la notice d'utilisation du moteur.

**NETTOYAGE DU FILTRE A AIR:** Nettoyez le filtre à air toutes les 25 heures d'utilisation dans des conditions normales. Nettoyez-le plus souvent dans des conditions normales. Nettoyez-le plus souvent et l'écartement de nettoyage doit être ajusté une fois par saison et l'écartement des bougies doit être ajusté une fois par saison. Les bougies doivent être nettoyées une fois par saison et l'écartement des bougies doit être ajusté une fois par an. Il est recommandé de remplacer la bougie au début de la saison. Consultez la notice d'utilisation du moteur pour détailler les instructions de nettoyage.

**SYSTÈME DE NETTOYAGE (en option):** Un bouchon peut être remplacé par un orifice à eau à utiliser avec le système de nettoyage du plateau utilitaire avec le système de nettoyage du plateau venu du séparateur. Servez-vous du système de nettoyage pour éliminer les brins d'herbe du dessous du plateau de coupe pour empêcher toute accumulation de produits chimique corrosifs.

**1. STATIONNEZ VOTRE TRACTEUR SUR UNE SURFACE PLANE ET DÉGAGÉE, SUFFISAMMENT PROCHE D'UN ROBINET D'EAU POUR POUVOIR Y BRANCHER UN BOYAU D'ARROSAGE.**

**IMPORtant:** Vérifiez que la goulotte d'éjection du tracteur n'est pas dirigée vers un bâtiment, des véhicules, etc.

- Enfoncmez légèrement la soucoupe de vidange de l'huile, puis faites-la tourner dans le sens contraire aux aiguilles d'une montre et sortez-la pour faire arriver l'huile. Voir la Figure 17.
  - Assurez l'entretien du filtre à huile (le cas échéant) selon les instructions qui se trouvent dans la notice d'utilisation du moteur.
  - Répétez ces instructions dans l'ordre inverse quand l'huile a cessé de couler.
  - Faites à nouveau le plein avec une huile propre.



**AVERTISSEMENT:** Eloignez les mains et les pieds de l'ouverture d'éjection sur le plateau de coupe.

Placez le tracteur sur une surface ferme et plane, de préférence goudronnée. Consultez le Figure 16 et procédez comme suit :

a. Placez la manette de relèvement du plateau de coupe à la position la plus haute.

b. Enlevez les contre-écrans et les vis à coupe.

c. Placez la manette de relèvement sur le plateau de coupe.

d. Enfonnez la vis à la position de travail désirée.

e. Notez la position du trou indexé, puis surface goudronnée.

f. Guidage arrière dans le trou indexé qui laisse environ  $\frac{1}{2}$  po entre la base de la roue et la surface goudronnée.

g. Enfonnez la vis à la position de relèvement de la roue de environ  $\frac{1}{2}$  po environ dans le trou indexé qui laisse environ  $\frac{1}{2}$  po entre la base de la roue et la surface goudronnée.


h. Installez l'autre roue de guidage arrière et les roues à billes avant dans le trou indexé des autres roues.

i. Correspondez les supports des roues à l'indexé.

j. Assurez un dégagement de  $\frac{1}{2}$  po environ, de la fagotière, abaissez les roues dans le trou indexé qui assure un dégagement de  $\frac{1}{2}$  po environ, de la fagotière ci-dessus.


## REGLAGE DES ROUES DE GUIDAGE

**Figure 15**

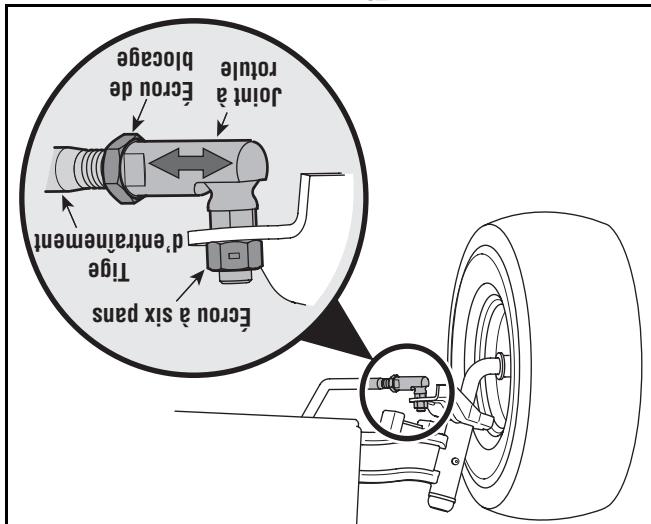

REGLAGE DE LA DIRECTION


**Figure 14**

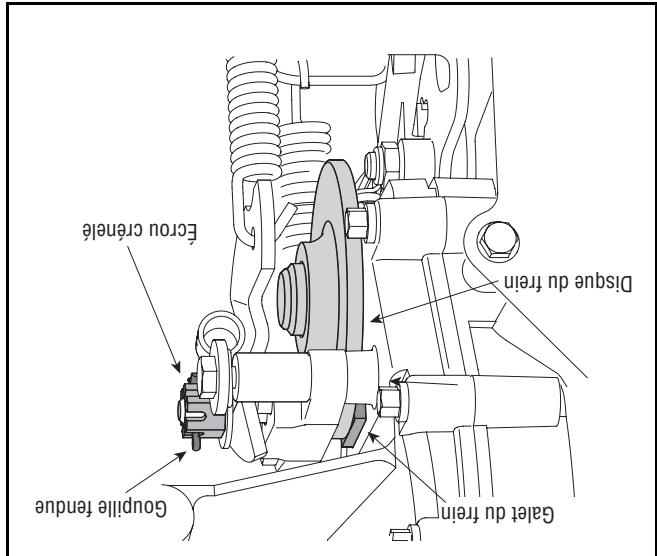

- Si le tracteur ne s'immobilise pas complètement quand la pédale de frein est enfoncée, ou si les routes arrières du tracteur peuvent tourner alors que le frein de stationnement est serré, il faudra ajuster le frein. Le disque du frein se trouve sur la droite de la transmission, sur l'arri ère du tracteur. Procédez à la transmission et au disque du frein sur la droite du tracteur pour dégager la clé avant de quitter le tracteur.
- de force, placez le sélecteur de vitesse au point mort, arrêtez le moteur et retirez la clé avant de quitter le tracteur.
- Si le tracteur ne s'immobilise pas complètement quand la pédale de frein est enfoncée, ou si les routes arrières du tracteur peuvent tourner alors que le frein de stationnement est serré, il faudra ajuster le frein. Le disque du frein se trouve sur la droite de la transmission, sur l'arri ère du tracteur. Procédez à la transmission et au disque du frein sur la droite du tracteur pour dégager la clé avant de quitter le tracteur.
- Placez-vous sur la droite du tracteur et repérez le ressort de compression et le disque du frein sur la transmission. Voir la Figure 16.
- Retirez lentement la goupille-épinglé de l'écrou de crevasses-vous d'un calibre d'épaisseur pour vérifier l'écartement entre le disque et le galet du frein.
- Si l'écartement recommandé est de 0,11 po. L'écrou est à l'écrou et le galet du frein.
- Serrez l'écrou de manière à obtenir cet écartement. Serrez l'écrou de manière à obtenir cet écartement. Installez une autre goupille-épinglé (pièce 714-011) sur l'écrou crevassé.

REGLAGE DU FREIN

**Figure 12**

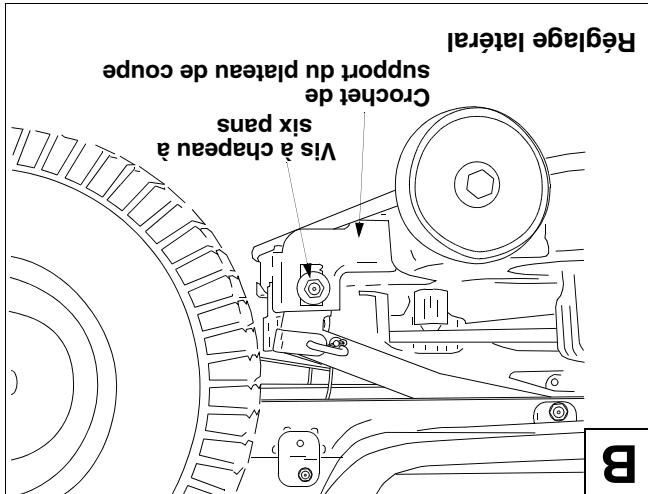


- montre / haut ou en sens inverse des aiguilles d'une montre / bas.
  - Équilibrez le plateau de coupe pour que les deux relèves soient égaux.
  - Resserrez la vis à chapeau à six pans sur le crochét de support gauche une fois le réglage effectué.

Pour ajuster la position du siège, desserrez les deux boutons/boulons en-dessous de le siège. Glissez le siège en avant ou vers l'arrière jusqu'à la position désirée. Serrez les deux boutons.

Réglage normal du siège (buttons) (ie cas

**Figure 13**

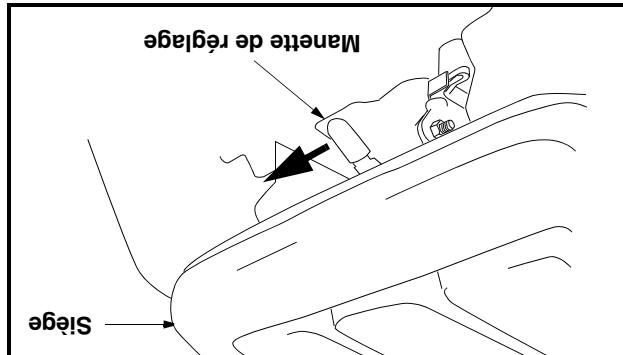

**Réglage facile (le cas échéant)**


soft completely embottled dans la bouteille.

Pour ajuster la position du siège, déplacez la manette de réglage du siège (sous le siège) vers la gauche et avancez ou reculez le siège. Assurez-vous que le siège est bloqué à l'une des positions avant de mettre le tracteur en marche. Voir la Figure 13.

ant)

**AVERTISSEMENT:** Avant d'utiliser cette machine, assurez-vous que le siège est bien bloqué dans la butée. Placez-vous derrière la machine, assurez-vous que le siège est bien bloqué dans la butée. Placez-vous derrière la machine et tirez sur le siège jusqu'à ce qu'il soit complètement emboîté dans la butée.

REGLAGE DU SIEGE

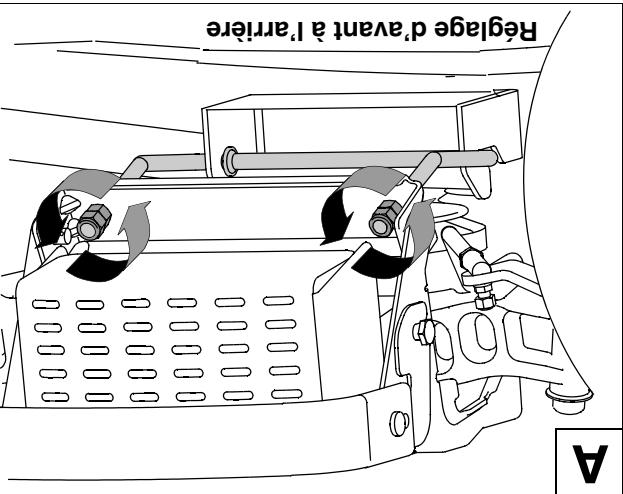

- Desserrer, sans la relâcher, la vis à chapeau à six pans sur le crochet de support gauche du plateau de coupe. Voir la Figure 12B.
  - Équilibrez le plateau de coupe en utilisant une clé pour tourner la vis à chapeau à six pans trouvée immediatement derrière la vis desserrer précedemment) dans le sens d'agujillles d'une

## **CHAPTER 7: BEGEESES**

---

Vers l'extérieur. Votre pelouse aura ainsi meilleure apparence.

Ne tondez pas l'herbe trop court. Les mauvaises herbes posséderont plus vite et le gazon risque de jaunir plus rapidement pendant les périodes sèches.

Tondez toujours à plein régime.

Si l'herbe est très touffue, il faudra peut-être effectuer un deuxième passage pour obtenir une tondeuse nette.

N'essayez pas de tondre les broussailles, les mauvaises herbes ou de l'herbe extrêmement haute. Cette tracéture est congue pour l'entretien normal de pelouses résidentielles.

Utilisez toujours des lames bien affutées et remplacez-les si elles sont usées. Consultez le chapitre ENTRETIEN dans cette notice d'utilisation pour l'entretien des surfaces résidentielles.

Quant aux instructions d'alignisage,

- AVERTISSEMENT:** Pour aider à éviter le contact avec les lames ou les blessoires provoquées par les objets projetés, gardez les spectateurs, les animaux de compagnie et les enfants à une distance d'au moins 75 pieds de la machine quand elle est en marche. Arrêtez la machine si quelqu'un s'approche la zone de travail.
  - AVERTISSEMENT:** Prevoyez de travailler en évitant de projeter l'herbe vers des rues, des trottoirs, des spectateurs, etc. Evitez d'éjecter l'herbe en direction d'un mur ou d'un obstacle. De cette façon, les débris éventuels ne risquent pas de ricocher et de blesser quelqu'un.
  - Ne tondez pas en vous déplaçant rapidement, surtout si un ensemble de déchiqueteage ou un collecteur d'herbe est installé.
  - Vous obtiendrez de meilleurs résultats en dirigeant l'herbe coupée lors des deux premières passes vers le centre de la zone de travail. Par la suite, vers le centre de l'herbe coupe pour évacuer l'herbe coupée

Le premier relève doit mesurer de 1/4 à 3/8es de po de moins que le deuxième. Détreminez la distance approximative nécessaire pour un bon ajustement, puis passez à l'étape suivante si besoin est.

De l'avant du tracteur, desserrez le contre-écroû à six pans le plus à l'extérieur, sur l'extrême de la tige de suspension du plateau de coupe. Voir la Figure 12A.

Serrez le contre-écroû à six pans intérieur contre le support de suspension avant pour relever l'avant du plateau de coupe ; desserrez l'écroû à six pans pour abaisser l'avant du plateau. Voir la Figure 12A.

Figures 12A.

Desserrez les deux contre-écroûs à six pans contre les deux croûs contre à six pans régler le plateau de coupe parait toutre de manière gale, il faudra peut-être effectuer un réglage latéral.

**glage latéral**

Le plateau de coupe vousi est attenir.

Resserrez les deux contre-écroûs à six pans contre les deux croûs à six pans intérieurs quand le réglage vousi come suit :

- REMARQUE:** Veillez la pression des pneus du tracteur avant de régler le plateau de coupe. Consultez la partie PNUS dans le chapitre sur l'entretien dans cette notice d'utilisation.
  - L'avant du plateau régulable est soutenu par une barre de stabilisation réglable permettant d'ajuster le plateau d'avant à l'arrière. L'avant du plateau doit se trouver entre 1/4 et 3/8es de po plus bas que l'arrière. Réglez selon le besoin comme suit:
  - Stationnez le tracteur sur une surface stable et plane et positionnez la manette de relevage dans l'encoche supérieure (la position la plus haute). Tenez la lame la plus proche de la gouttière désektion pour qu'elle soit parallèle au tracteur. Mesurez la distance de l'extrême avant de la lame au sol et l'extrême arrière de la lame au sol.

MISE A NIVEAU DU PLATEAU DE COUPE



Ce tracteur est équipé d'un plateau de coupe de haute qualité. Les renseignements suivants servent utiles lors de l'emploi du plateau de coupe avec le tracteur.

TONTE DE L'HERBE

abordée plus tot dans ce chapitre.

Pour relever le plateau de coupe, déplacez la manette de relèvement vers la gauche, puis positionnez-la dans l'encoche correspondant à l'emplacement voulu. Consultez la partie REGLAGE DE LA HAUTEUR DE COUPE


## UTILISATION DE LA MANETTE DE RELÉVAGE

- **«Gommutateurs intérieurs de sécurité».**
- Pour débrancher la prise de force, poussez sur le bouton de la prise de force ou placez la manette de la prise de force à la position «Blade Stop». Ceci débrayera effectivement le plateau de coupe et les autres accessoires.

**IMPORТАНТ:** Le moteur ou l'embarrayage électrique de la prise de force s'arrêtera automatiquement si la prise de force est embrayée alors que la pédale se trouve en position de marche arrière. Lire la section

### REFERENCES

**Figure 11**

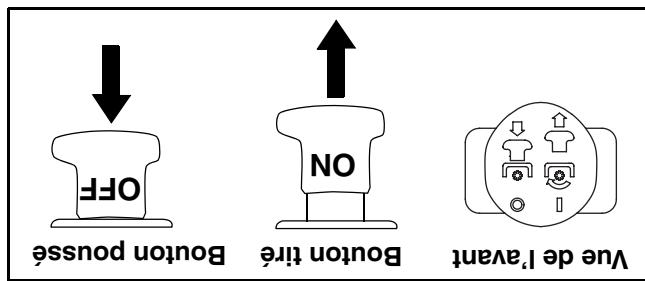

**HEMARQUE:** Conservez l'obturateur à la position FAST (laphi) pour que le plateau de coupe ou tout autre accessoire fonctionne de façon efficace.

Modèles avec prise de force électrique

• Déplacée la manette de la prise de force pour l'embryer (position ON).

Modèles avec prise de force manuelle

- Placez la manette de commande de l'obturateur à la position FAST (Rapide - lapon).


L'embryage de la pise de force triastile a puissance nécessaire au plateau de couple ou tout autre accessoire (disponibl separement). Procèdes comme suit pour embrayer la pise de force:

ENCLÉNCHEMENT DU PRIS DE FORCE

**IMPORTRAIN** : N'essayez jamais de déplacer le tracteur manuellement sans savoir d'abord ouvert la soupape hydrostatique de dérivation. Vous risqueriez d'endommager sérieusement la transmission du tracteur.

**Figure 10**

**Figure 10**

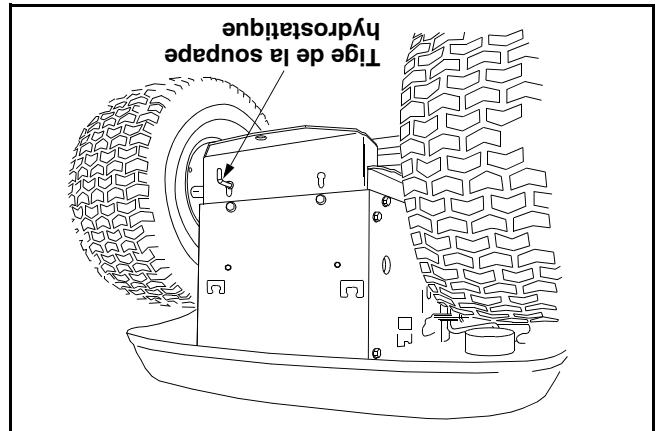

**REMARQUE:** La transmission ne peut être engagée qu'aujourd'hui la tige de la soupape hydrostatique de dérivation est tirée. Remplacez la tige à sa position normale avant d'utiliser le tracteur.

- La transmission de votre tracteur est équipée d'une souffrance hydraulique de dérivation, utile quand il est nécessaire de déplacer le tracteur manuellement.
- L'ouverture de cette souffrance oblige le fluide de la transmission à dévier de son parcours normal, ce qui permet aux roues arrière de tourner librement. Pour ouvrir la souffrance hydraulique, procédez comme suit détaillé sur la tige de la soupape hydrostatique de 10.
- Triez sur la tige de la soupape, puis relâchez-la pour la bloquer.

# DÉPLACEMENT MANUEL DU TRACTEUR

vitesse et la pédale d'accélérateur seront bloquées si vous n'avez pas de frein de stationnement.

**REMARQUE:** Si les boutons du régulateur de vitesse sont bien engagés, le bouton du régulateur de vitesse et la pédale d'accélérateur seront bloquées.

Appuyez légèrement sur le bouton du régulateur de vitesse jusqu'à l'obtention de la vitesse désirée.

Placez le levier du sélecteur de vitesse à la position FORWARD (marche avant), puis enfoncez lentement la pédale d'accélérateur jusqu'à l'obtention de la vitesse désirée.

**REMARQUE:** Le régulateur de vitesse devrait seulement être utilisé tout au long vers l'avant.

## REGLAGE DU REGULATEUR DE VITESSE

Ne vous arrêtez pas sur une pente. Si un arrêt est nécessaire, procédez en douceur et démarrez lentement pour réduire au maximum les risques de renversement du tracteur.

Ne vous arrêtez pas sur une pente. Si un arrêt est nécessaire, procédez en douceur et démarrez lentement pour réduire au maximum les risques de renversement.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.


Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Évitez de tourner, virer dans le sens de la pente descendante. Le fait de tourner sur une pente descendante, de tourner, virer dans le sens de la pente descendante.

Figure 9

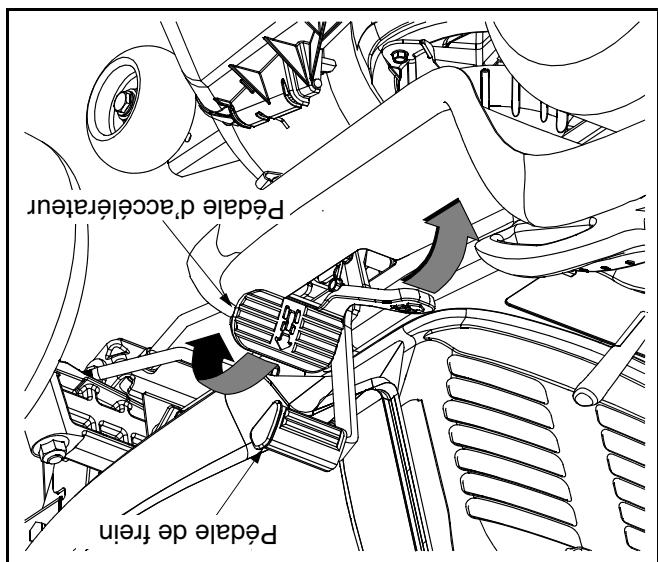

- Si vous pouvez travailler en toute sécurité sur une pente, utilisez l'INCLINOMÈTRE à la page 7 pour déterminer si vous pouvez travailler en toute sécurité sur une pente.

## CONDUISTE SUR PENTE

- Placez le tracteur avant de changer de direction.

**IMPORTANT:** N'essayez pas de passer de marche

vers marche arrière, et vice versa, pendant que le tracteur est en mouvement. Arrêtez toujours

l'inertie de la pédale d'accélérateur avec la partie inférieure de votre pied (et pas votre talon) jusqu'à

vous, puis appuyez lentement sur la partie supérieure de la pédale d'accélérateur jusqu'à l'obtention de la vitesse désirée. Assurez-vous qu'il n'y a pas d'obstruction derrière

pour vous déplacer en MARCHE ARRIÈRE, lorsque vous déplacez en MARCHE AVANT, appuyez

lentement sur la partie supérieure de la pédale d'accélérateur jusqu'à l'obtention de la vitesse

d'accélérateur jusqu'à l'obtention de la vitesse désirée. Pour vous déplacer en MARCHE AVANT, appuyez

lentement sur la partie supérieure de la pédale de frein pour desserrer le frein de stationnement et laissez la pédale revenir.

Appuyez sur la pédale de frein pour desserrer le frein de stationnement et laissez la pédale revenir. Pliez la manette de l'obturateur à la position

FAST (rapide). Pliez la manette de l'obturateur à la position sans surveillance, pensez à retirer la clé.

**AVERTISSEMENT:** Ne quittez pas le stationnement. Si vous laissez le tracteur

pédale de frein et serre le frein de la manette, ou le bouton, de la prise de force à poste de conduite sans avoir d'abord placé la

Faites très attention aux trous, ornières, bosses, roches ou autres obstacles cachés. Un terrain irrégulier peut causer le renversement de la machine. L'herbe haute risque de cacher des obstacles.

Faites très attention en changeant de direction. Faites très attention en changeant de direction. Faites très attention en changeant de direction.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

Travaillez parallèlement à la pente, jamais et de vous blesser grièvement.

## FREIN DE STATIONNEMENT

- S'arrêter automatiquement lorsque le conducteur quitte son siège alors que le moteur tourne; dans le cas contraire, le moteur s'arrêtera automatiquement.

**REMARQUE:** Le frein de stationnement doit être desserré lorsque le conducteur quitte son siège alors que le moteur tourne.

Pour desserrer le frein de stationnement :

Appuyez légèrement sur la pédale de frein.

Quand le frein est serré, le bouton du frein de stationnement est relâché.

Maintenez le bouton du frein de stationnement sur le bouton du frein de stationnement.

Appuyez à fond sur la pédale de frein et gardez-la

enfoncée pendant que vous possédez doucement sur le bouton du frein de stationnement.

Pour servir le frein de stationnement :

- Placez la manette, ou le bouton, de la prise de force (Embryagé de la lame) à la position OFF
- Déplacez la manette de l'obturateur à la position SLOW (lente - tortue) et laissez le moteur tourner au ralenti pendant dix secondes, tournez la clé dans le sens contraire au aiguilles d'une montre jusqu'à la position OG (Arrêt).
- Retirez la clé de l'allumage pour empêcher tout démarrage accidentel.

**ARRÊT DU MOTEUR**

**Avertissement:** Arrêtez le moteur après avoir heurté un objet quelconque. Débranchez le fil de la bougie et vérifiez si l'ignition est défectueuse. Remplacez les dégâts éventuels endommagée. Rendez la tonduse en route avant de remettre la tonduse en route.

**HÉMORRHOÏDE**: Utilisez **pas** le tracteur si le vœuf de départ est fermé. Le mélange de carburant sera trop riche et le moteur risquera de tourner de façon peu performante.

Quand le moteur tourne, déclenchez le volet de départ.

**REMARGUE:** En cas de problème lors du démarrage, consultez le chapitre Guide de dépannage dans cette notice d'utilisation.

**IMPOORTANT:** Ne tenez pas la clé à la position START (Démarage) pendant plus de 10 secondes, car vous risquez d'endommager le démarreur.

de départ si le moteur est chaud). Toutez la cle dans le sens des aiguilles d'une montre, jusqu'à la position START (Demarrage). Quand le moteur tourne, lâchez la cle. Elle revient à la position Normal Mowing (Marche).

- Insérez la clé du tracteur dans le commutateur d'allumage.
- Placez la manette, ou le bouton, de la prise de force à la position OFF (non enclenchée).
- Appuyez sur la pédale de frein et serrez le frein de stationnement.
- Déplacez la manette de commande de l'obturateur à la position FAST (Rapide) (ou CHOKE si le cas échéant).

**REMARQUE:** Consultez le chapitre MONTAGE DU TRACTEUR dans cette notice d'utilisation quant aux instructions concernant les pleins d'essence et d'huile.

**AVERTISSEMENT :** N'utilisez pas le tracteur si le système de sécurité est défectueux. Ce système a été conçu pour votre sécurité et protection.

MISE EN MARCHE DU MOTEUR

**REMARGUE:** Les routes de guidage du plateau de coupe permettent d'éviter d'arracher l'herbe, mais elles ne sont pas conçues pour supporter le poids du plateau de coupe.

**AVERTISSEMENT:** N'approchez pas les mains et les pieds de l'ouverture de goulotte d'éjection du plateau de coupe.

Choisissez la hauteur du plateau de coupe en pliant la manette de relèvement du plateau dans l'une des six encoches sur le garde-boue de droite. Ajustez les roues du plateau de coupe entre 1/4 et 1/2 po du sol quand le tracteur se trouve sur une surface lisse et plate (entrée de garage).

## **REGLAGE DE LA HAUTEUR DE COUPE**


Pédales de frein et en la main intenant à cette position tout en poussant sur le bouton du frein de stationnement (modèles à PRISE DE FREIN MANUELLE SEULEMENT).

- b. Le condensateur quitte le poste de condutrice (modèles équipés d'une PRISE DE FORCE **ELECTRIQUE SEULEMENT**).
- c. Le conducteur serre le frein de stationnement en appuyant à fond sur la

a. La clé soit remplacée à la position « Normal » Mowring » (Tone normale) ou à la position « Stop » (Arrêt).

### **IMPORTANT : Le mode « Reverse Cautious Mode » (Marche arrière) reste embrayé jusqu'à ce que**

Figure 8

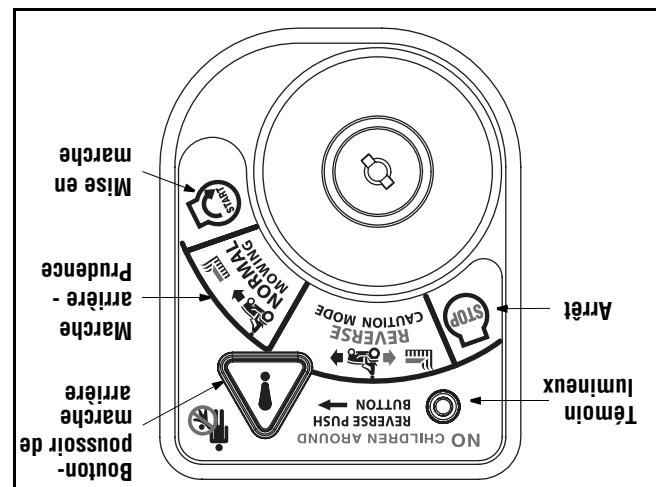

AVERTISSEMENT

LISEZ LA NOTICE D'UTILISATION.

EVITEZ DES BLESSURES GRAVES OU MORTELLES  
VALLEZ PARALLELEMENT A LA PENTE, JAMAIS ENDEMICULAIEMENT.  
EZ DE TOURNER BRUSQUEMENT.  
LISEZ PAS LE TRACTEUR SI RISQUE SER OU DE BASCULER.  
MACHINE S'ARRÈTE EN GRIMPANT UNE PENTE,  
TÉZ LES LAMES ET RECOLZE LENTEMENT.  
ONDZE JAMAIS A PROXIMITÉ D'ENFANTS OU  
TRANSPOREZ JAMAIS D'ENFANTS, MÊME SI LES  
ARDDEZ DERRIÈRE VOUS ET PAR TERRE AVANT  
ECULER ET EN RECOLANT.  
TENZE TOUS LES DISPOSITIFS DE SECURITÉ EN  
VEZ LES OBJETS QUI RISQUENT D'ÊTRE  
LARISÉE-Z-VOUS AVEC L'EMPLACEMENT ET LA  
CTION DE TOUTES LES COMMANDES.  
FIEZ QUE LES LAMES ET LE MOTEUR SE SONT  
ETTES AVANT D'EN APPROCHER LES MAINS OU  
WT DE QUITTER LE POSTE DE CONDUITE,  
RAYEZ LES LAMES, PLACEZ LE SELECTEUR DE  
IONNEMENT, ARRÈTEZ LE MOTEUR ET ENLEVÉZ  
SSE AU POINT MORT, SERREZ LE FREIN DE

LISEZ LA NOTICE D'UTILISATION.

- GRAVES OU MORTELLES
  - EVITEZ DES BLESSURES
  - TRAVAILLEZ PARALLÈLEMENT À LA PENTE, JAMAIS PERPENDICULAIREMENT.
  - ÉVITEZ DE TOURNER BRUSQUEMENT.
  - GLISSEZ PAS LE TRACTEUR S'IL RISQUE DE NE TONDRE JAMAIS À PROXIMITÉ D'ENFANTS OU D'AUTRES SPECIAUTÉS.
  - NE TRANSPORTEZ JAMAIS D'ENFANTS, MÊME SI LES LAMES NE TOURNENT PAS.
  - REGARDEZ DERRIÈRE VOUS ET PAR TERRE AVANT DE RECULER ET EN RECULANT.
  - BON ETAT DISPOSITIFS DE PROTECTION, ECRAINS ET COMMUTATEURS.
  - ENLEVÉZ LES OBJETS QUI RISQUENT D'ÊTRE PROJETÉS PAR LES LAMES.
  - FAMILIARISEZ-VOUS AVEC L'EMPLOACEMENT ET LA POSITION DE TOUTES LES COMMANDES.
  - VÉRIFIEZ QU'ELLES LAMES ET LE MOTEUR SE SONT ARRÊTÉS AVANT D'EN APPROCHER LES MAINS OU AVANT DE QUITTER LE POSTE DE CONDUITE.
  - DEBRAVEZ LES LAMES, PLACÉE SUR SELLECTEUR DE VITESSE AU POINT MORT, SERREZ LE FREIN DE STATIONNEMENT, ARRÉTEZ LE MOTEUR ET ENLEVEZ LA CLÉ.

## TRAVAIL EN MARCHE ARRIÈRE

(lame) est automatiquement débrayée si le conducteur quitte le poste de conduite alors que la manette de la prise de force se trouve à la position « ON » (Embrayée), que le frein de stationnement soit serré ou non. Pour vérifier son bon fonctionnement, faites démarrer le moteur, placez le bouton de la prise de force (pour embrayer la lame) à la position ON et redressez-vous brièvement du siège. Le moteur devrait caler.

Si la clé de contact se trouve à la position « NORMAL MOWING » (Tonte normale), la prise de force électrique est automatiquement débrayée si la manette de la prise de force (Embrayage de la lame) est placée à la position « ON ». Si la manette de la prise de force (Embrayage de la lame) est placée en position de marche arrière, l'unité de moteur ne démarre pas. Pour vérifier ce fonctionnement, faites démarrer le moteur, placez le bouton de la prise de force (pour embrayer la lame) à la position ON et redressez-vous brièvement du siège. Le moteur devrait caler.

« NORMAL MOWING » (Tonte normale), la prise de force électrique est automatiquement débrayée si la clé de contact se trouve à la position de marche arrière. La manette de la prise de force (Embrayage de la lame) est placée à la position ON et redressez-vous brièvement du siège. Le moteur devrait caler.

•

Modèles équipés d'une prise de force électrique (Embryage de la lame)

**IMPORTANT:**

Pour utiliser le mode « **Reverse Cautious Mode** » (Marche arrière - Prudence) :



*poste de conduite.*

Pour utiliser le mode « **Reverse Cautious Mode** »  
(Marche arrière - Prudence) :

VITESSE DE REGULATION DU BOUTON

**IMPOURS** : Serrez toujours le frein de stationnement si vous laissez le tracteur sans

**REMARGUE:** Le régulateur de vitesse ne peut pas être encenche à la vitesse de déplacement du tracteur la plus rapide. Si le conducteur essaie de tracter la plus rapidement, le tracteur ralentit automatiquement à vitesse de travail optimale.



#### **BOUTON DU FREIN DE STATIONNEMENT**

Pour ajuster la position du siège, déplacez la manette de réglage du siège (sous le siège) vers la gauche et trouvez une position confortable, laissez le levier d'ajustement de siège pour bloquer le siège en place. Consultez «Réglage du siège» dans le chapitre RÉGLAGE dans cette notice d'utilisation.

## MANETTE DE RÉGLAGE DU SIÈGE

redresssez-vous brièvement du siège. Le moteur devrait caler.

Le moteur s'arrête automatiquement quand le conducteur quitte le poste de conduite alors que la manette de la prise de force (Embryagé de la

Le moteur s'arrête automatiquement quand le conducteur quitte le poste de conduite alors que la manette de la prise de force (Embryagée de la lame) se trouve à la position « ON » (Embryagée), le frein de stationnement soit serré ou non. Pour vérifier son bon fonctionnement, faites démarrer le moteur, placez le bouton de la prise de force (pour embrayer la lame) à la position ON et redressez-vous brièvement du siège. Le moteur devrait caler.

- La clé de contact étant réglée à la **POSITION DE TONTE NORMALE**, la prise de force se débrayera automatiquement si le bouton de la prise de force (pour embrayeur la lame) est placé à la position ON (pour embrayeur la lame) et la clé de contact enfoncée dans la pédale de l'accélérateur. Pour vérifier son bon fonctionnement, faites démarrer le moteur avec la position de marche arrière. Puis vérifiez que trouve la pédale de l'accélérateur se trouve dans la position de marche arrière.

La pédale de l'accélérateur en position ON et la clé de contact en position de **tonne normale**, placez le bouton de la prise de force (pour embrayeur la lame) à la position ON et placez la pédale de l'accélérateur en position de marche arrière. Le plateau de coupe débrayé arrivera.

Ce système de sécurité empêche le moteur de tourner et de démarrer si la pédale de frein n'est pas complètement enfoncée et si la manette, ou le bouton, de la prise de force (Embrayage de la lame) n'est pas à la position non encinchée. Pour vérifier son bon fonctionnement, placez le bouton embrayage (pour embrayer la lame) à la position ON et désserrez le frein de stationnement. Si ne devrait pas être possible de faire démarrer le moteur.

Le système de sécurité arrête automatiquement le moteur si le conducteur quitte son siège avant de sortir le frein de stationnement. Pour vérifier son bon fonctionnement, faites démarrer le moteur du bon fonctionnement, faites démarrer le moteur du bon fonctionnement. Pour vérifier son

## COMMUTATEURS INTERNES DE

SECURITE

**AERTISSEMENT:** Assurez-vous de lire  
et de bien comprendre toutes les instructions  
qui figurent sur la machine et dans la notice  
d'utilisation avant de la mettre en marche.

## CHAPITRE 6: FONCTIONNEMENT


alors à sa position initiale.

Bouton et la pédale de frein. Le bouton révient stationnement, appuyez légèrement sur la pédale de frein. Pour desserrer le frein de freinages. Pour désserrer le frein de freinages.

Pour servir le train de stationnement, appuyez à fond sur la pédale de frein et enfoncez le bouton du frein de stationnement. Maintenez le bouton enfoncé et relâchez votre pied de la pédale. Le train de stationnement se déplace vers l'arrière.

**HÉMAGHOUÈ:** La manette de la prise de force doit se trouver à la position OFF (non enclichée) lors de la mise en route du moteur.


La manette de la prise de force se trouve sur la gauche du tableau de bord, près du volant. Poussez la manette vers l'avant pour encincer la prise de force avec le plateau de coupe ou tout autre accessoire ; tirez la manette de prise de force vers l'arrière (du tracteur) pour débrancher les accessoires.

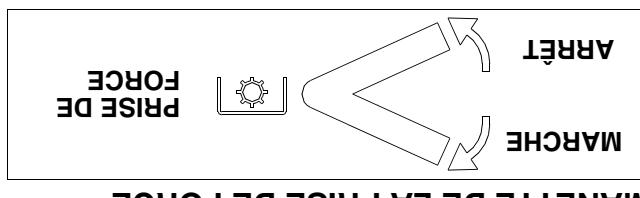

MANETTE DE LA PRISE DE FORCE

**HÉMAGHOUÈ:** Le bouton de la presse de force *doit se trouver à la position OFF (non enclenchée) lors de la mise en route du moteur.*

Pour encleucher la prise de force avec le plateau de coupe ou tout autre accessoire, tirez sur le bouton pour accéssorier la plaque de force aux accessoires.

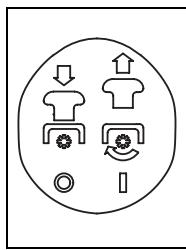

## BOUTON DE LA PRISE DE FORCE ÉLECTRIQUE

**L'ammeter** (si l'équipe) enregistre la rapidité de charge de la batterie. L'enregistreur de l'ammètre doit se trouver du côté (+) lorsque le moteur tourne au régime RAPIDE. La valeur de l'ammètre dépend de l'amplitude de charge et de la puissance de la batterie. L'enregistrement de l'heure (si l'équipe) fonctionne dès que la clé se trouve à la position MARCHE ou MARCHE/PHARES et enregistre le nombre d'heures d'utilisation du tracteur.

**BATTERIE** — Si l'indicateur s'allume quand le moteur tourne, il indique que la batterie doit étre rechargée OU le système de charge doit étre rechargé un amperage suffisant. Consultez le chapitre ENTRETIEN dans cette notice d'utilisation quant à la méthode correcte de charge de la batterie ou faites vérifier le système de charge par un concessionnaire.

**CHUILE** — Arrêtez immédiatement le tracteur et verrez si le niveau d'huile dans le carter et si l'huile au dessous. Consultez votre notice d'utilisation du moteur.


pas. S'il saillume quand le moteur tourne, procédez comme suit :

Il est normal pour que l'indicateur de l'huile et de la batterie s'allume quand la clé de contact se trouve à la position ON (Marche) et quand le moteur ne tourne pas.

**FRIEIN** — Appuyez sur la pedale de frein.  
**PRISE DE FORCE** — Placez le bouton de la prise de force à la position pop anglepoise (OEE).

**DEFINITION** : Appelons  $\Omega$  l'ensemble des points de l'espace.

10

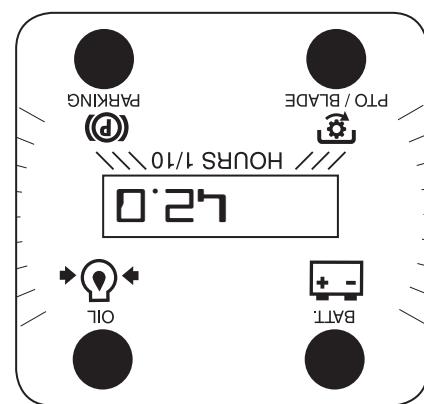


Le système de contrôle, qui se trouve au centre de la console du tracteur, enregistre et affiche les heures de fonctionnement du tracteur, c'est-à-dire des que la cle de contact quitte la position « STOP » (Arrêt). Cet indicateur sert aussi à rappeler au conducteur les intervalles entre les vidanges d'huile. Dans ce cas, l'indicateur clignote entre les heures enregistrées, « CHG » et « OIL ». Pendant cette période les heures sont enregistrées. que 50 heures d'utilisation sont enregistrées. L'intervalle d'environ deux heures (50 à 52 heures, 100 à 102 heures, 150 à 152 heures, etc.). L'indicateur clignote aussi de la même façon pendant cinq minutes chaque fois que le moteur du tracteur démarre pendant cette période ou l'entretien est rendus. Avant la fin de la période, changez l'huile du moteur du chariot selon les instructions fournies dans cette notice d'utilisation.

SYSTÈME DE CONTRÔLE

**IMPROVEMENT**: servir toujous le même de statiomnement avant de laisser le tracteur sans survelliance

## **IMPORTANT:** Serrez folio

Elle se trouve juste en-dessous de la pédale de frein à l'avant droit du tracteur, le long du marchepied. Appuyez sur la partie supérieure de la pédale d'accélérateur pour faire avancer le tracteur. Appuyez sur la partie inférieure de la pédale d'accélérateur avec la partie du pied droit (pas le talon) pour faire reculer le tracteur. La vitesse de déplacement est également contrôlée par cette pédale. Plus la pédale pivote vers l'avant ou vers l'arrière, plus le tracteur se déplace rapidement. La pédale vers l'arrière, plus le tracteur se déplace rapidement. La pédale vers l'avant ou la pédale pivote vers l'arrière, plus le tracteur se déplace rapidement. La pédale vers l'arrière, plus le tracteur se déplace rapidement. La pédale vers l'avant ou

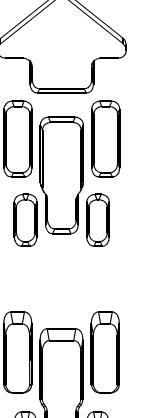


## PEDALE D'ACCELERATEUR




**REMARQUE :** Toute référence à la DROITE ou à la GAUCHE s'entend à partir de la position de conduite.

- |   |  |   |                                     |   |                                 |
|---|--|---|-------------------------------------|---|---------------------------------|
| A | Indicateur de contrôle/Computer d'heures | G | Manette de commande de l'obturateur | L | Manette de relèvage             |
| B | Manette de la prise de force             | H | Module du commutateur d'allumage    | K | Button du régulateur de vitesse |
| C | Manette du volant de départ              | I | Pédale de frein                     | J | Pédale d'accélérateur           |
| D | Button de frein de stationnement         |   |                                     |   | Bouton de réglage du siège      |
| E |  |   |                                     |   | Porte-boisson                   |
| F |  |   |                                     |   |                                 |

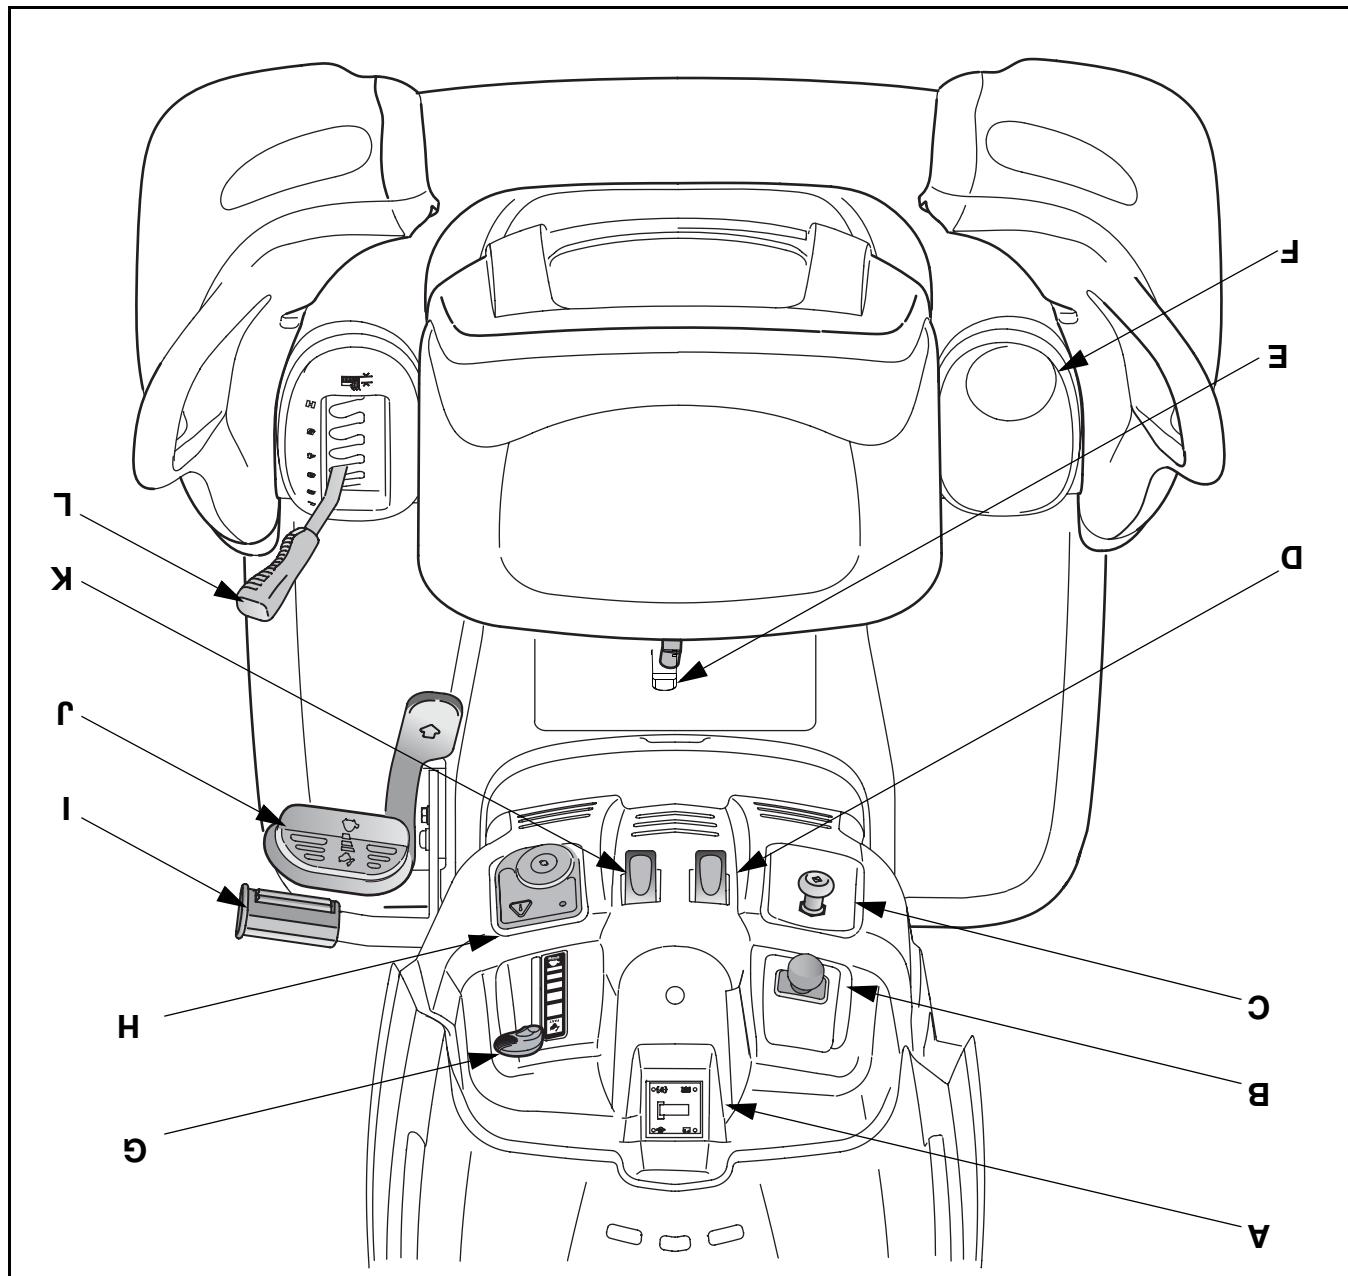

**Figure 4**

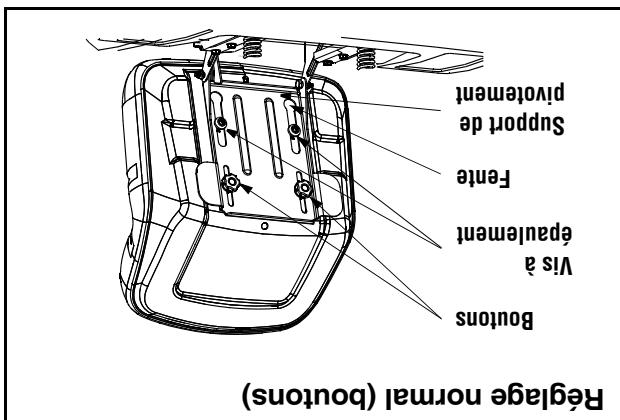

### Reglage normal (buttons)

Pression égale dans tous les pneus.  
Les pneus sur votre tracteur peuvent être distendus pour l'expédition. Réduisez la pression de pneu avant de mettre le tracteur en marche. La pression de travail recommandée est de 10 lb/po<sup>2</sup> environ pour les pneus arrière et de 14 lb/po<sup>2</sup> pour les pneus avant. La pression recommandée par le fabricant est indiquée sur le flanc des pneus.

**AVERTISSEMENT:** Une pression maximale de 30 lb/po<sup>2</sup> est toujours recommandée. Maintenez toujours une pression égale dans tous les pneus.



PRESIÓN DE PNEU

**AVERTISSEMENT:** Le plateau de coupe peut lancer des projectiles. Son utilisation sans une goulotte d'éjection correctement installée peut causer des blessures corporelles graves et/ou causer des dégâts à proximit  du tracteur.



**IMPORТАНТ:** Le tracteur est très recommandé avec une petite quantité d'huile. Il est toutefois recommandé de verser l'huile dans le réservoir avant de mettre en marche. Faites attention de ne pas déborder en faisant le plein, ce qui risque de dégager des fumées. Le moteur ne fonctionnerait pas de façon performante et risquerait d'être endommagé.

Faites les pieds d'huile et desserrez la vis de serrage des instructions fournies dans la notice d'utilisation du moteur qui accompagne le tracteur. Lisez attentivement les instructions.



#### PLEINS D'HUILE ET D'ESSENCE


Le réservoir d'essence est placé sous le capot et a une capacité de deux ou trois gallons. Ne remplitsez pas au-dessus du niveau.

**Avertissement:** Faites très attention en manipulant de l'essence. Il sagit d'un produit hautement inflammable et les vapeurs peuvent s'explosiver. Ne faites jamais le plein à l'intérieur, dans le moteur est chaud ou pendant qu'il tourne. Éteignez les cigarettes, cigares, pipes ou autres sources de chaleur.

Le réservoir d'essence est placé sous le capot et a une capacité de deux ou trois gallons. Ne remplitsez pas au-dessus du niveau.

PLEINS D'HUILE ET D'ESSENCE

**Figure 3**

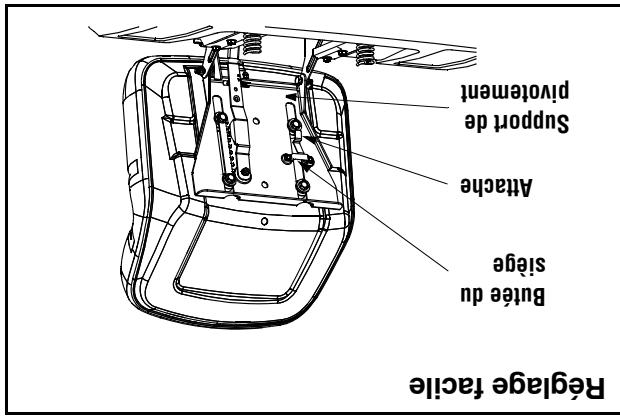

Reglage facile

**REMARQUE:** Si le siège est installé à l'envers sur le support de pivotement pour l'expédition, tirez sur l'attache qui se trouve sur la butée du siège et maintenez-la ouverte pendant que vous dégagerez le siège du support de pivotement. Voir la Figure 3.

## Réglage facile du siège


**REMARGUE:** A des fins d'expédition, les sièges sont soit attachés sur le support de pivotement du siège avec un fil en plastique, soit installées à l'envers sur le support de pivotement. Dans un cas comme l'autre, retirez le siège et enlevez les deux vis hex. (ou boutons le cas échéant) du dessous du siège avant de l'installer comme suit.

Reférez-vous à la Figure 3 et la Figure 4, identifiez le style de siège de votre tracteur et suivre les instructions applicables.

## INSTALLATION DU SIEGE

- Avec vos mains, redressez les routes à l'avant du tracteur pour que les roues soient bien droites.
- Soulevez doucement le capuchon du centre du volant et sortez la boulonnière. Prenez soin de ne pas perdre le boulon hex. ou la rondelle creuse qui se trouvent dessous le capuchon.
- Placez le volant sur l'arbre de direction au centre du tableau de bord, à la propre position (pour une course droite).
- Placez le dessous la rondeille creuse, le coté croix dessous, par-dessus l'arbre de direction.
- Maintenez la rondelle en place et vissez le boulon hex, dans l'arbre de direction. Serrez bien le boulon.
- Positionnez le capuchon du volant au milieu du volant et appuyez à la main. Voir la Figure 2.

**Figure 2**

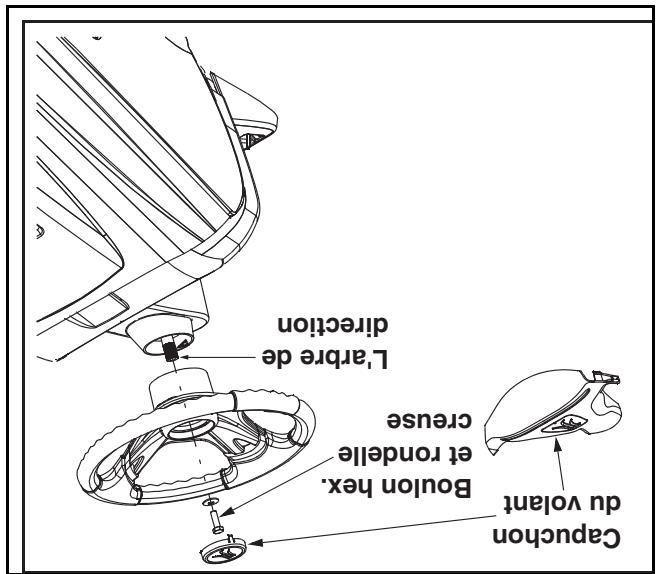

**REMARQUE:** Il y a deux styles de capture d'écran de volonté. Voir la Figure 2. Les styles variant par le

blessures graves.

**AVEH LISSEMENI :** Nutrissiez pas le tracteur avant d'installer le volant et la siège. Sinon, le conducteur risque des



## CHAPITRE 4: MONTAGE DU TRACTEUR

**HÉMARTHROUE:** Les côtes droites et gauches sont tendues du siège du conducteur qui fait face à l'avant.

**HEMATOLOGIE.** Les casdes de la maladie peuvent être suivies ne sont pas attachés, suivez les instructions ci-dessous.

**REMARQUE:** La borne positive de la batterie est identifiée par Pos. (+) et la borne négative par Neg. (-).

- Le câble positif (épais fil rouge) est attaché à la borne positive (+) par un bouillon hex. et un écrou à vis pants possède à l'usine. Verifiez que la gaine en caoutchouc protège bien la borne centre en corroboration.
- Enlevez le bouillon hex. et l'écrou à oreilles du câble négatif.
- Enlevez le couvercle en plastique noir, le cas échéant, de la borne négative et attachez le câble négatif (épais fil noir) sur la borne négative de la batterie (-) avec le bouillon et l'écrou à oreilles.
- Assurez-vous la barre de main tiennent est sur la batterie. Voir la Figure 1.


Si le volont et le siège de votre tracteur n'ont pas été installés pour l'expédition, installez comme suit

INSTALLATION DU VOLANT


**REMARQUE:** Si la batterie est toutefois mise en service après la date indiquée sur le dessous de la batterie, chargez-la selon les instructions à la page 24 de cette notice d'utilisation avant de mettre en marche le tracteur.

**Figure 1**

**Figure 1**

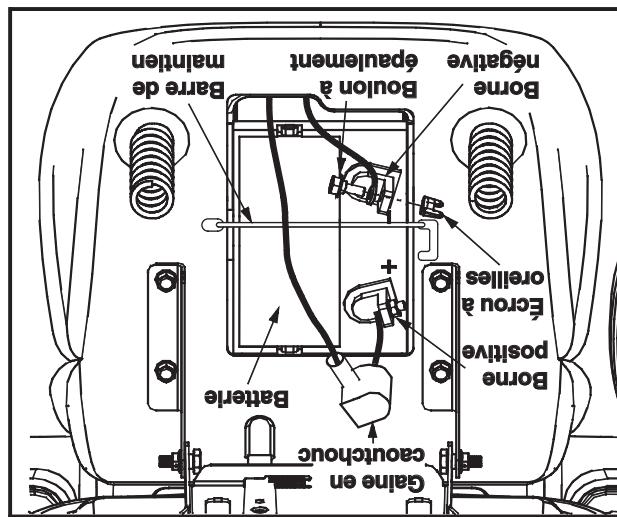

**SERVEZ-VOUS DE CET INCLINOMÈTRE POUR DÉTERMINER LES PENTES SUR LESQUELLES IL SERAIT  
DANGEREUX DE TRAVAILLER.**

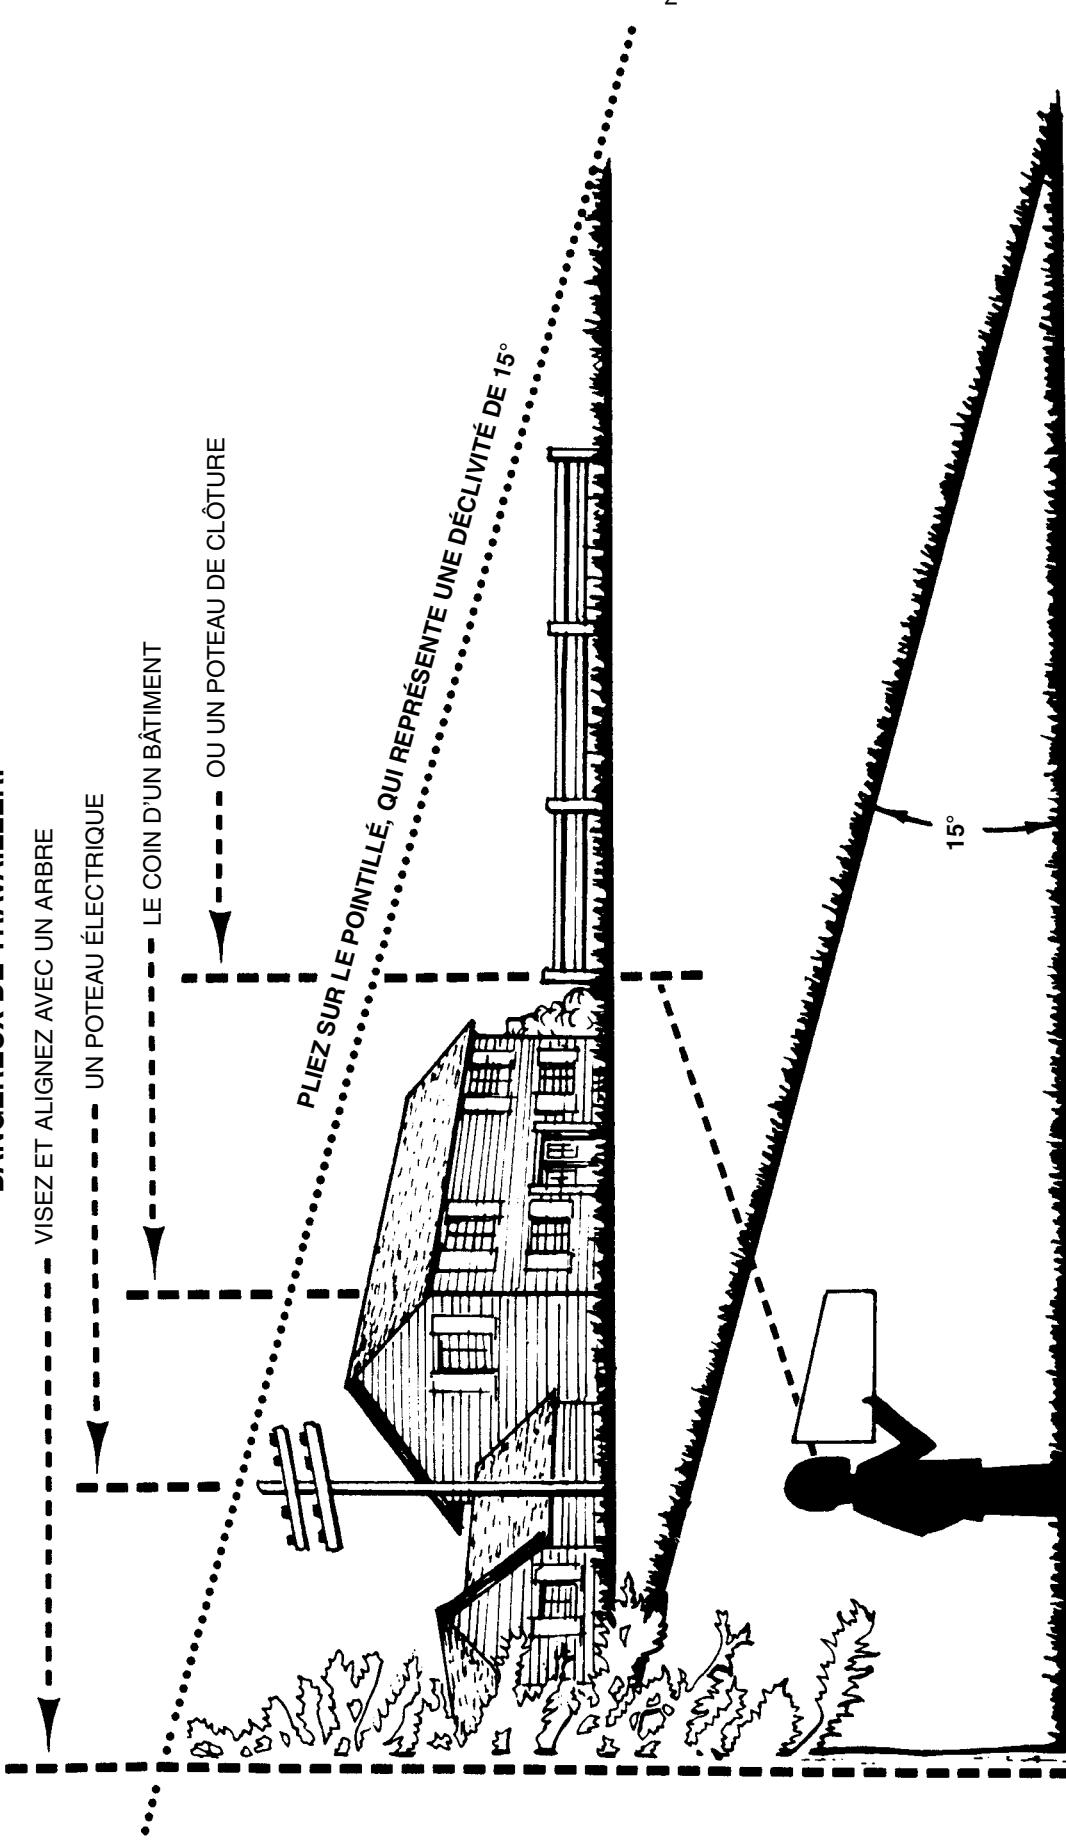



**CHAPITRE 3: INCLINOMÈTRE**



**AVERTISSEMENT**

Ne vous servez pas de le tracteur sur des pentes supérieures à 15° (soit une déclivité de 2-1/2 pi par 10 pi). Un tracteur à siège risque en effet de se retourner et son conducteur peut être gravement blessé. Il est également difficile de conserver un bon appui en marchant derrière un tracteur. Vous risquez de glisser et de vous blesser. Utilisez les tracteurs À SIÈGE parallèlement à la pente, jamais en travers.

#### Etiquettes de sécurité sur la machine

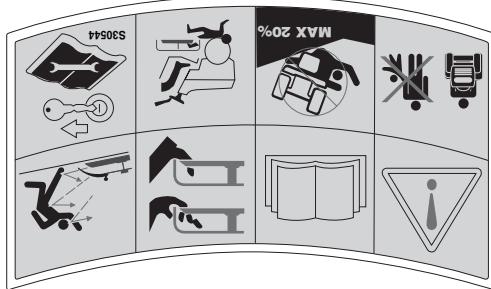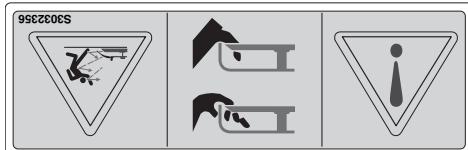

## CHAPITRE 2: ÉTIQUETTES DE SÉCURITÉ.

**A V E R L I S S E M E N T :** NE permettez l'utilisation de cette machine qu'à des personnes qui ont lu, qui comprennent et qui respectent les instructions qui figurent dans cette notice d'utilisation.



- |    |   |
|----|---|
| 1. | En cas de débordement, essuyez toute éclaboussure sur le machine. Déplacez la machine et attendez 5 minutes avant de la remettre en marche.   |
| 6. | Les lames sont coupantes et peuvent causer des blessures graves. Évitez de les utiliser pour couper des matériaux très durs ou cassants. Utilisez toujours un bon état de machine.  |
| 7. | Assurez-vous que toutes les écrous, boulons et vis sont bien serrés pour éviter tout déplacement ou dégât. Utilisez toujours un état de machine correct.  |
| 8. | Ne modifiez jamais les dispositifs de sécurité. Vérifiez souvent qu'ils fonctionnent bien.  |
| 9. | Si vous heurtez un objet, arrêtez immédiatement le moteur, débranchez le fil de la bougie et les dégâts événuels avant de remettre la machine en marche.  |
| 1. | Ne faites jamais fonctionner la machine dans un local clos car les gaz d'échappement du moteur contiennent du monoxyde de carbone, un gaz mortel qui peut entraîner la mort.  |
| 2. | Avant de nettoyer, déparer ou d'examiner la machine, vérifiez que les lames et toutes les pièces mobiles se sont immobilisées. Débranchez le fil de la bougie et mettez-le à la terre contre le fil de la bougie et immobilisez. Par mesure de sécurité, vérifiez souvent les éléments et remplacer-les immédiatement avec des pièces authentiques seulement. «L'emploi de pièces non conformes aux caractéristiques de l'équipement d'origine peut causer des performances inférieures et entraîner des dommages et, par conséquent, exposer les utilisateurs à des risques de débris. |
| 3. | Vérifiez régulièrement que les lames sont utilisées dans 5 secondes qui suivent l'immobilisation de la machine. Si elles ne s'arrêtent pas dans ce délai, faites examiner la machine par une station de marquage accidentel.  |
| 4. | S'immobilisent dans les 5 secondes qui suivent l'utilisation de la machine de débrancher des lames. Si elles ne s'arrêtent pas dans ce délai, faites examiner la machine par une station de marquage accidentel.  |
| 5. | Vérifiez souvent que les lames pour détecter toute usure de nature à la machine et à l'environnement. L'élimination des déchets et liquides qui risquent de contaminer le sol ou les eaux de surface est interdite.   |

REMARKS



## MANIPULATION DE L'ESSENCE :

- Le poids de l'équipement remorque peut entraîner la perte de traction et par conséquent de contrôle du tracteur sur des pentes.

AVANCZ L'entirement et traction et par conséquent une distance supplémentaire pour vous arrêter.

NE PASSEZ PAS AU POINT MORT POUR DESCENDRE UNE PENTE.

ENFANTS

7. Des surfaces graves.

Ne remorquée pas des accessoires lourds (remorque chargée, rouleau, etc.) sur des pentes superieures à 5°. Le poids remorqué et la tendance à posséser le tracteur supplémentaire à tendance à provoquer la perte de contrôle du tracteur (le tracteur peut causer la perte de contrôle du tracteur (le tracteur peut accélérer, le freinage peut se déclencher et peut entraîner la perte de contrôle du tracteur (le tracteur peut être limité, l'accessoire peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être arrêté). Les surfaces graves peuvent entraîner la perte de contrôle du tracteur (le tracteur peut accélérer, le freinage peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être limité, l'accessoire peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être arrêté).

Quant aux limites de l'équipement remorqué et au remorquage sur pente.

Ne remorquez pas des accessoires lourds (remorque chargée, rouleau, etc.) sur des pentes superieures jamais quiconque sur l'équipement remorqué.

Le poids de l'équipement remorqué peut entraîner la perte de contrôle du tracteur (le tracteur peut accélérer, le freinage peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être limité, l'accessoire peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être arrêté).

Entraîner la perte de contrôle du tracteur (le tracteur peut accélérer, le freinage peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être limité, l'accessoire peut se déclencher et entraîner la perte de contrôle du tracteur (le tracteur peut être arrêté).

Avancez lentement et prévoyez une distance supplémentaire pour vous arrêter.

## UTILISATION SUR UNE PENTE

**A FAIRE :**

1. Travaillez parallèlement à la pente, jamais à l'inclinaison pour éviter toute blessure grave.

2. Faites attention de décliner le terrain avant de commencer à travailler. Si, selon vos sentez pas à l'aide sur la pente, n'y travaillez pas.

3. Travaillez lentement. Utilisez une vitesse suffisamment lente pour ne pas avoir à vous arrêter ni à changer de vitesse sur la pente. Les pneus risquent de manquer de traction sur une pente, même si les freins fonctionnent correctement. Soyez toujours en vitesse en descendant une pente pour bénéficier du frein moteur.

4. Suivez les recommandations du fabricant quant aux poids des roues ou contrepois à utiliser pour améliorer la stabilité.

5. Faites très attention en utilisant les sacs à herbe ou autres accessoires. Ils peuvent modifier la stabilité de la machine.

6. Déplacez-vous lentement et régulièrement sur les pentes. Ne changez pas brusquement de direction ou de vitesse. Un enclichement de roue peut déclencher des blessures graves.

7. Évitez de démarrer ou de vous arrêter sur une pente. Si les pneus n'adhèrent pas bien, retournez la machine et faites lentement une pente en ligne droite.

**A NE PAS FAIRE :**

1. Ne tournez pas près d'une falaise ou d'un talus, soit nécessaire; tournez alors lentement et progressivement en descendant si possible.

2. Ne tondez pas dans le vide ou l'affaissement soutient peut renverser la machine.

3. N'essayez pas de stabiliser la machine en mettant pied à terre.

4. N'utilisez pas le sac à herbe sur des pentes raides.

20. Débrayez les lames, serrez le frein de stationnement, arrêtez le moteur et attendez que les lames se soient immobilisées avant de relier le sac à herbe ou de déboucher la gouttière, dénicher de l'herbe ou des débris ou de faire un reglage ouécondue.
21. Ne laissez jamais une machine en marche non soumise à l'aide sur la pente ou si vous ne pouvez pas la reculer sur la pente ou si vous ne pouvez pas les précautions supplémentaires. Si le renversement de la machine, qui peut causer des blesures graves sur les motteles, se produisent demande des pentes. Travaillez sur un terrain en soumet sur des pentes. Travaillez sur la pente de contrôler ou de renverser la machine, qui peut causer des blesures graves sur les motteles, se produisent.
22. Faites très attention en chargeant ou en déchargeant la machine d'une remorque ou d'un camion. Ne conduisez pas la machine sur un plan incliné pour la charger dans une remorque car elle peut basculer et causer des blesures graves. Pouvez la machine à la main pour la graver. Utilisez la machine à la main pour la graver ou la décharger.
23. Le silenceux et le moteur ont tendance à chauffer et risquent de causer des brûlures. Ne touchez pas.
24. Verifiez le dégagement vertical avant de passer sous des branches basses, des fils électriques, un portail ou dans toute autre situation où le conducteur risque d'être frappé et projeté de la machine et de se blesser grièvement.
25. Débrayez tous les embayages des accessoires, appuyez à fond sur la pédale de frein et passez au point mort avant d'essayer de mettre le moteur en marche.
26. Ce tracteur a été conçu pour tondre un gazon résidentiel normal ne mesurant pas plus de 10 mètres. Il peut être difficile de faire un tondre un gazon très haut, de l'herbe sèche (dans un pré par exemple) ou une pile de feuilles sèches. Les débris peuvent s'accumuler sous le plateau de coupe ou entrer en contact avec le tuyau d'échappement du moteur, d'où un risque toutes les instructions qui accompagnent la machine. Veillez lire, bien comprendre et suivre annexe homologues par le fabricant de la machine. L'accès au équipement ou l'équipement annexe.
27. N'utilisez que des accessoires et équipement d'incendie.
28. Les statistiques disponibles révèlent que les conducteurs d'éviter leur séisme dans ces causes un grand nombre d'accidents mettant en danger des tracteurs de jardin. Nous dans un grand nombre d'accidents mettant en cause conducteurs de plus de 60 ans sont impliqués dans un accident de plus de 60 ans sont impliqués toutes les instructions qui équipement ou l'équipement annexe.
29. Faites toujours prudence de bon sens dans des situations qui n'ont pas été abordées dans cette toute sécurité.
30. Concussionnaire agree en cas de besoin.

- Avertissement:** Ce symbole attire votre attention sur des consignes de sécurité importantes qui, si elles ne sont pas respectées, peuvent mettre en danger non seulement votre personne et vos biens, mais aussi ceux d'autrui. Prenez de lire toutes les instructions figurant dans cette notice d'utilisation avant d'utiliser l'appareil. Comez avec toute notice d'utilisation sur la machine dans la notice d'utilisation des instructions qui figurent sur la machine. Pour éviter des blessures corporelles graves et même mortelles, part de l'utilisation peut entraîner des blessures graves. Cette machine peut amputer mains et pieds et projeter des débris. Par conséquent, le non-respect de ces consignes peut causer des blessures et projeter des débris. Pour être sûr que l'utilisation de cet appareil accompagne ce symbole.
- DANGER:** Cette machine doit être utilisée conformément aux consignes de sécurité qui figurent dans la notice d'utilisation. Comme avec tout appareil motorisé, une négligence ou une erreur de la part de l'utilisateur peut entraîner un accident grave et mortel. Assurez-vous de lire et de bien comprendre toutes les instructions qui figurent sur la machine et projetez des débris. Pour toute consultation avec la machine dans les situations d'urgence, utilisez la notice d'utilisation qui figure sur la machine. Part de l'utilisation peut entraîner des blessures corporelles. Respectez l'avertissement qui accompagne ce symbole.
1. Assurez-vous de lire et de bien comprendre toutes les instructions qui figurent sur la machine dans les situations d'urgence, utilisez la notice d'utilisation qui figure sur la machine. Part de l'utilisation peut entraîner des blessures corporelles graves et même mortelles.
2. Familiarez-vous avec les commandes rapidement. Foncez immédiatement devant de leur commande. Ne permettez jamais à des enfants de moins de 14 ans de servir de cette machine et les surveiller. Bien sûr, le fonctionnement des adultes responsables connaît la zone de travail.
3. Gardez les spectateurs, les animaux de compagnie et les enfants à une distance d'au moins 75 pieds de la machine quand elle est en marche. Arrêtez la machine si quelqu'un approche.
4. Seuls des adultes connaissent le fonctionnement de la machine doivent être autorisés à servir de cette machine et les surveiller.
5. Utilisez les spectateurs, les animaux de compagnie et les enfants à une distance d'au moins 75 pieds de la machine quand elle est en marche. Arrêtez la machine si quelqu'un approche.
6. Examinez soigneusement la zone de travail. Ramassez tous les pierres, bâtons, fils métalliques, os, jouets et autres objets qui peuvent être projetés par la machine pour causer des blessures graves.
7. Prevoyez de travailler en évitant de projeter les débris éventuels ne résultent pas de la machine lors des rues, trottoirs, spectateurs, etc. Evitez d'éjecter l'herbe en herbe vers des rues, trottoirs, spectateurs, etc. Portez toujours des lunettes de sécurité en utilisant la machine ou en effectuant un réglage nicocher et de lesser quelqu'un.
8. Portez toujours des lunettes de sécurité en utilisant la machine ou en effectuant un réglage nicocher et de lesser quelqu'un.

## CHAPITRE 1: IMPORTANT CONSIGNES DE SÉCURITÉ



 Pour toute question concernant votre tracteur, composez le 1-888-384-9942 (États-Unis) ou 1-888-848-4073 (Canada).
<p><b>Toro des solutions</b></p>  <p>Toro propose une variété d'options en ligne à ses clients potentiels. Consultez la liste des options ci-dessous à notre clientèle.</p> <p><b>Coin des solutions de Toro</b></p> <p><b>Toro</b> </p> <p>Homeowner   Golf Course Management   Professional Contractor   Sports Fields &amp; Grounds   Irrigation Solutions</p> <p>Recherche sur le site <input type="text"/> </p>
<p><b>Vous trouverez de nombreux suggestions utiles sur le site <a href="http://www.toro.com">www.toro.com</a>. Cliquez sur "Customer Care" dans la section "Homeowners" du Coin des solutions de Toro pour bénéficier d'une aide immédiate.</b></p>

Si l'assemblage de cette machine vous pose des problèmes ou pour toute question concernant les commandes, le fonctionnement ou l'entretien de la machine, vous pouvez chercher l'aide des experts. Choisissez des options ci-dessous:

**Veuillez retourner la machine au détaillant qui vous a vendue, sans vous adresser d'aide au service après-vente.**

## SERVICE APRÈS-VENTE

<p>Recopiez ici le numéro de série:</p> <hr/>	<p>Recopiez ici le numéro de modèle:</p> <hr/>
 <p>THE TORO COMPANY 811 LYNDALE AVE. SOUTH BLOOMINGTON, MINNESOTA 55420-1196 TOLL FREE PHONE NUMBER: 1-888-848-4073 USA TOLL FREE PHONE NUMBER: 1-888-384-9942 Canada</p>	
MODEL NUMBER	SERIAL NUMBER
DOM	

Cette notice d'utilisation est une pièce importante de votre nouveau tracteur de jardin. Elle vous fournit les renseignements nécessaires à l'assemblage, à la préparation et à l'entretien de votre machine. Veuillez donc lire attentivement et vous assurer de bien comprendre toutes les instructions.

Avant d'utiliser la tracteur de jardin pour la première fois, veuillez localiser sa plaque signalétique et recopier les renseignements qui s'y trouvent dans la notice d'utilisation. Un modèle de plaque signalétique est reproduit ci-dessous. La plaque signalétique se trouve sous le siège.


Cette information sera nécessaire pour utiliser le site Web du fabricant et/ou pour obtenir l'aide d'une station technique agréée de Toro.

## POUR TROUVER LE NUMÉRO DE MODÈLE

Chapitre	Page	Chapitre	Page
Important considérations de sécurité	21	Entretien	3
Étiquette de sécurité	23	Lubrification	6
Inclinomètre	23	Service	7
Montage du tracteur	27	Réglage hors saison	9
Commandes	28	Tablau d'entretien	10
Fonctionnement	29	Guide de dépannage	13
Reglages	30	Caractéristiques techniques	18
Garantie	31		

## TABLE DES MATIÈRES

# Notice d'utilisation

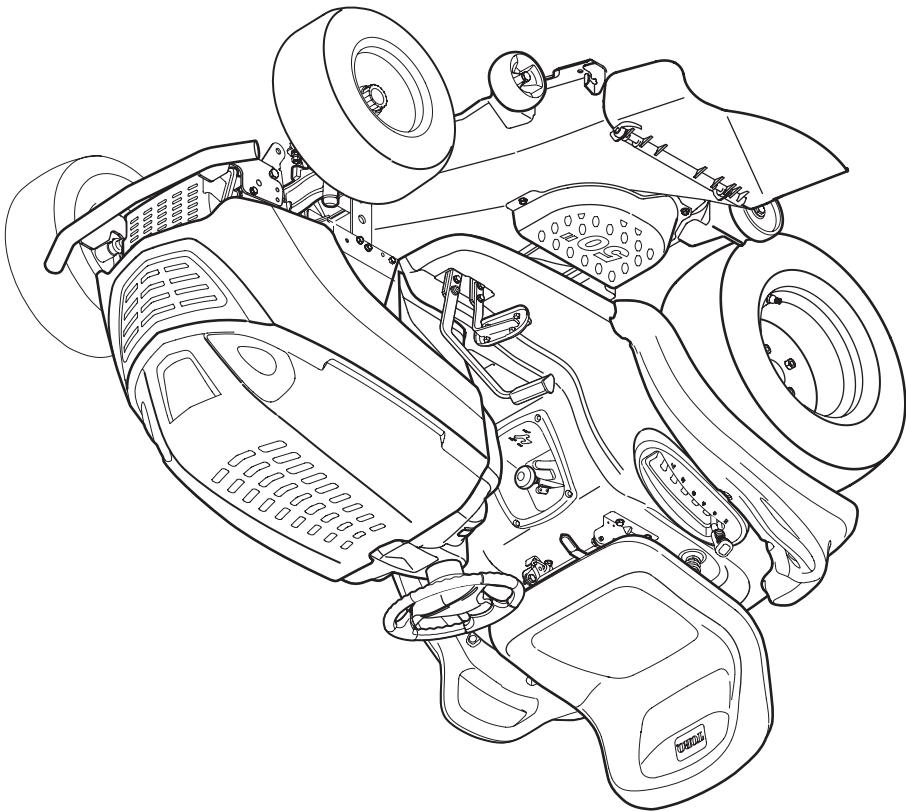

Modèle No. 14AK81RK544

Modèle No. 14AQ81RP544

## GT2200 et GT2300 Tracteur de jardin

Comptez dessus.

