



Homologation Lamp Kit

Workman® Utility Vehicle

Model No. 147-2798

Installation Instructions

Note: The Brake and Signal Kit (Toro Part No. 140-4785 for the Workman GTX, 145-2082 for the Workman MDX, or 145-2296 for the Workman HDX) must be installed on the machine to install this kit.

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Prepare a machine.
2	Wire harness License plate bracket License plate light Hex-socket head bolt (#10 x 1 inch) Clip nut Hex flange-head bolt (5/16 x 3/4 inch) Cable tie	1 1 2 4 4 4 1	Install the license plate bracket and wire harness.
3	Serial plate Pop rivet (3 x 10 mm)	1 4	Install the serial plate.
4	Plate-mount bracket Speed plate (25 km/h) Pop rivet (3/16 x 15/16 inch)	2 3 17	Install the speed plates (GTX only).
5	Speed plate (25 km/h) Pop rivet (3/16 x 15/16 inch)	3 9	Install the speed plates (MDX only).
6	Speed decal (32 km/h)	3	Install the speed decals (HDX only).
7	Turn signal light bracket Carriage bolt (#10 x 1/2 inch) Locknut (#10)	2 4 4	Install the turn signal light brackets (HDX only).
8	No parts required	–	Complete the installation.
9	No parts required	–	Test the lights.



1

Preparing a Machine

No Parts Required

Procedure

1. Park a machine on a level surface.
2. Engage the parking brake.
3. Shut off the engine and remove the key.
4. Disconnect the battery; refer to your *Operator's Manual*.

2

Installing the License Plate Bracket and Wire Harness

Parts needed for this procedure:

1	Wire harness
1	License plate bracket
2	License plate light
4	Hex-socket head bolt (#10 x 1 inch)
4	Clip nut
4	Hex flange-head bolt (5/16 x 3/4 inch)
1	Cable tie

Installing the Plate Bracket and Wire Harness

1. Route the license plate wire harness along the top of the license plate bracket, keeping the 2 large connectors and the fuse to the left side (Figure 1).
2. Secure the wire harness to the bracket by pushing the 4 push-in fasteners on the harness into the corresponding holes in the bracket (Figure 1).
3. Route the license plate light connectors through the large holes on either end of the bracket and connect them to the 2 license plate lights (Figure 1).
4. Install the lights to the bracket using 4 hex-socket head bolts (#10 x 1 inch) and 4 clip nuts as shown in Figure 1.

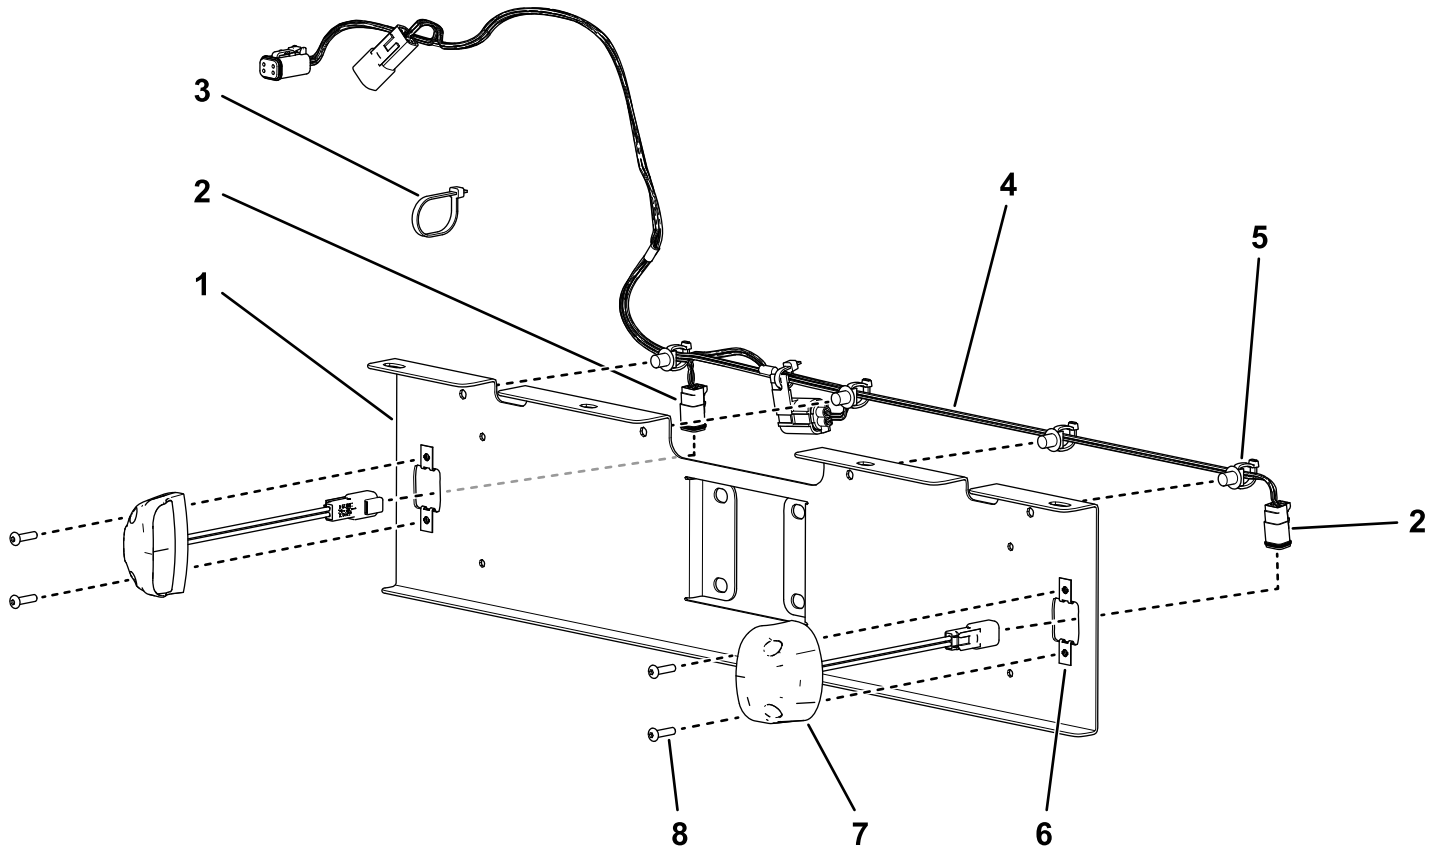


Figure 1

g398639

- | | |
|-------------------------------|-------------------------|
| 1. License plate bracket | 5. Push-in fastener |
| 2. Plate light connector | 6. Clip nut |
| 3. Cable tie | 7. License plate light |
| 4. License plate wire harness | 8. Hex-socket head bolt |


5. Install the bracket to your Workman as follows:

- **Workman GTX:** Using 4 hex flange-head bolts (5/16 x 3/4 inch), install the bracket to the underside of the cargo bed (A in [Figure 2](#)).

Note: The Homologation Lamp Kit and the Brake Signal Kit are not compatible with the steel bed Workman GTX.

- **Workman MDX:** Remove the 2 existing flange-head bolts from the underside of the cargo bed and use them to install the bracket (B in [Figure 2](#)).
- **Workman HDX:** Remove the 4 existing flange-head bolts from the hitch plate and use them to install the bracket (C in [Figure 2](#)).

Note: Ensure that you route the wire harness over the hitch.

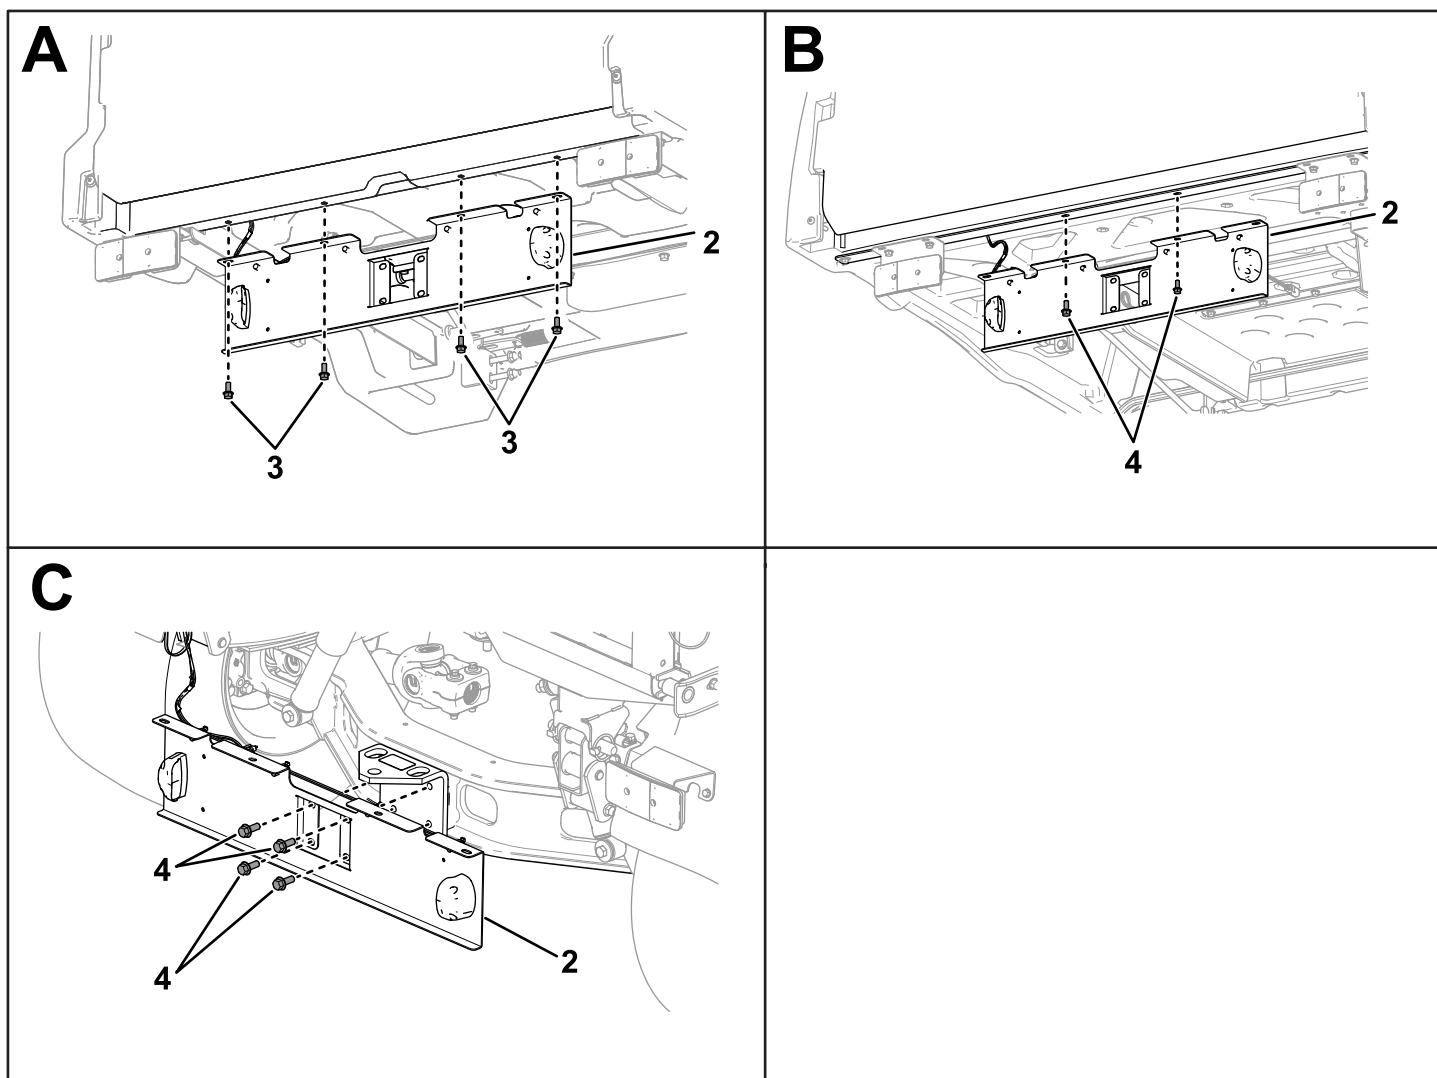


g398811

Figure 2
Rear

- | | |
|------------------------|--|
| 1. Rear of the machine | 3. Hex flange-head bolt (5/16 x 3/4 inch) |
| 2. Bracket | 4. Existing flange-head bolt (MDX and HDX) |

6. Unplug the Brake and Signal Kit wire harness from the left taillight and insert the taillight connector from this kit ([Figure 3](#)).
7. Using the other connector on the wire harness from this kit, connect it to the Brake and Signal Kit wire harness that you just unplugged ([Figure 3](#)).

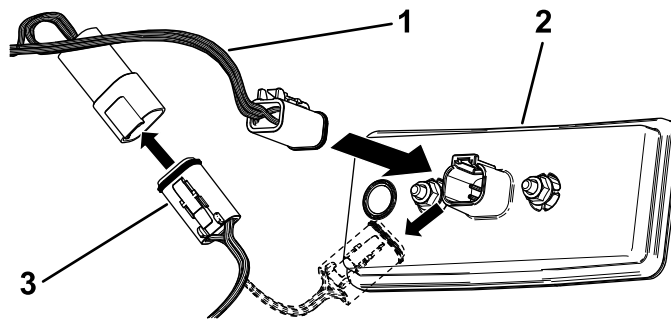

g398821

Figure 3
Left taillight rear view

1. Homologation Kit wire harness
2. Left taillight
3. Brake and Signal Kit wire harness

8. Use the cable tie to secure the excess wire harness to the machine.

3


Installing the Serial Plate

Parts needed for this procedure:

1	Serial plate
4	Pop rivet (3 x 10 mm)

Installing the Serial Plate (Workman GTX)

1. Install the serial plate using 4 pop rivets (3 x 10 mm) in the location shown in [Figure 4](#).

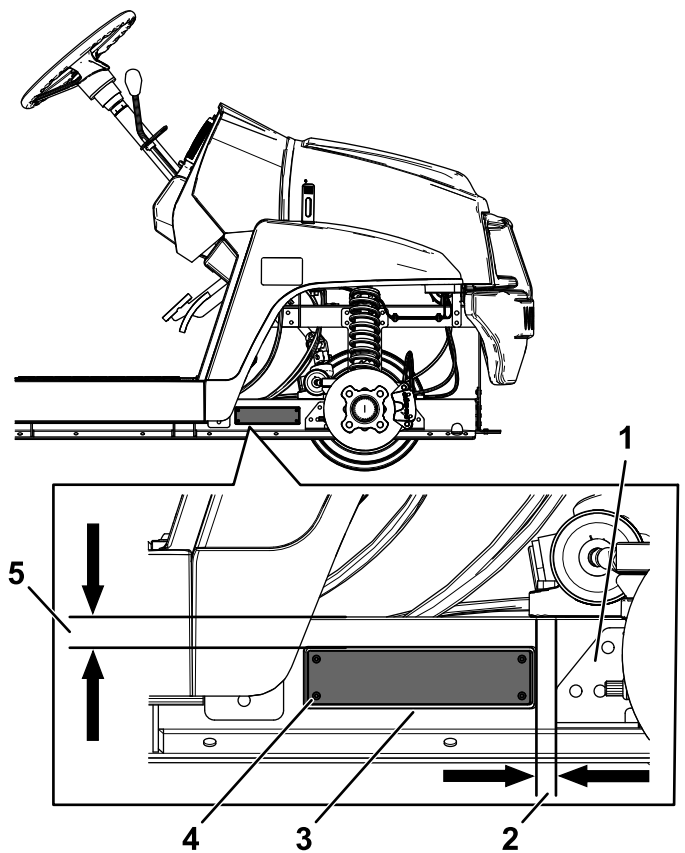

g398839

Figure 4
Tire not shown

1. Bracket
2. 13 mm (1/2 inch) left of the bracket
3. Serial plate
4. Pop rivet (3 x 10 mm)
5. 19 mm (3/4 inch) below edge of the frame

- Stamp the serial number on the machine in the location shown in [Figure 5](#).

Note: The text size must be 7 mm (1/4 inch) or larger.

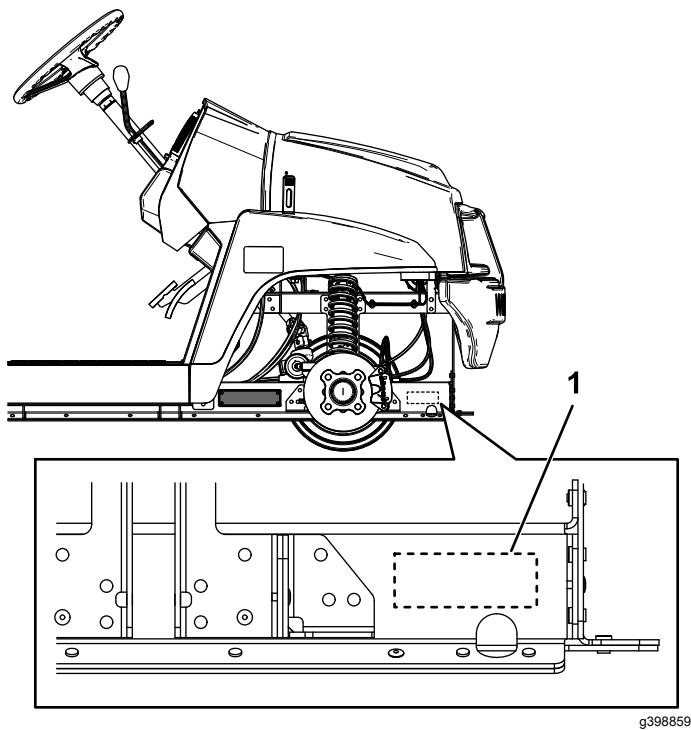


Figure 5

Tire not shown

- Stamp the serial number here.

Installing the Serial Plate (Workman MDX)

- Install the serial plate using 4 pop rivets (3 x 10 mm) in the location shown in [Figure 6](#).

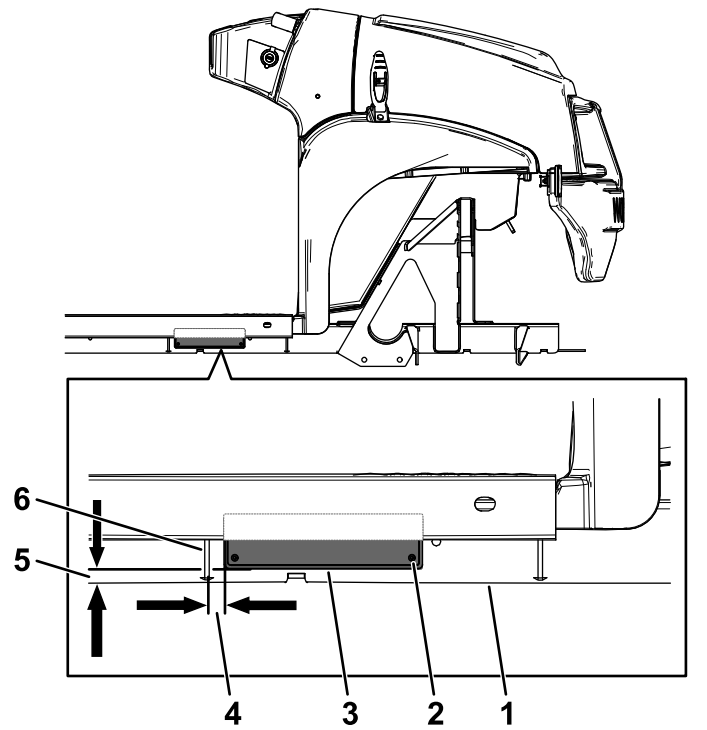


Figure 6

- | | |
|--------------------------|----------------------|
| 1. Frame | 4. 11 mm (7/16 inch) |
| 2. Pop rivet (3 x 10 mm) | 5. 11 mm (7/16 inch) |
| 3. Serial plate | 6. Support |

- Stamp the serial number on the machine in the location shown in [Figure 7](#).

Note: The text size must be 7 mm (1/4 inch) or larger.

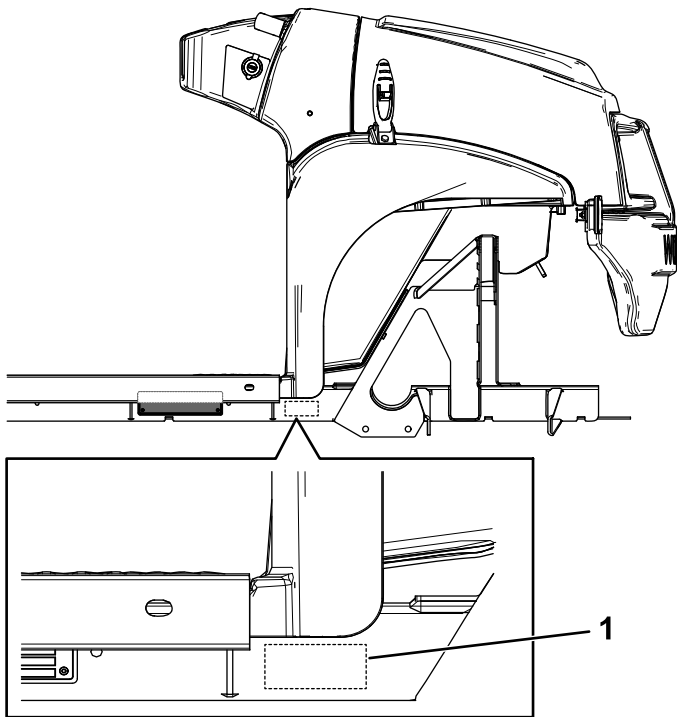


Figure 7

- Stamp the serial number here.

Installing the Serial Plate (Workman HDX)

- Install the serial plate using 4 pop rivets (3 x 10 mm) in the location shown in [Figure 8](#).

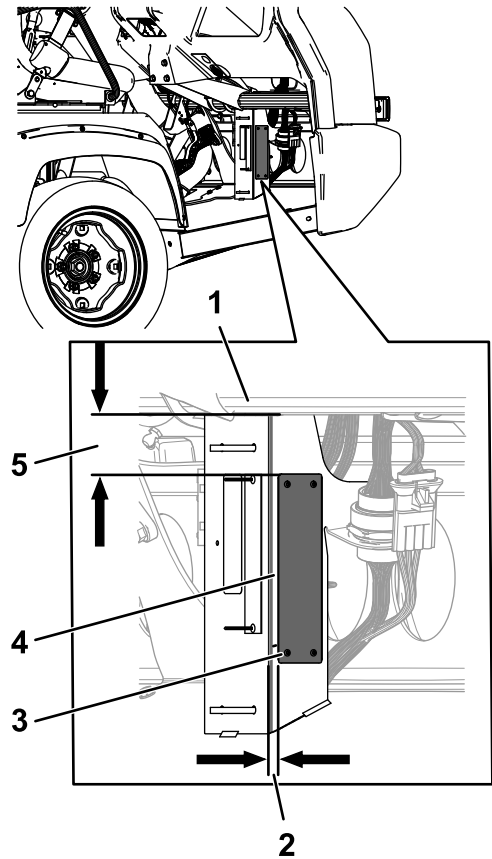


Figure 8

- | | |
|--------------------------|-------------------------|
| 1. Support tube | 4. Serial plate |
| 2. 8 mm (5/16 inch) | 5. 47 mm (1-7/8 inches) |
| 3. Pop rivet (3 x 10 mm) | |

- Stamp the serial number on the machine in the location shown in [Figure 9](#).

Note: The text size must be 7 mm (1/4 inch) or larger.

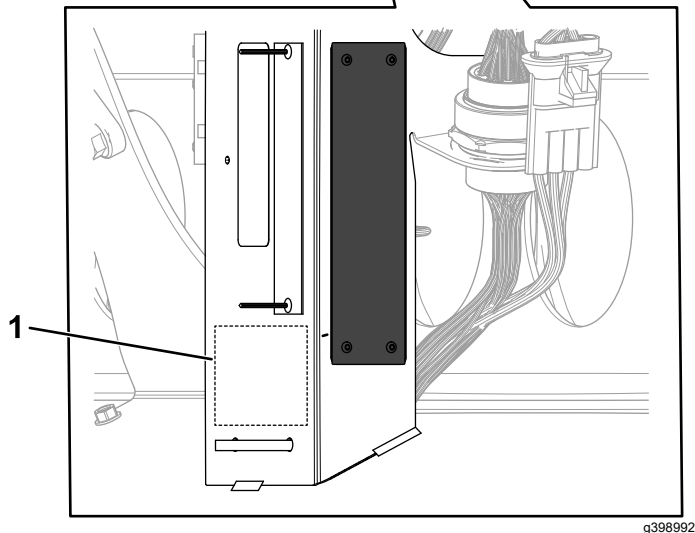
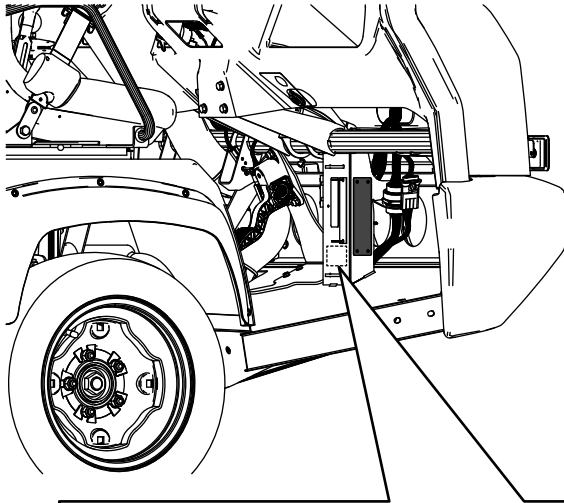


Figure 9

- Stamp the serial number here.

4

Installing the Speed Plates (GTX only)

Parts needed for this procedure:

2	Plate-mount bracket
3	Speed plate (25 km/h)
17	Pop rivet (3/16 x 15/16 inch)

Installing the Speed Plates to the Seat Base Sides

- On the left side of the machine, measure 51 mm (2 inches) from bottom, left of the seat base side, and mark this location ([Figure 10](#)).
- Measure 57 mm (2-1/4 inches) directly above the location and mark this location ([Figure 10](#)).
- Measure 83 mm (3-1/4 inches) from the left of the location marked in step 2, and mark this location ([Figure 10](#)).
- Measure 80 mm (3-3/16 inches) from the left of the location marked in step 3, then measure 299 mm (11-3/4 inches) directly above this location, and mark this location ([Figure 10](#)).
- Measure 83 mm (3-1/4 inches) from the right of the location marked in step 4, and mark this location ([Figure 10](#)).
- Drill a 5 mm (13/64 inch) hole at each of the 4 marked locations ([Figure 10](#)).

⚠ CAUTION

Use caution when drilling the holes into the seat base sides.

On the Workman GTX Gasoline Utility Vehicle, the fuel tank resides behind the seat base side on the driver's side of the machine, and the battery resides behind the seat base side on the passenger's side of the machine.

On the Workman GTX Electric Utility Vehicle, the battery charger resides behind the seat base side on the driver's side of the machine.

On the Workman GTX Lithium Utility Vehicle, the battery charger resides behind the seat base side on the passenger's side of the machine.

If you drill too far into the seat base sides, you may damage these components.

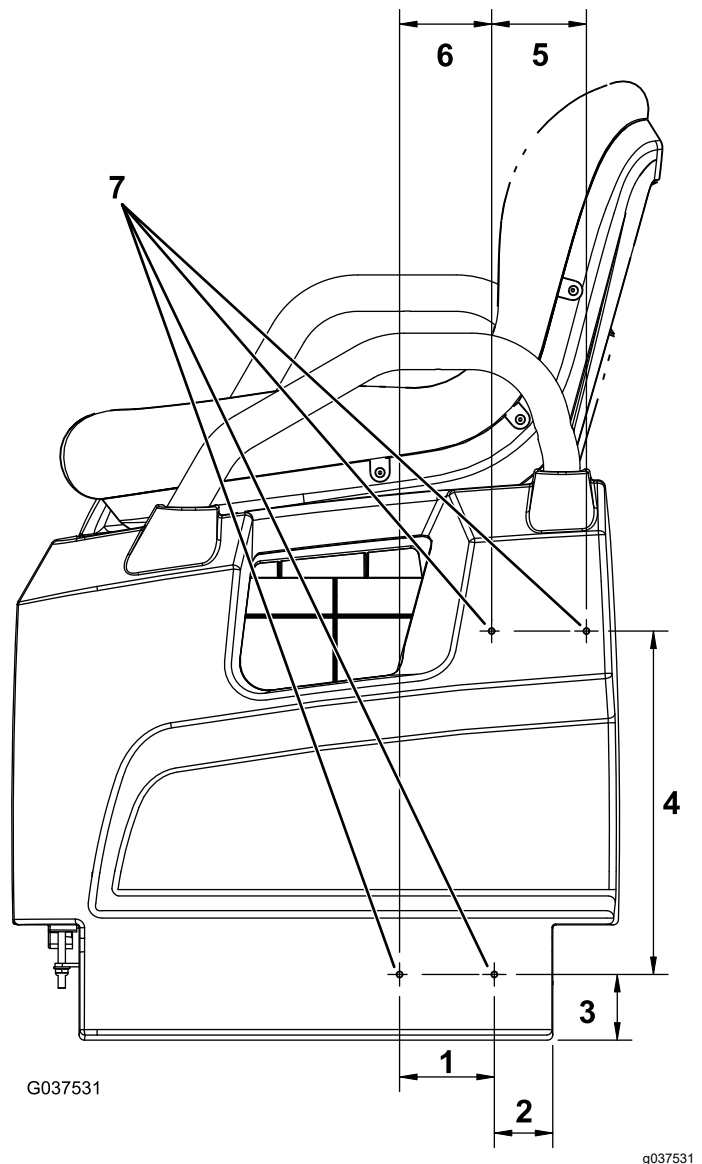


Figure 10

Left side of the machine shown

- | | |
|---------------------------|--------------------------------|
| 1. 83 mm (3-1/4 inches) | 5. 83 mm (3-1/4 inches) |
| 2. 51 mm (2 inches) | 6. 80 mm (3-3/16 inches) |
| 3. 57 mm (2-1/4 inches) | 7. Drill at these 4 locations. |
| 4. 299 mm (11-3/4 inches) | |

7. Install the plate-mount bracket to the seat base side using 4 pop rivets (3/16 x 15/16 inch) as shown in [Figure 11](#).

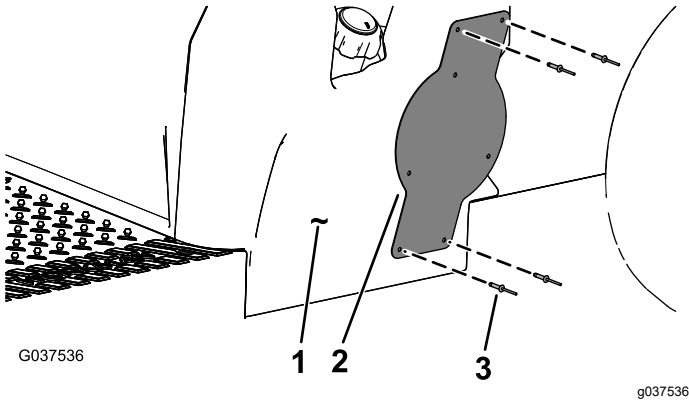


Figure 11

Left side of the machine shown

- | | |
|------------------------|----------------------------------|
| 1. Seat base side | 3. Pop rivet (3/16 x 15/16 inch) |
| 2. Plate-mount bracket | |

8. Install the speed plate to the plate-mount bracket using 3 pop rivets (3/16 x 15/16 inch) as shown in [Figure 12](#).

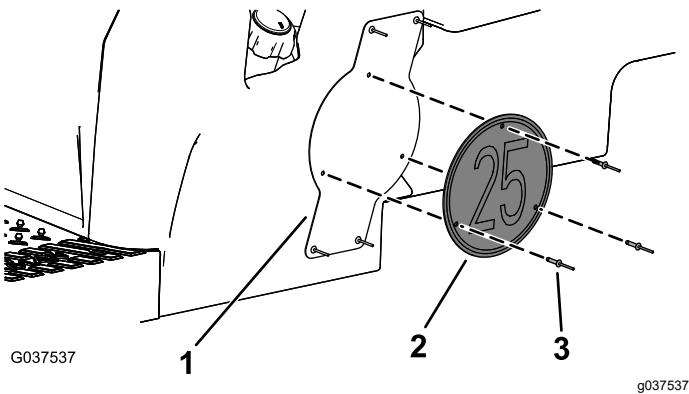


Figure 12

Left side of the machine shown

- | | |
|------------------------|----------------------------------|
| 1. Plate-mount bracket | 3. Pop rivet (3/16 x 15/16 inch) |
| 2. Speed plate | |

9. Repeat the procedure for the right side of the machine.

Installing the Speed Plate to the Tailgate

1. On the right side of the tailgate, measure 95 mm (3-3/4 inches) from the right edge of the tailgate and 70 mm (2-3/4 inches) from the top of the tailgate, and mark this location ([Figure 13](#)).

2. Measure 128 mm (5 inches) down from the hole marked in step 1 and 74 mm (2-7/8 inches) to the right and left and mark the 2 locations ([Figure 13](#)).
3. Drill a 5 mm (13/64 inch) hole at each of the 3 marked locations ([Figure 13](#)).

Important: Drill through only 1 wall of the tailgate.

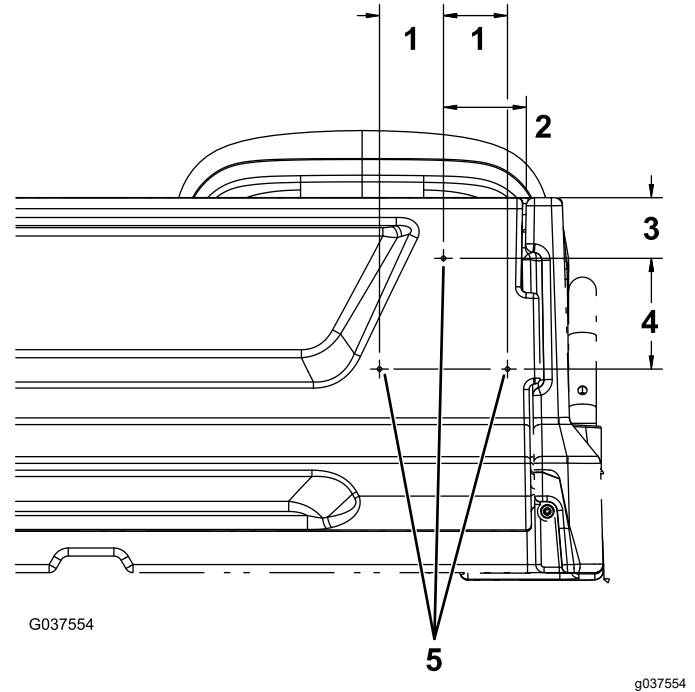


Figure 13

- | | |
|-------------------------|--------------------------------|
| 1. 74 mm (2-7/8 inches) | 4. 128 mm (5 inches) |
| 2. 95 mm (3-3/4 inches) | 5. Drill at these 3 locations. |
| 3. 70 mm (2-3/4 inches) | |

4. Install the speed plate to the tailgate using 3 pop rivets (3/16 x 15/16 inch) as shown in [Figure 14](#).

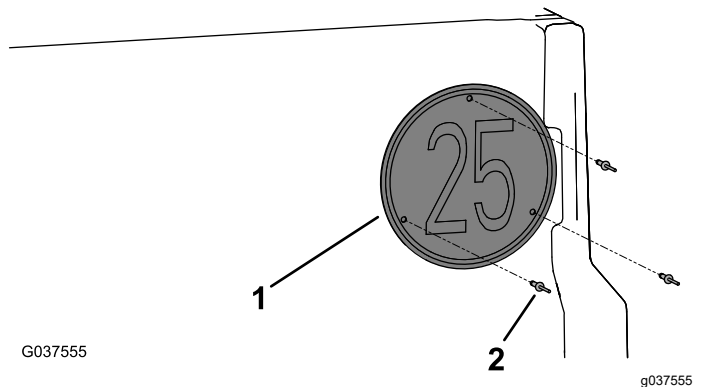


Figure 14

- | | |
|----------------|----------------------------------|
| 1. Speed plate | 2. Pop rivet (3/16 x 15/16 inch) |
|----------------|----------------------------------|

5

Installing the Speed Plates (MDX only)

Parts needed for this procedure:

3	Speed plate (25 km/h)
9	Pop rivet (3/16 x 15/16 inch)

Installing the Speed Plates to the Cargo Bed Sides

1. On the left side of the cargo bed, measure 136 mm (5-3/8 inches) from the right edge of the molding and 60 mm (2-3/8 inches) down from the top of the cargo bed, and mark this location (Figure 15).
2. Measure 128 mm (5 inches) down from the hole marked in step 1 and 74 mm (2-7/8 inches) to the right and left mark the 2 locations (Figure 15).
3. Drill a 5 mm (13/64 inch) hole at each of the 3 marked locations (Figure 15).

Important: Drill through only 1 wall of the cargo bed.

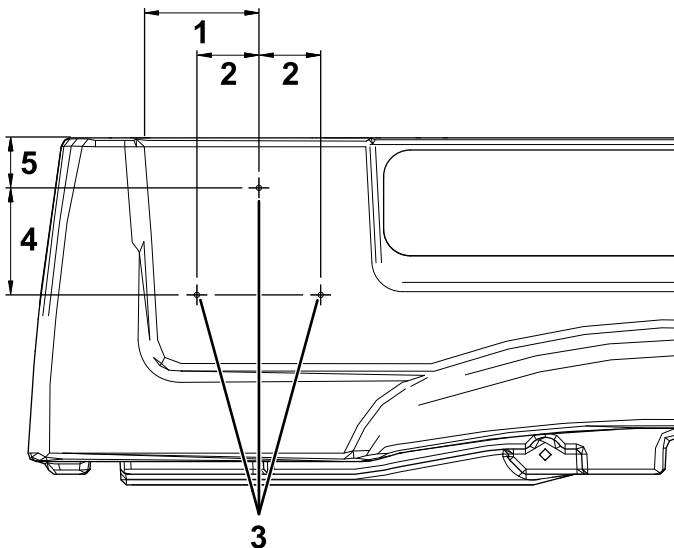


Figure 15

Left side of the machine shown

1. 136 mm (5-3/8 inches)
2. 74 mm (2-7/8 inches)
3. Drill at these 3 locations.
4. 128 mm (5 inches)
5. 60 mm (2-3/8 inches)

4. Install the speed plate to the cargo bed side using 3 pop rivets (3/16 x 15/16 inch) as shown in Figure 16.

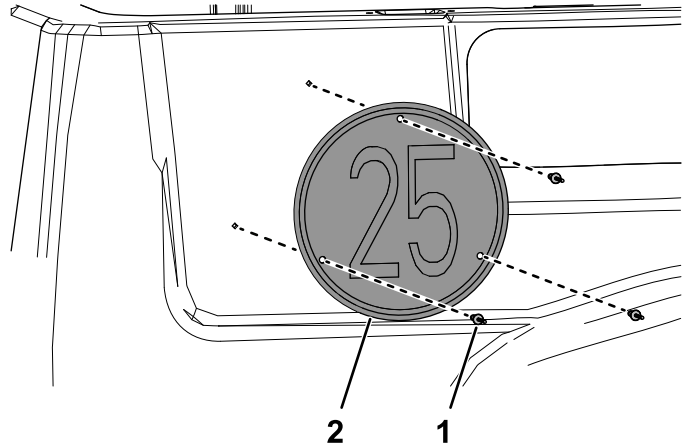


Figure 16

Left side of the machine shown

5. Repeat the procedure for the right side of the machine.

Installing the Speed Plate to the Tailgate

1. On the right side of the tailgate, measure 130 mm (5-1/8 inches) from the right edge of the tailgate and 60 mm (2-5/16 inches) from the top of the tailgate, and mark this location (Figure 17).

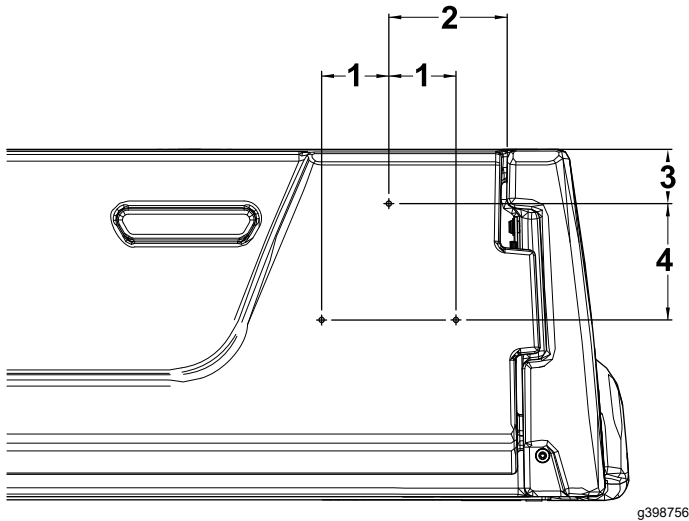


Figure 17

1. 74 mm (2-7/8 inches)
2. 130 mm (5-1/8 inches)
3. 60 mm (2-5/16 inches)
4. 128 mm (5 inches)
5. Drill at these 3 locations.

2. Measure 128 mm (5 inches) down from the hole marked in step 1 and 74 mm (2-7/8 inches) to the right and left mark 2 locations (Figure 17).
3. Drill a 5 mm (13/64 inch) hole at each of the 3 marked locations (Figure 17).

Important: Drill through only 1 wall of the tailgate.

4. Install the speed plate to the tailgate using 3 pop rivets (3/16 x 15/16 inch) as shown in Figure 18.

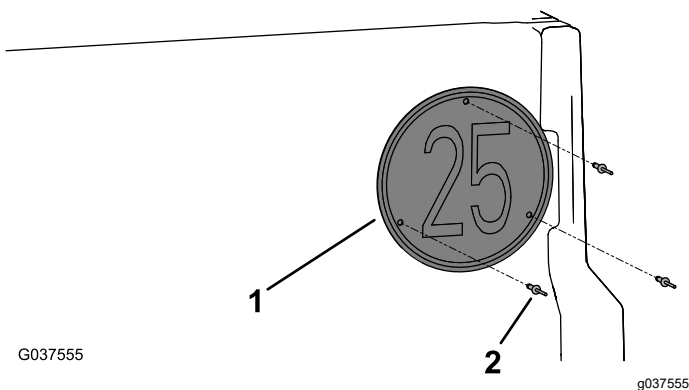


Figure 18

1. Speed plate
2. Pop rivet (3/16 x 15/16 inch)

6

Installing the Speed Decals (HDX only)

Parts needed for this procedure:

3	Speed decal (32 km/h)
---	-----------------------

Installing the Speed Decals to the Cargo Bed Sides

1. On the left side of the cargo bed, attach the speed decal to the area in between the second and third channels as shown in Figure 19.

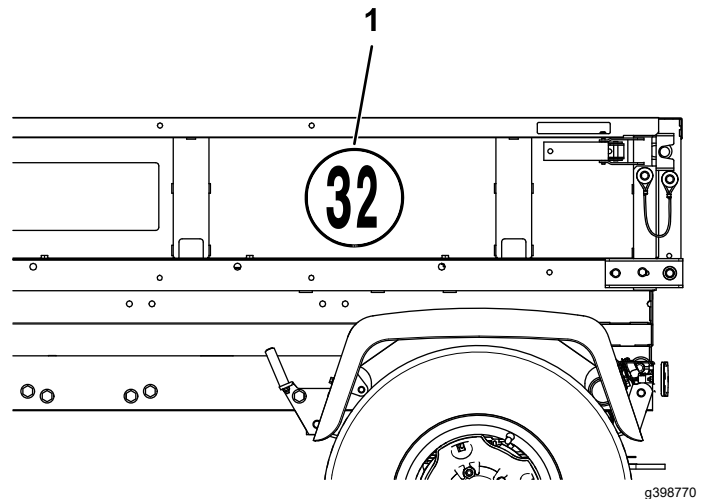


Figure 19

1. Speed decal (32 km/h)
2. Repeat the procedure for the right side of the machine.

Installing the Speed Decal to the Tailgate

On the tailgate, attach the speed decal to the area in between the rear logo and the right channel as shown in Figure 20.

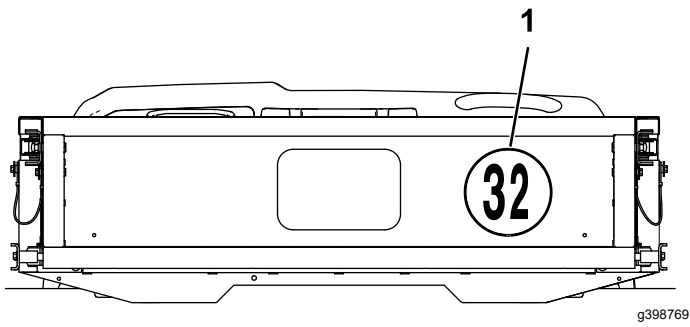


Figure 20

1. Speed decal (32 km/h)

7

Installing the Turn Signal Light Brackets (HDX only)

Parts needed for this procedure:

2	Turn signal light bracket
4	Carriage bolt (#10 x 1/2 inch)
4	Locknut (#10)

Procedure

1. Remove the 4 Phillips-head bolts and nuts that secure the turn signal lights to the hood ([Figure 21](#)).

Note: Retain the removed hardware for later installation.

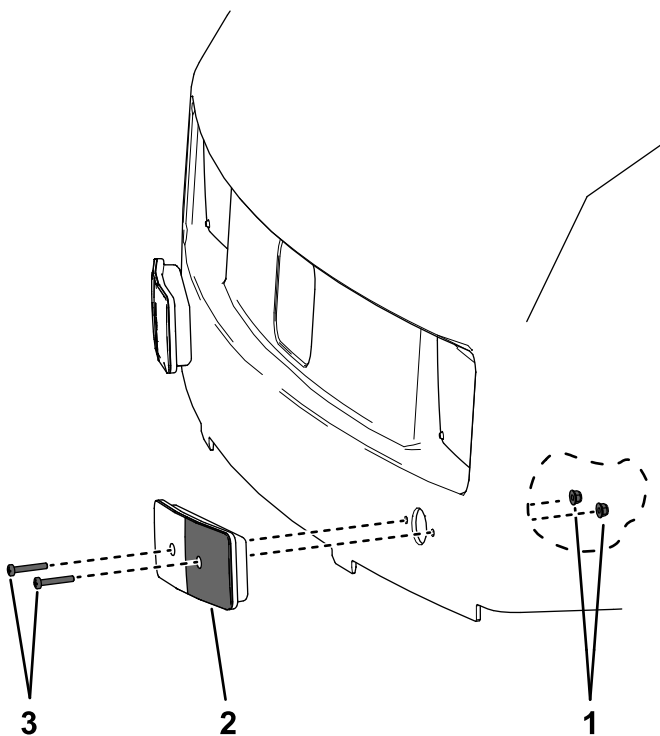


Figure 21

1. Phillips-head bolt
2. Turn signal light
3. Nut

2. On the inside of the hood, locate the 4 dots next to the turn signal light holes and drill 6 mm (1/4 inch) diameter holes as shown in Figure 22.

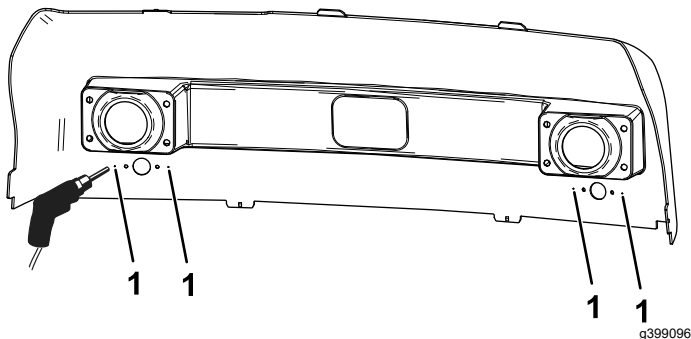


Figure 22

Inside of hood shown

1. Drill 4 6 mm (1/4 inch) holes.

3. Install the 2 turn signal brackets to the hood using 4 carriage bolts (#10 x 1/2 inch) and 4 locknuts (#10) (Figure 23).

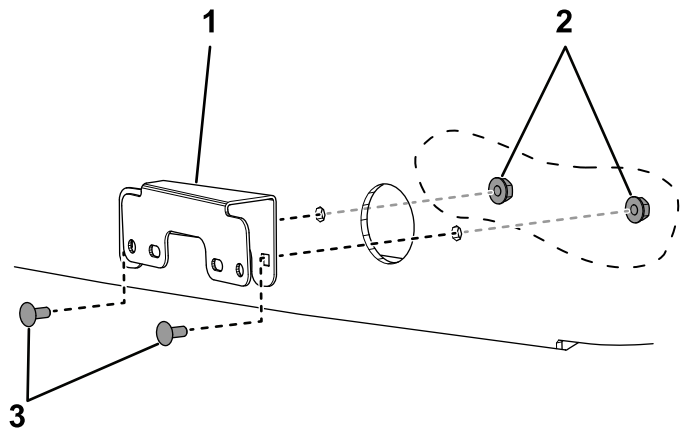


Figure 23

1. Turn signal bracket
2. Locknut (#10)
3. Carriage bolt (#10 x 1/2 inch)

4. Install the lights to the brackets using the hardware removed in step 1 (Figure 24).

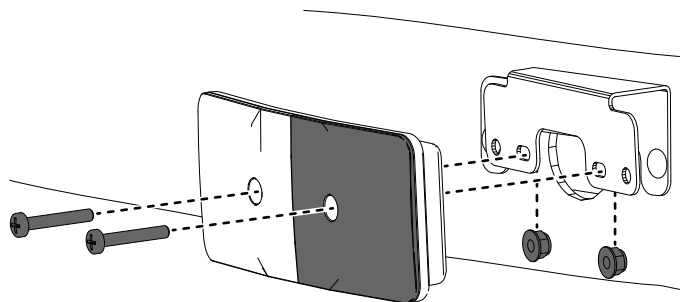


Figure 24

8

Completing the Installation

No Parts Required

Procedure

Install the negative battery cable to the battery.

9

Testing the Lights

No Parts Required

Procedure

Note: Get someone to help you see the lights as you test them.

1. Sit in the operator's seat and rotate the key to the ON position.
2. Press the light switch to the ON position.

Note: The headlights and the license plate lights should illuminate.

3. Move the turn signal to the left and right positions.

Note: The position lights should flash at the front of the machine and the taillight should flash at the back of the machine.

4. Step on the brake pedal.

Note: The brake lights should illuminate.

5. Rotate the key to the OFF position and remove the key.



Count on it.