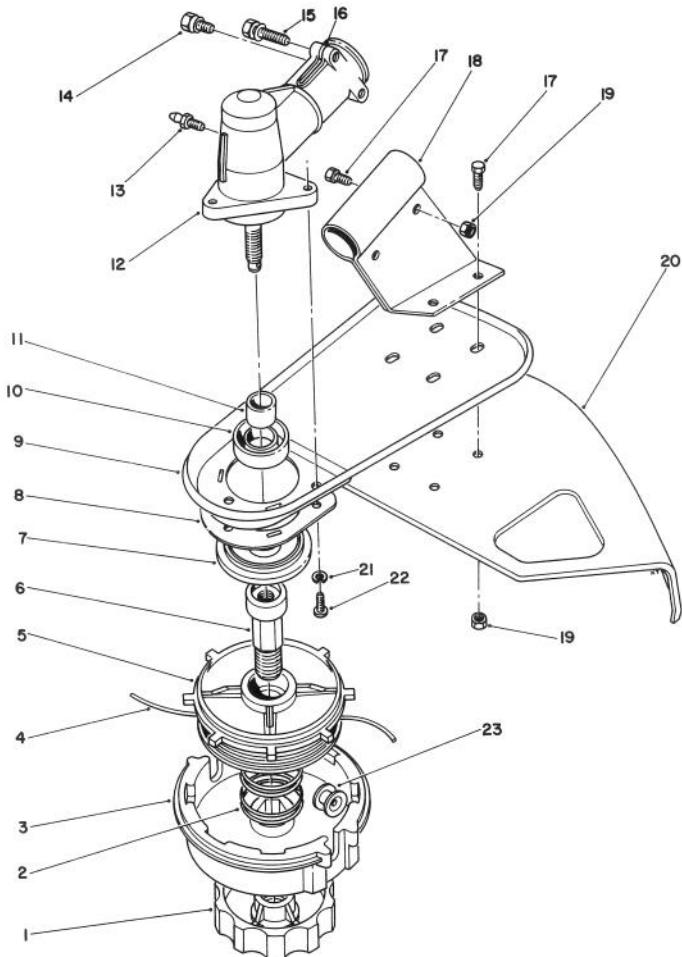



TORO

MODEL NO. 51644-7000001 & Up

**PARTS
CATALOG****TC 4000 GAS TRIMMER****TRIMMER HEAD & GEAR BOX ASSEMBLY**

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	57-5580	Knob — L.H.	1	10	48-2090	Seal — Oil	1
2	57-5620	Spring	1	11	48-2100	Sleeve — Spline	1
3	57-5600	Housing — Spool	1	12	52-5710	Gear Box Assembly (Incl. Ref. #10, 11, & 13-15)	1
4	43-5000	.080 Line (38 Ft.) (Optional)	1	13	53-7410	Fitting — Grease	1
*	46-2710	.080 Line (1 Lb.-400 Ft.) (Optional)	1	14	48-2150	Hex Hd. Machine Screw	1
*	41-6820	.095 Line (1 Lb.-285 Ft.) (Optional)	1	15	48-2130	Hex Hd. Machine Screw	2
*	46-2730	.105 Line (1 Lb.-235 Ft.) (Optional)	1	16	48-2140	Washer	2
*	52-5070	.105 Line (20 Ft.) (Optional)	1	17	32105-8	Hex Hd. Machine Screw	6
*	46-2740	.130 Line (3 Lb.-450 Ft.) (Optional)	1	18	47-2760	Bracket — Shield	1
5	57-5590	Spool — Inner	1	19	3296-2	Locknut	6
6	57-5610	Shaft	1	20	47-2810	Shield — Grass	1
7	48-2080	Dust Cap	1	21	55-8050	Lockwasher	3
8	57-5540	Guard — Grass Wrap	1	22	57-5550	Screw — Guard	3
9	47-2800	Support — Shield	1	23	57-5630	Eyelet	2
				*	57-5670	Head Assembly (Incl. Ref. #1-6, 23)	1


* Not Illustrated

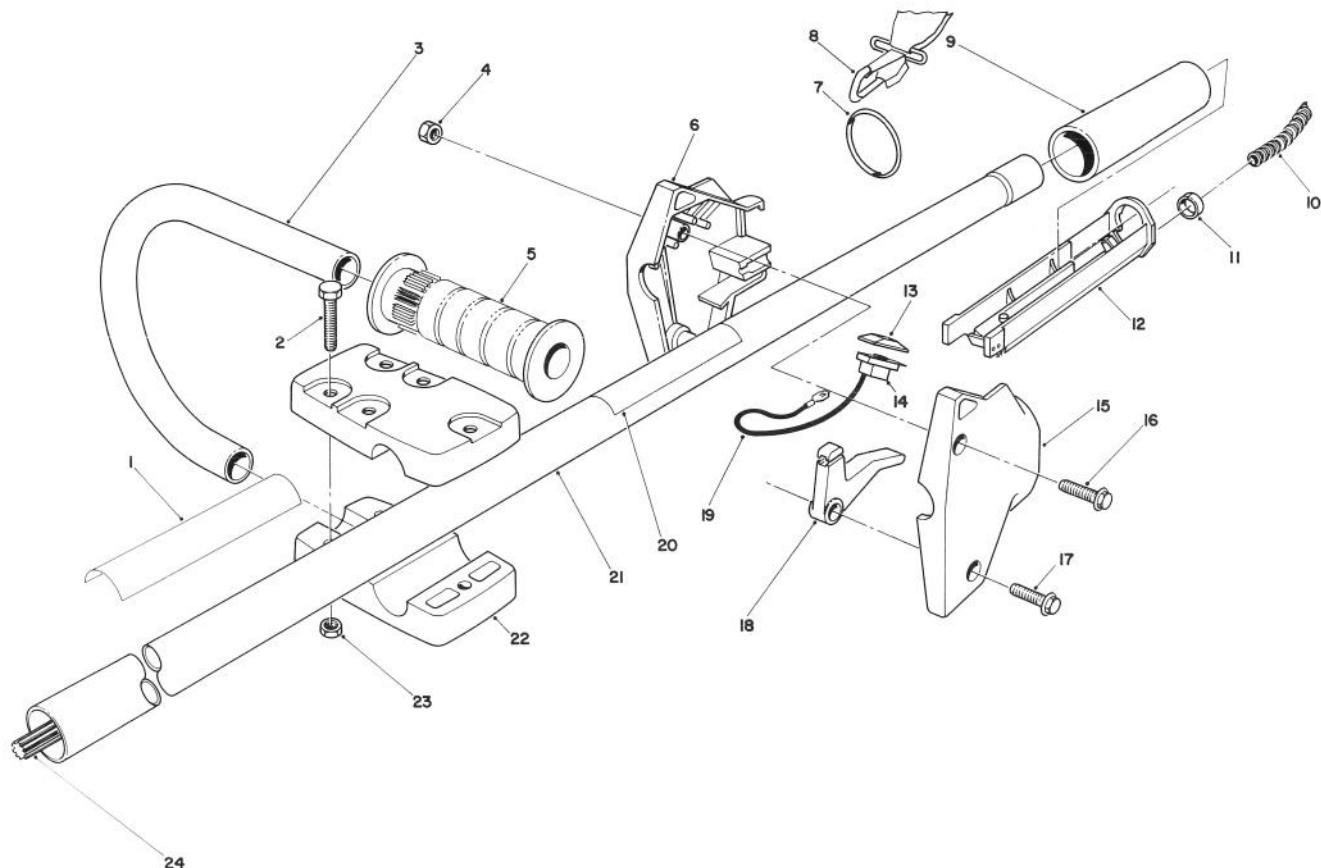

HANDLE ASSEMBLY


Ref. No.	Part No.	Description	No. Used
1	53-7170	Decal — TC 4000	1
2	3290-360	Hex Hd. Machine Screw	5
3	44-7530	Tube — Handle	1
4	3296-12	Locknut	2
5	235-24	Grip — Handle	1
6	53-7250	Housing — R.H.	1
7	44-7540	Ring — Harness	1
8	46-2951	Harness — Shoulder	1
9	53-7120	Grip — Rubber	1
10	55-8412	Cover — Cable	1
11	2412-48	Clip	2
12	53-7290	Trough	1

Ref. No.	Part No.	Description	No. Used
13	218-507	Cap — Switch	1
14	42-6000	Switch	1
15	53-7260	Housing — L.H.	1
16	32105-12	Hex Washer Hd. Screw	1
17	32105-13	Hex Washer Hd. Screw	1
18	53-7270	Lever — Throttle	1
19	53-7370	Wire Assembly	2
20	46-9480	Decal — Warning	1
21	53-7501	Tube Assembly	1
22	53-7080	Clamp — Handle	2
23	3296-2	Locknut	5
24	53-7210	Spline Shaft — Drive	1

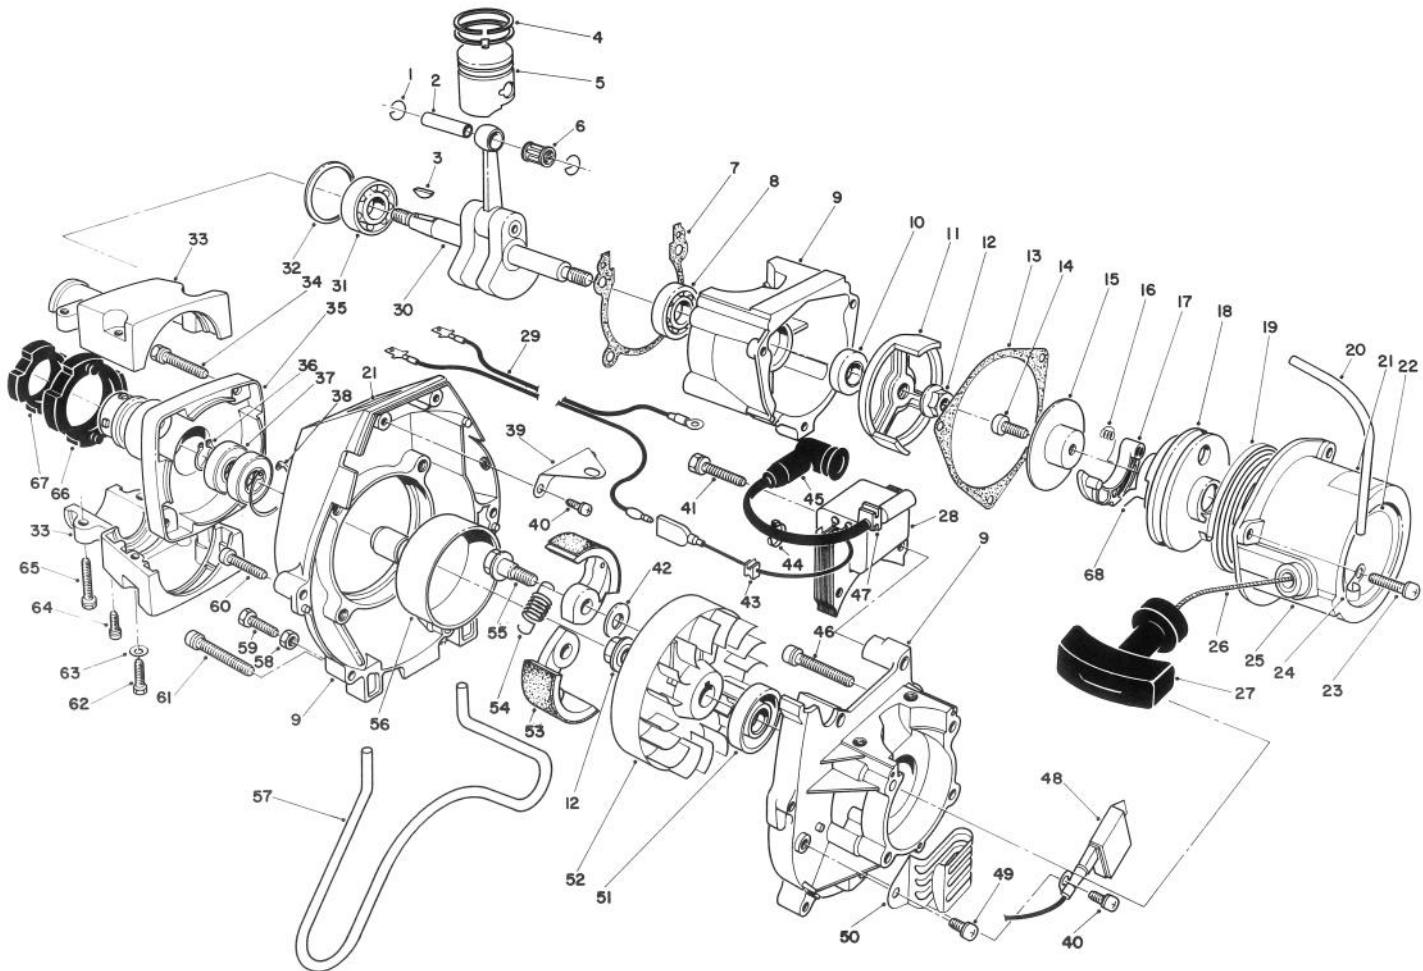

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	54-5920	Clip — Piston Pin	2
2	54-5910	Pin — Piston	1
3	54-4660	Key — Woodruff	1
4	54-5940	Ring — Piston	2
5	54-5900	Piston Set (Incl. Ref. #2)	1
6	54-5930	Bearing — Needle	1
7	54-5810	Gasket — Case	1
8	54-4360	Bearing	1
9	54-5660	Crankcase (Incl. Ref. #46 & 59)	1
10	54-4380	Seal — Oil	1
11	54-6290	Pulley — Starter	1
12	54-4670	Nut — Conical	2
13	54-6280	Gasket — Starter	1
14	54-6340	Screw	1
15	54-6350	Plate — Friction	1
16	54-6330	Spring — Return	1
17	54-6360	Ratchet	1
18	54-6310	Reel	1
19	54-6300	Spring — Spiral	1
20	54-6060	Tube — Fuel	1
21	53-7190	Decal — Hot Label	2
22	33-8340	Decal — Toro	1
23	54-6260	Screw	1
24	54-5340	Clamp	1
25	54-6270	Recoil Starter (Incl. Ref. #11, 14-19, 26, 27, & 67)	1
26	54-6370	Rope — Starter	1
27	54-5440	Knob — Starter	1
28	54-5960	Coil — Ignition	1
29			

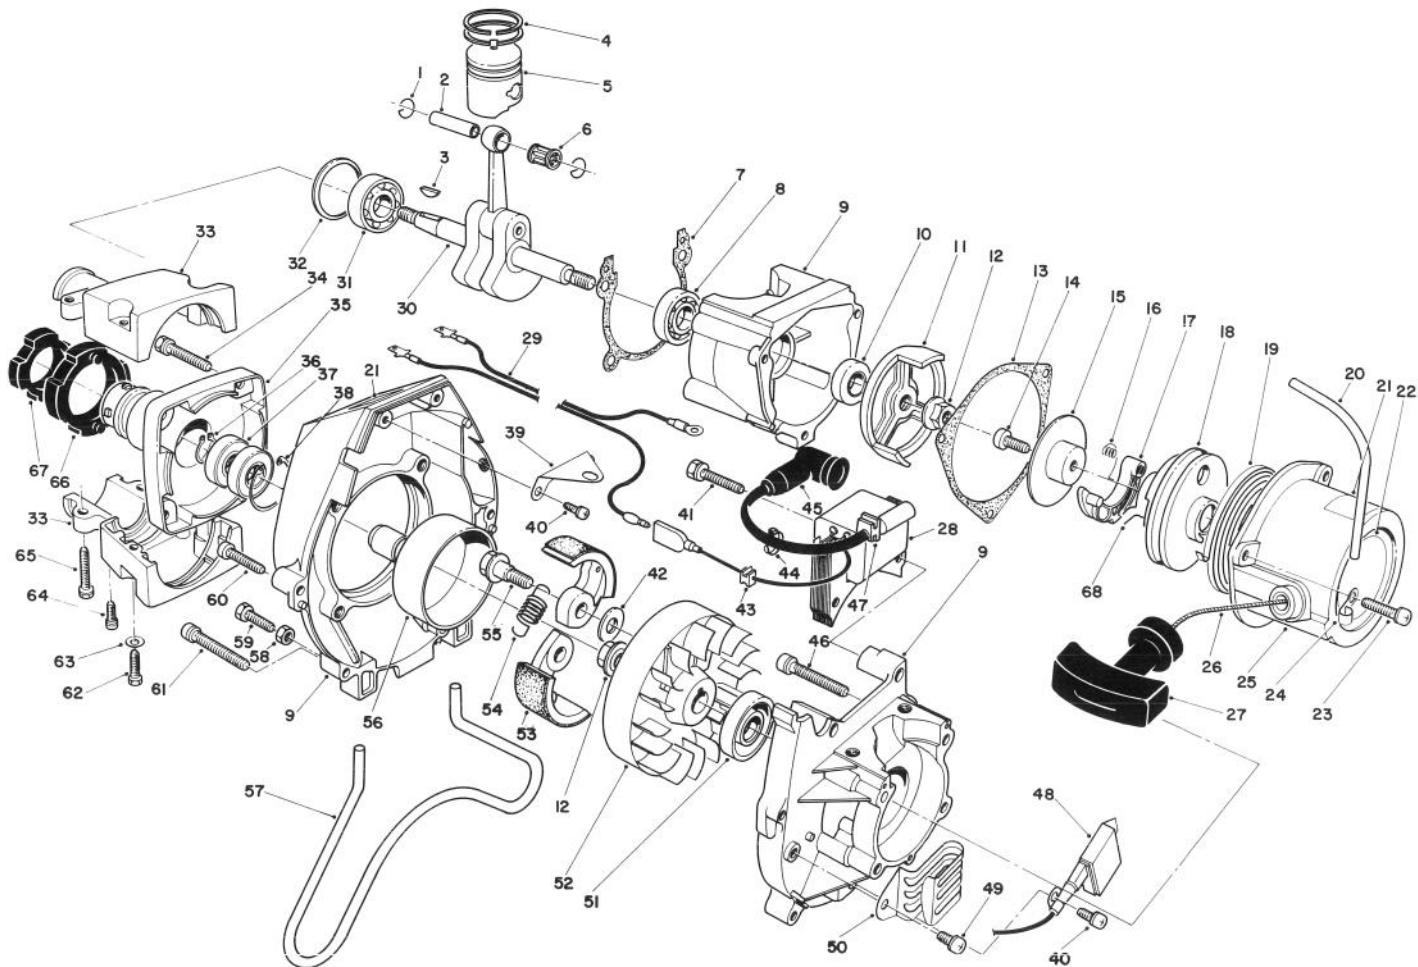


ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
42	56-6070	Washer	2
43	54-6010	Grommet	1
44	54-5990	Cable Tie	1
45	54-4730	Cap — Plug	1
46	54-5760	Screw & Washer	4
47	54-6000	Grommet	1
48	54-5980	Unit — Transistor	1
49	54-5790	Screw & Washer	1
50	54-5780	Clamp	1
51	54-5800	Seal — Oil	1
52	54-5970	Flywheel	1
53	54-6220	Shoe — Clutch	2
54	54-6230	Spring	1
55	56-6060	Bolt — Clutch	2
56	54-6530	Drum — Clutch	1

* Not Illustrated


Ref. No.	Part No.	Description	No. Used
57	53-7130	Guard — Tank	1
58	54-5840	Nut	2
59	54-5830	Bolt	2
60	54-5770	Screw	3
61	54-4330	Screw	1
62	54-6500	Bolt	2
63	54-6490	Washer — Spring	2
64	54-5730	Screw & Washer	1
65	54-5740	Bolt & Washer	2
66	54-6460	Rubber — Cushion	1
67	54-6470	Rubber — Cushion	1
68	54-6320	Spring — Friction	1
*	54-6240	Clutch Assembly (Incl. Ref. #53 & 54)	1
*	52-5760	Engine Assembly (Complete)	1

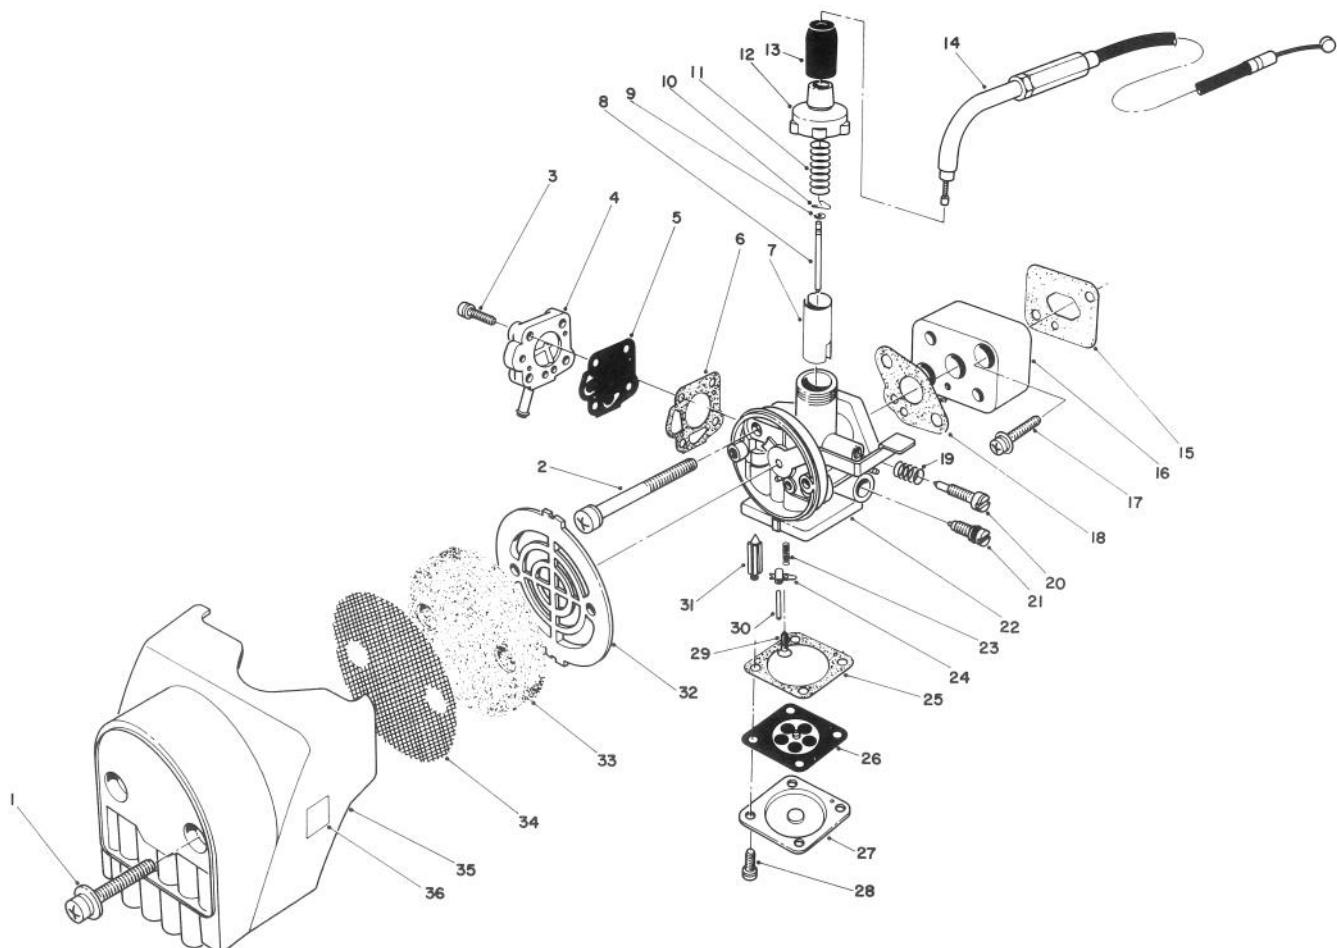

CARBURETOR & AIR CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54-5150	Screw & Washer	2	21	54-6100	Main Jet Needle Assembly	1
2	54-4870	Screw & Washer	2	22	54-6070	Carburetor Assembly (Incl. Ref. #3-13, 19-21, & 23-31)	1
3	54-5040	Screw & Washer	4	23	54-4990	Spring — Inlet Valve	1
4	54-6120	Pump Cover Assembly	1	24	54-5060	Arm — Float	1
5	54-6110	Diaphragm — Pump	1	25	54-5000	Gasket — Main Diaphragm	1
6	54-5010	Gasket — Pump Cover	1	26	54-6130	Main Diaphragm Assembly	1
7	54-6080	Valve — Throttle	1	27	54-5100	Cover — Main Diaphragm	1
8	56-6080	Jet Needle Assembly	1	28	54-5110	Screw & Washer	4
9	54-4930	Retainer — Spring	1	29	54-5080	Screw — Float Pin	1
10	54-7090	Clip — Needle	1	30	54-5070	Pin — Float	1
11	54-4920	Spring — Throttle	1	31	54-5050	Valve — Float	1
12	54-4910	Cap — Mixing Chamber	1	32	54-5200	Grid	1
13	54-4900	Cap — Rubber	1	33	54-5190	Element	1
14	54-6520	Wire — Throttle	1	34	54-5180	Screen	1
15	54-6030	Gasket — Insulator	1	35	54-5160	Cover — Air Cleaner	1
16	54-6040	Insulator	1	36	54-5170	Label — Choke	1
17	54-6050	Screw & Washer	2	*	54-5140	Air Cleaner Complete (Incl. Ref. #32-36)	1
18	54-4850	Gasket — Carburetor	1				
19	54-4960	Spring — Adjusting Screw	1				
20	54-6090	Screw — Adjusting	1				


* Not Illustrated

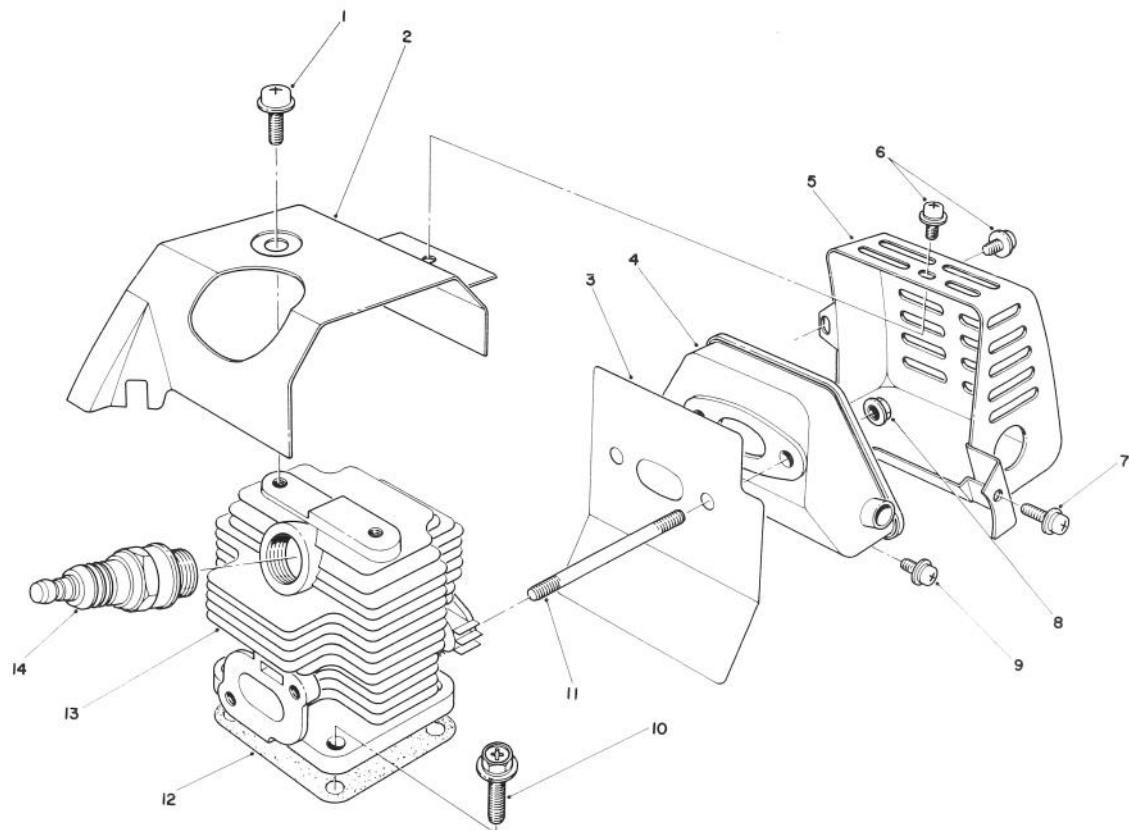

CYLINDER & MUFFLER CLEANER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	54-5850	Screw & Washer	1
2	54-5860	Cover - Cylinder	1
3	54-6190	Gasket - Muffler	1
4	54-6180	Muffler	1
5	54-6160	Cover - Muffler	1
6	54-6150	Screw & Washer	2
7	54-6210	Screw & Washer	1


Ref. No.	Part No.	Description	No. Used
8	54-6170	Flange Nut	2
9	54-6200	Screw & Washer	1
10	54-4790	Bolt & Washer	4
11	54-5880	Bolt - Stud	2
12	54-5890	Gasket - Cylinder	1
13	54-5870	Cylinder (Incl. Ref. #11)	1
14	45-0320	Spark Plug	1

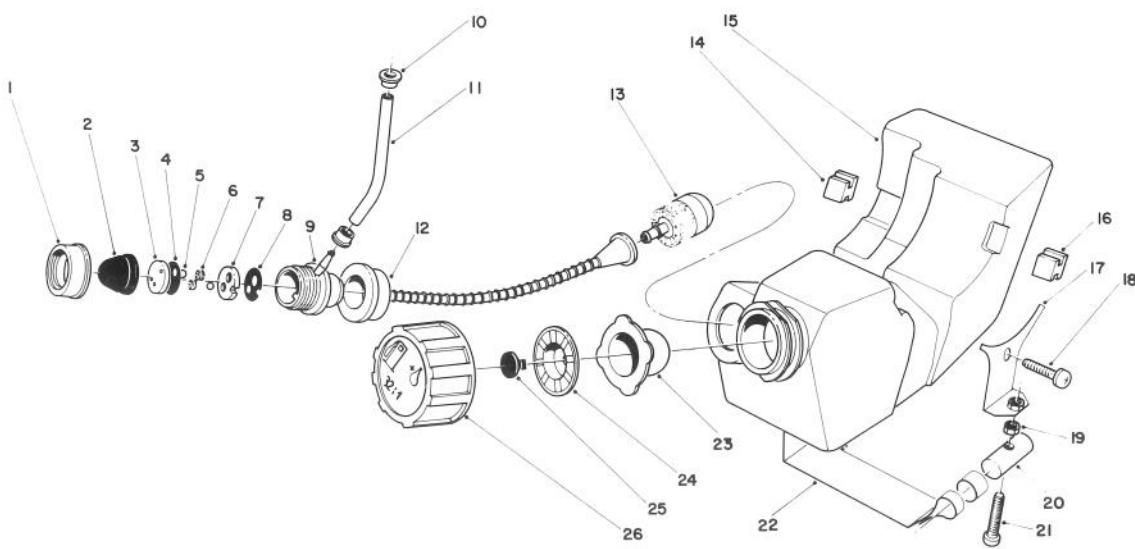

FUEL TANK ASSEMBLY


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	54-5510	Cap — Pump	1	15	54-6410	Fuel Tank Assembly (Incl. Ref. #1-9, 12, 13, 23-26)	1
2	54-5520	Cap	1	16	54-6400	Pad	2
3	54-5530	Seat — Valve	1	17	54-6420	Hanger — Tank	1
4	54-5460	Gasket	1	18	54-6260	Screw & Washer	1
5	54-5480	Ball	2	19	54-5840	Nut	1
6	54-5470	Sponge	2	20	54-6430	Bar	1
7	54-5490	Seat — Valve	1	21	54-4330	Screw	1
8	54-5500	Gasket	1	22	54-6440	Band — Tank	1
9	54-5570	Primer Pump Assembly (Incl. Ref. #1-8)	1	23	54-5630	Gasket	1
10	54-5550	Clip	2	24	54-5620	Holder	1
11	54-6390	Tube — Fuel	1	25	54-5610	Valve — Breather	1
12	54-5580	Hose — Suction	1	26	54-5600	Cap — Tank	1
13	54-5540	Filter — Fuel	1	*	54-5590	Tank Cap Assembly (Incl. Ref. #23-26)	1
14	55-8130	Pad	2				

* Not Illustrated

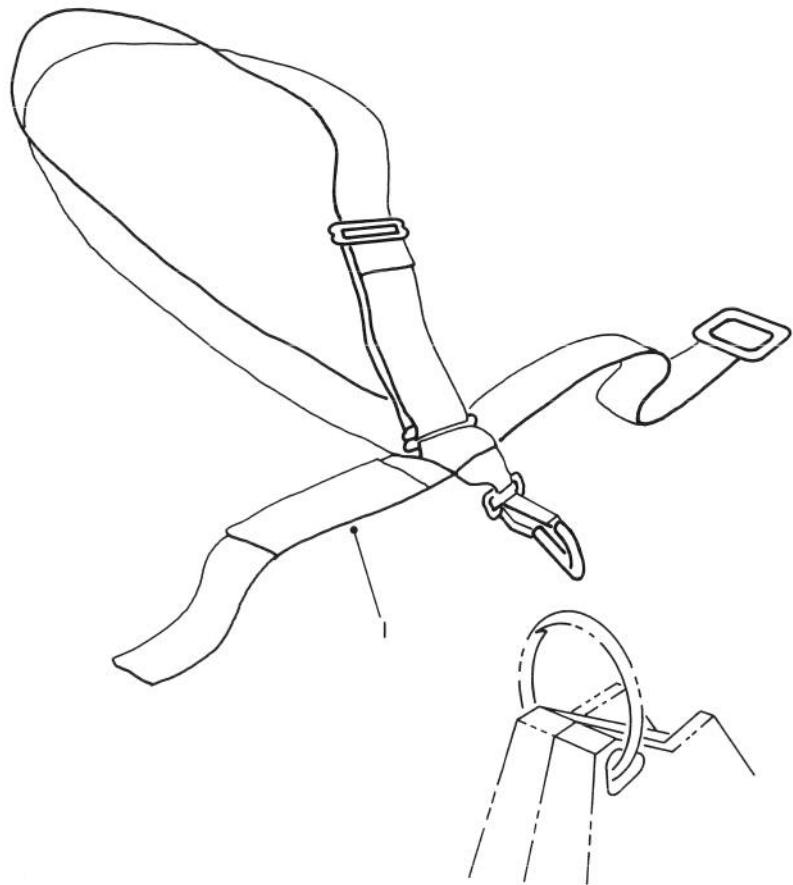

DELUXE SHOULDER BELT HARNESS (Optional)


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	46-2961	Deluxe Harness Assembly	1				

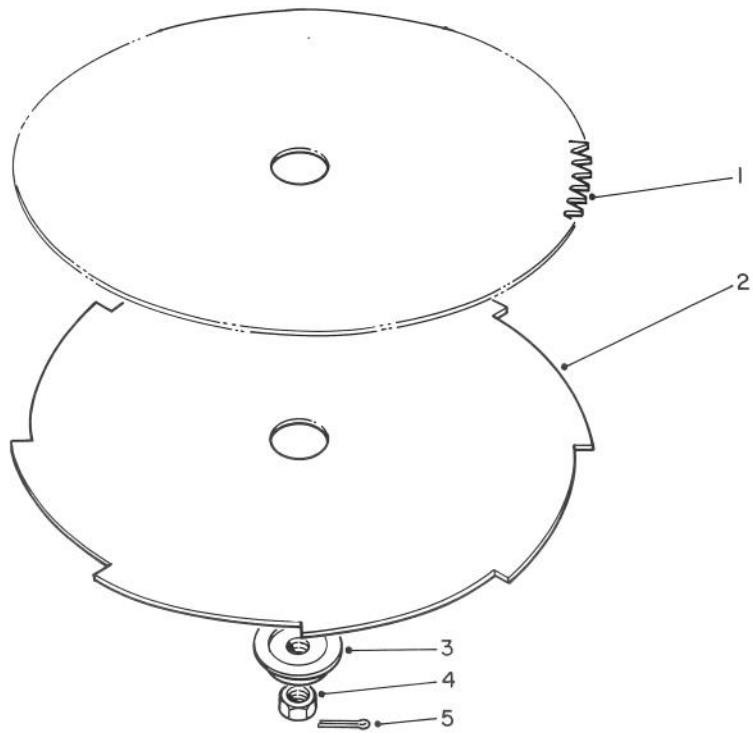

SAW BLADE AND BRUSH BLADE (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	51-1230	8" Dia. Blade (80 Tooth)	1	5	3272-3	Cotter Pin	1
2	51-1240	8" Dia. Blade (8 Tooth)	1	* 41-4440	Blade Adapter Kit (Incl. Ref. #3-5)		1
3	41-6890	Adapter — Blade	1				
4	41-5410	Nut	1				


* Not Illustrated

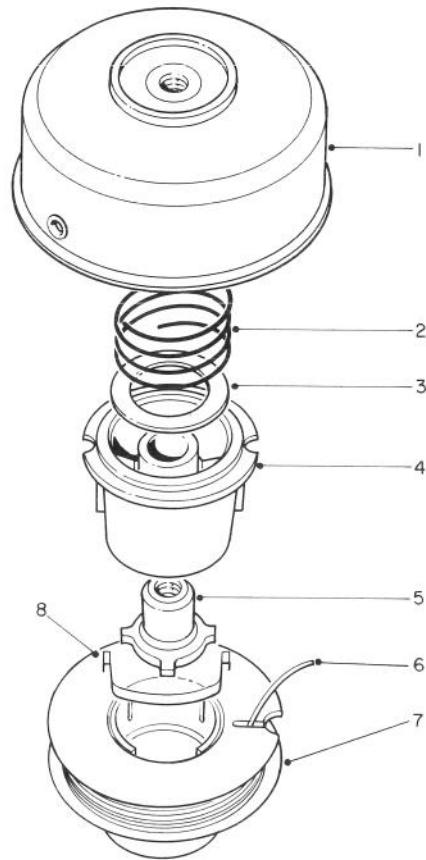

SINGLE LINE TAP & TRIM HEAD NO. 41-6220 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	41-6230	Drum w/Eyelet	1	6	41-6820	1 Lb. Filament Line Pack (.095)	1
2	33-6460	Spring	1	7	46-2830	Prewound Spool	1
3	3256-42	Washer	1	*	29-7380	Empty Spool	1
4	33-6230	Spool Core	1	*	41-6830	3 Lb. Line Bulk (.095)	1
5	33-6470	Driver	1	8	33-8940	Saddle Clip	1


* Not Illustrated

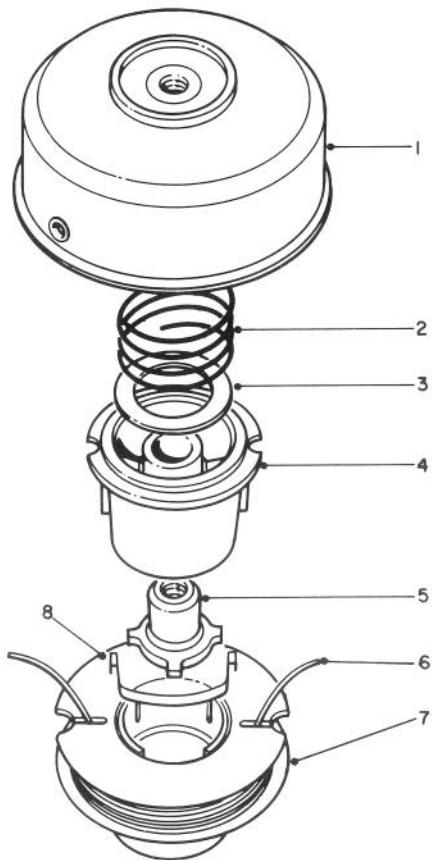

DUAL LINE TAP & TRIM HEAD NO. 46-2800 (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	46-2650	Drum Assembly w/Eyelet	1	6	43-5000	.080 Filament Line in Coil (38 Ft.)	1
2	33-6460	Spring	1	*	46-2710	.080 Filament Line in 1 Lb. Pkg. (400 Ft.)	1
3	3256-42	Washer	1	7	46-2820	Prewound Spool	1
4	33-6230	Spool Core	1	8	33-8940	Saddle — Spool Cap	1
5	33-6470	Driver L.H.	1				

* Not Illustrated

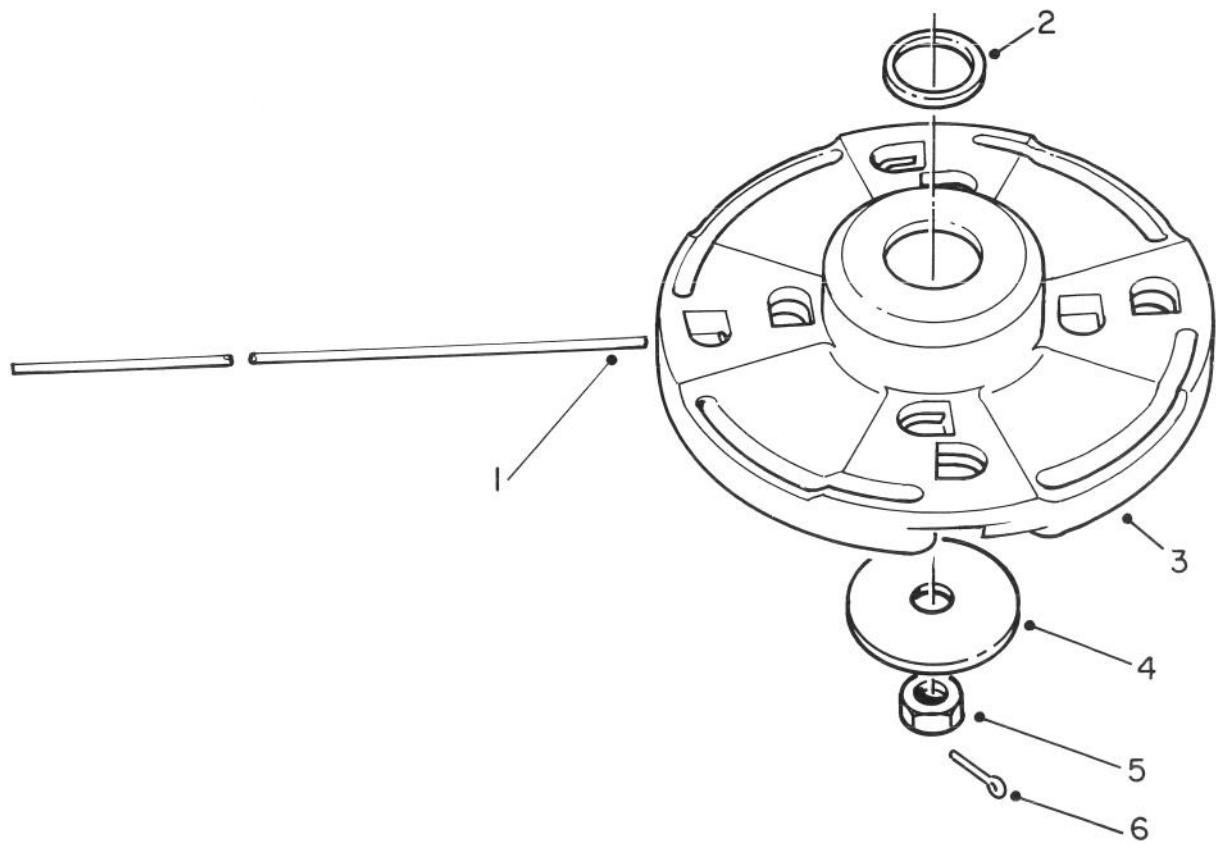


FIXED LINE HEAD (Optional)

Ref. No.	Part No.	Description	No. Used
1	47-2260	.105 (100 Pcs.) (Optional)	1
*	46-2730	.105 Line (1 Lb.-235 Ft.) (Optional)	1
*	42-0580	.130 Line (100 Pcs.) (Optional)	1
*	46-2740	.130 Line (3 Lb.-450 Ft.) (Optional)	1

Ref. No.	Part No.	Description	No. Used
2		Spacer	1
3	46-2810	Head Assembly (Incl. Ref. #2)	1
4	41-4430	Washer — Plate	1
5	41-5410	Hex Nut	1
6	3272-3	Cotter Pin	1


* Not Illustrated

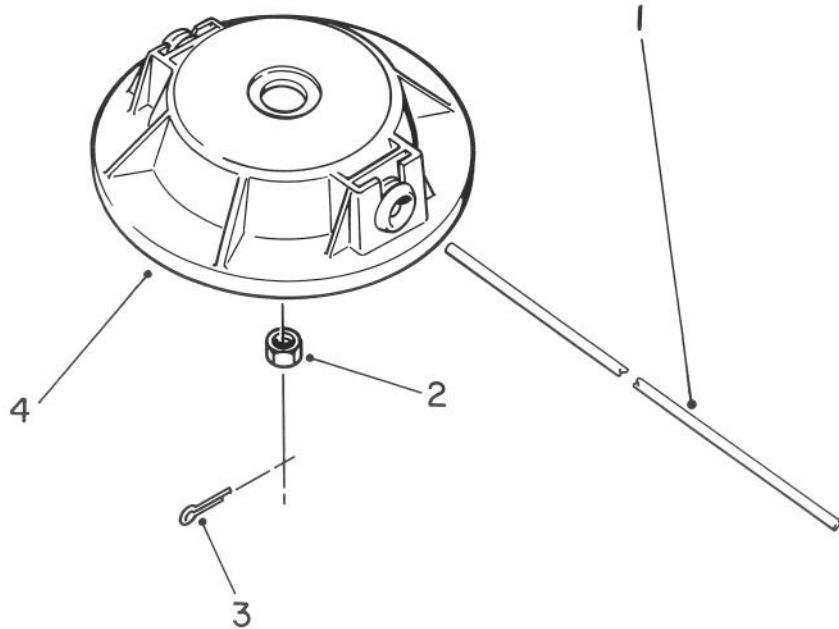

FIXED LINE HEAD (Optional)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	47-2260	.105 (100 Pcs.) (Optional)	1	2	41-5410	Hex Nut	1
*	46-2730	.105 Line (1 Lb.-235 Ft.) (Optional)	1	3	3272-1	Cotter Pin	1
				4	51-2760	Head Assembly	1

* Not Illustrated

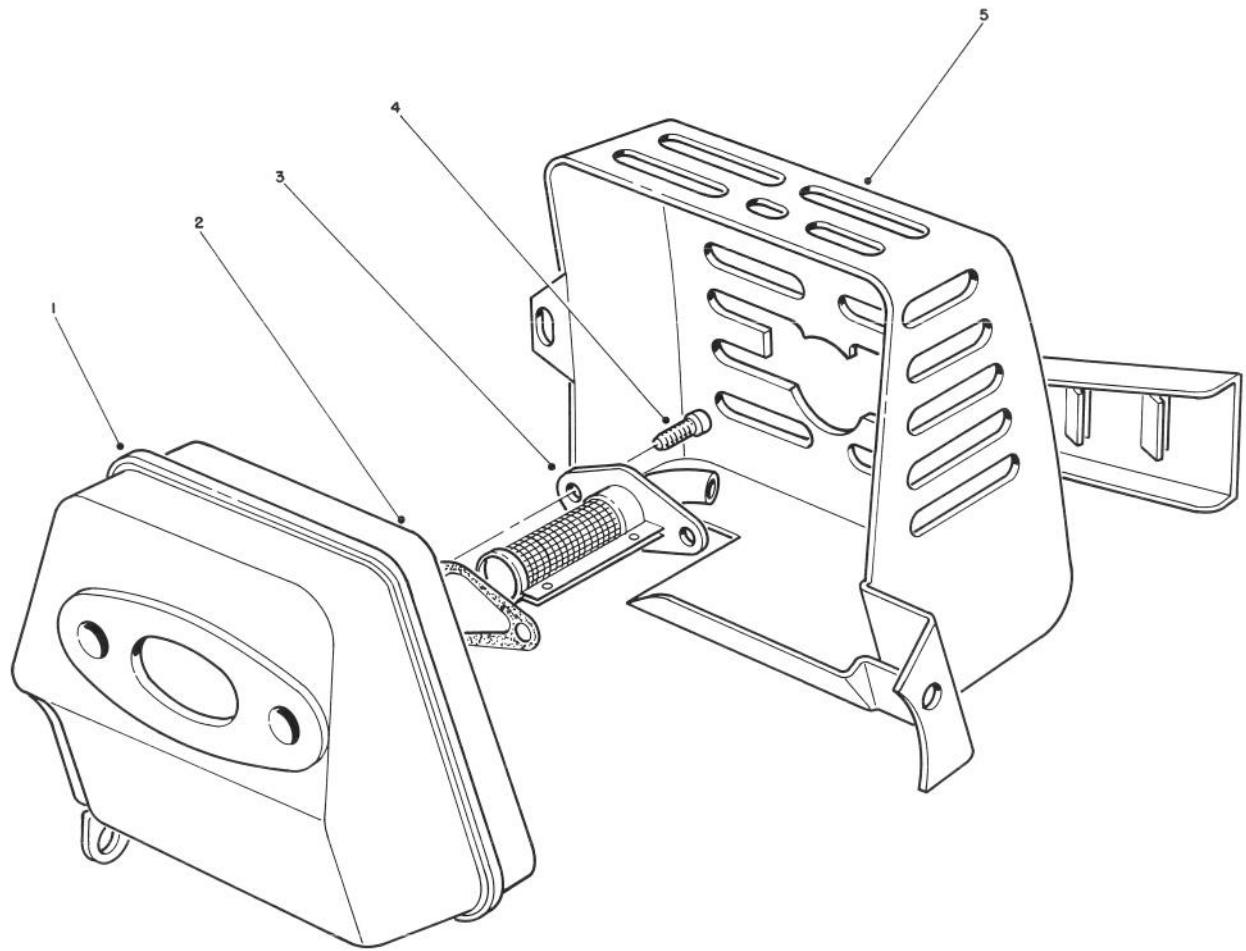

SPARK ARRESTOR MUFFLER KIT 52-5090 (Optional)

Ref. No.	Part No.	Description	No. Used
1	61-9230	Muffler	1
2	61-9270	Gasket	1
3	61-9240	Spark Arrestor	1

Ref. No.	Part No.	Description	No. Used
4	61-9220	Screw & Washer	2
5	61-9250	Cover — Muffler	1

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The Trimmer has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located in front of throttle lever on bottom side of drive shaft tube. In any correspondence concerning the trimmer, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the trimmer.
2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

TORO GAS TRIMMER/WEEDER A TWO YEAR LIMITED WARRANTY

The Toro Company promises to repair your TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years
Residential Products Used Commercially 90 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write: TORO Consumer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason

you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

MAINTENANCE RECORD