



Count on it.

Operator's Manual

32in Bagger

**2011 and After TimeCutter® Z3000 Series
Riding Mower**

Model No. 79333—Serial No. 311000001 and Up

Introduction

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

You may contact Toro directly at www.Toro.com for product and accessory information, help finding a dealer, or to register your product.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 identifies the location of the model and serial numbers on the product. Write the numbers in the space provided.

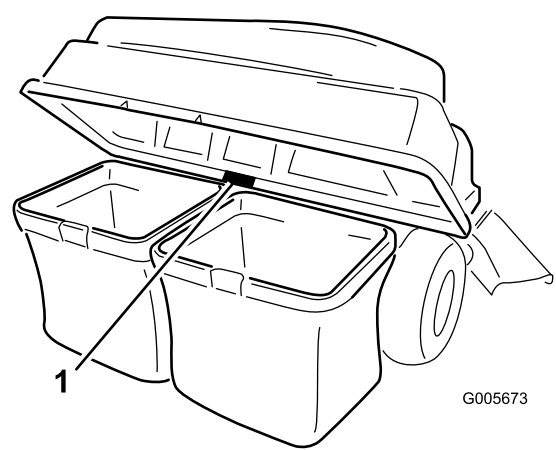


Figure 1

1. Model and serial number location

Model No. _____

Serial No. _____

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 2), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



Figure 2

1. Safety alert symbol

This manual uses 2 other words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Contents

Introduction.....	2
Safety	3
Towing Safety.....	3
Safety and Instructional Decals	4
Setup.....	5
1 Installing the Weight	6
2 Installing the Rear Guard	8
3 Installing the Bagger Frame.....	8
4 Assembling the Bagger Top.....	10
5 Installing the Bagger Top	10
6 Installing the Chute.....	11
7 Connecting with the Discharge Tube	13
8 Installing the Deck Ring.....	13
9 Installing the Blade	14
Operation.....	14
Emptying the Grass Bags.....	14
Clearing Obstructions from the Bagger.....	15
Removing the Bagger	15
Operating Tips	15
Maintenance.....	17
Recommended Maintenance Schedule(s)	17
Inspecting the Bagger Attachment	17
Inspecting the Mower Blades	17
Caring for the Grass Bags	18
Cleaning the Bagger Attachment.....	18
Storage.....	18
Storing the Bagger Attachment	18

Safety

⚠ DANGER

Engines can become hot when they are operating. Severe burns can occur from contacting hot surfaces.

Allow engines, especially the muffler, to cool before touching.

⚠ DANGER

Debris, such as leaves, grass, or brush can catch fire. A fire in the engine area can cause personal injury and property damage.

- Keep the engine and muffler area free of debris accumulation.
- Take care when opening the bagger cover to keep debris from falling onto the engine and muffler area.
- Allow the machine to cool before storing it.

Towing Safety

- Do not attach towed equipment except at the hitch point.
- Follow the attachment manufacturer's recommendation for weight limits for towed equipment and towing on slopes.
- Never allow children or others in or on towed equipment.
- On slopes, the weight of the towed equipment may cause loss of traction and loss of control. Reduce towed weight and slow down.
- Stopping distance increases with the weight of the towed load. Travel slowly and allow extra distance to stop.
- Make wide turns to keep the attachment clear of the machine.
- Do not tow a load that weighs more than the towing machine.

Safety and Instructional Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.



109-6809

1. Crushing hazard of hand—do not remove the whole bagger from the machine; open the bagger top and then remove the bag(s) from the bagger. Do not remove the bagger top when it is closed; open the bagger top and then remove it.



109-7076

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	Bolt (3/8 x 1-1/4 inches)	4	Install the weight.
	Lock nut (3/8 inch)	4	
	Weight mounting bracket, left	1	
	Weight mounting bracket, right	1	
	Washers	4	
	Weight holding bracket	1	
	Bolt (3/8 x 1 inch)	2	
	Flat weight	1	
	Suitcase weight	1	
	Keyed cross bar	1	
2	Rear guard	1	Install the rear guard.
	Self tapping screw (5/16 x 3/4 inch)	4	
3	Bagger frame support bracket	1	Install the bagger frame.
	Support spacer plate	1	
	Self tapping screw (5/16 x 3/4 inch)	2	
	Bolt (5/16 x 1 inch)	2	
	Lock nut (5/16 inch)	4	
	Angled bracket	1	
	Carriage bolt (5/16 x 3/4 inch)	2	
	Bagger frame	1	
	Clevis pin (1/2 x 2-1/4 inch)	1	
	Hair pin cotter	5	
	Rod	2	
	Washer	4	
4	Bagger top	1	Assemble the bagger top.
	Bagger screen	1	
5	Grass Bag	2	Install the bagger top.
	Upper bagger tube	1	
6	Cut off baffle	1	Install the chute.
	Chute	1	
7	No parts required	–	Connect with the discharge tube.
8	Deck ring	4	Install the deck ring
	Bolt (5/16 x 3/4 inch)	8	
	Lock nut (5/16 inch)	8	
9	Hi-Lift blade	1	Install the blade.

1

Installing the Weight

Parts needed for this procedure:

4	Bolt (3/8 x 1-1/4 inches)
4	Lock nut (3/8 inch)
1	Weight mounting bracket, left
1	Weight mounting bracket, right
4	Washers
1	Weight holding bracket
2	Bolt (3/8 x 1 inch)
1	Flat weight
1	Suitcase weight
1	Keyed cross bar

Procedure

⚠ CAUTION

The bagger changes the weight distribution of the machine. Operating the machine without the front weights may cause an unstable condition which could result in a loss of control.

Ensure the front weights are properly installed before operating the machine with the bagger attachment.

1. Locate the forward bolts on the underside of the frame (Figure 3 and Figure 4). Remove the two bolts (3/8 x 1 inch) and two locknuts (3/8 inch). Retain the lock nuts.

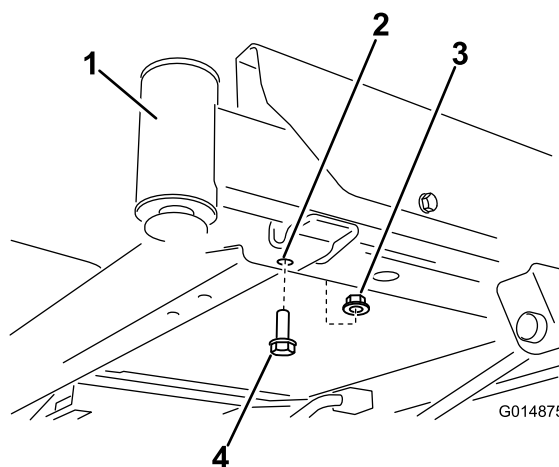


Figure 3

1. Front right caster (caster fork and wheel not shown for clarity)
2. Forward hole, right side
3. Bolt (3/8 x 1 inch)
4. Locknut (3/8 inch)

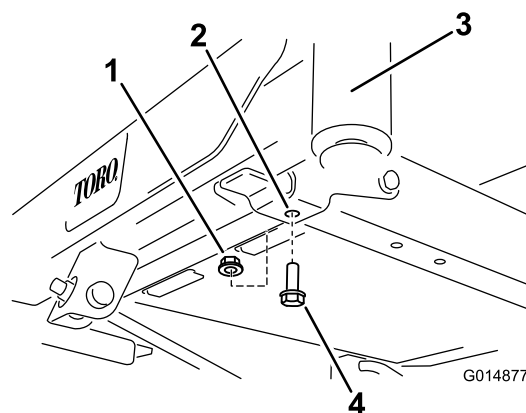


Figure 4

1. Locknut (3/8 inch)
2. Forward hole, left side
3. Front left caster (caster fork and wheel not shown for clarity)
4. Bolt (3/8 x 1 inch)

2. Locate the left and right weight mounting brackets in loose parts. Start by installing the left bracket to the under side of the frame.
3. Secure the bracket to the frame using two bolts (3/8 x 1-1/4 inches), two washers and two lock nuts (3/8 inch) (Figure 5). One locknut is from loose parts and the other is reused from earlier removal.

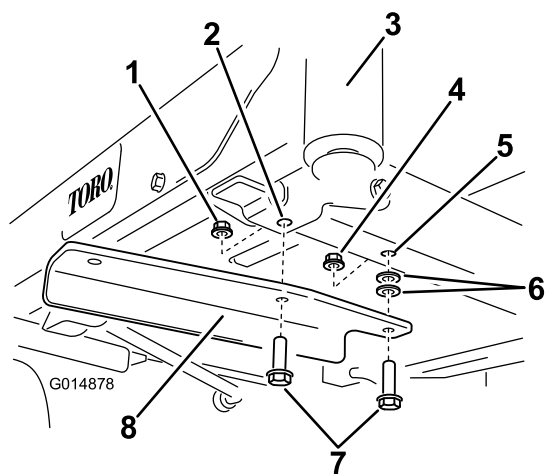


Figure 5

1. Locknut (3/8 inch), existing
2. Forward hole, left side
3. Front left castor (castor fork and wheel not shown for clarity)
4. Locknut (3/8 inch), loose parts
5. Hole, existing in frame
6. Washer
7. Bolt (3/8 x 1-1/4 inches)
8. Left mounting bracket parts

4. On the right side of the machine install the right weight mounting bracket.

- For machines without a foot assist lift pedal: secure the bracket using two bolts (3/8 x 1-1/4 inches), two washers and two lock nuts (3/8 inch) (Figure 6). One locknut is from loose parts and the other is reused from earlier removal.

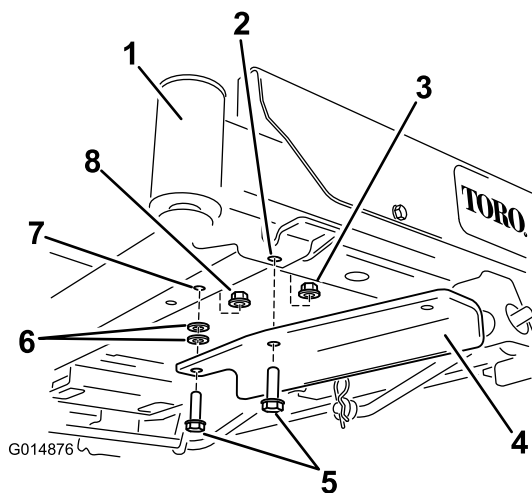


Figure 6

1. Front right castor (castor fork and wheel not shown for clarity)
2. Forward hole, right side
3. Locknut (3/8 inch), existing
4. Right mounting bracket
5. Bolt (3/8 x 1-1/4 inches)
6. Washer
7. Hole, existing in frame
8. Locknut (3/8 inch), loose parts

- For machines with a foot assist lift pedal: The washers will not be needed. Instead, remove

the forward fasteners in the foot assist lift pedal bracket. Secure the bracket using two bolts and two lock nuts (Figure 7). One locknut is from loose parts and the other is reused from earlier removal.

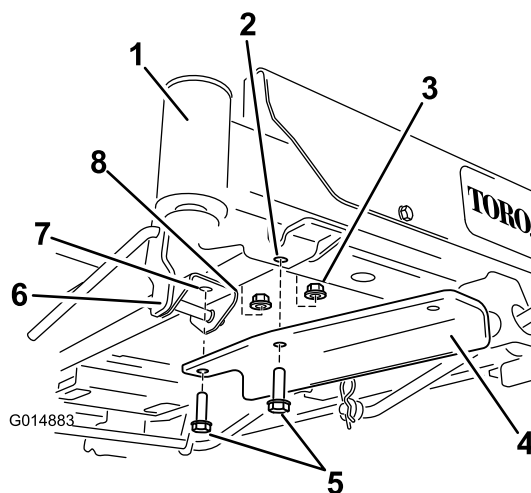


Figure 7

1. Front right castor (castor fork and wheel not shown for clarity)
2. Forward hole, right side
3. Locknut (3/8 inch), existing
4. Right mounting bracket
5. Bolt (3/8 x 1-1/4 inches)
6. Foot assist lift pedal bracket
7. Hole, existing in bracket
8. Locknut (3/8 inch), loose parts

5. Install the weight holding bracket to the mounting brackets (Figure 8). Align the inboard holes in the bracket with the mounting brackets installed previously. Make sure the bracket is centered on the frame. Secure with two bolts (3/8 x 1 inch) and two lock nuts (3/8 inch).

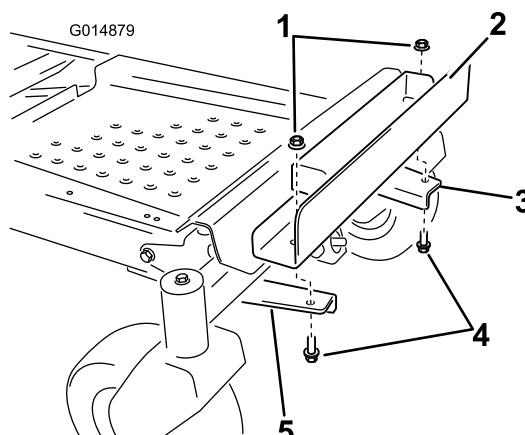


Figure 8

1. Locknut (3/8 inch)
2. Weight holding bracket
3. Left mounting bracket
4. Bolt (3/8 x 1 inch)
5. Right mounting bracket

6. Install a flat weight to the holding bracket and move it rearward, flush with the bracket (Figure 9).

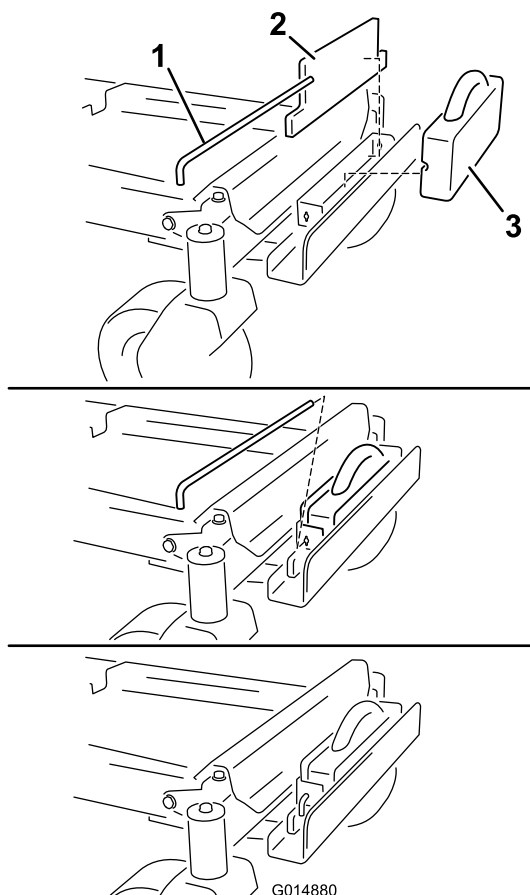


Figure 9

1. Flat weight
2. Suitcase weight
3. Keyed cross bar

7. Install a suitcase weight in front of the flat weight (Figure 9). The groove in the suitcase weight should be facing rearward.
8. Secure the weights to the bracket with a keyed cross bar (Figure 9). Install the bar and rotate it 90 degrees downward to lock it in place.
9. Once all weights and brackets have been installed, go back and check that all fasteners are tight. Tighten as necessary.

Important: Whenever you remove the bagger attachment, remember to remove the front weights to return the proper stability to the machine.

2

Installing the Rear Guard

Parts needed for this procedure:

1	Rear guard
4	Self tapping screw (5/16 x 3/4 inch)

Procedure

1. Install the rear guard to the frame behind the engine (Figure 10). Align the holes in the tabs on the guard with the existing holes in the rear frame.

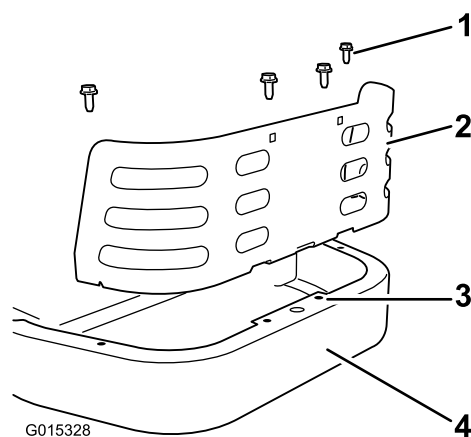


Figure 10

1. Self tapping screw (5/16 x 3/4 inch)
 2. Rear guard
 3. Hole in rear frame, existing
 4. Rear frame
2. Secure the guard to the frame with four self tapping screws (5/16 x 3/4 inch) as shown in Figure 10.

3

Installing the Bagger Frame

Parts needed for this procedure:

1	Bagger frame support bracket
1	Support spacer plate
2	Self tapping screw (5/16 x 3/4 inch)
2	Bolt (5/16 x 1 inch)
4	Lock nut (5/16 inch)
1	Angled bracket
2	Carriage bolt (5/16 x 3/4 inch)
1	Bagger frame
1	Clevis pin (1/2 x 2-1/4 inch)
5	Hair pin cotter
2	Rod
4	Washer

Procedure

1. Locate the bagger frame support spacer plate and bracket in loose parts. Install the plate and bracket to the machine frame as shown in Figure 11. Secure the plate and bracket to the frame using two bolts (5/16 x 1 inch) and two lock nuts (5/16 inch).

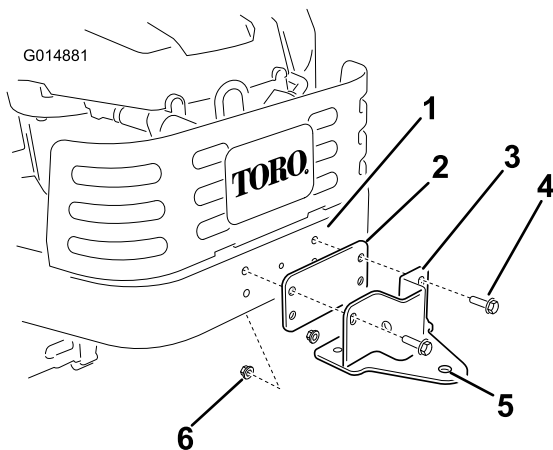


Figure 11

1. Machine frame
2. Support spacer plate
3. Support bracket
4. Bolt (5/16 x 2-1/2 inch)
5. Draw bar hole
6. Lock nut (5/16 inch)

2. Secure the support bracket to the bottom of the machine frame from below using two self tapping screws (5/16 x 3/4 inch) as shown in Figure 12.

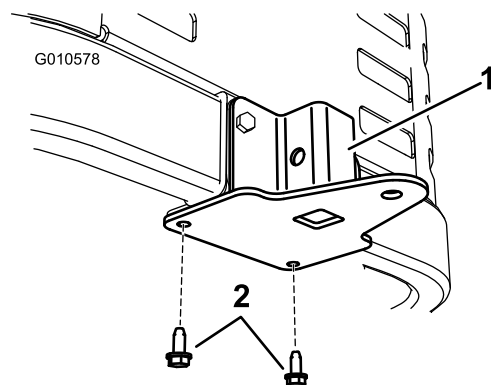


Figure 12

1. Support bracket
2. Self tapping screws (5/16 x 3/4 inch)

3. Install the angled bagger bracket to the engine guard using two carriage bolts (5/16 x 3/4 inch) and two locknuts (5/16 inch).

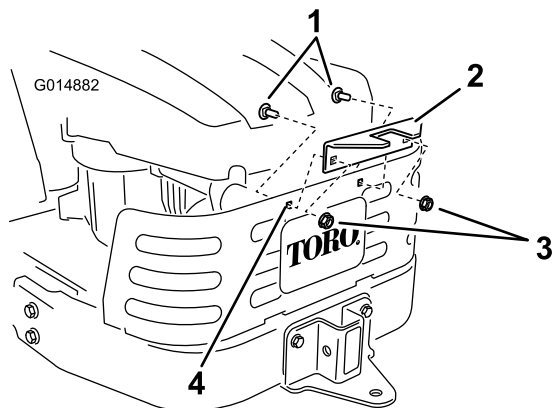


Figure 13

1. Carriage bolt (5/16 x 3/4 inch)
2. Angled bracket
3. Lock nut (5/16 inch)
4. Hole in engine guard, existing

4. Install the bagger frame to the support bracket. Secure the bagger frame with a clevis pin (1/2 x 2-1/4 inch) and hair pin cotter (Figure 13).

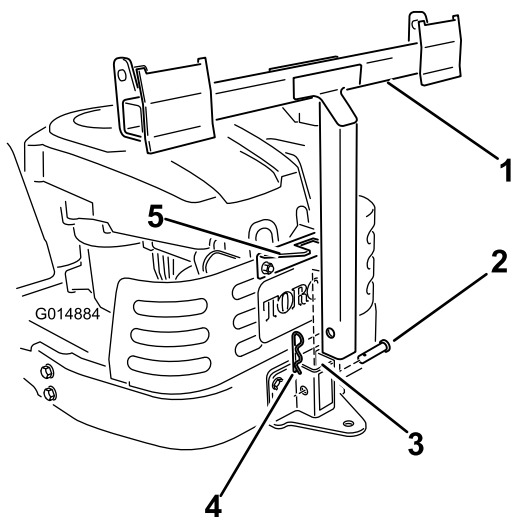


Figure 14

1. Bagger frame (60 inch decks)
2. Clevis pin (1/2 x 2-1/4 inch)
3. Support bracket, receiver
4. Hair pin
5. Angle bracket

5. Install two support rods, one to each side of the bagger frame. Locate the existing keyed slot in the machine frame and install the bent, flared end of the rod into that slot (Figure 15). Move the rod rearward to seat it in the frame.

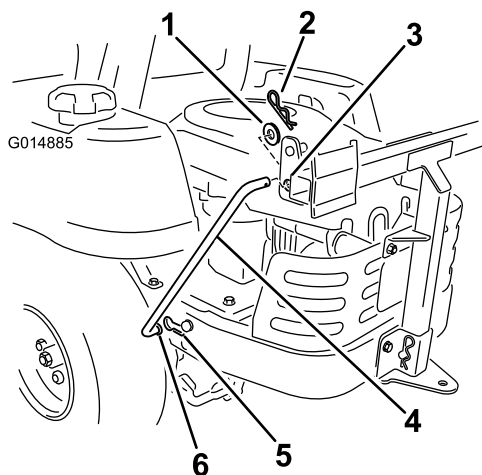


Figure 15

Left side shown

1. Washer
2. Hair pin
3. Bracket frame hole
4. Support rod
5. Keyed slot, existing
6. Bent, flared end of support rod

6. Insert the bent ends of the rod into the bagger frame as shown in Figure 15. Secure the end of the rod with a washer and hair pin.

4

Assembling the Bagger Top

Parts needed for this procedure:

1	Bagger top
1	Bagger screen

Procedure

Turn the bagger top over. Install the screen as shown in Figure 16 so it slopes down toward the collection bags. Make sure the screens snap into place and the tabs engage the bagger top.

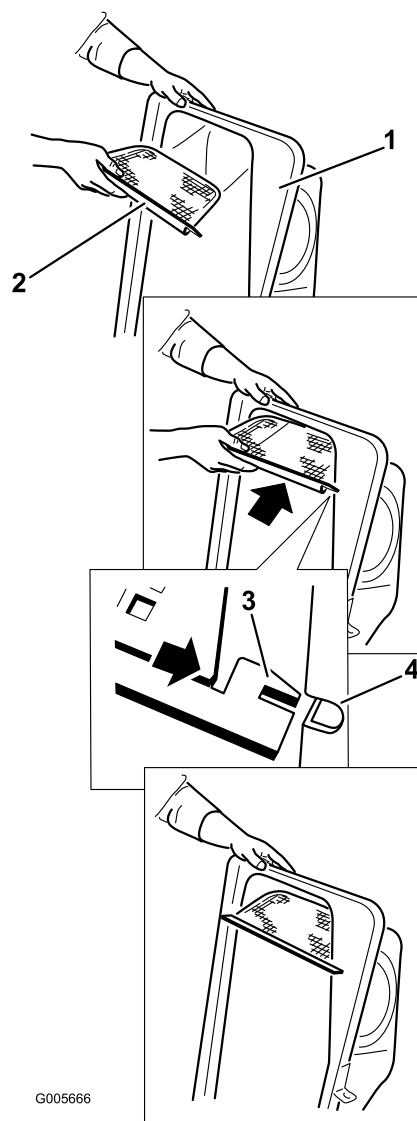


Figure 16

1. Bagger top
2. Screen
3. Screen tab
4. Slot in bagger top

5

Installing the Bagger Top

Parts needed for this procedure:

2	Grass Bag
1	Upper bagger tube

Procedure

1. Install the bagger top to the bagger frame. Rotate the bagger top to align the key holes in the bagger top brackets with the keys in the posts on the bagger frame (Figure 17). Slide the brackets over the posts and rotate the bagger top down to the operating position.

Note: The bagger top is easier to install if two people work together.

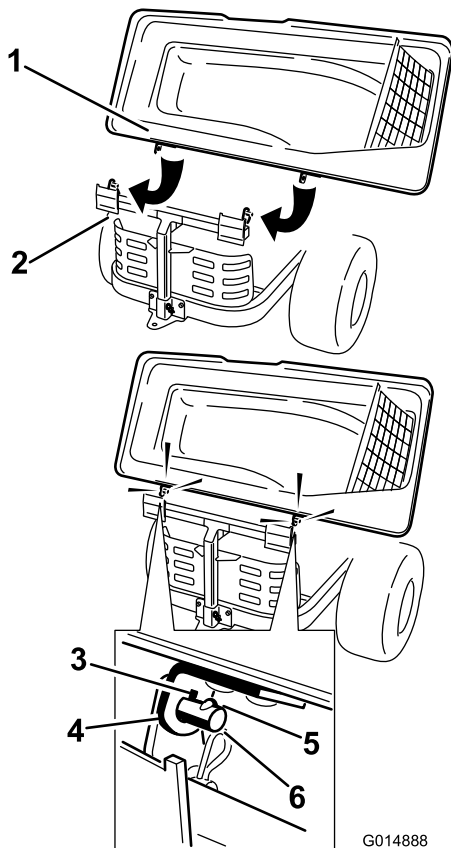


Figure 17

- | | |
|-----------------|------------------------|
| 1. Bagger top | 4. Bracket, bagger top |
| 2. Bagger frame | 5. Key |
| 3. Key hole | 6. Post |

2. Lift the bagger top and install the bags by sliding the bag frame hooks onto the retaining brackets (Figure 18).

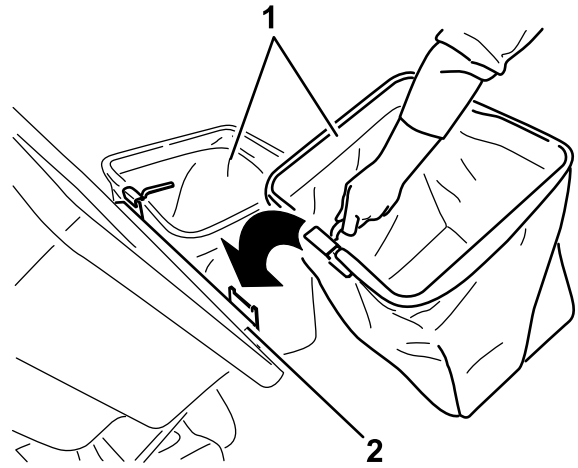


Figure 18

- | | |
|-----------------|----------------------|
| 1. Bag | 3. Retaining bracket |
| 2. Bagger frame | 4. Bag frame hook |

3. Lower the bagger top onto the bag (Figure 19).

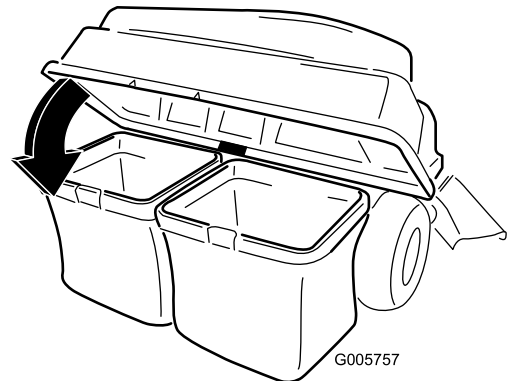


Figure 19

4. Install the upper bagger tube. Insert the curved end into the opening in the bagger top. Make sure the flared end with the retention post is pointing down and forward in preparation to be mated with the Finishing Kit.

6

Installing the Chute

Parts needed for this procedure:

1	Cut off baffle
1	Chute

Procedure

1. Lift up the grass deflector and locate the existing cutoff baffle.
2. Remove the lock nuts and bolt securing the cutoff baffle to the underside of the deck (Figure 20). Retain all fasteners.

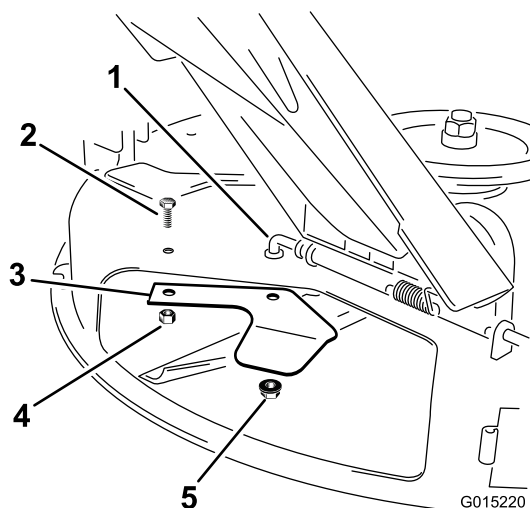


Figure 20

1. Pivot rod
2. Bolt
3. Cutoff baffle (existing)
4. Nut (5/16 inch)
5. Lock nut

3. Install the new cutoff baffle to the underside of the deck (Figure 21). Secure it with the fasteners removed previously.

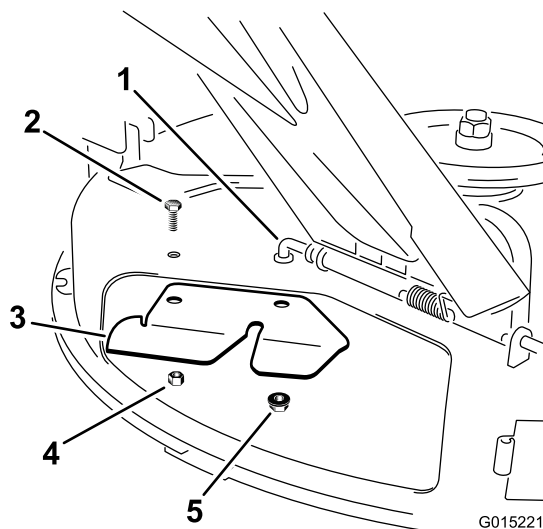


Figure 21

1. Pivot rod
2. Bolt
3. Cutoff baffle (bagger)
4. Nut (5/16 inch)
5. Lock nut

4. Locate the chute in loose parts. Align the holes in the hinge on the chute with the hinge on the deck (Figure 22). Secure the chute to the deck using the hairpin on the lanyard connected to the chute.

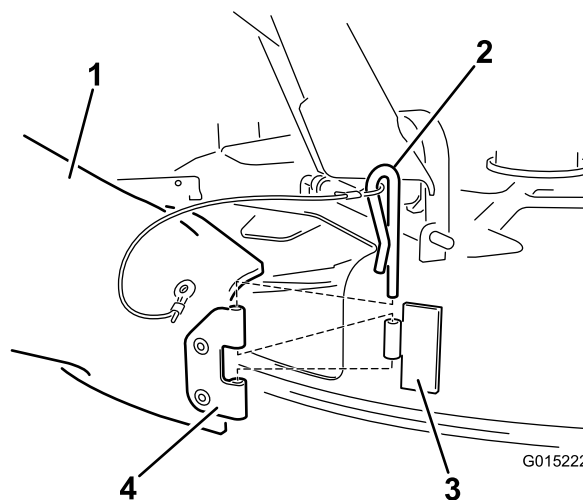


Figure 22

1. Chute
2. Lanyard hairpin
3. Hinge, on deck
4. Hinge, on chute

5. Pivot the chute back and toward the deck so chute is flush with the mower deck.

Note: As the chute mates with the deck, make sure the upper latch is out of the way of the pivot rod.

6. On the top of the chute, engage the upper latch around pivot rod of the deflector assembly as shown in Figure 23.

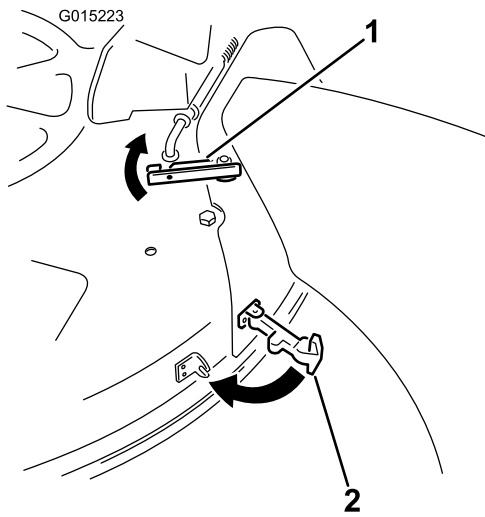


Figure 23

1. Upper latch
2. Flexible latch

7. Secure the chute to the deck. Hook the flexible latch on the chute to the retaining clasp welded on the mower deck to the rear of the opening (Figure 23).

7

Connecting with the Discharge Tube

No Parts Required

Procedure

1. Slide the curved end of the discharge tube into the opening in the bagger top (Figure 24).

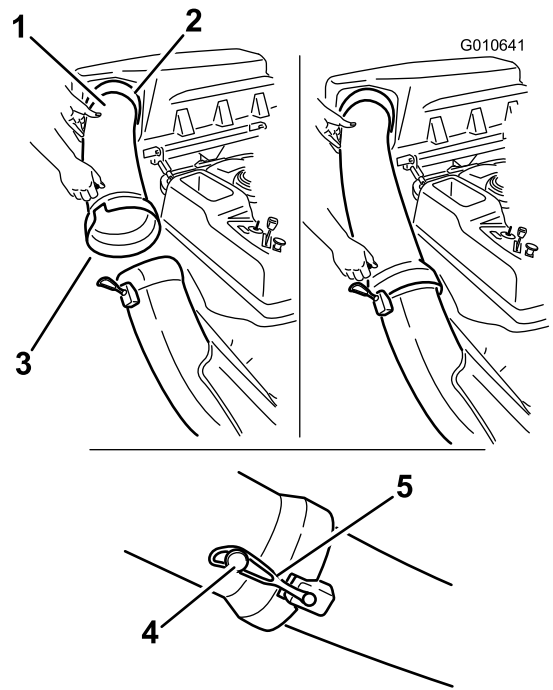


Figure 24

1. Discharge tube, curved end
2. Opening in bagger top
3. Discharge tube, flared end
4. Peg
5. Rubber strap

2. Slide the flared end of the discharge tube over the end of the chute. Move the rubber retaining strap on the chute snaps over the peg on the discharge tube to secure it (Figure 24).

8

Installing the Deck Ring

Parts needed for this procedure:

4	Deck ring
8	Bolt (5/16 x 3/4 inch)
8	Lock nut (5/16 inch)

Procedure

1. Install the interlocking deck rings to the bottom of the mower (Figure 25).

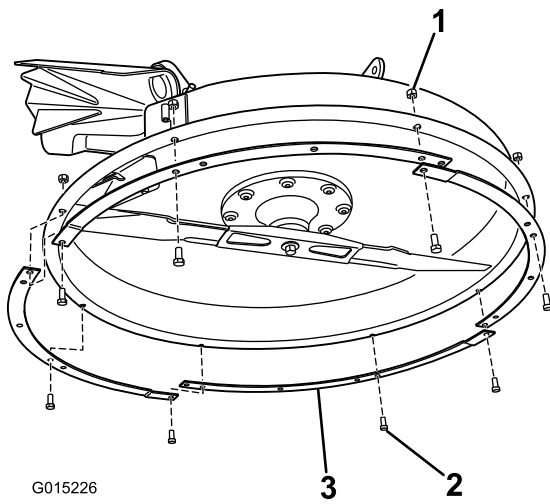


Figure 25

1. Lock nut (5/16 inch)
2. Bolt (5/16 x 3/4 inch)
3. Deck ring

2. Secure the rings to the deck using 8 bolts (5/16 x 3/4 inch) and 8 lock nuts (5/16 inch).

9

Installing the Blade

Parts needed for this procedure:

1	Hi-Lift blade
---	---------------

Procedure

1. Remove the existing mower blade installed on your deck. Refer to the Removing the Blades section in the *Operator's Manual* for more information.
2. Install the Hi-Lift mower blade located in loose parts. Refer to the Installing the Blades section in the *Operator's Manual* for more information.

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

⚠ WARNING

To avoid personal injury, follow these procedures:

- Become familiar with all operating and safety instructions in the *Operator's Manual* for the mower before using this attachment.
- Never remove the discharge tube, bags, bagger top, or the chute while the engine is running.
- Always shut the engine off and wait for all moving parts to stop before clearing an obstruction from the bagging system.
- Never do maintenance or repairs while the engine is running.

Emptying the Grass Bags

Be careful when lifting or handling a grass bag that is full. To empty the grass bags:

1. Park the machine on a level surface and disengage the blade control switch.
2. Move the motion control levers outward to the neutral lock position, stop the engine, remove the key, set the parking brake and wait for all moving parts to stop before leaving the operating position.
3. Open (raise) the bagger top (Figure 26).

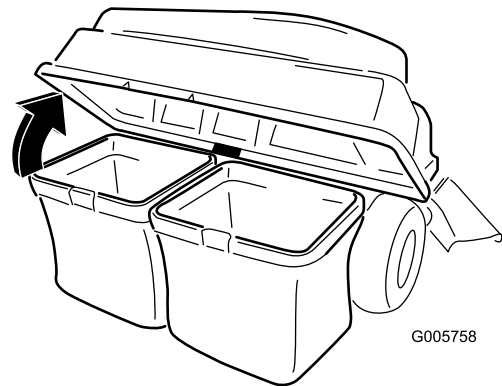


Figure 26

4. Compress debris into the bags. With both hands, lift up on the bag and unhook it from the retaining bracket. Empty the bag. Repeat the procedure for the other bag.
5. Install the bags by sliding the bag frame hooks onto the retaining brackets (Figure 27).

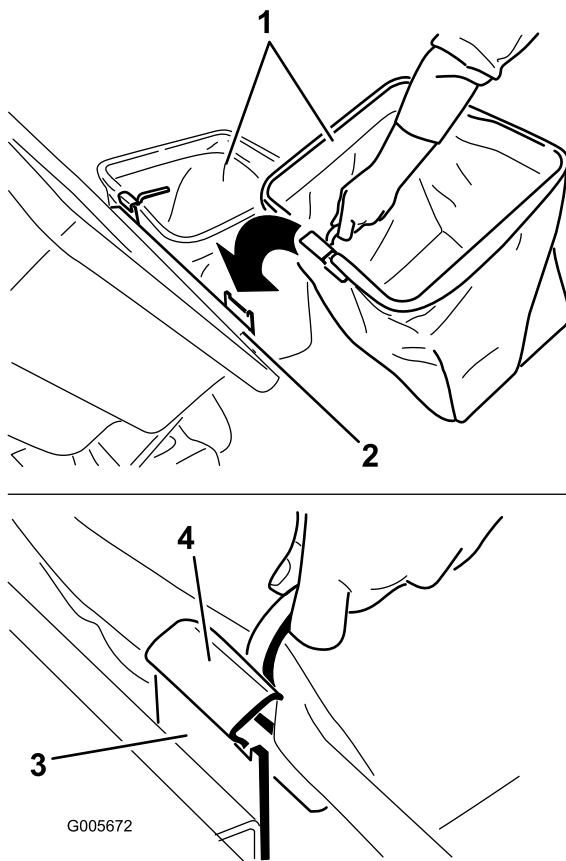


Figure 27

- | | |
|-----------------|----------------------|
| 1. Bag | 3. Retaining bracket |
| 2. Bagger frame | 4. Bag frame hook |

- Lower the bagger top onto the bags.

Clearing Obstructions from the Bagger

- Park the machine on a level surface and disengage the blade control switch.
- Move the motion control levers outward to the neutral lock position, stop the engine, remove the key, set the parking brake and wait for all moving parts to stop before leaving the operating position.
- Check the grass bags and empty them if they are full.
- Remove and separate the discharge tube and chute from the bagger top and mower. Using a stick or similar object, carefully remove and clear the obstruction from the mower, discharge tube, chute, and the bagger top.
- After you remove the obstruction, install the complete bagger system and resume operation.

Removing the Bagger

⚠ CAUTION

Failing to remove the front bagger weights and operating the machine without the bagger attachment may cause an unstable condition which could result in a loss of control.

- Always remove the front weights when removing the bagger attachment.
- Never operate the machine without the bagger attachment and the front weights still installed.

The bagger can be removed by repeating the Setup sections from all installed bagger related kits in reverse order. If weights are in stalled, always remove the front bagger weights when removing the bagger attachments.

Note: It is only necessary to remove the cutoff baffle when installing a mulching kit.

Operating Tips

Tips for Bagging

Size

Remember that the mower is longer and wider with this attachment installed. By turning too sharply in confined places you may damage the attachment.

Trimming

Always trim with the left side of the mower. Do not trim with the right side of the mower because you could damage the bagger's chute and discharge tube.

Cutting Height

Do not set the mower cutting height too low because long grass surrounding the mower can prevent air from getting under the mower and entering the bagging system. If enough air doesn't get under the mower, the bagging system will plug.

Cutting Frequency

Cut the grass often, especially when it grows rapidly. You will have to cut your grass twice if it gets excessively long.

Cutting Technique

For best lawn appearance, be sure to slightly overlap the mower into the previously cut area. This helps

reduce the load on the engine and reduces the chance of plugging the chute and discharge tube.

Bagging Speed

Most often you will bag with the mower throttle in the Fast position and drive at a normal ground speed. However, in extremely dry and dusty grass, you may want to slightly reduce the throttle speed and increase the ground speed of the mower. The bagging system may plug if you drive too fast and the engine speed gets too slow. On hills it may be necessary to slow the mower ground speed. This helps maintain the engine speed and bagging efficiency. Mow downhill whenever possible.

⚠ CAUTION

As the bagger fills, extra weight is added to the back of the machine. If you stop and start suddenly on hills, you may lose steering control or the machine may tip.

- **Do not start or stop suddenly when going uphill or downhill. Avoid uphill starts.**
- **If you do stop the machine when going uphill, disengage the blade control. Then back down the hill using a slow speed.**
- **Do not change speeds or stop on slopes.**
- **Never operate the machine without the bagger attachment and the front weights still installed.**

Bagging Long Grass

Bagging Long Grass Excessively long grass is heavy and may not be propelled completely into the grass bags. If this happens, the discharge tube and chute may plug. To avoid plugging the bagging system, mow the grass at a high height of cut, then lower the mower to your normal cutting height and repeat the bagging process.

Bagging Wet Grass

Always try to cut grass when it is dry because your lawn will have a neat appearance. If you must cut wet grass, use the conventional side discharge feature of the mower. Several hours later, when the clippings are dry, install the complete bagger attachment and vacuum up the grass clippings.

Signs of Plugging

As you are bagging, a small amount of grass clippings normally blow out the front of the mower. An excessive amount of clippings blowing out indicates that the bags are full or the system is plugged.

Maintenance

Note: Determine the left and right sides of the machine from the normal operating position.

Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
After the first 10 hours	• Inspect the bagger
Before each use or daily	• Clean the bagger
Before storage	• Inspect the bagger • Clean the bagger

⚠ CAUTION

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition and disconnect the wire from the spark plug before you do any maintenance. Set the wire aside so that it does not accidentally contact the spark plug.

⚠ DANGER

Engines can become hot when they are operating. Severe burns can occur from contacting hot surfaces.

Allow engines, especially the muffler, to cool before touching.

⚠ DANGER

Debris, such as leaves, grass, or brush can catch fire. A fire in the engine area can cause personal injury and property damage.

- Keep the engine and muffler area free of debris accumulation.
- Take care when opening the bagger cover to keep debris from falling onto the engine and muffler area.
- Allow the machine to cool before storing it.

Inspecting the Bagger Attachment

Service Interval: After the first 10 hours

Before storage

Inspect the bagger attachment after the first 10 hours of operation, and monthly thereafter.

1. Check the chute, discharge tube, and the bagger top. Replace these parts if they are cracked or broken.
2. Tighten all nuts, bolts, and screws.
3. Inspect all fasteners and latches; replace any missing or damaged.
4. Inspect the grass bags for deterioration.

⚠ WARNING

You or bystanders could be severely injured by flying debris or thrown objects that may pass through torn, worn, or deteriorated grass bags.

- Check the grass bags for holes, rips, wear, and other deterioration.
- Do not wash the grass bags.
- If the bag has deteriorated, install new grass bags supplied by the manufacturer of this bagger attachment.

Inspecting the Mower Blades

Inspect the mower blades regularly and whenever a blade strikes a foreign object.

If the blades are badly worn or damaged, install new blades. Refer to your mower or mower *Operator's Manual* for complete blade maintenance.

Caring for the Grass Bags

Washing the grass bags is not recommended.

To prevent rapid deterioration of the bag material, store the bags where they will dry completely after each use.

Cleaning the Bagger Attachment

Service Interval: Before each use or daily

Before storage

1. After each use, remove and wash the inside and outside of the bagger top, discharge tube, chute, and the underside of the mower, using water sprayed from a garden hose. Use a mild detergent to remove stubborn dirt.
2. Make sure you remove matted grass from all parts.
3. Flush the grass bags with water using garden hose to remove any debris.
4. After washing, let all of the parts dry thoroughly.

Storage

Storing the Bagger Attachment

1. Clean the bagger attachment; refer to Cleaning the Bagger Attachment.
2. Inspect the bagger attachment for damage; refer to Inspecting the Bagger Attachment.
3. Make sure the grass bags are empty and thoroughly dry.
4. Store the bagger in a clean, dry place, out of direct sunlight. This protects the plastic parts and extends the life of the bagger. If you must store the bagger outside, cover it with a weatherproof cover.

Notes:



The Toro Total Coverage Guarantee

A Three-Year Limited Warranty

Conditions and Products Covered

The Toro® Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly promise to repair any Toro Product, if defective in materials or workmanship for the period listed below.

This Warranty applies to all TITAN Mowers and their accessories. This warranty covers the cost of parts and labor, but you must pay transportation costs.

The following time periods apply from the date of purchase:

Products	Warranty Period
TITAN Mowers	3 years or 240 hours*
- Frame	Lifetime (original owner only)**
- Engine	3 years or 240 hours*
Attachments (for above units)	3 years or 240 hours*
Batteries	1 year

Warranty may be denied if the hour meter is disconnected, altered, or shows signs of being tampered with.

Owner Responsibilities

You must maintain your Toro Product by following the maintenance procedures described in the *Operator's Manual*. Such routine maintenance, whether performed by a dealer or by you, is at your expense.

Items and Conditions Not Covered

There is no other express warranty except for special emission system coverage and engine warranty coverage on some products. This express warranty does not cover the following:

- Cost of regular maintenance service or parts, such as filters, fuel, lubricants, oil changes, spark plugs, air filters, blade sharpening/worn blade on mowers, cable/linkage adjustments, or brake and clutch adjustments
- Components failing due to normal wear are not covered by this warranty
- Any product or part which has been altered or misused and requires replacement or repair due to accidents or lack of proper maintenance
- Repairs necessary due to improper battery care, failure to use fresh fuel (less than one month old), or failure to properly prepare the unit prior to any period of non-use over one month
- Pickup and delivery charges
- Operational misuse, neglect, or accidents
- Repairs or attempted repairs by anyone other than an Authorized Toro Service Dealer

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

*Whichever occurs first.

**Lifetime Frame Warranty-If the main frame, consisting of the parts welded together to form the tractor structure that other components such as the engine are secured to, cracks or breaks in normal use, it will be repaired or replaced under warranty at no cost for parts and labor. Frame failures due to misuse or abuse and failure or repair required due to rust or corrosion are not covered.

Instructions for Obtaining Warranty Service

If you think that your Toro Product contains a defect in materials or workmanship, follow this procedure:

1. Contact any Authorized Toro Service Dealer to arrange service at their dealership. To locate a dealer convenient to you, refer to the *Yellow Pages* of your telephone directory (look under "Lawn Mowers") or access our web site at www.Toro.com. You may also call the numbers listed in item #3 to use the 24-hour Toro Dealer locator system.
2. Bring the product and your proof of purchase (sales receipt) to the Service Dealer. The dealer will diagnose the problem and determine if it is covered under warranty.
3. If for any reason you are dissatisfied with the Service Dealer's analysis or with the assistance provided, contact us at:

Customer Care Department, Consumer Division

Toro Warranty Company

8111 Lyndale Avenue South

Bloomington, MN 55420-1196

Toll free at 866-216-6029 (U.S. customers)

Toll free at 866-216-6030 (Canadian customers)

General Conditions

All repairs covered by these warranties must be performed by an Authorized Toro Service Dealer using Toro approved replacement parts. Repair by an Authorized Toro Service Dealer is your sole remedy under this warranty.

Neither The Toro® Company nor Toro Warranty Company is liable for indirect, incidental, or consequential damages in connection with the use of the Toro Products covered by these warranties, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under these warranties.

All implied warranties of merchantability (that the product is fit for ordinary use) and fitness for use (that the product is fit for a particular purpose) are limited to the duration of the express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.