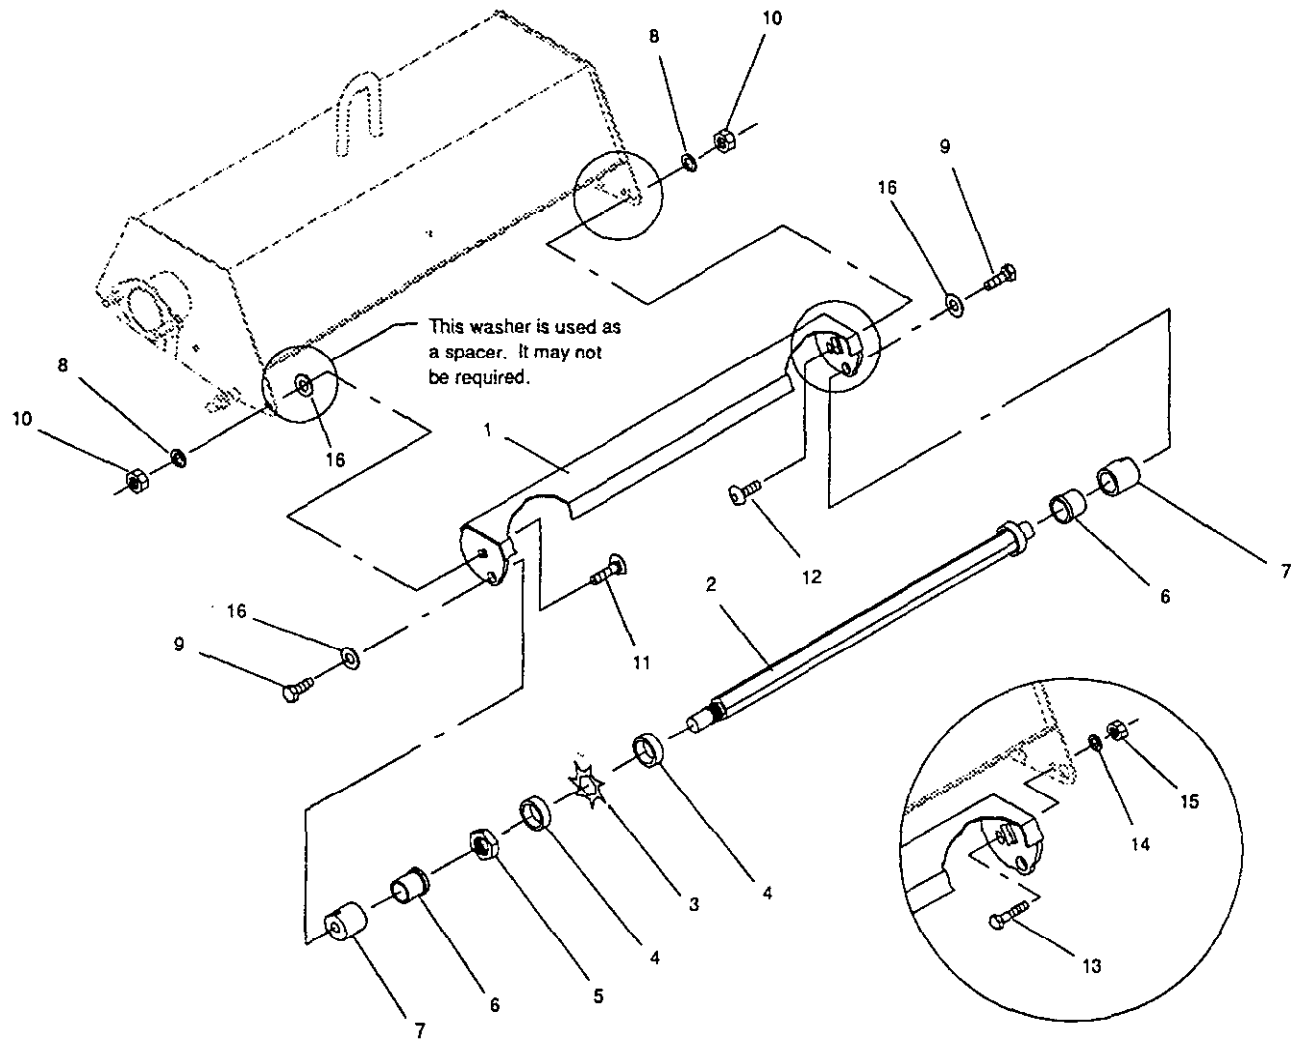


TORO

MODEL NO. 44904

**PARTS LIST &
ASSEMBLY
INSTRUCTIONS****SPIKER KIT**

(for Model No. 44902 Tri-Roller)

**PARTS LIST**

44904-1

Ref. No.	Part No.	Description	No. Used
1	92-4499	Spiker Housing	3
2	92-4501	Spiker Shaft	3
3	57-0950	Blade - Spiker	102
4	26-1580	Spacer	105
5	3220-8	Jam Nut	3
6	01-127-0300	Bushing	6
7	92-4502	Spiker Mounts	6
8	3253-7	Lock Washer	6

Ref. No.	Part No.	Description	No. Used
9	325-2	Capscrew - Hex Hd.	6
10	3217-9	Hex Nut	6
11	3233-1	Carriage Bolt	3
12	92-4500	Carriage Bolt - LH	3
13	321-6	Capscrew - Hex Hd.	3
14	3253-3	Lock Washer	3
15	3217-5	Hex Nut	3
16	3256-26	*SAE* Flat Washer	9

INSTALLATION INSTRUCTIONS

TRI-ROLLER SPIKER (44904)

The spiker is optional on the Tri-Roller. To install follow the instructions below.

1. Remove the 1/2" nut from the wheel shaft assembly and remove complete wheel assembly from Tri-Roller.
2. Set the Tri-Roller on a level surface.
3. Attach the Spiker Blade Assembly to the Tri-Roller using the 1/2" x 1-1/4" carriage bolts. See assembly drawing on front page.

Tighten the right hand side but leave the left hand side loose. The left hand side has the rectangular slot instead of a square hole.

4. Move the Spiker Blade Assembly up and down on the left hand side until it is level with the surface it is sitting on.

5. Tighten the left hand side carriage bolt.

6. To lock the Spiker Assembly into position attach the 1/4" x 1" capscrew to the hole on the left hand side and secure. (See Fig. 1)

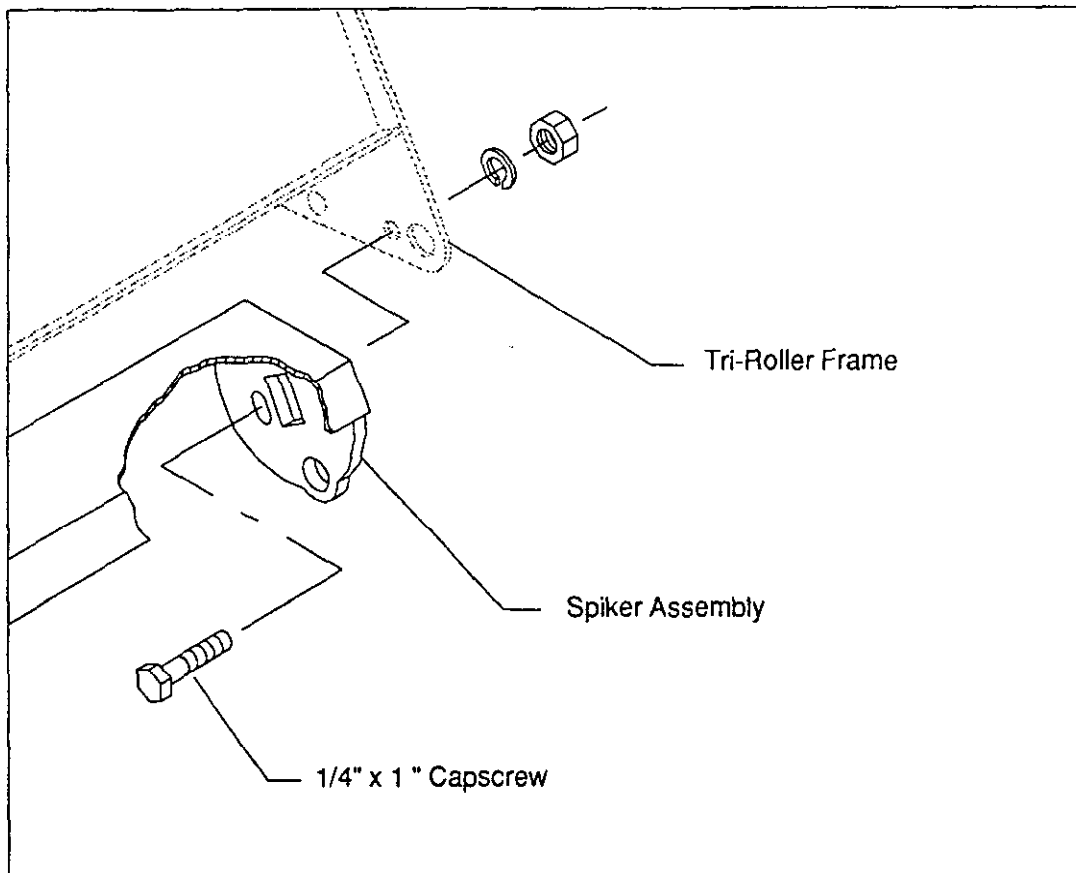


Figure 1