



# Wire Harness Shield Kit


## Groundsmaster 455D

Part No. 106-1023

Form No. 3328-434


### Installation Instructions

1. Remove (2) screws securing the existing wire harness shields to the tubes on center cutting unit (Fig. 1).
2. Using screws removed, mount new left and right harness shields to the tubes on center cutting unit (Fig. 2). Position harness shields as shown in figure 2.
3. Hang each wire harness onto shield.
4. Secure harness to each shield with a cable tie.

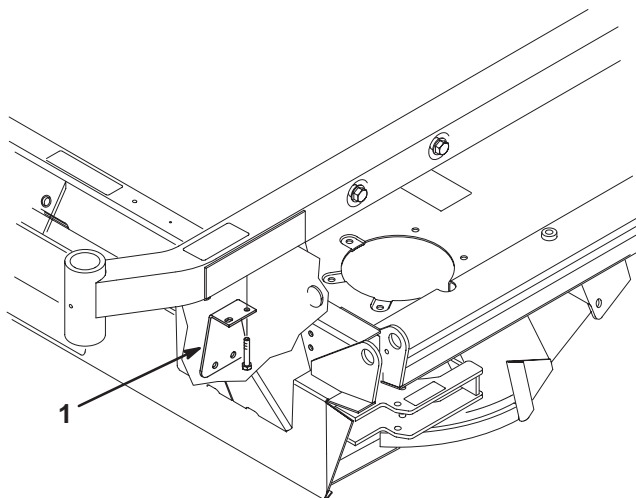

**Figure 1**

Existing wire harness  
shield (left shown)

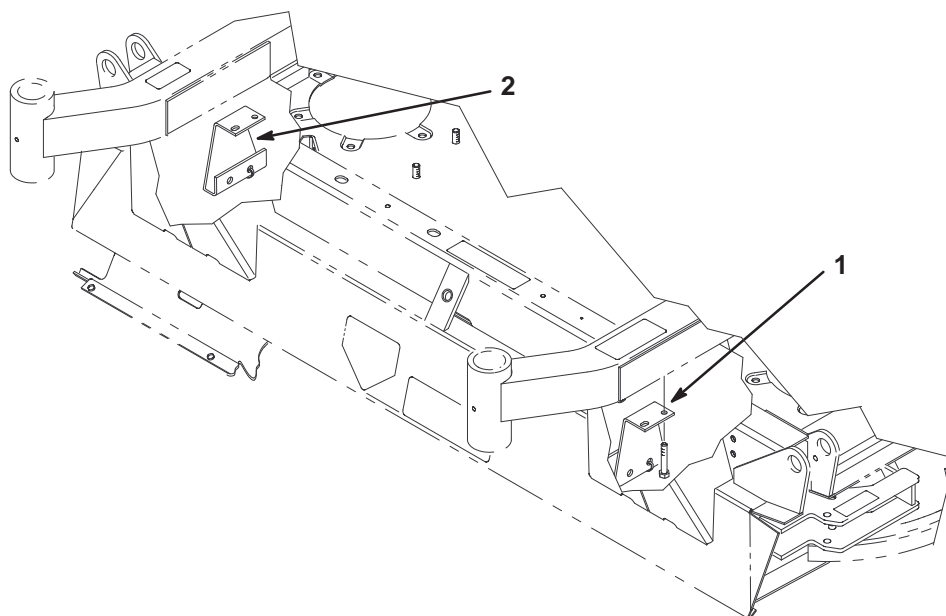

**Figure 2**

1. L.H. Harness shield

2. R.H. Harness shield