



Z355

Z-Master[®] with 48 in. Mower and Bagger

Model No. 74805—210000001 and Up

Operator's Manual



Warning



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Important The engine in this product is not equipped with a spark arrester muffler. It is a violation of California Public Resource Code Section 4442 to use or operate this engine on any forest-covered, brush-covered, or grass-covered land as defined in CPRC 4126. Other states or federal areas may have similar laws.

This spark ignition system complies with Canadian ICES-002.

Ce système d'allumage par étincelle de véhicule est conforme à la norme NMB-002 du Canada.

The enclosed Engine Owner's Manual is supplied for information regarding the U.S. Environmental Protection Agency (EPA) and the California Emission Control Regulation of emission systems, maintenance, and warranty.

Keep this Engine Owner's Manual with your unit. Should this Engine Owner's Manual become damaged or illegible, replace immediately. Replacements may be ordered through the engine manufacturer.

Contents

	Page
Introduction	3
Safety	3
Safe Operating Practices	3
Toro Mower Safety	5
Slope Chart	7
Safety and Instruction Decals	9
Gasoline and Oil	11
Recommended Gasoline	11
Using Stabilizer/Conditioner	11
Filling the Fuel Tank	11
Check Engine Oil Level	11
Assembly	12
Loose Parts	12
Remove bracket from Rear Tail Wheel	12
Remove Deck Banding	12
Check Tire Pressure	12
Activate the Battery	12
Install Battery	13
Remove Machine from Crate	14
Hydraulic System	14
Operation	15


	Page
Think Safety First	15
Controls	15
Parking Brake	15
Starting and Stopping Engine	16
Operating Power Take Off (PTO)	17
The Safety Interlock System	17
Instruments	18
Driving Forward or Backward	18
Stopping the Machine	18
Positioning the Seat	19
Adjusting Height-of-Cut	19
Tilting the Mower	19
Dumping the Hopper	20
Pushing the Machine by Hand	21
Removing the Deck and Carrier Frame	21
Installing Deck and Carrier Frame	23
Install Mulching Baffle	25
Mulching Operation	25
Install Bagger and Discharge Baffles	26
Bagger Operation	26
Plenum Removal and Installation	27
Maintenance	28
Recommended Maintenance Schedule	28
Cutting Blade Service	29
Correcting Cutting Unit Mismatch	31
Matching Height of Cut	31
Checking the Front-to-Rear Pitch	31
Change the Front-to-Rear Pitch	32
Checking the Side-to-Side Leveling	32
Change the Side-to-Side Leveling	32
Air Cleaner Service	32
Engine Oil Service	34
Spark Plug Service	35
Fuel Filter Service	36
Fuel Tank Service	36
Cleaning the Cooling Systems	37
Greasing and Lubrication	37
Deck Gearbox Fluid	38
Changing Gearbox Fluid	38
Checking Gearbox Fluid	39
Replacing the Castor Wheel Fork Bushings	39
Servicing the Castor Wheels and Tail Wheel Bearings	40
Tire Pressure Service	40
Replacing Push Arm Bushings	41
Replacing Idler Arm Bushings	41
Hydraulic System Service	42
Adjust Motion Controls	44
Replacing Power Take Off (PTO) Belt	44

	Page
Replacing the Traction Belt	45
Replacing the Blower Belt	45
Turning Engine Lift Hook	46
Fuse Service	46
Battery Service	46
Cleaning Hopper Screens	47
Cleaning the Hopper Full Sensor	47
Wiring Diagram	49
Hydraulic Diagram	50
Cleaning and Storage	51
Troubleshooting	52
The Toro Total Coverage Guarantee	56

Introduction

Read this manual carefully to learn how to operate and maintain your product properly. The information in this manual can help you and others avoid injury and product damage. Although Toro designs and produces safe products, you are responsible for operating the product properly and safely.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. Figure 1 illustrates the location of the model and serial numbers on the product.

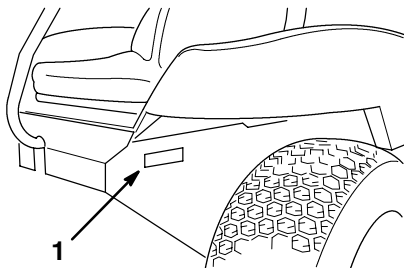

m-3220

Figure 1

1. Location of the model and serial numbers

Write the product model and serial numbers in the space below:

Model No. _____
Serial No. _____

This manual identifies potential hazards and has special safety messages that help you and others avoid personal injury and even death. **Danger**, **Warning**, and **Caution** are signal words used to identify the level of hazard. However, regardless of the hazard, be extremely careful.

Danger signals an extreme hazard that *will* cause serious injury or death if you do not follow the recommended precautions.

Warning signals a hazard that *may* cause serious injury or death if you do not follow the recommended precautions.

Caution signals a hazard that may cause minor or moderate injury if you do not follow the recommended precautions.

This manual uses two other words to highlight information.

Important calls attention to special mechanical information and **Note**: emphasizes general information worthy of special attention.

Safety

Improper use or maintenance by the operator or owner can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert ⚠ symbol, which means CAUTION, WARNING, or DANGER—“personal safety instruction.” Failure to comply with the instruction may result in personal injury or death.

Safe Operating Practices

The following instructions are from ANSI standard B71.4—1999.

Training

- Read the Operator’s Manual and other training material. If the operator(s) or mechanic(s) can not read English it is the owner’s responsibility to explain this material to them.
- Become familiar with the safe operation of the equipment, operator controls, and safety signs.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Never let children or untrained people operate or service the equipment. Local regulations may restrict the age of the operator.
- The owner/user can prevent and is responsible for accidents or injuries occurring to himself or herself, other people or property.

Preparation

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Wear appropriate clothing including hard hat, safety glasses and ear protection. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Inspect the area where the equipment is to be used and remove all objects such as rocks, toys and wire which can be thrown by the machine.
- Use extra care when handling gasoline and other fuels. They are flammable and vapors are explosive.
 - Use only an approved container
 - Never remove gas cap or add fuel with engine running. Allow engine to cool before refueling. Do not smoke.
 - Never refuel or drain the machine indoors.
- Check that operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

Operation

- Never run an engine in an enclosed area.
- Only operate in good light, keeping away from holes and hidden hazards.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Only start engine from the operator's position. Use seat belts if provided.
- Slow down and use extra care on hillsides. Be sure to travel in the recommended direction on hillsides. Turf conditions can affect the machine's stability. Use caution while operating near drop-offs.
- Slow down and use caution when making turns and when changing directions on slopes.
- Never raise deck with the blades running.
- Never operate with the PTO shield, or other guards not securely in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Never operate with the discharge deflector raised, removed or altered, unless using a grass catcher.
- Do not change the engine governor setting or overspeed the engine.
- Stop on level ground, lower implements, disengage drives, engage parking brake (if provided), shut off engine before leaving the operator's position for any reason including emptying the catchers or unclogging the chute.

- Stop equipment and inspect blades after striking objects or if an abnormal vibration occurs. Make necessary repairs before resuming operations.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Never carry passengers and keep pets and bystanders away.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop blades if not mowing.
- Be aware of the mower discharge direction and do not point it at anyone.
- Do not operate the mower under the influence of alcohol or drugs
- Use care when loading or unloading the machine into a trailer or truck
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

Maintenance and storage

- Disengage drives, lower implement, set parking brake, stop engine and remove key or disconnect spark plug wire. Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting units, drives, mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.
- Let engine cool before storing and do not store near flame.
- Shut off fuel while storing or transporting. Do not store fuel near flames or drain indoors.
- Park machine on level ground. Never allow untrained personnel to service machine.
- Use jack stands to support components when required.
- Carefully release pressure from components with stored energy.
- Disconnect battery or remove spark plug wire before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking blades. Wrap the blade(s) or wear gloves, and use caution when servicing them. Only replace blades. Never straighten or weld them.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.

- Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.
- Keep all parts in good working condition and all hardware tightened. Replace all worn or damaged decals.

Toro Mower Safety

The following list contains safety information specific to Toro products or other safety information that you must know that is not included in the ANSI standards.

This product is capable of amputating hands and feet and throwing objects. Always follow all safety instructions to avoid serious injury or death.

This product is designed for cutting and recycling grass or, when equipped with a grass bagger, for catching cut grass. Any use for purposes other than these could prove dangerous to user and bystanders.

General Operation

- Allow only responsible adults who are familiar with the instructions to operate the machine.
- Be sure the area is clear of other people before mowing. Stop the machine if anyone enters the area.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Be aware of the mower discharge direction and do not point it at anyone. Do not operate the mower without either the entire grass catcher or the guard in place.
- Slow down before turning. Sharp turns on any terrain may cause loss of control.
- Turn off blades when not mowing.
- Keep hands, feet, hair and loose clothing away from attachment discharge area, underside of mower and any moving parts while engine is running.
- Stop the engine before removing the grass catcher or unclogging the chute.
- Mow only in daylight or good artificial light.
- Watch for traffic when operating near or crossing roadways.
- Do not touch equipment or attachment parts which may be hot from operation. Allow to cool before attempting to maintain, adjust or service.

- Before operating a machine with ROPS (roll over protection) be certain the seat belts are attached to prevent the seat from pivoting forward.
- Check carefully for overhead clearances (i.e. branches, doorways, electrical wires) before driving under any objects and do not contact them.
- Use only Toro-approved attachments. Warranty may be voided if used with unapproved attachments.

Slope Operation

Slopes and ramps are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. All slopes and ramps require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

DO

- If a steep slope must be ascended, back up the hill, and drive forward down the hill, keeping the machine in gear.
- Remove obstacles such as rocks, tree limbs, etc. from the mowing area. Watch for holes, ruts or bumps, as uneven terrain could overturn the machine. Tall grass can hide obstacles.
- Use slow speed so that you will not have to stop while on the slope.
- Use extra care with grass catchers or other attachments. These can change the stability of the machine.
- Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly straight down the slope.

DO NOT


- Do not mow across hillsides or slopes exceeding 5°.
- Do not mow down hillsides or slopes exceeding 10°.
- Do not mow up hillsides or slopes exceeding 15°.
- Avoid turning on slopes. If you must turn, turn slowly and gradually downhill, if possible.
- Do not mow near drop-offs, ditches, or embankments. The machine could suddenly turn over if a wheel goes over the edge of a cliff or ditch, or if an edge caves in.
- Do not mow on wet grass. Reduced traction could cause sliding.

- Do not try to stabilize the machine by putting your foot on the ground.
- Do not use a grass catcher on steep slopes. Heavy grass bags could cause loss of control or overturn the machine.

Service

- Never store the machine or fuel container inside where there is an open flame, such as near a water heater or furnace.
- Keep nuts and bolts tight, especially the blade attachment bolts. Keep equipment in good condition.
- Never tamper with safety devices. Check safety systems for proper operation before each use.
- Use only genuine replacement parts to ensure that original standards are maintained.
- Check brake operation frequently. Adjust and service as required.
- Battery acid is poisonous and can cause burns. Avoid contact with skin, eyes and clothing. Protect your face, eyes and clothing when working with a battery.
- Battery gases can explode. Keep cigarettes, sparks and flames away from battery.
- Hydraulic fluid escaping under pressure can penetrate the skin and cause injury. Use cardboard or paper to find hydraulic leaks.

Slope Chart

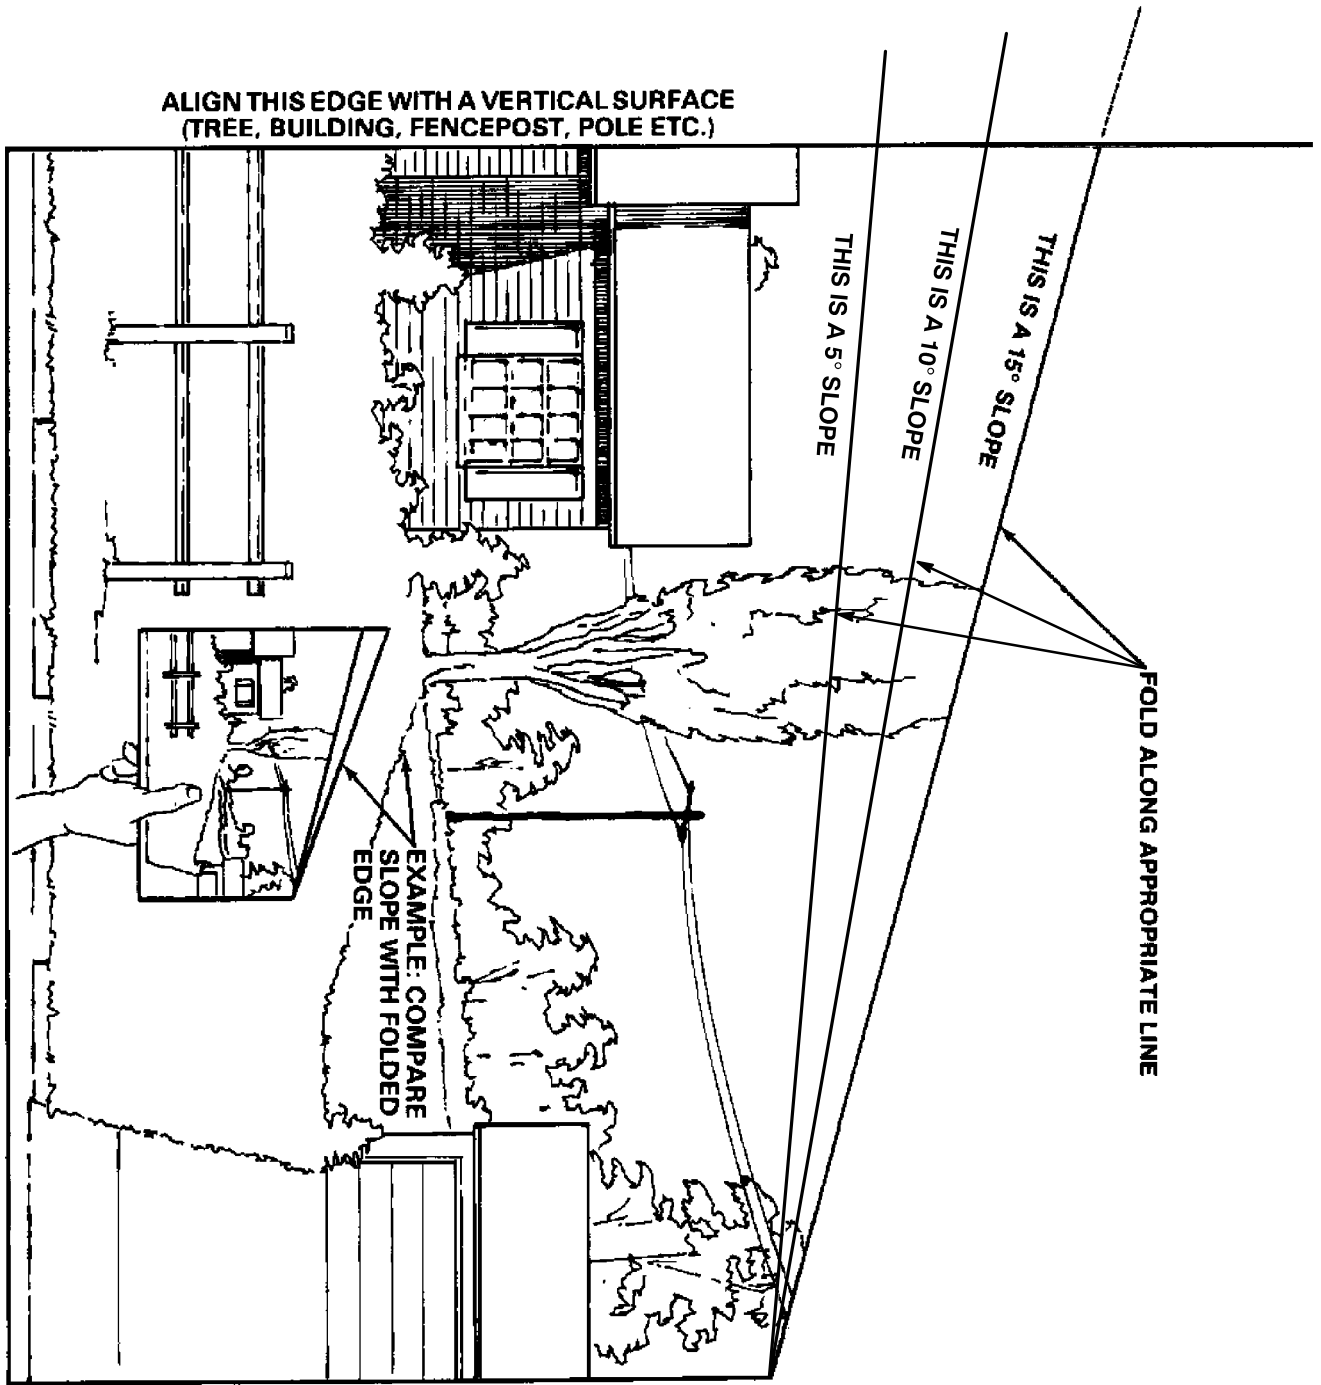

Safety and Instruction Decals



Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

**On Right Side Of Deck
(Part No. 98-1304)**

▲ DANGER

TO AVOID SERIOUS INJURY OR DEATH:

- READ AND UNDERSTAND THE OPERATOR'S MANUAL.
- NEVER USE WHEN UNDER THE INFLUENCE OF ALCOHOL OR DRUGS.
- USE SAFELY; MACHINE IS NOT A TOY.
- KNOW LOCATION AND FUNCTION OF CONTROLS.
- KEEP SAFETY DEVICES IN PLACE AND WORKING.
- CHECK PERFORMANCE OF ALL INTERLOCK SWITCHES DAILY. DO NOT DEFEAT INTERLOCK SYSTEM. IT IS FOR YOUR PROTECTION.
- STOP ENGINE, SET PARKING BRAKE AND REMOVE KEY BEFORE LEAVING MACHINE.
- NEVER MOW WHEN CHILDREN, PEOPLE OR PETS ARE IN MOWING AREA.
- NEVER CARRY CHILDREN OR OTHER PASSENGERS.
- LOOK DOWN AND BEHIND BEFORE AND WHILE BACKING UP.
- REMOVE OBJECTS THAT COULD BE THROWN BY THE BLADE.
- ROTATING BLADES CAN CUT HANDS & FEET. AVOID BLADE UNLESS BLADE & ENGINE ARE STOPPED.
- GO UP & DOWN SLOPES, NOT ACROSS.
- AVOID SHARP OR SUDDEN TURNS & SLIPPERY OR STEEP AREAS.
- IF MACHINE STOPS GOING UP HILL, STOP BLADE & BACK SLOWLY DOWN.

NEVER MOW SIDE HILL. NEVER MOW UP HILL. NEVER MOW DOWN HILL.

REPLACEMENT MANUAL AVAILABLE BY SENDING COMPLETE MODEL NUMBER TO: THE TORO CO., 8111 LYNDALE AVE. S., BLOOMINGTON, MN 55420-11 96 U.S.A. 16-1104

**On Each Side Of Deck
(Part No. 43-8480)**



**On Rear Of Deck
(Part No. 80-8760)**

▲ DANGER

DO NOT OPERATE THIS UNIT. 80-8760
DRIVE SHAFT GUARD IS NOT IN PLACE.

**Left Side Of Deck
(Part No. 68-8340)**

▲ CAUTION

BLADE RETAINING BOLTS MUST BE TORQUED TO 85-110 ft-lbs.
CHECK BLADE BOLT TORQUE AFTER STRIKING ANY SOLID OBJECT.

**On Carrier Frame
(Part No. 55-4300)**

▲ WARNING

SPRING LOADED MECHANISM
SEE OPERATOR'S MANUAL FOR DISASSEMBLY PROCEDURE. 55-4300

**Front Of Gearbox On Deck
(Part No. 100-5809)**

USE DEXRON® - III AUTOMATIC TRANSMISSION FLUID OR EQUIVALENT

5.5oz. IN EACH OF 3 BOXES

100-5809

**Below Front Of Seat
(Part No. 98-4387)**



**On Blower Chute
(Part No. 79-0360)**

▲ DANGER

- ROTATING BLADES CAN CUT.
- KEEP HANDS AND BODY PARTS OUT OF OPENING.
- DO NOT OPERATE MOWER WITHOUT DISCHARGE CHUTE ATTACHED OR ENTIRE BAGGING SYSTEM IN PLACE.
- STOP ENGINE BEFORE CLEANING CHUTE.


79-0360

**On Front Frame Member Under Seat
(Part No. 98-4361)**


▲ WARNING

98-4361

**On Instrument Panel
(Part No. 104-7807)**

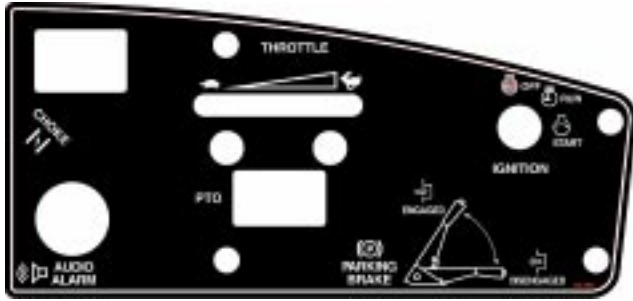

**Under Seat
(Part No. 104-0390)**

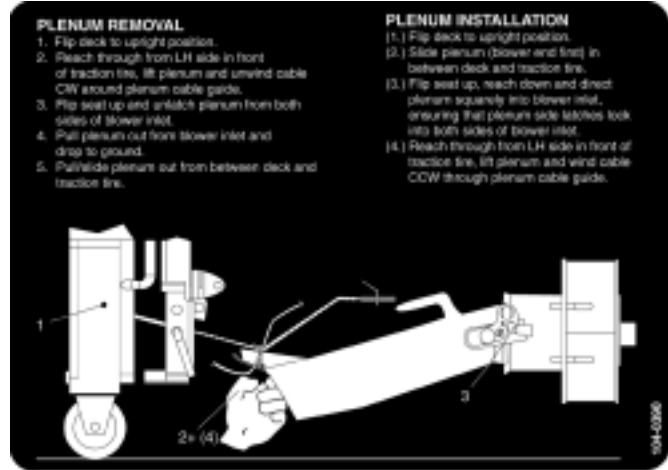

**Below Front Of Seat
(Part No. 98-1313)**




**Under Seat
(Part No. 105-1603)**

SEE ENGINE /OPERATOR'S MANUAL FOR DETAILED SERVICE INSTRUCTIONS.

- A** ENGINE OIL 10W30, KOHLER OIL FILTER 5205002. INITIAL CHANGE AT 8 HOURS. SPARK PLUGS: CHAMPION 2071 (.030 GAP), KOHLER FUEL FILTER 2405002
- B** USE UNLEADED GASOLINE WITH OCTANE RATING OF 87 OR HIGHER. SEE PRODUCT OPERATOR'S MANUAL FOR RECOMMENDED FILLING INSTRUCTIONS.
- A** CHECK HYDRAULIC FLUID AT INTERVAL SHOWN. (USE MOBIL 1 15W-50 SYNTHETIC MOTOR OIL.) FILTER: TORO 1-633750. INITIAL FILTER CHANGE AT 8 HOURS.
- A** INITIAL CHANGE AT 100 HOURS, CHECK FLUID LEVEL AT INTERVAL SHOWN. USE AUTOMATIC TRANSMISSION FLUID DEXRON II OR EQUIVALENT.
- A** CHECK FILTER GAGE AT INTERVAL SHOWN. REPLACE FILTER AS INDICATED AND RESET GAGE.
- A** CHECK TIRE PRESSURE - 12 PSI AT INTERVAL SHOWN.
- B** CHECK CASTOR TIRE PRESSURE - 45 PSI AT INTERVAL SHOWN.

← NO. 2 GENERAL PURPOSE GREASE

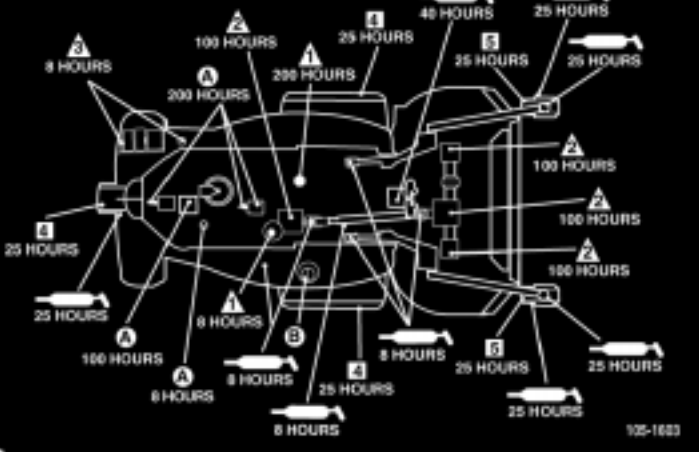


**On Rear Frame Member And
Clutch Guard
(Part No. 93-9198)**



**On Carrier Frame
(Part No. 100-7769)**

CUTTING HEIGHT ADJUSTMENT

- POSITION ALL PINS IN SAME HEIGHT OF CUT HOLES
- TURN ENGINE OFF BEFORE ADJUSTING CUTTING HEIGHT
- NOTE: HEIGHTS ARE BASED ON USING THREE WASHERS ON ADJUSTMENT PIN
- REMOVE 2 WASHERS TO OBTAIN 1/4" ADJUSTMENT (SUBTRACT 1/4" FROM CUTTING HEIGHTS)

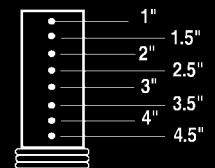

ADJUSTMENT PIN 100-7769

Gasoline and Oil

Recommended Gasoline

Use UNLEADED Regular Gasoline suitable for automotive use (85 pump octane minimum). Leaded regular gasoline may be used if unleaded regular is not available.

Important Never use methanol, gasoline containing methanol, or gasohol containing more than 10% ethanol because the fuel system could be damaged. Do not mix oil with gasoline.



Danger



In certain conditions, gasoline is extremely flammable and highly explosive. A fire or explosion from gasoline can burn you and others and can damage property.

- **Fill the fuel tank outdoors, in an open area, when the engine is cold. Wipe up any gasoline that spills.**
- **Do not fill the fuel tank completely full. Add gasoline to the fuel tank until the level is 1/4 to 1/2 in. (6 to 13 mm) below the bottom of the filler neck. This empty space in the tank allows gasoline to expand.**
- **Never smoke when handling gasoline, and stay away from an open flame or where gasoline fumes may be ignited by a spark.**
- **Store gasoline in an approved container and keep it out of the reach of children. Never buy more than a 30-day supply of gasoline.**
- **Always place gasoline containers on the ground away from your vehicle before filling.**
- **Do not fill gasoline containers inside a vehicle or on a truck or trailer bed because interior carpets or plastic truck bed liners may insulate the container and slow the loss of any static charge.**
- **When practical, remove gas-powered equipment from the truck or trailer and refuel the equipment with its wheels on the ground.**
- **If this is not possible, then refuel such equipment on a truck or trailer from a portable container, rather than from a gasoline dispenser nozzle.**
- **If a gasoline dispenser nozzle must be used, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete.**



Warning



Gasoline is harmful or fatal if swallowed. Long-term exposure to vapors can cause serious injury and illness.

- **Avoid prolonged breathing of vapors.**
- **Keep your face away from the nozzle and gas tank or conditioner opening.**
- **Keep gas away from eyes and skin.**

Using Stabilizer/Conditioner

Use a fuel stabilizer/conditioner in the machine to provide the following benefits:

- Keeps gasoline fresh during storage of 90 days or less. For longer storage it is recommended that the fuel tank be drained.
- Cleans the engine while it runs
- Eliminates gum-like varnish buildup in the fuel system, which causes hard starting

Important Do not use fuel additives containing methanol or ethanol.

Add the correct amount of gas stabilizer/conditioner to the gas.

Note: A fuel stabilizer/conditioner is most effective when mixed with fresh gasoline. To minimize the chance of varnish deposits in the fuel system, use fuel stabilizer at all times.

Filling the Fuel Tank

1. Shut the engine off and set the parking brake.
2. Clean around fuel tank cap and remove the cap. Add unleaded regular gasoline to fuel tank, until the level is 1/4 to 1/2 inch (6 mm to 13 mm) below the bottom of the filler neck. This space in the tank allows gasoline to expand. Do not fill the fuel tank completely full.
3. Install fuel tank cap securely. Wipe up any gasoline that may have spilled.

Check Engine Oil Level

Before you start the engine and use the machine, check the oil level in the engine crankcase; refer to Checking Oil Level, page 34.

Assembly

Note: Determine the left and right sides of the machine from the normal operating position.

Loose Parts

Note: Use the chart below to verify all parts have been shipped.

Description	Qty.	Use
Mulching baffle	1	For mulching mode
Key	2	Used in the ignition
Safety booklet	1	Read before operating the machine.
Operator's manual	1	
Engine operator's manual	1	
Parts catalog	1	
Registration card	1	Fill out and return to Toro.

Remove bracket from Rear Tail Wheel

1. Remove locknut from bolt that fastens crate bracket to tail wheel (Fig. 2).
2. Remove crate bracket from wheel bolt. Install locknut on to bolt until fork clamps onto spacer (Fig. 2).

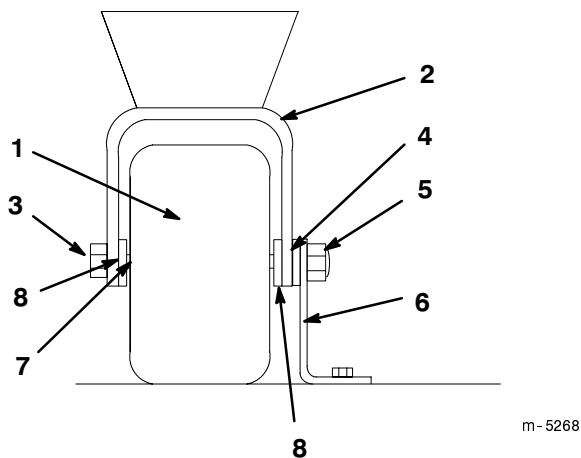


Figure 2

- | | |
|---------------|------------------|
| 1. Tail wheel | 5. Locknut |
| 2. Fork | 6. Crate bracket |
| 3. Bolt head | 7. Spacer |
| 4. Washer | 8. Shim Washers |

Remove Deck Banding

Remove any tie down banding that holds deck in place.

Check Tire Pressure

Check the air pressure in all tires; refer to Tire Pressure, page 40.

Activate the Battery

Bulk electrolyte with 1.260 specific gravity must be purchased from a local battery supply outlet.

1. Remove the battery from the machine.


Important Be careful not to damage the long vent tube when removing the battery box.

⚠
Danger
⚠

Battery electrolyte contains sulfuric acid which is a deadly poison and causes severe burns.

- **Do not drink electrolyte and avoid contact with skin, eyes or clothing. Wear safety glasses to shield your eyes and rubber gloves to protect your hands.**
- **Fill the battery where clean water is always available for flushing the skin.**
- **Follow all instructions and comply with all safety messages on the electrolyte container.**

- Remove filler caps from the battery. Slowly pour electrolyte into each cell until the electrolyte level is up to the lower part of the tube (Fig. 3).

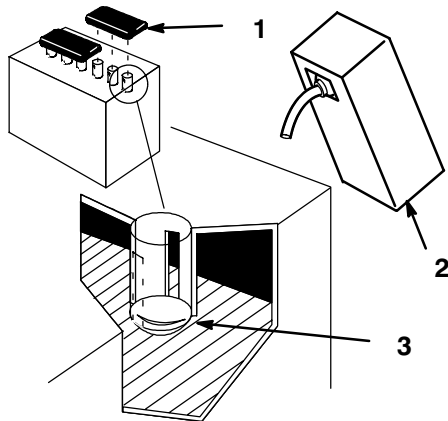


m-1262

Figure 3

- Filler caps
- Electrolyte
- Lower part of the tube

- Leave the covers off and connect a 3 to 4 amp battery charger to the battery posts (Fig. 4). Charge the battery at a rate of 4 amperes or less for 4 hours (12 volts).

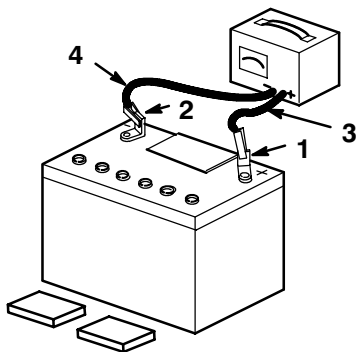

m-1254

Figure 4

- Positive post
- Negative post
- Charger red (+) wire
- Charger black (-) wire

⚠
Warning
⚠

Charging the battery produces gasses that can explode.


Never smoke near the battery and keep sparks and flames away from battery.

- When the battery is fully charged, disconnect the charger from the electrical outlet then from the negative and positive battery posts (Fig. 4).
- Slowly pour electrolyte into each cell until the level is once again up to the “UPPER” line on the battery case (Fig. 3) and install covers.

Install Battery

- Fill battery with electrolyte and charge, refer to Battery, page 46.
- Position battery in tray with terminal posts toward the engine (Fig. 5).
- Secure battery with 2 support rods, a battery clamp and 2 wing nuts (1/4 in.). Position support rods in mounting holes (Fig. 5). Tighten wing nuts so battery is held securely in position and will not slide. **Do not overtighten.**
- Install the positive (red) battery cable to positive (+) battery terminal then negative battery cable to the negative (-) battery terminal. Secure cables with 2 bolts (1/4 x 3/4 in.), washers (1/4 in.), and locknuts (1/4 in.).

Important Route cables so they do not contact metal edges, frame members, or tail wheel.

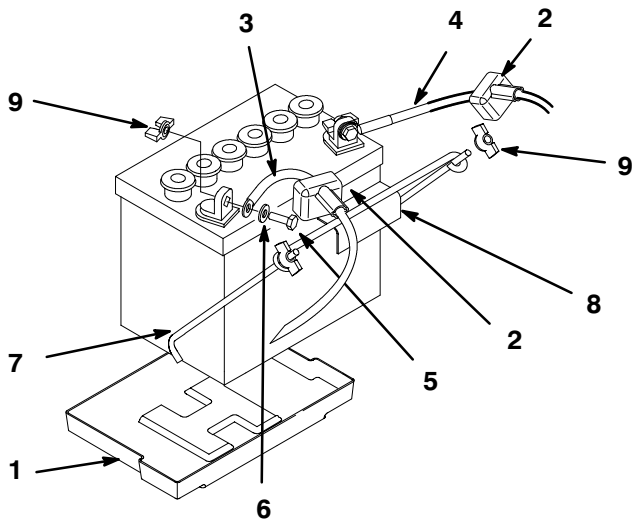

m-4886

Figure 5

- | | |
|---------------------------|------------------------|
| 1. Battery tray | 6. Washer, (1/4 in.) |
| 2. Terminal boot | 7. Battery support rod |
| 3. Positive battery cable | 8. Battery clamp |
| 4. Negative battery cable | 9. Wing nut, (1/4 in.) |
| 5. Bolt, 1/4 x 3/4 in. | |

Remove Machine from Crate

1. Tilt deck down and latch into position.
2. Machine can now be driven forward off crate (Fig. 5).

Hydraulic System

Checking the Hydraulic Fluid

Check the hydraulic fluid level before engine is first started.


Fluid Type: Mobil 1[®] 15w-50 synthetic oil or equivalent synthetic oil.

Important Use only oils specified. Other fluids could cause system damage.

Total System Capacity: 96 oz. (2.8 l)

1. Position machine on a level surface and set the parking brake.
2. Clean area around filler neck of hydraulic tank (Fig. 6).
3. Remove cap from filler neck. Look inside to check if there is fluid in the reservoir (Fig. 6).

4. If there is no fluid, add fluid to reservoir until approximately a 1/4" (6mm) below the top of baffle.
 5. Run the machine 15 minutes to allow any air to purge out of the system and warm fluid.
 6. Recheck level while fluid is warm. If required, add fluid to raise level to top of the baffle.
- Note:** Fluid level should be to the top of the baffle when fluid is warm (Fig. 6).
7. Install cap on filler neck.

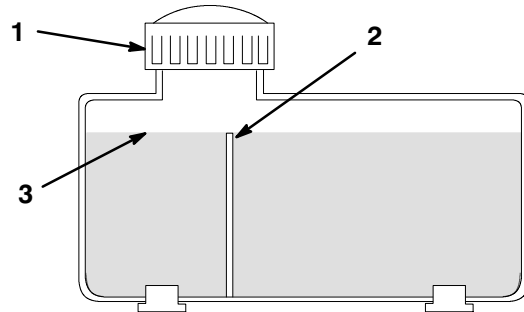

m-5279

Figure 6

- | | |
|-----------|---------------------|
| 1. Cap | 3. Fluid level—full |
| 2. Baffle | |

! **Warning** !

Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

- If hydraulic fluid is injected into the skin it must be surgically removed within a few hours by a doctor familiar with this type of injury. **Gangrene may result if this is not done.**
- Keep body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.
- Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.
- Make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to hydraulic system.

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

Think Safety First

Carefully read all the safety instructions and decals in the safety section. Knowing this information could help you, your family, pets or bystanders avoid injury.

The use of protective equipment for eyes, hearing, feet, and head is recommended.

Caution

This machine produces sound levels in excess of 85dBA at the operators ear and can cause hearing loss through extended periods of exposure.

Wear hearing protection when operating this machine.



Figure 7

1. Caution 2. Wear hearing protection

Controls

Become familiar with all the controls before you start the engine and operate the machine (Fig. 8).

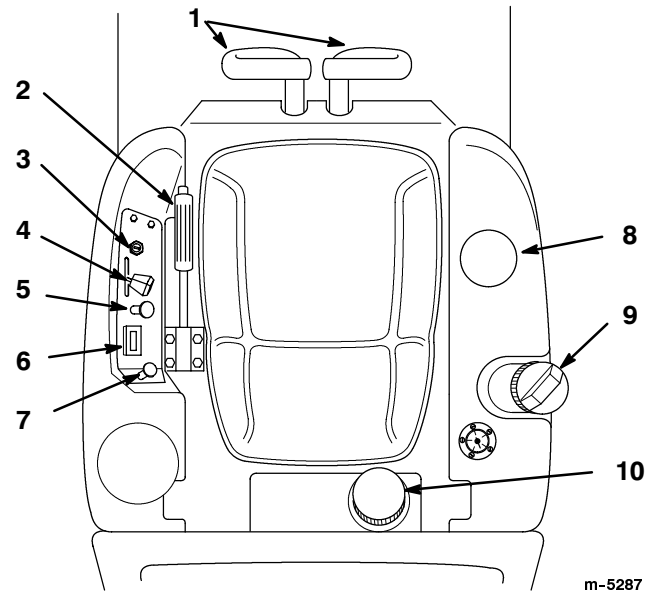


Figure 8

- | | |
|-------------------------|-------------------------|
| 1. Motion control lever | 6. Hourmeter |
| 2. Parking brake | 7. Choke |
| 3. Ignition switch | 8. Drink holder |
| 4. Throttle | 9. Fuel cap |
| 5. Power take off (PTO) | 10. Hydro reservoir cap |

Parking Brake

Always set the parking brake when you stop the machine or leave it unattended.

Setting the Parking Brake

1. Move the motion control levers to neutral (Fig. 8).
2. Pull up on the parking brake lever to set the parking brake (Fig. 9). The parking brake lever should stay firmly in the “SET” position.

Releasing the Parking Brake

1. Push in on the button and lower parking brake lever to “OFF” (Fig. 9).

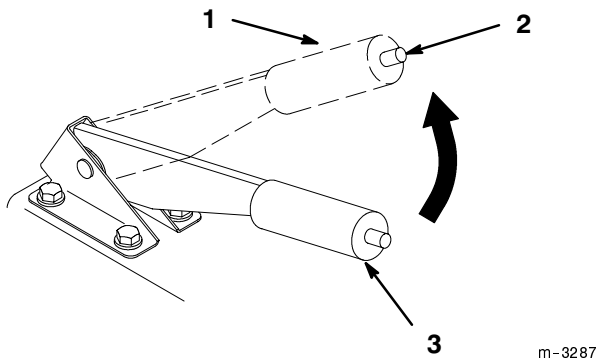


Figure 9

1. Parking brake-SET
2. Button
3. Parking brake-OFF

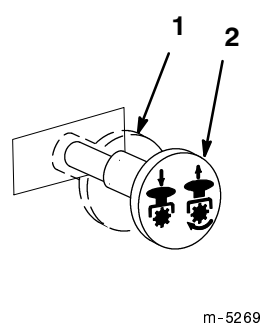


Figure 10

1. PTO-Off
2. PTO-On

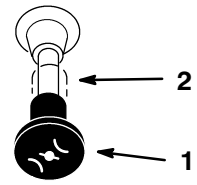


Figure 11

1. Choke-On
2. Choke-Off

Starting and Stopping Engine

Starting

1. Sit down on the seat and set the parking brake; refer to Setting the Parking Brake, page 15.
2. Move the motion control levers to neutral.
3. Move the PTO (power take off) switch to “OFF” (Fig. 10).
4. Move the throttle control midway between “SLOW” and “FAST” positions before starting a cold engine.
5. Move the choke control to “ON” position before starting a cold engine.

Note: A warm or hot engine may not require choking. After engine starts, move choke control to “OFF” position.

6. Turn ignition key to “START” to energize starter. When engine starts, release key.

Note: If starter does not crank, move the motion control levers slightly forward or backward to locate neutral.

Important Do not engage starter for more than 10 seconds at a time. If engine fails to start allow 30 second cool-down period between attempts. Failure to follow these instructions can burn out starter motor.

7. After the engine starts, gradually move the choke to “OFF” (Fig. 11). If the engine stalls or hesitates, move the choke back to “ON” for a few seconds. Then move the throttle lever to desired setting. Repeat this as required.

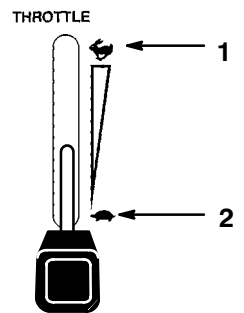


Figure 12

1. Fast
2. Slow

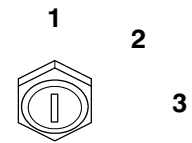


Figure 13

1. Off
2. Run
3. Start

Stopping

1. Move the throttle lever to “SLOW” (Fig. 12).
2. Set the parking brake.
3. Turn the ignition key to “OFF” (Fig. 13).

Note: If the engine has been working hard or is hot, let it idle for a minute before turning the ignition key “OFF.” This helps cool the engine before it is stopped. In an emergency, the engine may be stopped by turning the ignition key to “OFF” immediately.

4. Pull wire off spark plug(s) to prevent possibility of accidental starting before transporting or storing machine.
5. Close fuel shut off valve under fuel tank before transporting or storing machine.


Important Make sure fuel shut off valve is closed before transporting or storing machine, as fuel leakage may occur.

Operating Power Take Off (PTO)

The power take off (PTO) switch engages and disengages power to the attachment clutch (mower blades).

Engaging the Power Take Off (PTO)

1. With engine running, move motion control levers to neutral to stop the machine.
2. To prevent engine stalling, from heavy load, move throttle to “FAST” position.
3. Pull the power take off (PTO) switch to the “ON” position to engage (Fig. 14).

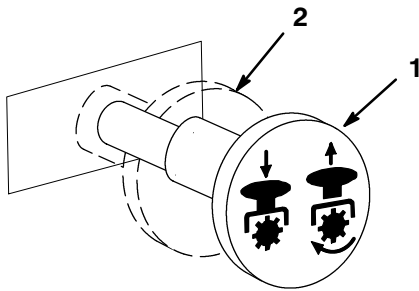

m-5269

Figure 14

1. ON-Engaged 2. OFF-Disengaged

Disengaging the Power Take Off (PTO)

1. Push the power take off (PTO) switch in. This moves the switch to the “OFF” position to disengage (Fig. 14).

The Safety Interlock System



Caution



If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

Understanding the Safety Interlock System

The safety interlock system is designed to prevent the engine from starting unless:

- The parking brake is “SET”
- The power take off (PTO) is disengaged “OFF”
- The motion control levers are in neutral position

The safety interlock system also is designed to stop the engine when:

- The motion control levers are moved out of neutral with the parking brake is “SET”
- You rise from the seat when the power take off (PTO) is “ON” or the motion control levers are not in neutral
- The motion control levers are moved out of neutral or PTO is engaged with the hopper tilted up

Testing the Safety Interlock System

Test the safety interlock system before you use the machine each time. If the safety system does not operate as described below, have an Authorized Service Dealer repair the safety system immediately.


1. “SET” the parking brake and move power take off (PTO) to “ON”. Try starting the engine; the engine should not crank.
2. “SET” the parking brake and move power take off (PTO) to “OFF”. Move one then the other motion control lever forward or reverse. Try starting the engine; the engine should not crank.
3. “SET” the parking brake, move power take off (PTO) to “OFF” and hold the motion control levers in neutral. Now start the engine. While the engine is running engage the power take off (PTO) and rise slightly from the seat; the engine should stop.

4. “SET” the parking brake, move power take off (PTO) to “OFF” and hold the motion control levers in neutral. Now start the engine. While the engine is running, move the motion control levers forward or reverse; the engine should stop.
5. Tilt the hopper up, “SET” the parking brake, move power take off (PTO) to “OFF” and hold the motion control levers in neutral. Now start the engine. While the engine is running, move the motion control levers forward or reverse; the engine should stop.

Instruments

Hour Meter

The hour meter records the number of hours the engine has operated. It operates when the engine is running. Use these times for scheduling regular maintenance.

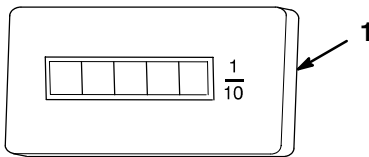

m-5270

Figure 15

1. Hour meter

Driving Forward or Backward

The throttle control regulates the engine speed as measured in rpm (revolutions per minute). Place the throttle control in the “FAST” position for best attachment performance. Always operate in the full throttle position when operating attachments.

Forward

1. Release the parking brake; refer to Setting the Parking Brake, page 15.
2. To go forward, slowly push the motion control levers forward (Fig. 16).


Note: Engine will kill if motion control levers are moved with parking brake engaged.

To go straight, move both motion control levers the same distance (Fig. 16).

To turn move the motion control lever toward neutral, on the side you want to turn toward (Fig. 16).

The farther you move the motion control levers in either direction, the faster the machine will move in that direction.

To slow or stop move the motion control levers to neutral.

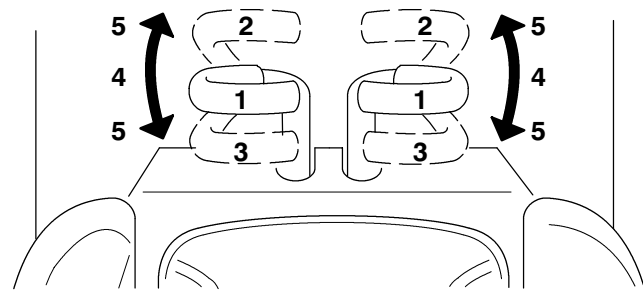

m-3288

Figure 16

- | | |
|--|-------------|
| 1. Motion control lever-neutral position | 3. Backward |
| 2. Forward | 4. Slow |
| | 5. Fast |

Backward

1. Release the parking brake; refer to Setting the Parking Brake, page 15.
2. To go backward, slowly pull the motion control levers rearward (Fig. 16).

To go straight, move both motion control levers the same distance (Fig. 16).

To turn move the motion control lever toward neutral, on the side you want to turn toward (Fig. 16).

To slow or stop move the motion control levers to neutral.

Stopping the Machine

To stop the machine, move the motion control levers to neutral, disengage the power take off (PTO), and turn the ignition key to “OFF” to stop the engine. Also set the parking brake when you leave the machine; refer to Setting the Parking Brake, page 15. Remember to remove the key from the ignition switch.



Caution



Children or bystanders may be injured if they move or attempt to operate the tractor while it is unattended.

Always remove the ignition key and set the parking brake when leaving the machine unattended, even if just for a few minutes.

Positioning the Seat

The seat can move forward and backward. Position the seat where you have the best control of the machine and are most comfortable.

1. To adjust, remove the hairpin cotter and washer, and tip seat forward (Fig. 17).




m-4873

Figure 17

1. Hairpin Cotter
2. Washer
3. Seat base

2. Loosen the seat mounting bolts slide seat to the desired position in the adjusting slots and tighten the mounting bolts (Fig. 18).
3. Lower seat and secure with washer and hairpin cotter (Fig. 17).

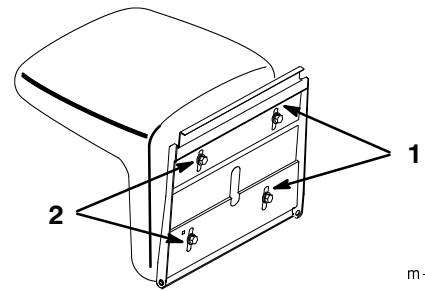

m-3280

Figure 18

1. Adjustment slot
2. Mounting bolt



Adjusting Height-of-Cut

The height-of-cut can be adjusted from 1 to 4-1/2 in. (25 to 115 mm) in 1/2 in. (13 mm) increments by relocating four hairpin cotter pins in different hole locations.

Note: Fine adjustment can be done by removing washers.

1. To adjust, remove hairpin cotter from height-of-cut post (Fig. 19).
2. Select hole in height-of-cut post corresponding to the height-of-cut desired. Lift on side of deck to align holes and insert hairpin cotter (Fig. 19).

Important All four hairpin cotter pins must be in the same hole location for a level cut.

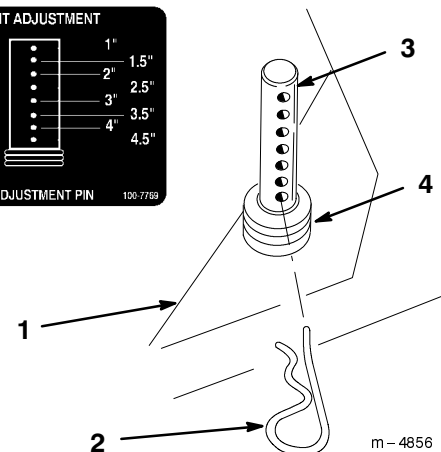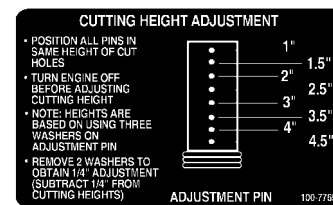

m-4856

Figure 19

1. Carrier Frame
2. Hairpin Cotter
3. Height-of-Cut Post
4. Washers

Tilting the Mower

The mower can be tilted up for ease of service or to shorten unit length for transport and storage.



Caution



The mower deck is heavy and could injure someone while raising or lowering the deck.

- Use caution when raising or lowering deck.

To Raise Mower

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to “OFF” to stop the engine. Remove spark plug wire(s) and remove the key.
2. Lift on side of carrier frame near latch to release weight on latch pin.
3. Pull out on latch pin to release and rotate into notch to hold in the unlocked position (Fig. 20). Repeat on the other side.
4. Rotate latch pins into released position after deck has been lowered onto rear rollers.

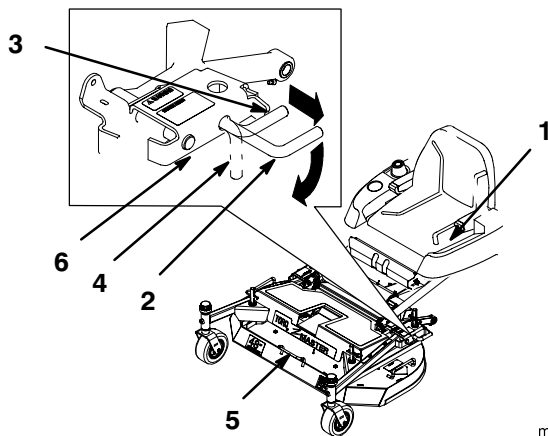


Figure 20

m-4864

- | | |
|----------------------|-------------------------------|
| 1. Parking brake | 4. Locked Position |
| 2. Latch pin | 5. Deck Handle |
| 3. Unlocked Position | 6. Lift here - after lowering |
5. Standing in front of the mower, lift up on deck handle and push rearward on front to raise mower (Fig. 21).
 6. Raise mower until it contacts stops and latch pins snap into locked position.

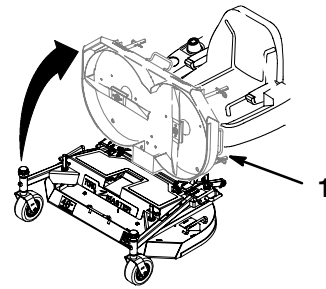


Figure 21

m-4863

1. Mower up

To Lower Mower

1. Pull out latch pins and rotate into notch to hold in the unlocked position (Fig. 20).
2. Standing in front of the mower, pull front deck handle forward and lower mower (Fig. 21).
3. Rotate latch pins into released position and lift on side of carrier frame near latch pin until latch pin engages (Fig. 20). Repeat on the other side.

Dumping the Hopper

The hopper is equipped with a sensor that checks for a full condition. When the alarm buzzer sounds the PTO must be moved to the “OFF” position immediately and the hopper needs to be emptied.

Important The hopper is interlocked with the PTO and the engine will stop if these steps are not followed before dumping the hopper or getting out of the seat.

1. Locate the traction unit so the hopper door is located where you want to dump the clippings.
2. Ensure that the power take off (PTO) switch is off, move the traction controls to neutral and set the parking brake.
3. Unhook the rear door latch (Fig. 22).
4. Unhook the front latch on hopper (Fig. 22).
5. Lift up on the hopper in the lower front and dump the clippings (Fig. 22).

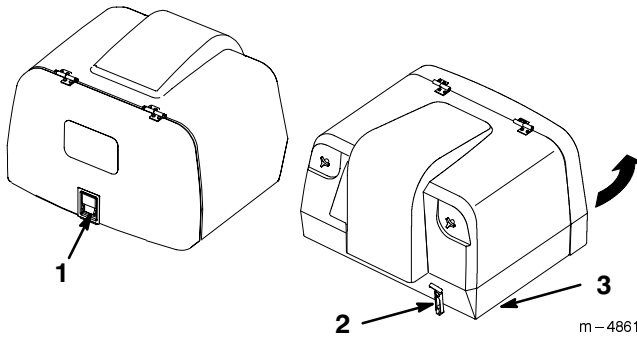


Figure 22

1. Rear Door latch
2. Front Hopper latch
3. Lift here

6. Lower the hopper. Firmly secure the hopper door so it latches and secure the front hopper latch (Fig. 22).

Important Front hopper latch must be secured to prevent hopper from accidentally tilting during transport. Ensure the hopper door latch is fully closed.

Pushing the Machine by Hand

Important Always push the machine by hand. Never tow the machine because hydraulic damage may occur.

To Push the Machine

1. Disengage the power take off (PTO) and turn the ignition key to “OFF” to stop the engine.
2. Rotate pump by-pass valves counterclockwise 2 turns. This allows hydraulic fluid to by-pass the pump enabling the wheels to turn freely (Fig. 23).

Important Rotate by-pass valve a maximum of 2 turns so the valve does not come out of the body causing fluid to run out.

3. Release the parking brake.
4. Push the machine.

To Operate the Machine

1. Turn the by-pass valves clockwise until they are tight. Do not over tighten (Fig. 23).

Note: The machine will not drive unless by-pass valves are turned in completely.

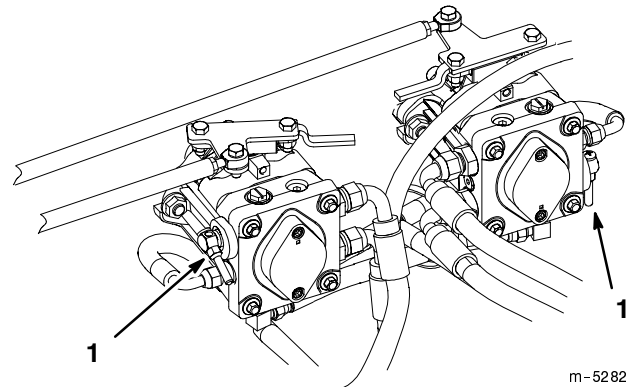


Figure 23

1. By-pass valve

Removing the Deck and Carrier Frame

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to “OFF” to stop the engine. Remove the key.
2. Lifting slightly on the deck handles, remove hairpin cotters from the height-of-cut posts and separate mower from carrier frame (Fig. 24).

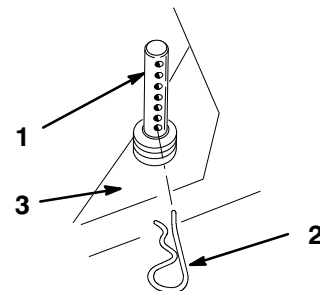


Figure 24

1. Height -of-cut post
2. Hairpin Cotter
3. Carrier Frame

3. Remove plenum from traction unit. Refer to Plenum Removal on page 27.
4. Raise seat, to gain access to plenum cable. Remove washer and nut from plenum cable end (Fig. 25).

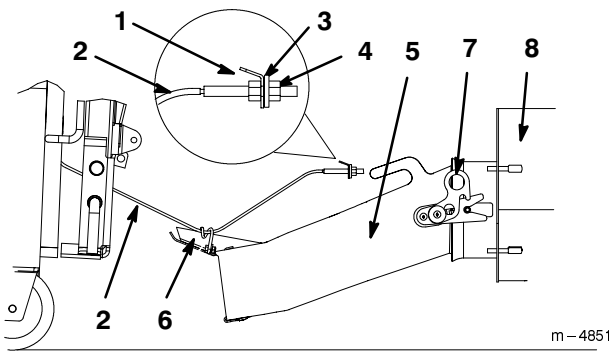


Figure 25

- | | |
|-----------------|-----------------------|
| 1. Bracket | 5. Plenum |
| 2. Plenum Cable | 6. Plenum cable guide |
| 3. Washer | 7. Plenum Latches |
| 4. Nut | 8. Blower Housing |

5. Tilt carrier frame into its upright position. Refer to Tilting the Mower on page 19.
6. Place a block, approximately 4 inches high, under the carrier frame. This will raise the frame vertically.
7. Check to see if tension has been removed from the spring assemblies. If tension remains add blocks to raise carrier frame higher. If there is too much tension use a smaller block (Fig. 26).
8. Remove shoulder bolts (3/8 x 7/8 in. (23 mm)) and locknuts (3/8 in.) securing spring end plate assemblies to carrier frame (Fig. 26).

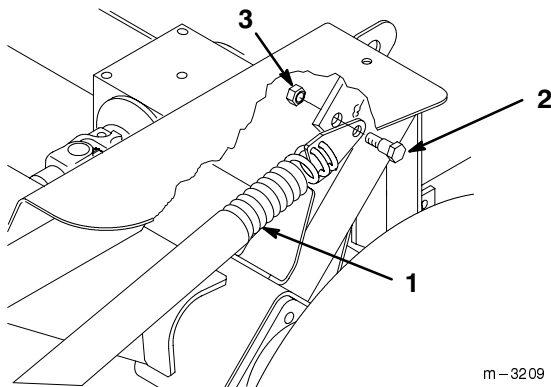


Figure 26

- | | |
|---|---------------------|
| 1. Spring Assembly | 3. Locknut, 3/8 in. |
| 2. Shoulder Bolt, 3/8 x 7/8 in. (22 mm) | |

9. Remove the block under the carrier frame.

10. Tilt carrier frame down.

11. Remove the two nuts and bolts that hold the bar for rubber guard. The bar is under the motion control levers. Fold the rubber guard onto the footrest (Fig. 27).

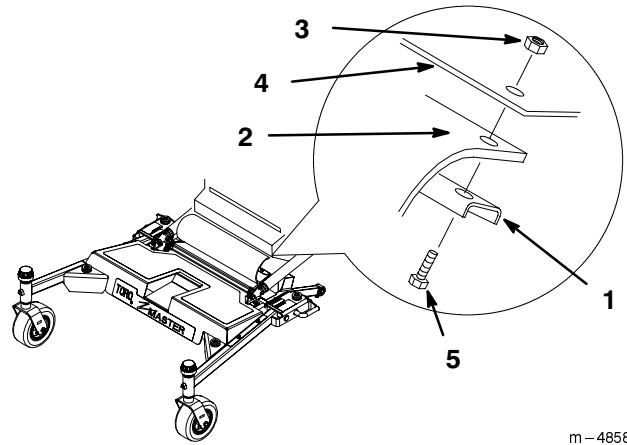


Figure 27

- | | |
|-----------------|------------------|
| 1. Bar | 4. Machine Panel |
| 2. Rubber Guard | 5. Screw |
| 3. Nut | |

12. Remove hairpin cotters and pivot pin assemblies from push arms at traction unit pivot brackets (Fig. 28).

Note: Save all hardware for use when installing mower. Items 3 and 4 are part of traction unit.

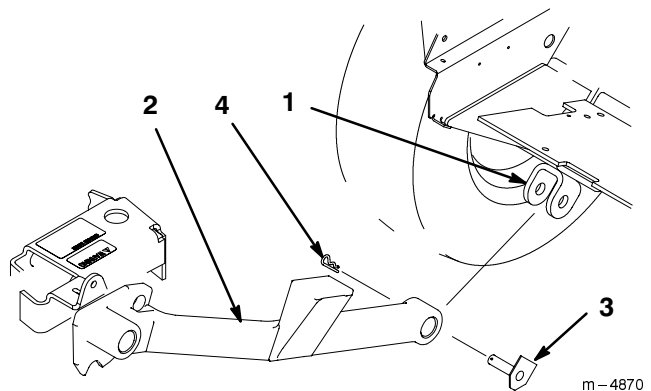


Figure 28

- | | |
|------------------|----------------------------|
| 1. Pivot Bracket | 3. Pivot Pin Assembly-flat |
| 2. Push Arm | 4. Hairpin Cotter |

Note: Drive shaft remains with traction unit.

13. Drive roll pin through hole in PTO drive shaft to separate from gearbox shaft (Fig. 29).

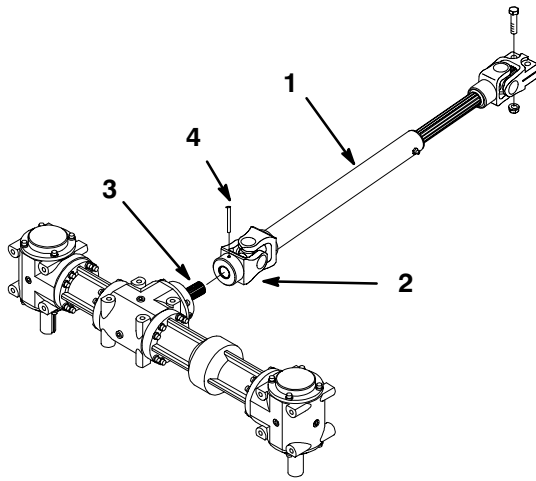


Figure 29

- | | |
|--------------------|------------------|
| 1. PTO Driveshaft | 3. Gearbox shaft |
| 2. Universal Joint | 4. Roll Pin |

M-4532

- Slide the driveshaft on gearbox shaft. Install 2 bolts (3/8 in. x 1-5/8 in.) and locknuts (3/8 in.) in universal joint (Fig. 31).

Note: The gearbox shaft has a spline to correctly align gearbox and PTO drive shaft. Align the spline and slide the PTO drive shaft onto gearbox.

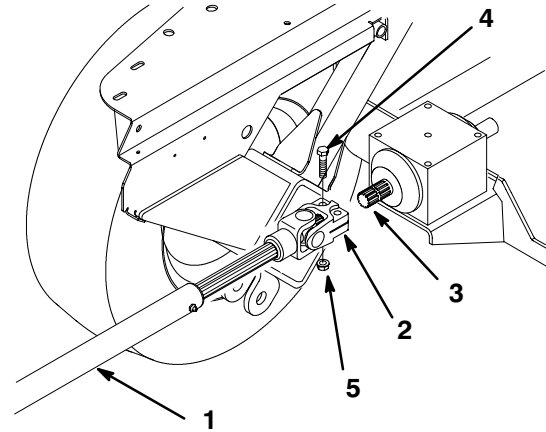


Figure 31

- | | |
|--------------------|--------------------------|
| 1. PTO Driveshaft | 4. Bolt, 3/8 x 1-5/8 in. |
| 2. Universal Joint | 5. Locknut, 3/8 in. |
| 3. Gearbox shaft | |

m-3198

- Move deck and carrier frame away from traction unit.

Important Remove drive shaft from gearbox shaft if you do not hook up a deck immediately or when putting on optional attachments.

- Remove 2 bolts (3/8 x 1-5/8 in. (41.5 mm)) and 2 locknuts (3/8 in.) from universal joint and slide the driveshaft off gearbox shaft (Fig. 30).

Note: Save all hardware for use when installing mower.

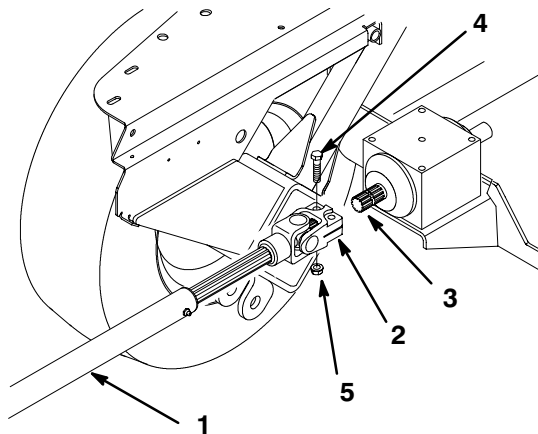


Figure 30

- | | |
|--------------------|------------------------------------|
| 1. PTO Driveshaft | 4. Bolt, 3/8 x 1-5/8 in. (41.5 MM) |
| 2. Universal Joint | 5. Locknut, 3/8 in. |
| 3. Gearbox shaft | |

m-3198

- Position carrier frame in front of traction unit and place push arms into clevises (Fig. 32).
- Install push arms with pivot pin assemblies, aligned with flat against frame, and secure with hairpin cotters (Fig. 32).

Note: Pivot pin assemblies and hairpin cotters are part of traction unit.

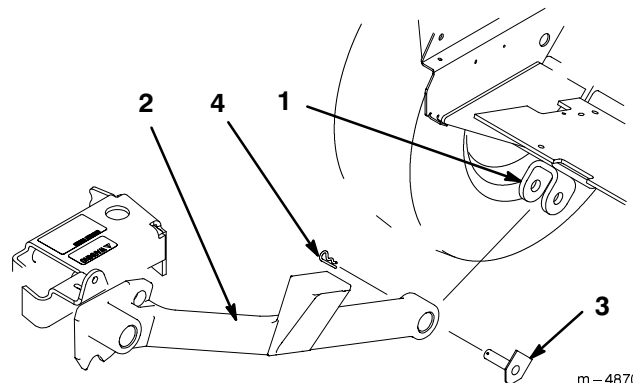


Figure 32

- | | |
|-------------|----------------------------|
| 1. Clevis | 3. Pivot Pin Assembly-flat |
| 2. Push Arm | 4. Hairpin Cotter |

m-4870

- Tilt carrier frame into its upright position. Refer to Tilting the Mower on page 19.

Installing Deck and Carrier Frame

Note: Install drive shaft to gearbox shaft if it is not hooked up. Proceed to step 2 if the driveshaft is hooked up.

- Place a block, approximately 4 inches high, under the carrier frame. This will raise the frame vertically.
- Secure spring end plate assembly to carrier frame with shoulder bolt (3/8 in. x 7/8 in.) and locknut (3/8 in.) (Fig. 33).

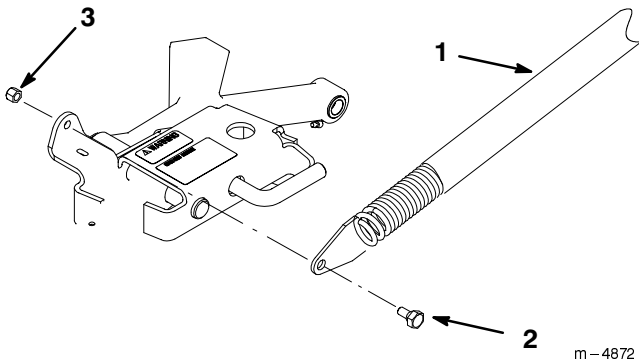


Figure 33

- Spring Assembly
- Shoulder Bolt, 3/8 x 7/8 in.
- Locknut, 3/8 in.

Note: You may have to install spring to traction unit if it is not installed.

- Install shoulder bolts (3/8 in. x 7/8 in.) shoulder bolts and locknuts (3/8 in.) securing spring end plate assemblies to traction unit (Fig. 34).

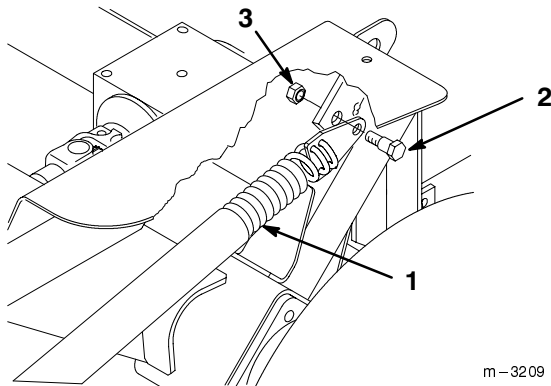


Figure 34

- Spring Assembly
- Shoulder Bolt, 3/8 x 7/8 in.
- Locknut, 3/8 in.

- Position mower in front of traction unit.
- Rotate PTO drive shaft so holes align with hole in gearbox shaft and slide together (Fig. 35).
- Drive roll pin through hole to secure PTO drive shaft to gearbox shaft (Fig. 35).

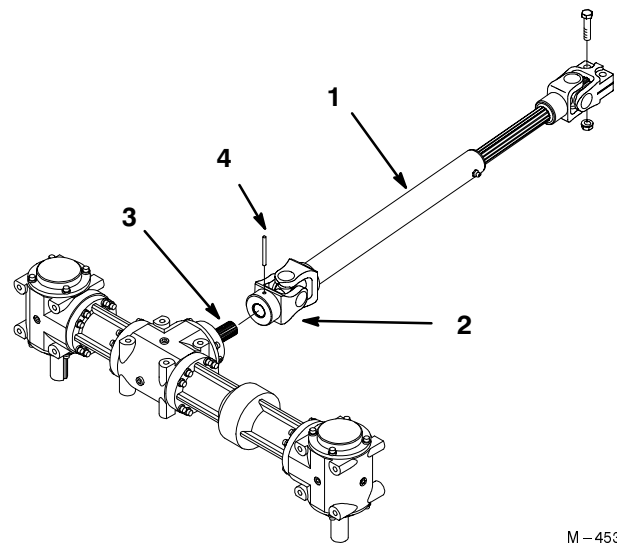


Figure 35

- PTO Driveshaft
- Universal Joint
- Gearbox shaft
- Roll Pin

- Remove the 4 in. block. Release the latch levers and push carrier frame down. Latch pins should lock.
- Select hole in height-of-cut post corresponding to the height-of-cut desired. Lift on side and front to align holes and hairpin cotter (Fig. 36).

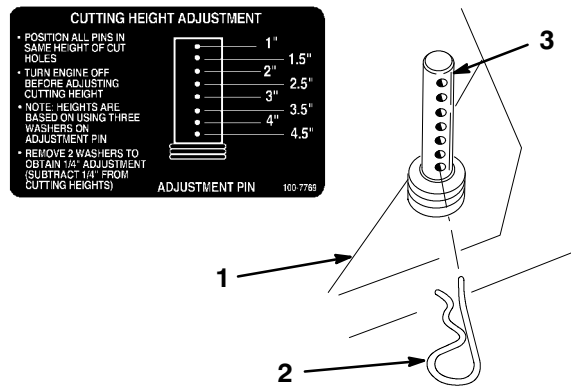


Figure 36

- Carrier Frame
- Hairpin Cotter
- Height-of-Cut Post

Note: All four hairpin cotters should be in the same hole location for a level cut.

- Tilt carrier frame into its upright position. Refer to Tilting the Mower on page 19.
- Route plenum cable under seat. Raise seat, to gain access to plenum cable. Install cable into bracket and install washer and nut (Fig. 37).

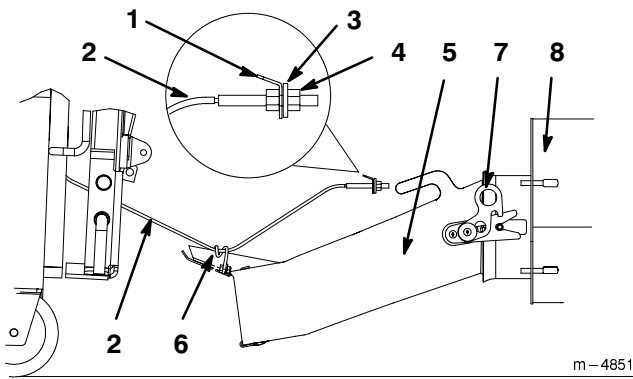


Figure 37

- | | |
|-----------------|-----------------------|
| 1. Bracket | 5. Plenum |
| 2. Plenum Cable | 6. Plenum cable guide |
| 3. Washer | 7. Plenum Latches |
| 4. Nut | 8. Blower Housing |

15. Install plenum to blower housing and wrap cable around guide. Refer to Plenum Installation on page 27.

16. Install the rubber guard with bar, nuts and bolts under the motion control levers. (Fig. 38).

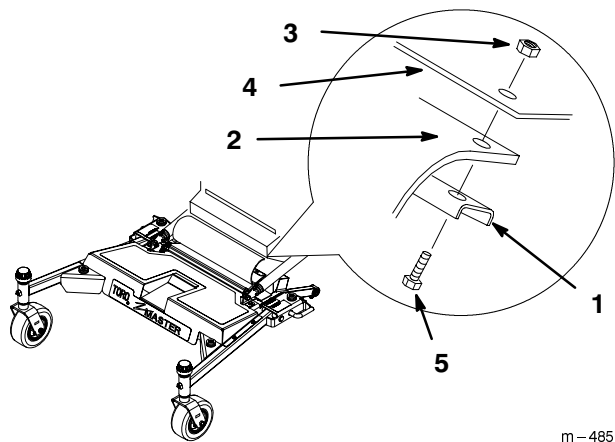


Figure 38

- | | |
|-----------------|------------------|
| 1. Bar | 4. Machine Panel |
| 2. Rubber Guard | 5. Screw |
| 3. Nut | |

Install Mulching Baffle

Hardware to install mulching baffle is installed in deck.

1. Tilt mower into the vertical position, refer to; Tilting the Mower, page 19.
2. Remove screws, washers, left and right bagger baffles locknuts, carriage bolts, and left and right discharge baffles from the mower (Fig. 41).

Note: Reinstall all hardware into deck for use when reinstalling bagging baffles and safety.

3. Remove screws and washers that are installed into deck for securing mulching baffle (Fig. 39).
4. Install baffle using hardware that was removed. (Fig. 39).

Important All bagging and discharge baffles must be removed when mulching (Fig. 41).

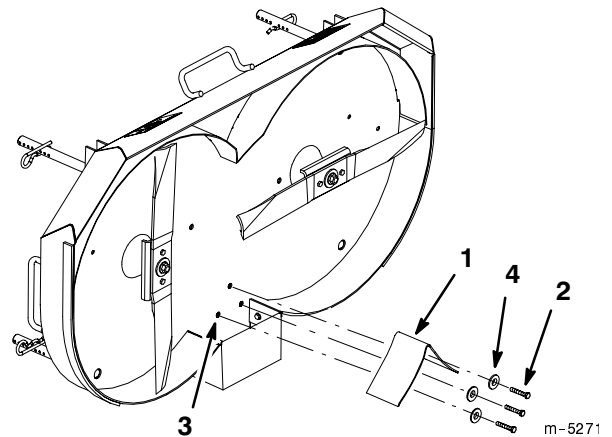


Figure 39

- | | |
|--------------------|---------------------------------------|
| 1. Mulching baffle | 3. Retainer Nut (On top side of deck) |
| 2. Cap Screw | 4. Washer |

Mulching Operation

When operating the mower with the mulching baffle installed, you must disengage the blower drive belt.

1. Stop the engine, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
2. Remove hairpin cotter and clevis pin from idler arm (Fig. 40).
3. Pull up on the spring loaded idler arm, behind blower on lefthand side of unit, to relax pressure on blower belt (Fig. 40).

- Align hole in idler arm with slot in frame and insert clevis pin. Secure with hairpin cotter to hold in position.

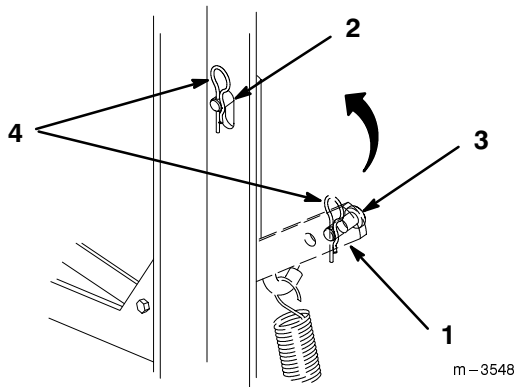


Figure 40

- | | |
|---------------|-------------------|
| 1. Idler arm | 3. Clevis pin |
| 2. Frame slot | 4. Hairpin cotter |

- When operating in mulching mode, the plenum can be removed to prevent damage to it. Refer to Plenum Removal and Installation on page 27.

Install Bagger and Discharge Baffles

When changing from mulching to bagging, baffles must be removed and replaced

- Tilt mower into the vertical position, refer to; Tilting the Mower, page 19.
- Remove screws, washers and mulching baffle from the mower (Fig. 39).

Note: Reinstall cap screws into deck for use when installing mulching baffle and safety.

- Position the left and right front bagger baffles inside the mower and secure with screws into the retainer nuts (Fig. 41).
- Position the left and right rear discharge baffles inside the mower. Secure with screws and washers through the bottom and carriage bolts inside of mower rear discharge. Secure carriage bolts with locknuts (Fig. 41).

Important All bagging baffles and discharge baffles must be in place when bagging.

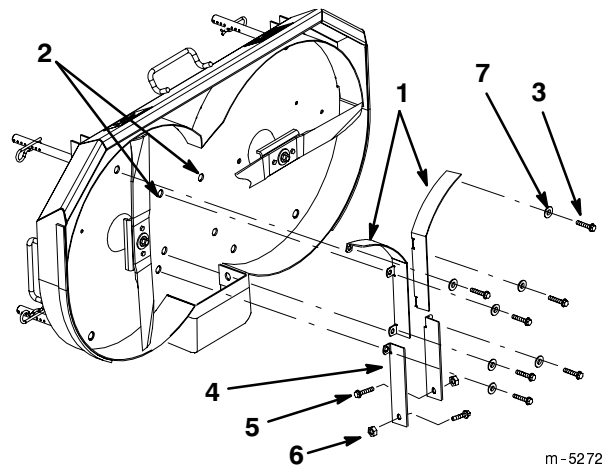


Figure 41

- | | |
|---------------------|------------------|
| 1. Bagger baffle | 5. Carriage Bolt |
| 2. Retainer Nut | 6. Lock Nut |
| 3. Screw | 7. Washer |
| 4. Discharge baffle | |

Bagger Operation

When operating the mower with bagger baffles installed you must engage the blower drive belt.

- Stop the engine, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
- Ensure belt is around blower, idler and PTO pulleys.
- Push up on the spring loaded idler arm, behind blower on lefthand side of unit, to relax pressure on clevis pin (Fig. 42).
- Remove hairpin cotter and clevis pin from slot in frame and allow idler down, to tension belt (Fig. 42).
- Install hairpin cotter and clevis pin in outer hole of idler arm for storage (Fig. 42).

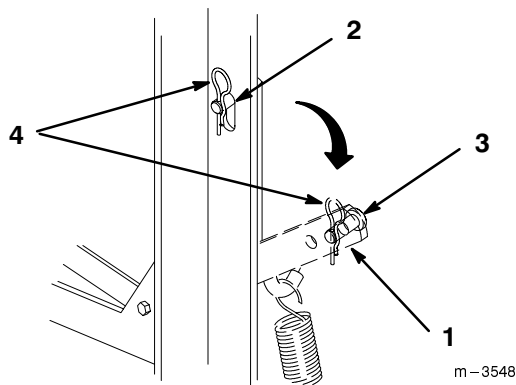


Figure 42

- | | |
|---------------|-------------------|
| 1. Idler arm | 3. Clevis pin |
| 2. Frame slot | 4. Hairpin cotter |

Plenum Removal and Installation

To avoid damage to the plenum, remove the plenum when not in bagging mode.

! **Caution** !

Hands and fingers can be cut when removing bagging components.

- **Keep hands and fingers out of blower housing.**
- **Do not operate in bagging mode without entire bagging system in place.**
- **Stop engine before cleaning bagging system.**

Plenum Removal

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to "OFF" to stop the engine. Remove the key.
1. Tilt deck to upright position. Refer to Tilting the Mower on page 19.

2. Reach through from lefthand side in front of traction tire, lift plenum and unwind cable clockwise around plenum cable guide.
3. Flip seat up and unlatch plenum from both sides of blower inlet (Fig. 43).
4. Pull plenum out from blower housing and place it on the ground (Fig. 43).
5. Pull or slide plenum out from between deck and traction tire (Fig. 43).

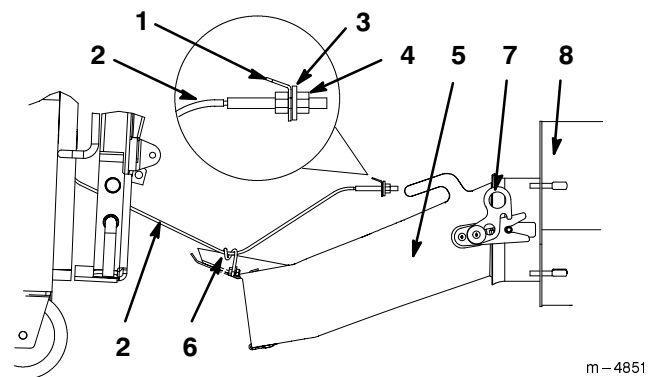


Figure 43

- | | |
|-----------------|-----------------------|
| 1. Bracket | 5. Plenum |
| 2. Plenum Cable | 6. Plenum cable guide |
| 3. Washer | 7. Plenum Latches |
| 4. Nut | 8. Blower Housing |

Plenum Installation

1. Tilt deck to upright position. Refer to Tilting the Mower on page 19.
2. Slide plenum, with blower end in first, between deck and traction tire.
3. Flip seat up, reach down and direct plenum into blower housing. Ensure the plenum latches lock into both sides of blower housing (Fig. 43).
4. Reach through from lefthand side in front of traction tire, lift plenum and wind cable counter clockwise around plenum cable guide (Fig. 43).

Maintenance

Note: Determine the left and right sides of the machine from the normal operating position.

Recommended Maintenance Schedule

Maintenance Service Interval	Maintenance Procedure
After first use	<ul style="list-style-type: none"> • Check the hydraulic fluid level. • Change the oil. • Change the hydraulic filter.
Each use	<ul style="list-style-type: none"> • Check the oil level.¹ • Check the safety system. • Clean the hopper. • Clean the mower housing. • Clean the cooling systems.
Every 5 hours	<ul style="list-style-type: none"> • Check the hydraulic fluid level. • Check the cutting blades. • Grease the chassis.¹ • Grease the drive shaft.¹ • Grease the push arm bearings. • Grease the PTO idler.¹ • Check the battery electrolyte.
Every 25 hours	<ul style="list-style-type: none"> • Grease the castor wheels. • Service the foam air cleaner.¹
Every 50 hours	<ul style="list-style-type: none"> • Check the belts for wear/cracks. • Check the tire pressure.
Every 100 hours	<ul style="list-style-type: none"> • Change the engine oil. • Check the mower gearbox oil. • Check the primary air cleaner.¹ • Check the hydraulic lines. • Change the mower gearbox oil (initial). • Clean the cooling systems.
Every 200 hours	<ul style="list-style-type: none"> • Change the oil filter. • Change the hydraulic filter. • Check the spark plug(s). • Replace the fuel filter.
Every 600 hours	<ul style="list-style-type: none"> • Replace the safety air cleaner.¹
Before storage	<ul style="list-style-type: none"> • Perform all maintenance procedures listed above before storage • Drain the gasoline. • Charge the battery and disconnect the cables. • Paint chipped surfaces.

¹More often in dusty, dirty conditions

Important Refer to your engine operator's manual for additional maintenance procedures.



Caution



If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition and disconnect the wire(s) from the spark plug(s) before you do any maintenance. Set the wire(s) aside so that it does not accidentally contact the spark plug(s).

Cutting Blade Service

To ensure a superior quality of cut, keep the blades sharp. For convenient sharpening and replacement, you may want to keep extra blades on hand.



Danger



A worn or damaged blade can break, and a piece of the blade could be thrown into the operator's or bystander's area, resulting in serious personal injury or death.

- Inspect the blade periodically for wear or damage.
- Replace a worn or damaged blade.

Blades must be replaced if a solid object is hit, if the blade is out of balance or is bent. To ensure optimum performance and continued safety conformance of the machine, use genuine TORO replacement blades. Replacement blades made by other manufacturers may result in non-conformance with safety standards.


Important Always check gearbox output shafts for straightness after impacting solid objects with blades. Severe damage could result if gearbox is operated with bent output shafts

Before Inspecting or Servicing the Blades

Park the machine on a level surface, disengage the blade control (PTO) and set the parking brake. Turn the ignition key to "OFF" to stop the engine. Remove the key and disconnect the spark plug wire(s) from the spark plug(s).

Inspecting the Blades

1. Inspect the cutting edges (Fig 44). If the edges are not sharp or have nicks, remove and sharpen the blades. Refer to Sharpening the Blades on page 31.
2. Inspect the blades, especially the curved area (Fig. 44). If you notice any damage, wear, or a slot forming in this area (item 3 in Fig. 44), immediately install a new blade.

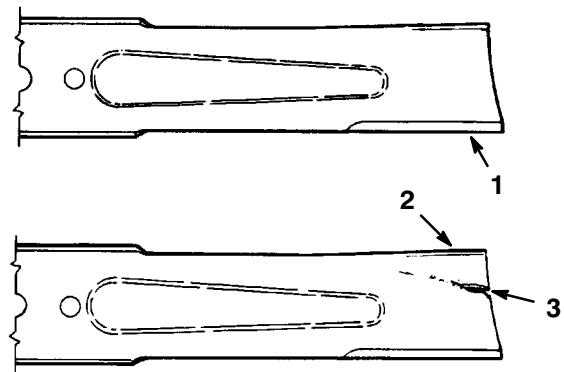

m-151

Figure 44

- | | |
|-----------------|----------------------|
| 1. Cutting Edge | 3. Wear/slot Forming |
| 2. Curved Area | |

Checking for Bent Blades

1. Rotate the blades until the ends face forward and backward (Fig. 45). Measure from a level surface to the cutting edge tip of the blades (Fig. 45). Note this dimension.
2. Rotate the opposite ends of the blades forward. Measure from a level surface to the cutting edge tip of the blades at the same position as in step 1 above. The difference between the dimensions obtained in steps 1 and 2 must not exceed 1/8 in. (3 mm). If this dimension exceeds 1/8

in. (3 mm), the blade is bent and must be replaced. Refer to Removing the Blades and Installing the Blades on page 30.

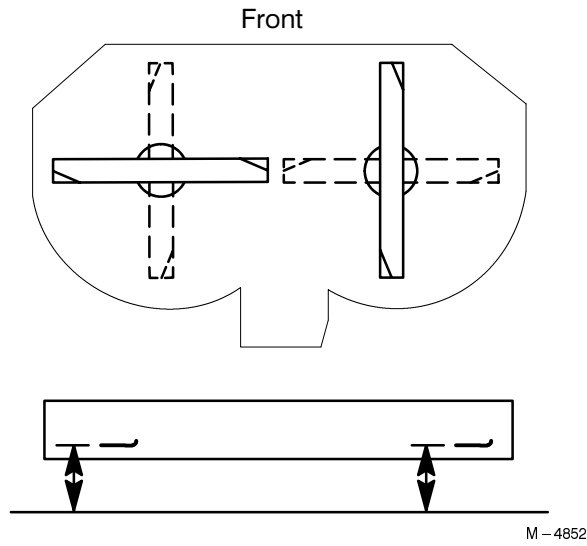


Figure 45

Warning

A blade that is bent or damaged could break apart and could seriously injure or kill you or bystanders.

- Always replace a bent or damaged blade with a new blade.
- Never file or create sharp notches in the edges or surfaces of the blade.

Removing the Blades

Hold the blade end using a rag or thickly-padded glove. Remove the retainer bolt with its washer and spacer, and the shear bolts and locknuts from the blade retainer (Fig. 47).

Installing the Blades

Important The blades are different for each side and rotate in opposite directions forcing clippings to the center rear of the mower. Align cutting edges properly when installing. Sails of blades must point towards the top of the deck.

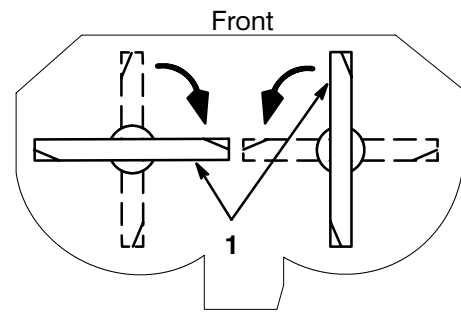


Figure 46

1. Cutting edge

Note: Use anti-seize lubricant on spindle and keyway before installing blade retainer.

1. Install the key in the retainer and install blade retainer to spindle (Fig. 47).
2. Install the blade, spacer, washer, and retainer bolt to spindle (Fig. 47).
3. Torque the retainer bolt to 85-110 ft.-lb.

Important Blade should spin after blade bolt is torqued. If not, check to make sure the spacer is installed correctly.

4. Position the blade onto the blade retainer and secure with shear bolts and locknuts (Fig. 47).

Important The curved part of the blade, the sail, must be pointing upward toward the top of the mower to ensure proper cutting.

5. Torque blade shear bolts to **90 in.-lb.**

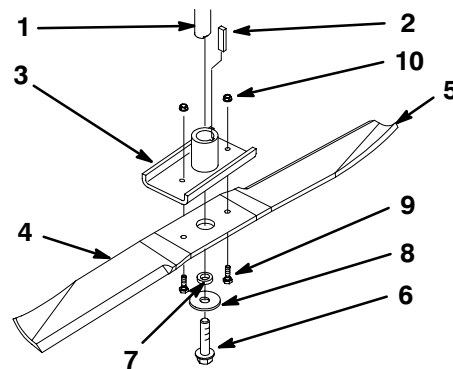


Figure 47

- | | |
|-----------------------|------------------|
| 1. Spindle | 6. Retainer bolt |
| 2. Key | 7. Spacer |
| 3. Blade retainer | 8. Washer |
| 4. Blade | 9. Shear Bolt |
| 5. Sail Area of Blade | 10. Locknut |

Sharpening the Blades

1. Use a file to sharpen the cutting edge at both ends of the blade (Fig. 48). Maintain the original angle. The blade retains its balance if the same amount of material is removed from both cutting edges.

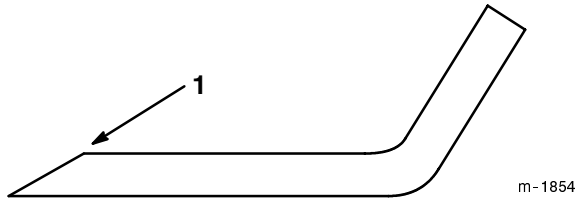


Figure 48

1. Sharpen at original angle

2. Check the balance of the blade by putting it on a blade balancer (Fig. 49). If the blade stays in a horizontal position, the blade is balanced and can be used. If the blade is not balanced, file some metal off the end of the sail area only (Fig. 49). Repeat this procedure until the blade is balanced.




Figure 49

1. Blade
2. Balancer

Correcting Cutting Unit Mismatch

If one deck blade cuts lower than the other, correct as follows:

1. Stop the engine, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
2. Adjust the tire pressure in all tires to specifications and check that the blades and spindle shafts are not bent. Refer to Checking for Bent Blades on page 29.
3. Set the height-of-cut to the 2-1/2 in. position. Refer to Adjusting the Height-Of-Cut in the Operation section. Make sure there is no excessive wear on push arm pivot points.
4. Refer to Matching Height-of-Cut, Checking Front to Rear Pitch and Checking Side to Side Leveling on pages 31, 31 and 32.

Matching Height of Cut

The height of cut needs to be checked and correct before the front to rear pitch and side to side leveling is performed.

1. Check the tire pressure on both deck and traction unit.
2. Set the height-of-cut to the 2-1/2 in. position following the height-of-cut decal.
3. With the machine on level surface, position one blade front-to-rear (Fig. 50). Measure at "A" from level surface to the cutting edge of the blade tips (Fig. 51).
4. The measurement should be 2-1/2 in. (6-9.5 mm). Rotate blades and repeat for opposite blade.

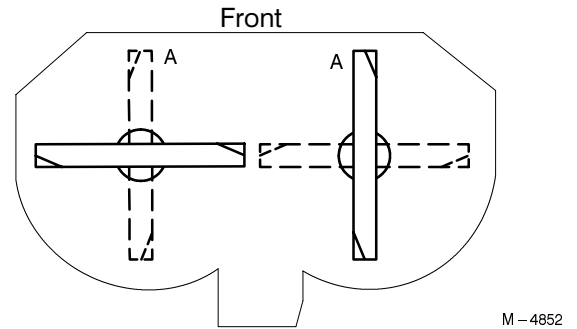


Figure 50

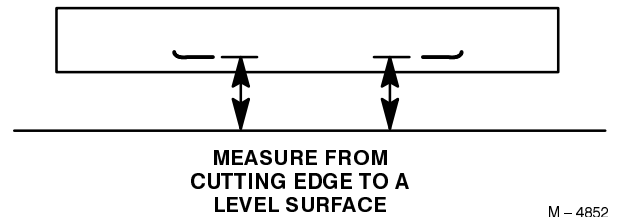


Figure 51


5. If it does not measure correctly remove or add washers to the height-of-cut posts. Match the hole in the post with the decal and the measured height-of-cut (Fig. 36).

Note: Make sure you add or remove washers from all four height-of-cut posts.

Checking the Front-to-Rear Pitch


The height of cut needs to be checked and correct before the front to rear pitch leveling is performed.

1. Check the tire pressure on both deck and traction unit.
2. Position one blade front-to-rear (Fig. 52). Measure at "C" and "D" locations (Fig. 52) from a level surface to the cutting edge of the blade tips (Fig. 53).
3. The mower blade should be 1/4-3/8 in. (6-9.5 mm) lower in front "C" than in the rear "D". Rotate blades and repeat for opposite blade. If it is not correct proceed to Change the Front-to-Rear Pitch.

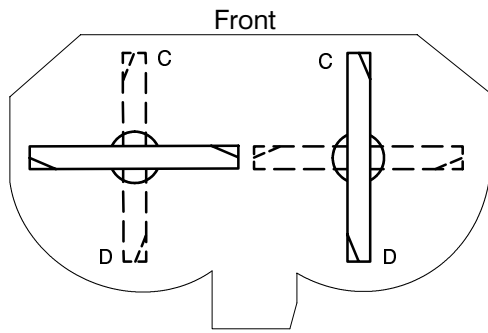


M-4852

Figure 52

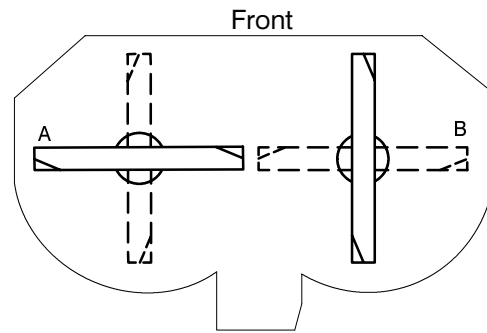

M-4852


Figure 54

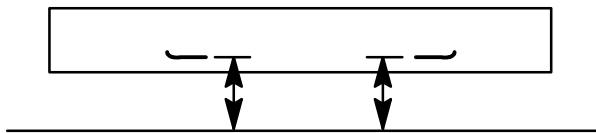

MEASURE FROM TIP
OF CUTTING EDGE
TO A LEVEL SURFACE

M-4852

Figure 53

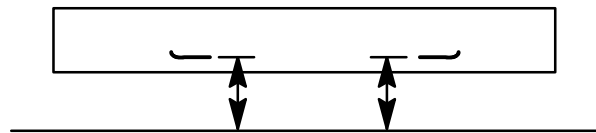

MEASURE FROM TIP
OF CUTTING EDGE
TO A LEVEL SURFACE

M-4852

Figure 55

Change the Front-to-Rear Pitch

Changing the front-to-rear pitch is done by removing or adding washers to height of cut posts.

1. Check the tire pressure on both deck and traction unit.
2. To change the front-to-rear pitch, remove the hairpin cotter and move an equal number of washers on front or rear height-of-cut posts.
3. Add washers to the height-of-cut posts to raise the mower.
4. Remove washers from the height-of-cut posts to lower the mower.
5. Check the Front-to-Rear Pitch.

Checking the Side-to-Side Leveling

The height of cut needs to be checked and correct before the side to side leveling is performed.

1. Check the tire pressure on both deck and traction unit.
2. Position the blades side-to-side (Fig. 54). Measure at "A" and "B" locations (Fig. 54) from a level surface to the cutting edge of blade tips (Fig. 55).
3. The difference between measurements "A" and "B" should be no more than 1/4 in. (6 mm).

Change the Side-to-Side Leveling

Changing the side-to-side leveling is done by removing or adding washers to height of cut posts. Do this to the corresponding side that needs adjustment.

1. Check the tire pressure on both deck and traction unit.
2. To change the side-to-side leveling, remove the hairpin cotter and remove or add washers on one side only.
3. Add washers to the height-of-cut posts to raise the corresponding side of the mower.
4. Remove washers from the height-of-cut posts to lower the corresponding side of the mower.
5. Recheck the front-to-rear pitch and side to side leveling of the cutting unit.

Air Cleaner Service

Primary Filter: Clean or replace every 200 operating hours or when Filter Minder reaches "Change Filter" level.

Safety Filter: Replace after every 600 operating hours.

Note: Service the air cleaner more frequently if operating conditions are extremely dusty or sandy.

Using Filter Minder

This machine contains an air cleaner "Filter Minder" gauge.

Filter Minder: Check this daily.

The plunger inside the gauge canister will change to red when the air cleaner element becomes dirty and restricted. When it changes red, air cleaner maintenance is required.

1. Start by visually checking the condition of the primary element. If the element is visually dirty, replace the primary element. **Do not attempt to clean it.**
2. Reset the gauge by depressing the button in the bottom of the canister until the plunger returns to the lowest point.
3. Test run the engine and recheck the gauge. If the plunger remains in the lowest range, normal operation can resume. If the plunger returns to the "Change Filter" level, the primary element is restricted and must be replaced, even though it may not appear to be dirty.
4. The gauge may be reset at any time, however it will return to the prior position if corrective filter servicing has not been performed.

Removing the Filter

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to "OFF" to stop the engine. Remove the key.
2. Remove the wing nut from the bolt in the air filter guard. Rotate guard to gain access to filter (Fig. 56).

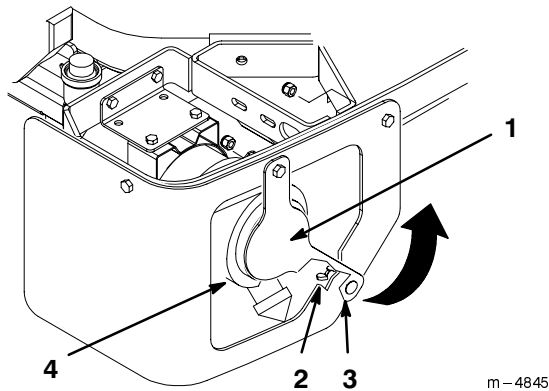


Figure 56

- | | |
|-----------------|-----------|
| 1. Filter guard | 3. Bolt |
| 2. Wing nut | 4. Filter |

3. Release the latches on the air cleaner and pull the air cleaner cover off of the air cleaner body (Fig. 57).
4. Clean the inside of the air cleaner cover with compressed air.
5. Gently slide the primary filter out of the air cleaner body (Fig. 57). Avoid knocking the filter into the side of the body. Do not remove the safety filter, unless you intend to replace it as well.

6. Inspect the primary filter for damage by looking into the filter while shining a bright light on the outside of the filter. Holes in the filter will appear as bright spots. If the filter is damaged, discard it, otherwise clean it.

Important Never attempt to clean the safety filter. If the safety filter is dirty, then the primary filter is damaged and you should replace both filters.

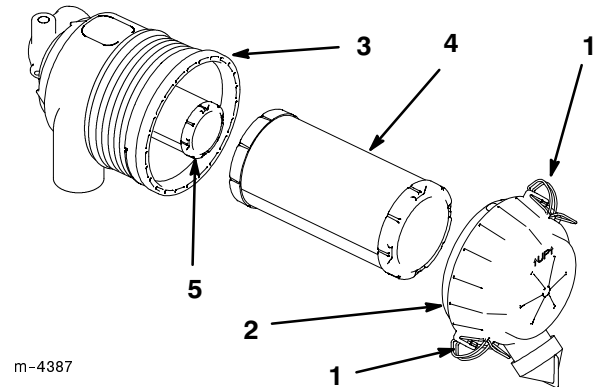


Figure 57

- | | |
|----------------------|-------------------|
| 1. Latches | 4. Primary filter |
| 2. Air cleaner cover | 5. Safety filter |
| 3. Air filter body | |

Cleaning the Primary Filter

Blow compressed air from the inside to the outside of the primary filter.

Important Do not exceed 100 psi and keep the hose at least 2 inches from the filter.

Installing the Filters

1. If installing new filters, check each filter for shipping damage. Do not use a damaged filter.
2. If the safety filter is being replaced, carefully slide it into the filter body (Fig. 57).
3. Carefully slide the primary filter over the safety filter (Fig. 57). Ensure that it is fully seated by pushing on the outer rim of the filter while installing it.

Important Do not press on the soft inside area of the filter.

4. Install the air cleaner cover with the side indicated as UP facing up and secure the latches (Fig. 57).

Engine Oil Service

Change oil:

- After the first 8 operating hours.
- After every 100 operating hours.


Note: Change oil more frequently when operating conditions are extremely dusty or sandy.

Oil Type: Detergent oil (API service SG or SH)

Crankcase Capacity: w/filter, 67.5 oz. (2 l)

Viscosity: See table below

USE THESE SAE VISCOSITY OILS

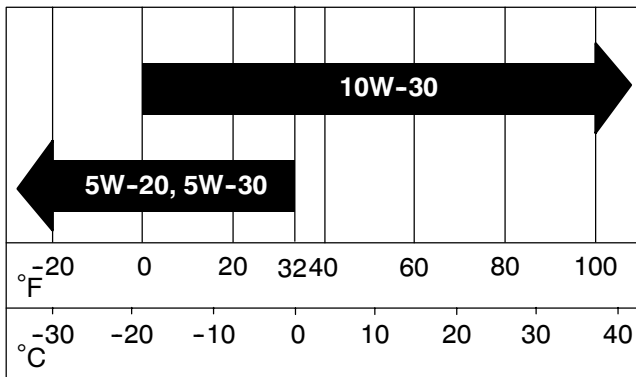

Checking Oil Level

1. Park the machine on a level surface, disengage the power take off (PTO) and turn the ignition key to "OFF" to stop the engine. Remove the key.
2. Clean around the oil dipstick (Fig. 58) so dirt cannot fall into the filler hole and damage the engine.
3. Pull the oil dipstick and wipe the metal end clean (Fig. 58).
4. Slide the oil dipstick fully into the filler tube (Fig. 58). Pull the dipstick out and look at the metal end. If oil level is low, slowly pour only enough oil into the filler tube to raise the level to the "FULL" mark.

Important Do not overfill the crankcase with oil because the engine may be damaged.

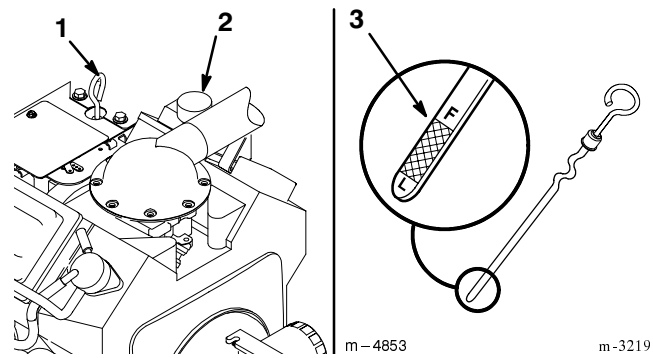


Figure 58

1. Oil dipstick
2. Filler Cap
3. Metal end

Changing/Draining Oil

1. Start the engine and let it run five minutes. This warms the oil so it drains better.
2. Park the machine so that the drain side is slightly lower than the opposite side to assure the oil drains completely. Then disengage the power take off (PTO), set the parking brake, and turn the ignition key to "OFF" to stop the engine. Remove the key.
3. Place a pan below the oil drain. Remove the oil drain cap (Fig. 59).
4. When oil has drained completely, install the drain cap.

Note: Dispose of the used oil at a recycling center.

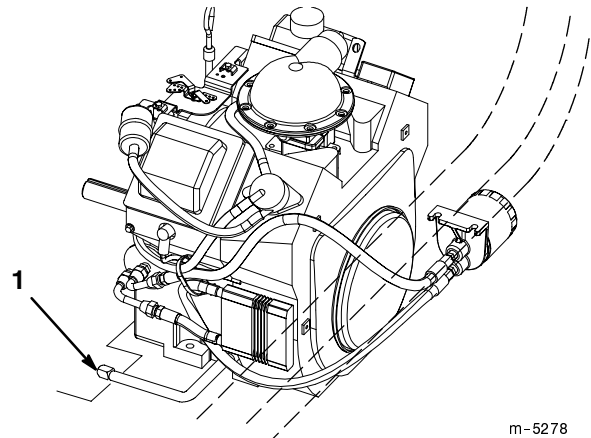


Figure 59

1. Oil drain cap

5. Slowly pour approximately 80% of the specified oil, on page 34, into the fill opening (Fig. 58). Now check the oil level; refer to Checking Oil Level, page 34. Slowly add additional oil to bring to "FULL" mark on dipstick.

Change Oil Filter

Replace the oil filter after first 8 hours of use.

Replace the oil filter every 200 hours or every other oil change.

Note: Change oil filter more frequently when operating conditions are extremely dusty or sandy.

1. Drain the oil from the engine; refer to Changing/Draining Oil, page 34.
2. Remove the old filter and wipe the filter adapter (Fig. 60) gasket surface.
3. Pour new oil of the proper type in through the center hole. Stop pouring when the oil reaches the bottom of the threads. Allow a minute or two for the oil to be absorbed by filter material.
4. Apply a thin coat of new oil to the rubber gasket on the replacement filter (Fig. 60).

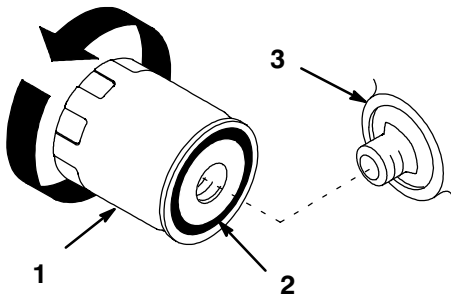


Figure 60

1. Oil filter
2. Gasket
3. Adapter

5. Install the replacement oil filter to the filter adapter. Turn the oil filter clockwise until the rubber gasket contacts the filter adapter, then tighten the filter an additional 1/2 turn (Fig. 60).
6. Fill the crankcase with the proper type of new oil; refer to Changing/Draining Oil, page 34.

Spark Plug Service

Check the spark plug(s) after every 200 operating hours. Make sure the air gap between the center and side electrodes is correct before installing the spark plug. Use a spark plug wrench for removing and installing the spark plug(s) and a gapping tool/feeler gauge to check and adjust the air gap. Install a new spark plug(s) if necessary.

Type: Champion Premium Gold 2071 (or equivalent) Air Gap: 0.030 in. (0.76 mm)

Removing the Spark Plug(s)

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to "OFF" to stop the engine. Remove the key.
2. Pull the wire(s) off the spark plug(s) (Fig. 61). Now clean around the spark plug(s) to prevent dirt from falling into the engine and potentially causing damage.
3. Remove the spark plug(s) and metal washer.

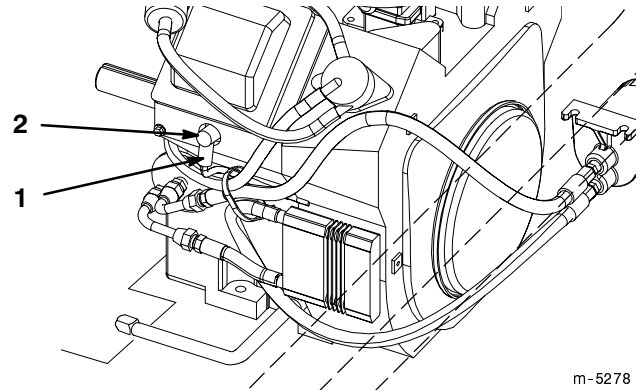


Figure 61

1. Spark plug wire
2. Spark plug

Checking the Spark Plug

1. Look at the center of the spark plug(s) (Fig. 62). If you see light brown or gray on the insulator, the engine is operating properly. A black coating on the insulator usually means the air cleaner is dirty.

Important Never clean the spark plug(s). Always replace the spark plug(s) when it has: a black coating, worn electrodes, an oily film, or cracks.

2. Check the gap between the center and side electrodes (Fig. 62). Bend the side electrode (Fig. 62) if the gap is not correct.

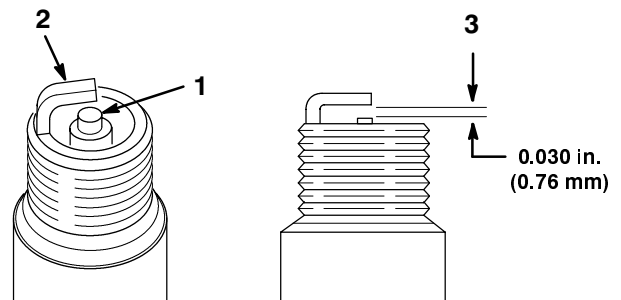


Figure 62

1. Center electrode insulator
2. Side electrode
3. Air gap (not to scale)

Installing the Spark Plug(s)

1. Install the spark plug(s). Make sure the air gap is set correctly.
2. Tighten the spark plug(s) to 20 ft-lb (27 N.m).
3. Push the wire(s) onto the spark plug(s) (Fig. 61).

Fuel Filter Service

Replace the fuel filter after every 200 operating hours or yearly, whichever occurs first.

Replacing the Fuel Filter

Never install a dirty filter if it is removed from the fuel line.

1. Disengage the power take off (PTO), set the parking brake, and turn the ignition key to “OFF” to stop the engine. Remove the key.
2. Close fuel shut-off valve at fuel tank (Fig. 64).
3. Squeeze the ends of the hose clamps together and slide them away from the filter (Fig. 63).
4. Remove the filter from the fuel lines.
5. Install a new filter and move the hose clamps close to the filter.
6. Open fuel shut-off valve at fuel tank (Fig. 64).

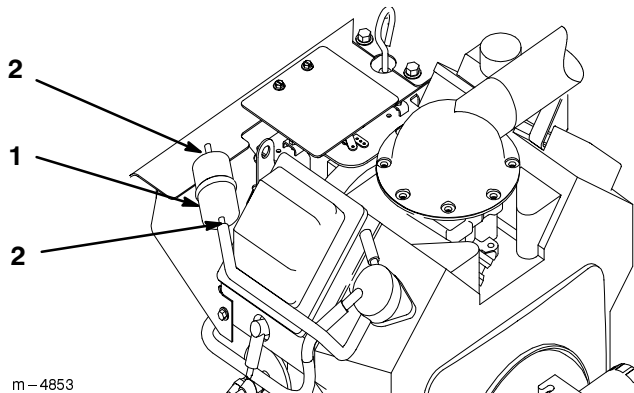


Figure 63

1. Filter
2. Hose clamp

Fuel Tank Service

Draining The Fuel Tank



Danger




In certain conditions, gasoline is extremely flammable and highly explosive. A fire or explosion from gasoline can burn you and others and can damage property.

- **Drain gasoline from the fuel tank when the engine is cold. Do this outdoors in an open area. Wipe up any gasoline that spills.**
- **Never smoke when draining gasoline, and stay away from an open flame or where a spark may ignite the gasoline fumes.**

1. Park the machine on a level surface, to assure fuel tank drains completely. Then disengage the power take off (PTO), set the parking brake, and turn the ignition key to “OFF” to stop the engine. Remove the key.
 2. Close fuel shut-off valve at fuel tank (Fig. 64).
 3. Loosen the hose clamp and slide it up the fuel line away from the fuel shut-off valve (Fig. 64).
 4. Pull the fuel line off fuel shut-off valve (Fig. 64). Open fuel shut-off valve and allow gasoline to drain into a gas can or drain pan.
- Note:** Now is the best time to install a new fuel filter because the fuel tank is empty.
5. Install the fuel line onto the fuel shut-off valve. Slide the hose clamp close to the fuel shut-off valve to secure the fuel line (Fig. 64).

Important Ensure that the fuel line is routed correctly to avoid damage to the fuel line.

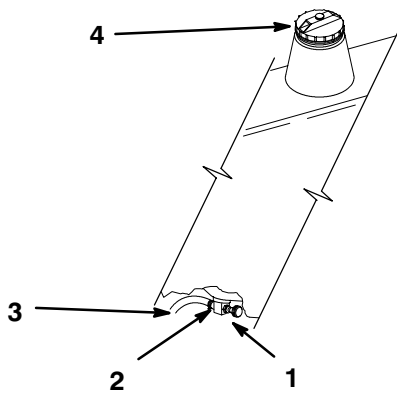

m-3293

Figure 64

- | | |
|------------------------|--------------|
| 1. Fuel shut-off valve | 3. Fuel line |
| 2. Hose clamp | 4. Fuel cap |

Cleaning the Cooling Systems

Before each use, check and clean cooling system. Remove any buildup of grass, dirt or other debris from the engine air intake and chopper screen. Every 100 hours clean hydraulic pumps and motors, engine cylinder and cylinder head cooling fins. Also clean around carburetor, governor levers and linkage. This will help ensure adequate cooling to hydraulic pumps, motors and engine and will reduce the possibility of overheating and mechanical damage.

Greasing and Lubrication

The unit must be lubricated regularly. Refer to the Recommended Maintenance Schedule on page 28.

Grease Type: No. 2 general purpose lithium base or molybdenum base grease.

How to Grease

1. Disengage the power take off (PTO) and turn the ignition key to "OFF" to stop the engine. Remove the key.
2. Clean the grease fittings with a rag. Make sure to scrape any paint off the front of the fitting(s).
3. Connect a grease gun to the fitting. Pump grease into the fittings until grease begins to ooze out of the bearings.
4. Wipe up any excess grease.

Where to Add Grease

Use the following decal for a reference to where and when to lubricate the machine. The decal is located under the seat.



Figure 65

1. Where to grease decal

1. Lubricate the castor wheel bearings and motion control lever pivot until grease begins to ooze out of the bearings (Fig. 66).

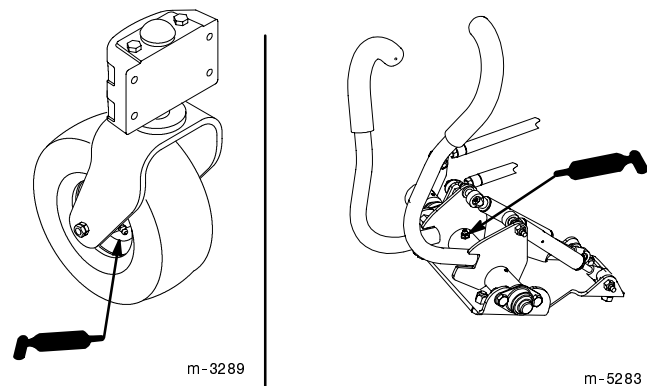


Figure 66

2. Grease the fittings on drive shaft and universal joints (Fig. 67).

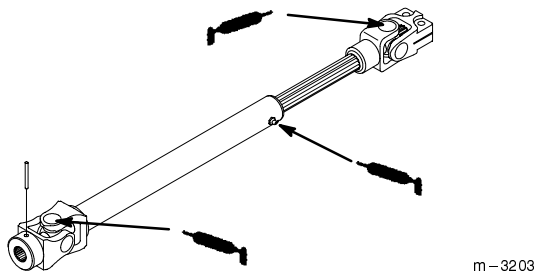


Figure 67

1. PTO Driveshaft 2. Universal Joint

3. Grease the fittings on push arms (Fig. 68).

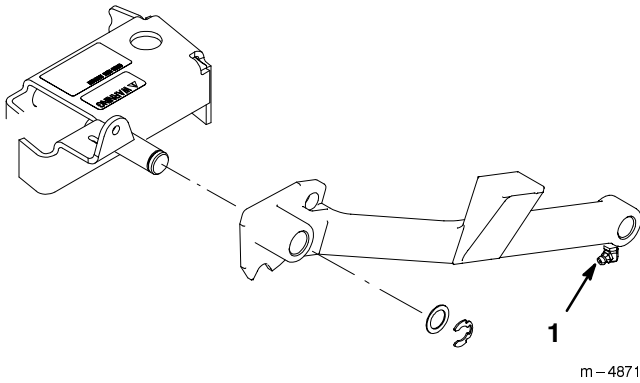


Figure 68

1. Push arm grease fitting

4. Grease the fittings on the carrier frame castor hubs and castor wheels (Fig. 69).

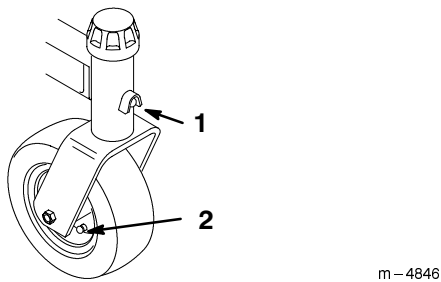


Figure 69

1. Carrier Frame Castor Hub Grease Fitting 2. Castor Wheel Grease Fitting

Deck Gearbox Fluid

Change fluid:

- After initial 100 operating hours.

Note: Fluid will not have to be changed again after initial 100 hour fluid change.

Fluid Type: Automatic Transmission Fluid
(Dexron® III or equivalent)

Important Do not mix fluids. Use only Automatic Transmission Fluid.

Gearbox Capacity: 5-1/2 oz. (129.6 ml) each box

Check fluid: After every 100 operating hours.

Changing Gearbox Fluid

The gearbox fluid must be changed after first 100 operating hours. Change all three gearboxes.

Important Do not mix fluids. Use only Automatic Transmission Fluid.

1. Warm the fluid in gearbox. Run the mower deck for a few minutes.
2. Tilt mower into the vertical position, refer to; Tilting the Mower, page 19.
3. With deck raised, remove plug on the bottom side of the gearbox. Let fluid fully drain into a pan. (Fig. 70).
4. Reinstall the bottom plug into the gearbox. Use pipe thread sealant if needed (Fig. 70).
5. Remove the top plug to fill gearbox (Fig. 70).
6. Fill gearbox with 5-1/2 (129.6 ml) ounces of automatic transmission fluid (Dexron® III or equivalent).
7. Reinstall the top plug into the gearbox (Fig. 70).
8. Repeat for remaining gearboxes.

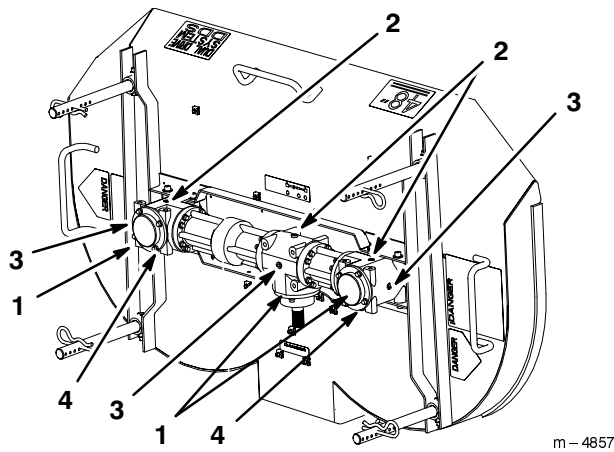


Figure 70

- | | |
|-------------|----------------|
| 1. Gearbox | 3. Side plug |
| 2. Top plug | 4. Bottom plug |

Checking Gearbox Fluid

The gearbox fluid must be checked after every 100 operating hours. Check all three gearboxes.

1. Warm the fluid in gearbox. Run the mower deck for a few minutes.
2. Tilt mower into the vertical position, refer to; Tilting the Mower, page 19.
3. Remove plug on the side of the gearbox. The fluid level must be up to side hole in gearbox (Fig. 70).
4. If needed, fill automatic transmission fluid (Dexron® III or equivalent) into top hole until it runs out the side hole in gearbox. It is full when it runs out the side hole (Fig. 70).

Important Do not mix fluids. Use only Automatic Transmission Fluid. Do not overfill gearboxes.

5. Reinstall the top and side plugs into gearbox using pipe sealant (Fig. 70).
6. Fill gearbox with automatic transmission fluid (Dexron® III or equivalent).
7. Repeat for remaining gearboxes.

Replacing the Castor Wheel Fork Bushings

The castor wheel forks are mounted in bushings pressed into the top and bottom of the carrier frame castor tubes. To check the bushings, move the castor forks back and forth and side-to-side. If a castor fork is loose, the bushings are worn and must be replaced.

1. Tilt mower into the vertical position, refer to; Tilting the Mower, page 19.
2. Remove the cap, thrust washer and 1/2 in. spacer from the top of the castor wheel fork (Fig. 71).
3. Pull the castor wheel fork out of the mounting tube, leaving the 1 in. spacer and thrust washers on the fork. Remember the location of thrust washers on each fork to ensure correct installation, and to maintain a level deck.

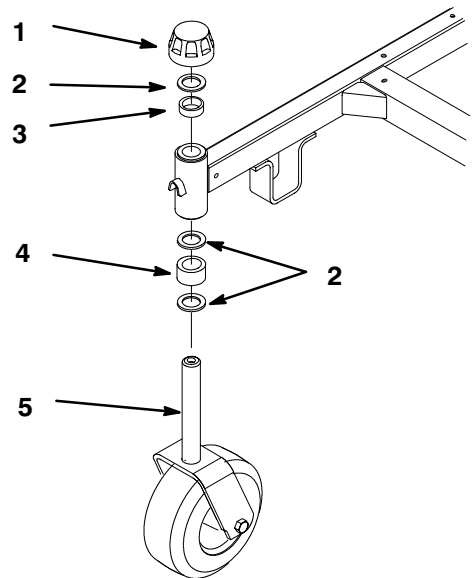



Figure 71

- | | |
|---------------------------|-------------------------|
| 1. Cap | 4. Spacer, 1 in. (26mm) |
| 2. Washer | 5. Caster Wheel Fork |
| 3. Spacer, 1/2 in. (13mm) | |

4. Insert a pin punch into the castor hub and carefully drive out the bushings (Fig. 72). Clean the inside of the mounting tube.
5. Grease the inside and outside of the new bushings. Use a hammer and flat plate to carefully drive the bushings into the castor hub (Fig. 72).
6. Inspect the castor wheel fork for wear and replace if necessary (Fig. 71).
7. Slide the castor wheel fork through the bushings in the castor hub. Replace the 1/2 in. spacer and thrust washer onto the fork and secure with the cap (Fig 71).

Important The inside diameter of the bushings may collapse slightly when installed. If the castor wheel fork does not slide into the new bushings, ream both bushings to an inside diameter of 1.126 in. (28.6mm).

8. Grease the fitting on the carrier frame castor hub using No. 2 general purpose lithium base or molybdenum base grease.

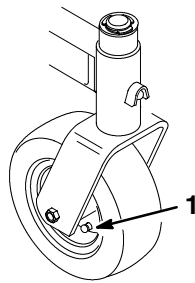

m-3281


Figure 75

1. Castor Wheel Valve Stem

Replacing Push Arm Bushings

The push arms have pressed in bushings on the end mounted to the traction unit. To check the bushings, move the push arms side-to-side and examine for wear. If a push arm is loose, the bushings are worn and must be replaced.

1. Remove the mower: refer to Removing the Mower in the Installation section.
2. Inspect the pivot pin assembly for wear and replace if necessary.
3. Remove the retaining ring and flat washer securing the push arm to the mower (Fig. 76).

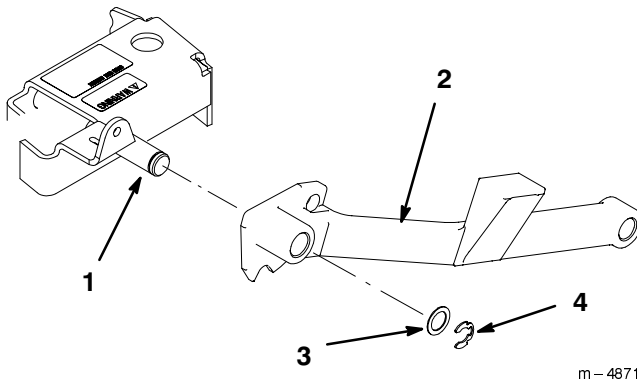


m-4871

Figure 76

1. Pin
2. Push arm
3. Flat washer 1-1/2 in. (38 mm)
4. Retaining ring

4. Insert a pin punch into the push arm and carefully drive out the bushings (Fig. 77). Clean the inside of the push arm.
5. Use a hammer and flat plate to carefully drive new bushings into the end of push arm (Fig. 77).

6. Place push arm onto carrier frame pin and secure with 1-1/2 in. (38 mm) flat washer and retaining ring (Fig 76).
7. Grease the fitting on the push arm using No. 2 general purpose lithium base or molybdenum base grease.

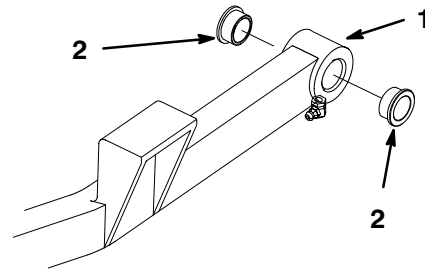

m-3284


Figure 77

1. Push arm
2. Bushing

Replacing Idler Arm Bushings

There are idler arms for the blower belt, PTO belt and traction belt. All three idler arms have pressed in bushings. To check the bushings, move the idler arms side-to-side and examine for wear. If the idler arms are loose, the bushings are worn and must be replaced.


1. Disengage the power take off (PTO) and turn the ignition key to "OFF" to stop the engine. Remove the key.
 2. Remove tension on idler arms and remove belt from the idler. See one of the following figures 78, 79 or 80 that shows the idler you are checking.
 3. Inspect the idler pivot pin assembly for wear and replace if necessary. To check the bushings, move the idler arms side-to-side and examine for wear.
 4. If the idler arms are loose, the bushings are worn and must be replaced. Remove the hardware securing the idler pivot arm to the mower.
 5. Insert a pin punch into the idler arm and carefully drive out the bushings (Figures 78, 79 or 80). Clean the inside of the idler arm.
 6. Use a hammer and flat plate to carefully drive new bushings into the idler arm (Figures 78, 79 or 80).
 7. Install the idler arm back onto the machine.
- Note:** Grease the PTO idler arm using No. 2 general purpose lithium base or molybdenum base grease.
8. Install the belt back onto idler pulley.

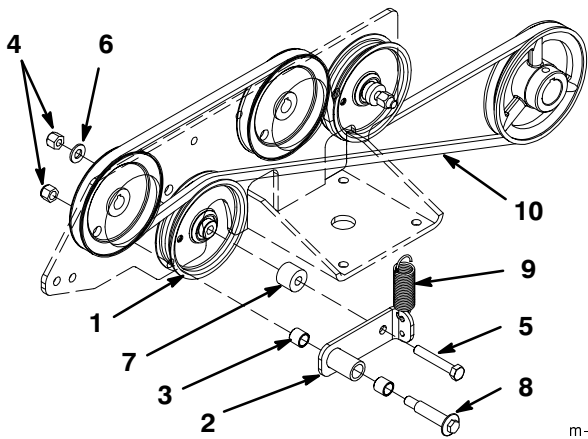

m-5299

Figure 78


- | | |
|----------------------|-------------------|
| 1. Pump Idler Pulley | 6. Washer |
| 2. Idler arm | 7. Spacer |
| 3. Bushing | 8. Shoulder bolt |
| 4. Nut | 9. Spring |
| 5. Bolt | 10. Traction Belt |

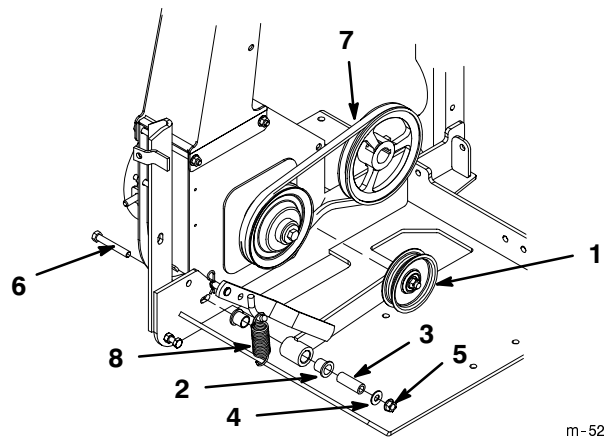

m-5297

Figure 80

- | | |
|------------------------|----------------|
| 1. Blower Idler Pulley | 5. Nut |
| 2. Bushing | 6. Bolt |
| 3. Spacer | 7. Blower Belt |
| 4. Washer | 8. Spring |

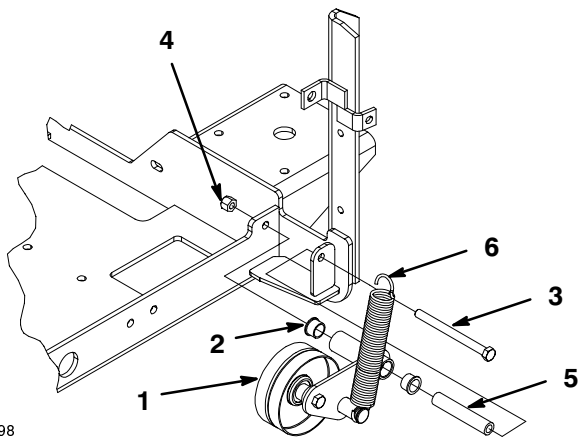

m-5298

Figure 79

- | | |
|-------------------------|-----------|
| 1. PTO Idler and pulley | 4. Nut |
| 2. Bushing | 5. Spacer |
| 3. Bolt | 6. Spring |

Hydraulic System Service

Checking the Hydraulic Fluid

Check the hydraulic fluid level before engine is first started and after every 8 operating hours.

Fluid Type: Mobil 1[®] 15w-50 synthetic oil or equivalent synthetic oil.


Important Use only oils specified. Other fluids could cause system damage.

Total System Capacity: 96 oz. (2.8 l)

1. Position machine on a level surface and set the parking brake.
2. Clean area around filler neck of hydraulic tank (Fig. 81).
3. Remove cap from filler neck. Look inside to check if there is fluid in the reservoir (Fig. 81).
4. If there is no fluid, add fluid to reservoir approximately a 1/4" (6mm) below the top of baffle.
5. Run the machine 15 minutes to allow any air to purge out of the system and warm fluid.
6. Recheck level while fluid is warm. Add fluid to raise level to top of the baffle, if required.

Note: Fluid level should be to the top of the baffle when fluid is warm (Fig. 81).

7. Install cap on filler neck.

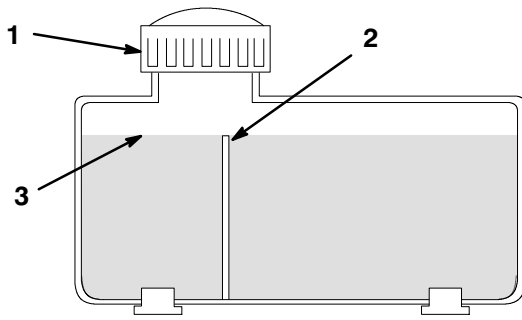

m-5279

Figure 81

1. Cap
2. Baffle
3. Fluid level—full


Replacing the Hydraulic Filter

Change the hydraulic filter:

- After the first 8 operating hours
 - After every 200 operating hours
1. Position machine on a level surface, stop the engine, and remove key from ignition switch.

Important Do not substitute automotive oil filter or severe hydraulic system damage may result.

2. Remove hydro cap and temporarily cover opening with a plastic bag and rubber band to prevent all hydro fluid from draining out.
3. Place drain pan under filter, remove the old filter and wipe the filter adapter gasket surface clean (Fig. 82).

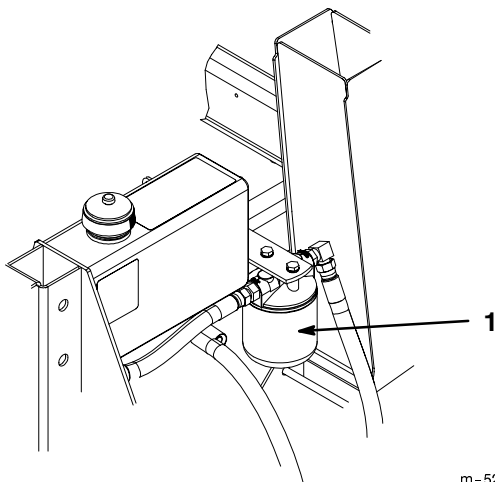


m-5284

Figure 82

1. Hydraulic filter

4. Apply a thin coat hydro fluid to the rubber gasket on the replacement filter (Fig. 83).
5. Install replacement hydraulic filter onto the filter adapter. Do not tighten.
6. Remove plastic bag from tank opening and allow filter to fill with hydro fluid.
7. When fluid overflows filter turn the oil filter clockwise until the rubber gasket contacts the filter adapter, then tighten the filter an additional 1/2 turn (Fig. 83).
8. Clean up any spilled fluid.
9. If there is no fluid, add fluid to reservoir approximately a 1/4 in. (6mm) below the top of baffle.
10. Start engine and let run for about two minutes to purge air from the system. Stop the engine and check for leaks. If one or both wheels will not drive, refer Bleeding Hydraulic System, page 43.
11. Recheck level while fluid is warm. Add fluid to raise level to top of the baffle, if required. **Do not over fill.**

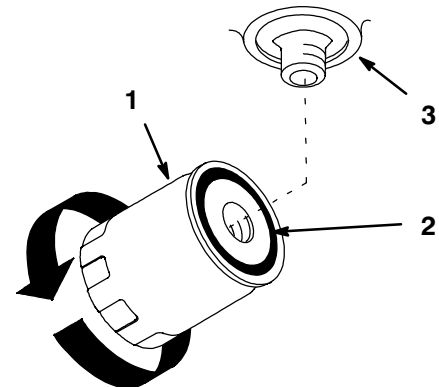

m-1256

Figure 83

1. Hydraulic filter
2. Gasket
3. Adapter

Bleeding Hydraulic System

The traction system is self bleeding, however, it may be necessary to bleed the system if fluid is changed or after work is performed on the system.

1. Raise front of the machine so wheels are off the ground and support with jack stands.
2. Start the engine and run at idle speed. Engage traction on one side and spin the wheel by hand.
3. When the wheel begins to spin on its own, keep it engaged until wheel drives smoothly. (minimum 2 minutes).
4. Check hydraulic fluid level as it drops and add as required to maintain proper level.

- Repeat procedure on opposite wheel.

Check Hydraulic Lines

After every 100 operating hours, check hydraulic lines and hoses for leaks, loose fittings, kinked lines, loose mounting supports, wear, weather and chemical deterioration. Make necessary repairs before operating.

WARNING

POTENTIAL HAZARD


- Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

WHAT CAN HAPPEN

- Fluid accidentally injected into the skin must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

HOW TO AVOID THE HAZARD

- Keep body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.

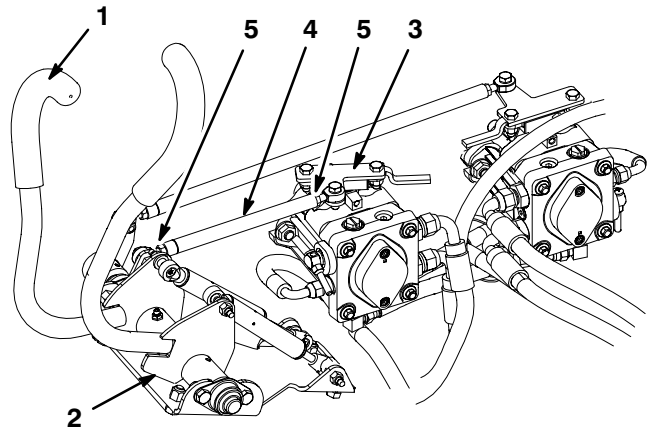

m-5285

Figure 84

- | | |
|-------------------------|----------------|
| 1. Motion control lever | 4. Control rod |
| 2. Forward stop | 5. Jam nut |
| 3. Pump control plate | |

Adjust Motion Controls

If motion control levers do not align, adjustment is required. Adjust each rod separately.

- Loosen jam nuts on pump control rod (Fig. 84).
- Push and firmly hold motion control lever against forward stop (Fig. 84).
- Rotate pump control rod until pump control plate is in the full forward position (Fig. 84). Motion control lever will lift off forward stop.

Important Hold motion control lever firmly against forward stop to determine when pump control reaches stop.

- Rotate control rod 1 turn in reverse direction and tighten jam nuts (Fig. 84).

Important Motion control lever must contact forward stop before pump contacts internal stop or pump damage may occur.

- If motion control levers do not line up in neutral, identify control rod of handle closer to the seat. Rotate to lengthen this control rod a little. Tighten jam nuts.

Replacing Power Take Off (PTO) Belt

Check power take off (PTO) belt for wear after every 50 hours of operation.

- Hold spring loaded idler against belt, using a rag or thickly-padded glove, and pull spring down to remove from idler stud (Fig. 85).
- Lower idler to relax tension on PTO belt and remove belt from gear box pulley (Fig. 85).
- Remove clutch stop mounting bolts and unplug clutch wire harness (Fig. 85). Remove belt over clutch.

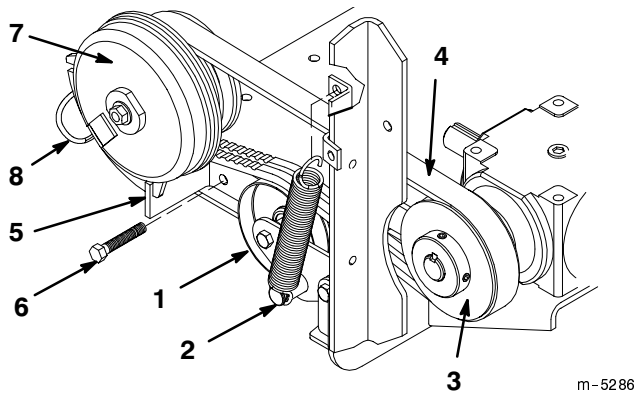


Figure 85

- | | |
|--------------------|--------------------------------|
| 1. Idler | 6. Bolt |
| 2. Spring | 7. Clutch |
| 3. Gear box pulley | 8. Clutch electrical connector |
| 4. PTO belt | |
| 5. Clutch stop | |

4. Install new PTO belt over clutch and route around gearbox pulleys and above spring loaded idler (Fig. 86).
5. Hold spring loaded idler against belt and pull spring down to install onto idler stud (Fig. 85).
6. Install clutch stop (Fig. 85). Tighten mounting bolts securely.
7. Plug clutch wire into wire harness.

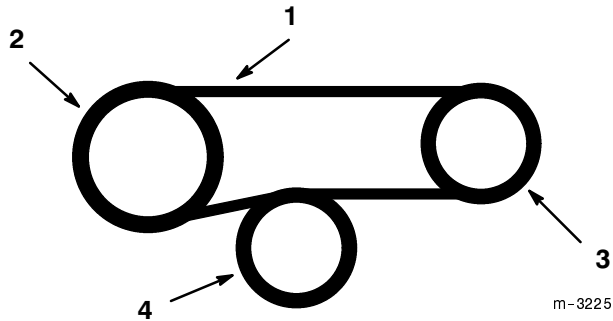


Figure 86

- | | |
|------------------|------------------------|
| 1. PTO belt | 3. Gearbox pulley |
| 2. Clutch pulley | 4. Spring loaded idler |

Replacing the Traction Belt

Check traction drive belt for wear after every 50 hours of operation.

1. Remove PTO belt; refer to Replacing Power Take Off (PTO) Belt on page 44.
2. Push spring loaded idler down and remove traction belt from the engine, fixed idler and hydro pump pulleys (Fig. 87). Remove belt over clutch.
3. Install new belt over clutch and around engine, fixed idler and hydro pump pulleys (Fig. 87).
4. Push spring loaded idler down and align below traction belt. Release pressure on spring loaded idler (Fig. 87).
5. Install PTO belt; refer to Replacing Power Take Off (PTO) Belt.

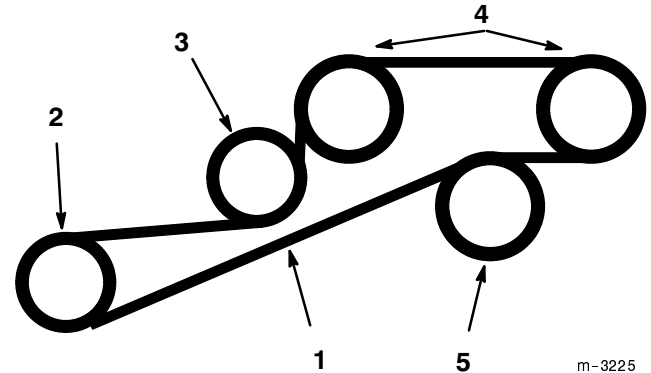


Figure 87

- | | |
|-----------------------|------------------------|
| 1. Traction belt | 4. Hydro pump pulley |
| 2. Engine pulley | 5. Spring loaded idler |
| 3. Fixed idler pulley | |

Replacing the Blower Belt

Squealing when the belt is rotating, blower slipping causing frequent clogging of chute and blower, frayed belt edges, burn marks and cracks are all signs of a worn blower belt. Replace the blower belt if any of these conditions are evident.

1. Stop the engine, remove the key and disconnect the spark plug wire(s) from the spark plug(s).
2. Push up on the spring loaded idler arm behind left hand traction tire to relax pressure on blower belt (Fig. 88). Lock into frame slot.
3. Remove worn blower belt.
4. Install new blower belt around PTO gearbox and blower pulleys. Then release spring loaded idler arm and place belt above idler pulley (Fig. 88).

5. Check that belt aligns with PTO gearbox, blower and idler pulleys (Fig. 88).

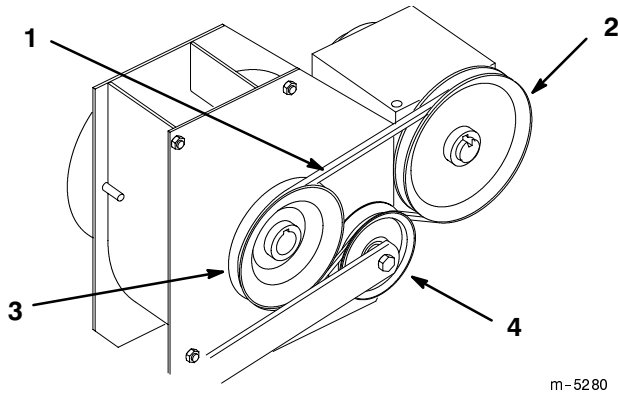


Figure 88

1. Blower belt
2. PTO Gearbox pulley
3. Blower pulley
4. Idler pulley

Turning Engine Lift Hook

Turn the engine lift hook if the engine is to be lifted. The engine lift hook is positioned to allow clearance for the air cleaner hose.

1. Locate on engine the lift hook in figure 89.
2. Remove the lift hook from engine. Rotate lift hook 180 degrees and reinstall.
3. Use the engine lift hook.
4. Rotate lift hook 180 degrees and reinstall to its original position.

Important Return lift hook to original position after engine has been reinstalled.

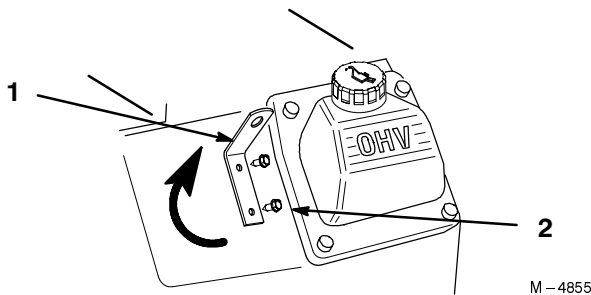


Figure 89

1. Engine Lift Hook
2. Screws

Fuse Service

Service Interval/Specification

The electrical system is protected by fuses. It requires no maintenance, however, if a fuse blows check component/circuit for malfunction or short.

Fuse: Main F1-30 amp, blade-type
 Alternator F2-25 amp, blade-type
 Safety Interlock and Clutch F3-15 amp, blade-type

1. Remove dash panel screws to gain access to fuse holder (Fig. 90).
2. To replace fuses pull out on the fuse to remove it (Fig. 90).

Important Do not install fuses of greater capacity as call out above. It could cause electrical system damage.

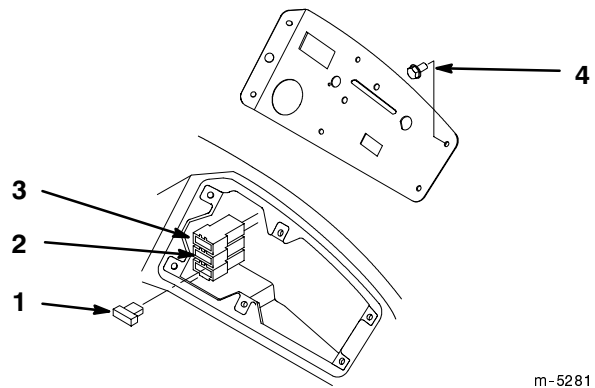


Figure 90

1. Main-30 amp
2. Alternator-25 amp
3. Safety interlock and clutch-15 Amp
4. Screw

Battery Service

WARNING

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Check the electrolyte level in the battery every 8 hours. Always keep the battery clean and fully charged. Use a paper towel to clean the battery case. If the battery terminals are corroded, clean them with a solution of four parts water and one part baking soda. Apply a light coating of grease to the battery terminals to prevent corrosion.

Voltage: 12 v, 380 Cold Cranking Amps

Checking Electrolyte Level

1. Open covers to see into the cells. The electrolyte must be up to the lower part of the tube (Fig. 91). Do not allow the electrolyte to get below the plates. (Fig. 91).
2. If the electrolyte is low, add the required amount of distilled water; refer to Adding Water to the Battery, page 47.

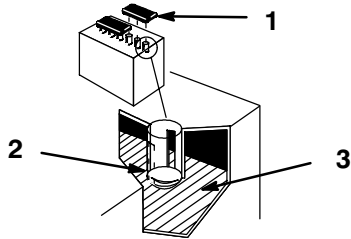


Figure 91

1. Filler caps
2. Lower part of tube
3. Plates

1262

Adding Water to the Battery

The best time to add distilled water to the battery is just before you operate the machine. This lets the water mix thoroughly with the electrolyte solution.

1. Clean the top of the battery with a paper towel.
2. Lift off the filler caps (Fig. 91).
3. Slowly pour distilled water into each battery cell until the level is up to the lower part of the tube (Fig. 91).

Important Do not overfill the battery because electrolyte (sulfuric acid) can cause severe corrosion and damage to the chassis.

4. Press the filler caps onto the battery.

Charging the Battery

Important Always keep the battery fully charged (1.260 specific gravity). This is especially important to prevent battery damage when the temperature is below 32°F (0°C).

1. Check the electrolyte level; refer to Checking Electrolyte Level, page 47.
2. Remove the filler caps from the battery and connect a 3 to 4 amp battery charger to the battery posts. Charge the battery at a rate of 4 amperes or less for 4 hours (12 volts). Do not overcharge the battery. Install the filler caps after the battery is fully charged.

WARNING

POTENTIAL HAZARD

- Charging the battery produces gasses.

WHAT CAN HAPPEN

- Battery gasses can explode.

HOW TO AVOID THE HAZARD

- Keep cigarettes, sparks and flames away from battery.

Cleaning Hopper Screens

For best clipping collection, maximum air flow through the hopper is required. To provide maximum air flow, the hopper screens must be kept clean.

1. To clean the hopper screens dump the hopper to remove grass clippings.
2. With the door open, remove the knobs at the upper front of the hopper and slide the screens out the rear of the hopper (Fig. 92).
3. Clean the screen by brushing off with your hand, blowing with compressed air or spraying with a stream of water.
4. Replace the screens and secure with knobs (Fig. 92). Close and latch the hopper door.

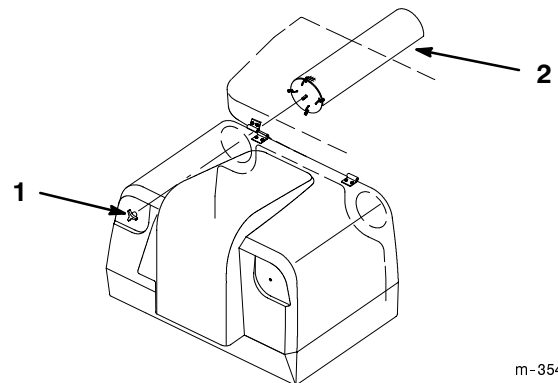


Figure 92

1. Knob
2. Screen

m-3546

Cleaning the Hopper Full Sensor

The hopper full sensor, inside the top right side of the hopper, detects a beam of light from the transmitter to the receiver. If the light beam is blocked the sensor buzzer sounds. If the lenses are covered with clippings or debris it may give false hopper full signals and needs to be cleaned.

Note: There are two different positions the hopper full sensors can be mounted. The lower position will signal the hopper full alarm earlier and prevent plugging of the chute and blower.

1. To clean the hopper full sensor dump the hopper to remove grass clippings.
2. With the door open, wipe off the lenses of both the transmitter and receiver with a soft cloth or paper towel (Fig. 93).
3. To test the hopper full sensor for proper operation turn the ignition key and PTO switch to “ON”, but do not start the engine. Place a piece of heavy cardboard in front of the transmitter to block the light beam (Fig. 93). The alarm buzzer should sound.

Note: Do not use your hand to test for proper sensor operation as the light beam may pass through or around your hand and not properly activate the sensor.


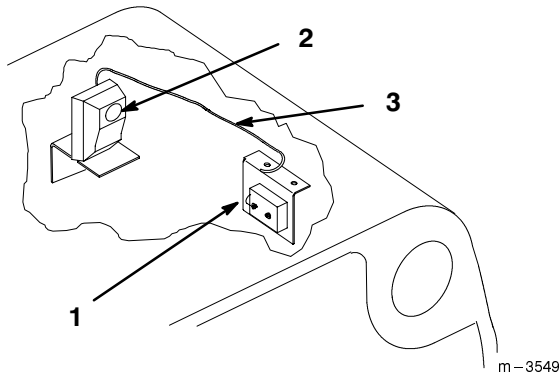


Figure 93


- | | |
|----------------|---------|
| 1. Transmitter | 3. Wire |
| 2. Receiver | |

Note: Make sure the wire between receiver and transmitter is tight. It can collect debris and give a false hopper full signal.

Wiring Diagram

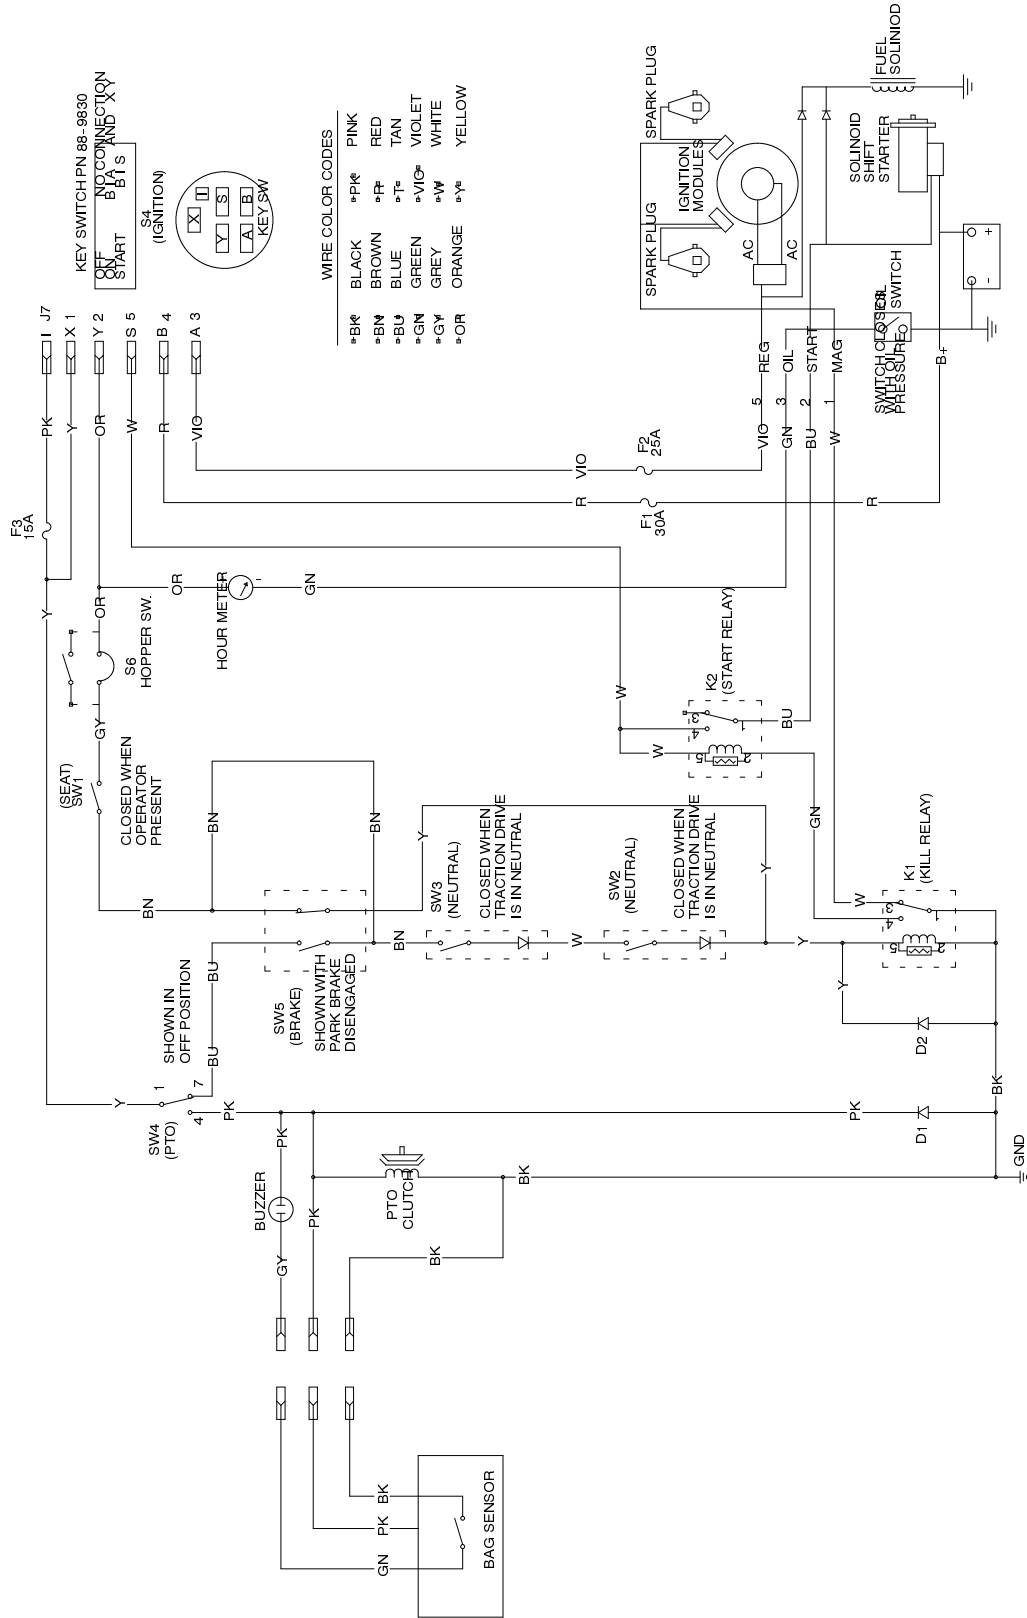

Hydraulic Diagram

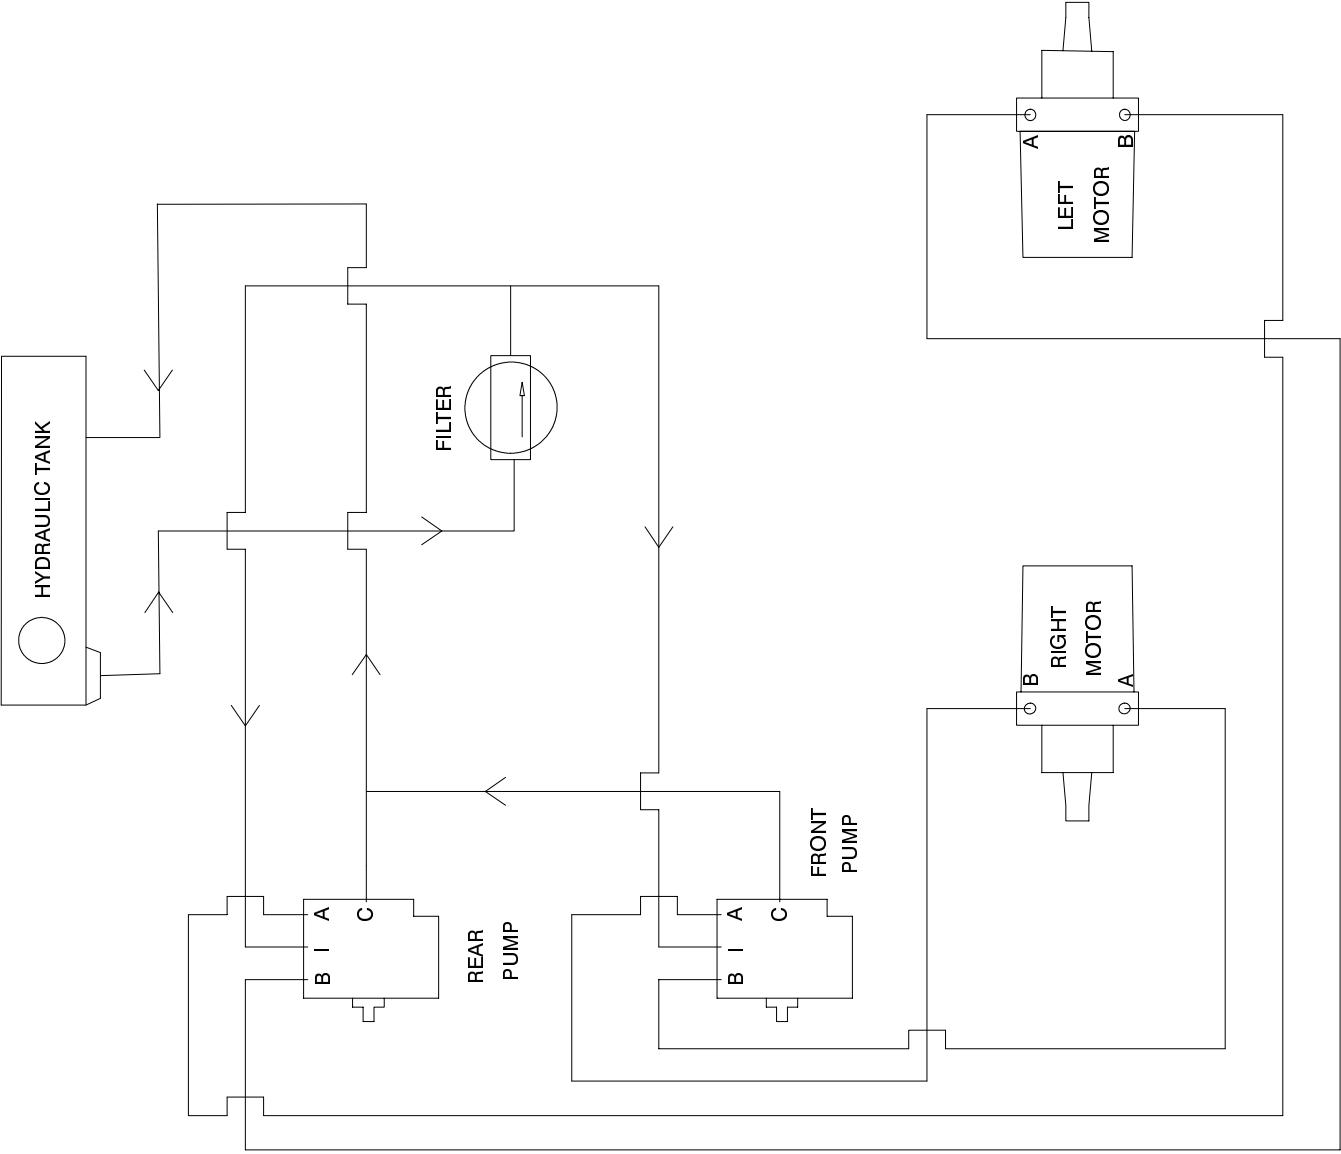

Cleaning and Storage

1. Disengage the power take off (PTO), set the parking brake and turn the ignition key to "OFF" to stop the engine. Remove the key.
2. Remove grass clippings, dirt, and grime from the external parts of the entire machine, especially the engine. Clean dirt and chaff from the outside of the engine's cylinder head fins and blower housing.
3. Clean any dirt and chaff from the mower, chute, blower and hopper.
4. Scrape any heavy buildup of grass and dirt from the mower, chute, blower and hopper, then wash with a garden hose.

Important You can wash the machine with mild detergent and water. Do not pressure wash the machine. Avoid excessive use of water, especially near the control panel, engine, hydraulic pumps and motors.

5. Check the condition of the blades. Refer to Cutting Blades on page 47.
6. Service the air cleaner; refer to Air Cleaner, page 32.
7. Grease the machine; refer to Greasing and Lubrication, page 37.
8. Change the crankcase oil; refer to Engine Oil, page 34.
9. Change the hydraulic fluid; refer to Hydraulic System Service, page 42.
10. For long-term storage (more than 90 days) add stabilizer/conditioner additive to fuel in the tank (1 oz. per gallon).
 - A. Run engine to distribute conditioned fuel through the fuel system (5 minutes).
 - B. Stop engine, allow to cool and drain the fuel tank; refer to Fuel Tank, page 36.
 - C. Restart engine and run until it stops. Repeat, on "CHOKE" until engine will not restart.
 - D. Dispose of fuel properly. Recycle as per local codes.

Note: Do not store stabilizer/conditioned gasoline over 90 days.

11. Remove the spark plug(s) and check its condition; refer to Spark Plug, page 35. With the spark plug(s) removed from the engine, pour two tablespoons of engine oil into the spark plug hole. Now use the starter to crank the engine and distribute the oil inside the cylinder. Install the spark plug(s). Do not install the wire on the spark plug(s).
12. Check the condition of all belts.
13. Check the tire pressure; refer to Tire Pressure Service, page 40.
14. Charge the battery; refer to Battery Service page 46.

Important The battery must be fully charged to prevent it from freezing and being damaged at temperatures below 32°F (0°C). A fully charged battery can be stored one winter season without recharging.

15. Disconnect the negative battery cable. Clean the battery and battery terminals. Check the electrolyte level and charge it fully; refer to Battery Service on page 46. Leave the negative battery cable disconnected from the battery during storage.
16. Check and tighten all bolts, nuts, and screws. Repair or replace any part that is damaged or defective.
17. Paint all scratched or bare metal surfaces. Paint is available from your Authorized Service Dealer.
18. Store the machine in a clean, dry garage or storage area. Remove the key from the ignition switch and keep it in a memorable place. Cover the machine to protect it and keep it clean.

Troubleshooting

PROBLEM	POSSIBLE CAUSES	CORRECTIVE ACTION
Starter does not crank	<ol style="list-style-type: none"> 1. Power take off (PTO) is ENGAGED. 2. Parking brake is not on. 3. Motion control levers are not in neutral. 4. Battery is dead. 5. Electrical connections are corroded or loose. 6. Fuse is blown. 7. Relay or switch is defective. 	<ol style="list-style-type: none"> 1. Move power take off (PTO) to DISENGAGED. 2. Set parking brake. 3. Move motion control levers into neutral. 4. Charge the battery. 5. Check electrical connections for good contact. 6. Replace fuse. 7. Contact Authorized Service Dealer.
Engine will not start, starts hard, or fails to keep running.	<ol style="list-style-type: none"> 1. Fuel tank is empty. 2. Choke is not ON. 3. Air cleaner is dirty. 4. Spark plug wires is loose or disconnected. 5. Spark plugs are pitted, fouled, or gap is incorrect. 6. Dirt in fuel filter. 7. Dirt, water, or stale fuel is in fuel system. 	<ol style="list-style-type: none"> 1. Fill fuel tank with gasoline. 2. Move choke lever to ON. 3. Clean or replace air cleaner element. 4. Install wires on spark plug. 5. Install new, correctly gapped spark plugs. 6. Replace fuel filter. 7. Contact Authorized Service Dealer.
Engine loses power.	<ol style="list-style-type: none"> 1. Engine load is excessive. 2. Air cleaner is dirty. 3. Oil level in crankcase is low. 4. Cooling fins and air passages under engine blower housing are plugged. 5. Spark plugs are pitted, fouled, or gap is incorrect. 6. Dirt in fuel filter. 7. Dirt, water, or stale fuel is in fuel system. 	<ol style="list-style-type: none"> 1. Reduce ground speed. 2. Clean air cleaner element. 3. Add oil to crankcase. 4. Remove obstruction from cooling fins and air passages. 5. Install new, correctly gapped spark plugs. 6. Replace fuel filter. 7. Contact Authorized Service Dealer.
Engine overheats.	<ol style="list-style-type: none"> 1. Engine load is excessive. 2. Oil level in crankcase is low. 3. Cooling fins and air passages under engine blower housing are plugged. 	<ol style="list-style-type: none"> 1. Reduce ground speed. 2. Add oil to crankcase. 3. Remove obstruction from cooling fins and air passages.

PROBLEM	POSSIBLE CAUSES	CORRECTIVE ACTION
Abnormal vibration.	<ol style="list-style-type: none"> 1. Engine mounting bolts are loose. 2. Loose engine pulley, idler pulley, or blade pulley. 3. Engine pulley is damaged. 	<ol style="list-style-type: none"> 1. Tighten engine mounting bolts. 2. Tighten the appropriate pulley. 3. Contact Authorized Service Dealer.
Machine does not drive.	<ol style="list-style-type: none"> 1. Parking brake is on. 2. Traction belt is worn, loose or broken. 3. Traction belt is off pulley. 4. Hydro fluid level low. 	<ol style="list-style-type: none"> 1. Move parking brake to off. 2. Contact Authorized Service Dealer. 3. Contact Authorized Service Dealer. 4. Add hydro fluid to reservoir.



LCE

The Toro Total Coverage Guarantee

A One-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly promise to repair any Toro Product used for commercial, institutional, or rental purposes if defective in materials or workmanship. The following time periods apply from the date of purchase:

<u>Products</u>	<u>Warranty Period</u>
• All Products	1 year
• All Spindles	2 years parts and labor; third year, parts only
• Engines/Hydraulic Systems* on the following: Outfront and Mid-Mount Z's ProLine Mid-Size Mowers Groundsmaster® Riding Mowers ProLine Hand Held Gas Products (AE and LE engines only) Backpack Blowers	2 years
• Deck Shells (36" - 72") on the following: ProLine Mid-Size Mowers Mid-Mount Z's	2 years
• Electric Clutch on 200 Series Mid-Mount Z's	2 years

This warranty includes the cost of parts and labor, but you must pay transportation costs.

This warranty applies to:

- Outfront and Mid-Mount Z's
- ProLine Mid-Size Mowers
- Groundsmaster Riding Mowers
- Turf Maintenance Equipment
- Debris Management Equipment

* Some engines used on Toro LCE Products are warranted by the engine manufacturer.

Instructions for Obtaining Warranty Service

Should you feel your Toro Product contains a defect in materials or workmanship, contact the dealer who sold you the product or any Authorized Service Dealer or Master Service Dealer. The Yellow Pages of your telephone directory is a good reference source. The dealer will either arrange service at his/her dealership or recommend another Authorized Service Dealer who may be more convenient. You may need proof of purchase (copy of registration card, sales receipt, etc.) for warranty validation.

If for any reason you are dissatisfied with the Service Dealer's analysis of the defect in materials or workmanship or if you need a referral to a Toro Service Dealer, please feel free to contact us at:

LCB Customer Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
952-888-8801 or 888-577-7466

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

Owner Responsibilities

You must maintain your Toro Product by following the maintenance procedures described in the operator's manual. Such routine maintenance, whether performed by a dealer or by you, is at your expense.

Items and Conditions Not Covered

There is no other express warranty except for special emission system coverage on some products. This express warranty does not cover the following:

- Cost of regular maintenance service or parts, such as filters, fuel, lubricants, tune-up parts, blade sharpening, brake and clutch adjustments.
- Any product or part which has been altered or misused or required replacement or repair due to normal wear, accidents, or lack of proper maintenance.
- Repairs necessary due to improper fuel, contaminants in the fuel system, or failure to properly prepare the fuel system prior to any period of non-use over three months.
- Pickup and delivery charges.

All repairs covered by this warranty must be performed by an Authorized Toro Service Dealer using Toro approved replacement parts.

General Conditions

Repair by an Authorized Toro Service Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

All implied warranties of merchantability (that the product is fit for ordinary use) and fitness for use (that the product is fit for a particular purpose) are limited to the duration of the express warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.