

1989

FORM NO. 3313-656

TORO®

MODELS 55600 — 9000001 & UP

**OPERATOR'S
MANUAL****HMR™ 1200**

WITH 38" CUTTING DECK

The TORO RIDER meets or exceeds the American National Standards Institute's safety standards for Lawn Tractors; thus, Toro proudly displays the OPEI safety seal.



To assure maximum safety and optimum performance, and to gain knowledge of the rider, it is essential that you or any other operator, read and understand the contents of this manual before the engine is started. Failure to comply with the safety instructions may result in personal injury.



FOREWORD

The TORO Rider contains the latest engineering and technical workmanship and should provide long troublefree performance and service.

Since you have purchased this fine product, we are sure that dependability and performance are important to you. TORO is also concerned about future use of the machine and of safety to the user. Therefore, you should read this manual thoroughly so that proper safety, operation and maintenance procedures are practiced at all times. The major sections of this manual are:

- | | | |
|----------------------------|---------------------------|---------------------|
| 1. Safety Instructions | 3. Before Operating | 5. Maintenance |
| 2. Setting Up Instructions | 4. Operating Instructions | 6. Trouble Shooting |

Safety, mechanical and some general information in this manual is emphasized. DANGER, WARNING and CAUTION identify safety messages. Whenever the triangular safety symbol appears it is followed by a safety message that must be read and understood. More complete details concerning safety are contained on page 3, 4 and 5. IMPORTANT identifies special mechanical information and NOTE identifies general information worthy of special attention.

OPTIONAL SPARK ARRESTER

In some areas there are local, state or federal regulations requiring that a spark arrester be used on the engine of this mower. If a spark arrester is required, order the following parts from your local authorized Briggs & Stratton Dealer. Or the part may be ordered directly from:

Briggs & Stratton Corporation, Milwaukee, Wisconsin 54201
1 Spark Arrester, part no. 392154

These parts are approved by the United States Department of Agriculture Forestry Service.

When a mower is used or operated on any California forest, brush or grass covered land, a working order spark arrester must be attached to muffler. If not, the operator is violating state law, Section 4442 Public Resources Code.

Further assistance concerning safety, operation and maintenance can be acquired by contacting your local Authorized TORO Service Dealer. Your TORO Authorized Service Dealer can provide you with genuine TORO replacement parts and also optional equipment for your TORO Rider. Keep your TORO all TORO. Buy genuine TORO parts and accessories.

TABLE OF CONTENTS

	Page		Page
SAFETY INSTRUCTIONS	3-4	Servicing Air Cleaner	16
SAFETY AND INSTRUCTION DECALS	5	Changing Crankcase Oil	17
SPECIFICATIONS	6	Fuel Filter Replacement	17
LOOSE PARTS	7	Replacing Spark Plug	18
SETTING UP INSTRUCTIONS	7-8	Adjusting Throttle-Choke Control	18
Install Front Wheels	7	Adjusting Carburetor	19
Install Steering Wheel Assembly	8	Removing Cutting Deck	20
Adjusting Seat	8	Servicing Cutter Blades	20
BEFORE OPERATING	8-10	Install Cutting Deck	21
Activating and Charging Battery (12 Volt)	8	Cleaning Underside of Mower Housing	22
Check Crankcase Oil Level	9	Tension Cutter Deck Drive Belt	22
Fill Fuel Tank With Gasoline	10	Replacing Blade Spindle Drive Belt	22
Check Tire Pressure	10	Leveling Cutting Deck	23
CONTROLS	11	Adjusting Drive Chain	23
STARTING AND STOPPING INSTRUCTIONS	12-13	Replacing Drive Chains	24
To Start and Operate Machine	12	Adjusting Front Wheel Alignment	24
To Stop	12	Adjusting Brakes	24
Break-In	12	Adjusting Electric Deck Clutch	25
Using Parking Brake	12	Adjusting Transmission Linkage	25
Adjusting Height-of-Cut	12	Shift Linkage Adjustment	25
Adjusting Gage Wheels	13	Adjusting Linkage to Steering Clutches	26
OPERATING INSTRUCTIONS	13-14	Replacing Traction Belts	26
Grass Deflector	13	Wheel Removal	27
Operating Procedure	13	Checking Safety Interlock System	28
Grass Cutting Tips	14	Battery Charging System	28
MAINTENANCE INTERVAL CHART	14	Preparing Mower For Storage	28
MAINTENANCE	15-28	WIRING DIAGRAM	29
Grease Front Axle Spindles and Wheels	15	IDENTIFICATION AND ORDERING	29
Grease Steering Spindle	16	SLOPE GAGE	31
Lubricate Mechanical Pivot Points	16	THE TORO GUARANTEE	32

SAFETY INSTRUCTIONS



This safety alert symbol means **CAUTION, WARNING or DANGER** — “personal safety instruction”. Read and understand the instruction because it has to do with safety. Failure to comply with the instruction may result in personal injury.

Improper use or maintenance of the machine can result in injury. To reduce the potential for injury, comply with the following safety instructions.

BEFORE OPERATING

1. Read and understand the contents of this Operator's Manual before operating the machine. Become familiar with all controls and know how to stop quickly. A free replacement manual is available by sending complete Model and Serial Number to:

The Toro Company
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

2. Do not allow children to operate the machine. Do not allow adults to operate the machine without proper instruction.

3. Remove all debris or other objects that might be picked up and thrown by the cutter blades. Keep all bystanders away from the mowing area.

4. Keep all shields and safety devices in place. If a shield, safety device or decal is defective or damaged, repair or replace it before operation is commenced. Also tighten any loose nuts, bolts and screws to assure machine is in safe operating condition.

5. Do not operate machine while wearing sandals, tennis shoes, sneakers or shorts. Also, do not wear loose fitting clothing which could get caught in moving parts. Always wear long pants and substantial shoes. Wearing safety glasses, safety shoes and a helmet is advisable and required by some local ordinances and insurance regulations.

6. Fill fuel tank with gasoline before starting the engine. Avoid spilling gasoline. Since gasoline is flammable, handle it carefully.

- A. Use an approved gasoline container.
- B. Do not fill fuel tank indoors, when the engine is running, or until engine cools for several minutes after running.

- C. Do not smoke while handling gasoline.
- D. Fill fuel tank outdoors and up to about one half inch from top of the tank, not the filler neck.
- E. Open doors if engine will be run in the garage because exhaust fumes are dangerous and could possibly be deadly. Do not run engine indoors.
- F. Wipe up any gasoline that spilled, and install gasoline container cap and rider fuel tank cap before starting the engine.

7. Before attempting to start the engine, shift into neutral, move deck engagement switch into **DIS-ENGAGE** position and lock parking brake. Engine will not start with key unless gear shift is in neutral, deck engagement switch is in **DIS-ENGAGE** position, and the operator is on the vehicle seat.

8. Assure interlock system is functioning correctly before each use of the rider. Have all safety related components and safety interlock switches checked by an Authorized **TORO** Service Dealer every two years to assure safe operation of the rider.

WHILE OPERATING

9. Never carry passengers on the rider.

10. Keep people and pets a safe distance away from the rider and area of operation.

11. Do not run the engine in a confined area without adequate ventilation. Exhaust fumes are hazardous and could possibly be deadly.

12. Using the machine demands attention, and to prevent loss of control:

- A. Mow only in daylight or when there is good artificial light.
- B. Watch for holes or other hidden hazards.
- C. Do not drive close to a drop off, ditch, creek or other hazard.
- D. Reduce speed when making sharp turns and when turning on hillsides.
- E. Never mow steep slopes.
- F. Never mow side hills over 10°. See slope gage on page 30.

13. During operation the grass deflector or complete rear grass catcher assembly must be installed on mower housing and rider. Move deck engagement switch into **DIS-ENGAGE**, shift into neutral, set parking brake, and shut engine off before removing the rear grass catcher hopper or unclogging discharge chute or tube. Use a stick to remove any obstruction.

SAFETY INSTRUCTIONS

14. Before backing up, move deck engagement switch into DISENGAGE. Do not mow in reverse unless absolutely necessary and then only after careful observation of the entire area behind the mower.

15. Cut grass slopes up and down, never across the face. When going uphill or downhill do not stop or start suddenly. To prevent tipping or loss of control, reduce speed on slopes and when making turns. Extreme caution must be used when changing direction on slopes. If machine stops while going uphill, stop blade and back slowly down.

16. Watch out for traffic when crossing or near roads. Always yield the right-of-way.

17. If the cutting blades strike a solid object or the machine vibrates abnormally, shut engine off. Remove high tension wires from spark plugs to prevent possibility of accidental starting. Check cutting unit and traction unit for damage and defective parts. Repair any damage before restarting the engine and operating the cutting unit. Be sure blades are in good condition and blade nuts are tight.

18. Keep face, hands, feet, or any other part of the body and clothing away from concealed, moving, or rotating parts such as the cutter blades, discharge area, wheels, belts, and engine. Always sit on the seat while operating the rider and mower.

19. When driving from one area to another, crossing a gravel driveway, road, or sidewalk, move deck engagement switch into DISENGAGE and raise mower housing to its highest level. This will prevent loose sand, rocks, and other debris from being thrown by the whirling blades.

20. Do not touch engine or muffler while engine is running or soon after it is stopped. These areas could be hot enough to cause a burn.

21. Before leaving the operator's position on the seat, or leaving rider unattended, shift transmission into NEUTRAL, apply parking brake, move deck engagement switch to OFF, and shut OFF engine.

22. Use only the drawbar hitch point at rear of chassis to pull a trailer or cart. Limit loads to those that can be controlled safely. Be very careful when backing and turning: Make wide turns with trailer attached. Turning too sharp could damage trailer or vehicle.

MAINTENANCE

23. Disconnect high tension wire from spark plug to prevent accidental starting of the engine when servicing, adjusting or storing the machine.

24. If rider and mower has to be tipped to perform maintenance or an adjustment, drain gasoline from fuel tank, oil from crankcase, and remove battery. Rider is not designed to stand on rear end.

25. Perform only those maintenance instructions described in this manual. If major repairs are ever needed or assistance is desired, contact an Authorized Toro Dealer.

26. To reduce potential fire hazard, keep the engine free of excessive grease, grass, leaves and accumulations of dirt.

27. Be sure machine is in safe operating condition by keeping nuts, bolts and screws tight. Check the blade mounting nuts frequently to be sure they are tightened to specification.

28. If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing and other parts of the body away from the cutting unit blades and other moving parts.

29. Do not overspeed the engine by changing governor settings. To be sure of safety and accuracy, have an Authorized TORO Dealer check maximum engine speed (3200 RPM) with a tachometer.

30. Engine must be shut off before checking oil or adding oil to the crankcase.

31. To ensure optimum performance and safety, always purchase genuine TORO replacement parts and accessories to keep the Toro all TORO. NEVER USE "WILL-FIT" REPLACEMENT PARTS AND ACCESSORIES MADE BY OTHER MANUFACTURERS. Look for the TORO logo to assure genuineness. Using unapproved replacement parts and accessories could void the warranty of The Toro Company.

The TORO logo consists of the word "TORO" in a bold, sans-serif font, enclosed within a dark rectangular border.



SAFETY AND INSTRUCTION DECALS

The following safety and instruction decals are mounted on the TORO Rider. Replace any that become damaged or illegible.

DO NOT STEP

BOTH SIDES OF MOWER DECK
(Part No. 36-3400)

WARNING

USE EXTREME CAUTION
ON HILLS AND SLOPES



TO MINIMIZE THE RISK OF INJURY

- Never mow steep slopes.
- Never mow side hills over 10°.
- Mow slopes up and down, not across the face.
- When going uphill or downhill do not stop or start suddenly.
- Reduce speed and use extreme caution when making turns on slopes to reduce the risk of tipping or losing control.
- Stay alert for holes in the terrain and other hidden hazards.
- Do not drive close to a ditch, creek, or dropoff to prevent tipping or loss of control.

68-3460

REAR OF STEERING TOWER
(Part No. 68-3460)



IMPORTANT
WHEN RECOIL STARTING

- Move gear selector to neutral.
- Set parking brake.
- Attachment clutch switch must be in disengaged position.
- Move throttle lever to choke.
- Turn ignition switch to "on".
- Do not sit on seat.
- Pull recoil rope to start engine.

68-3450

AROUND KEY SWITCH
(Part No. 68-3450)

GAGE WHEEL ADJUSTMENT

TURN ENGINE OFF.



AFTER SETTING HEIGHT-OF-CUT LEVER
AT DESIRED POSITION, SET GAGE WHEELS
ON DECK TO BE 3/8 IN. ABOVE LEVEL GROUND.

68-3380

ON LEFT SIDE OF
MOWER DECK
(Part No. 68-3380)

ON DEFLECTOR
(Part No. 54-9220)

OPERATE ONLY WITH DEFLECTOR
OR CATCHER IN PLACE




NEXT TO
THROTTLE CONTROL
(Part No. 68-3530)

ENGAGED

DISENGAGED

DECK ENGAGEMENT

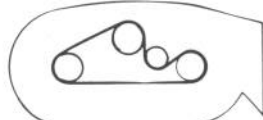

BLADE DRIVE BELT ROUTING

LEFT FRONT
SIDE OF SEAT
(Part No. 68-3540)

FRONT OF MOWER DECK
(Part No. 57-7010)

UNDER DEFLECTOR
(Part No. 68-3650)

IMPORTANT

MAKE WIDE TURNS WITH TRAILER ATTACHED.
TURNING TOO SHARP COULD DAMAGE TRAILER OR VEHICLE.

68-3420

REAR OF FRAME ABOVE HITCH
(Part No. 68-3420)

DANGER

DEFLECTOR IS NOT IN PLACE. DO NOT OPERATE.

68-3650

WARNING

SPRING LOADED MECHANISM
SEE OPERATOR'S MANUAL
FOR DISASSEMBLY PROCEDURE.

ON BOTH LIFT BARS
(Part No. 55-4300)



ON RIGHT REAR
FENDER
(Part No. 65-2690)

LEFT SIDE OF MOWER DECK
(Part No. 68-3660)



DANGER



ROTATING BLADES UNDER ENTIRE MOWER DECK.
KEEP HANDS and FEET AWAY.

THROWN OBJECTS ARE DANGEROUS.
KEEP DEFLECTOR IN PLACE. KEEP BYSTANDERS AWAY.

ON BOTH SIDES OF MOWER DECK
(Part No. 66-1340)

<p>CLUTCH PEDAL</p> <p>DEPRESS CLUTCH WHEN SHIFTING INTO GEAR OR CHANGING GEARS</p>	<p>VEHICLE SPEED SELECTOR</p> <p>TO SHIFT:</p> <ul style="list-style-type: none"> • RELEASE PARKING BRAKE. • DEPRESS CLUTCH PEDAL. • MOVE GEAR SHIFT TO DESIRED SPEED. <p>REVERSE — MOVE GEAR SHIFT TO REVERSE POSITION, LOOK TO REAR AND LISTEN FOR CLUTCH PEDAL RELEASE WHILE MAINTAINING SLIGHT REARWARD PRESSURE ON GEAR SHIFT.</p> <p>TO KEY START ENGINE:</p> <p>NOTE: ENGINE WILL NOT START WITH IGNITION KEY UNLESS GEAR SHIFT IS IN NEUTRAL. ATTACHMENT CLUTCH SWITCH IS IN DISENGAGED POSITION AND THE OPERATOR IS ON VEHICLE SEAT.</p> <ul style="list-style-type: none"> • MOVE GEAR SELECTOR TO NEUTRAL. • DEPRESS BRAKE OR SET PARKING BRAKE. • ATTACHMENT CLUTCH SWITCH MUST BE IN DISENGAGED POSITION. • MOVE THROTTLE LEVER TO CHOKE POSITION. • TURN IGNITION SWITCH TO "START" POSITION. RELEASE WHEN ENGINE STARTS. 	<p>TO STOP:</p> <p>FULLY DEPRESS CLUTCH AND BRAKE PEDALS</p>	<p>BRAKE PEDAL</p>
<p>ATTACHMENT CLUTCH SWITCH</p> <p>ENGAGE (ON)</p> <p>DISENGAGE (OFF)</p> <p>PULL SWITCH OUT AND UP. DECK ENGAGEMENT SWITCH MUST BE IN DISENGAGED POSITION TO START ENGINE.</p>	<p>PARKING BRAKE</p> <p>TO APPLY PARKING BRAKE:</p> <ul style="list-style-type: none"> • MOVE SHIFT SELECTOR TO NEUTRAL. • DEPRESS BRAKE PEDAL. • HOLD PARKING BRAKE LEVER IN "ON" POSITION WHILE RELEASING BRAKE PEDAL. <p>TO DISENGAGE PARKING BRAKE:</p> <ul style="list-style-type: none"> • DEPRESS BRAKE PEDAL. • PUSH DOWN ON PARKING BRAKE LEVER. 	<p>HEIGHT OF CUT</p> <p>TRANSPORT</p> <p>HIGH</p> <p>LOW</p>	<p>CAUTION</p> <p>TO MINIMIZE THE RISK OF INJURY:</p> <ul style="list-style-type: none"> • READ AND UNDERSTAND OPERATOR'S MANUAL. • NEVER OPERATE AND FUNCTION OF ALL CONTROLS. • KEEP SAFETY DEVICES (GUARDS, SHIELDS, AND SWITCHES) IN PLACE AND WORKING. • NEVER REMOVE GUARDS OR SHIELDS THAT COULD BE TAKEN AWAY BY BLADE. • ALWAYS STOP ENGINE BEFORE LEAVING MACHINE. • DO NOT REAR MOWER MACHINE COULD TIP OR FLIP. • MACHINE SLIPS (SIDE SLOPE), STOP BLADE AND BACK SLOWLY DOWN. • BE SURE BLADE AND LINE ARE STOPPED BEFORE PLACING HANDS ON FEET OR BLOOD. • REMOVE KEY WHEN LEAVING MACHINE. <p>COMPLETE MODEL NUMBERED TO THE TORO COMPANY, 1111 E. 10TH AVE., MINNEAPOLIS, MN 55404</p>

ON FLOOR PANEL
(Part No. 68-3390)

① HIGH
6
5
4
3
2 LOW
1

RIGHT
FRONT SIDE
OF SEAT
(Part No. 68-3430)

SPECIFICATIONS

Briggs & Stratton Engine: IC series, electric start with Recoil Backup. Four-cycle engine has output of 12 hp (8.9 KW) @ 3600 rpm and 20 ft-lb (27.2 N·m) torque @ 2800 rpm. Displacement is 28.40 cubic inches (465 cc). Crankcase oil capacity is 3 pints (1.42 l). Correct spark plug is a Champion RCJ-8 or Autolite AR7N resistor type. Air gap setting is 0.030 in. (0.762 mm)

Fuel Tank: Capacity is 3.5 gallons (13.25 l).

Controls: Throttle/choke control and ignition key located to left of operator's seat. Engine has recoil backup with handle facing to left side of machine.

Traction Clutch: A foot operated pedal on the left side of the steering tower simultaneously declutches the input v-belts to the two transmissions. Operator must be in the seat to engage or operate the traction drive.

Transmission Control: Hand operated shift lever with "Z" pattern located at right side of operator. The two transmissions are synchronized to shift together by a factory adjusted tie rod.

Traction Drive: (2) 5 speed forward, one speed reverse transmissions with integral brake in each transmission. Each transmission drives an individual rear wheel through a chain and sprocket. Transmissions are driven by individually clutched v-belts from the engine. Independent left and right transmission clutching is controlled by steering angle. Rear wheel declutching begins at approximately 20° turn angle of the inside front wheel. There is no differential.

Ground Speed @ 3200 Engine rpm:

1st gear	— 1.55 mph (2.49 km/hr)
2nd gear	— 2.41 mph (3.87 km/hr)
3rd gear	— 3.61 mph (5.80 km/hr)
4th gear	— 4.59 mph (7.38 km/hr)
5th gear	— 5.89 mph (9.47 km/hr)
Rev.	— 1.81 mph (2.91 km/hr)

Chain Drive to Rear Wheels: #40 chain drive.

Belt Drive to Gear Box: (2) "A" section v-belts from engine to each transmission.

Steering: Pinion and sector gear to cross-axle tie rods which control front wheels. 15 inch steering wheel turns 1-3/4 turns lock-to-lock. Inside front tire will turn up to 80° from straight ahead.

Wheels and Tires:

Front — Heavy duty wheel bearings and 13 x 5.0 — 6 pneumatic tube-type tires.

Rear — Welded steel rims with 16 x 6.5 — 8 pneumatic tubeless tires. Wheels include flange for chain sprockets and have two sealed HD ball bearings in each hub. Rear axle is adjustable for chain tension.

Brake: A foot operated pedal on the right side of the steering tower, via an extension spring, simultaneously operates a brake caliper on each of the two transmissions.

Parking Brake: Hand operated lever located on the right side of the operator on the front of the seat base. Lift to engage while depressing the brake pedal. Press on brake pedal to disengage. Transmission must be in neutral or reverse to apply parking brake.

Deck Control Switch: Toggle switch (pull out and up to engage) on left front of seat support tower. Switch releases blade brake and engages clutch to drive cutter deck. Operator must be in seat to engage or operate the cutter deck.

Height-of-Cut Control: Hand operated lever located at right of operator. Seven height positions from 1-1/2 to 4-1/2 in. (38 to 114 mm).

Deck Suspension: Full floating, front-to-rear and side-to-side. Deck has three fixed anti-scalp rollers and two adjustable gage wheels (set 3/8 in. [10 mm] above the ground). The discharge side is supported by a flotation lift spring. Deck suspension is adjustable for both front-to-rear and side-to-side tilt.

Mower Housing: Housing is 12 gauge (2.64 mm) stamped steel with right side discharge. Width of cut is 38 in. (0.965 m). Cast iron spindle housings with shafts supported by two double seal ball bearings. Blade spindle pulleys are driven by a spring-tensioned A section V-belt.

Cutter Drive: Spring tensioned "B" section v-belt from electric clutch/brake on engine to deck pulley.

Cutter Blades: Two, one piece, hardened .187" (4.75 mm) thick carbon steel blades are 19-5/16 in. (0.491 m) long.

Blade Tip Speed: 17,137 ft/min (87.05 m/s) @ 3300 maximum engine rpm.

SPECIFICATIONS

General Dimensions (approx):

Wheel Base — 45 in. (1.14 m)
 Tread Width; center to center —
 Front — 30.5 in. (0.775 m)
 Rear — 29 in. (0.737 m)
 Width — 35.5 in. (0.902 m) without deck
 45.6 in. (1.158 m) with 38 in. (0.965 m) deck
 Height — 45.7 in. (1.160 m)
 Length — 68 in. (1.727 m)
 Turning Radius — 4 in. (0.102 m) outside edge of rear tire
 Weight — 630 lb (285.8 kg) with 38 in. (0.965 m) deck
 Deck Weight — 95 lb (43.09 kg)

Safety Features: Meets B71.1 — 1986 ANSI safety specifications.

Traction drive, blade drive and seat interlocks.
 Electromagnetic blade clutch and brake.
 Parking brake lockout for forward gears.
 Automatically slows down in sharp turns.

Optional Accessories and Attachments:

Twin Bag Grass Catcher, Model 59186.
 Front Bumper, Part No. 68-3340.
 Hour Meter Kit, Part No. 68-3610.
 Deluxe Seat Kit, Part No. 68-3800.
 Spark Arrestor for Standard muffler, Briggs & Stratton No. 392154.

LOOSE PARTS

DESCRIPTION	QTY.	USE
Tire and Wheel Assembly	2	Mount to front axles.
Cotter Pin 1/8 in. x 1-1/4 in.	2	Secure wheels to axles.
Flange Washer	2	Mount to front axles.
Hub Cap	2	Mount to front axles.
Steering Shaft Cover	1	On steering shaft.
Steering Wheel	1	On steering shaft.
Steering Wheel Cap	1	On Steering Wheel
Roll Pin	1	Secure steering wheel to shaft.
Carriage Bolt 1/4 - 20 x 3/4 in.	2	Install battery cables.
Wing Nut	2	Install battery cables.
Key	1	Install in start switch.
Operator's Manual	1	Read manual before operating rider.
Reg. Card	1	Fill out and return to Toro.

SETTING UP INSTRUCTIONS

INSTALL FRONT WHEELS

Tools Required: Pliers and hammer.

Note: Apply grease to axle shafts before installing.

1. Install wheel onto axle.
2. Mount flange washer onto axle (flange side out), insert cotter pin and open pin ends with pliers (Fig. 1).
3. Install hub cap.
4. Repeat steps 1-3 on opposite side.
5. Check front and rear tires for 14 psi (96.5 kPa) inflation.

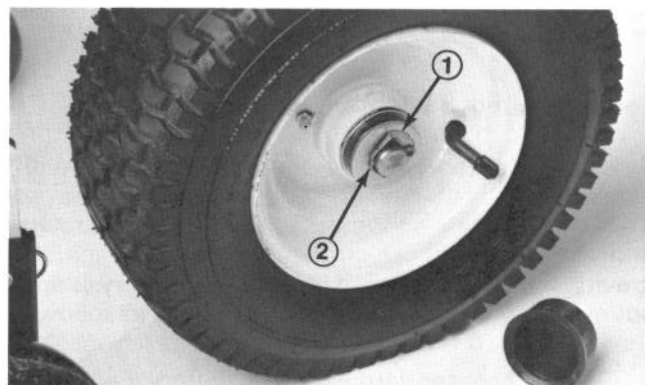


Figure 1

1. Flange washer
2. Cotter pin

SETTING UP INSTRUCTIONS

6. Lubricate both front wheels w/No. 2 general purpose grease. Pump grease gun until grease comes through bearings. Wipe up any excess grease.

INSTALL STEERING WHEEL ASSEMBLY

Tools Required: Small ball peen hammer and drift punch.

1. Position front wheels in straight ahead direction and slide steering shaft cover over steering shaft.
2. Slip steering wheel over shaft and line the steering wheel mount hole with the shaft mounting hole. Steering wheel cap should be readable from operator's position when installed.

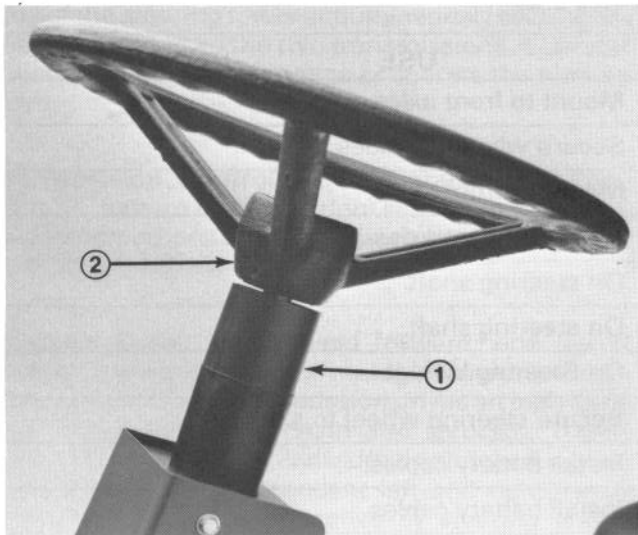


Figure 2

1. Steering shaft cover
2. Roll pin

3. Insert a drift punch partially through the holes to maintain alignment and insert the roll pin in from the opposite side.

4. Drive the roll pin in until it is flush with the outside of the wheel (Fig. 2).

ADJUSTING SEAT

Tip the seat forward, loosen the seat mounting capscrews and relocate the seat for operator comfort. Retighten the capscrews and lower the seat.

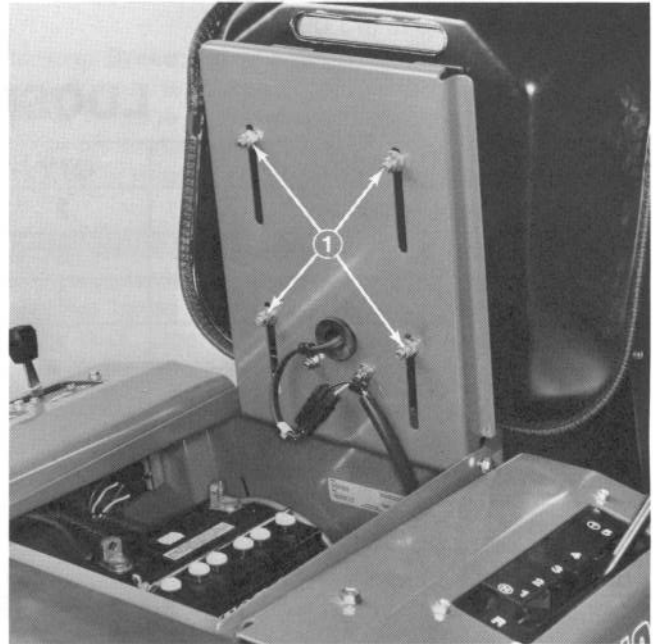


Figure 3

1. Seat adjusting screws

BEFORE OPERATING

ACTIVATING AND CHARGING BATTERY (12 Volt)

Tools Required: 3 to 4 Amp Battery Charger.

Since the battery for the rider is not filled with electrolyte or activated, the battery must be removed from the machine so it can be filled with electrolyte and charged. Bulk electrolyte with 1.260 specific gravity must be purchased from a local battery supply outlet. Remove the battery and activate it as follows:

1. Tip the seat forward exposing battery (Fig. 4).
2. Remove wing nut securing battery hold downs to rider chassis. (Fig. 4).



CAUTION

Wear safety goggles and rubber gloves when working with electrolyte. Charge the battery in a well ventilated place so gases produced while charging can dissipate. Since the gases are explosive, keep open flame and electrical spark away from the battery; do not smoke. Nausea may result if the gases are inhaled. Unplug charger from electrical outlet before connecting or disconnecting charger leads from battery posts.

BEFORE OPERATING



Figure 4

1. Battery hold down
2. Vent tube

3. Lift up on top battery hold down and pivot off battery.
4. Disconnect vent tube from battery.
5. Remove battery from chassis and set it aside.
6. Remove filler caps from battery and slowly fill each cell until electrolyte is just above the plates. To obtain best results, let battery set for 20 minutes. Add electrolyte to the maximum capacity.

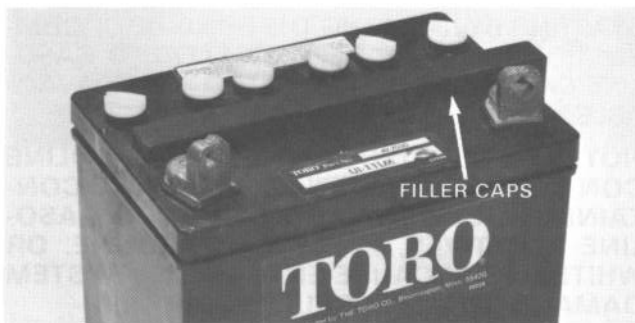


Figure 5

7. Leave filler caps off and connect a 3 to 4 amp battery charger to the battery posts. Charge the battery at a rate of 4 amperes or less for 4 hours.
8. When battery is charged, disconnect charger from electrical outlet and then from battery posts.
9. Slowly add electrolyte to each cell until level is up to fill ring. Install filler caps.

IMPORTANT: Do not overfill battery. Electrolyte will overflow onto other parts of the machine and severe corrosion and deterioration will result.

10. Install the battery with the battery vent tube toward the rear. Reconnect vent tube.

11. Reinstall battery hold downs.

12. Install the positive cable to the positive (+) terminal and the negative cable (black) to the negative (-) terminal of the battery and secure with carriage bolts and wing nuts (Fig. 6).

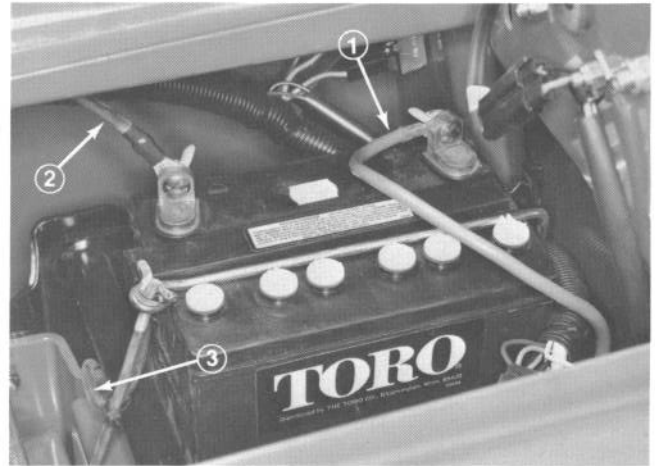


Figure 6

1. Positive cable
2. Negative cable
3. Vent tube

CHECK CRANKCASE OIL LEVEL

The rider is shipped from the factory with oil in the crankcase. However, check the oil level in the crankcase prior to starting the engine.

1. Place rider on a level surface to assure an accurate oil level reading. Ensure the oil drain plug is securely tightened (Fig. 7).

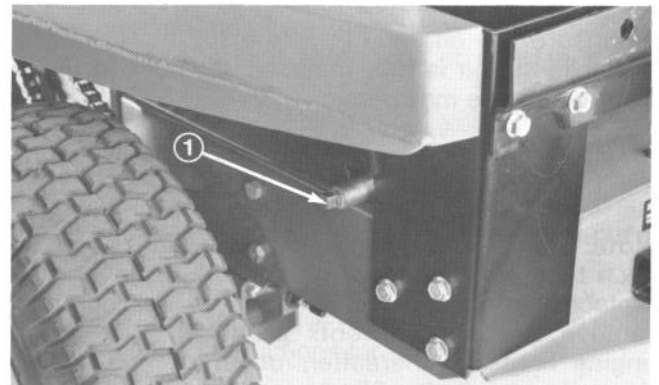


Figure 7

1. Drain plug

BEFORE OPERATING

2. Unscrew and remove the dipstick from the oil fill tube (Fig. 8).

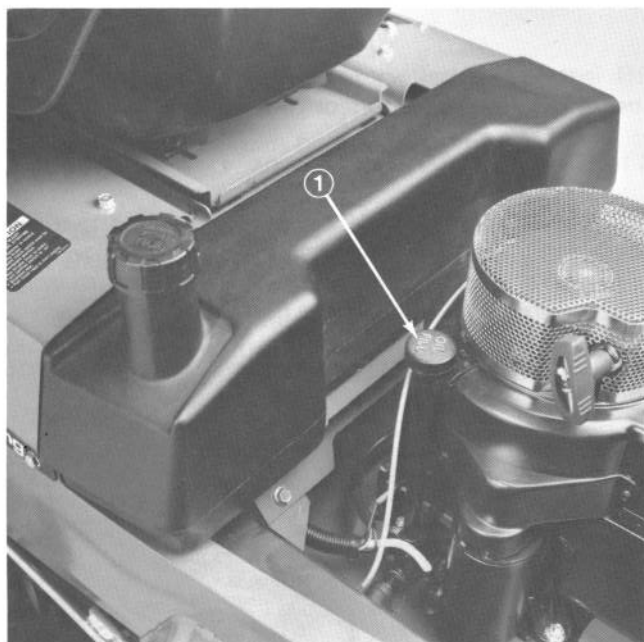


Figure 8

1. Dipstick

3. If oil level is low, insert a funnel into the tube and slowly add engine oil into the crankcase. Use a high quality detergent oil classified "For Service SC, SD, SE or MS". Oil viscosity (weight) must be selected according to anticipated ambient temperature.

- A. Above +40° F (4° C) — Use SAE 30; 10W-30 as a substitute.
- B. Below +40° F (4° C) — Use SAE 5W-20 or 5W-30; SAE 10 or 10W-30 as substitutes.
- C. Below 0° F (-18° C) — Use SAE 10 or 10W-30 diluted 10% with kerosene.

Note: Avoid premature engine failure by insuring the funnel used is clean so contaminants are not introduced into the crankcase. Wipe any oil spilled, so it will not cause dirt to collect on the engine.

4. Insure the oil level is to the full mark on the dipstick when it is fully installed. Do not overfill or engine damage may result.

5. Insert the dipstick and turn it clockwise to secure it in the fill tube.

Note: Check the oil level every 5 operating hours or each time rider is used. Initially, drain the oil and replace it after the first 5 hours of operation to remove the contaminants produced by normal engine break-in; thereafter, under normal conditions, change oil after 25 hours of operation. Change the oil more frequently when the engine is operated in dusty or dirty conditions.

FILL FUEL TANK WITH GASOLINE



DANGER

Because gasoline is flammable, caution must be used when storing or handling it. Do not fill fuel tank while engine is running, hot or when machine is in an enclosed area. Vapors may build up and be ignited by a spark or flame source many feet away. **DO NOT SMOKE** while filling the fuel tank to prevent the possibility of an explosion. Always fill fuel tank outside and wipe up any spilled gasoline before starting engine. Use a funnel or spout to prevent spilling gasoline, and fill tank to about 1/2 inch (12.7 mm) from top of tank, not the filler neck. Store gasoline in a clean safety-approved container and keep the cap in place on the container. Keep gasoline in a cool, well-ventilated place; never in an enclosed area such as a hot storage shed. To assure volatility, do not buy more than a 30 day supply of gasoline. Gasoline is a fuel for internal combustion engines; therefore, do not use it for any other purpose. Since many children like the smell of gas, keep it out of their reach because the fumes are explosive and dangerous to inhale.

THE TORO COMPANY STRONGLY RECOMMENDS THE USE OF CLEAN, FRESH **UNLEADED** REGULAR GASOLINE IN TORO GASOLINE POWERED PRODUCTS. UNLEADED GASOLINE BURNS CLEANER, EXTENDS ENGINE LIFE, AND PROMOTES GOOD STARTING BY REDUCING THE BUILD-UP OF COMBUSTION CHAMBER DEPOSITS. LEADED GASOLINE CAN BE USED IF UNLEADED IS NOT AVAILABLE.

NOTE: NEVER USE METHANOL, GASOLINE CONTAINING METHANOL, GASOLINE CONTAINING MORE THAN 10% ETHANOL, GASOLINE ADDITIVES, PREMIUM GASOLINE, OR WHITE GAS BECAUSE ENGINE FUEL SYSTEM DAMAGE COULD RESULT.

1. Clean area around fuel tank cap so foreign matter cannot enter tank when cap is removed.
2. Remove cap from fuel tank (Fig. 8) and fill tank with gasoline up to about one half inch from top of tank, not the filler neck. Then reinstall fuel tank cap.
3. Wipe up any gasoline that may have spilled.

CHECK TIRE PRESSURE

Check and insure the tires are inflated to 14 psi (96.5 kpa) before operating the machine.

CONTROLS

Clutch Pedal (Fig. 9) — Foot operated clutch pedal is used in conjunction with the gear shift and brakes. Depress clutch fully when shifting gears or braking.

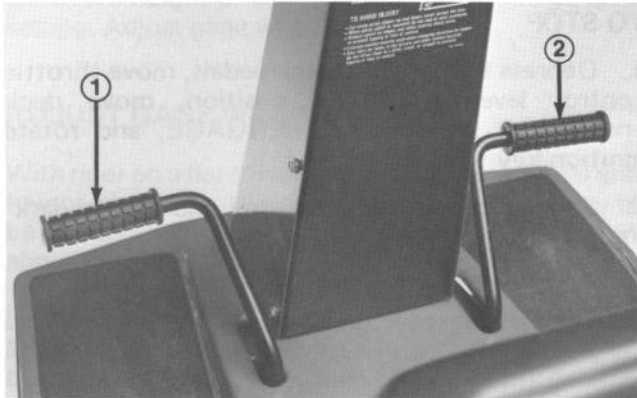


Figure 9

1. Clutch pedal
2. Brake pedal

Throttle Control (Fig. 10) — Throttle control connects to and operates carburetor mounted throttle and choke. Control has three positions: IDLE, FAST and CHOKE. The control must be pushed slightly to the left and forward to obtain CHOKE position. Return control to FAST as engine warms up.



Figure 10

1. Ignition switch
2. Throttle control
3. Deck engagement switch

Ignition Switch (Fig. 10) — Switch is part of battery ignition system, and it has three positions: OFF, ON and START. Key automatically returns to ON position from START position when released after engine starts.

Deck Engagement Switch (Fig. 10) — Toggle switch (Pull out and up to engage) releases blade brake and engages electromagnetic clutch to drive cutter blades.

Operator must be on the seat to engage or operate cutter deck.

Brake Pedal (Fig. 9) — Foot operated pedal, which when depressed, actuates a disc brake assembly at the side of each transmission. Clutch pedal must also be depressed while braking.

Parking Brake (Fig. 11) — Parking brake is used in conjunction with standard brake assembly. When brake pedal is depressed and parking brake lever is pulled upward, a latch plate secures the brake assembly in the engaged position preventing the machine from moving.

Note: Transmission must be in neutral or reverse to engage parking brake.

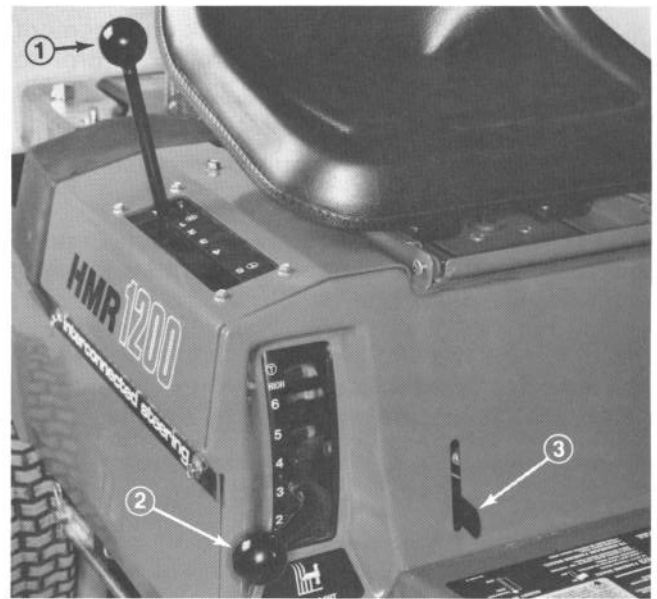


Figure 11

1. Gear shift
2. Height-of-cut control
3. Parking brake

Gear Shift (Fig. 11) — Transmission has five forward speeds, neutral and reverse, and has a "Z" shaped pattern. An interlock switch, which prevents engine from being started when the transmission is in gear, is mounted on the top of one transmission. Operator must be on the seat to engage or operate transmission.

Height-of-Cut Control (Fig. 11) — Height-of-cut control varies the cutting height from 1 1/2 to 4 1/2 inches (38 to 114 mm) in seven increments. Gage wheels on deck must be reset when height-of-cut is changed.

Recoil Starter (Fig. 12) — (Emergency starting only). See operating instructions for procedure.

STARTING AND STOPPING INSTRUCTIONS

Note: Engine will not key start unless deck engagement switch is DISENGAGED, shift lever is in neutral and operator is sitting on the seat.

TO KEY START MACHINE

1. Shift into neutral, move deck engagement switch to DISENGAGE and lock parking brake.
2. Sit on seat, move throttle control to CHOKE position and rotate ignition key to START. When engine starts, release key and move throttle control between FAST and SLOW.

Note: Choke may not be required when starting a warm engine.

RECOIL BACKUP STARTING (Emergency Starting only)

1. Shift into NEUTRAL, move deck engagement switch to DISENGAGE, move throttle control to CHOKE position, set parking brake and rotate ignition key to ON.

Note: Choke may not be required when starting a warm engine.

2. DO NOT SIT ON SEAT. Stand to left side of rider, pull recoil starter handle out until positive engagement results; then pull handle vigorously to start engine (Fig. 12). When the engine starts, immediately move throttle control between FAST and SLOW positions if choke was used for starting. Get onto the rider from the left side and sit on the seat.



Figure 12

1. Recoil starter

IMPORTANT: Do not pull recoil rope to its limit or let go of the starter handle when rope is pulled out because rope may break or recoil assembly may be damaged.

OPERATE CUTTER DECK

1. Select desired height-of-cut, adjust gage wheels, start machine and pull out and up on deck engagement switch to ENGAGE.

2. Release parking brake, depress clutch pedal and shift into forward gear.

TO STOP

1. Depress brake and clutch pedals, move throttle control lever to SLOW position, move deck engagement switch to DISENGAGE, and rotate ignition key to OFF.
2. Shift transmission to neutral and engage parking brake.
3. Remove key from ignition switch.

BREAK-IN

The engine requires no special break-in other than changing oil after the first five hours of operation. Operate the transmission in all gears to assure that drive system is functioning correctly.

USING PARKING BRAKE



CAUTION

If the engine stalls or must be stopped while operating on a hill or slope, the engine must be shut off and parking brake engaged.

1. Depress brake pedal fully, shift transmission to neutral.
2. Move parking brake control upward and release brake pedal.
3. To release the parking brake, depress brake pedal (Fig. 9), and push parking brake lever (Fig. 11) down to return it to its disengaged position. Release brake pedal slowly.

ADJUSTING HEIGHT-OF-CUT

The height-of-cut may be set in one of seven positions from approximately 1-1/2 to 4-1/2 inches (38 to 114 mm).

Deck Lever Selection	Height-of-Cut Setting (Approx.)
1	1-1/2 in.
2	2 in.
3	2-1/2 in.
4	3 in.
5	3-1/2 in.
6	4 in.
T (TRANSPORT)	4-1/2 in.

STARTING AND STOPPING INSTRUCTIONS

1. Assure the deck engagement switch is in DIS-ENGAGE position (Fig. 10).
2. Move height-of-cut control (Fig. 11) into desired setting. Adjust gage wheels.

ADJUST GAGE WHEELS (Fig. 13)

With rider on a flat surface, tires inflated to 14 psi and height-of-cut in desired setting, gage wheels are to be positioned so they are approximately 1/4" to 3/8" above the ground.

IMPORTANT: It is important that gage wheels be adjusted each time height-of-cut is changed, so that the deck will follow the contour of the ground and does not scalp the turf.

1. Remove hairpin cotter and clevis pin securing gage wheel to cutting deck.
2. Move gage wheel up or down to required setting and reinstall clevis pin and cotter pin.

3. Reposition gage wheels each time height-of-cut setting is changed.

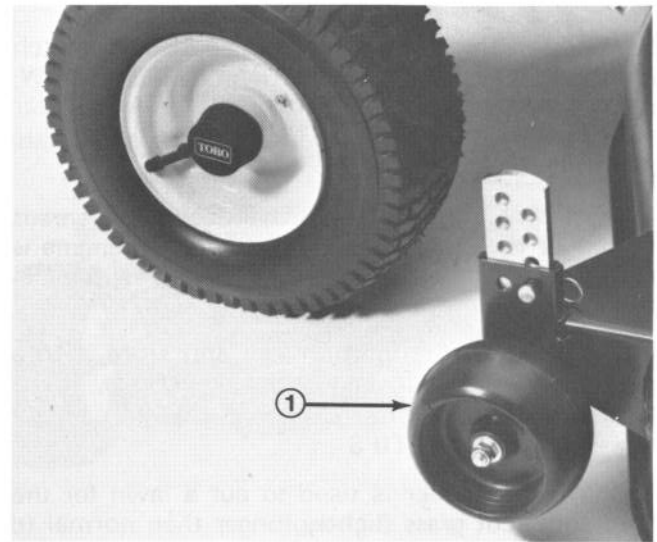


Figure 13

1. Gage wheel

OPERATING INSTRUCTIONS

GRASS DEFLECTOR



WARNING

The grass deflector and toe bar is a safety device that routes discharged material down toward the turf; therefore, do not remove deflector from mower housing. If the deflector is ever damaged, replace it. Without the deflector or complete grass catcher assembly mounted in place, discharged material could cause personal injury.

OPERATING PROCEDURE

1. Move deck engagement switch into DIS-ENGAGE.
2. Start the engine: refer to Starting/Stopping Instructions, page 12.

IMPORTANT: When rider is used for the first time, operate the transmission in all gears to assure that drive system is functioning correctly, and become familiar with the controls and operating characteristics. Never shift without first depressing the clutch pedal or transmission damage could result.

3. Depress clutch pedal and shift transmission into a low gear. Then release pedal slowly until traction drive engages. Do not downshift into a lower gear without first slowing down or transmission damage could occur.

IMPORTANT: Do not operate machine with foot resting on either brake or clutch pedal or mechanical damage can occur.

IMPORTANT: To avoid a jerky start and putting a heavy load on the transmissions, release clutch pedal slowly. If shifting into reverse gear is difficult, let out clutch pedal slowly while maintaining a slight rearward pressure on gear shift. Do not force the gear shift because damage may result. Should you encounter a jerking or grabbing condition during operation, contact your local Authorized TORO Service Dealer for assistance.



WARNING

To avoid loss of control, slow down when turning, backing and changing direction. Before backing up, move deck engagement switch into DISENGAGE. Do not mow in reverse unless absolutely necessary and then only after careful observation of the entire area behind the mower.

OPERATING INSTRUCTIONS

4. To engage blades for cutting, move height-of-cut control to the desired setting, then pull out and up on deck engagement switch.

5. To stop the engine, in sequence, depress clutch and brake pedals, move throttle control to SLOW, deck engagement switch into DISENGAGE, gear shift into neutral, engage parking brake, and rotate key to OFF position.

IMPORTANT: Never leave the deck engagement switch in the engaged position when the engine is not running. Doing so with the ignition switch ON will discharge the tractor battery.

Note: Remove the ignition key and store it in a memorable place between operating periods.

GRASS CUTTING TIPS

1. When the rider is used to cut a lawn for the first time, cut grass slightly longer than normal to assure that cutting width of mower housing will not cause scalping, which could result from severe undulations of the ground. In general, however, the cutting height used in the past is probably the best one to use.

2. If the grass is ever allowed to grow slightly longer than normal, or if it contains a high degree of moisture, raise cutting height higher than usual and cut the grass at this setting. Next, cut the grass again using the lower, normal setting. This method of cutting long grass results in an even distribution of clippings and an acceptable quality-of-cut.

3. Very long or extremely wet grass can be cut, but specific operating techniques must be used. Start by setting height-of-cut in Position #6. Using 1st gear and maximum throttle speed, move into the grass and cut a swath that is only half as wide as the mower housing. Direct grass clippings toward area that was cut previously. Stop forward movement occasionally to allow discharge area to clear itself. Cutting too much grass may clog the mower housing and discharge area. If mower housing does clog, shut engine off, disengage blades and remove the obstruction with a stick.



DANGER

Before removing obstruction from mower housing, move deck engagement switch into DISENGAGE, depress clutch and brake pedals, shift into neutral, turn ignition key to OFF position and set parking brake. Remove wire from spark plug to prevent possibility of accidental starting.

4. When mowing, operate engine at full throttle. This maintains proper blade speed and air flow to facilitate discharge of clippings. Mowing with a lower rpm causes the blades to tear the grass, resulting in poor lawn appearance. Lower rpm also reduces alternator charging efficiency which may affect battery performance.

MAINTENANCE INTERVAL CHART

	5 Hours	25 Hours	Storage Service	Spring Service	2 Years	Notes
Change Oil (Initial)	X					
Change Oil (Periodic)		X	X			More often in dusty, dirty conditions.
Check Safety Interlock	X	X		X		
Check Cutter Blades	X	X	X			
Check Brakes	X		X	X		
Grease Front Axle Spindles and Wheels		X	X			
Grease Steering Spindle		X	X			
Lubricate Pivot Points		X	X			
Grease Rear Wheels		X	X			
Service Air Cleaner		X	X			More often in dusty, dirty conditions.
Check Spark Plug		X	X	X		
Check Battery Electrolyte Level		X	X	X		
Check Tire Pressure		X	X			
Clean Outside of Engine		X	X			
Check Chain Tension		X	X			
Check Blade Drive Belts			X			
Check Traction Drive Belts			X			
Drain Gasoline			X			More often in dusty, dirty conditions.
Clean Mower Housing			X			
Paint Chipped Surfaces			X			
Check Interlock Switches					X	

MAINTENANCE



CAUTION

To prevent accidental starting of the engine while performing maintenance, shut engine off, remove key from ignition switch, and pull wire off spark plug (Fig. 14). Make sure wire does not contact plug accidentally.



Figure 14

1. Spark plug wire
2. Spark plug

GREASE FRONT AXLE SPINDLES AND FRONT & BACK WHEELS

Tools Required: Clean Rag and Grease Gun w/No. 2 General Purpose Lithium Grease

The front axle spindles and wheels must be lubricated after every 25 hours of operation; however, lubricate more frequently when conditions are dusty or sandy.

1. Wipe grease fittings on spindles and wheels (Fig. 15, 16) with a clean rag. If there is paint on front of fittings, scrape it off.
2. Lubricate both axle spindles and front and back wheels w/No. 2 general purpose grease (Fig. 15). Continue to pump grease until it oozes out the spindle. Wipe up any excess grease.

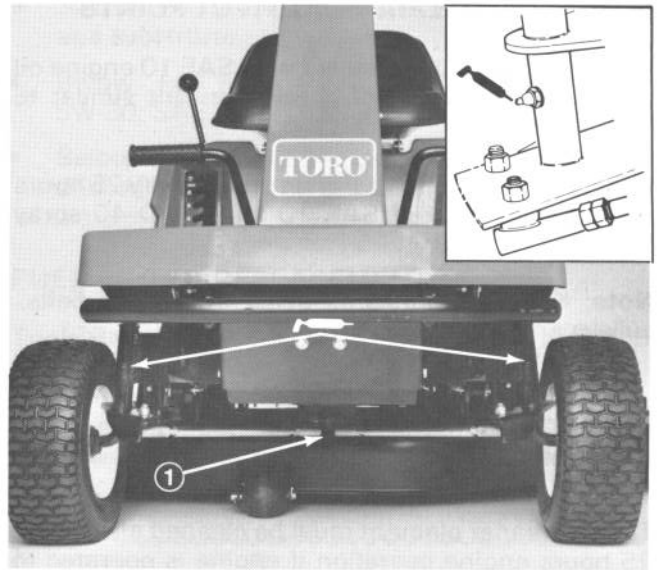


Figure 15

1. Steering spindle location

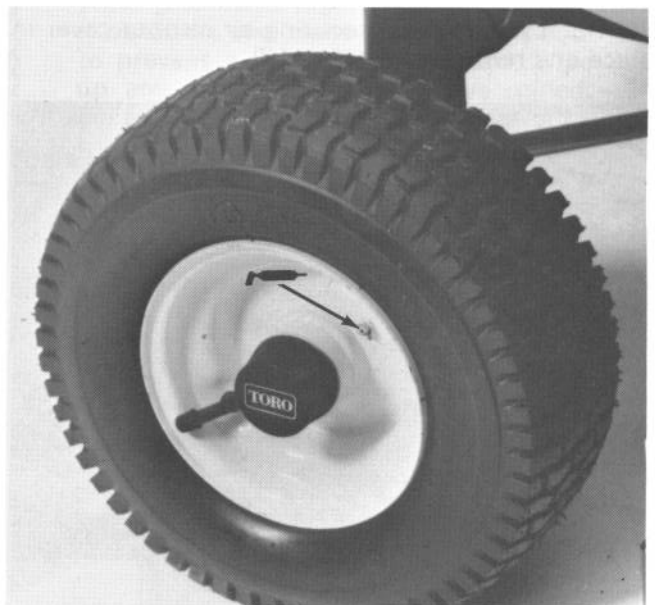


Figure 16

GREASE STEERING SPINDLE

Tools Required: Clean Rag and grease gun w/No. 2 General Purpose Lithium Grease.

The steering spindle, above steering rack, must be lubricated after every 25 hours of operation; however, lubricate more frequently when conditions are dusty or sandy.

1. Wipe grease fitting on spindle with a clean rag. If there is paint on fitting, scrape it off. (Fig. 15, Inset).
2. Lubricate spindle w/No. 2 general purpose grease. Wipe up any excess grease.

MAINTENANCE

LUBRICATE MECHANICAL PIVOT POINTS

Tools Required: Oil can filled with SAE 10 engine oil or a pressurized can of spray lubricant similar to WD-40.

Lubricate the mechanical pivot points every 25 hours with a few drops of SAE 10 oil or WD-40 spray lubricant.

Note: Keep all lubricants away from drive belts, pulleys and brake discs.

SERVICING AIR CLEANER

Tools Required: None.

The air cleaner element must be cleaned after every 25 hours engine operation if engine is operated in clean air conditions. However, element must be cleaned every few hours if operating conditions are extremely dusty or sandy.

1. Remove (2) knobs securing air cleaner cover in place and remove cover (Fig. 17).



Figure 17

- 1. Knobs
- 2. Air cleaner cover

2. Remove foam pre-cleaner by sliding it off the cartridge (Fig. 18).

- A. Wash foam pre-cleaner in liquid soap and warm water.
- B. Wrap foam pre-cleaner in cloth and squeeze dry.
- C. Saturate foam in engine oil. Squeeze to remove excess oil.

3. Remove (2) nuts from top of cartridge (Fig. 18).

4. Remove cartridge and clean air cleaner body carefully to prevent dirt from entering carburetor.

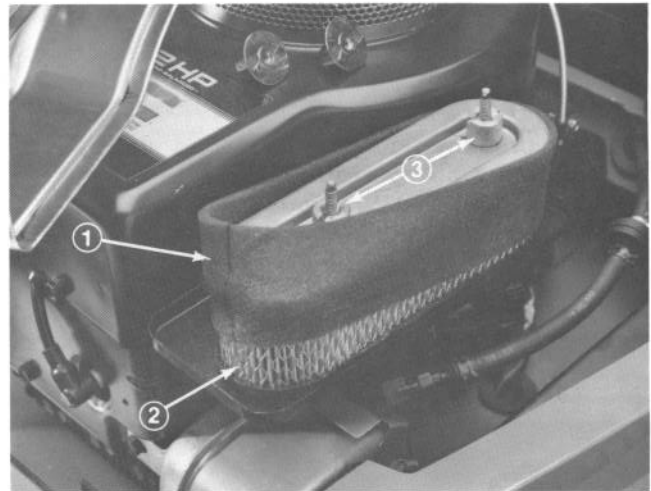


Figure 18

- 1. Foam pre-cleaner
- 2. Cartridge
- 3. Nuts

5. Clean cartridge by tapping gently on flat surface.

- A. If very dirty, replace cartridge or wash in a low or non-sudsing detergent and warm water solution.
- B. Rinse thoroughly from INSIDE OUT until water is clear.
- C. Cartridge must be allowed to stand and air dry thoroughly before using.

6. Reassemble air cleaner.



IMPORTANT

Petroleum solvents, such as kerosene, are not to be used to clean cartridge. They may cause deterioration of the cartridge. **DO NOT OIL CARTRIDGE. DO NOT USE PRESSURIZED AIR TO CLEAN OR DRY CARTRIDGE.**

IMPORTANT: Always operate engine with air cleaner element in place or engine damage will result.

CHANGING CRANKCASE OIL

Tools Required: Clean rag, 7/16 inch open end wrench, and shallow oil drain pan.

1. Check level of oil before starting engine and after every 5 hours of operation. Maintain oil level at **FULL** mark on dipstick.

MAINTENANCE

To check level of oil:

- A. Position rider on level surface.
- B. Clean the area around oil dipstick so foreign matter cannot enter filler hole when dipstick is removed.
- C. Unscrew dipstick and wipe oil off.
- D. Screw dipstick fully in to filler neck; then remove it and check oil level on dipstick. If level is low, add only enough oil to raise level to FULL mark. Do not overfill or engine damage may result.
- E. Screw dipstick back into filler neck.

2. Change oil after first 5 hours of operation; every 25 hours thereafter. Change oil more frequently when operating conditions are extremely dusty or dirty.

To change oil:

- A. Position rider on level surface. Start and run engine for a period to warm the oil.
- B. Turn engine off, set parking brake and place drain pan below drain plug (Fig. 19). Remove drain plug and allow all oil to flow into drain pan. Install drain plug securely after oil stops flowing.

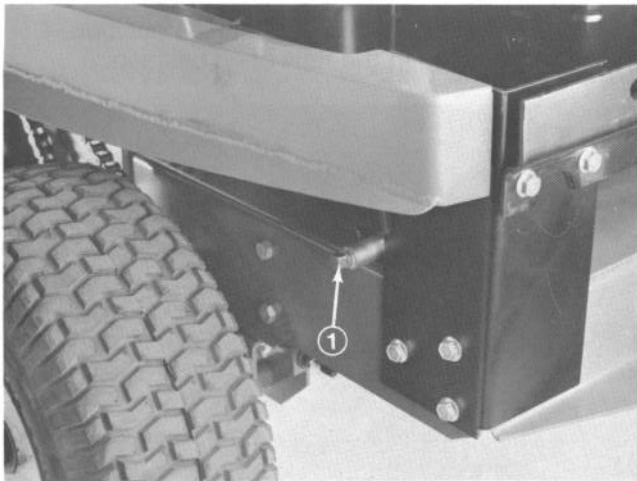


Figure 19

1. Drain plug

C. Unscrew dipstick and add oil to crankcase. Refer to CHECK CRANKCASE OIL LEVEL, page 10. Capacity is 48 oz. (1.42 l). DO NOT OVERFILL or engine damage may result. Recheck oil level before operating.

Use any high-quality A.P.I. classification SC, SD, SE, or MS engine oil. Recommended viscosity of oil to use is:

- Above +40° F (4° C) — Use SAE 30; 10W-30 as a substitute.
- Below +40° F (4° C) — Use SAE 5W-20 or 5W-30; SAE 10 or 10W-30 as substitutes.
- Below 0° F (-18° C) — Use SAE 10 or 10W-30 diluted 10% with kerosene.

FUEL FILTER REPLACEMENT

Tools Required: Hose clamp pliers, drain pan.

An in-line filter is incorporated into the fuel line between the fuel tank and carburetor (Fig. 20). Use the following procedures should replacement become necessary:



DANGER

Since gasoline is highly flammable, drain it outdoors and make sure engine is cool to prevent a potential fire hazard. Wipe up any gasoline that may have spilled. Do not drain gasoline near any open flame or where gasoline fumes may be ignited by a spark. Do not smoke a cigar, cigarette, or a pipe when handling gasoline.

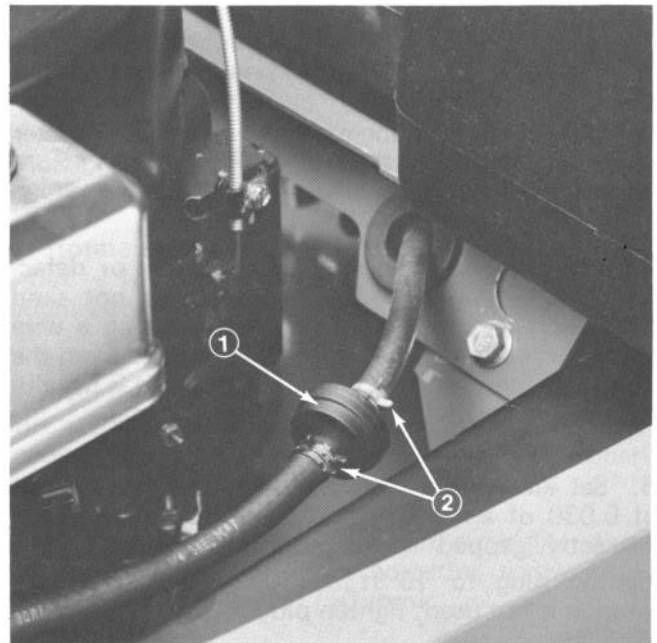


Figure 20

1. Fuel filter
2. Hose clamps

1. Close fuel shut off valve, located under fuel tank (access from under seat).

MAINTENANCE

2. Loosen the hose clamp on the carburetor side of filter and remove the fuel line from the filter.
3. Place a drain pan under filter, loosen the remaining hose clamp and remove filter.
4. Install the new filter with arrow on the filter body pointing towards the carburetor. Reinstall clamps.
5. Open fuel shut-off valve fully.

REPLACING SPARK PLUG

Tools Required: Spark Plug Socket, Spark Plug Gapping Tool, and Clean Rag.

Since air gap between center and side electrodes of the spark plug increases gradually during normal operation of the engine, check condition of electrodes after every 25 operating hours. Recommended air gap is 0.030 of an inch (0.762 mm). Correct spark plug to use is:

Champion RCJ-8 or Autolite AR7N.

Note: The spark plug usually lasts a long time; however, the plug should be removed and checked whenever the engine malfunctions.

1. Clean area around spark plug so foreign matter cannot fall into cylinder when spark plug is removed.
2. Pull high tension wire off spark plug and remove plug from cylinder head.
3. Check condition of side electrode, center electrode, and center electrode insulator to assure there is no damage.

IMPORTANT: A cracked, fouled, dirty or defective spark plug must be replaced. Do not sand blast, scrape, or clean electrodes by using a wire brush because grit may eventually release from the plug and fall into the cylinder. The result is usually a damaged engine.

5. Set air gap between center and side electrodes at 0.030 of an inch (0.762 mm) (Fig. 21). Install correctly gapped spark plug w/gasket seal, and tighten plug to 15 ft-lb (20.4 N-m). If torque wrench is not used, tighten plug firmly.

6. Push high tension wire onto spark plug but do not leave key in the ignition. This will prevent accidental starting when mower is being stored between use periods. Keep key in memorable place so it is not lost.

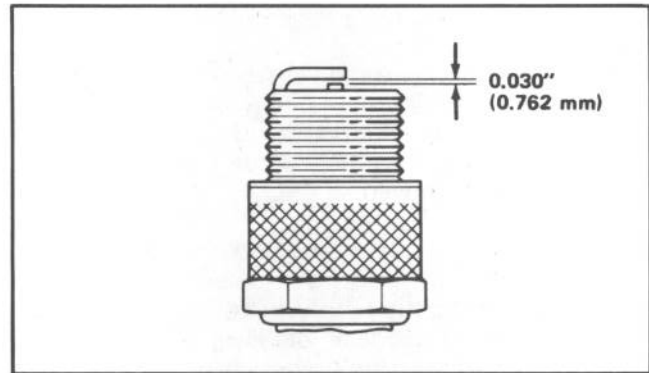


Figure 21

ADJUSTING THROTTLE-CHOKE CONTROL

Tools Required: Medium blade screwdriver.

Proper choke operation is dependent upon proper adjustment of remote controls. Before adjusting the carburetor, assure the throttle-choke control is operating properly.

1. Remove the knobs holding air cleaner in place and lift air cleaner cover off air cleaner.
2. Move remote control lever to CHOKE position and check the position of the choke butterfly; it should be fully closed.
3. Move remote control lever to FAST position. The butterfly should be in the fully open position.

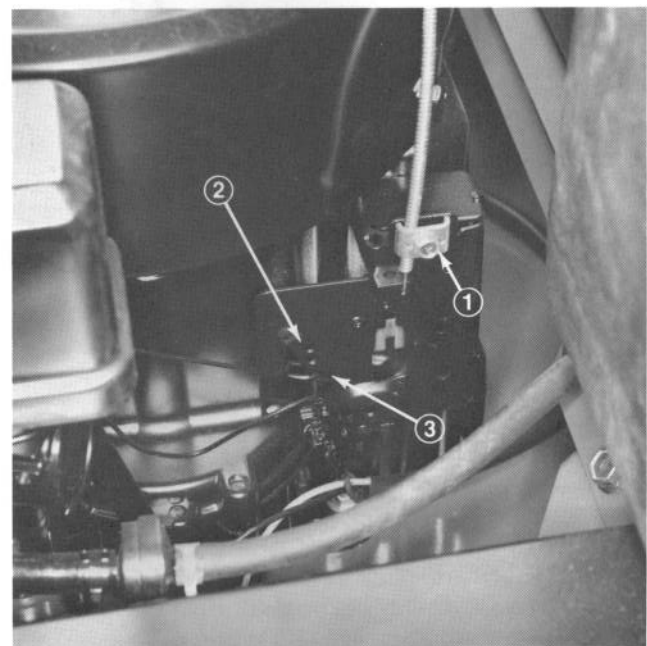


Figure 22

1. Clamp screw
2. Link
3. Throttle lever

MAINTENANCE

4. If the choke butterfly is positioned as described in steps 2 and 3, replace the air cleaner assembly and continue operation.

If either the choke butterfly does not close or is not fully open in the FAST position, adjust the remote control lever as follows:

1. Place remote control lever in CHOKE position.
2. Loosen the throttle cable clamp screw (Fig. 22) and move the control cable casing and wire until the throttle lever touches link.
3. Tighten the cable clamp and assemble the air cleaner cover to the air cleaner.

ADJUSTING CARBURETOR

Tools Required: Medium Blade Screwdriver

The carburetor has been set at the factory, but an occasional adjustment may be required. However, do not make unnecessary carburetor adjustments because factory settings are usually correct. An adjustment may be required to compensate for differences in fuel, temperature and altitude.

IMPORTANT: Before the carburetor is adjusted, throttle control must be checked for proper operation: refer to Adjusting Throttle/Choke Control, page 18.

1. Needle Valve (Fig. 23) — Close valve by gently rotating it clockwise.

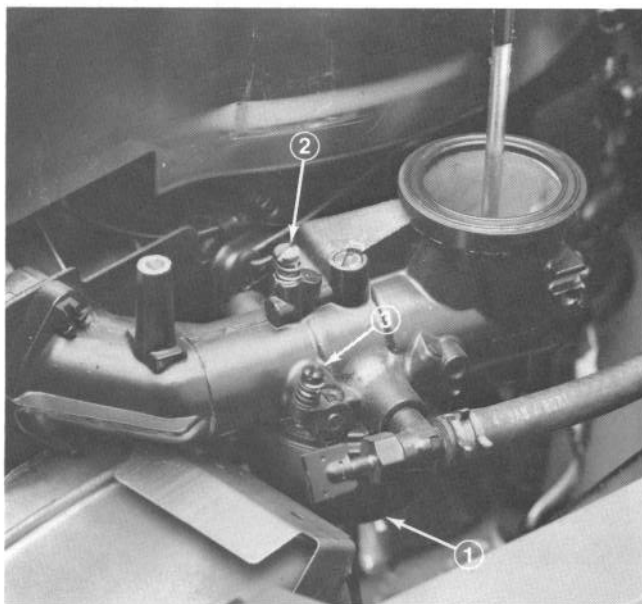


Figure 23

1. Needle valve
2. Idle valve
3. Idle speed adjusting screw

IMPORTANT: Do not close the needle valve too tight because the valve and seat in carburetor will likely be damaged.

2. Rotate — open — the needle valve 2 turns counterclockwise (Fig. 23).

Note: The needle valve setting is an approximate; however, the setting will allow engine to be started so carburetor can be fine tuned — steps 3-9.



WARNING

Engine must be running so final adjustment of the carburetor can be performed. To guard against possible personal injury, move deck engagement switch into DISENGAGE detent, shift into neutral, and engage parking brake. Keep hands, feet, face, and other parts of the body away from the cutter blade, underside of mower housing, discharge area, and any rotating engine parts.

3. Start engine and let it warm up for approximately two minutes. Next, move throttle control into FAST detent.

IMPORTANT: A clean air cleaner must be installed on the engine whenever high speed is being adjusted. The air cleaner mounting screw must also be installed when engine is run.

4. Rotate needle valve (Fig. 23) clockwise, 1/8 turn at a time, until engine starts to lose speed. Let engine react to each 1/8 turn setting.

5. Rotate needle valve (Fig. 23) counterclockwise — out — 1/8 turn at a time, until engine first runs rough. Let engine react to each 1/8 turn setting.

6. Rotate needle valve (Fig. 23) clockwise — in — very slowly until engine starts to run smoothly. This setting, under no load, may be slightly rich; however, the slightly rich setting will assure proper operation when engine is under load.

7. Move throttle control backward so engine idles. If engine stalls, rotate idle adjusting screw until engine speed increases (1750 rpm).

Note: Rotate idle adjusting screw clockwise to increase idle rpm. By contrast, rotate idle adjusting screw counterclockwise to decrease idle rpm.

8. Turn idle valve in (lean) and out (rich) slowly until engine idles smoothly.

MAINTENANCE

9. Check carburetor adjustment by quickly moving throttle control from SLOW to FAST. Engine speed should increase without hesitation. If engine tends to stall or die out, rotate needle valve 1/8 turn counterclockwise until engine accelerates smoothly.

10. After carburetor is adjusted, shut engine off. If mower will not be used immediately, remove key from switch to prevent possibility of accidental starting. Keep key in a memorable place so it is not lost accidentally.

REMOVING CUTTING DECK

Tools Required: None

1. Set height-of-cut lever in lowest position.
2. Remove washer and cotter pin securing rear of each tension rod to rider post and disconnect rod. Use caution — spring is under tension.
3. Note right and left rods, so they can be reinstalled on the same side.
4. Remove (2) cotter pins and clevis pins securing front deck hangers to hanger bars and lower front of deck to ground.
5. Push deck rearward until it slides off back of lift bars. Raise height-of-cut lever to highest position and slide deck out from under rider.



CAUTION

Suspension bars are spring loaded. Use caution when removing deck.



Figure 24

- | | |
|------------------------|----------------------|
| 1. Deck tension rod | 3. Rear deck hangers |
| 2. Washer & cotter pin | 4. Lift bar |

SERVICING CUTTER BLADES

Tools Required: Rag or thickly padded Glove, 15/16 inch Socket Wrench and Handle, File and Blade Balancer.

To service blades:

1. Insure engine is shut off, lock parking brake and remove the high tension wire from the spark plug.



CAUTION

Stop the machine and examine the cutter blades for damage and loss of torque of the nut securing the blades to the spindle shaft whenever the blades strike an immovable object. Disconnect the spark plug lead, engage the parking brake and move deck engagement switch into DISENGAGE detent prior to examining the blade. If blade is cracked, bent or twisted or severely eroded (fig. 26), replace the blade. Always use genuine Toro replacement blades to assure safety and optimum performance. **NEVER USE WILL FIT REPLACEMENT BLADES.** See To Service Blades above.

2. Remove cutting deck; refer to Removing Cutting Deck, page 19.

3. Turn cutting unit on its side, grasp the end of the blade with a rag or thickly padded glove; then remove the locknut, anti-scalp cup and blade (Fig. 25).

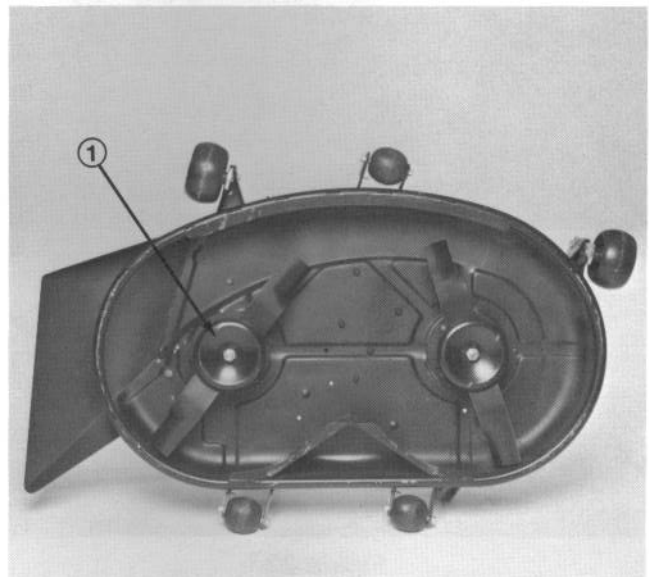


Figure 25

1. Locknut, anti-scalp cup and blade

MAINTENANCE

4. Examine cutting ends of the blade carefully, especially where the flat and curved parts of the blade meet (Fig. 26A). Since sand and abrasive material can wear away the metal that connects the flat and curved parts of the blade, check the blade before using the mower. If wear is noticed (Fig. 26), replace the blade.

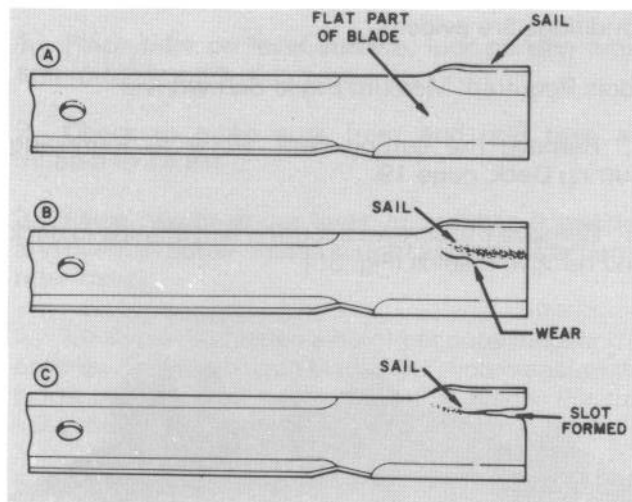


Figure 26



CAUTION

If blade is allowed to wear, a slot will form between the sail and flat part of the blade (Fig. 26C). Eventually, a piece of the blade may break off and be thrown from under the housing, possibly resulting in serious injury to yourself or bystander.

Note: Since lock nut is tightened at the factory, it may be difficult to remove the nut. If nut cannot be removed, contact an Authorized TORO Service Dealer for assistance.

5. Using a file, sharpen cutting edge at both ends of the blade (Fig. 27). File only top side of blade, not the bottom side.

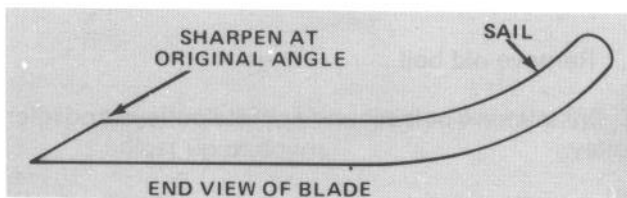


Figure 27

6. Check balance of blade by putting it on a blade balancer. (An inexpensive balancer can be purchased at a hardware store). A balanced blade

will stay in a horizontal position on the balancer. By contrast, a blade that is not balanced will settle to the heavy side. If blade is not balanced, file more material off cutting edge of the blade. Continue to file and check the blade until it is balanced.

7. In sequence, install blade, anti-scalp cup and locknut (Fig. 25). Tighten locknut to 50-60 ft/lb (68-81 N·m).

IMPORTANT: Make sure blade sail is facing top of mower housing and cutting edge of blade is away from top of mower housing (Fig. 25). While lock nut is tightened, move blade slightly so it seats between sides of blade retainer.

8. Mount the cutting unit to the rider. Refer to Install Cutting Unit, below, for proper procedures.

INSTALL CUTTING DECK

Tools Required: None.

1. Remove (4) clevis pins and cotter pins from deck hanger brackets on cutting deck.
2. Insure height-of-cut lever is in the highest height setting.
3. Lock parking brake, and slide deck under rider.
4. Position the cutting deck so the hanger bars bisect the deck hanger brackets on each side of deck. Lower the height-of-cut lever to its lowest setting.



CAUTION

Suspension bars are spring loaded. Use caution when installing deck.

5. Route belt around deck pulley and engine pulley.
6. Starting with the front, pull down on each hanger bar while lifting deck enough to install the clevis pins into the bracket holes. Secure with cotter pins.
7. With washer, spacer and spring installed on deck tension rod, insert front end of rod into bracket on deck and rear end onto post on rider frame. Secure rear end on post with a washer and cotter pin (Fig. 28).

Note: Rear end of rod to be positioned on post with welded bracket on inside of rod as shown in Fig. 29.

MAINTENANCE



Figure 28

1. Clevis pin & cotter pin 2. Hanger brackets 3. Hanger bar

TENSION CUTTER DECK DRIVE BELT

1. To tension belt, tighten front jam nuts on deck tension rods equally until springs are compressed to a length $3/16$ " longer than spacers inside of springs (Fig. 29). Secure rear jamnuts.



Figure 29

1. Deck tension rod 2. Deck bracket

Note: Check position of tension rods. Both rods are to extend equally through deck brackets within $1/4$ " per side in order to prevent binding on hanger bars. If an adjustment is required, readjust jam nuts to equalize rods.

2. Check position of both belt guides. Guides should be positioned so rod edges are approximately .10 inch from back side of each belt.

CLEANING UNDERSIDE OF MOWER HOUSING

Tools Required: Wooden scraper, garden hose and paste wax.

To assure a good quality-of-cut and efficient grass bagging, underside of mower housing and inside of discharge area must be kept clean. Whenever the mower is removed, clean out debris with a scraper and hose and apply a coat of paste wax on inside of mower housing and grass deflector. This will retard corrosion and prevent grass and dirt from sticking on inside of housing.

REPLACING BLADE SPINDLE DRIVE BELT

The blade drive belt, tensioned by the spring loaded idler, is very durable. However, after many hours of use, the belt will show signs of wear. Signs of a worn belt are: squealing when belt is rotating, blades slipping when cutting grass, frayed edges, burn marks and cracks. Replace the belt if any of these conditions are evident.

Tools Required: Medium Blade Screwdriver.

1. Remove the cutting deck. Refer to Removing Cutting Deck, page 19.

2. Remove the screws securing belt shields to deck and remove shields (Fig. 30).

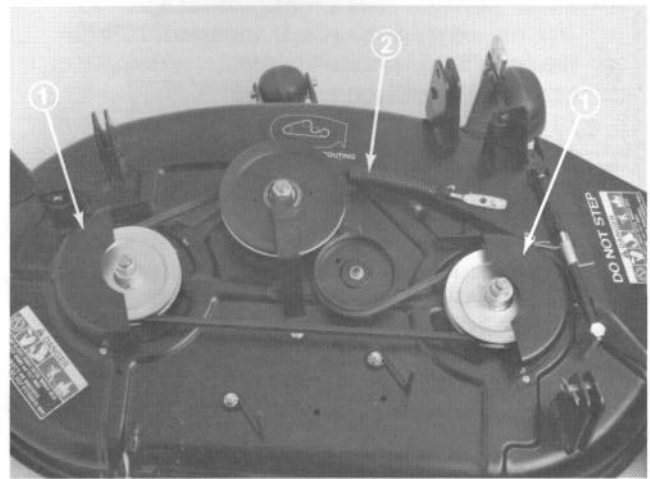


Figure 30

1. Belt shield
2. Idler pulley spring



CAUTION

Idler arm and pulley are spring loaded; use caution when loosening belt.

3. Unhook idler pulley spring to relieve tension on belt.

4. Remove old belt.

5. Install new belt around spindle pulleys and idler pulley.

6. Connect idler pulley spring.

7. Reinstall belt shields to cutting deck.

8. Reinstall cutting deck to rider; refer to Installing Cutting Deck, page 20.

MAINTENANCE

LEVELING CUTTING DECK

Tools Required: 3/4 inch wrench, 6 inch (15 mm) scale ruler.

If mower doesn't cut level from side to side and cutting blade is not bent, level the cutting unit as follows:

1. Place rider on level surface, lock parking brake and remove spark plug wire.
2. Check to make sure front and rear tires are inflated to 14 psi.
3. Place height-of-cut lever in number 3 position and position cutter blades at right angle to direction of rider travel.
4. Measure the blade tip height at outermost end of each blade. Rotate each blade 180° and measure the blade tip height of opposite end of blade. Position lowest end of each blade in outermost position.
5. Compare outermost blade tip heights. Measurements should be within 3/16 inch (5 mm) of one another.
6. If blade tip heights are not within 3/16 inch (5 mm), level cutting unit by adjusting height-of-cut link connected to right hand lift bar as follows:

- A. Block up deck and remove cotter pin and washer securing link to lift bar (Fig. 31).

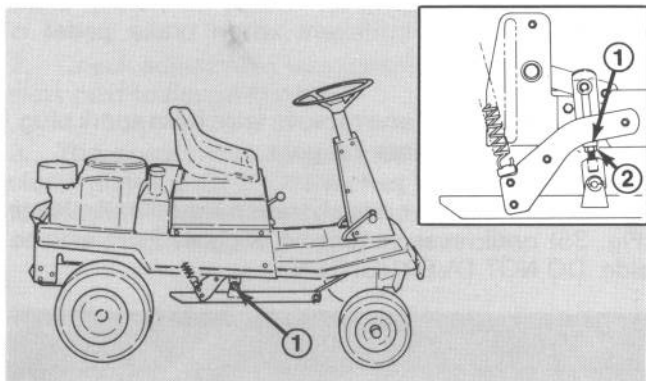


Figure 31

1. H.O.C. link
2. Jam nut

- B. Loosen jam nut on link and rotate link to adjust up or down.
 - C. Tighten jam nut, reinstall link to lift bar with washer and cotter pin.
 - D. Recheck adjustment.
6. To adjust cutting deck front to back.

- A. Set height-of-cut lever in No. 3 position and make sure all tires are inflated to 14 psi.
- B. Measure blade tip height with tip of blade in farthest forward position. Rotate blade 180° and measure same blade tip in rearward position.
- C. Front measurement should be 1/8" to 3/8" lower than rear measurement. If an adjustment is required, proceed to step D.
- D. Block up deck, remove cotter pin and washer from one of the front link yokes (Fig. 32).

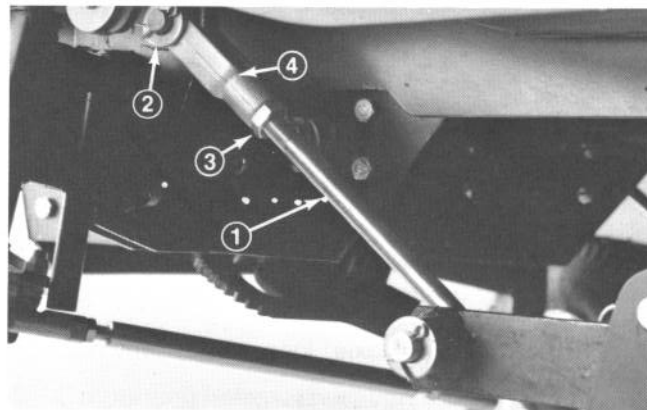


Figure 32

1. Front link
2. Washer & cotter pin
3. Jam nut
4. Yoke

- E. Loosen jam nut and rotate front link yoke to adjust up or down.
- F. Reinstall link to lift bar, tighten jam nut and repeat procedure on opposite side.
- G. Make sure both links are adjusted the same number of turns.
- H. Recheck adjustment.

ADJUSTING DRIVE CHAINS

The drive chains must be adjusted to maintain 1/2" deflection when a 10 lb force is applied perpendicular to chain at the mid span between transmission and sprocket. Check chain deflection after first 5 hours of operation and after every 25 hours of operation, thereafter.

IMPORTANT: If chain is worn, loose or adjusted incorrectly, chain could come off sprockets, resulting in no brakes or traction drive. If assistance is needed, contact your local authorized Toro Dealer.

1. Check deflection of drive chain by pressing up on chain with approximately 10 lbs force (moderate pressure) at mid span. There should be 1/2" deflection (Fig. 33). If deflection is not as specified an adjustment is required.

MAINTENANCE

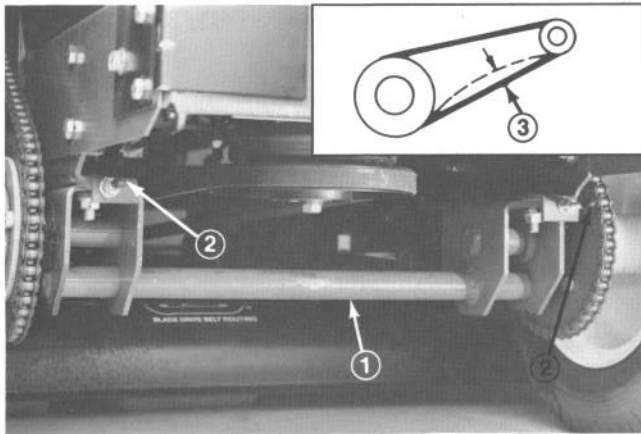


Figure 33

1. Axle
2. Chain tensioner
3. Chain deflection

2. Block up rear of rider chassis, so rear wheels are off the floor and axle can be moved.
3. Slightly loosen (4) flange nuts securing both sides of axle to rider frame.
4. On both sides of axle, loosen rear jam nuts on chain tensioners.
5. Rotate inside nut on chain tensioner until desired chain tension is attained on each side.
6. Tighten rear jam nuts on chain tensioners.
7. Tighten (4) flange nuts securing both sides of axle to rider frame.
8. Recheck chain tension.

REPLACING DRIVE CHAINS

1. Block up rear of rider chassis, so rear wheels are off the floor.
2. Loosen (4) flange nuts securing both sides of axle to rider frame.
3. On both sides of axle, loosen rear jam nuts on chain tensioners.
4. Rotate inside nut on chain tensioners until chain is loose.
5. The master link on the chain may now be removed and chain removed from sprockets.

IMPORTANT: Whenever changing chains or sprockets, both sides should be changed. Inspect (4) sprockets and replace both chains and sprockets if necessary.

6. Install new chains and adjust, refer to Adjusting Drive Chains, page 23.

ADJUSTING FRONT WHEEL ALIGNMENT

1. Assure Front Axle is level with frame and steering rack timing mark is centered on steering stop pin (Fig. 34).
2. To align front wheels, loosen jam nuts and turn tie rods until centerline distance across front of wheels is equal to or $3/16''$ max less than centerline distance across rear of front wheels (Fig. 34). Wheels should be straight ahead or toe-in should be equal when timing mark is centered.

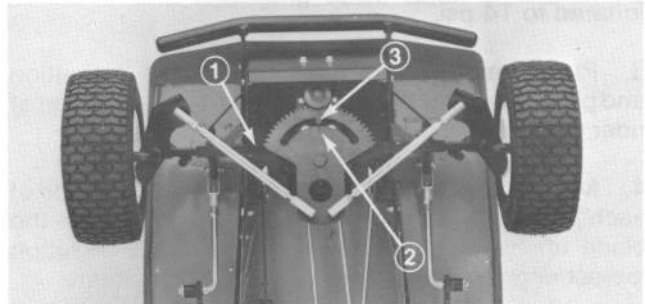


Figure 34

1. Front axle 2. Timing mark 3. Steering stop pin

3. Tighten jam nuts.

Note: No toe-out is allowable.

ADJUSTING BRAKES

Adjust brakes if parking brake does not hold or braking power is not sufficient when brake pedal is depressed.

1. Shut engine off and remove wire from spark plug. Shift transmission into 1st gear.
2. Tighten locknut on each transmission brake lever (Fig. 35) until lever cannot be wiggled from side to side. DO NOT OVERTIGHTEN.

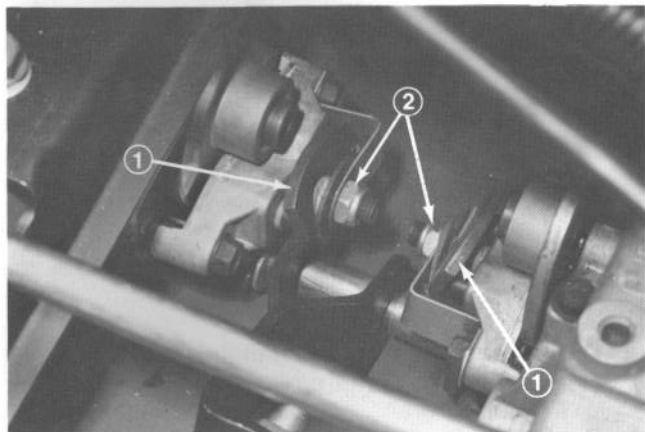


Figure 35

1. Brake lever 2. Locknut

MAINTENANCE

3. Back off each locknut 1/4 turn. Lever should be loose enough to wiggle slightly. If not, repeat procedure.

ADJUSTING ELECTRIC DECK CLUTCH

The electric clutch is adjustable to ensure proper engagement and braking of the cutter blades. If the blades do not stop within a few seconds after the deck engagement switch is **DISENGAGED**, check the adjustment of the electric clutch.

1. To adjust the clutch, tighten or loosen locknuts on flange studs (Fig. 36).

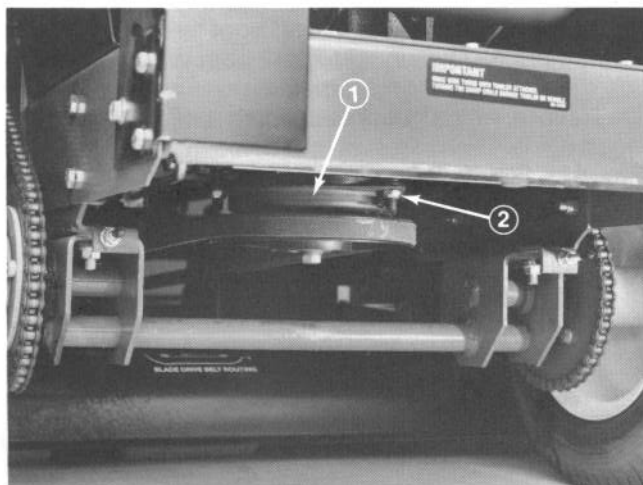


Figure 36

1. Clutch 2. Flange stud

2. Check adjustment by inserting feeler gauge thru slots next to flange studs.

3. The proper disengaged clearance between the clutch plates is .012-.018 inches. It will be necessary to check this clearance at each of the three slots to ensure the plates are parallel to each other.

ADJUSTING TRANSMISSION LINKAGE

If engine will not start when gear shift lever is in neutral position, but will start if the lever is pressed slightly forward or backward, an adjustment to the transmission linkage may be required.

Note: Check to make sure all shift linkage nuts and bolts are securely fastened before proceeding.

1. Move gear shift lever to 5th gear.
2. Remove capscrew securing end of tie rod to left transmission shift lever (Fig. 37).
3. Manually move right and left transmission levers as far left as possible into fifth gear detent.

4. Without disturbing position of levers, reposition tie rod over left transmission lever and check alignment of tie rod end mounting hole and lever mounting hole.

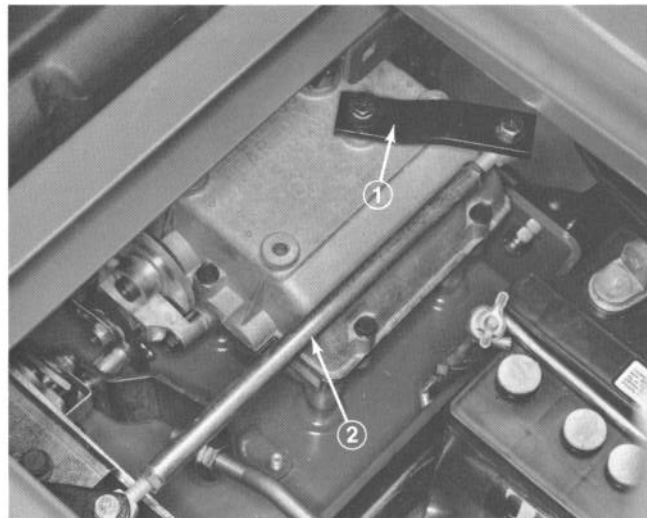


Figure 37

1. Left transmission lever 2. Tie rod

5. If mounting holes do not align, loosen jam nuts on tie rod and adjust rod until holes align.

6. Tighten jam nuts and resecure tie rod to lever with capscrew.

SHIFT LINKAGE ADJUSTMENT

If the gear shift lever is not centered in neutral slot, an adjustment to the shift linkage may be required.

1. Move gear shift lever to NEUTRAL position.
2. Check position of gear shift lever. Lever should be centered in neutral slot when viewed from side of machine (Fig. 38).

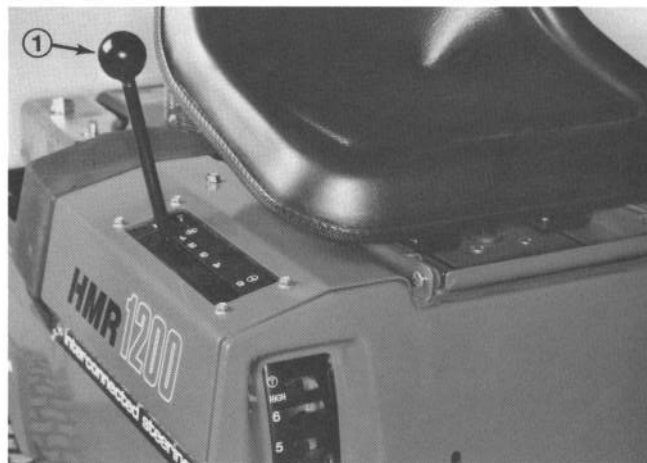


Figure 38

1. Gear shift lever

MAINTENANCE

3. If lever is not centered, loosen jam nuts and rotate tie rod until lever is correctly positioned in neutral slot (Fig. 39). Tighten jam nuts.

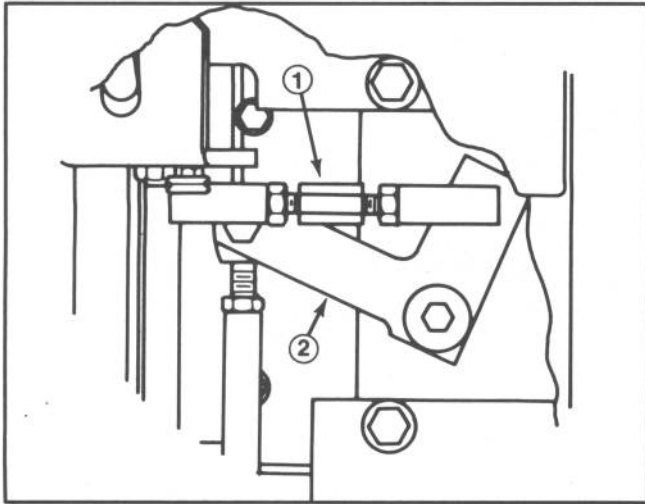


Figure 39

1. Tie rod 2. Transmission lever

ADJUSTING LINKAGE TO STEERING CLUTCHES

1. Assure Front Axle is level with frame and steering rack timing mark is centered on steering stop pin (Fig. 40).
2. Check to make sure ends of front pull rods are positioned at the rear of the slots in the pull rod plate (Fig. 40 inset).

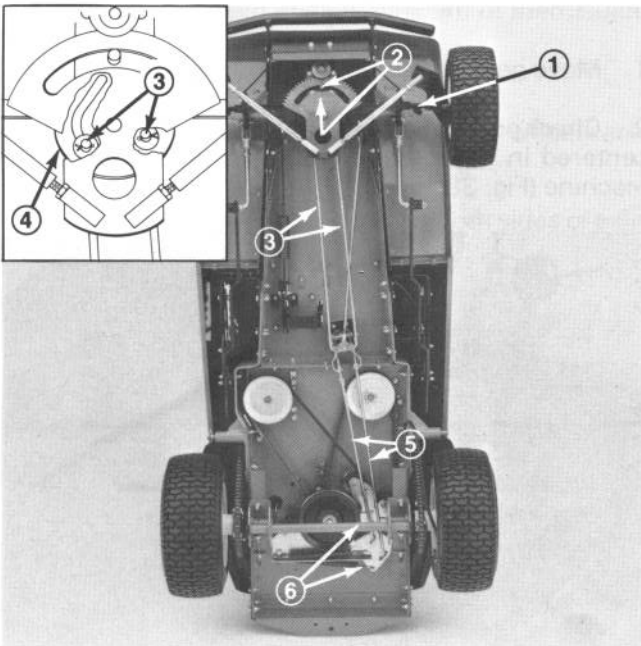


Figure 40

1. Front Axle
2. Timing mark and stop pin
3. Front pull rods
4. Pull rod plate
5. Rear pull rods
6. Traction pivot plates

3. Adjust jam nuts on rear pull rods so the bent ends of the rods are on center to 1/8" behind the center of the slots in the traction pivot plates (Fig. 40 & 41).

IMPORTANT: Make sure that the bent ends of the pull rods remain 90° to the pivot plates or binding will occur.

REPLACING TRACTIONS BELTS

Note: Read and understand the following instructions before beginning. Contact your local authorized TORO Dealer if assistance is required.

1. Remove cutting deck, refer to Removing Cutting Deck, page 20. Block up rear of machine or use wheel ramps for rear wheels. Block front tires and apply parking brake. Disconnect spark plug wire.
2. Have a helper depress clutch pedal while you insert (2) 1/4" capscrews into holes in pivot platform (Fig. 41). Slowly release clutch pedal allowing pivot plates to rest against capscrews, relieving tension from the belts.

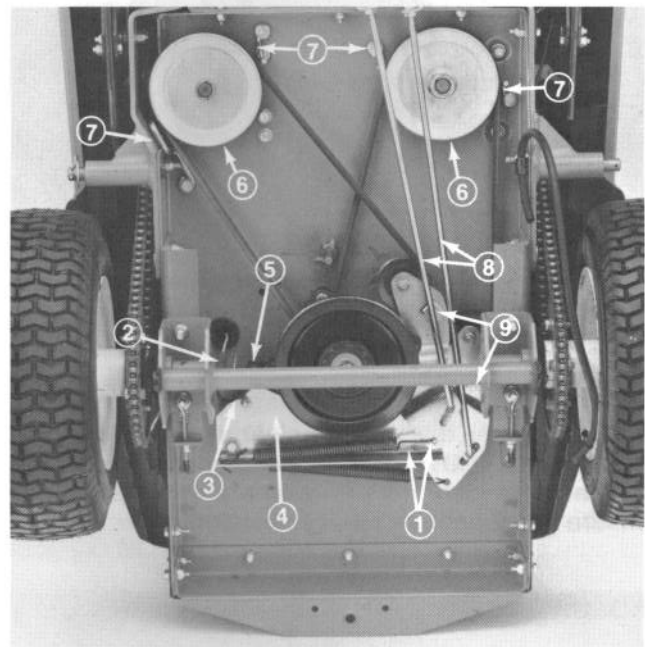


Figure 41

1. Holes in pivot platform
2. Clutch wire connector
3. R-clamp
4. Pivot platform
5. Clutch retainer
6. Driven pulley
7. Belt guides
8. Rear pull rods
9. Belt retainers

3. Unplug clutch wire connector and remove nut and carriage bolt securing R-clamp to pivot platform.

4. Remove (3) capscrews and lockwashers securing clutch retainer and pivot platform to rider. (Electric clutch may have to be rotated to remove clutch retainer) (Fig. 41).

5. Loosen (4) belt guides on (2) driven pulleys. Remove belts from driven pulleys.

MAINTENANCE

6. Remove front jam nut from each rear pull rod so that both pull rods can be disconnected (Fig. 41).

7. Remove assembly of pivot platform, pull rods and traction belts.



CAUTION

Pivot plates are spring loaded.

8. Remove (2) capscrews securing (2) belt retainers to pivot plates (Fig. 41) and remove belt retainers. Replace both traction belts and reinstall belt retainers and capscrews to pivot plates.

9. With (2) capscrews previously removed, reinstall assembly of pivot platform and rear pull rods. Loosely install front jam nuts on pull rods.

10. Reinstall belts around driven pulleys.

11. Reinstall clutch retainer to pivot platform with remaining capscrew.

12. Reinstall R-clamp to pivot platform and connect clutch wire connector.

13. Have a helper depress clutch pedal while you remove the (2) capscrews installed in step #2.

14. Adjust and securely tighten (4) belt guides on (2) driven pulleys.

IMPORTANT: Belt guides must be positioned .08-.14" from back of traction belt or belt life will be greatly reduced.

15. Adjust both rear pull rods, refer to Adjusting Linkage to Steering Clutches, page 26.

16. Install cutting deck, refer to install Cutting Deck, page 21.

WHEEL REMOVAL

Tools Required: Pry Bar, Pliers, Wrench, Floor Jack, Wheel Blocks.

Front Wheels:

1. Assure parking brake is locked and block rear wheels.

2. Place jack under front of frame and raise wheels off floor. **DO NOT DAMAGE STEERING COMPONENTS.**

3. Use a pry bar to lever the hub cap off the axle.

4. Remove the cotter pin and flange washer (Fig. 42) and remove the wheel from the axle.

2. Mount flat washer onto axle, insert cotter pin and open pin ends with pliers (Fig. 1).

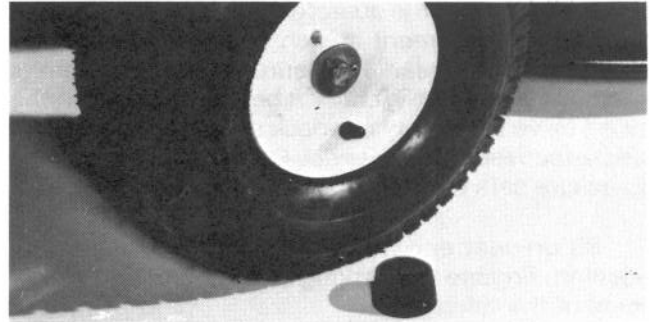


Figure 42

5. Assemble in reverse order.

Rear Wheels:

1. Assure parking brake is locked and block the front wheels.

2. Place jack under rear of frame and raise one wheel at a time off floor.

3. Remove masterlink and chain from wheel hub.

4. Remove the cotter pin and washer and remove the wheel from the axle (Fig. 43).

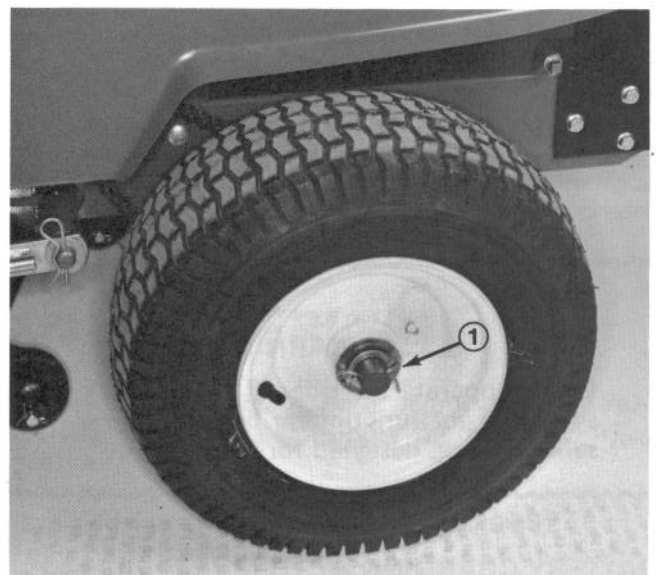


Figure 43

1. Cotter pin and washer

5. Assemble in reverse order.

MAINTENANCE

CHECKING SAFETY INTERLOCK SYSTEM

The purpose of the safety interlock system is to prevent the engine from cranking or starting unless the operator is on the seat, the transmission shifted into neutral and the cutting unit deck engagement switch is in the Disengage position. In addition, the engine will stop if the operator gets off the seat when the deck engagement switch is engaged or transmissions are in gear. To assure interlock system is functioning correctly, check it before each use of the rider. Have the safety interlock switches checked by an Authorized TORO Service Dealer every two years to assure safe operation of the rider.

1. Sit on seat and move shift control into neutral position. Engage the parking brake to prevent movement of the rider.
2. Move deck engagement switch to the ENGAGE position. Rotate the ignition key to START. Engine should not crank. If engine cranks, the interlock system is malfunctioning and it must be repaired by an Authorized TORO Service Dealer. If engine does not crank, proceed to step 3.
3. Move deck engagement switch to DISENGAGE position, push clutch in and place shift control into one of the gear selections. Rotate the ignition key to START. Engine should not crank; but if it does, the interlock system is malfunctioning and it must be repaired by an Authorized TORO Service Dealer. If engine does not crank, proceed to step 4.
4. Move shift control into neutral and deck engagement switch to DISENGAGE position. Engage the parking brake to prevent movement of the rider. Rotate ignition key to START position and start engine. Place the deck engagement switch in ENGAGE position and carefully raise off the seat: the engine should stop running. If engine does not stop running, shut engine off and have interlock system repaired by an Authorized TORO Service Dealer. If engine shuts off when you raised off seat, the interlock system is functioning correctly.



WARNING

Do not operate the rider if the interlock system is malfunctioning because it is a safety device, designed for protection.

BATTERY CHARGING SYSTEM

An AGC 10 Amp Fuse is incorporated in the charging circuit as a protective device against alternator damage caused by possible "short-outs" in the wiring harness. If the battery is fully charged, but fails to

crank the engine, have the electrical system checked by an Authorized TORO Service Dealer.

PREPARING MOWER FOR STORAGE

1. Drain gasoline from fuel tank and fuel line: refer to Fuel Filter Replacement, page 17. Next, start engine and let it run at idle speed until it stops and all gasoline is used. Replace the fuel filter.

Note: All gasoline must be expended to prevent gum-like varnish deposits from forming in the carburetor, fuel line, and fuel tank. Such deposits, if allowed to form, will cause starting problems and poor engine operation.

2. Pull high tension wire off spark plug and clean area around the plug so foreign matter cannot fall into cylinder when plug is removed. Next, remove plug from cylinder head and pour two tablespoons of engine oil into spark plug hole. Rotate engine by hand slowly to distribute oil on inside of cylinder. Then reinstall spark plug and tighten it to 15 ft-lb (20.4 N-m). If torque wrench is not used, tighten plug firmly. **DO NOT INSTALL HIGH TENSION WIRE ON SPARK PLUG.**

3. Drain oil from crankcase and refill with proper viscosity oil: refer to Changing Crankcase Oil, page 17.

4. Clean dirt and chaff from outside of cylinder, cylinder head fins, and blower housing. Also, remove grass clippings, dirt, and grime from external parts of rider, engine, shrouding, and top of mower housing.

5. Clean underside of mower housing: refer to Cleaning Underside of Mower Housing, page 22.

6. Check condition of blades: refer to Servicing Cutter Blades, page 20.

7. Check and tighten all cap screws, bolts, screws, nuts, and mating parts. If any part is damaged, repair or replace it.

8. Lubricate wheels and spindles with grease: refer to Grease Front Axle Spindles and Wheels, page 15.

9. Check air cleaner element: refer to Servicing Air Cleaner, page 16.

10. Touch up all rusted or chipped paint surfaces. Make sure to sand affected area before painting.

Note: TORO Re-Kote "touch-up" paint is available from any Authorized TORO Service Dealer. The spray paint dries in minutes to a glossy, factory-finish.

MAINTENANCE


11. Remove the battery from the machine, recharge it and store it in a cool, dry place. Recharge it every 30 days to prevent it from discharging. Refer to Activating and Charging Battery, page 8.

IMPORTANT: Improper storage or failure to recharge may cause battery failure.

12. Place blocks under the front and rear axles to raise the wheels off floor and prevent tire deterioration.

13. Store the rider in a clean, dry place. Remove key from ignition switch and keep it in a memorable place. Cover the rider to protect it and keep it clean.

WIRING DIAGRAM

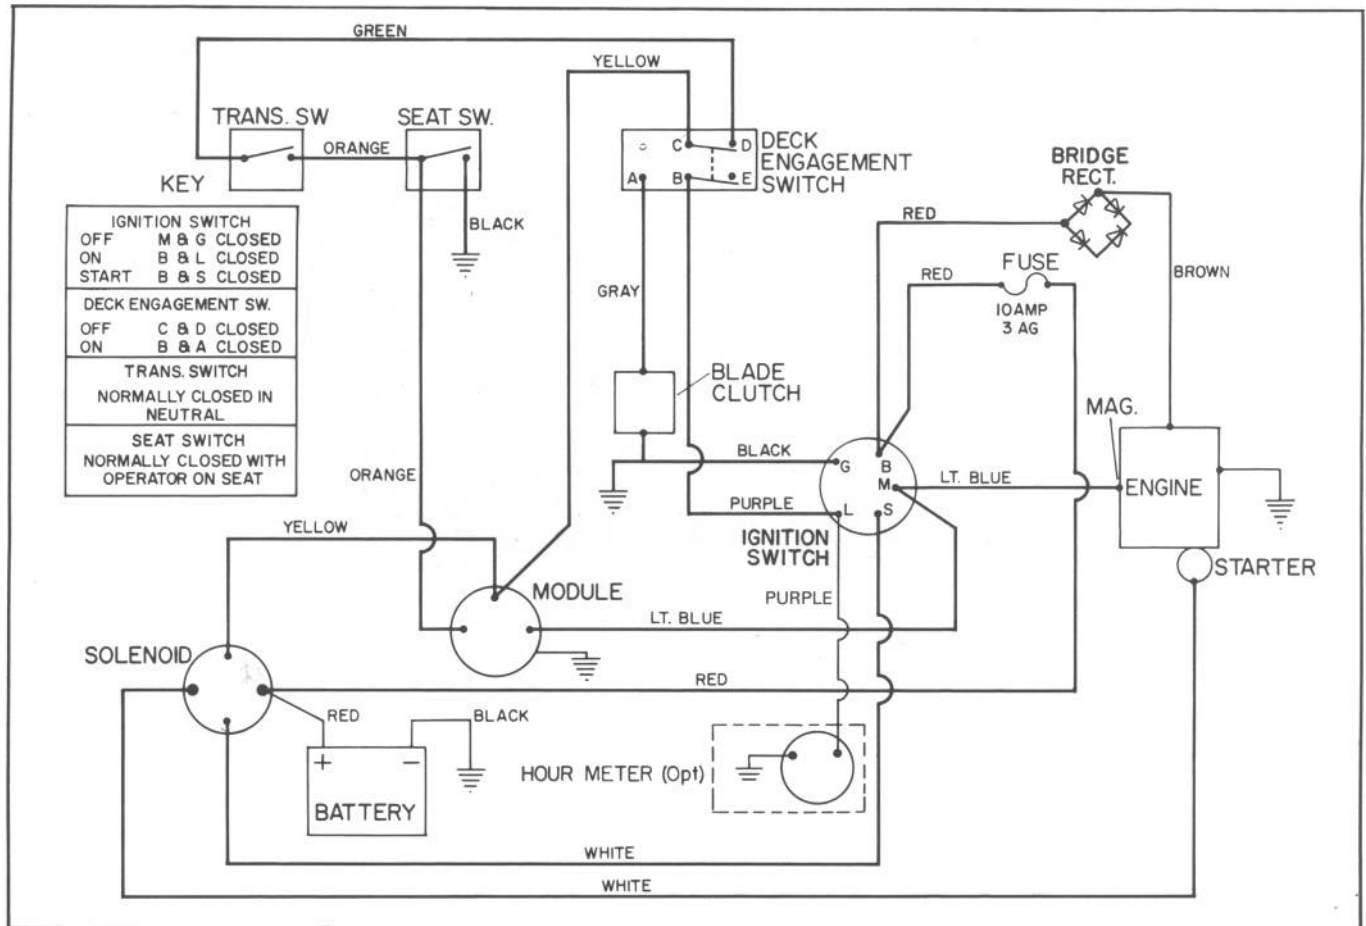

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS


The TORO Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal that is located under the seat, on inside of rider body.

In any correspondence concerning the rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the tractor.
2. Part number, description and quantity of part(s) desired.


Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

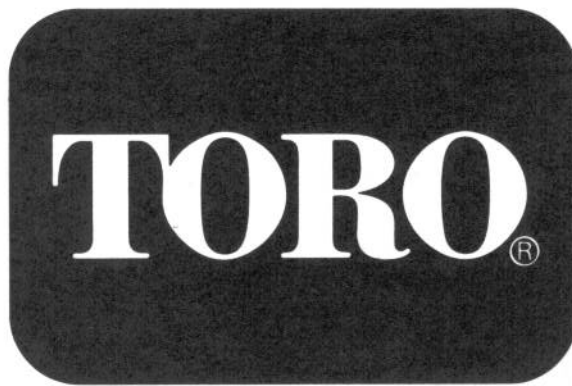

10° SLOPE GAGE

Read all safety decals and safety instructions on pages 3-5.

ALIGN THIS EDGE WITH A VERTICAL SURFACE
(TREE, BUILDING, FENCEPOST, POLE ETC.)

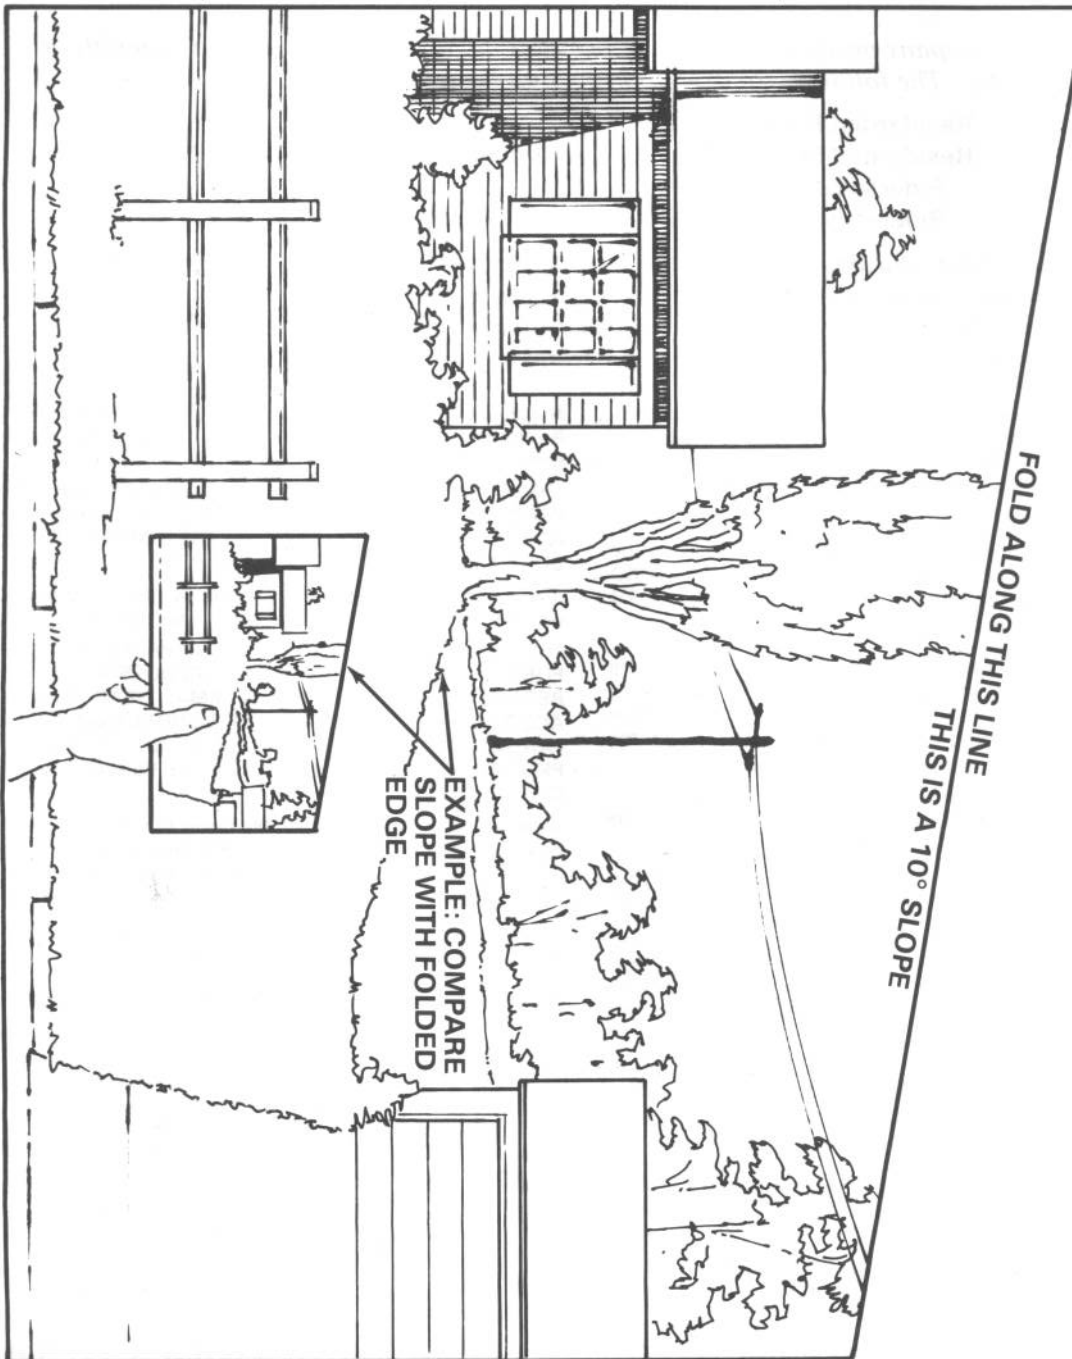

⚠ WARNING

USE EXTREME CAUTION
ON HILLS AND SLOPES



TO MINIMIZE THE RISK OF INJURY

- Never mow steep slopes.
- Never mow side hills over 10°.
- Mow slopes up and down, not across the face.
- When going uphill or downhill do not stop or start suddenly.
- Reduce speed and use extreme caution when making turns on slopes to reduce the risk of tipping or losing control.
- Stay alert for holes in the terrain and other hidden hazards.
- Do not drive close to a ditch, creek, or dropoff to prevent tipping or loss of control.

66-1460

The Toro Total Coverage Guarantee

A Two Year Limited Warranty On All Toro Riding Mowers

The Toro Company promises to repair TORO Riding Mowers if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years

Residential Products Used Commercially:

Riders With 25" Cutting Decks 45 Days

Riders With 32" or Larger Cutting Decks 90 Days

The costs of parts and labor are included, as are transportation costs within a 15 mile radius of the servicing dealer. Just contact any Authorized TORO Service Dealer or TORO Distributor. Should you feel your TORO Rider is defective and wish to rely on The Toro Total Coverage Guarantee, the following procedure is recommended:

1. Contact the dealer where you purchased the rider. If this is not convenient, just contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. The Service Dealer will either instruct you to return the product to him or recommend another Authorized TORO Service Outlet which might be more suitable (not all TORO Dealers are equipped to service Riding Mowers).
3. Pickup and delivery of your TORO Rider by the servicing dealer is covered up to a 15 mile radius from the dealer's place of business. Mileage charges beyond a 15 mile radius are not covered by this warranty and are the responsibility of the owner.

If you wish to bring the rider in yourself, first obtain prior approval from your dealer and the dealer will provide reasonable monetary compensation as specified by Toro.

If repairs to your rider are not covered by this warranty, transportation charges connected with repairs will be charged at the dealer's prevailing rates.
4. Please make the original sales slip, copy of the TORO Registration Card, or other evidence of purchase date available to the dealer when the unit is brought to the dealer's place of business.

The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, MN 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY FOR THIS PRODUCT. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not apply to you.

THIS WARRANTY APPLIES ONLY TO PARTS OR COMPONENTS WHICH ARE DEFECTIVE AND DOES NOT COVER REPAIRS NECESSARY DUE TO NORMAL WEAR, MISUSE, ACCIDENTS, OR LACK OF PROPER MAINTENANCE. REGULAR, ROUTINE MAINTENANCE OF THE UNIT TO KEEP IT IN PROPER OPERATING CONDITION IS THE RESPONSIBILITY OF THE OWNER.

All warranty repairs reimbursable under this warranty must be performed by an Authorized TORO Service Dealer using TORO approved replacement parts and maintenance procedures.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are

dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.