



MODEL NO. 56125 —
7000001 & UP

OPERATOR'S MANUAL

7 hp (5.2 KW) REAR ENGINE RIDER



The Rear Engine Rider meets or exceeds the American National Standards Institute's safety standards for riding mowers; thus TORO proudly displays the OPEI safety seal.

To assure maximum safety, optimum performance, and to gain knowledge of the mower, it is essential that you or any other operator of the mower read and understand the contents of this manual before the engine is started. Pay particular attention to the instructions highlighted by the triangular safety alert symbol. Failure to comply with the safety instructions may result in personal injury.



FOREWORD

The Rear Engine Rider rotary mower has advanced concepts in engineering, design, and safety; and if maintained properly, the product will be reliable.

Since the rider is a high-quality product, Toro is concerned about the future use of the mower and the safety of the user. Therefore, read this manual to familiarize yourself with the safety instructions and the product before operating the rider or mower. The six major sections of the manual are:

- | | |
|--------------------------------|---------------------------|
| 1. Safety Instructions | 4. Operating Instructions |
| 2. Setting Up Instructions | 5. Maintenance |
| 3. Preparation Before Starting | 6. Trouble Shooting |

Note that safety, mechanical, and some general information in the manual is emphasized. The words CAUTION, WARNING, DANGER, IMPORTANT, and NOTE are used to classify the information. CAUTION, WARNING and DANGER identify safety related information; IMPORTANT identifies special mechanical information; and NOTE identifies general information worthy of special attention.

When mower is used or operated on any California forest, brush or grass covered land, a working order spark arrester must be attached to muffler. If not, the operator is violating state law, Section 4442 Public Resources Code.

If help — concerning set-up, operation, maintenance, or safety — is ever needed, contact the local Authorized TORO Service Dealer or Distributor. Refer to the "Yellow Pages" for assistance. In addition to skilled service technicians, the dealer and distributor have other TORO Products, as well as factory approved accessories and replacement parts. Keep your Toro all TORO. Buy genuine TORO replacement parts and accessories.

TABLE OF CONTENTS

| | Page | | Page |
|--|-------|---|------------|
| Safety Instructions | 3-4 | Maintenance | 15-29 |
| Safety Decals | 5 | Grease Front Axle Spindles and Wheels | 15 |
| Specifications | 6 | Lubricate Pivot Points | 16 |
| Loose Parts | 7 | Servicing Air Cleaner | 16 |
| Setting Up Instructions | 7-8 | Changing Crankcase Oil | 17 |
| Install Seat | 7 | Draining Gasoline From Fuel Tank | 18 |
| Install Steering Wheel | 7 | Replacing Spark Plug | 18 |
| Activating and Charging Battery | 8 | Adjusting Throttle/Choke Control | 19 |
| Before Operating | 9 | Adjusting Carburetor | 20 |
| Fill Crankcase With Oil | 9 | Servicing Cutter Blade | 20 |
| Fill Fuel Tank With Gasoline | 9 | Cleaning Underside of Mower Housing | 21 |
| Controls | 10 | Using Wash-Out Port | 22 |
| Starting and Stopping Instructions | 11 | Removing/Installing Mower Housing | 22 |
| Operating Instructions | 12-14 | Replacing Blade Drive Belt | 24 |
| Break-In | 12 | Replacing Traction Drive Belt | 25 |
| Using Parking Brake | 12 | Checking/Adjusting Drive Chain | 25 |
| Adjusting Anti-Scalp Wheels | 12 | Adjusting Brake | 26 |
| Adjusting Height-of-Cut | 12 | Checking Electrical Connections | 27 |
| Grass Deflector | 12 | Checking Safety Interlock System | 27 |
| Operating Procedure | 13 | Preparing Mower For Storage | 28 |
| Grass Cutting Tips | 13 | Wiring Diagram | 29 |
| Optional Bagging Operation | 13 | Trouble Shooting | 30-31 |
| Bagging Tips | 14 | Identification and Ordering | Back Cover |
| | | The Toro Promise | Back Cover |

SAFETY INSTRUCTIONS

The Rear Engine Rider was tested and verified by an independent laboratory for compliance with the B71.1 — 1984 specifications of the American National Standards Institute.

BEFORE OPERATING

1. Read and understand the contents of this manual or instructions furnished with attachments, before starting and operating the rider, mower or attachment. Become familiar with all controls and know how to stop the engine quickly. **NEVER ALLOW CHILDREN TO OPERATE THE MACHINE.**

2. Keep everyone, especially children and pets, away from the area of operation. Remove sticks, stones, wire, and any other debris or objects which might be picked up and thrown by the mower.

3. Keep all shields and safety devices in place. If a shield, safety device or decal is defective or damaged, repair or replace it before operation is commenced. Also tighten any loose nuts, bolts and screws.

4. Wear long pants and substantial shoes. Do not operate the rider while bare foot, wearing sandals, tennis shoes, sneakers, or shorts.

5. Fill fuel tank with gasoline before starting the engine. Avoid spilling any gasoline. Since gasoline is highly flammable, handle it carefully.

A. Use an approved gasoline container.

B. Do not fill fuel tank indoors, when the engine is running, or until engine cools for several minutes after running.

C. Open doors if engine will be run in the garage because exhaust fumes are dangerous and could possibly be deadly. Do not run engine indoors.

D. Wipe up any gasoline that spilled, and install gasoline container cap and rider fuel tank cap before starting the engine.

6. Before attempting to start the engine, shift into neutral, move blade control rearward into **DISENGAGE detent** position and move height-of-cut control to highest cutting level. Engine will not start when transmission is in gear or blade control is in the **ENGAGE** position.

7. Assure interlock system is operating correctly before each use of the rider. Have all safety related components checked and safety interlock switches replaced by an Authorized TORO Service Dealer every two years to assure safe operation of the rider.

WHILE OPERATING

8. Never carry passengers on the rider.

9. Keep people and pets a safe distance away from the rider and area of operation.

10. Start engine when parking brake is set, blade is disengaged and transmission is in neutral.

11. Using a riding mower demands attention; therefore, mow only in daylight or when there is good artificial light. Stay alert for holes in the terrain and other hidden hazards. Do not drive close to a ditch, creek, or dropoff to prevent tipping or loss of control.

12. Cut steep grass slopes up and down; never across the face. When going uphill or downhill do not stop or start suddenly. Reduce speed on slopes and when making sharp turns to prevent tipping or loss of control. Extreme caution must be used when changing direction on slopes. If a steep hill must be ascended, back the rider up the hill and drive forward when descending.

13. Watch out for traffic when crossing or near roads. Always yield the right-of-way.

14. Keep face, hands, feet, or any other part of the body and clothing away from concealed, moving, or rotating parts such as the cutter blade, discharge area, wheels, chain, belts, and engine. Always sit on the seat while operating the rider and mower.

15. During operation the grass deflector or complete rear grass catcher assembly must be installed on mower housing and rider. Move blade control into **DISENGAGE detent**, shift into neutral, set parking brake, and shut engine off before removing the rear grass catcher hopper or unclogging discharge chute or tube. Use a stick to remove any obstruction.

16. When driving from one area to another, crossing a gravel driveway, road, or side walk, move blade control into **DISENGAGE detent** and raise mower housing to its highest level. This will prevent loose sand, rocks, and other debris from being thrown by the whirling blade.

17. Before backing up, move blade control into **DISENGAGE detent**. Do not mow in reverse unless absolutely necessary and then only after careful observation of the entire area behind the mower.

18. Do not touch engine while it is running or soon after it is stopped because the engine may be hot enough to cause a burn.

SAFETY INSTRUCTIONS

19. Use only the drawbar hitch point at rear of chassis to pull the lightweight cart that is sold as an accessory. Limit loads to those that can be controlled safely. Be very careful when backing and turning: never turn sharply.

20. Before leaving the operator's position — on the seat — or leaving rider unattended, shift transmission into neutral, set parking brake, move blade control into DISENGAGE detent, rotate ignition key to OFF, and remove key from switch.

21. If the blade strikes a solid object or mower vibrates abnormally, shift transmission into neutral, set parking brake, move blade control into DISENGAGE detent, rotate ignition key to OFF, and remove key from switch. Disconnect high tension wire from spark plug and keep wire away from the plug to prevent possibility of accidental starting. Check rider and mower for possible damage, bent blade, defective belt or chain, an obstruction, and a loose blade or other parts. Make all repairs before restarting the engine and operating the mower.

MAINTAINING MOWER

22. Before storing the rider, or performing any maintenance service and adjustment, shift transmission into neutral, set parking brake, move blade control into DISENGAGE detent, rotate ignition key to OFF and remove key from switch. Keep the key in a memorable place so it is not lost accidentally. Also disconnect high tension wire from spark plug to prevent possibility of accidental starting.

23. Perform only those maintenance instructions described in this manual. If major repairs are ever needed or assistance is desired, contact an Authorized TORO Service Dealer.

24. If rider and mower must be tipped to perform maintenance or an adjustment, drain gasoline from fuel tank, oil from crankcase, and remove the battery.

25. Keep rider and mower housing in safe operating condition by having nuts, bolts, and screws tight.

Check the blade mounting nut frequently to assure the nut is tight (45 - 60 ft-lb).

26. To reduce potential fire hazard, make sure engine is free of excessive grease, grass, leaves and dirt.

27. Under normal usage the optional grass catcher is subject to deterioration and wear. Frequently check all components of grass catcher including bag material, discharge chute, and duct for wear, damage, or deterioration and replace if necessary with genuine TORO parts.

28. Allow engine to cool before storing rider in any enclosure such as a garage or storage shed, and make sure the rider fuel tank is empty if rider is to be stored in excess of 30 days. Do not store rider near any open flame or where gasoline fumes may be ignited by a spark. Always store gasoline in a safety-approved, red metal container.

29. Do not overspeed the engine by changing governor settings. Recommended engine speed is 3400 rpm. To assure safety and accuracy, have an Authorized TORO Service Dealer check maximum engine speed (3400 rpm) with a tachometer.

30. At the time of manufacture, the rider conformed to safety standards in effect for riding mowers. Therefore, to assure optimum performance and safety, purchase genuine TORO replacement parts and accessories to keep the Toro all TORO. NEVER USE "WILL-FIT" REPLACEMENT PARTS AND ACCESSORIES. The TORO logo assures genuine TORO replacement parts and accessories.





SAFETY DECALS

Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged.

ON CUTTER DECK
(Part No. 26-4820)

IMPORTANT: UNPLUG WIRES FROM CUTTER HOUSING SWITCH BEFORE REMOVING CUTTER HOUSING.

ON FRONT BODY
(Part No. 54-9270)

IMPORTANT
TO RELEASE PARKING BRAKE DEPRESS BRAKE PEDAL BEFORE ENGAGING WHEEL DRIVE.



P **PARKING BRAKE**
DEPRESS FOOT PEDAL AND PUSH LEFT TO SET.



BLADE CONTROL

LOW



HEIGHT OF CUT



HIGH

TRANSPORT




THROTTLE

IMPORTANT
ALL OPERATING CONTROLS MUST BE IN NEUTRAL POSITION BEFORE STARTING ENGINE.



ON REAR BODY
(Part No. 44-7260)

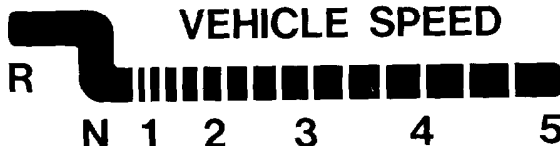

ON REAR BODY
(Part No. 54-9210)

CAUTION

ALL CONTROLS MUST BE IN NEUTRAL BEFORE STARTING ENGINE. REMOVE BATTERY, GAS, AND OIL FROM ENGINE BEFORE STANDING MOWER UP. ADD GAS AND OIL BEFORE RESTARTING.

ON FRONT AXLE
(Part No. 26-4830)

IMPORTANT

REMOVE **ALL** GAS AND OIL FROM ENGINE BEFORE STANDING MOWER UP. FAILURE TO DO SO WILL RESULT IN GAS LEAKING INTO CRANKCASE AND ENGINE FAILURE.

ON DEFLECTOR AND CUTTER DECK
(Part No. 54-9220)



ON BACK OF TOWER
(Part NO. 55-7070)

CAUTION

TO AVOID INJURY

- READ OPERATOR'S MANUAL.
- KNOW LOCATION AND FUNCTION OF ALL CONTROLS.
- KEEP SAFETY DEVICES (GUARDS, SHIELDS, AND SWITCHES) IN PLACE AND WORKING.
- REMOVE OBJECTS THAT COULD BE THROWN BY BLADE.
- DO NOT MOW WHEN CHILDREN AND OTHERS ARE AROUND.
- NEVER CARRY CHILDREN.
- ALWAYS LOOK BEHIND MACHINE BEFORE BACKING.
- DO NOT MOW WHERE MACHINE COULD TIP OR SLIP.
- IF MACHINE STOPS GOING UPHILL, STOP BLADE AND BACK SLOWLY DOWN.
- BE SURE BLADE AND ENGINE ARE STOPPED BEFORE PLACING HANDS OR FEET NEAR BLADE.
- REMOVE KEY WHEN LEAVING MACHINE.

FREE REPLACEMENT MANUAL AVAILABLE BY SENDING COMPLETE MODEL NUMBER TO: THE TORO COMPANY, 8111 LYNDAL AVE., MINNEAPOLIS, MINNESOTA 55420.

SPECIFICATIONS

Tecumseh Engine: Four cycle engine has output of 7 hp (5.2 Kw) @3600 rpm and 8.0 ft-lb (10.8 N-m) of torque @2800 rpm. Displacement is 15.0 cubic inches (245.8 cc). Engine equipped w/electric starter and auxiliary rope starter. Crank-case capacity is approximately 27 oz (0.80 l) of oil, and capacity of fuel tank is 2 quarts (1.89 l). Correct spark plug is a Champion RJ-17LM and recommended air gap is 0.030 of an inch (0.76 mm).

Mower Housing: Semi-floating, 13 gauge (2.26 mm) stamped steel housing has spiral grass chamber and right side discharge. Wing nut and lock nuts secure deflector to mower housing. Four clevis pins and hair pin cotters secure housing to main frame. Width of cut is 25 inches (0.635 m). Cast iron spindle housing with shaft is supported by two, double seal ball bearings. Blade pulley is driven by a belt from the engine pulley.

Cutter Blade: Single blade is 25 inches (0.635 m) long, made of 7 gauge (2.72 mm) carbon steel, and heat treated for hardness.

Blade Tip Speed: Tip speed of blade is 17,400 ft/min (88 392 m/s) @3400 engine rpm.

Height-of-Cut Range: Height-of-cut is adjustable to one of five approximate settings: 1-1/2 inches to 3-3/8 inches (38 to 86 mm).

Transmission: Transmission has five speeds forward and one in reverse. Heat treated, sintered metal gears are enclosed in a permanently lubricated (E P Lithium grease), die cast aluminum housing.

Differential: Sintered powdered metal bevel gears are enclosed in a permanently lubricated (Shell Epro 71030), steel housing.

Traction Drive: Drive system has a 4L section v-belt from engine pulley to transmission input pulley. A no. 41 chain joins transmission output sprocket with differential sprocket.

Ground Speed @3400 Engine rpm:

| | |
|----------|------------------------|
| 1st gear | — 1.52 mph (2.4 Km/hr) |
| 2nd gear | — 2.37 mph (3.9 Km/hr) |
| 3rd gear | — 3.54 mph (5.7 Km/hr) |
| 4th gear | — 4.43 mph (7.1 Km/hr) |
| 5th gear | — 5.32 mph (8.6 Km/hr) |
| Rev. | — 2.53 mph (4.1 Km/hr) |

Wheels and Tires: The front 11 x 4.00-5 and the rear 13 x 5.00-6 tubeless, pneumatic turf tires are installed on demountable stamped steel wheels. Recommended pressure for front and rear tires is 10-14 psi (68.9 - 96.5 Kpa).

Steering: 13 inch diameter steering wheel.

Throttle Control: Control is mounted at right side of center channel. Hand-operated throttle control connects to and operates carburetor-mounted throttle and choke. Control has three positions: IDLE, FAST and CHOKE.

Transmission Gear Shift: Single lever, in-line shifting with Z pattern.

Clutch Pedal: Foot-operated pedal is located at left front side of rider. Depressing clutch pedal moves idler pulley away from traction drive belt, which disengages the traction drive.

Brake Pedal: Foot-operated pedal is located at right front side of rider. Depressing brake pedal engages a caliper with 2 1/2 inch (64 mm) dia disc at side of transmission.

Parking Brake Control: Control is located at right front of center channel. Engage parking brake by moving control to the left while brake pedal is depressed; then release pedal against end of lever. To disengage parking brake, push brake pedal down so parking brake lever moves back to its normal, released position.

Blade Control: Control is mounted in middle of center channel. Control has two positions: ENGAGE and DISENGAGE. Interlock switch prevents engine from starting when control is in the ENGAGE position. When control is in DISENGAGE position, the blade brake is applied and blade belt idler pulley is disengaged. By contrast, idler pulley is engaged with blade belt when control is in the ENGAGE position: blade brake is released.

Height-of-Cut Control: Control is mounted at left side of center channel.

General Dimensions (approx):

| | |
|----------------|--|
| Wheel Base | — 40 in. (1.016 m) |
| Wheel Tread | — 27 in. (0.686 m) (front, outside to outside) |
| | — 29 in. (0.737 m) (rear, outside to outside) |
| Overall Length | — 51 in. (1.295 m) |
| Overall Width | — 34 in. (0.864 m) (w/mower housing) |
| Overall Height | — 37 in. (0.940 m) |
| Dry Weight | — 250 lb (113.4 kg)(w/mower housing) |

Specifications and design subject to change without notice.

LOOSE PARTS

Note: Carefully remove rider and other parts from carton. Use chart below to assure all parts have been shipped.

| DESCRIPTION | QTY. | USE |
|-------------------|-------|-------------------------------------|
| Seat | 1 | Install Seat, page 7. |
| Spacer | 4 | |
| Wire Clamp | 1 | |
| Washer | 4 | |
| Capscrew | 4 | |
| Steering Wheel | 1 | Install Steering Wheel, page 7. |
| Roll Pin | 1 | |
| Key | 1 set | Use in Ignition Switch. |
| Operator's Manual | 1 | Read manual before operating Rider. |

SETTING UP INSTRUCTIONS

INSTALL SEAT

Tools Required: 1/2-Inch Wrench.

1. Position seat onto rear body, inserting seat switch cable through slot (Fig. 1A).

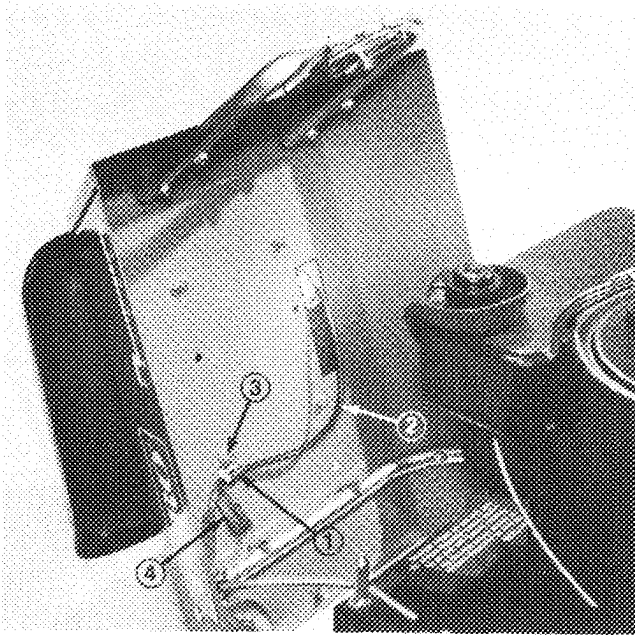


Figure 1A

1. Wire clamp
2. Seat switch wire
3. Capscrew, washer & spacer (spacer between rear body & seat)
4. Seat switch & wire harness connector

Note: Seat may be positioned for operator comfort by using front or rear mounting holes in rear body.

2. Slide wire clamp over seat switch wire.
3. Using right rear seat mounting hole in rear body, loosely secure wire clamp and seat to rear

body with a capscrew, washer, and spacer. Spacer is positioned between seat and rear body (Fig. 1B).

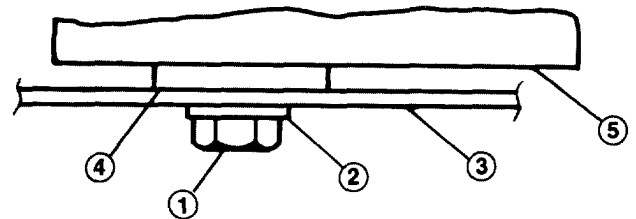


Figure 1B

1. Capscrew
2. Washer
3. Rear body
4. Spacer
5. Seat

4. Mount seat to rear body with remaining cap-screws, washers, and spacers. Tighten all four cap-screws.

5. Insert seat switch connector into wire harness connector (Fig. 1A).

INSTALL STEERING WHEEL

Tools Required: Small hammer and drift punch.

1. Slip steering wheel over shaft and line the steering wheel mount hole with the shaft mounting hole.

Note: Steering wheel insert (Fig. 2) should be readable from operator's position with wheels turned straight ahead.

2. Insert a drift punch partially through the holes to maintain alignment and insert the roll pin in from the opposite side.

3. Drive the roll pin in until it is flush with the outside of the wheel (Fig. 2).

SETTING UP INSTRUCTIONS

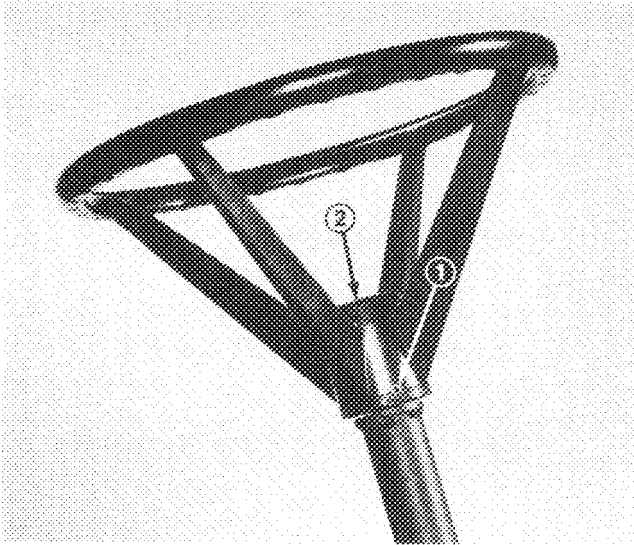


Figure 2

1. Roll pin
2. Steering wheel insert

ACTIVATING AND CHARGING BATTERY

Since the battery for the rider is not filled with electrolyte or activated, the battery, if you have not already done so, must be removed from the machine so it can be filled with electrolyte and charged. Bulk electrolyte with 1.260 specific gravity must be purchased from a local battery supply outlet. Remove the battery and activate it as follows:



CAUTION

Wear safety goggles and rubber gloves when working with electrolyte. Charge the battery in a well ventilated place so gases produced while charging can dissipate. Since the gases are explosive, keep open flame and electrical spark away from the battery; do not smoke. Nausea may result if the gases are inhaled. Unplug charger from electrical outlet before connecting to or disconnecting charger leads from battery posts.

1. Unlatch and raise rear body.
2. Remove wing nut securing battery hold downs to rider chassis. (Fig. 3).
3. Remove battery from chassis and set it aside.
4. Remove filler caps from battery and slowly fill each cell until electrolyte is just above the plates. To obtain best results, let battery set for 20 minutes. Add electrolyte to the maximum capacity.

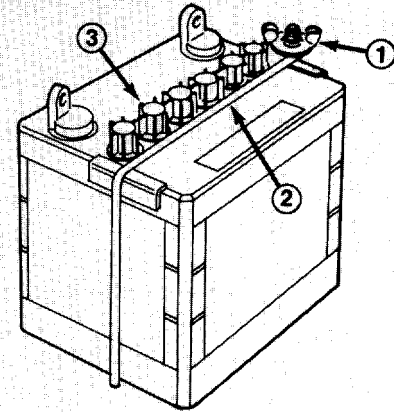


Figure 3

- 1 Wing Nut
- 2 Battery Hold Down
- 3 Filler Cap

5. Leave filler caps off and connect a 3-4 amp battery charger to battery posts. Charge battery at a rate of 4 amperes or less for 4 hours (12 volt).

6. When battery is charged, disconnect charger from electrical outlet and battery posts.

7. Slowly add electrolyte to each cell until level is up to fill ring. Install filler caps.

IMPORTANT: Do not overfill battery. Electrolyte will overflow onto other parts and severe corrosion and deterioration will result.

8. Install the battery with the terminal posts toward the center of the machine and vent tube thru hole in frame (Fig. 4).

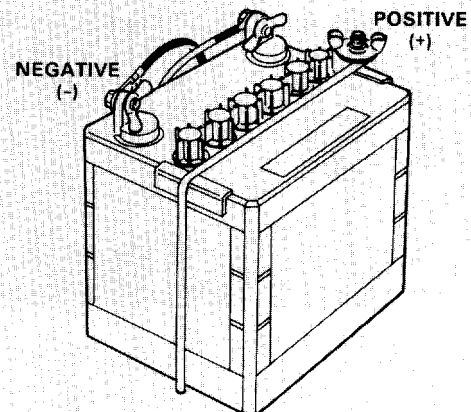


Figure 4

9. Reinstall battery hold downs.
10. Install the positive cable to the positive (+) terminal and the negative cable (black) to the negative (-) terminal of the battery and secure with capscrews and wing nuts. (Fig. 4).

BEFORE OPERATING

FILL CRANKCASE WITH OIL

Tools Required: Pliers, Clean Rag, and Funnel

The rider is shipped from the factory without oil in the crankcase. Therefore, before trying to start engine, oil must be added to the crankcase.

Note: Check level of oil every 5 operating hours or each time rider is used. Initially, change oil after the first 5 hours of operation; thereafter, under normal conditions, change oil after every 25 hours of operation. However, change more frequently when engine is operated in dusty or dirty conditions.

1. Move rider to a level surface to assure accurate oil level reading.
2. Clean the area around oil dipstick plug so foreign matter cannot enter filler hole when plug is removed.
3. Remove dipstick plug from crankcase (Fig. 5).
4. Slowly, pour approximately 27 ounces (.80 l) of oil into crankcase (Fig. 5). The Tecumseh engine uses any high quality detergent oil having the American Petroleum Institute — API — "service classification" MS, SC, SD or SF. Oil viscosity — weight — must be selected according to anticipated ambient temperature.
 - A. Above +30° F — Use SAE 30.
 - B. Below +30° F — Use SAE 5W-30.

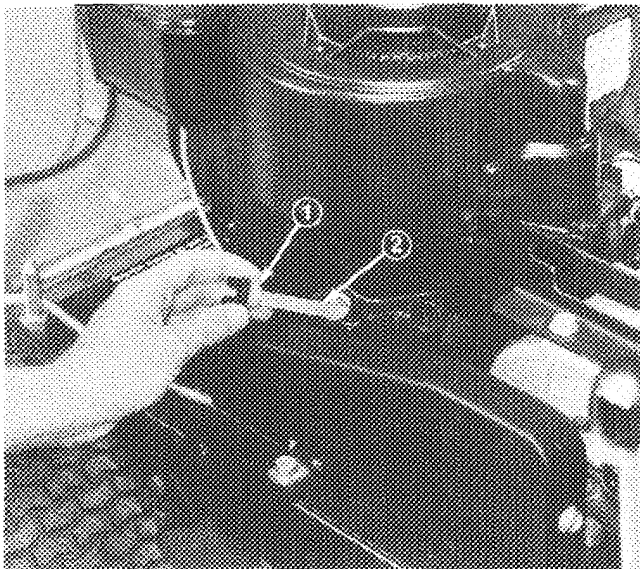


Figure 5

1. Dipstick plug 2. Full mark

5. Rock the rider gently to release any air that may be trapped in crankcase. Screw dipstick plug fully into opening in crankcase; then remove the plug and make sure that oil level is up to FULL mark on dipstick (Fig. 5). If level is low, add only enough oil to bring level up to FULL mark.

6. Install dipstick plug into opening in crankcase. Wipe up any oil that may have spilled.

FILL FUEL TANK WITH GASOLINE

Tools Required: Clean Rag and Funnel

THE TORO COMPANY STRONGLY RECOMMENDS THE USE OF CLEAN, FRESH **UNLEADED** REGULAR GASOLINE IN TORO GASOLINE POWERED PRODUCTS. UNLEADED GASOLINE BURNS CLEANER, EXTENDS ENGINE LIFE, AND PROMOTES GOOD STARTING BY REDUCING THE BUILD-UP OF COMBUSTION CHAMBER DEPOSITS. LEADED GASOLINE CAN BE USED IF UNLEADED IS NOT AVAILABLE.

NOTE: NEVER USE METHANOL, GASOLINE CONTAINING METHANOL, GASOHOL CONTAINING MORE THAN 10% ETHANOL, GASOLINE ADDITIVES, PREMIUM GASOLINE OR WHITE GAS BECAUSE ENGINE FUEL SYSTEM DAMAGE COULD RESULT.



DANGER

Because gasoline is flammable, caution must be used when storing or handling it. Do not fill fuel tank while engine is running, hot or when machine is in an enclosed area. Vapors may build up and be ignited by a spark or flame source many feet away. **DO NOT SMOKE** while filling the fuel tank to prevent the possibility of an explosion. Always fill fuel tank outside and wipe up any spilled gasoline before starting engine. Use a funnel or spout to prevent spilling gasoline, and fill tank to about 1/2 inch (13 mm) below the filler neck. Store gasoline in a clean safety-approved container and keep the cap in place on the container. Keep gasoline in a cool, well-ventilated place; never in an enclosed area such as a hot storage shed. To assure volatility, do not buy more than a 30 day supply of gasoline. Gasoline is a fuel for internal combustion engines; therefore, do not use it for any other purpose. Since many children like the smell of gas, keep it out of their reach because the fumes are explosive and dangerous to inhale.

1. Clean area around fuel tank cap so foreign matter cannot enter tank when cap is removed.
2. Remove cap from fuel tank and fill tank with unleaded regular gasoline. Then install fuel tank cap.
3. Wipe up any gasoline that may have spilled.

CONTROLS

Gear Shift (Fig. 6) — Transmission has five forward speeds, neutral and reverse. Single lever in-line shifting with "Z" pattern located on right side of operator. An interlock switch, which prevents engine from being started when transmission is in gear, is mounted on top of transmission.

Clutch Pedal (Fig. 6) — Foot-operated clutch pedal is used in conjunction with gear shift. Depress clutch pedal fully when shifting gears, which moves idler pulley away from traction drive belt and disengages power to wheels. Depress clutch pedal whenever brake is used.

Brake Pedal (Fig. 6) — Foot-operated brake pedal must be depressed to slow down or stop the rider. When pedal is depressed, a caliper engages the brake disc at side of transmission. Remember to depress clutch pedal when using brake.

Parking Brake (Fig. 6) — Parking brake must be used in conjunction with brake pedal. When pedal is depressed and end of parking brake lever holds pedal in depressed position, a caliper engages the brake disc at side of transmission.

Blade Control (Fig. 6) — Blade control engages and disengages the cutter blade. An interlock switch, which is mounted on mower housing, prevents

engine from starting when control is in the ENGAGE position. Engine will start when control is in DISENGAGE position only.

Throttle Control (Fig. 6) — Throttle control connects to and operates carburetor-mounted throttle and choke. Control has three positions: IDLE, FAST and CHOKE.

Height-of-Cut (Fig. 6) — Height-of-cut control varies the cutting height from 1 1/2 to 3 3/8 inches (38 to 86 mm) in five increments.

Rear Body Latch (Fig. 6) — To open rear body, lift up on rear body latch: then raise rear body.

Auxiliary Recoil Starter (Fig. 7) — Recoil starter must be used in conjunction with ignition switch. After turning ignition key to START position, pull recoil starter handle to start engine.

IMPORTANT: Do not pull recoil rope to its limit or let go of starter handle when rope is pulled out because rope may break or recoil assembly may be damaged.

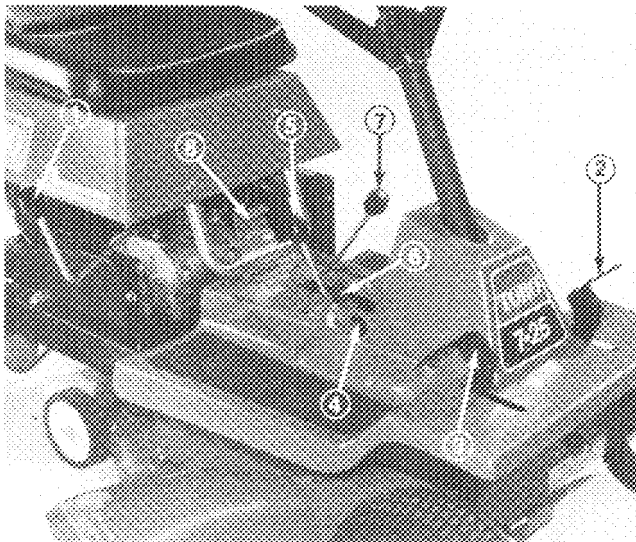


Figure 6

- | | | |
|-----------------|---------------------|--------------------------|
| 1. Gear shift | 4. Parking brake | 7. Height of cut control |
| 2. Clutch pedal | 5. Blade control | 8. Rear body latch |
| 3. Brake pedal | 6. Throttle control | |

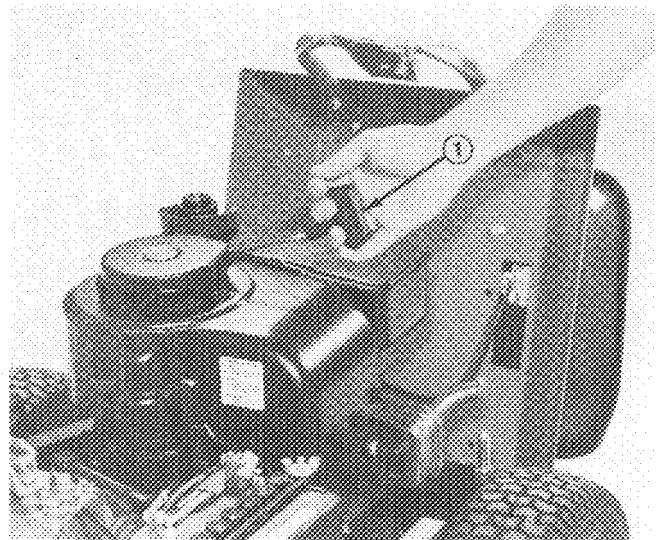


Figure 7

1. Recoil starter

STARTING AND STOPPING INSTRUCTIONS

Note: Make sure high tension wire is installed on spark plug, battery is activated, and cables are installed on battery posts.

1. Engage the parking brake (Fig. 8): refer to Using Parking Brake, page 12.

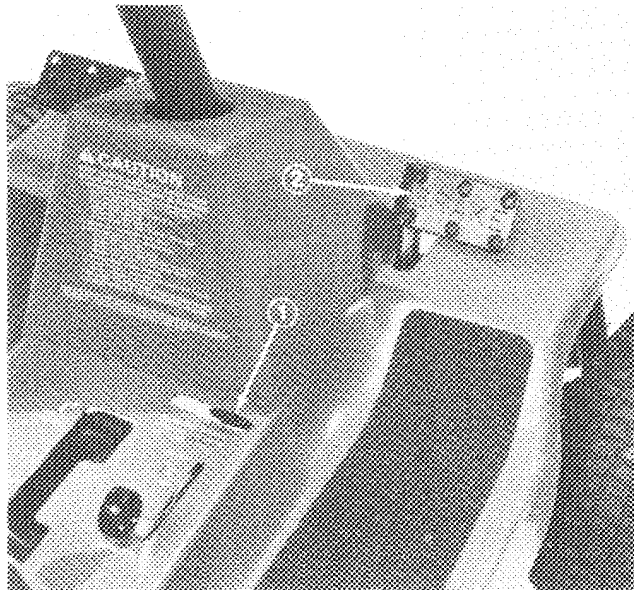


Figure 8

1. Parking brake
2. Brake pedal

2. Move gear shift into neutral and blade control into DISENGAGE detent (Fig. 9).



Figure 9

1. Gear shift
2. Blade control
3. Throttle control
4. Key

Note: An interlock switch on the transmission and mower housing prevents engine from starting unless gear shift is in neutral and blade control is in DISENGAGE detent.

3. Move throttle control fully forward to CHOKE position (Fig. 9) when starting a cold engine. However, a hot engine requires no choking; move throttle between FAST and IDLE for starting.

4. Rotate ignition key (Fig. 9) to START position. When engine starts, release the key and move throttle between FAST and IDLE if choke was used for starting.

Note: If electric starter is inoperative or battery is dead, the auxiliary recoil starter can be used to start the engine. To do so, rotate key to start position and open the hood. Stand to left side of rider, pull recoil starter handle out until positive engagement results; then pull handle vigorously to start engine (Fig. 10). When the engine starts, immediately move throttle control between FAST and IDLE positions if choke was used for starting. Close the hood, get onto the rider from the left side and sit on the seat.

IMPORTANT: Do not pull recoil rope to its limit or let go of the starter handle when rope is pulled out because rope may break or recoil assembly may be damaged.

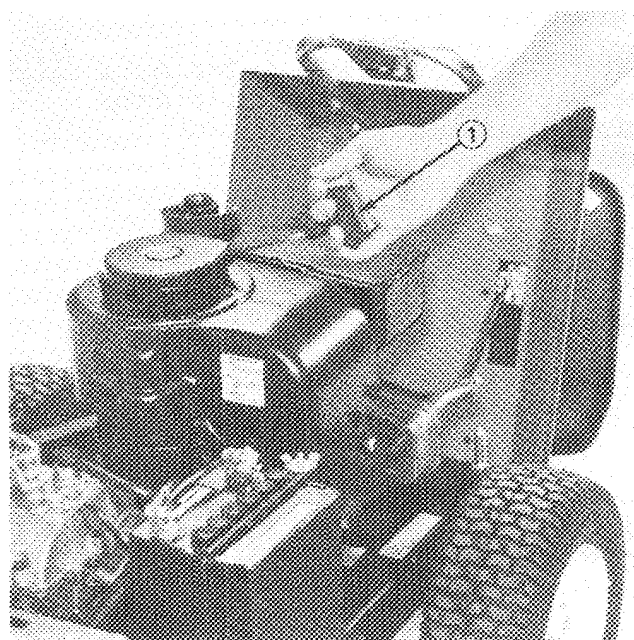


Figure 10

1. Recoil starter

5. To stop the engine, depress clutch pedal, shift into neutral and engage parking brake. Move blade control into DISENGAGE detent, rotate ignition key to OFF and wait for all parts to stop moving before getting off the seat.

OPERATING INSTRUCTIONS

BREAK-IN

The engine requires no special break-in other than changing oil after the first five hours of operation. Operate the transmission in all gears to assure that drive system is functioning correctly. After the first five hours of operation, check the condition and adjustment of the drive chain and belts.

USING PARKING BRAKE



CAUTION

If the engine stalls or must be stopped while operating it on a hill or slope, the engine must be shut off and parking brake engaged.

1. Depress brake pedal fully.
2. Move parking brake control to the left and release brake pedal until it contacts end of parking brake lever (Fig. 8).
3. To release the parking brake, depress brake pedal (Fig. 8), which will allow parking brake lever to return to its disengaged position. Then release brake pedal.

IMPORTANT: Disengage parking brake before shifting into gear to commence operation. If the rider is driven when parking brake is engaged, accelerated brake wear will result.

ADJUSTING ANTI-SCALP WHEELS

Tools Required: 9/16-Inch Socket and Wrench

The anti-scalp wheels at sides of mower housing must be set in relation to the cutting height that is normally used to cut grass. For example; depending on the height-of-cut desired, the anti-scalp wheels must be adjusted to the hole that will allow 1/4 to 1/2 inch (6 to 13 mm) between bottom of wheel and ground.



CAUTION

Shut engine off and move blade control into DISENGAGE detent before adjusting anti-scalp wheels. Personal injury may result if contact is made with the whirling blade or another moving part.

1. Shut engine off and move blade control into DISENGAGE detent (Fig. 9).
2. Move height-of-cut control (Fig. 9) to desired cutting height.
3. Assure there is 1/4 to 1/2 inch (6 to 13 mm) between the wheels and the ground. If distance is not as specified, remove the shoulder bolt and lock nut securing wheel in place.
4. Select the correct hole and reinstall the wheel with shoulder bolt and lock nut. Set both anti-scalp wheels in the same hole.

Note: The preceding adjustment will assure contact of the wheels and ground when undulations of the ground are encountered. Thus, the mower housing will rise and prevent the blade from scalping the turf. Wheels must be in top hole when using lowest cutting height and bottom hole when using highest cutting height.

ADJUSTING HEIGHT-OF-CUT

The height-of-cut may be set in one of five positions: 1-1/2 inches to 3-3/8 inches (38 to 86 mm).

1. Move blade control into DISENGAGE detent (Fig. 9).
2. Move height-of-cut control (Fig. 9) into desired setting.
3. To engage blade for cutting, slowly move blade control to the left, forward, to the right and into ENGAGE detent.

GRASS DEFLECTOR



WARNING

The grass deflector and toe bar is a safety device that routes discharged material down toward the turf; therefore, do not remove deflector from mower housing unless the complete grass catcher assembly, which is optional, is mounted in place. If the deflector is ever damaged, replace it. Without the deflector or complete grass catcher assembly mounted in place, discharged material could fly straight out side of housing and possibly cause personal injury.

OPERATING INSTRUCTIONS

OPERATING PROCEDURE

1. Move blade control into DISENGAGE detent.
2. Start the engine: refer to Starting/Stopping Instructions, steps 1-5, page 11.

IMPORTANT: When rider is used for the first time, operate only the transmission in all gears to assure that drive system is functioning correctly, and become familiar with the controls and operating characteristics. Also check condition of the drive chain and belts, and make any adjustment that may be required.

3. Depress clutch pedal and shift transmission into 1st gear. Then release pedal slowly until traction drive engages.

IMPORTANT: To avoid a jerky start and putting a heavy load on the transmission, move throttle to slow speed and release clutch pedal slowly. When traction drive engages, increase the engine speed. If shifting into gear is difficult, jog clutch pedal in and out to get gears to mesh. Do not force the gear shift because damage may result.



WARNING

To avoid loss of control, always come to a complete stop before shifting gears, and slow down when turning, backing and changing direction. Look behind the rider to assure area is clear before backing.

4. To engage blade for cutting, move height-of-cut control to the desired setting. Start the blade whirling by slowly moving blade control to the left, forward, to the right and into ENGAGE detent. Moving the blade control forward too fast could possibly overload and stall the engine.

5. To stop the engine, in sequence, depress clutch and brake pedals, move blade control into DISENGAGE detent, gear shift into neutral, and rotate key to OFF position.

GRASS CUTTING TIPS

1. When the rider is used to cut a lawn for the first time, cut grass slightly longer than normal to assure that cutting height of mower housing will not cause scalping, which could result from severe undulations of the ground. In general, however, the cutting height used in the past is probably the best one to use.

2. If the grass is ever allowed to grow slightly longer than normal, or if it contains a high degree of moisture, raise cutting height higher than usual and cut the grass at this setting. Next, cut the grass again using the lower, normal setting. This method of cutting long grass results in an even distribution of clippings and an acceptable quality-of-cut.

3. Very long or extremely wet grass can be cut, but specific operating techniques must be used. Start by setting height-of-cut in the highest position. Using 1st gear and maximum throttle speed, move into the grass and cut a swath that is only half as wide as the mower housing. Direct grass clippings toward area that was cut previously. Stop forward movement occasionally to allow discharge area to clear itself. Cutting too much grass may clog the mower housing and discharge area. If mower housing does clog, shut engine off, disengage blade and remove the obstruction with a stick.



DANGER

Before removing obstruction from mower housing, move blade control into DISENGAGE detent, depress clutch and brake pedals, shift into neutral, and turn ignition key to OFF position. Remove high tension wire from spark plug to prevent possibility of accidental starting.

OPTIONAL BAGGING OPERATION

To assure efficient operation of the optional grass catchers, its operating characteristics must be understood. In addition to cutting turf uniformly, the blade also generates high-velocity air currents. These air currents help propel grass clippings from under the cutter deck, through the duct, and into the rear catcher. However, certain conditions may cause the rear grass catching system to malfunction.

One condition that may cause a conveying malfunction is when the cutter deck is set too low. Since air is required to propel grass clippings, there must be a source for this air. And if the source is obstructed, conveying will be inefficient. Thus the height-of-cut must not be set too low, because grass surrounding the cutter deck will prevent air from getting under the cutter deck and entering the conveying system.

A second condition that may cause a malfunction is when excessively long and heavy grass clippings

OPERATING INSTRUCTIONS

cannot be propelled into the catcher. Even though the supply of air may be acceptable for efficient conveying, some grass clippings may fall from the main air stream and into the duct. This starts a progressive buildup of grass clippings in the duct, discharge chute, and against the inside of the cutter deck. The chute and duct may even plug. Therefore, to assure efficient grass collecting, experiment with different heights-of-cut until satisfaction is obtained.

Another condition affecting conveying is moisture. If the turf is wet from watering, morning dew, or its own internal moisture content, the system may malfunction. Therefore, to assure efficiency, cut the grass when it is dry. Since dry grass has some moisture content, clippings may stick to the duct, discharge chute, and on the inside of the cutter deck. This slight buildup is normal, but the rear hopper, duct, discharge chute, and cutter deck must be cleaned to prevent undesirable buildup of clippings.

A final condition to consider is ground speed. As the engine overloads — slows down — air velocity decreases. Therefore, ground speed of the rider must be slow enough to allow all grass clippings to move continuously from under the cutter deck, through the duct, and into the catcher.

BAGGING TIPS

1. To assure maximum air currents in the system, move throttle to FAST and gear shift to 1st gear, which is the slowest ground speed.
2. Do not bag grass when it is wet or too long. But grass can be cut with grass deflector installed. Several hours later, pick up the dry grass clippings with complete rear grass catcher installed.
3. Cut the grass often, especially when the turf growth is rapid. High heights-of-cut produce good grooming results. If shorter turf is desired, cut the grass again.
4. Overlap swaths to produce an even cutting pattern and to minimize the load on the engine. Make sure grass clippings move continuously through the duct.
5. While operating, glance frequently at the duct. If grass clippings are not moving through the duct,

there may be an obstruction in the duct or discharge chute. The obstruction can usually be cleared, however, by moving gear shift to neutral, raising cutter deck to highest position, and slapping the side of the installed white duct — near the obstruction. If the obstruction does not pass into the catcher when duct is slapped, move blade control to DISENGAGE and rotate ignition key to OFF. Then remove duct and clear any obstruction from the duct or discharge chute with stick or similar object. After obstruction is removed, install duct, restart engine and continue grass collecting.

6. After using the grass catcher, remove mulch from inside of catcher, duct, discharge chute, and from underside of cutter deck. If grass clippings remain on the inside of these parts, a malfunction will likely result. To retain translucency, remove grass and dirt stains from inside the duct by washing it with soap and water. Keep the blade sharp to assure good grooming and conveying results.



DANGER

Do not remove duct, discharge chute, or rear catcher when engine is running or when blade is rotating, because personal injury could result.

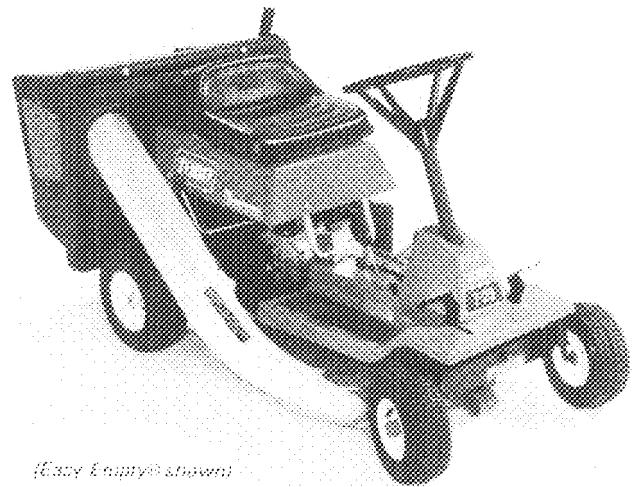


Figure 11

MAINTENANCE INTERVAL CHART

| | 5 Hours | 10 Hours | 25 Hours (Monthly) | Storage Service | Spring Service | 2 Years | Notes |
|----------------------------|------------|-------------|--------------------------|--------------------|-------------------|------------|--|
| Change Oil (Initial) | X | | | | | | |
| Change Oil (Periodic) | | | X | X | | | |
| Check Safety Interlock | X | | X | | X | | |
| Check Cutter Blade | X | | X | X | | | |
| Check Brake | X | | | X | X | | |
| Grease Front Axle Spindles | | | X | X | | | |
| Lubricate Pivot Points | | | X | X | | | |
| Service Air Cleaner | | X | | X | | | More often in dusty, dirty, conditions. |
| Check Spark Plug | | | X | X | X | | |
| Check Blade Drive Belt | | | | X | | | |
| Check Traction Drive Belt | | | | X | | | |
| Check Drive Chain | | X | | X | | | More often in dusty, dirty, conditions. |
| Drain Gasoline | | | | X | | | |
| Clean Outside of Engine | | | | X | | | |
| Clean Mower Housing | | | | X | | | |
| Paint Chipped Surfaces | | | | X | | | |
| Replace Interlock Switches | | | | | | X | |

MAINTENANCE



CAUTION

To prevent accidental starting of the engine while performing maintenance, shut engine off and remove key from ignition switch. Also, open the rear body and pull high tension wire off spark plug (Fig. 12). Make sure wire does not contact plug accidentally.

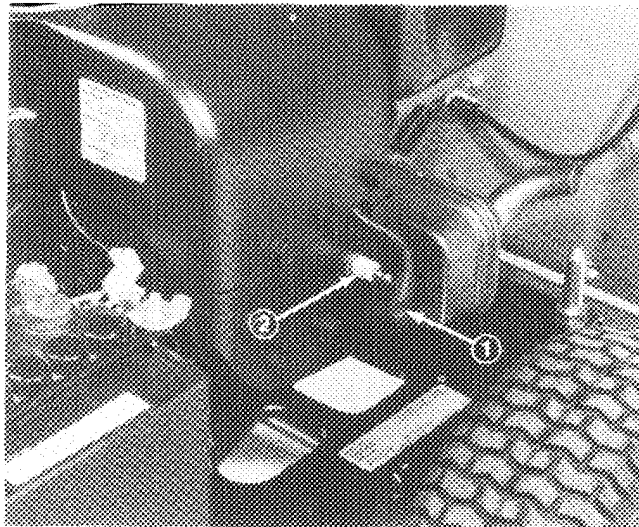


Figure 12

1. High tension wire
2. Spark plug

GREASE FRONT AXLE SPINDLES AND WHEELS

Tools Required: Clean Rag and Grease Gun w/No. 2 General Purpose Lithium Grease

The front axle spindles and wheels must be lubricated after every 25 hours of operation; however, lubricate more frequently when conditions are dusty or sandy.

1. Wipe grease fittings on spindles and wheels (Fig. 13) with a clean rag. If there is paint on front of fittings, scrape it off.

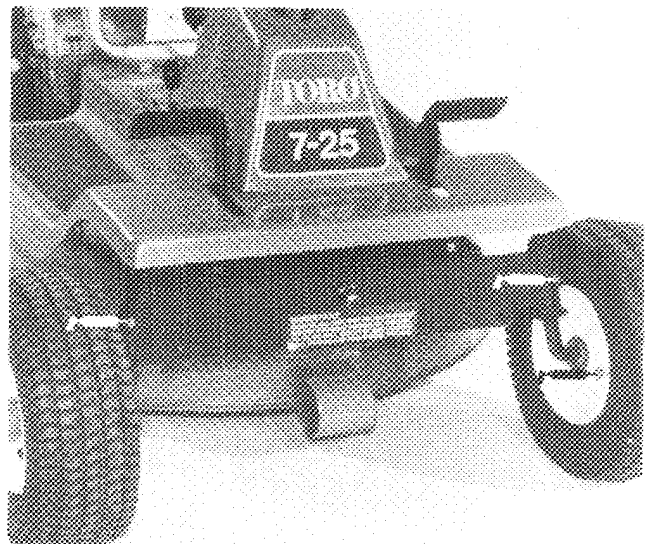


Figure 13

MAINTENANCE

2. Lubricate both axle spindles w/No. 2 general purpose grease (Fig. 13). Continue to pump grease until it oozes out the spindle. Wipe up any excess grease.

3. Lubricate both front wheels w/No. 2 general purpose grease (Fig. 13). Pump grease gun about four times. Wipe up any excess grease.

LUBRICATE PIVOT POINTS

Tools Required: Clean Rag and Oil

The mechanical pivot points on the rider must be lubricated after every 25 hours of operation; however, lubricate more frequently when conditions are dusty or sandy.

IMPORTANT: To lubricate all the mechanical pivot points, the rider must be tipped on its rear end. However, before the rider is tipped, drain all gasoline from fuel tank and oil from crankcase. Also remove battery so acid does not spill onto the rider.

1. Drain gasoline from fuel tank: refer to Draining Gasoline From Fuel Tank, page 18.

2. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6 page 17.

3. Remove battery from chassis: refer to Activating and Charging Battery, page 8.

4. Shift transmission into 1st gear and engage parking brake.

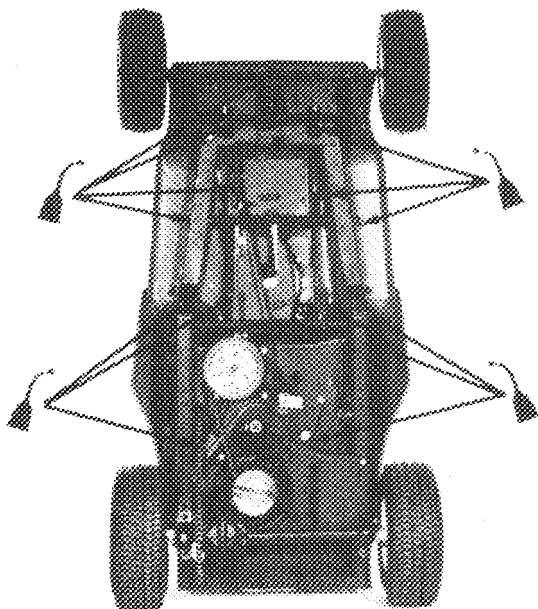


Figure 14

5. Tip rider up and onto its rear end.

6. Remove mower housing from rider chassis: refer to Removing/Installing Mower Housing, steps 1-10, page 22.

7. Lubricate pivot points in the steering, drive, brake and clutch linkage with light oil (Fig. 14). Also lubricate mower housing (Fig. 15).

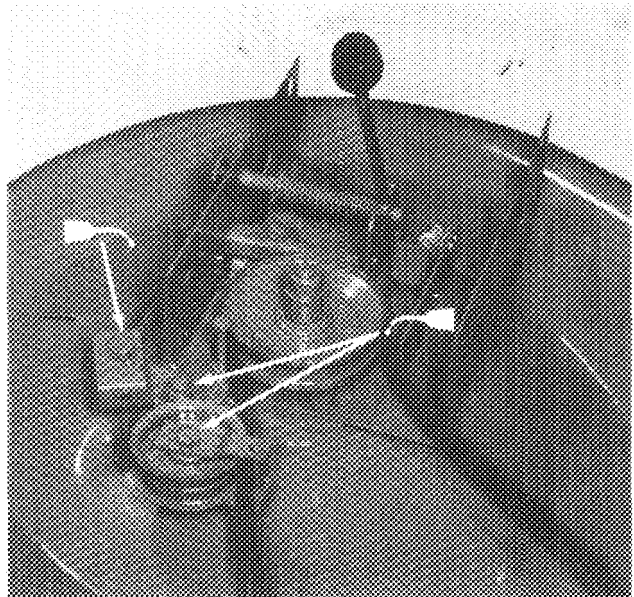


Figure 15

8. Install mower housing onto rider chassis: refer to Removing/Installing Mower Housing, steps 11-14, page 22.

9. Tip rider back to its normal operating position.

10. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 9.

11. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.

12. Install the battery: refer to Activating and Charging Battery, page 8.

SERVICING AIR CLEANER

Tools Required: Screwdriver

The air cleaner element must be cleaned after every 10 hours of engine operation if the engine is operated in clean air conditions. However, element must be cleaned every few hours if operating conditions are extremely dusty or sandy.

1. Pull high tension wire off spark plug.

MAINTENANCE

2. Loosen two screws securing air cleaner assembly in place (Fig. 16).

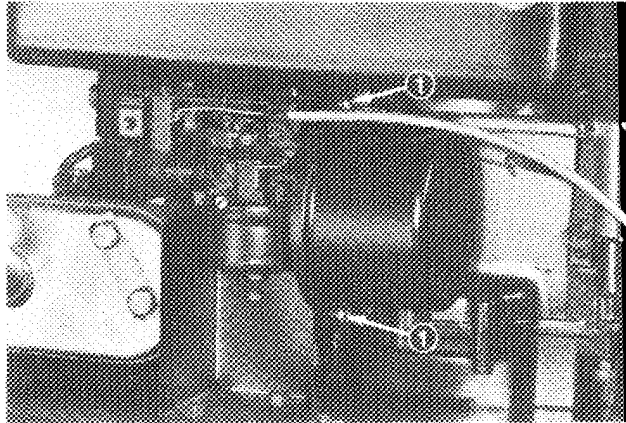


Figure 16

1. Screw

3. Rotate air cleaner cover counterclockwise and slide cover off heads of screws (Fig. 17).

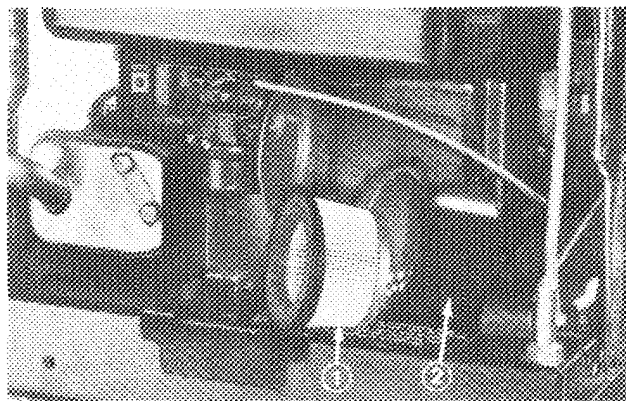


Figure 17

1. Element
2. Cover

4. Tap element and cover lightly on a flat surface to remove dust and dirt (Fig. 18). Replace the element if it is bent, crushed, torn, or oil-soaked. DO NOT WASH OR OIL THE ELEMENT.

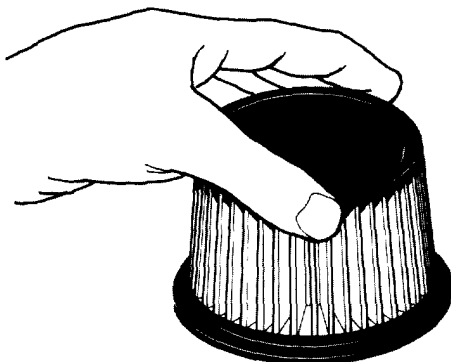


Figure 18

5. Insert element into air cleaner cover. Mount air cleaner assembly on screws and rotate it clockwise. Tighten screws so parts seat together.

IMPORTANT: Do not operate engine without air cleaner element mounted in place because engine damage will likely result.

CHANGING CRANKCASE OIL

Tools Required: Clean Rag, 3/8-Inch Open End Wrench, and Shallow Oil Drain Pan

Check oil level after every 5 hours of operation or each time the rider is used. Change oil after the first 5 hours of operation; thereafter, under normal conditions, change oil after every 25 hours of engine operation. However, change oil more frequently when engine is operated in dusty or sandy conditions. If possible, run engine just before changing oil because warm oil flows better and carries more contaminants than cold oil.

1. Position rider on level surface so oil drains completely and a true reading results when crankcase is refilled.

2. Shut engine off and pull high tension wire off spark plug.

3. Move blade control into DISENGAGE detent and set height-of-cut in lowest position.

4. Clean area around drain plug in elbow. Next, put a shallow drain pan on top rear of mower housing so it will catch the oil.

5. Remove drain plug from elbow (Fig. 19). Hold belt to the side so the oil does not contact it.

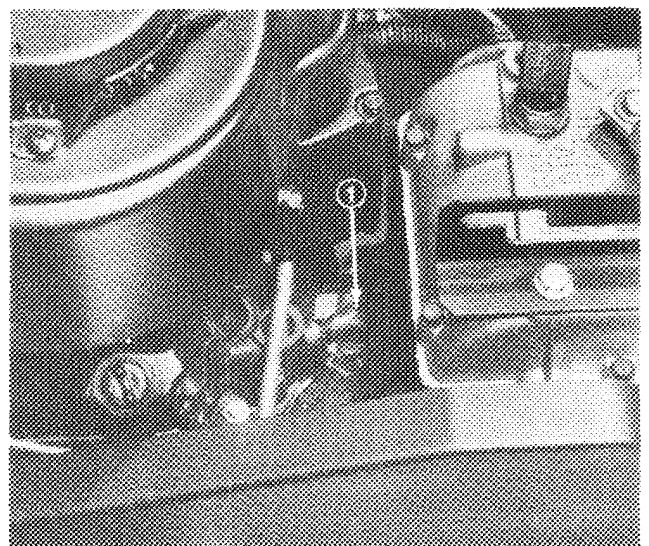


Figure 19

1. Elbow

MAINTENANCE

6. When oil is drained completely, reinstall drain plug and wipe up any oil that may have spilled.
7. With rider parked on a level surface, fill crankcase with oil: refer to Fill Crankcase With Oil, page 9.

DRAINING GASOLINE FROM FUEL TANK

Tools Required: Pump-Type Syphon and Clean Rag



CAUTION

Since gasoline is highly flammable, drain it outdoors and make sure engine is cool to prevent a potential fire hazard. Wipe up any gasoline that may have spilled. Do not drain gasoline near any open flame or where gasoline fumes may be ignited by a spark. Do not smoke a cigar, cigarette, or a pipe when handling gasoline.

IMPORTANT: When the rider is tipped, all gasoline must be drained from the fuel tank.

1. Clean area around fuel tank cap so foreign matter cannot enter filler hole when cap is removed. Next, remove cap from fuel tank (Fig. 20).

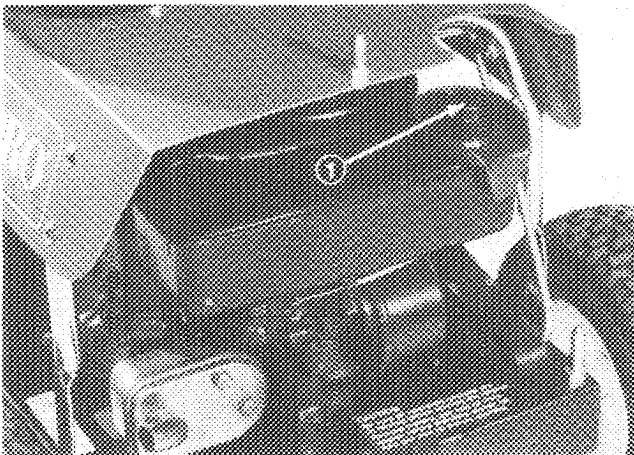


Figure 20

1. Fuel tank cap

2. Using a pump-type syphon, drain gasoline into a clean gas can.

Note: There is no other recommended way to drain gasoline from the fuel tank, other than by using a pump-type syphon. An inexpensive syphon can be purchased at a hardware store.

REPLACING SPARK PLUG

Tools Required: Spark Plug Socket, Spark Plug Gapping Tool, and Clean Rag

Since air gap between center and side electrodes of the spark plug increases gradually during normal operation of the engine, check condition of electrodes after every 25 operating hours. Correct spark plug is a Champion RJ-17LM and recommended air gap is 0.030 of an inch (.762 mm).

Note: The spark plug usually lasts a long time; however, the plug should be removed and checked whenever the engine malfunctions.

1. Clean area around spark plug so foreign matter cannot fall into cylinder when spark plug is removed.
2. Pull high tension wire off spark plug and remove plug from cylinder head (Fig. 21).

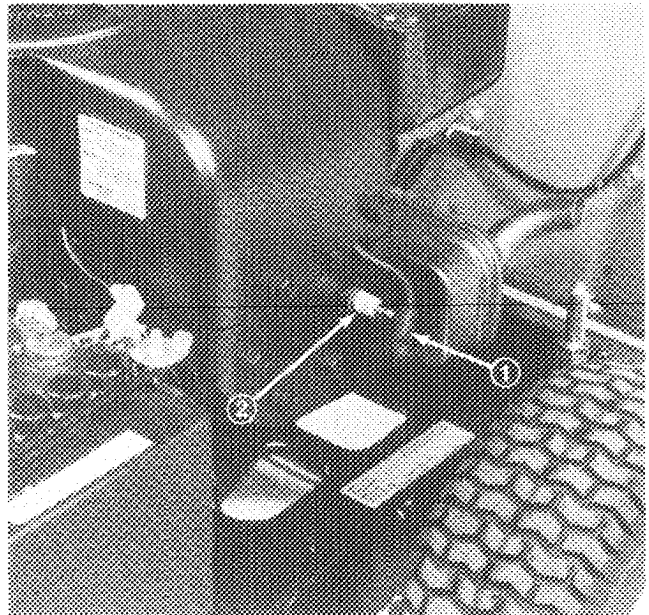


Figure 21

1. High tension wire
2. Spark plug

3. Check conditions of side electrode, center electrode, and center electrode insulator to assure there is no damage.

IMPORTANT: A cracked, fouled, dirty or defective spark plug must be replaced. Do not sand blast, scrape, or clean electrodes by using a wire brush because grit may eventually release from the plug and fall into the cylinder. The result is usually a damaged engine.

MAINTENANCE

4. Set air gap between center and side electrodes at 0.030 of an inch (0.76 mm) (Fig. 22). Install correctly gapped spark plug w/gasket seal, and tighten plug to 15 ft-lb (20.4 N·m). If torque wrench is not used, tighten plug firmly.

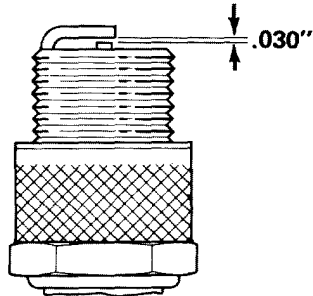


Figure 22

5. Push high tension wire onto spark plug but do not leave key in the ignition. This will prevent accidental starting when mower is being stored between use periods. Keep key in memorable place so it is not lost.

ADJUSTING THROTTLE/CHOKE CONTROL

Tools Required: Medium Blade Screwdriver

To assure that choke and carburetor-mounted throttle are operating properly, the throttle control must be adjusted correctly. Hard starting may be an indication of an incorrect adjustment. If throttle control is ever replaced, an adjustment is also necessary. Before the carburetor is adjusted, assure that throttle control is operating properly.

1. Move throttle control into **FAST** detent position (Fig. 23). Hole in carburetor control arm and hole in plate must line up (Fig. 24). If holes line up proceed to step 3. If holes do not line up, an adjustment is required: proceed to step 2.

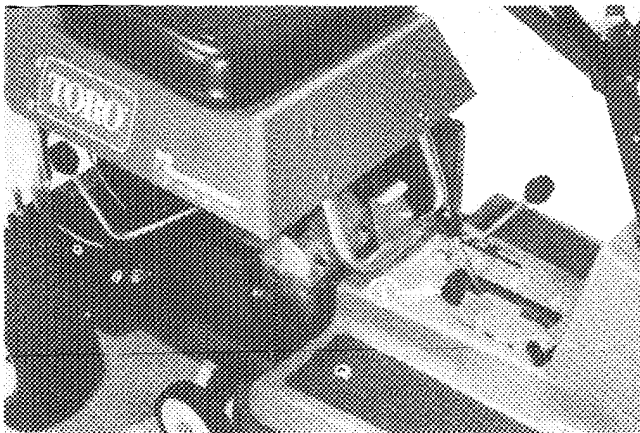


Figure 23

1. Throttle control

2. Loosen cable clamp screw and move control arm and cable until holes line up (Fig. 24). When holes are aligned, tighten cable clamp screw to hold cable in place (Fig. 24).

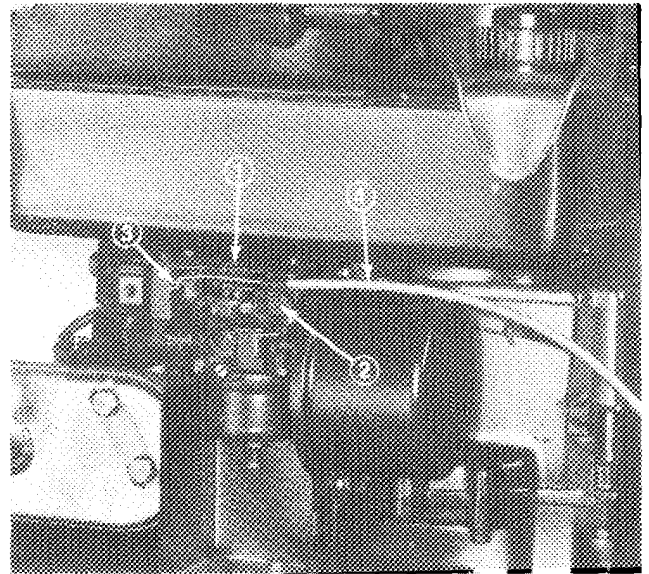


Figure 24

1. Holes
2. Cable clamp screw
3. Control arm
4. Cable

3. Move throttle control to **CHOKE** position and try to start the engine. If engine starts, throttle control is adjusted correctly. If engine does not start or starts hard, remove air cleaner, loosen cable clamp screw and adjust control arm so choke butterfly in carburetor is fully closed (Fig. 25). Then tighten cable clamp screw. If hard starting still persists, the carburetor may need adjusting.

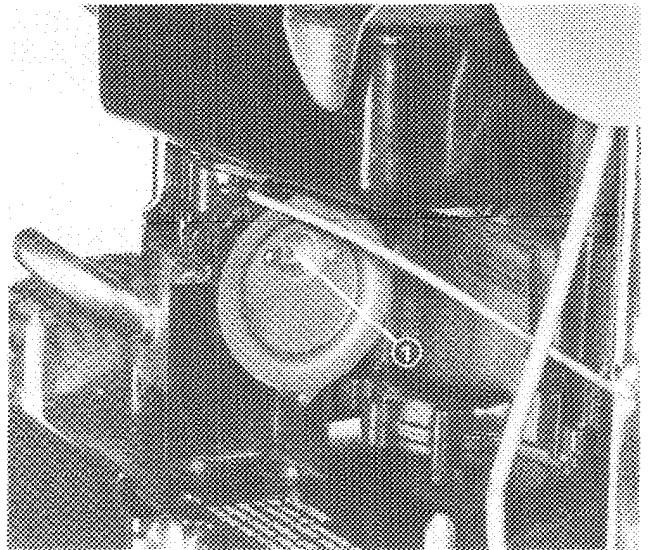


Figure 25

1. Butterfly closed

4. Insert element into air cleaner cover. Mount air cleaner assembly on screws and rotate it clockwise. Tighten screws so parts seat together (Fig. 24).

MAINTENANCE

ADJUSTING CARBURETOR

Tools Required: Medium Blade Screwdriver

IMPORTANT: Before the carburetor is adjusted, throttle control must be checked for proper operation: refer to Adjusting Throttle/Choke Control, page 19.

1. Power Adjusting Screw (Fig. 26) — Close screw by gently rotating it clockwise.

IMPORTANT: Do not forcefully close the power adjusting screw tight because the screw and seat in carburetor will likely be damaged.

2. Rotate — open — the power adjusting screw 1 turn counterclockwise (Fig. 26).

3. Idle Mixture Screw (Fig. 26) — Close screw by gently rotating it clockwise. Rotate — open — idle mixture screw $1\frac{1}{2}$ turns counterclockwise.

IMPORTANT: Do not forcefully close idle mixture screw tight because the screw and seat in carburetor will likely be damaged.

Note: The power adjusting and idle mixture screw settings are approximate; however, the settings will allow engine to be started so carburetor can be fine tuned — steps 4-10.

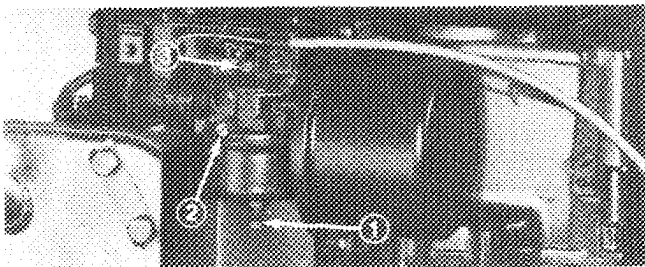


Figure 26

1. Power mixture screw
2. Idle mixture screw
3. Idle speed screw

4. Start engine and let it warm up for approximately two minutes. Next, move throttle control into FAST detent.



WARNING

Engine must be running so final adjustment of the carburetor can be performed. To guard against possible personal injury, move blade control into DISENGAGE detent, shift into neutral, and engage parking brake. Keep hands, feet, face, and other parts of the body away from the cutter blade, underside of mower housing and the discharge area.

IMPORTANT: Air cleaner must be installed on the engine whenever carburetor is being adjusted. The air cleaner mounting screw must also be installed when engine is run.

5. Rotate power adjusting screw (Fig. 26) clockwise, $1/8$ turn at a time, until engine starts to lose speed — lean. Then rotate screw counterclockwise, $1/8$ turn at a time, until engine first runs rough — rich. Wait several seconds so engine can adjust to each $1/8$ turn setting. Next, rotate power adjusting screw clockwise, back to the midpoint between the rich and lean setting so engine runs smoothly.

6. Move throttle backward to IDLE. Next, rotate idle speed screw (Fig. 26) until engine idles fast — (1750 rpm).

7. Rotate idle mixture screw (Fig. 26) clockwise, $1/8$ turn at a time, until engine starts to lose speed — lean. Then rotate screw counterclockwise, $1/8$ turn at a time, until engine first runs rough — rich. Wait several seconds so engine can adjust to each $1/8$ turn setting. Next, rotate idle mixture screw clockwise, back to the midpoint between rich and lean setting.

8. Check carburetor adjustment by quickly moving throttle control from IDLE to FAST. Engine speed should increase without hesitation. If engine tends to stall or die out, rotate idle mixture screw $1/8$ turn counterclockwise until engine accelerates smoothly. If engine falters under load, rotate power adjusting screw $1/8$ turn counterclockwise until engine maintains the load.

9. Rotate speed screw (Fig. 26) until engine idles fast (1750 rpm).

10. After carburetor is adjusted, shut engine off. If rider will not be used immediately, remove key from switch to prevent possibility of accidental starting. Keep key in a memorable place so it is not lost accidentally.

SERVICING CUTTER BLADE

Tools Required: Rag and 15/16-Inch Socket



CAUTION

Check cutter blade every time rider is tipped on end. If lock nut holding blade is loose, tighten it to 45-60 ft-lb (61-81 N·m). If blade or sail (Fig. 28) at end of blade is worn, eroded, or cracked, replace the blade. Replace the blade if it is bent or out-of-balance. Always use genuine TORO replacement blades to assure safety and optimum performance. **NEVER USE WILL-FIT REPLACEMENT BLADES.**

MAINTENANCE

1. Make sure engine is shut off. Then raise the rear body and pull high tension wire off spark plug.

IMPORTANT: To remove blade from spindle shaft, the rider must be tipped on its rear end. However, before the rider is tipped, drain all gasoline from fuel tank and oil from crankcase. Also remove battery so acid does not spill onto the rider.

2. Drain gasoline from fuel tank: refer to Draining Gasoline From Fuel Tank, page 18.
3. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6, page 17.
4. Remove battery from chassis: refer to Activating and Charging Battery, page 8.
5. Shift transmission into 1st gear and engage parking brake. Tip rider onto its rear end.
6. Grasp end of blade using a rag or thickly padded glove; then remove lock nut, anti-scalp cup and blade (Fig. 27).

Note: Since lock nut is tightened to 45-60 ft-lb (61-81 N·m) at the factory, it may be difficult to remove the nut. If the nut cannot be removed, contact an Authorized TORO Service Dealer or a "service station" for assistance.

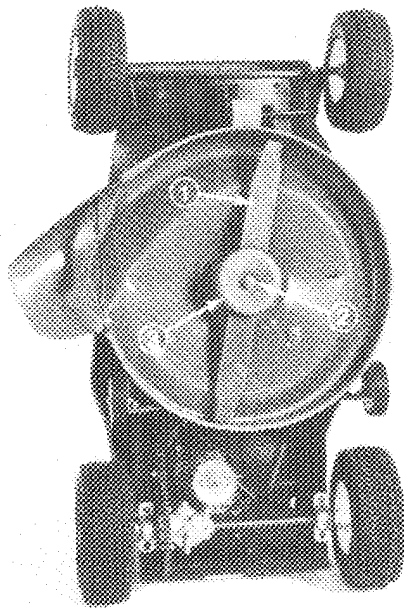


Figure 27

1. Blade 2. Locknut 3. Anti-scalp cup

7. Using a file, sharpen cutting edge at both ends of the blade (Fig. 28).

IMPORTANT: Sharpen top side of the blade and maintain original cutting angle to assure a sharp cutting edge. The blade will remain balanced if same amount of material is removed from both cutting edges.

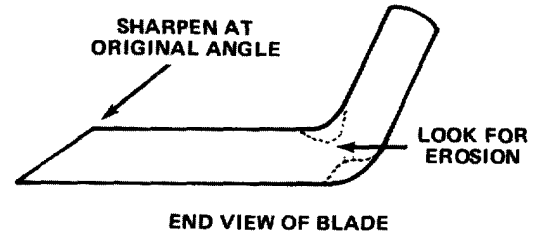


Figure 28

8. Check balance of blade by putting it on a blade balancer. (An inexpensive balancer can be purchased at a hardware store). A balanced blade will stay in a horizontal position on the balancer. By contrast, a blade that is not balanced will settle to the heavy side. If blade is not balanced, file more material off cutting edge of the blade. Continue to file and check the blade until it is balanced.

9. In sequence, install blade, anti-scalp cup and lock nut (Fig. 27). Tighten lock nut to 45-60 ft-lb (61-81 N·m).

IMPORTANT: Make sure cutting edge of blade is away from mower housing. While lock nut is tightened, move blade slightly so it seats between sides of blade retainer.

10. Tip rider back to its normal operating position.
11. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 9.
12. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.
13. Install the battery: refer to Activating and Charging Battery, page 8.

CLEANING UNDERSIDE OF MOWER HOUSING

Tools Required: Wooden Scraper

To assure a good quality-of-cut and efficient grass bagging, underside of mower housing and inside of discharge area must be kept clean. Periodically apply a coat of paste wax on inside of mower housing and grass deflector. This will retard rust and prevent dirt and grass from sticking on inside of housing.

1. Make sure engine is shut off. Then raise the rear body and pull high tension wire off spark plug.

IMPORTANT: To clean underside of mower housing, the rider must be tipped on its rear end. However, before the rider is tipped, drain all gasoline from fuel tank and oil from crankcase. Also remove battery so acid does not spill onto the rider.

MAINTENANCE

2. Drain gasoline from fuel tank: refer to Draining Gasoline From Fuel Tank, page 18.
3. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6, page 17.
4. Remove battery from chassis: refer to Activating and Charging Battery, page 8.
5. Shift transmission into 1st gear and engage the parking brake. Tip rider onto its rear end.
6. Remove grass clippings and dirt that is sticking to inside of housing (Fig. 29) by spraying with a garden hose. Scrape out grass and dirt that water does not remove from housing; then spray housing again.

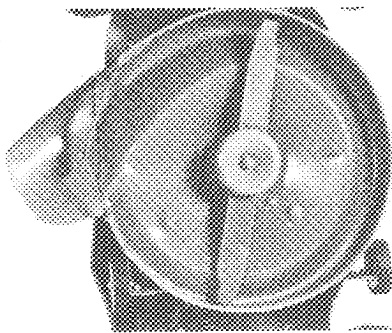


Figure 29

7. Since rider is tipped on end, check condition of blade (Fig. 29).
8. Tip rider back to its normal operating position.
9. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 8.
10. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.
11. Install the battery: refer to Activating and Charging Battery, page 8.

USING WASH-OUT PORT

After mower housing is used, underside of housing must be cleaned to prevent grass clippings from adhering to the housing. To clean underside of mower housing, use the wash-out port. Two people are required to clean underside of housing, using the wash-out port.



CAUTION

Before using wash-out port, shift into neutral, move blade control into DIS-ENGAGE detent, shut engine off, and set height-of-cut in lowest position. If grass catcher was used, remove it and reinstall grass deflector.

1. After mowing, move blade control into DIS-ENGAGE detent and drive to level ground. Shift into neutral, shut engine off, and engage the parking brake.
2. Set height-of-cut control in the lowest position and get off the rider.
3. Sit on the seat and start the engine.



CAUTION

When the wash-out port is used, the blade is whirling; therefore, keep hands and feet away from the mower housing. Contact with the blade or another moving part may cause personal injury.

4. Move blade control forward, to the right and into ENGAGE detent. Using moderate water pressure, have someone else put end of hose — without nozzle — near wash-out port opening (Fig. 30). Allow blade and water to run for approximately 2 minutes; then move blade control backward, to the right and into DISENGAGE detent. Also shut engine off.

Note: The action created by the whirling blade and water flushes accumulations of grass clippings from underside of mower housing. Dry, bulky accumulations of grass must be cleaned with a scraper: refer to Cleaning Underside of Mower Housing, page 21.

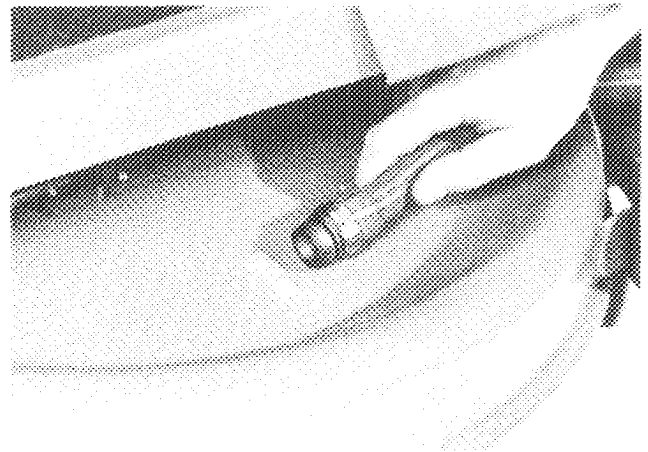


Figure 30

REMOVING/INSTALLING MOWER HOUSING

Tools Required: 9/16-Inch Socket or Wrench.

1. Raise the rear body and pull high tension wire off spark plug.

MAINTENANCE

2. Shift transmission into 1st gear and engage the parking brake.
3. Move blade control into DISENGAGE detent.
4. Move height-of-cut control to lowest position.

IMPORTANT: To remove mower housing from chassis, rider must be tipped on its rear end. However, before rider is tipped, gasoline must be drained from fuel tank and oil from the crankcase. Also, remove the battery so acid does not spill onto the rider.

5. Drain gasoline from fuel tank: refer to Draining Gasoline From Fuel Tank, page 18.
6. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6, page 17.
7. Remove battery from chassis: refer to Activating and Charging Battery, page 8.
8. Tip rider onto its rear end (Fig. 31).

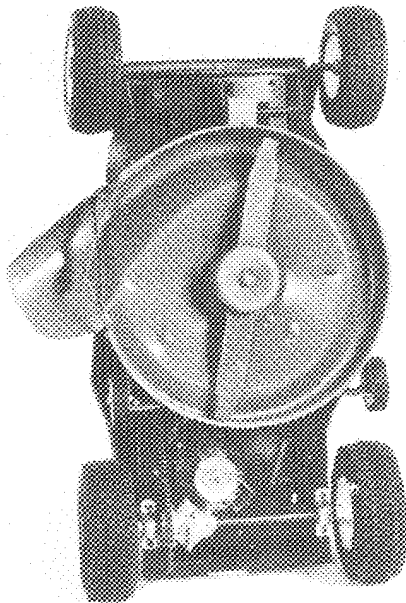


Figure 31

9. Remove hex head screw holding inside of belt guide and loosen the screw holding side of belt guide near chain (Fig. 32). Remove blade drive belt from pulley when there is enough clearance between belt guide and belt (Fig. 32).

Note: Hex head screws holding belt guide in place are also used as engine mounting bolts. Therefore, do not remove both of the screws because the engine may move, which will result in misalignment of the holes. Consequently, the belt guide will be difficult to install.

10. Remove two hair pin cotters and flat washers

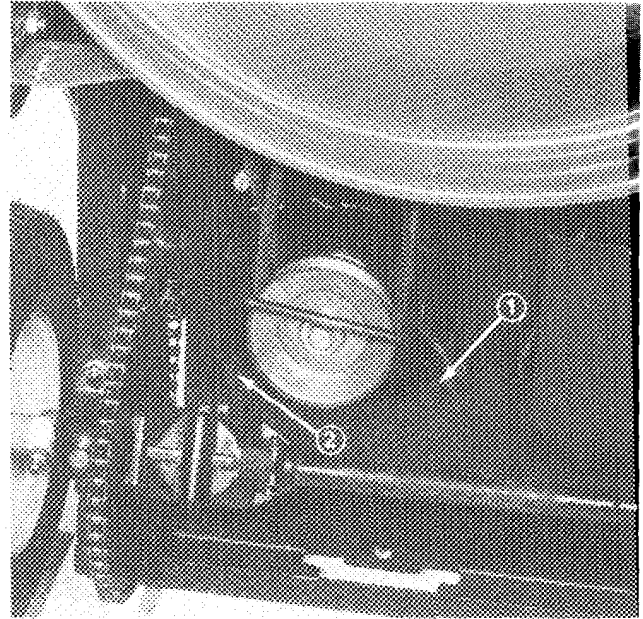


Figure 32

1. Screw (remove)
2. Screw (loosen)

retaining front of mower housing to front mounting pins (Fig. 33). Next, move housing to the side so it slides off mounting pins, and lower the housing until it stops.

11. Reach between front of mower housing and frame and separate interlock switch connectors (Fig. 33).

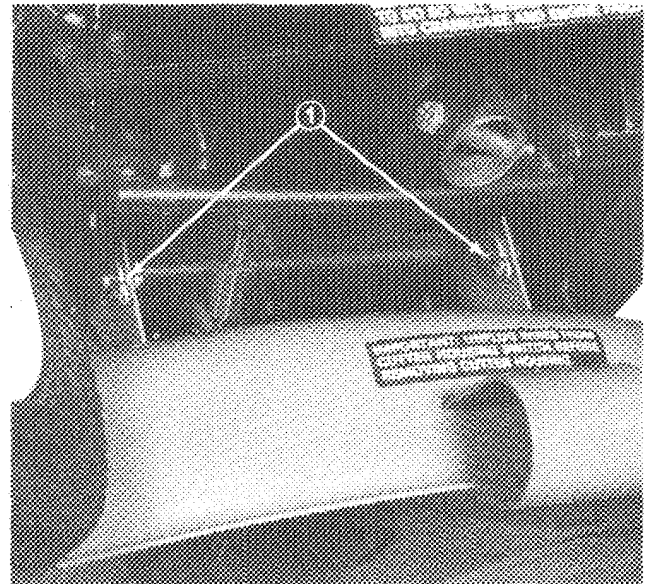


Figure 33

1. Hair pin cotters and washers

12. Remove two hair pin cotters and flat washers retaining back of mower housing to rear mounting pins (Fig. 34). Grasp mower housing and move it to the side until housing is off pins.

MAINTENANCE

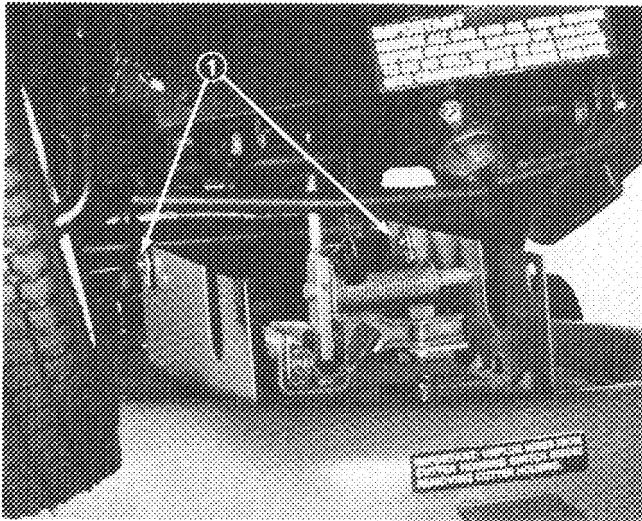


Figure 34

1. Hair pin cotters and washers

13. To install mower housing, slide back of mower housing onto rear mounting pins and retain it in place with two flat washers and hair pin cotters (Fig. 34). Push interlock switch connectors together and slide front of housing onto front mounting pins. Retain housing in place with two flat washers and hair pin cotters (Fig. 33). Install blade drive belt around large engine pulley, and secure belt guide in place with two hex head screws (Fig. 32). Make sure the belt does not contact belt guide when blade control is in ENGAGE detent.

14. Tip rider back to its normal operating position.

15. Fill crankcase with oil: refer to Fill Fuel Tank With Oil, page 9.

16. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.

17. Install the battery: refer to Activating and Charging Battery, page 8.

REPLACING BLADE DRIVE BELT

Tools Required: 15/16-Inch Socket or Wrench, 9/16-Inch Socket, and 9/16-Inch Open End Wrench

IMPORTANT: To replace the blade drive belt, the rider must be tipped on its rear end. However, before the rider is tipped, drain all gasoline from fuel tank and oil from crankcase. Also remove battery so acid does not spill onto the rider.

1. Drain gasoline from fuel tank: refer to Draining Gasoline From Fuel Tank, page 17.

2. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6, page 17.

3. Remove battery from chassis: refer to Remove Battery From Chassis, page 8.

4. Shift transmission into 1st gear and engage the parking brake. Tip rider onto its rear end.

5. Remove mower housing: refer to Removing/Installing Mower Housing, steps 1-10, page 22.

6. Move blade control forward into ENGAGE detent so brake is away from side of pulley.

7. Remove lock nut from cap screw that holds retainer and idler pulley to idler arm. Lift up the pulley and retainer so belt can be removed (Fig. 35).

8. Remove lock nut holding blade pulley on spindle shaft (Fig. 35). Slide pulley up and remove belt.

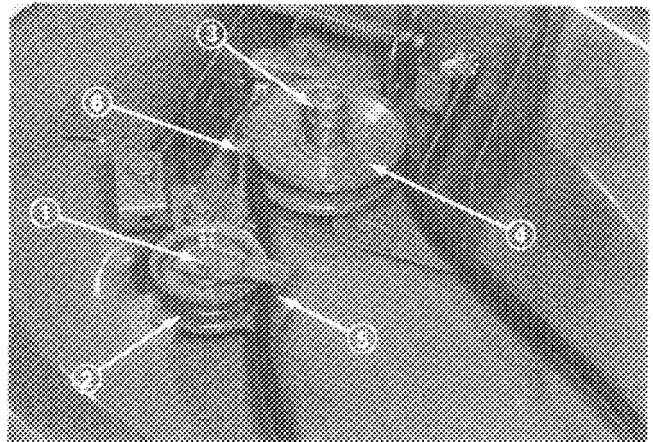


Figure 35

1. Lock nut 4. Blade pulley
2. Idler pulley 5. Belt guide
3. Lock nut 6. Belt guide

9. To install blade drive belt, loop belt around blade drive pulley and to the inside of the belt guide (Fig. 35). Install pulley on spindle shaft with lock nut (Fig. 35), and tighten nut to 50-60 ft-lb. Install belt between idler pulley and belt retainer/guide, and secure idler assembly to idler bracket with cap screw and lock nut (Fig. 35).

10. Install mower housing: refer to Removing/Installing Mower Housing, steps 11-14, page 22.

11. Tip rider back to its normal position.

12. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 9

13. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.

14. Install the battery: refer to Activating and Charging Battery, page 8.

MAINTENANCE

REPLACING TRACTION DRIVE BELT

Tools Required: Pliers, 9/16-Inch Socket and Wrench, and 1/2-Inch Socket and Wrench

IMPORTANT: To replace the traction drive belt, the rider must be tipped on its rear end. However, before the rider is tipped, drain all gasoline from fuel tank and oil from crankcase. Also remove battery so acid does not spill onto the rider.

1. Drain gasoline from fuel tank; refer to Draining Gasoline From Fuel Tank, page 18.
2. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6, page 17.
3. Remove battery from chassis: refer to Activating and Charging Battery, page 8.
4. Shift transmission into 1st gear and engage the parking brake. Tip rider onto its rear end.
5. Remove the mower housing: refer to Removing/Installing Mower Housing, steps 1-10, page 22.
6. Disengage clutch spring from hole in bottom of chassis (Fig. 36). Also loosen the lock nut on idler pulley until belt guide can be removed (Fig. 36).

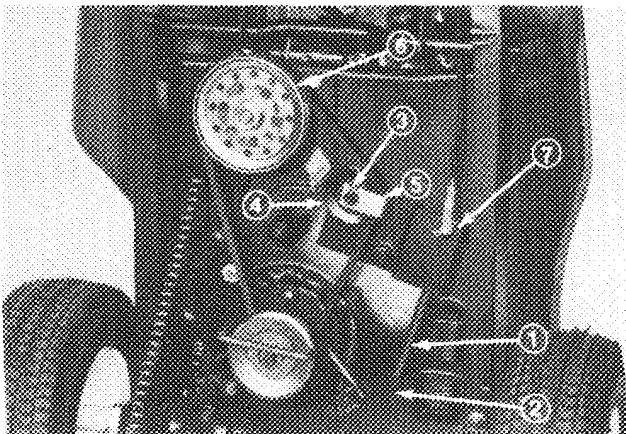


Figure 36

- | | |
|------------------|------------------------|
| 1. Clutch spring | 5. Belt guide |
| 2. Hole | 6. Transmission pulley |
| 3. Locknut | 7. Clutch rod and slot |
| 4. Idler pulley | |

7. Loosen lock nut holding transmission pulley belt guide in place (Fig. 37); then move belt guide to the side.

8. Remove traction drive belt from idler pulley; then rotate belt off transmission pulley and small engine pulley (Fig. 37).

9. To install new traction drive belt, install it around small engine pulley, transmission pulley and idler pulley. Next, install idler pulley belt guide and move idler pulley fully toward the engine

pulley; then tighten cap screw and lock nut. Tension the belt by hooking clutch spring into hole in chassis (Fig. 36). There must be 1/16 of an inch between front of clevis pin and slot in bracket (Fig. 37). If an adjustment is needed, loosen jam nut, and remove cotter and clevis pin. Rotate clevis until adjustment is correct.

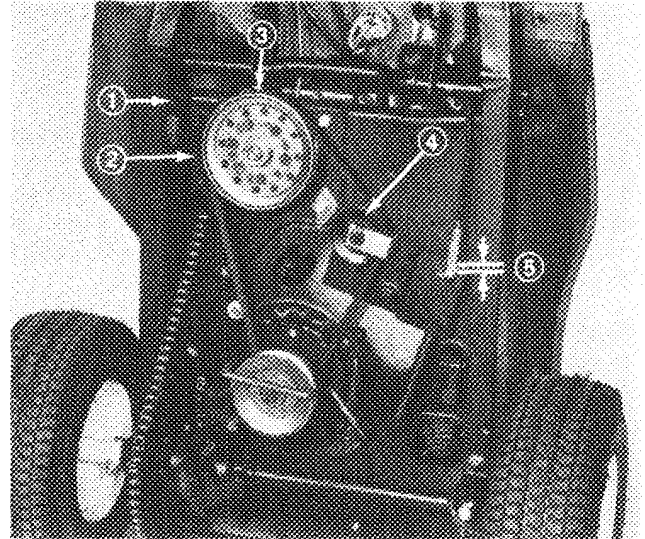


Figure 37

- | |
|------------------------|
| 1. Locknut |
| 2. Belt guide |
| 3. Transmission pulley |
| 4. Idler pulley |
| 5. 1/16" |

IMPORTANT: Make sure belt is equidistant from both sides of the idler pulley belt guide and transmission pulley belt guide.

10. Install mower housing: refer to Removing/Installing Mower Housing, steps 11-14, page 22.

11. Tip rider back to its normal operating position.

12. Fill crankcase with oil: refer to Fill Crankcase with Oil, page 9.

13. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.

14. Install the battery: refer to Activating and Charging Battery, page 8.

CHECKING/ADJUSTING DRIVE CHAIN

The drive chain must be adjusted to maintain 1/8 of an inch deflection at mid span between transmission and differential sprockets. Check chain deflection after every 25 hours of operation.

1. Remove two screws securing chain cover to rider chassis and transmission and lift off chain cover (Fig. 38).

MAINTENANCE

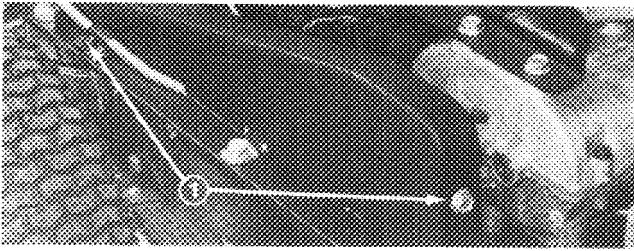


Figure 38
1. Screws

2. Check deflection of drive chain by lifting up and pressing down on chain with moderate pressure at mid span (Fig. 39). There should be 1/8 of an inch (3 mm) total deflection (Fig. 40). If deflection is not as specified, an adjustment is required — steps 3-14.

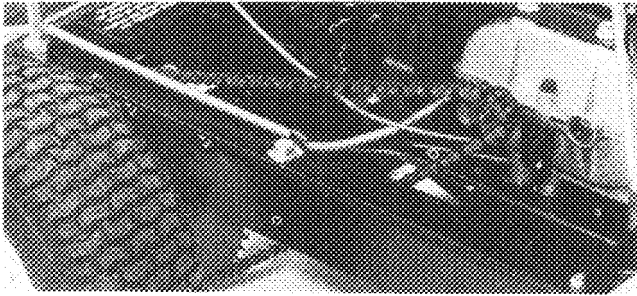


Figure 39

IMPORTANT: To adjust drive chain, the rider must be tipped on its rear end. However, before the rider is tipped, drain all gasoline from fuel tank and oil from crankcase. Also remove the battery so acid does not spill onto the rider.

3. Drain gasoline from fuel tank: refer to Draining Gasoline From Fuel Tank, page 18.

4. Drain oil from crankcase: refer to Changing Crankcase Oil, steps 1-6, page 17.

5. Remove battery from chassis: refer to Activating and Charging Battery, page 8.

6. Shift transmission into 1st gear and engage the parking brake. Tip rider onto its rear end so chassis is on top of 2" x 4" blocks (Fig. 40). Wheels must be off the floor so axle can be moved.

7. Loosen four flange nuts securing pillow blocks w/differential axle to the rider frame (Fig. 40).

8. Loosen rear jamnut on chain tensioner (Fig. 40).

9. Rotate inside nut on chain tensioner until desired chain deflection is attained.

10. Tighten flange nuts securing right pillow block (chain side) to rider frame.

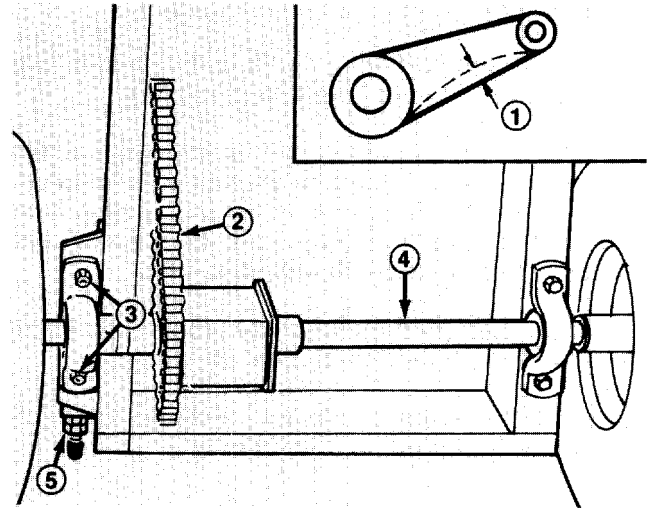


Figure 40

- 1. 12 inch
- 2. Drive chain
- 3. Locknuts
- 4. Axle
- 5. Chain tensioner

11. Since differential axle must be parallel to rear of chassis, measure distance from center of pillow blocks to rear of chassis (Fig. 40). Difference between the two measurements must not exceed 1/8 inch (3 mm). If difference exceeds 1/8 inch (3 mm), differential axle is not parallel with chassis; therefore it must be readjusted.

12. Check the deflection of the drive chain from bottom of rider (refer to Step 2).

13. Tip rider back to its normal operating position.

14. Reinstall chain cover.

15. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 9.

16. Fill fuel tank with gasoline: refer to Fill Fuel Tank With Gasoline, page 9.

17. Install the battery: refer to Activating and Charging Battery, page 8.

ADJUSTING BRAKE


Adjust the brake assembly if free travel of brake pedal exceeds 1 inch or if braking power or parking brake is not sufficient.

1. Shut engine off and raise the rear body.

2. Remove battery from chassis: refer to Remove Battery From Chassis, page 8.

3. Tighten locknut approximately 1/4 turn clockwise (Fig. 41).

MAINTENANCE

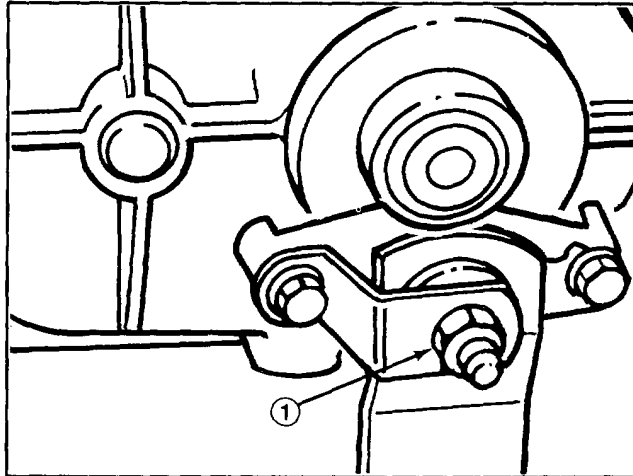

1. Locknut

4. Check operation of the brake by pushing rider; no brake drag should be evident. If drag is evident, rotate locknut an additional $1/8$ turn counter-clockwise or until there is no contact.
5. Install the battery: refer to Activating and Charging Battery, page 8.

CHECKING ELECTRICAL CONNECTIONS

1. Make sure wires on starter motor terminal and battery terminals are secured tightly.
2. Make sure two wires are connected to transmission interlock switch.
3. Push module connectors together to assure a connection.
4. Also check wires that connect to ignition switch to assure good contact.
5. Check the interlock switch at front of the mower housing to be sure wires are not broken. Connectors must be making good contact. Also, assure seat switch connectors are together and wires are making contact (Fig. 42).

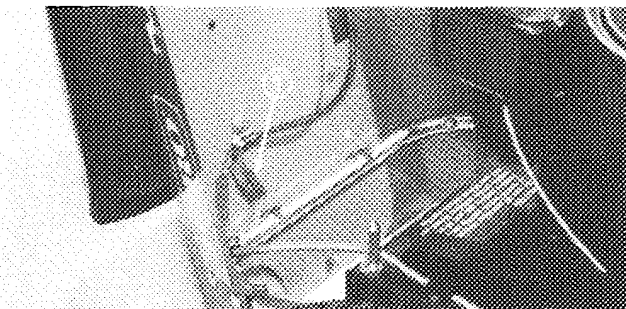


Figure 42

1. Seat switch connector

CHECKING SAFETY INTERLOCK SYSTEM



WARNING

Do not operate the rider if the interlock system is malfunctioning because it is a safety device, designed to protect the operator.

The interlock switches in the electrical system prevent the engine from starting unless the gear shift is in neutral and blade control is disengaged. In addition, the engine will stop — because of a seat switch — if the operator gets off the seat when blade drive control is engaged or gear shift is in gear. To assure interlock system is operating correctly, check it before each use of the rider. Have the switches replaced by an Authorized TORO Service Dealer every two years to assure safe operation of the rider.

1. Check all electrical connections: refer to Checking Electrical Connections, page 27.
2. Move gear shift into neutral.
3. Move blade control to the left, forward, to the right and into ENGAGE detent. Sit on the seat and rotate ignition key to START. Engine should not start; but if it does, the interlock system is malfunctioning and it must be repaired by an Authorized TORO Service Dealer. If engine does not start, proceed to step 4.
4. Move blade control to the left, backward, to the right and into DISENGAGE detent (Fig. 43). Sit on the seat, engage the parking brake, depress clutch pedal, shift into gear and hold clutch pedal in depressed position. Rotate ignition key to START. Engine should not start; but if it does, the interlock system is malfunctioning and must be repaired by an Authorized TORO Service Dealer. If engine does not start, proceed to step 5.

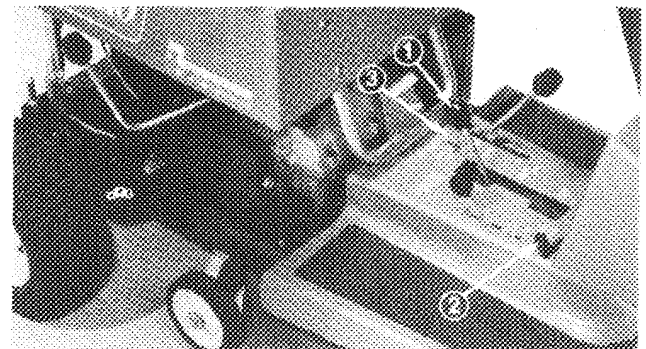


Figure 43

1. Blade control
2. Parking brake
3. Key switch

5. Sit on the seat, move gear shift into neutral, blade control into DISENGAGE detent and assure

MAINTENANCE

parking brake is engaged. Rotate ignition key to START. Engine should start and continue to run. Then engage blade control and carefully raise off the seat: the engine should stop. If engine does not stop running, shut engine off and have interlock system repaired by an Authorized TORO Service Dealer. If engine shuts off when you raised off the seat, the interlock system is functioning correctly and the rider can be operated safely.

PREPARING MOWER FOR STORAGE

1. Drain gasoline from fuel tank and fuel line: refer to Draining Gasoline From Fuel Tank, page 17. Next, start engine and let it run at idle speed until it stops because all gasoline is used.

Note: All gasoline must be expended to prevent gum-like varnish deposits from forming in the carburetor, fuel line, and fuel tank. Such deposits, if allowed to form, will cause starting problems and poor engine operation.

2. Pull high tension wire off spark plug and clean area around the plug so foreign matter cannot fall into cylinder when plug is removed. Next, remove plug from cylinder head and pour two tablespoons of engine oil into spark plug hole. Pull auxiliary recoil starter rope slowly to distribute oil on inside of cylinder. Then reinstall spark plug and tighten it to 15 ft-lb (20.4 N·m). If torque wrench is not used, tighten plug firmly. **DO NOT INSTALL HIGH TENSION WIRE ON SPARK PLUG.**

3. Drain oil from crankcase; refer to Changing Crankcase Oil, steps 1-6, page 17. However, do not fill crankcase with oil at this time.

4. Remove battery from chassis: refer to Activating and Charging Battery, page 8. Remove corrosion from battery terminal and wipe any grease and dirt off the battery case. Check level of electrolyte. If level is low, add drinkable water to the affected cell. Fill only to the fill ring below the filler cap. Reinstall filler caps.

5. Clean dirt and chaff from outside of cylinder, cylinder head fins, and blower housing. Also, remove grass clippings, dirt, and grime from external parts of rider, engine, shrouding, and top of mower housing.

6. Clean underside of mower housing: refer to Cleaning Underside of Mower Housing, page 21.

7. Check condition of blade: refer to Servicing Cutter Blade, page 20.

8. Check and tighten all cap screws, bolts, screws, nuts, and mating parts. If any part is damaged, repair or replace it.

9. Lubricate wheels and spindles with grease: refer to Grease Front Axle Spindles and Wheels, page 15.

10. Remove dust and dirt from air cleaner element: refer to Servicing Air Cleaner, page 16.

11. Touch up all rusted or chipped paint surfaces. Make sure to sand affected area before painting.

Note: TORO Re-Kote "touch-up" paint is available from any Authorized TORO Service Dealer. The spray paint dries in minutes to a glossy, factory-finish.


12. Fill crankcase with oil: refer to Fill Crankcase With Oil, page 9.

13. Install the battery: refer to Activating and Charging Battery, page 8. Charge battery for 48 hours to assure full charge.

IMPORTANT: Improper storage or failure to recharge may cause battery failure.

14. Store the rider in a clean, dry garage or storage area. Remove key from ignition switch and keep it in a memorable place. Cover the rider to protect it and keep it clean.

WIRING DIAGRAM

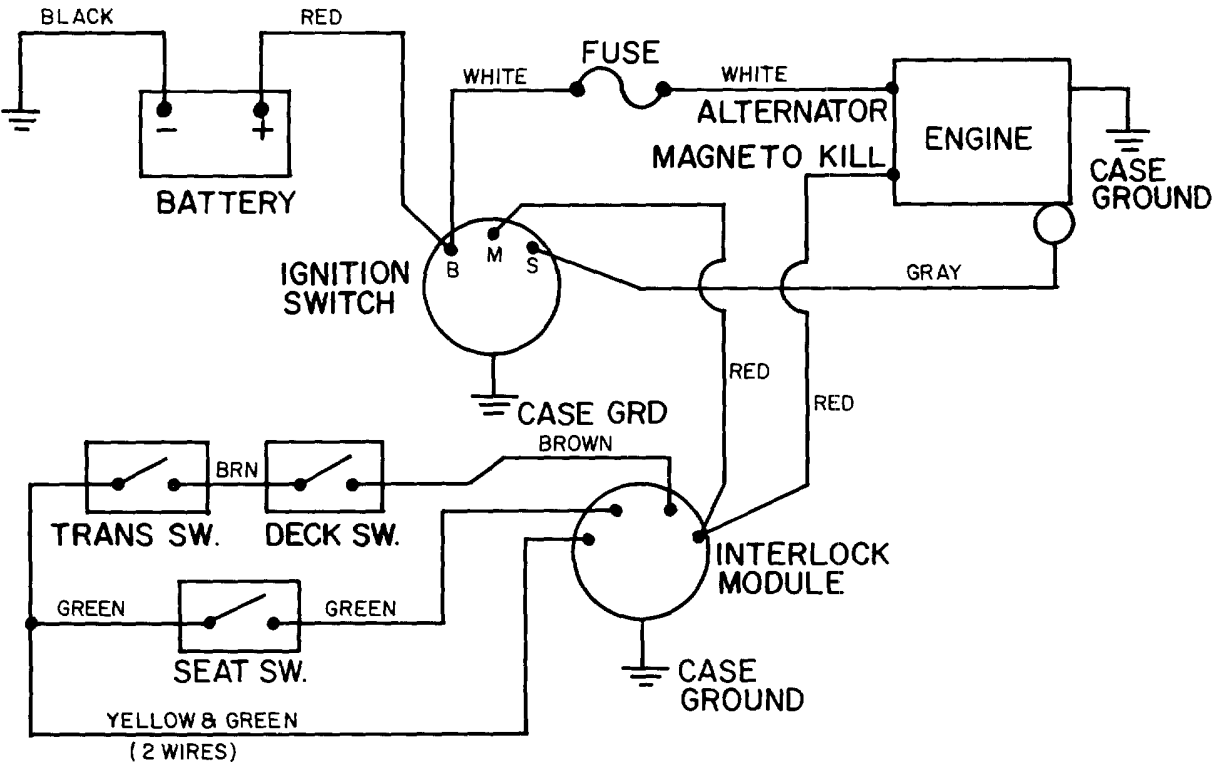

TROUBLE SHOOTING

| Problem | Possible Causes | Corrective Action |
|--|---|---|
| Engine does not start, starts hard, loses power, or fails to keep running. | <ol style="list-style-type: none"> 1. Gas tank is empty. 2. Battery is dead. 3. Transmission is in gear. 4. Blade control is in ENGAGE detent. 5. Spark plug is loose. 6. High tension wire is loose or disconnected from spark plug. 7. Spark plug gap is incorrect. 8. Spark plug is pitted, fouled, or defective in some other way. 9. Wrong spark plug is used. 10. Electrical connections are loose. 11. Carburetor is adjusted incorrectly. 12. Air cleaner is dirty. 13. Vent hole in fuel tank cap is plugged. 14. Dirt, water, or stale fuel in fuel system. 15. Module or switch is defective. 16. Engine headbolt loose. | <ol style="list-style-type: none"> 1. Fill fuel tank with gasoline. 2. Charge the battery. 3. Shift transmission into neutral. 4. Move blade control into DISENGAGE detent. 5. Tighten plug to 15 ft-lb (20.4 N·m). 6. Install high tension wire on spark plug. 7. Set gap between electrodes at 0.030 of an inch (0.76 mm). 8. Install new correctly gapped spark plug. 9. Install correct spark plug. 10. Check electrical system to assure good contact. 11. Adjust the carburetor. 12. Clean the air cleaner element. 13. Clean or replace fuel cap. 14. Have rider serviced by Authorized TORO Service Dealer. 15. Have rider serviced by Authorized TORO Service Dealer. 16. Tighten headbolt to 200 in-lb. |
| Engine does not idle or idles poorly. | <ol style="list-style-type: none"> 1. Air cleaner is dirty. 2. Oil level in crankcase is low. 3. Cooling fins and air passages under engine blower housing are plugged. 4. Idle speed is too low or high speed mixture is incorrect. 5. Dirt, water, or stale fuel is in fuel system. 6. Vent hole in fuel tank cap is plugged. 7. Spark plug is pitted, fouled or defective in some other way. | <ol style="list-style-type: none"> 1. Clean air cleaner element. 2. Add oil to crankcase. 3. Remove obstruction from cooling fins and air passages. 4. Adjust the carburetor. 5. Have rider serviced by Authorized TORO Service Dealer. 6. Clean or replace fuel tank cap. 7. Install new correctly gapped spark plug. |

TROUBLE SHOOTING

| Problem | Possible Causes | Corrective Action |
|----------------------------|---|---|
| Engine loses power | <ol style="list-style-type: none"> 1. Oil level in crankcase is low. 2. Cooling fins and air passages under engine blower housing are plugged. 3. Engine load is excessive. 4. Air cleaner is dirty. 5. Dirt, water, or stale fuel is in fuel system. 6. Carburetor is adjusted incorrectly. 7. Spark plug is pitted, fouled or defective in some other way. | <ol style="list-style-type: none"> 1. Add oil to crankcase. 2. Remove obstruction from cooling fins and air passages. 3. Shift into lower gear to reduce load. 4. Clean air cleaner element. 5. Have rider serviced by Authorized TORO Service Dealer. 6. Adjust the carburetor. 7. Install new correctly gapped spark plug. |
| Engine over heats | <ol style="list-style-type: none"> 1. Cooling fins and air passages under engine blower housing are plugged. 2. Carburetor is adjusted incorrectly. 3. Oil level in crankcase is low. 4. Engine load is excessive. | <ol style="list-style-type: none"> 1. Remove obstruction from cooling fins and air passages. 2. Adjust the carburetor. 3. Add oil to crankcase. 4. Shift into lower gear to reduce load. |
| Rider vibrates abnormally. | <ol style="list-style-type: none"> 1. Engine mounting bolts are loose. 2. Differential axle is misaligned. 3. Loose PTO pulley, idler pulley or blade pulley. 4. Cutter blade is unbalanced. 5. Lock nut holding blade is loose. 6. Drive pulley is damaged. | <ol style="list-style-type: none"> 1. Tighten engine mounting bolts. 2. Adjust the drive chain, which includes the differential axle. 3. Tighten the appropriate pulley. 4. Install new cutter blade. 5. Tighten nut to 45-60 ft-lb (61-81 N·m). 6. Replace drive pulley. |
| Blade does not rotate | <ol style="list-style-type: none"> 1. Blade drive belt is worn, loose or broken. 2. Blade drive belt is off pulley. | <ol style="list-style-type: none"> 1. Install new blade drive belt. 2. Install blade drive belt and check idler pulley and belt guides for correct position. |
| Rider does not drive | <ol style="list-style-type: none"> 1. Traction drive belt is worn, loose or broken. 2. Traction drive belt is off pulley. 3. Drive chain is off sprockets. 4. Transmission does not shift gear. 5. Traction idler is adjusted incorrectly. | <ol style="list-style-type: none"> 1. Install new traction drive belt. 2. Install traction drive belt. 3. Install and adjust drive chain. 4. Have rider serviced by Authorized TORO Service Dealer. 5. Adjust traction drive belt. |

IDENTIFICATION AND ORDERING

MODEL AND SERIAL NUMBERS

The 7 hp Rear Engine Rider has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal that is located on top left side of engine plate, near the spark plug. In any correspondence concerning the rider, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized

TORO Service Dealer, supply the following information:

1. Model and serial numbers of the rider.
2. Part number, description and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

*A Two Year Limited Warranty
On All
Gasoline Powered Consumer Products*

The Toro Company promises to repair these TORO Products if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 2 Years
Residential Products Used Commercially 45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:
TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.