



**Count on it.**

**Operator's Manual**

# LT3340 Heavy-Duty Triple Turf Mower Traction Unit

Model No. 30657—Serial No. 315000001 and Up



g014494



This product complies with all relevant European directives. For details, please see the separate product specific Declaration of Conformity (DOC) sheet.

# Introduction

This machine is a ride-on, cutterhead-blade lawn mower intended to be used by professional, hired operators in commercial applications. It is primarily designed for cutting grass on parks, sports fields, caravan parks, cemeteries, and commercial grounds. It is not designed for cutting brush or for agricultural use.

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

You may contact Toro for product safety and operation training materials, accessory information, help finding a dealer, or to register your product directly at [www.Toro.com](http://www.Toro.com) or Toro Commercial Products Service Department, Spellbrook, Bishops Stortford, CM23 4BU, England, +44(0)1279 603019, Email: [uk.service@toro.com](mailto:uk.service@toro.com).

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. The model and serial numbers are on a plate mounted on the left side of the frame under the foot rest. Write the numbers in the space provided.

<b>Model No.</b> _____
<b>Serial No.</b> _____

This manual identifies potential hazards and has safety messages identified by the safety alert symbol (Figure 1), which signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.



**Figure 1**

1. Safety alert symbol

---

This manual uses 2 words to highlight information.

**Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

# Contents

Safety .....	4	Bleeding the Fuel System .....	39
Safe Operating Practices .....	4	Replacing the Fuel Filter .....	39
Toro Riding Mower Safety .....	6	Electrical System Maintenance .....	40
Vibration Level .....	7	Checking the Electrical System .....	40
Sound Power Level .....	7	Checking the Battery Condition .....	40
Sound Pressure Level .....	7	Servicing the Battery .....	41
Safety and Instructional Decals .....	7	Drive System Maintenance .....	41
Setup .....	11	Changing the Transmission Oil Filter .....	41
Product Overview .....	11	Changing the Hydraulic Return Filter .....	41
Controls .....	12	Checking the Rear Wheel Alignment .....	42
Specifications .....	19	Inspecting the Transmission Control Cable and	
Attachments/Accessories .....	19	Operating Mechanism .....	42
Operation .....	20	Cooling System Maintenance .....	43
Checking the Engine-Oil Level .....	20	Removing Debris from the Cooling System .....	43
Checking the Cooling System .....	21	Belt Maintenance .....	44
Adding Fuel .....	21	Tensioning the Alternator Belt .....	44
Checking the Hydraulic Fluid .....	22	Controls System Maintenance .....	44
Checking the Tire Pressure .....	23	Checking the Forward/Reverse Travel Pedal	
Checking the Torque of the Wheel Nuts .....	23	Action .....	44
Think Safety First .....	23	Checking the Operator Presence Seat Switch .....	44
Using the Operator Platform Latching		Checking the Cutter Drive Interlock Switch .....	44
Mechanism .....	24	Checking the Parking Brake Interlock Switch .....	44
Understanding the Operator Presence		Checking the Transmission Neutral Interlock	
Controls .....	24	Switch .....	45
Starting and Stopping the Engine .....	24	Hydraulic System Maintenance .....	45
Using the Grass Deflectors .....	26	Servicing the Hydraulic System .....	45
Adjusting the Center Cutterhead Height-of-Cut		Checking the Hydraulic Oil Overheat Warning	
Correction .....	26	System .....	46
Controlling the Position of the Individual		Checking the Hydraulic Lines and Hoses .....	46
Cutterheads .....	26	Cutterheads System Maintenance .....	47
Adjusting the Cutterhead Auto Limited		Back Lapping the Cutterheads .....	47
Lift .....	26	Grinding the Cutterheads .....	48
Engaging the Cutterhead Drive .....	27	Raising The Mower Off The Ground .....	48
Clearing the Cutting Cylinders .....	27	Disposing of Waste .....	48
Using Weight Transfer / Traction Assistance .....	27	Storage .....	49
Folding the ROPS .....	28	Preparing the Traction Unit .....	49
Locating the Jacking Points .....	29	Preparing the Engine .....	49
Transporting the Machine .....	29	Troubleshooting .....	50
Loading the Machine .....	29		
Towing the Machine .....	30		
Operating Tips .....	31		
Maintenance .....	33		
Recommended Maintenance Schedule(s) .....	33		
Daily Maintenance Checklist .....	34		
Preparing the Machine for Maintenance .....	35		
Service Interval Chart .....	35		
Lubrication .....	36		
Greasing the Bearings, Bushings, and Pivots .....	36		
Engine Maintenance .....	37		
Checking the Engine Overheat Warning			
System .....	37		
Servicing the Air Cleaner .....	37		
Servicing the Engine Oil and Filter .....	38		
Fuel System Maintenance .....	39		
Draining the Fuel Tank .....	39		
Checking the Fuel Lines and Connections .....	39		

# Safety

This machine has been designed in accordance with EN ISO 5395:2013.

**Improperly using or maintaining the machine can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert symbol, which means Caution, Warning, or Danger—personal safety instruction. Failure to comply with the instruction may result in personal injury or death.**

## Safe Operating Practices

### Training

- Read the operator's manual and other training material carefully. Be familiar with the controls, safety signs, and the proper use of the equipment.
- Never allow children or people unfamiliar with these instructions to use or service the mower. Local regulations may restrict the age of the operator.
- Never mow while people, especially children, or pets are nearby.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- Do not carry passengers.
- All drivers and mechanics should seek and obtain professional and practical instruction. The owner is responsible for training the users. Such instruction should emphasize:
  - the need for care and concentration when working with ride-on machines;
  - control of a ride-on machine sliding on a slope will not be regained by the application of the brake. The main reasons for loss of control are:
    - ◇ insufficient wheel grip;
    - ◇ being driven too fast;
    - ◇ inadequate braking;
    - ◇ the type of machine is unsuitable for its task;
    - ◇ lack of awareness of the effect of ground conditions, especially slopes;
- The owner/user can prevent and is responsible for accidents or injuries occurring to himself or herself, other people, or property.

### Preparation

- While mowing, always wear substantial, slip-resistant footwear, long trousers, hard hat, safety glasses, and ear protection. Long hair, loose clothing, or jewelry may get tangled in moving parts. Do not operate the equipment when barefoot or wearing open sandals.

- Thoroughly inspect the area where the equipment is to be used and remove all objects which may be thrown by the machine.
- Replace damaged or worn silencers/mufflers.
- Only use accessories and attachments approved by the manufacturer.
- Before using, always visually inspect to see that the blades, blade bolts and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance.
- On multi-bladed machines, take care as rotating one blade can cause other blades to rotate.
- Check that the operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

### Operation

- Do not operate the engine in a confined space where dangerous carbon monoxide and other exhaust gasses can collect.
- Mow only in daylight or in good artificial light.
- Before attempting to start the engine, engage the parking brake, disengage the cutterhead drive system, and ensure that the forward/reverse speed controls are in the neutral position.
- Do not use on a slope of more than 20 degrees. Care should be taken when using the mower on any slope where ground conditions are such that there may be a risk of the mower rolling over. The requirements of 2009/104/EC 'Use of Work Equipment Directive' should be considered.
- Remember there is no such thing as a safe slope. Travel on grass slopes requires particular care. To guard against overturning:
  - do not stop or start suddenly when going up or downhill;
  - machine speeds should be kept low on slopes and during tight turns;
  - stay alert for humps and hollows and other hidden hazards;
  - Do not turn sharply. Use care when reversing.
- Stay alert for holes in the terrain and other hidden hazards.
- Watch out for traffic when crossing or near roadways.
- Stop the blades rotating before crossing surfaces other than grass.
- When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation.
- Never operate the machine with damaged guards, shields, or without safety protective devices in place. Be sure all

interlocks are attached, adjusted properly, and functioning properly.

- Do not change the engine governor settings or over-speed the engine. Operating the engine at excessive speed may increase the hazard of personal injury.
- Before leaving the operator's position:
  - stop on level ground;
  - disengage the drive to the cutterheads;
  - lift cutterheads to the transport position and securely lock the safety latches or alternatively lower cutterheads to the ground;
  - Ensure the transmission is in neutral and engage the parking brake;
  - stop the engine and remove the key.
- When transporting the mower:
  - disengage the drive to the cutterheads;
  - raise the cutterheads to the transport position;
  - engage the transport latches and safety locking rings.
  - stop the engine and remove the key.
- When driving the mower between work sites it is important to ensure that the cutterheads cannot be inadvertently lowered and started:
  - disengage the drive to the cutterheads;
  - raise the cutterheads to the transport position;
  - engage the transport latches and safety locking rings.
- Stop the engine and disengage drive to the cutterheads:
  - before refuelling;
  - before making height adjustment unless adjustment can be made from the operator's position.
  - before clearing blockages;
  - before checking, cleaning or working on the mower;
  - after striking a foreign object or if an abnormal vibration occurs. Inspect the mower for damage and make repairs before restarting and operating the equipment.
- Reduce the throttle setting during engine run-out and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop cylinders/cutterheads if not mowing.
- Do not operate the mower when tired, ill, or under the influence of alcohol or drugs.
- Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, do not operate the machine; seek shelter.

- Use care when loading or unloading the machine into a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

## Safe Handling of Fuels

- To avoid personal injury or property damage, use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.
- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- Use only an approved fuel container.
- Never remove fuel cap or add fuel with the engine running.
- Allow engine to cool before refueling.
- Never refuel the machine indoors.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as on a water heater or on other appliances.
- Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
- Remove equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment with a portable container, rather than from a fuel dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock open device.
- If fuel is spilled on clothing, change clothing immediately.
- Never overfill fuel tank. Replace fuel cap and tighten securely.

## Rollover Protection System (ROPS) - Use and Maintenance

- The ROPS is an integral and effective safety device. Keep a folding ROPS in the raised and locked position and use the seat belt when operating the machine.
- Lower a folding ROPS temporarily only when absolutely necessary. Do not wear the seat belt when folded down.
- Be aware there is no rollover protection when a folded ROPS is in the down position.
- Be certain that the seat belt can be released quickly in the event of an emergency.
- Check the area to be mowed and never fold down a folding ROPS in areas where there are slopes, drop offs or water.
- Check carefully for overhead clearances (i.e. branches, doorways, electrical wires) before driving under any objects and do not contact them.

- Keep the ROPS in safe operating condition by periodically thoroughly inspecting for damage and keeping all mounting fasteners tight.
- Replace a damaged ROPS. Do not repair or revise.
- **Do not** remove the ROPS.
- Any alterations to a ROPS must be approved by the manufacturer.

## Maintenance and Storage

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Never store the equipment with fuel in the tank inside a building where fumes may reach an open flame or spark.
- Allow the engine to cool before storing in any enclosure.
- To reduce the fire hazard, keep the engine, silencer/muffler, battery compartment and fuel storage area free of grass, leaves, or excessive grease.
- Keep all parts in good working condition and all hardware and hydraulic fittings tightened. Replace all worn or damaged parts and decals.
- If the fuel tank has to be drained, do this outdoors.
- Be careful during adjustment of the machine to prevent entrapment of the fingers between moving blades and fixed parts of the machine.
- On multi-cylinder/multi-cutterhead machines, take care as rotating one cylinder/cutterhead can cause other cylinders/cutterheads to rotate.
- Disengage drives, lower the cutting units, set parking brake, stop engine and remove key from ignition. Wait for all movement to stop before adjusting, cleaning or repairing.
- Clean grass and debris from cutting units, drives, silencers/mufflers, and engine to help prevent fires. Clean up oil or fuel spillage.
- Use jack stands to support components when required.
- Carefully release pressure from components with stored energy.
- Disconnect battery before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Use care when checking the cylinders/cutterheads. Wear gloves and use caution when servicing them.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.

## Hauling

- Use care when loading or unloading the machine into a trailer or truck.

- Use full width ramps for loading machine into trailer or truck.
- Tie the machine down securely using straps, chains, cable, or ropes. Both front and rear straps should be directed down and outward from the machine.

## Toro Riding Mower Safety

The following list contains safety information specific to Toro products or other safety information that you must know that is not included in the safety standards.

This product is capable of amputating hands and feet and throwing objects. Always follow all safety instructions to avoid serious injury or death.

Use of this product for purposes other than its intended use could prove dangerous to user and bystanders.

### **⚠ WARNING**

**Engine exhaust contains carbon monoxide, which is an odorless, deadly poison that can kill you.**

**Do not run engine indoors or in an enclosed area.**

- Know how to stop the engine quickly.
- Do not operate the machine while wearing tennis shoes or sneakers.
- Wearing safety shoes is advisable and required by some local ordinances and insurance regulations.
- Handle fuel carefully. Wipe up any spills.
- Check the safety interlock switches daily for proper operation. If a switch should fail, replace the switch before operating the machine.
- Before starting the engine, sit on the seat.
- Using the machine demands attention. To prevent loss of control:
  - Do not drive close to sand traps, ditches, creeks, or other hazards.
  - Reduce speed when making sharp turns. Avoid sudden stops and starts.
  - When near or crossing roads, always yield the right-of-way.
  - Apply the service brakes when going downhill to keep forward speed slow and to maintain control of the machine.
- Raise the cutting units when driving from one work area to another.
- Do not touch the engine, silencer/muffler, or exhaust pipe while the engine is running or soon after it has stopped because these areas could be hot enough to cause burns.

- If the engine stalls or loses headway and cannot make it to the top of a slope, do not turn the machine around. Always back slowly, straight down the slope.
- When a person or pet appears unexpectedly in or near the mowing area, stop mowing. Careless operation, combined with terrain angles, ricochets, or improperly positioned guards can lead to thrown object injuries. Do not resume mowing until the area is cleared.

## Maintenance and Storage

- Make sure all hydraulic line connectors are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- Keep your body and hands away from pin hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not your hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate the skin and cause serious injury. Seek immediate medical attention if fluid is injected into skin.
- Before disconnecting or performing any work on the hydraulic system, all pressure in the system must be relieved by stopping the engine and lowering the cutting units and attachments to the ground.
- Check all fuel lines for tightness and wear on a regular basis. Tighten or repair them as needed.
- If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing, and any parts of the body away from the cutting units, attachments, and any moving parts. Keep everyone away.
- To ensure safety and accuracy, have an Authorized Toro Distributor check the maximum engine speed with a tachometer. The maximum governed engine speed should be 3000 rpm.
- If major repairs are ever needed or if assistance is desired, contact an Authorized Toro Distributor.
- To ensure optimum performance and continued safety certification of the machine, use only Toro replacement

parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous, and such use could void the product warranty.

## Vibration Level

### Hand-Arm

Measured vibration level = 1.5 m/s<sup>2</sup>

Uncertainty Value (K) = 0.8 m/s<sup>2</sup>

Measured values were determined according to the procedures outlined in EN ISO 5395:2013.

### Whole Body

Measured vibration level = 1.1 m/s<sup>2</sup>

Uncertainty Value (K) = 0.6 m/s<sup>2</sup>

Measured values were determined according to the procedures outlined in EN ISO 5395:2013.

Wear vibration-absorbing gloves.

## Sound Power Level

This unit has a measured sound power level of 100 dB(A), which includes an Uncertainty Value of 1 dB(A).

Sound power level was determined according to the procedures outlined in ISO 11094.

## Sound Pressure Level

This unit has a sound pressure level at the operator's ear of 85 dB(A), which includes an Uncertainty Value (K) of 2 dB(A).


Sound pressure level was determined according to the procedures outlined in EN ISO 5395:2013.

Wear hearing protection.

## Safety and Instructional Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.

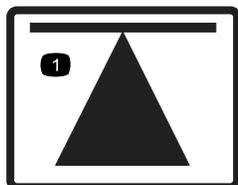


70-13-072

1. Jacking point

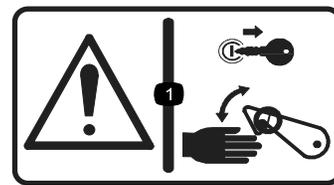

70-13-077

1. Warning—stop the engine and remove the ignition key before releasing or operating safety latches.

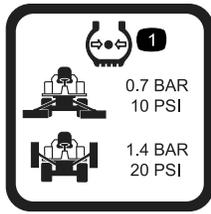

**950832**

1. Tire pressure


---



**950889**

1. Warning—hot surfaces.


---

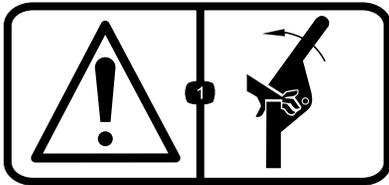

**111-0773**


1. Warning—crushing of fingers, force applied from side.

---

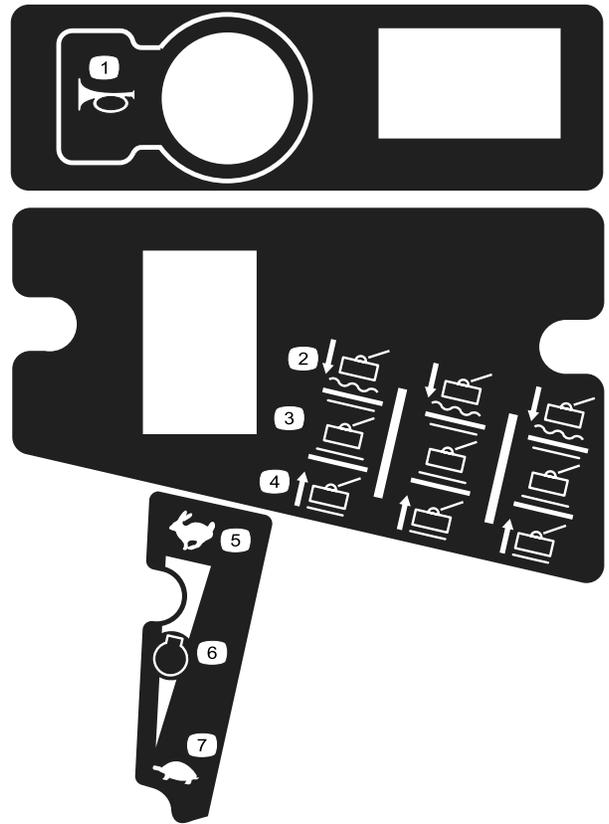

**111-3277**

- |                        |                 |
|------------------------|-----------------|
| 1. Horn                | 5. Fast         |
| 2. Cutters—lower/float | 6. Engine speed |
| 3. Cutters—hold        | 7. Slow         |
| 4. Cutters—raise       |                 |
- 

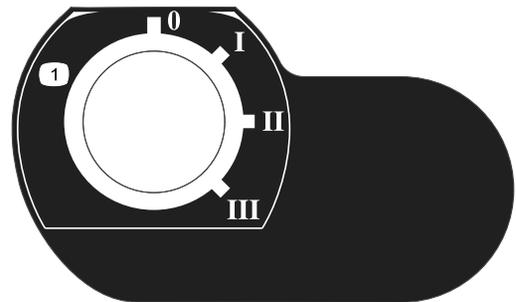

**111-3344**


1. Ignition switch

---




111-3562

1. Press pedal to adjust steering wheel tilt.

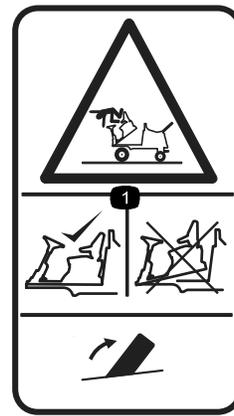

111-3566

1. Falling, crushing hazard—ensure operator platform latch is engaged before operating.

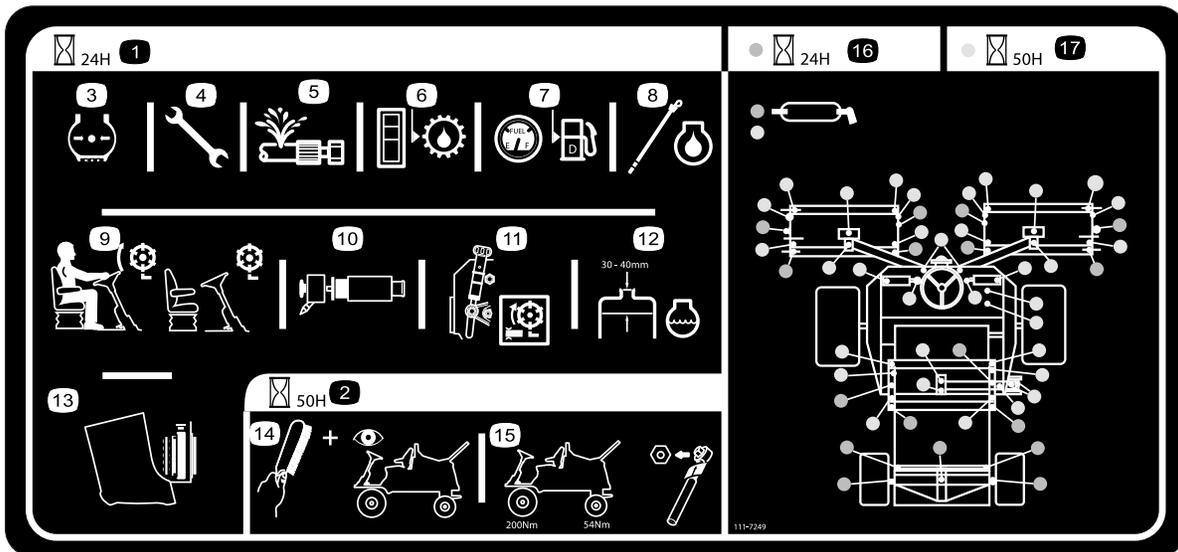

111-7249

- |  |                                   |   |   |
|--|-----------------------------------|---|---|
| 1. Daily service interval                        | 6. Check hydraulic oil level      | 11. Check cutter head setting   | 16. Lubrication points for daily interval   |
| 2. 50 hour service interval                      | 7. Check fuel level               | 12. Check engine coolant level  | 17. Lubrication points for 50 hour interval |
| 3. Check the tire pressure                       | 8. Check engine oil level         | 13. Check cleanliness of radiator   |   |
| 4. Check all nuts and bolts for proper tightness | 9. Check operation of seat switch | 14. Clean and inspect the machine   |   |
| 5. Check all hoses for leaks                     | 10. Check air filter element      | 15. Check wheel nut tightness using a torque wrench, Front wheels 200 N-m, Rear wheels 54 N-m |   |




111-3567

1. Pedal operation



111-3902

1. Warning—cutting hazard of hand, fan.
2. Hot surfaces—read the *Operator's Manual* for more information.

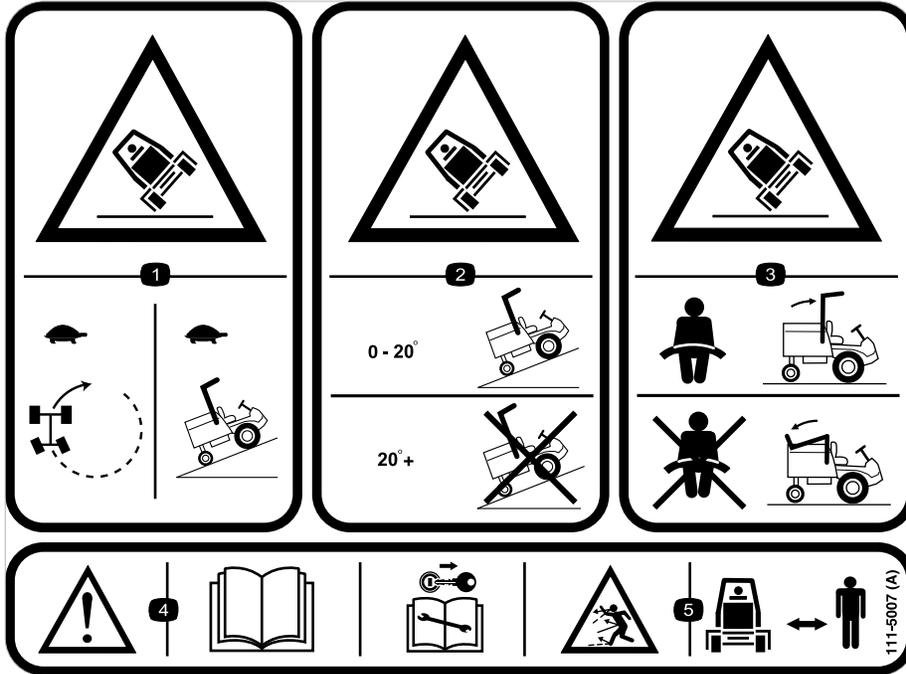

111-5007

1. Tipping hazard—slow machine before turning and when using on slopes.
2. Tipping hazard—operate on slopes less than 20 degrees, do not operate on slopes greater than 20 degrees.
3. Tipping hazard—always wear the seat belt when a roll over protection system (ROPS) is in use, do not wear a seat belt when the ROPS bar is lowered.
4. Warning—read the *Operator's Manual*, remove the ignition key before performing any maintenance.
5. Thrown object hazard—keep bystanders a safe distance from the machine.



111-3901

1. Transmission oil—read the *Operator's Manual* for more information.

# Setup


## Media and Additional Parts

Description	Qty.	Use
Operator's Manual	1	Read the manuals before operating the machine.
Engine operator's manual	1	
Parts Catalog	1	Use the parts catalog to look up and order parts.
CE certificate	1	The certificate indicates CE compliance.

Store all documentation in a safe place for future use.

**Note:** Determine the left and right sides of the machine from the normal operating position.

## Product Overview

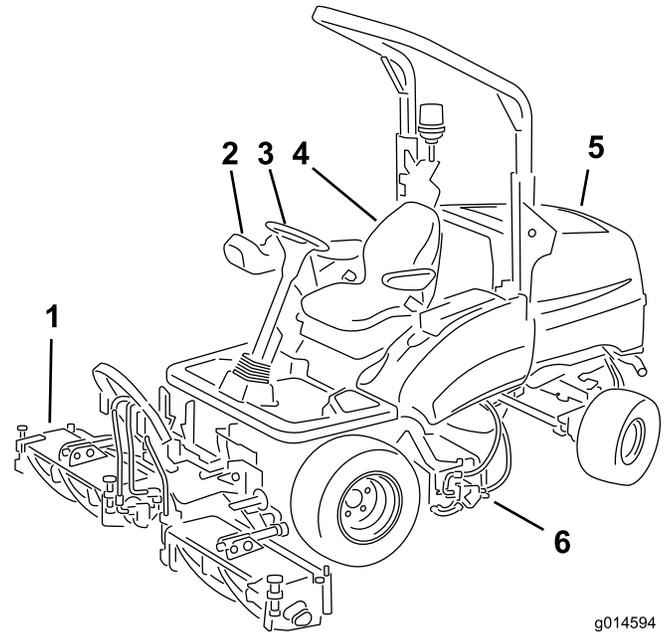

**Figure 2**

- |                        |                      |
|------------------------|----------------------|
| 1. Front cutting units | 4. Operator's seat   |
| 2. Control arm         | 5. Engine hood       |
| 3. Steering wheel      | 6. Rear cutting unit |

# Controls

## Control Panel Components

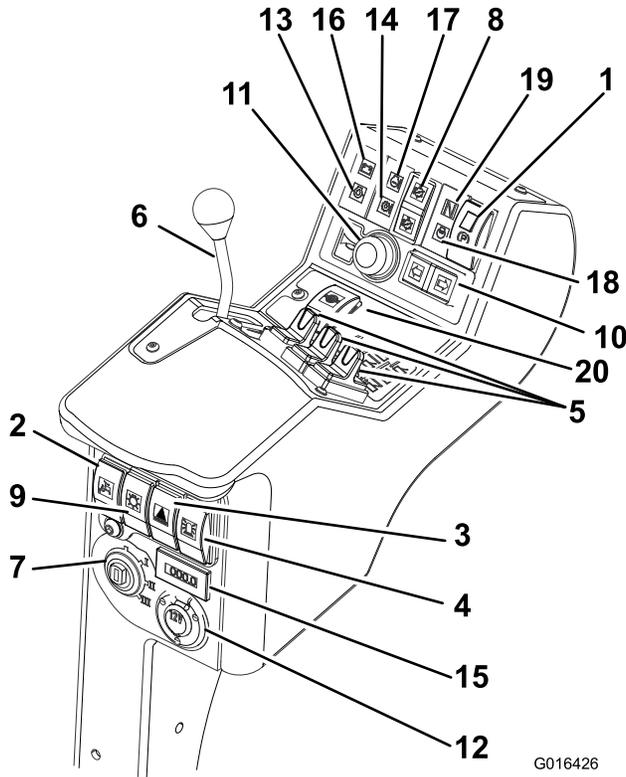


Figure 3

G016426

- |   |  |
|---|--|
| 1. Parking brake switch                                     | 11. Horn button  |
| 2. Limited lift in reverse switch                           | 12. Auxiliary 12 volt socket (supplied with a 12V kit) |
| 3. Hazard warning switch (supplied with lighting kit)       | 13. Engine oil pressure indicator                      |
| 4. Warning beacon switch (supplied with beacon kit)         | 14. Transmission temperature indicator                 |
| 5. Cutterheads position controls                            | 15. Hour meter   |
| 6. Throttle control lever                                   | 16. Battery warning indicator                          |
| 7. Ignition switch  | 17. Engine temperature warning indicator               |
| 8. Cutterheads drive switch                                 | 18. Glow plug indicator                                |
| 9. Lighting switch (supplied with lighting kit)             | 19. Transmission neutral indicator                     |
| 10. Direction indicator switch (supplied with lighting kit) | 20. Differential lock switch                           |

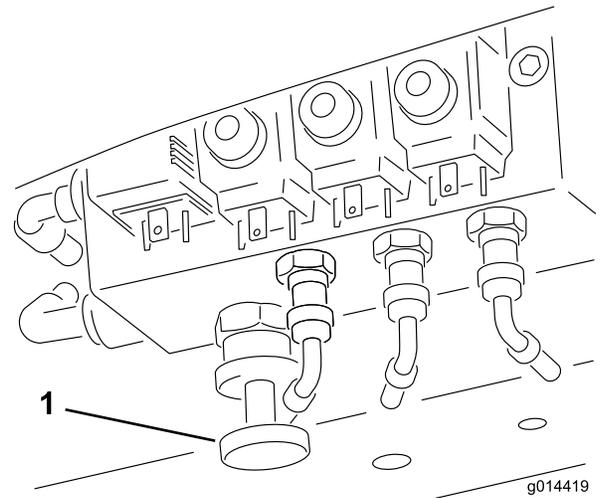


Figure 4

g014419

1. Weight transfer control

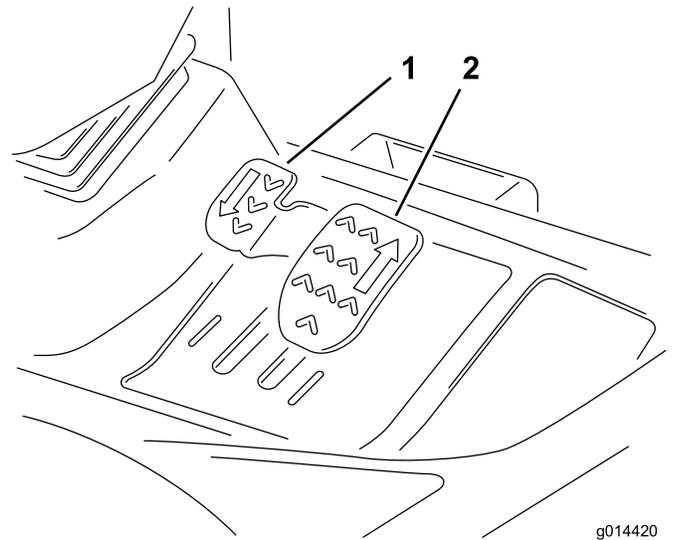


Figure 5

g014420

1. Reverse travel pedal
2. Forward travel pedal

## Braking System

### Parking Brake

Move the parking brake switch to the forward position by pressing the smaller locking button and moving the switch forward to engage the parking brake (Figure 6).

**Note:** Do not operate the mower with the parking brake engaged and do not engage the parking brake while the mower is moving.

This light illuminates when the parking brake is engaged and the ignition key is turned to position I.

### **⚠ WARNING**

The parking brake operates on the front wheels only. Do not park the mower on a slope.

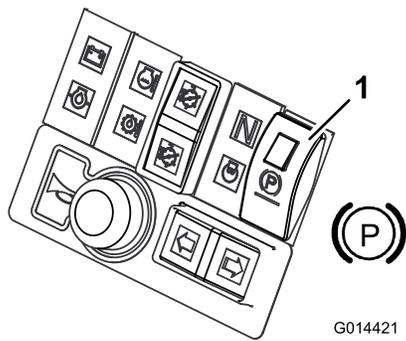


Figure 6

1. Parking brake

## Service Brake

Service braking is achieved by the hydraulic transmission system. When the forward or reverse travel pedals are released or the engine speed is reduced, service braking becomes effective and travel speed is automatically reduced. To increase the braking effect, push the transmission pedal into the neutral position. Service braking is effective on the front wheels only.

### ⚠ WARNING

The service braking system will not hold the mower at a standstill. Always ensure that the parking brake is engaged to park the mower at a standstill.

### Emergency Brake

In the event of service brake failure, turn the ignition off to bring the mower to a standstill.

### ⚠ WARNING

Take care when using the emergency braking. Remain seated and hold on to the steering wheel to prevent ejection from the mower caused by the front wheel brakes being applied suddenly when travelling.

## Throttle Control

Operate the throttle control in a forward direction to increase the engine speed. Operate the throttle control in a rearward direction to reduce engine speed (Figure 7).

**Note:** The engine speed dictates the speed of the other functions, i.e. travel, cutting cylinder rotation speed, and cutterhead lift speed.

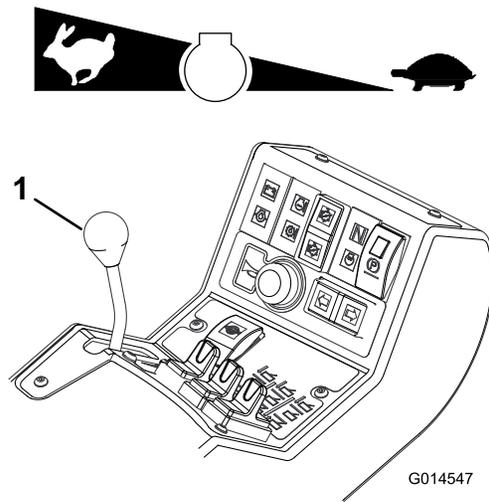


Figure 7

1. Throttle control lever

## Travel

**Forward travel:** Press the forward travel pedal to increase forward travel speed. Release the pedal to reduce speed (Figure 8).

**Reverse travel:** Press the reverse travel pedal to increase reverse travel speed. Release the pedal to reduce speed (Figure 8).

**Stop (Neutral):** Release the forward or reverse travel pedal.

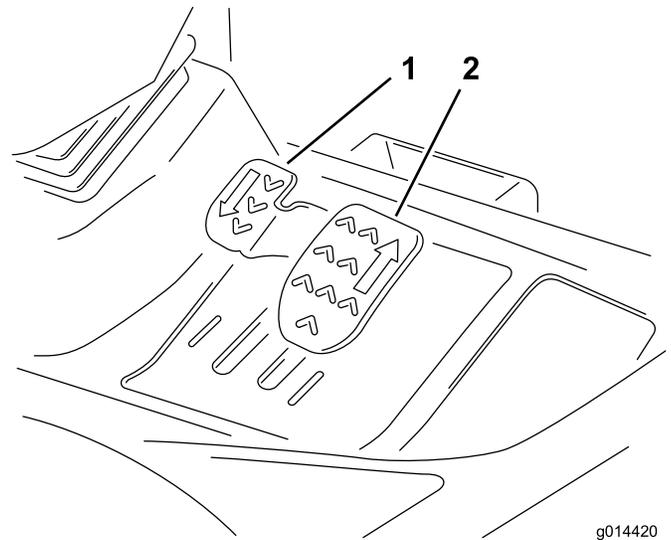


Figure 8

1. Reverse travel pedal
2. Forward travel pedal

## Differential Lock

### ⚠ WARNING

The turning radius increases when the differential lock is engaged. Using the differential lock at high speed may lead to loss of control and cause serious injury and/or property damage.

**Do not use the differential lock at high speed.**


Use the differential lock to prevent excessive wheel spin when the drive wheels lose traction. The differential lock operates in both forward and reverse. You can lock the differential while the machine is traveling slowly. Engine power demand increases when the differential is locked. Prevent excessive power requirements by using the differential lock only at low speed.

To lock the differential, press the differential lock switch.

To unlock the differential, release the differential lock switch.

## Transport Latches

Always raise the cutterheads to the transport position and secure with the transport latches and safety locks when travelling between work areas (Figure 9).

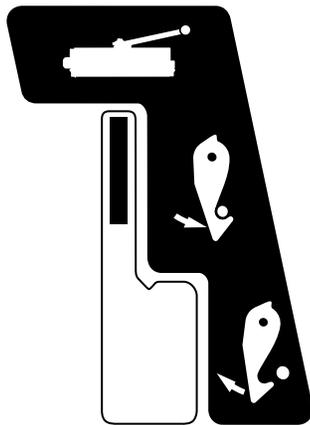

G014548

Figure 9

## Cutterhead Drive Switch

Always put the cutterhead drive switch in the **Off** position when travelling between work areas.

## Adjustable Steering Column

### ⚠ WARNING

Never operate the mower without first checking that the steering column adjuster mechanism is in good working order and that, once adjusted and locked, the steering wheel remains securely in position.

Adjustment of the steering wheel and steering column should only be carried out when the mower is at a standstill with the parking brake engaged.

1. To tilt the steering wheel, press the foot pedal down.
2. Position the steering tower to the most comfortable position and release the pedal (Figure 10).



G014549

Figure 10


## Operator Seat

### **⚠ WARNING**

Never operate the mower without first checking that the operator seat mechanisms are in good working order and that, once adjusted and locked, the seat remains securely in position.

Adjustment of the seat mechanisms should only be carried out when the mower is at a standstill with the parking brake engaged.


- **Fore/Aft Adjustment:** Move the lever upward to adjust the fore/aft position of the seat. Release the lever to lock the seat in position (Figure 11).

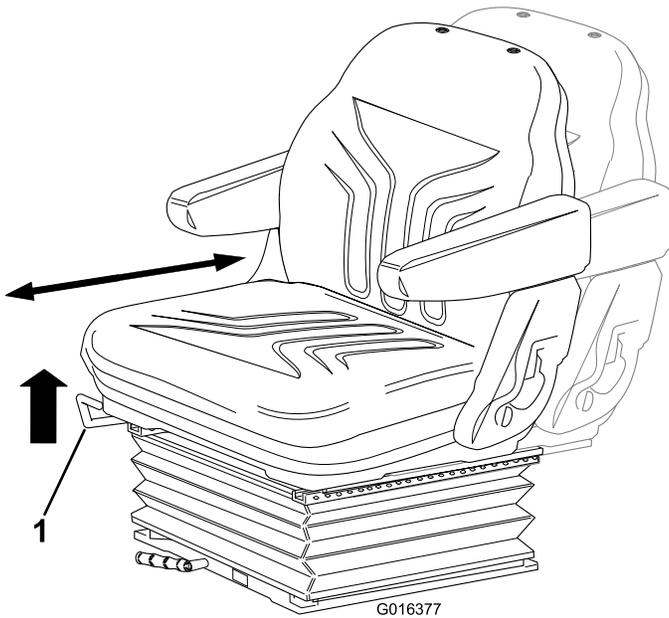

**Figure 11**

1. Lever

- **Operator weight adjustment:** Rotate the handle clockwise to increase suspension stiffness and counterclockwise to decrease the stiffness. The dial indicates when the optimum suspension adjustment has been set according to operator weight (kg); refer to Figure 12.

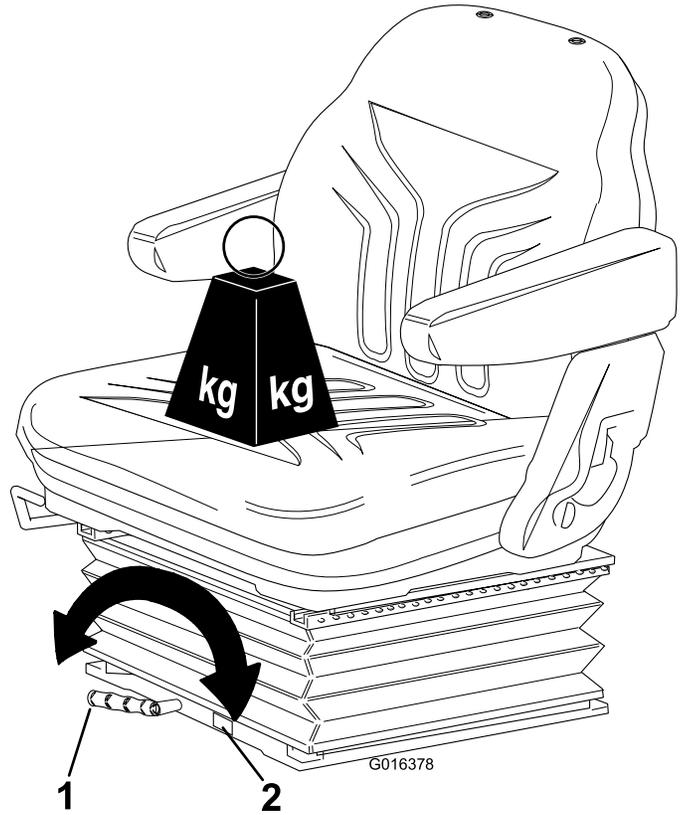


**Figure 12**

1. Lever


2. Dial

- **Height adjustment:** Manually lift the seat for incremental height adjustment. To lower the seat, lift it beyond the highest setting, then allow it to drop to the lowest setting (Figure 13).

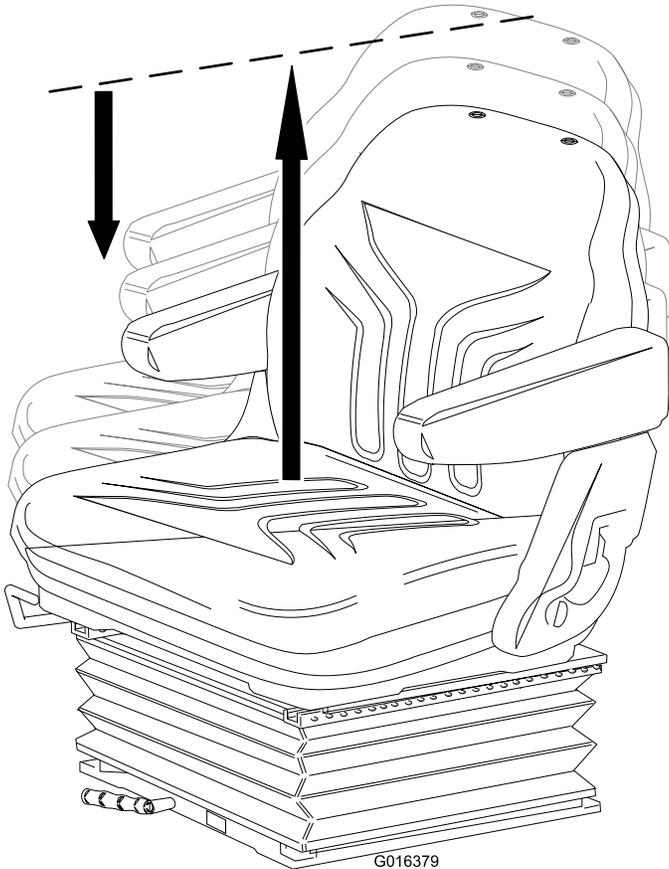

**Figure 13**

- **Backrest adjustment:** Pull the handle outward to adjust the seat backrest angle. Release the handle to lock the seat backrest in position (Figure 14).

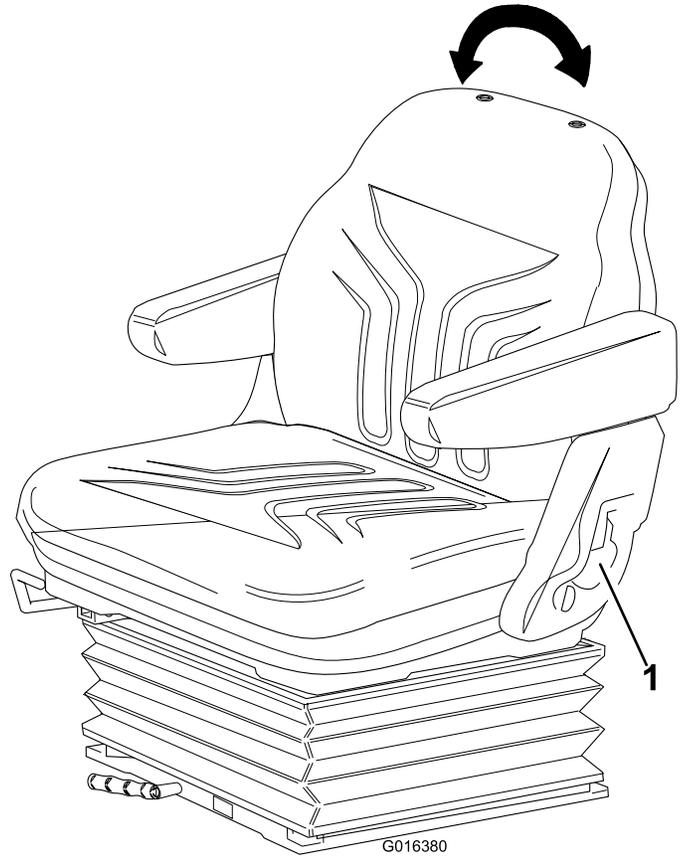



**Figure 14**

1. Handle

# Warning Systems

## Engine Coolant Overheating Warning Light

The engine coolant warning light illuminates, the horn is actuated and the cutters stop (Figure 15).

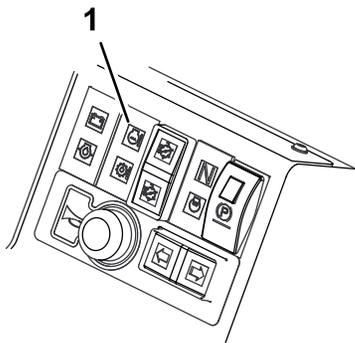


G014551

Figure 15

1. Engine coolant overheating warning light

## Hydraulic Oil Overheating Warning Light

The hydraulic oil warning light illuminates when overheating occurs and the horn is actuated when the hydraulic oil in the reservoir exceeds 95 degrees C (203 degrees F) (Figure 16).

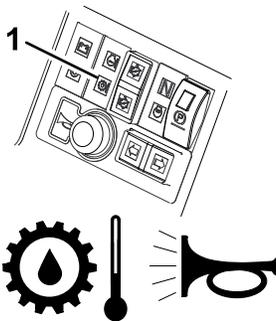


G014552

Figure 16

1. Hydraulic oil overheating warning light

## Low Battery Charge Warning Light

The battery charge warning light illuminates when low battery charge occurs (Figure 17).

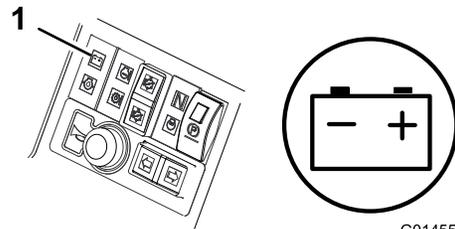


G014553

Figure 17

1. Low battery charge warning light

## Low Engine Oil Pressure Warning Light

The engine oil pressure warning light illuminates when the oil pressure is too low (Figure 18).

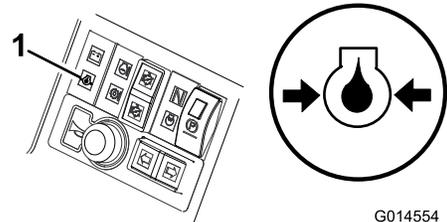

G014554

Figure 18

1. Low engine oil pressure warning light


## Disengagement of Cutting Cylinders

The cutting cylinders will disengage when the operating temperature reaches 115 degrees C.

## Audible Warning Horn

Press the horn button to provide an audible warning (Figure 19).

**Important:** The horn is automatically actuated when an engine coolant or hydraulic oil overheat condition occurs. Stop the engine immediately and fix the machine before starting it again.

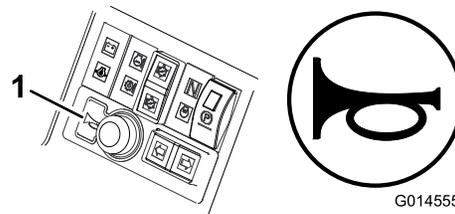

G014555

Figure 19

1. Horn

## Ignition Key

0 = Engine off
I = Engine run/Auxiliary on
II = Engine pre-heat
III = Engine start

### **⚠ WARNING**

Always remove the ignition key when the mower is not in use.

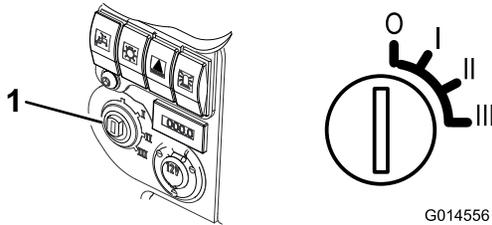


Figure 20

G014556

1. Ignition switch

## Engine Pre-Heat Indicator Light

Turn the ignition key to position **II**. The engine preheat indicator light will illuminate and heat the glow plugs (Figure 21).

**Important:** Attempting to start a cold engine before the pre-heat is used can cause unnecessary wear to the battery.

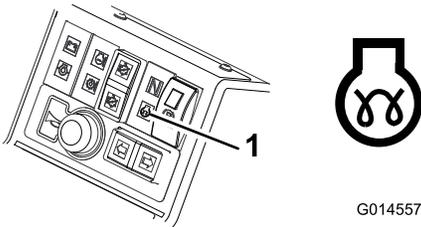


Figure 21

G014557

1. Engine pre-heat indicator light

## Fuel Gauge

The fuel gauge shows the amount of fuel in the tank (Figure 22).




G014558

Figure 22

## Hour Meter

The hour meter shows the total hours that the machine has been operated (Figure 23).

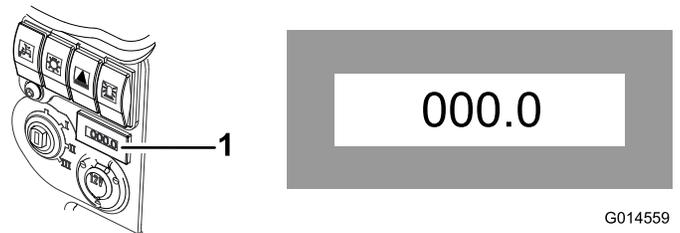

G014559


Figure 23

1. Hour meter

## Transmission Neutral Indicator Light

This light illuminates when the travel control pedal is in the neutral position and the ignition key is turned to position **I** (Figure 24).

**Note:** The parking brake must be engaged for the transmission neutral indicator light to illuminate.

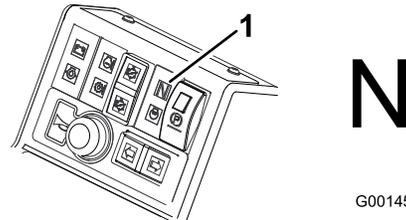


G0014560

Figure 24

1. Transmission neutral indicator light

## Cutterhead Drive Switch Indicator Light

This light illuminates when the cutterhead drive switch is in the forward/reverse position and the ignition key is turned to position I (Figure 25).

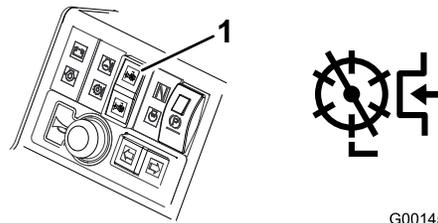

G0014561

**Figure 25**

1. Cutterhead Drive Switch Indicator Light

## Specifications

**Note:** Specifications and design are subject to change without notice.

Specification	LT 3340
Transport Width	157.5 cm (62 inches)
Width of cut	212.0 cm (83.5 inches)
Length	286.0 cm (112.6 inches)
Height	168.1 cm (66.2 inches) with ROPS folded 216.0 cm (85.0 inches) with ROPS in its vertical operating position
Weight	1325 kg (2921 lb)* With fluids and 250mm 6 blade cutterheads
Engine	Kubota 26.5 kw (35.5 hp) at 3000 rpm DIN 70020
Fuel tank capacity	45 litres (11.9 US gallons)
Transport speed	25 km/h (15.5 mph)
Mowing speed	11 km/h (6.85 mph)
Hydraulic system capacity	32 liters (8.5 US gallons)
Engine speed	3000 rpm

## Attachments/Accessories

A selection of Toro approved attachments and accessories is available for use with the machine to enhance and expand its capabilities. Contact your Authorized Service Dealer or Distributor.

To best protect your investment and maintain optimal performance of your Toro equipment, count on Toro genuine parts. When it comes to reliability, Toro delivers replacement parts designed to the exact engineering specification of our equipment. For peace of mind, insist on Toro genuine parts.

# Operation

**Note:** Determine the left and right sides of the machine from the normal operating position.

## ⚠ CAUTION

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Lower the cutting units to the ground, set the parking brake and remove the key from the ignition switch before servicing or making adjustments to the machine.

## Checking the Engine-Oil Level

**Service Interval:** Before each use or daily

The engine is shipped with oil in the crankcase; however, the oil level must be checked before and after the engine is first started.

**Crankcase capacity:** approximately 6.0 L (6.3 US qt) with the filter

Use high-quality engine oil that meets the following specifications:

- API Classification Level Required: CH-4, CI-4 or higher
- Preferred oil: SAE 15W-40 (above 0 degrees F)
- Alternate oil: SAE 10W-30 or 5W-30 (all temperatures)

Toro Premium Engine oil is available from your distributor in either 15W-40 or 10W-30 viscosity.

**Note:** The best time to check the engine oil is when the engine is cool before it has been started for the day. If it has already been run, allow the oil to drain back down to the sump for at least 10 minutes before checking. If the oil level is at or below the **add** mark on the dipstick, add oil to bring the oil level to the **full** mark. **Do not overfill the crankcase.** If the oil level is between the **full** and **add** marks, no oil addition is required.

1. Park the machine on a level surface, stop the engine, set the parking brake and remove the key from the ignition switch.
2. Open the hood.
3. Remove the dipstick, wipe it clean, and install it (Figure 26).

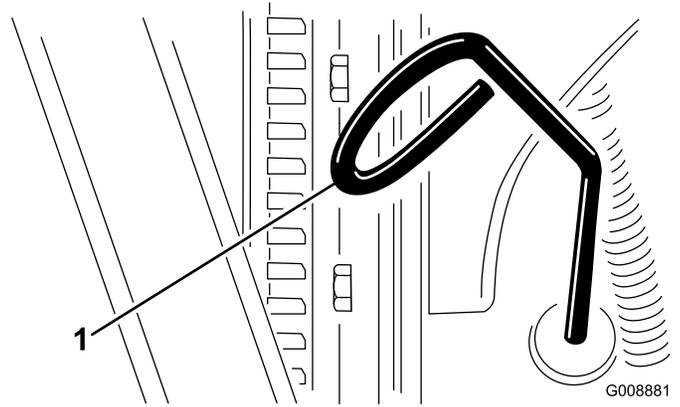


Figure 26

1. Dipstick

4. Remove dipstick and check oil level on dipstick.  
The oil level should be up to the Full mark .
5. If the oil level is below the Full mark, remove the fill cap (Figure 27) and add oil until level reaches the Full mark on dipstick. **Do not overfill.**

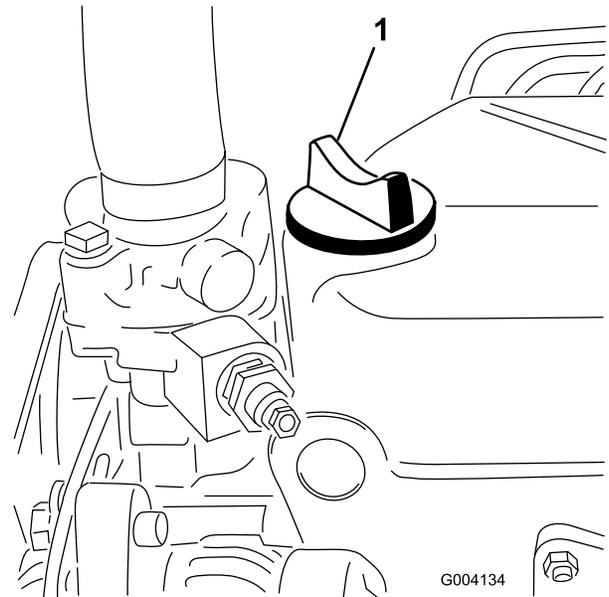


Figure 27

1. Oil fill cap

6. Install the oil fill cap and close the hood.

# Checking the Cooling System

**Service Interval:** Before each use or daily

## ⚠ CAUTION

If the engine has been running, the pressurized, hot coolant can escape and cause burns.

- Do not open the radiator cap when the engine is running.
- Use a rag when opening the radiator cap, and open the cap slowly to allow steam to escape.

The cooling system is filled with a 50/50 solution of water and permanent ethylene glycol antifreeze.

1. Clean debris off of the screen, oil cooler, and front of the radiator daily and more often if conditions are extremely dusty and dirty. Refer to [Removing Debris from the Cooling System \(page 43\)](#).
2. Check the level of the coolant in the expansion tank ([Figure 28](#)).

**Note:** The coolant level should be between the marks on the side of the tank.

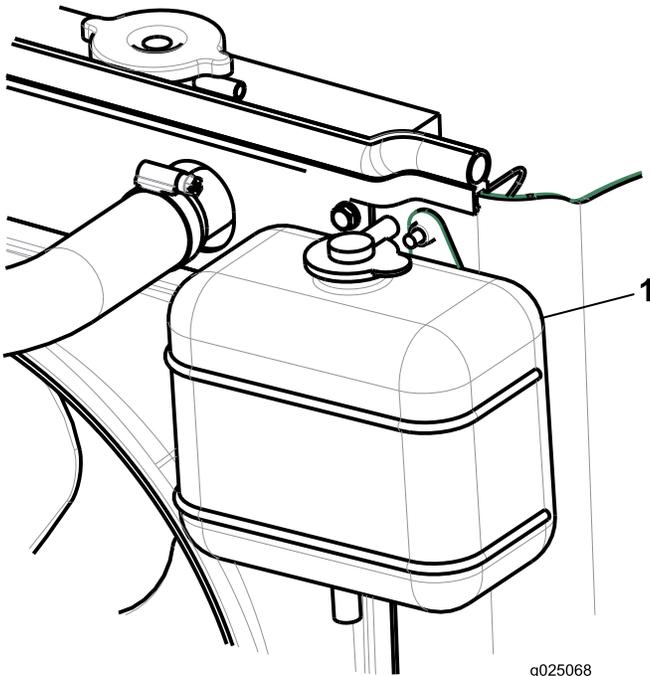


Figure 28

g025068

1. Expansion tank

3. If the coolant level is low, remove the expansion-tank cap and replenish the system.

**Note:** Do not overfill.

4. Install the expansion-tank cap.

# Adding Fuel

**Service Interval:** Before each use or daily

Use only clean, fresh diesel fuel with low (<50 ppm) or ultra-low (<15 ppm) sulfur content. The minimum cetane rating should be 40. Purchase fuel in quantities that can be used within 180 days to ensure fuel freshness.

**Fuel tank capacity:** 45 L (11.9 US gallons)

Use summer grade diesel fuel (No. 2-D) at temperatures above -7° C (20° F) and winter grade (No. 1-D or No. 1-D/2-D blend) below that temperature. Use of winter grade fuel at lower temperatures provides lower flash point and cold flow characteristics which will ease starting and reduce fuel filter plugging.

Use of summer grade fuel above -7° C (20° F) will contribute toward longer fuel pump life and increased power compared to winter grade fuel.

**Important:** Do not use kerosene or gasoline instead of diesel fuel. Failure to observe this caution will damage the engine.

## ⚠ WARNING

Fuel is harmful or fatal if swallowed. Long-term exposure to vapors can cause serious injury and illness.

- Avoid prolonged breathing of vapors.
- Keep face away from nozzle and fuel tank or conditioner opening.
- Keep fuel away from eyes and skin.

## ⚠ DANGER

In certain conditions, fuel is extremely flammable and highly explosive. A fire or explosion from fuel can burn you and others and can damage property.

- Fill the fuel tank outdoors, in an open area, when the engine is cold. Wipe up any fuel that spills.
- Never fill the fuel tank inside an enclosed trailer.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in an approved container and keep it out of the reach of children. Never buy more than a 180-day supply of fuel.
- Do not operate machine without entire exhaust system in place and in proper working condition.

## ▲ DANGER

In certain conditions during fueling, static electricity can be released, causing a spark which can ignite the fuel vapors. A fire or explosion from fuel can burn you and others and can damage property.

- Always place fuel containers on the ground away from your vehicle before filling.
- Do not fill fuel containers inside a vehicle or on a truck or trailer bed because interior carpets or plastic truck-bed liners may insulate the container and slow the loss of any static charge.
- When practical, remove equipment from the truck or trailer and fuel the equipment with the wheels on the ground.

If this is not possible, then fuel such equipment on a truck or trailer from a portable container, rather than from a fuel dispenser nozzle.

- If a fuel dispenser nozzle must be used, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete.

1. Park the machine on a level surface.
2. Using a clean rag, clean the area around the fuel tank cap.
3. Remove the cap from the fuel tank.
4. Fill the tank until the level is to the bottom of the filler neck with diesel fuel.
5. Install the fuel tank cap tightly after filling the tank.

**Note:** If possible, fill the fuel tank after each use. This will minimize possible buildup of condensation inside the fuel tank.

## Checking the Hydraulic Fluid

The reservoir is filled at the factory with approximately 32 L (8.5 US gallons) of high-quality hydraulic fluid. The best time to check the hydraulic oil is when the fluid is cold. The machine should be in its transport configuration. If the oil level is below the 'add' mark on the dipstick, add oil to bring the oil level to the middle of the acceptable range. **Do not overfill the reservoir.** If the oil level is between the 'full' and the 'add' marks, no oil addition is required.

The recommended replacement fluid is:

### Toro Premium All Season Hydraulic Fluid

(available in 19 liter (5 US gallon) containers or 208 liter (55 US gallon) drums—see the parts documentation or your Toro distributor for part numbers)

Alternative fluids: If the Toro fluid is not available, other conventional, petroleum-based fluids may be used, provided

that they meet all of the following material properties and industry specifications. Check with your oil supplier to see whether the oil meets these specifications.

**Note:** Toro will not assume responsibility for damage caused by improper substitutions, so use only products from reputable manufacturers who will stand behind their recommendation.

### High Viscosity Index/Low Pour Point Antiwear Hydraulic Fluid, ISO VG 46 Multigrade

Material Properties:

Viscosity, ASTM D445	cSt @ 40°C (104°F) 44 to 48 cSt @ 100°C (212°F) 7.9 to 9.1
Viscosity index, ASTM D2270	140 or higher (high viscosity index indicates a multiweight fluid)
Pour point, ASTM D97	-36.7°C to -45°C (-34°F to -49°F)
FZG, fail stage	11 or better
Water content (new fluid)	500 ppm (maximum)

Industry Specifications:

Vickers I-286-S, Vickers M-2950-S, Denison HF-0, Vickers 35 VQ 25 (Eaton ATS373-C)

The proper hydraulic fluids must be specified for mobile machinery (as opposed to industrial plant usage), multiweight-type, with ZnDTP or ZDDP antiwear additive package (not an ashless-type fluid).

**Important:** Many hydraulic fluids are almost colorless, making it difficult to spot leaks. A red dye additive for the hydraulic system oil is available in 20 ml (2/3 fl oz) bottles. One bottle is sufficient for 15 to 22 liters (4 to 6 US gallons) of hydraulic oil. Order part 44-2500 from your Authorized Toro Distributor.

### Synthetic, Biodegradable Hydraulic Fluid

(available in 19 liter (5 US gallon) containers or 208 liter (55 US gallon) drums—see the parts documentation or your Toro distributor for part numbers)

This high-quality, synthetic, biodegradable fluid has been tested and found compatible for this Toro model. Other brands of synthetic fluid may have seal compatibility problems and Toro cannot assume responsibility for unauthorized substitutions.

**Note:** This synthetic fluid is not compatible with the Toro Biodegradable Fluid previously sold. See your Toro Distributor for more information.

Alternative fluids:

- Mobil EAL EnviroSyn H 46 (US)
  - Mobil EAL Hydraulic Oil 46 (international)
1. Position the machine on a level surface, lower the cutting units, and stop the engine.
  2. Check the sight level gauge on the side of the tank.

**Note:** The level needs to be at the upper mark.

- If additional hydraulic oil is needed, clean the area around the filler neck and the cap of the hydraulic tank (Figure 29) and remove the cap.

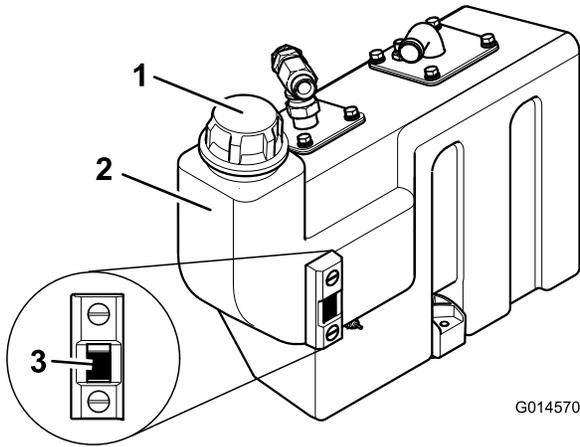


Figure 29

- Hydraulic-tank cap
- Oil tank
- Sight level gauge

- Remove the cap and fill the tank to the upper mark on the sight level gauge.

**Note:** Do not overfill the tank.

- Install the cap onto the tank.

## Checking the Tire Pressure

Check the air pressure in the front and rear tires. Refer to the chart below for the correct pressure.

**Important:** Maintain correct tire pressure in all tires to ensure correct contact with the turf.

Tires	Tire Type	Recommended Tire Pressures		
		Turf Conditions	Road Conditions	Maximum Pressure
Front Axle	26 x 12.0 - 12 BKT turf pattern	0.7 bar (10 psi)	1.4 bar (20 psi)	1.7 bar (25 psi)
Rear Axle	20 x 10.0 - 8 BKT turf pattern	0.7 bar (10 psi)	1.4 bar (20 psi)	1.7 bar (25 psi)

## Checking the Torque of the Wheel Nuts

**Service Interval:** Before each use or daily

Torque the wheel nuts to 200 N-m (148 ft-lb) for the front axle, and 54 N-m (40 ft-lb) for the rear axle.

### ⚠ WARNING

Failure to maintain proper torque of the wheel nuts could result in personal injury.

Ensure that the wheel nuts are torqued properly.

## Think Safety First

Carefully read all safety instructions and symbols in the safety section. Knowing this information could help you or bystanders avoid injury.

### ⚠ DANGER

Operating on wet grass or steep slopes can cause sliding and loss of control.

Wheels dropping over edges can cause rollovers, which may result in serious injury, death, or drowning.

There is no rollover protection when the roll bar is down.

Always keep the roll bar in the fully raised and locked position and use the seat belt.

Read and follow the rollover protection instructions and warnings.

To avoid loss of control and possibility of rollover:

- Do not operate near drop-offs or near water.
- Do not operate on slopes greater than 20 degrees.
- Reduce speed and use extreme caution on slopes.
- Avoid sudden turns or rapid speed changes.

### ⚠ CAUTION

This machine produces sound levels that can cause hearing loss through extended periods of exposure.

Wear hearing protection when operating this machine.

The use of protective equipment for eyes, ears, hands, feet, and head is recommended.

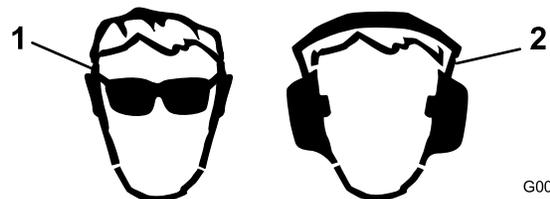


Figure 30

- Wear safety glasses.
- Wear hearing protection.

# Using the Operator Platform Latching Mechanism

Do not operate the mower without first checking that the operator platform latching mechanism is fully engaged and in good working order.

## ⚠ WARNING


Never operate the mower without first checking that the operator platform latching mechanism is fully engaged and in good working order.

## Releasing the Platform

1. Move the locking latch handle towards the front of the mower until the latch hooks clear the locking bar.
2. Raise the platform. The gas spring will provide assistance.

## Securing the Platform

1. Lower the platform carefully.  
**Note:** The gas spring will provide assistance.
2. Move the locking latch handle towards the front of the mower as the platform nears the fully lowered position.  
**Note:** This will ensure that the latch hooks clear the locking bar.
3. Fully lower the platform and move the locking handle towards the rear of the mower until the latch hooks fully engage the locking bar.

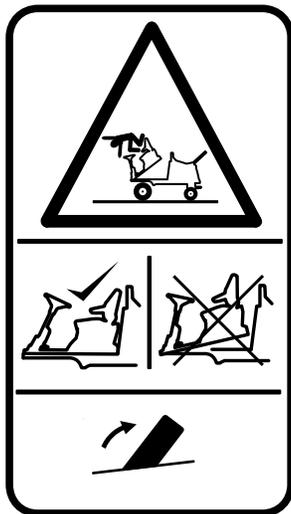

G014422

Figure 31

# Understanding the Operator Presence Controls

**Note:** The engine stops if the operator leaves the seat without engaging the parking brake.

**Engine Start Lockout:** The engine can only be started when the forward/reverse travel pedal is in the **Neutral** position, the cutterhead drive switch is in the **Off** position and the parking brake is engaged. When these circumstances are satisfied, switches are activated permitting the engine to be started.

**Engine Run Interlock:** Once the engine is started the operator must be seated before the parking brake is released for the engine to continue to run.

**Cutting Cylinder Drive Lockout:** The drive to the cutting cylinders is only possible when the operator is seated. If the operator raises off the seat for a period of more than one second, a switch is activated and the drive to the cutting cylinders is automatically disengaged. To engage drive to the cutting cylinders, the operator must return to the seat, then operate the cutterhead drive switch to the **Off** position before moving it back to the **On** position. If the operator rises off the seat for a brief moment during normal work, drive to the cutting cylinders is not affected.

The engine can only be started with the cutterhead drive switch in the **Off** position.

## ⚠ WARNING

Do not operate the turf mower if the operator presence controls are malfunctioning in any way. Always replace damaged or worn parts and check that they function correctly before operating the machine.

## ⚠ CAUTION

If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

# Starting and Stopping the Engine

**Important:** You must bleed the fuel system before starting the engine if you are starting the engine for the first time, the engine has stopped due to lack of fuel, or you have performed maintenance on the fuel system; refer to **Bleeding the Fuel System**.

## ▲ WARNING

Operating the machine in an unsafe manner could result in personal injury.

Before starting the engine, ensure that the following conditions are met:

- You have read and understood the Safety section in this manual.
- The area is clear of bystanders.
- The cutterhead drive is disengaged.
- The parking brake is set.
- The travel control pedals are in neutral.

**Important:** This machine is fitted with an Engine start lockout; refer to [Understanding the Operator Presence Controls](#) (page 24).

## Starting a Cold Engine

1. Sit on the seat, keep your foot off of the traction pedals so that it is in Neutral, engage the parking brake and set the throttle to the 70 percent full throttle position.
2. Turn the ignition key to the ignition on position **I** and check that the engine oil pressure and battery charge warning lights illuminate.
3. Turn the ignition key to the preheat position **II** so that the pre-heat indicator light is on. Hold it for 5 seconds to heat the glow plugs.
4. After preheating the glow plugs, turn key to the start position **III** and hold to crank the engine.

Crank the engine for no longer than 15 seconds. Release the ignition key back to position **I** when the engine starts.

5. Run the engine at low idle speed until it warms up.

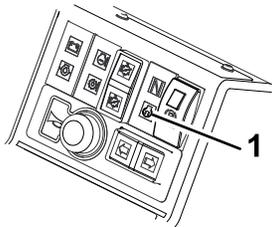


Figure 32

1. Engine pre-heat indicator light



G014557

## Starting a Warm Engine

1. Sit on the seat, keep your foot off of the traction pedal so that it is in Neutral, engage the parking brake and set the throttle to the 70 percent full throttle.
2. Turn the ignition key to the ignition on position **I** and check that the engine oil pressure and battery charge warning lights illuminate.
3. Turn the ignition key to the start position **III** and hold to crank the engine.

Crank the engine for no longer than 15 seconds. Release the ignition key back to position **I** when the engine starts.

4. Run the engine at low idle speed until it warms up.

## Stopping the Engine

1. Move all controls to Neutral, set the parking brake, move the throttle to the low idle position and allow the engine to reach low idle speed.

**Important:** Allow the engine to idle for 5 minutes before shutting it off after a full load operation. Failure to do so may lead to trouble on a turbo-charged engine.

2. Let the engine idle for 5 minutes.
3. Turn the ignition key to position **0**.

If the engine fails to stop when the ignition key is turned to **0**, operate the engine stop lever in forward direction (Figure 33).

## ▲ WARNING

Keep hands clear of moving objects and hot engine parts while the engine is running.

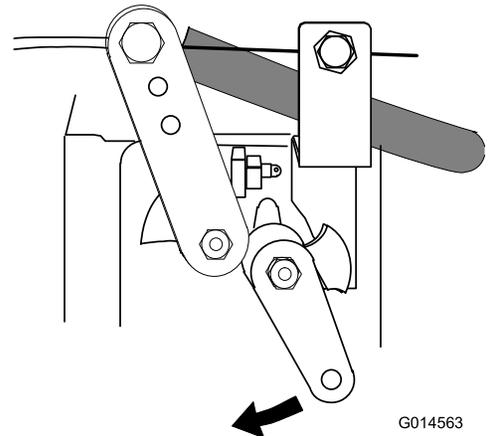


Figure 33

G014563

## ▲ WARNING

When the engine is operating all warning lights should be off. If a warning light illuminates, stop the engine immediately and have the fault rectified before restarting.

## Using the Grass Deflectors

The rear grass deflectors must always be correctly fitted. The deflectors should be set as low as possible to deflect grass discharge to the ground (Figure 34).

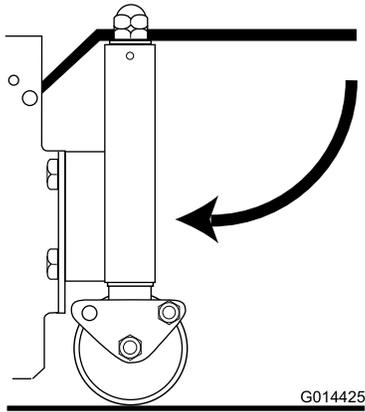


Figure 34

## Adjusting the Center Cutterhead Height-of-Cut Correction

With all cutterheads set at the same HOC via the indicator rings, it may be noticeable that the center unit produces a higher cut finish compared to the wing units. The center unit is pulled and the wing units are pushed; this presents marginally different cutting angles relative to the ground. The amount of HOC variation which results from this will be influenced by the terrain, but satisfactory results can usually be achieved by setting the center cutterhead HOC indicator ring lower than the wing unit settings.

## Controlling the Position of the Individual Cutterheads

The cutterheads may be raised or lowered independently using the bank of 3 lift control switches.

1. To lower the cutterheads, operate the lift control switches in a downward direction and release.

The cutterhead drive switch must be on (forward) to do this, the cylinder drive will engage when the cutterheads are approximately 150 mm (6 inches) above ground level. The cutterheads are now in 'float' mode and will follow the ground contours.

2. To raise the cutterheads, operate the lift control switches in an upward direction and hold in position 3. If the cutterhead drive switch is in the **On** position the cylinder drive will disengage immediately.
3. Release the lift control switches when the cutterheads are at the required height.

The control switches will automatically return to position 2 (neutral) and the arms are hydraulically locked into position.

## Adjusting the Cutterhead Auto Limited Lift

To activate, press the Auto Limited Lift switch to the On position (Figure 35).

To deactivate, press the Auto Limited Lift switch to the Off position (Figure 35).

Manual limited lift using the 3 lift control switches is always available regardless of the position of the Auto switch.

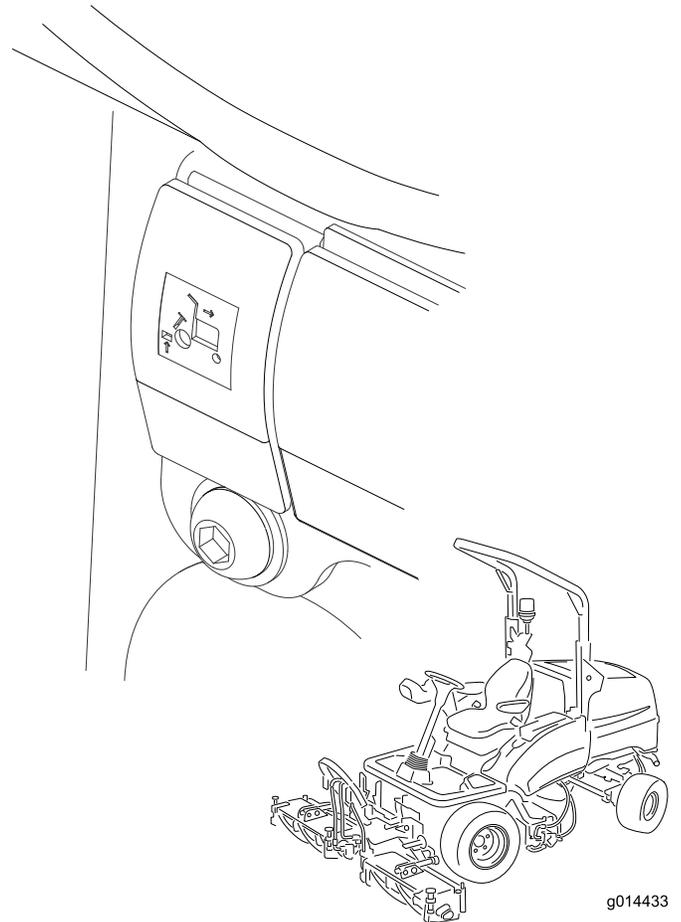


Figure 35

**To raise the cutterheads to the limited lift position:** momentarily operate the switches in an upward direction.

The cylinder drive will disengage immediately and the cutterheads will stop raising, approximately 150 mm (6 inches) above ground level.

This operates with the cutterheads lowered and rotating.

Auto limited lift in reverse causes the cutterheads to rise automatically to the limited lift position when reversing. They will return to the floating position when returning to forward

travel. The cutting cylinders continue to rotate during this operation.

## Engaging the Cutterhead Drive

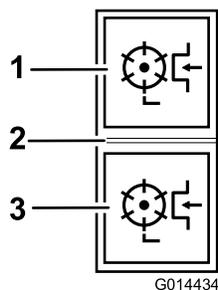


Figure 36

1. Forward
2. Off
3. Reverse

The cutterhead drive can be engaged only when the operator is seated correctly, refer to [Checking the Operator Presence Seat Switch](#) (page 44).

**Forward rotation cutterhead drive engagement:** Press the top of the cutterhead drive switch to the forward position (Figure 36).

**Reverse rotation cutterhead drive engagement:** Press the bottom of the cutterhead drive switch to the reverse position (Figure 36).

**All cutterhead drives disengagement:** Set the switch to the middle position (Figure 36).

**To lower the cutterheads:** The cutterhead drive switch must be set to forward. Operate the lift control switch(s) in a downward direction. The cylinder will drive when the cutterheads are approximately 150 mm (6 inches) above ground level.

## Clearing the Cutting Cylinders

### ⚠ WARNING

Never attempt to rotate the cutting cylinders by hand.

- There may be some residual pressure in the hydraulic system which could cause injury through sudden movement of the cylinder(s) when the blockage is released.
- Always wear protective gloves and use a suitable strong wooden instrument.
- Ensure that the wooden instrument will fit between the blades and through the cylinder and is long enough to provide sufficient leverage to release the blockage.

1. Stop the machine on level ground.
2. Apply the parking brake and disengage all drives.
3. Lower the cutting units to the ground or securely lock in the designated transport positions.
4. Stop the engine and remove the ignition key to isolate all power sources and check that they are stopped.
5. Release all stored energy devices.
6. Check that all moving parts are stationary.
7. Using a suitable strong wooden instrument, remove the blockage. Make sure that the wooden instrument is properly supported in the cylinder and avoid the use of excessive force to prevent damage.
8. Ensure that the wooden instrument is removed from the cutting cylinder before restarting the power source.
9. Repair or adjust the cylinder if required.


## Using Weight Transfer / Traction Assistance

A variable hydraulic weight transfer system is provided for improving tire grip with the grass surface—traction assistance.

Hydraulic pressure in the cutterheads lift system provides a lifting force which reduces the weight of the cutterheads on the ground and transfers the weight as a downward force onto the tires of the machine. This action is known as weight transfer.

**To engage weight transfer:** The amount of weight transfer can be varied to suit operating conditions by rotating the weight transfer hand wheel (Figure 37) as follows:

1. Release the valve lock nut 1/2 turn counterclockwise and hold (Figure 37).
2. Rotate the valve hand wheel (Figure 37) counterclockwise to reduce weight transfer or clockwise to increase weight transfer.
3. Tighten the nut.

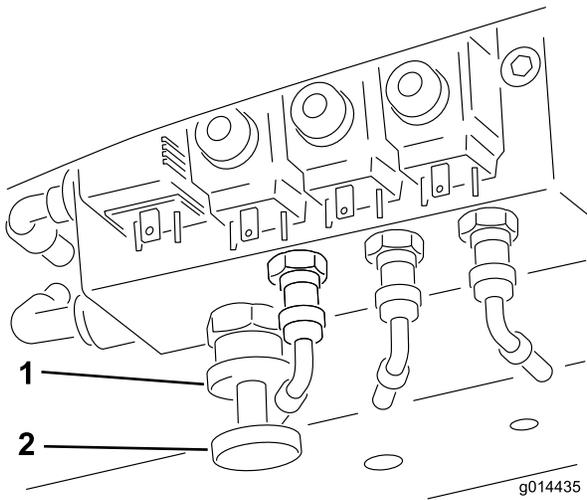

**Figure 37**

- 1. Lock Wheel
- 2. Weight transfer hand wheel


## Folding the ROPS

You can fold the ROPS frame down to allow access into areas of restricted height.

### **⚠ WARNING**

**While the ROPS frame is folded down it does not provide any protection in the event of a roll-over and should not be considered as a Roll Over Protective Structure.**

1. Apply the parking brake and switch off the engine.
2. Support the weight of the upper frame while removing the hand nuts, washers and retaining bolts from the pivot brackets (Figure 38).
3. Carefully lower the frame downwards until it rests on the stops.
4. Insert the retaining bolts in the lower holes and fully tighten the hand nuts to support the upper frame in its lowered position.
5. To raise the frame, follow these instructions in reverse order.

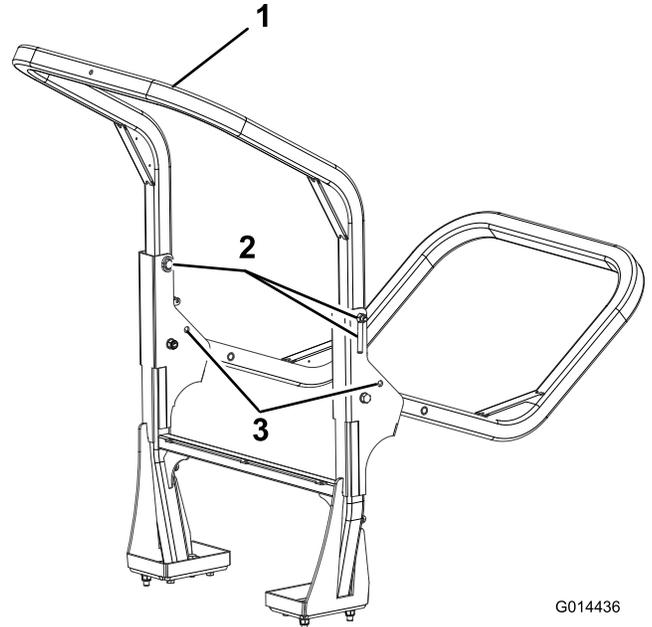

**Figure 38**

- 1. Upper frame
- 2. Hand nuts, washers, and retaining bolts
- 3. Lower holes

### **⚠ WARNING**

**When in the raised position, both retaining bolt assemblies must be installed and fully tightened to ensure full ROPS protection.**

## ▲ WARNING

Be careful lowering and raising the ROPS frame to prevent entrapment of fingers between fixed part and pivot part of the structure.

- Keep all nuts, bolts and screws correctly torqued ensure that the equipment is in safe working condition.
- Replace worn or damaged parts for safety.
- Ensure that the Seat Belt and Mountings are in safe working order.
- Wear the seat belt when the roll bar is raised and no seat belt when the roll bar is lowered.

**Important:** The roll bar is an integral and effective safety device. Keep the roll bar in the raised position when operating the mower. Lower the roll bar temporarily only when absolutely necessary.

## Locating the Jacking Points

**Note:** Use jack stands to support the machine when required.

## ▲ WARNING

Mechanical or hydraulic jacks may fail to support the machine and cause serious injury.

Use jack stands when supporting the machine.

- Front—under the front arm mount
- Rear—axle tube on the rear axle

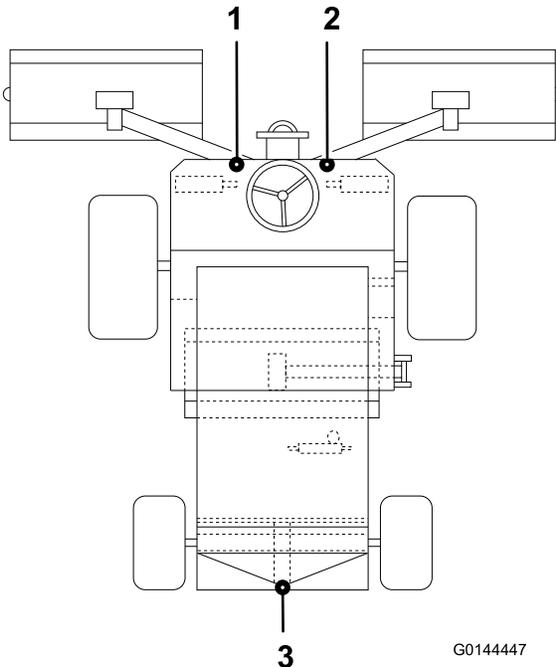


Figure 39

1. Front left-hand lifting point
2. Front right-hand lifting point
3. Rear lifting point

## Transporting the Machine

Use a heavy-duty trailer or truck to transport the machine. Ensure that the trailer or truck has all necessary brakes, lighting, and marking as required by law. Please carefully read all the safety instructions. Knowing this information could help you, your family, pets, or bystanders avoid injury.

To transport the machine:

1. If using a trailer, connect it to the towing vehicle and connect the safety chains.
2. If applicable, connect the trailer brakes.
3. Load the machine onto the trailer or truck.
4. Stop the engine, remove the key, set the brake, and close the fuel valve.
5. Securely fasten the machine to the trailer or truck with straps, chains, cable, or ropes.

## Loading the Machine

Use extreme caution when loading the machine onto a trailer or a truck. One full-width ramp that is wide enough to extend beyond the front tires of the machine is recommended instead of individual ramps for each tire (Figure 40). If it is not possible to use one full-width ramp, use enough individual ramps to simulate a full-width continuous ramp.

The ramp should be long enough so that the angles do not exceed 15 degrees (Figure 40). A steeper angle may cause mower components to get caught as the unit moves from the ramp to the trailer or truck. Steeper angles may also cause the machine to tip backward. If loading the machine on or near a slope, position the trailer or truck so that it is on the down side of the slope and the ramp extends up the slope. This will minimize the ramp angle. The trailer or truck should be as level as possible.

**Important:** Do not attempt to turn the machine while on the ramp; you may lose control and drive off the side.

## ▲ WARNING

Loading a machine onto a trailer or truck increases the possibility of tipping over and could cause serious injury or death.

- Use extreme caution when operating a machine on a ramp.
- Use the ROPS (in up position) while using the seat belt when loading the machine. Ensure that the ROPS clears the top of an enclosed trailer.
- Use only a single, full-width ramp.
- If individual ramps must be used, use enough ramps to create an unbroken ramp surface wider than the machine.
- Do not exceed a 15-degree angle between the ramp and the ground or between the ramp and the trailer or truck.
- Avoid sudden acceleration or deceleration while driving the machine up or down a ramp.

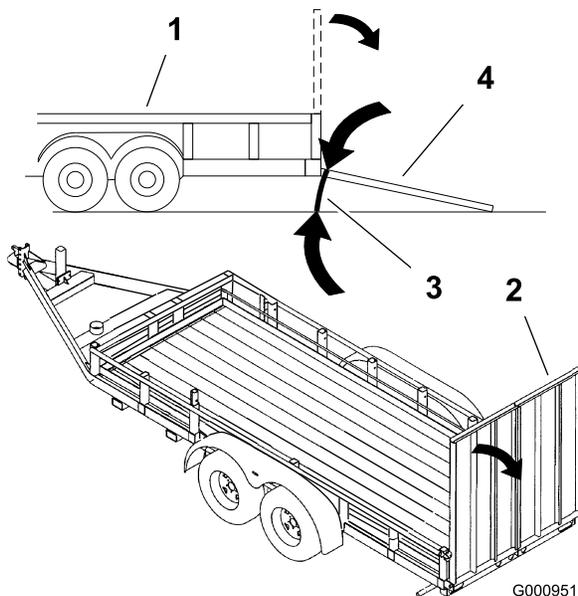


Figure 40

- |                    |                                |
|--------------------|--------------------------------|
| 1. Trailer         | 3. Not greater than 15 degrees |
| 2. Full-width ramp | 4. Full-width ramp—side view   |

## Towing the Machine

Ensure that the towing vehicle specification is suited to braking the combined vehicle weight and able to remain in complete control at all times. Ensure that the parking brake of the towing vehicle is applied. Chock the mower front wheels to prevent the mower from rolling away.

**Important:** Do not tow the machine faster than 3 to 5 km/h (2 to 3 mph), otherwise internal transmission damage may occur.

Decommission the front wheel motor disc brakes as follows:

1. Connect a **rigid** tow bar between the towing eye on the front of the mower and a suitable towing vehicle.
2. Identify the right-hand front wheel motor disc brake assembly and remove the hex plug (Figure 41).

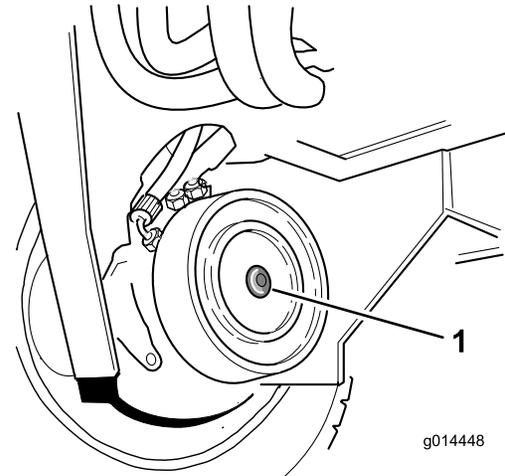


Figure 41

1. Hex plug

3. Locate the M12 x 40 mm setscrew and washer stored underneath the operator platform, one in each of the platform support rails.
4. Install a M12 x 40 mm long setscrew with washer into the hole in the center of the motor end plate (Figure 42).

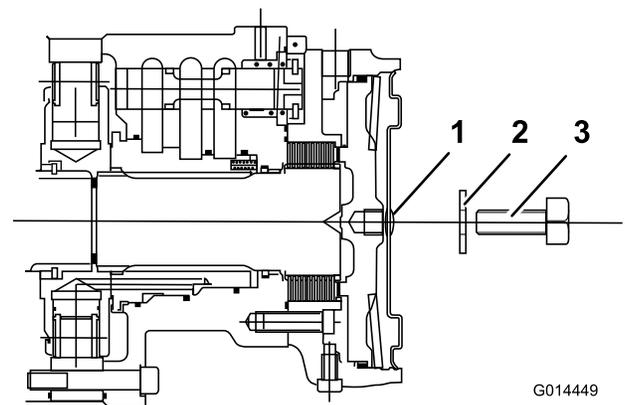



Figure 42

- |               |                      |
|---------------|----------------------|
| 1. Hex plug   | 3. Setscrew M12 x 40 |
| 2. Washer M12 |                      |

5. Tighten the setscrew into the threaded hole in the brake piston until the brake is released (Figure 42).

6. Identify the left-hand front wheel motor disc brake assembly and repeat the previous procedure (Figure 42).
7. Decommission the hydraulic service braking system by turning the bypass valve, located under the transmission pump, counterclockwise, a maximum of 3 turns (Figure 43).

The steering must be operated manually when the mower is being towed. The steering will feel heavy as there is no hydraulic assistance when the engine is switched off.

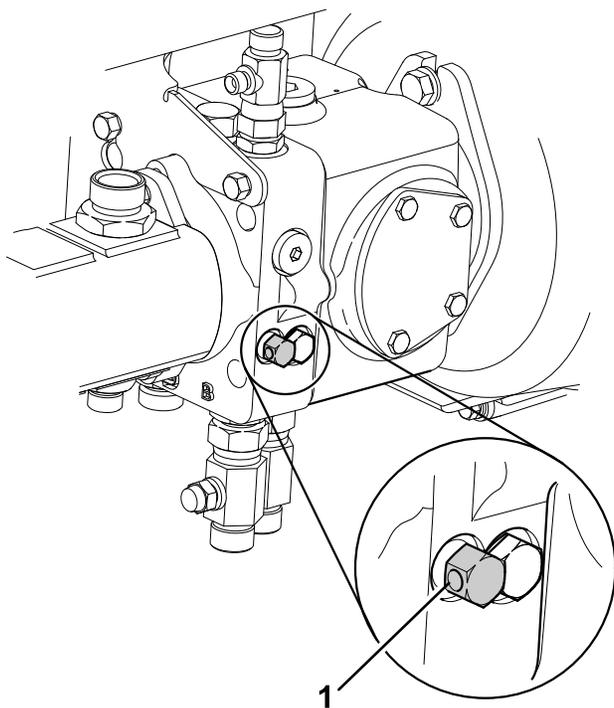

**Figure 43**

1. Transmission bypass valves

8. The mower is now in a freewheel condition and can be towed for a short distance at slow speed.

**Note:** Remove the wheel chocks before towing.

9. **After towing the mower:** To return the mower to its normal working condition the following procedure must be done:


- A. Chock the front wheels.
- B. Close the bypass valve on the transmission pump by turning it clockwise.

10. **Commission the front wheel motor disc brakes as follows:**

**Note:** Ensure that the M12 x 40 mm setscrews and washers are removed and stored underneath the operator platform.

- A. Identify the right-hand front wheel motor disc brake assembly.

- B. Rotate the setscrew counterclockwise and remove together with the washer.
- C. Assemble the hex plug into the motor end plate (Figure 44).

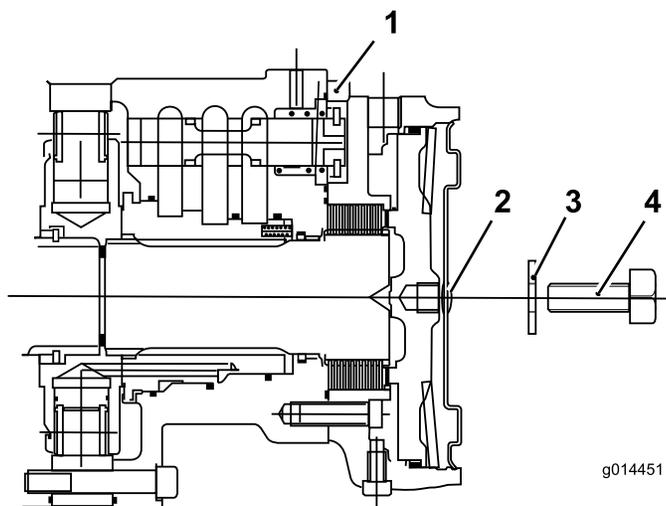

**Figure 44**

- |                     |                         |
|---------------------|-------------------------|
| 1. Front wheel moto | 3. Washer M12           |
| 2. Hex plug         | 4. Setscrew M12 x 40 mm |

- D. Identify the left-hand front wheel motor disc brake assembly and repeat the previous procedure.
- E. Remove the wheel chocks.
- F. Disconnect the tow bar.

**Note:** The mower braking system will now operate in the normal way.

## ⚠ WARNING

**Before using the mower, ensure that the braking system operates correctly. Carry out initial checks with the mower at slow speed. Do not operate the mower with a damaged braking system. Do not operate the mower with the brakes decommissioned.**

## Operating Tips

### Becoming Familiar with the Machine

Before mowing grass, practice operating the machine in an open area. Start and stop the engine. Operate in forward and reverse. Lower and raise the cutting units and engage and disengage the cutterheads. When you feel familiar with the machine, practice operating up and down slopes at different speeds.

### Understanding the Warning System

If a warning light comes on during operation, stop the machine immediately and correct the problem before

continuing operation. Serious damage could occur if you operate the machine with a malfunction.

## Mowing Grass

The rotational speed of the cutting cylinders should always be kept as high as possible in order to maintain the highest quality of cut. This in turn requires that the engine speed be kept as high as possible.

Cutting performance is best when cutting against the lie of the grass. In order to take advantage of this fact, the operator should attempt to alternate the direction of mowing between cuts.

Take care not to leave uncut strips of grass at the overlap points between adjacent cutterheads by avoiding tight turns.

## Maximizing the Quality of Cut

The quality of cut will deteriorate if the forward speed is excessive. Always balance the quality of cut with the work rate required and set the forward speed accordingly.

## Maximizing Engine Efficiency

Do not let the engine labor. If you notice that the engine starts to labor, reduce the forward speed or increase the height of cut. Check that the cutting cylinders are not in heavy contact with their bottom blades.

## Driving the Machine in Transport Mode

Always disengage the cutterhead drive when travelling across un-grassed areas. Grass will lubricate the cutting edges whilst mowing. Excessive heat will build up if the cutting cylinders are run when not mowing and this will cause rapid wear to take place. For this reason it is also wise to reduce cutting speed when mowing lightly grassed areas or when the grass is dry. Be careful when driving between objects so that you do not accidentally damage the machine or the cutting units.

### **▲ WARNING**

**Take care when travelling over obstacles such as roadside curbs. Always travel at slow speed over obstacles to prevent damage to the tires, wheels, and steering system. Ensure that the tires are inflated to the recommended pressures.**

## Operating the Machine on Slopes

Use extra care when operating the machine on slopes. Drive slowly and avoid sharp turns on slopes to prevent rollovers. Lower the cutting units for steering control when going downhill.

## Using the Rear Roller Scrapers

It is generally wise to remove rear roller scrapers where conditions allow, as optimum grass discharge is achieved

without them. Install the scrapers when conditions are such that mud and grass start to build up on the rollers. When installing the scraper wires, ensure that they are correctly tensioned.

# Maintenance

**Note:** Determine the left and right sides of the machine from the normal operating position.

**Note:** To obtain an electrical schematic or a hydraulic schematic for your machine, visit [www.Toro.com](http://www.Toro.com).

## Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
After the first 8 hours	<ul style="list-style-type: none"> <li>• Check the condition and tension of the alternator belt.</li> </ul>
After the first 50 hours	<ul style="list-style-type: none"> <li>• Change the engine oil and filter.</li> <li>• Change the transmission oil filter.</li> <li>• Change the hydraulic return filter.</li> <li>• Check the engine speed (idle and full throttle).</li> </ul>
Before each use or daily	<ul style="list-style-type: none"> <li>• Check the engine-oil level.</li> <li>• Check the cooling system.</li> <li>• Check fuel level.</li> <li>• Check the hydraulic fluid level.</li> <li>• Torque the wheel lug nuts.</li> <li>• Check the tire pressure.</li> <li>• Grease the bearings, bushings and pivots (grease them immediately after every washing regardless of the interval listed).</li> <li>• Check the air cleaner blockage indicator (service the air cleaner earlier if the air cleaner indicator shows red; service it more frequently in extremely dirty or dusty conditions).</li> <li>• Remove debris from the screen, oil coolers, and radiator (more frequently in dirty operating conditions).</li> <li>• Check the safety interlock system.</li> <li>• Check the hydraulic lines and hoses for leaks, kinked lines, loose mounting supports, wear, loose fittings, weather deterioration, and chemical deterioration.</li> </ul>
Every 50 hours	<ul style="list-style-type: none"> <li>• Grease the bearings, bushings and pivots (grease them immediately after every washing regardless of the interval listed).</li> </ul>
Every 100 hours	<ul style="list-style-type: none"> <li>• Inspect the cooling system hoses.</li> <li>• Check the condition and tension of the alternator belt.</li> </ul>
Every 150 hours	<ul style="list-style-type: none"> <li>• Change the engine oil and filter.</li> </ul>
Every 200 hours	<ul style="list-style-type: none"> <li>• Drain moisture from the fuel and hydraulic fluid tanks.</li> </ul>
Every 250 hours	<ul style="list-style-type: none"> <li>• Check the condition of the battery.</li> <li>• Check the condition of and clean the battery.</li> <li>• Check the battery cable connections.</li> <li>• Check the transmission control cable.</li> </ul>
Every 400 hours	<ul style="list-style-type: none"> <li>• Check the fuel lines and connections.</li> <li>• Check the engine speed (idle and full throttle).</li> </ul>
Every 500 hours	<ul style="list-style-type: none"> <li>• Check the engine overheat warning system.</li> <li>• Replace the primary air filter (more frequently in extreme dusty or dirty conditions).</li> <li>• Replace the fuel filter.</li> <li>• Check the electrical system.</li> <li>• Change the transmission oil filter.</li> <li>• Change the hydraulic return filter.</li> <li>• Check the rear wheel alignment.</li> <li>• Service the hydraulic system.</li> <li>• Check the hydraulic oil overheat warning system.</li> <li>• Replace the fuel filter.</li> </ul>
Every 800 hours	<ul style="list-style-type: none"> <li>• Drain and clean the fuel tank</li> <li>• Adjust the engine valves (refer to the engine operator's manual).</li> </ul>

Maintenance Service Interval	Maintenance Procedure
Before storage	<ul style="list-style-type: none"> <li>• Drain and clean the fuel tank</li> </ul>
Every 2 years	<ul style="list-style-type: none"> <li>• Flush and replace the cooling system fluid.</li> <li>• Replace all moving hoses.</li> <li>• Replace the transmission cable (contact your Authorized Toro Distributor).</li> </ul>

## Daily Maintenance Checklist

Duplicate this page for routine use.

Maintenance Check Item	For the week of:						
	Mon.	Tues.	Wed.	Thurs.	Fri.	Sat.	Sun.
Check the safety interlock operation.							
Check the brake operation.							
Check the engine oil and fuel level.							
Check the air filter restriction indicator.							
Check the radiator and screen for debris.							
Check unusual engine noises. <sup>1</sup>							
Check unusual operating noises.							
Check the hydraulic system oil level.							
Check hydraulic hoses for damage.							
Check for fluid leaks.							
Check the tyre pressure.							
Check the instrument operation.							
Check the cylinder-to-bedknife adjustment.							
Check the height-of-cut adjustment.							
Check all grease fittings for lubrication. <sup>2</sup>							
Touch-up damaged paint.							
<p>1. Check the glow plug and injector nozzles if hard starting, excess smoke, or rough running is noted.</p> <p>2. Immediately after every washing, regardless of the interval listed</p>							

## Notation for Areas of Concern

Inspection performed by:		
Item	Date	Information
1		
2		
3		
4		
5		

**Important:** Refer to your engine operator's manual for additional maintenance procedures.



# Lubrication

## Greasing the Bearings, Bushings, and Pivots

**Service Interval:** Before each use or daily

Every 50 hours

Lubricate all grease fittings for the bearings and bushings with #2 general-purpose, lithium-based grease. Lubricate

the bearings and bushings **immediately** after every washing, regardless of the interval listed.

Replace any damaged grease fittings.

Grease all cutterhead grease points and ensure that sufficient grease is injected such that clean grease is seen to escape from the roller end caps. This provides visible evidence that the roller seals have been purged of grass and debris and ensures maximum working life.

The grease fitting locations and quantities are as follows:

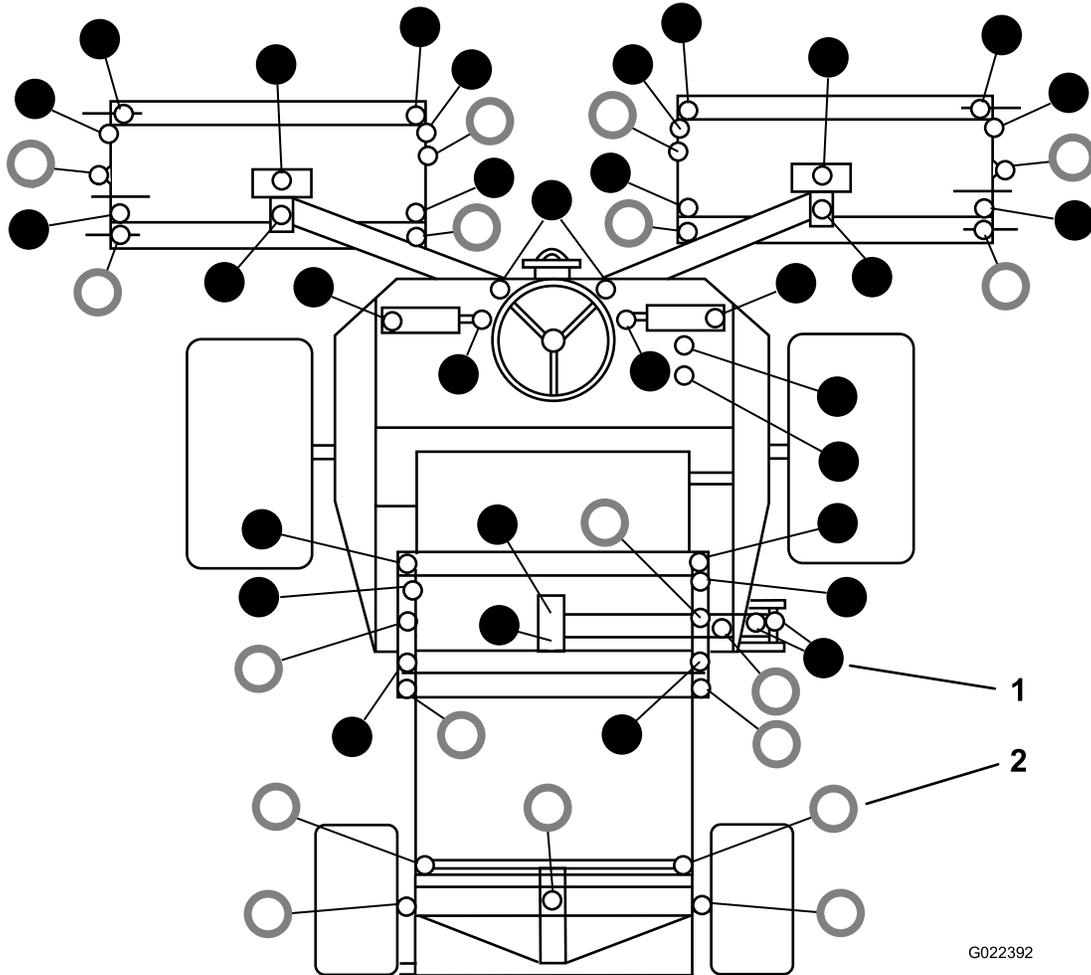


Figure 46

1. ● – Grease every 50 hours

2. ○ – Grease daily

# Engine Maintenance

## Checking the Engine Overheat Warning System

Service Interval: Every 500 hours

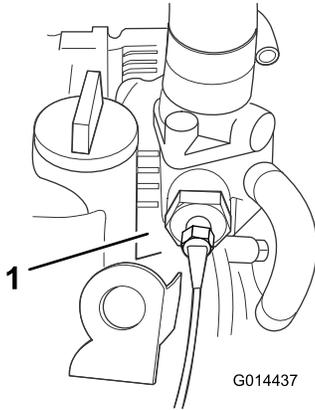


Figure 47

1. Temperature switch

1. Turn the ignition key to the ignition on position I.
2. Disconnect the red/blue wire terminal from the engine temperature switch.
3. Touch the metal terminal of this wire onto a suitable earth point, ensuring that the metal surfaces make good contact.

The horn will sound and the engine coolant temperature warning light will illuminate to confirm correct operation. If the system is malfunctioning, make repairs before operating the mower.

## Servicing the Air Cleaner

Service Interval: Before each use or daily

Every 500 hours


### Servicing the Primary Air Filter

Check the air-cleaner body for damage which could cause an air leak. Replace if damaged. Check the whole intake system for leaks, damage or loose hose clamps.

Service the primary air-cleaner filter only when the service indicator (Figure 48) requires it. Changing the air filter before it is necessary only increases the chance of dirt entering the engine when the filter is removed.

**Important:** Be sure that the cover is seated correctly and seals with the air-cleaner body.

1. Check the filter blockage indicator. If the indicator is red, the air filter needs to be replaced (Figure 48).

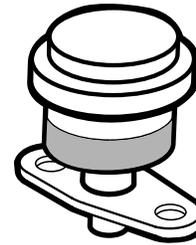


G014565

Figure 48

2. Before removing the filter, use low pressure air (40 psi, clean and dry) to help remove large accumulations of debris packed between outside of the filter and the canister. **Avoid using high pressure air which could force dirt through the filter into the intake tract.** Remove the cover from the air-cleaner body.

This cleaning process prevents debris from migrating into the intake when the filter is removed.

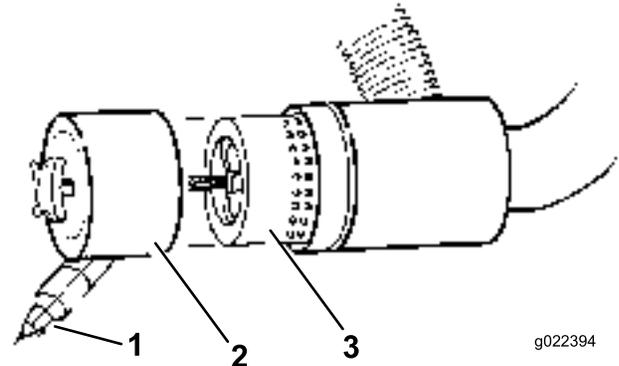

g022394

Figure 49

1. Dust boot
2. Dust bowl
3. Air filter

3. Remove and replace the filter (Figure 49).  
Cleaning of the used element is not recommended due to the possibility of damage to the filter media.
4. Inspect the new filter for shipping damage, checking the sealing end of the filter and the body. **Do not use a damaged element.**
5. Insert the new filter by applying pressure to the outer rim of the element to seat it in the canister. **Do not apply pressure to the flexible center of the filter.**
6. Clean the dirt ejection port located in the removable cover. Remove the rubber outlet valve from the cover, clean the cavity and replace the outlet valve.
7. Install the cover orienting the rubber outlet valve in a downward position—between approximately 5:00 to 7:00 when viewed from the end.
8. Check the condition of the air cleaner hoses.
9. Secure the cover.

## Servicing the Safety Filter

The air filter has a secondary, safety filter element inside the primary air filter to prevent dislodged dust and other items from entering the engine while changing the main element.

Replace the safety filter, never clean it.


**Important:** Never attempt to clean the safety filter. If the safety filter is dirty, then the primary filter is damaged. Replace both filters.

## Servicing the Engine Oil and Filter

**Service Interval:** After the first 50 hours

Every 150 hours


1. Remove the drain plug ([Figure 50](#)) and let the oil flow into a drain pan.

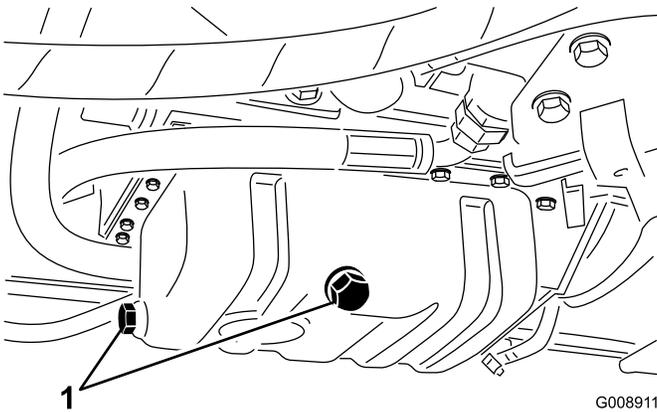

**Figure 50**

1. Oil drain plug

2. When the oil stops, install the drain plug.
3. Remove the oil filter ([Figure 51](#)).

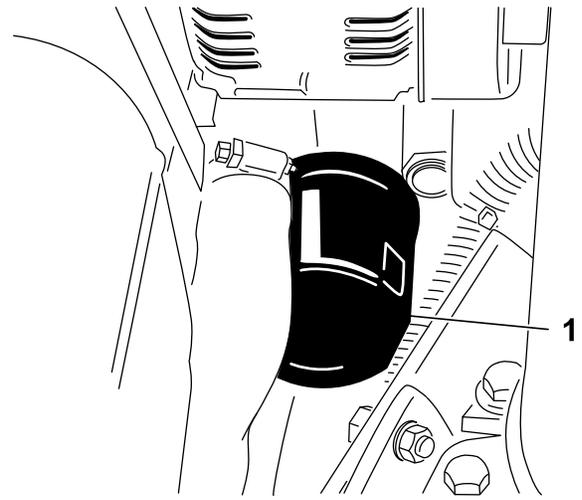

**Figure 51**

1. Oil filter

4. Apply a light coat of clean oil to the new filter seal.
5. Install the replacement oil filter to the filter adapter. Turn the oil filter clockwise until the rubber gasket contacts the filter adapter, then tighten the filter an additional 1/2 turn.

**Important:** Do not over-tighten the filter.

6. Add oil to the crankcase; refer to [Checking the Engine-Oil Level](#) (page 20).

# Fuel System Maintenance

## ⚠ DANGER

Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 6 to 12 mm (1/4 to 1/2 inches) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.

## Draining the Fuel Tank

**Service Interval:** Every 800 hours

Before storage

Drain and clean the fuel tank if the fuel system becomes contaminated or if the machine is to be stored for an extended period. Use clean fuel to flush out the tank.

## Checking the Fuel Lines and Connections

**Service Interval:** Every 400 hours/Yearly (whichever comes first)

Check the fuel lines and connections. Inspect them for deterioration, damage, or loose connections.

## Bleeding the Fuel System

You must bleed the fuel system before starting the engine if any of the following situations have occurred:

- Initial start up of a new machine.
- Engine has ceased running due to lack of fuel.
- Maintenance has been performed upon fuel system components; i.e., filter replaced, separator serviced, etc.

## ⚠ DANGER

Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
  - Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 6 to 12mm (1/4 to 1/2 inches) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
  - Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
  - Store fuel in a clean, safety-approved container and keep the cap in place.
1. Park the machine on a level surface and ensure that the fuel tank is at least half full.
  2. Open the hood.
  3. Turn the key in the ignition switch to the ON position and crank the engine. The mechanical pump will suck fuel out of the tank, fill the fuel filter and fuel hose and force the air into the engine. This could take some time to fully purge all the air out of the system and the engine might fire erratically until all air is purged out. When all air is purged and the engine is running smoothly, it should be run for a few minutes to ensure that it is fully purged.

## Replacing the Fuel Filter

**Service Interval:** Every 500 hours

**Important:** Replace the fuel filter canister periodically to prevent wear of the fuel injection pump plunger or the injection nozzle, due to dirt in the fuel.

1. Place a clean container under the fuel filter canister (Figure 52).
2. Clean the area where the filter canister mounts.

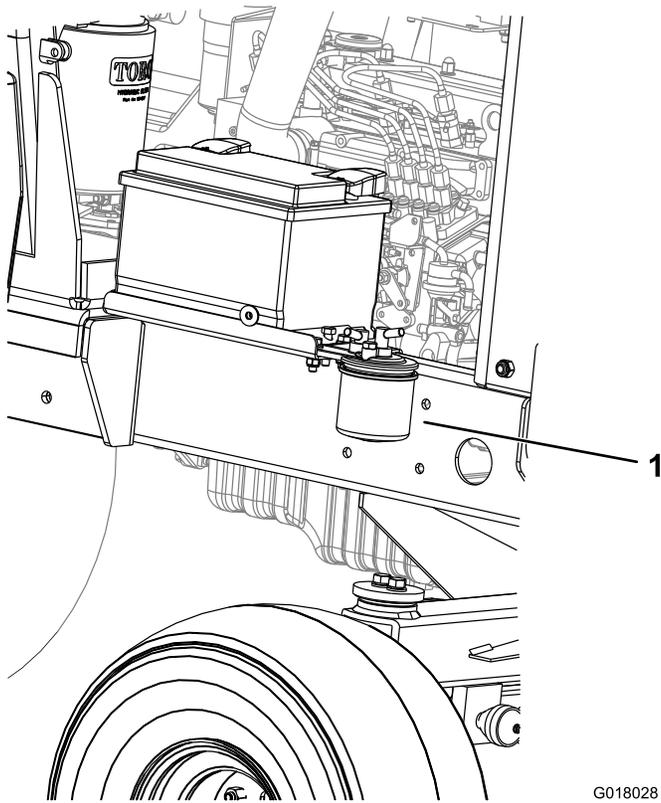


Figure 52

G018028

1. Fuel filter

3. Remove the filter canister and clean the mounting surface.
4. Lubricate the gasket on the filter canister with clean oil.
5. Install the new filter canister by hand until the gasket contacts mounting surface.
6. Bleed the fuel system; refer to Bleeding the Fuel System.

## Electrical System Maintenance

**Important:** Before welding on the machine, disconnect both cables from the battery, both wire harness plugs from the electronic control module, and the terminal connector from the alternator to prevent damage to the electrical system.

### Checking the Electrical System

**Service Interval:** Every 500 hours

Inspect all electrical connections and cables and replace any which are damaged or corroded. Spray a good-quality water inhibitor onto exposed connections to prevent moisture ingress.

### Checking the Battery Condition

**Service Interval:** Every 250 hours

**Note:** When removing the battery, always disconnect the negative (-) cable first.

**Note:** When installing the battery, always connect the negative (-) cable last.

Raise the engine cover. Remove any corrosion from the battery terminals using a wire brush and apply petroleum jelly to the terminals to prevent further corrosion. Clean the battery compartment.

Under normal operating conditions the battery will not require any further attention. If the machine has been subject to continuous use under high ambient temperature conditions, the battery electrolyte may require topping up.

Remove the cell covers and top up with distilled water to a height 15 mm below the top of the battery. Install the cell covers.

**Note:** Check the condition of the battery cables. Install new cables when current ones are showing signs of wear or damage and tighten any loose connections as necessary.

# Servicing the Battery

Service Interval: Every 250 hours

## **⚠ DANGER**

Battery electrolyte contains sulfuric acid which is a deadly poison and causes severe burns.

- Do not drink electrolyte and avoid contact with skin, eyes, or clothing. Wear safety glasses to shield your eyes and rubber gloves to protect your hands.
- Fill the battery where clean water is always available for flushing the skin.

## **⚠ WARNING**

Charging the battery produces gasses that can explode.

Never smoke near the battery and keep sparks and flames away from it.


Check the battery condition. Keep the terminals and the entire battery case clean because a dirty battery will discharge slowly. To clean the battery, wash the entire case with a solution of baking soda and water. Rinse it with clear water.

# Drive System Maintenance

## Changing the Transmission Oil Filter

Service Interval: After the first 50 hours

Every 500 hours

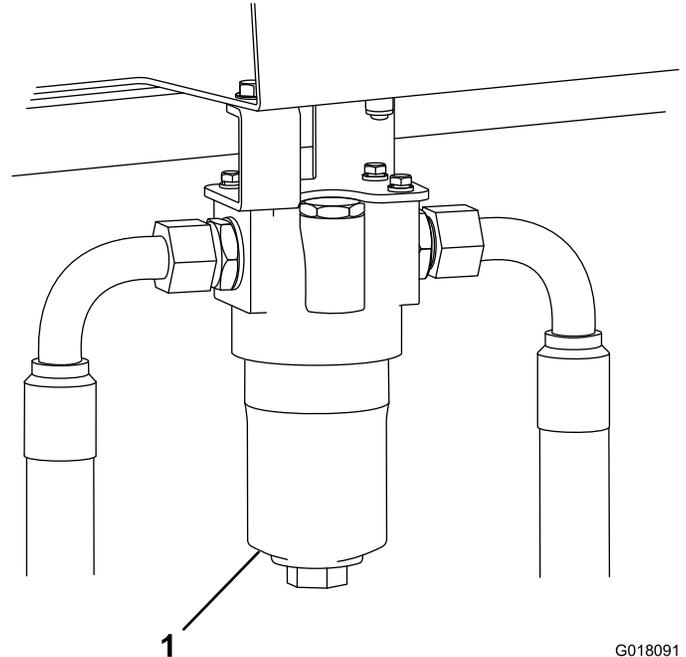

**Figure 53**

Right hand side of machine

G018091

1. Transmission oil filter


1. Unscrew and remove the bottom of the transmission oil filter housing.
2. Withdraw the filter element and discard it.
3. Install a new filter element (Part 924709).
4. Install the housing.

## Changing the Hydraulic Return Filter

Service Interval: After the first 50 hours

Every 500 hours

1. Remove the return filter.
2. Wipe oil onto the new return filter gasket.
3. Install the new return filter to the machine.

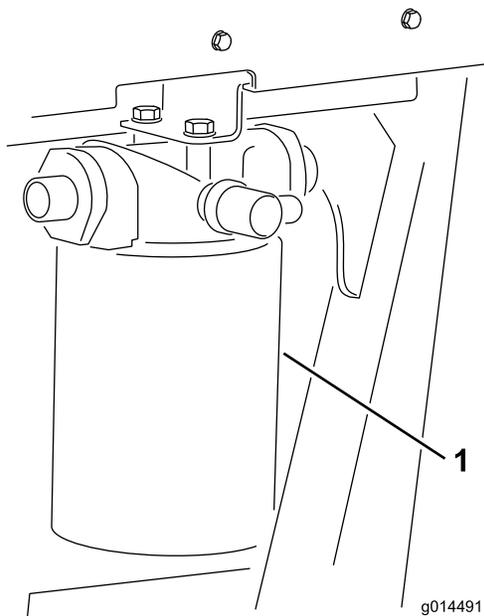

**Figure 54**  
Left hand side of machine


1. Hydraulic oil return filter

## Checking the Rear Wheel Alignment

**Service Interval:** Every 500 hours

To prevent excessive tire wear and ensure safe machine operation, the rear wheels must be correctly aligned to 3 to 8 mm (0.12 to 0.31 inch).

Set the rear wheels in the straight ahead position. Measure and compare the distance between the front sidewalls and the rear sidewalls at the wheel center height. The distance between the front sidewalls must be set 3 to 8 mm (0.12 to 0.31 inch) less than the distance between the rear sidewalls.

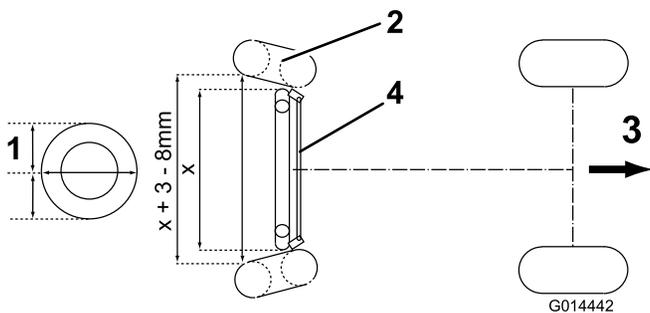

**Figure 55**

1. Wheel center height
2. Tire
3. Direction of forward travel
4. Track-rod assembly

To adjust the alignment of the rear wheels, first back off the left hand and right hand locknuts on the track rod assembly. (Left-hand locknut has a left-hand thread). Rotate the track


rod to achieve the correct distance as described above and tighten the locknuts securely.

## Inspecting the Transmission Control Cable and Operating Mechanism

**Service Interval:** Every 250 hours

Check the condition and security of the cable and operating mechanism at the speed control pedals and transmission pump ends.

- Remove build up of dirt, grit and other deposits.
- Ensure that the ball joints are securely anchored and check that mounting brackets and cable anchors are tight and free from cracks.
- Inspect end fittings for wear, corrosion, broken springs, and replace if necessary.
- Ensure that the rubber seals are correctly located and are in good condition.
- Ensure that the articulating sleeves supporting the inner cable are in good condition and firmly attached to the outer cable assembly at the crimped connections. If there are any signs of cracking or detachment install a new cable immediately.
- Check that sleeves, rods, and inner cable are free from bends, kinks, or other damage. If they are not, install a new cable immediately.
- With the engine switched off, operate the pedal controls through the entire range and ensure that the mechanism moves smoothly and freely to the neutral position without sticking or hanging up.

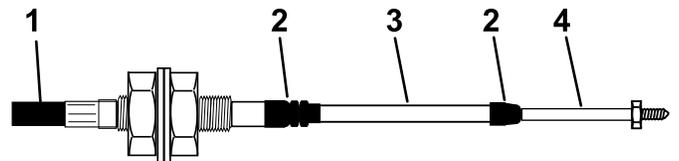

**Figure 56**

1. Outer cover
2. Rubber seal
3. Sleeve
4. Rod end

# Cooling System Maintenance

## Removing Debris from the Cooling System


**Service Interval:** Before each use or daily

Every 100 hours

Every 2 years

**Note:** To prevent the engine from overheating, the radiator and oil cooler must be kept clean. Normally, check daily and, if necessary, clean any debris off these parts. However, it will be necessary to check and clean more frequently in extremely dusty and dirty conditions.


1. Park the machine on a level surface, stop the engine, set the parking brake and remove the key from the ignition switch.
2. Clean the radiator screen.
3. Thoroughly clean all debris out of the engine area.
4. Release the latch and open the engine cover (Figure 57).

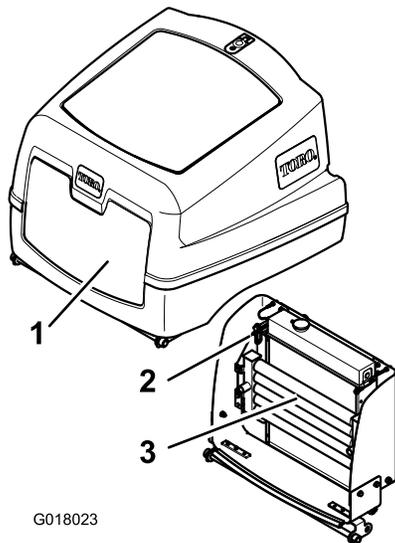

**Figure 57**

1. Engine cover
2. Oil cooler release clip
3. Oil cooler


5. Clean the screen thoroughly with compressed air.
6. Pivot the latch inward to release the oil cooler (Figure 58).

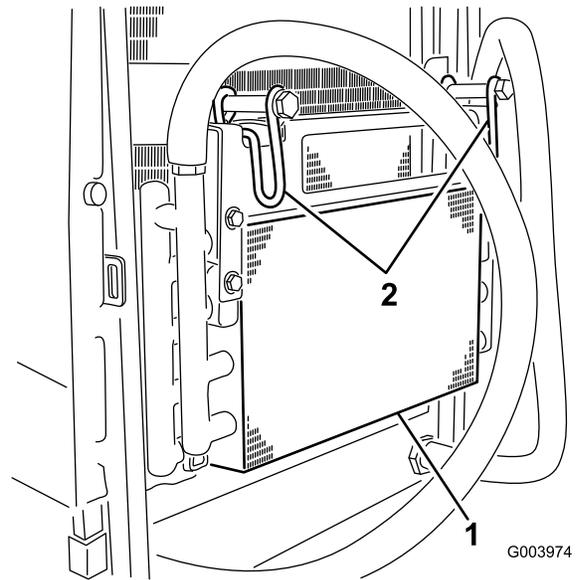

**Figure 58**

1. Oil cooler
2. Oil cooler latch

7. Working from the fan side of the radiator, blow out debris with low pressure (50 psi) compressed air (do not use water). Repeat the step from the front of the radiator and again from the fan side. Thoroughly clean both sides of the oil cooler. After the radiator and oil coolers are thoroughly cleaned, clean out any debris that may have collected on other parts of the machine (Figure 59) with compressed air.

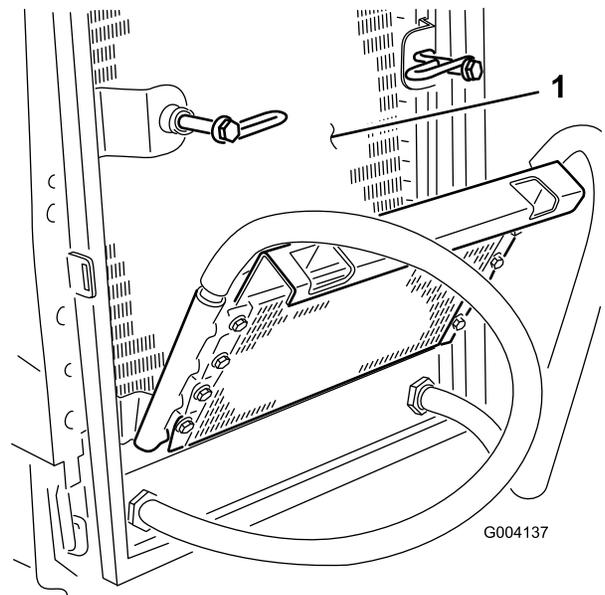

**Figure 59**

1. Radiator

8. Pivot the oil cooler back into position and secure the latch.
9. Close the engine cover and secure the latch.

# Belt Maintenance


Check the condition and tension of the alternator belt after the first day of operation and every 100 operating hours thereafter.

## Tensioning the Alternator Belt

**Service Interval:** After the first 8 hours

Every 100 hours

1. Open the hood.
2. Check the tension of the alternator belt by pressing it (Figure 60) midway between the alternator and the crankshaft pulleys with 10 kg (22 lb) of force.

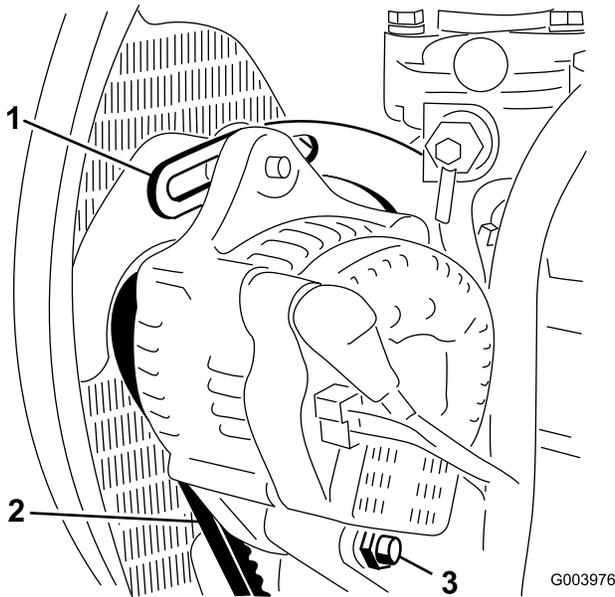

**Figure 60**

- |                    |               |
|--------------------|---------------|
| 1. Brace           | 3. Pivot bolt |
| 2. Alternator belt |               |

The belt should deflect 11 mm (7/16 inch). If the deflection is incorrect, proceed to step 3. If correct, continue operation.

3. Loosen the bolt securing the brace to the engine (Figure 60), the bolt securing the alternator to the brace and the pivot bolt.
4. Insert a pry bar between the alternator and the engine and pry out on the alternator.
5. When you achieve the proper tension, tighten the alternator, brace and pivot bolts to secure the adjustment.

# Controls System Maintenance

## Checking the Forward/Reverse Travel Pedal Action

With the engine switched off, operate the forward and reverse travel pedals through the full range of articulation and ensure that the mechanism returns freely to the neutral position.

## Checking the Operator Presence Seat Switch

**Service Interval:** Before each use or daily

1. Sit on the operator seat and start the engine.
2. Lower the cutterheads to the ground.
3. Engage the cutter drive in the forward direction.
4. Rise from the operator seat and check that the cutting cylinders come to a stop after an initial 0.5 to 1 second delay.
5. Repeat the procedure with the cutting cylinders running in reverse.

## Checking the Cutter Drive Interlock Switch

1. Stop the mower engine.
2. Operate the cutter drive switch to the off position and turn the ignition key to position I. The cutterheads drive switch indicator light should not illuminate.
3. Operate the switch to the forward position. The indicator light should illuminate and the engine should not start when the ignition key is turned. Repeat for the reverse position.

## Checking the Parking Brake Interlock Switch

1. Stop the engine.
2. Engage the parking brake.
3. Turn the ignition key to position I. The parking brake indicator light should illuminate.
4. Disengage the parking brake. The indicator light should go out and the engine should not start when the ignition key is turned.
5. Set the parking brake, sit on the operator seat, and start the engine.
6. Release the parking brake.
7. Rise from the operator seat and check that the engine stops.

## Checking the Transmission Neutral Interlock Switch

1. Stop the mower engine.
2. Remove your foot from the forward/reverse travel pedals.
3. Turn the ignition key to position **I** and the transmission neutral indicator light should illuminate.
4. Apply light pressure to the travel pedals in a forward and reverse direction to check that the indicator light turns off.

**Note:** Take extreme care to ensure that the area around the mower is clear before checking that the engine will not start under this condition.

## Hydraulic System Maintenance

### **⚠ WARNING**

Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

- Make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.
- Keep your body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.
- Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.
- Get immediate medical help if fluid is injected into skin.

## Servicing the Hydraulic System

**Service Interval:** Every 500 hours


**Note:** Keep water away from electrical components. Use a dry cloth or brush to clean such areas.

This procedure is best carried out when the hydraulic oil is warm (not hot). Lower the cutterheads to the ground and drain the hydraulic system.

1. Remove the oil tank filler flange to gain access to the suction strainer.
2. Unscrew and remove the strainer and clean with paraffin or petrol before installing.
3. Install the return line oil filter element.
4. Install the transmission oil filter element.
5. Fill the hydraulic tank with fresh clean hydraulic oil of the recommended grade.
6. Run the machine and operate all hydraulic systems until the hydraulic oil is warm.
7. Check the oil level and top up as necessary to the upper mark on the sight level gauge.

## Checking the Hydraulic Lines and Hoses

Daily, check hydraulic lines and hoses for leaks, kinked lines, loose mounting supports, wear, loose fittings, weather deterioration, and chemical deterioration. Make all necessary repairs before operating.

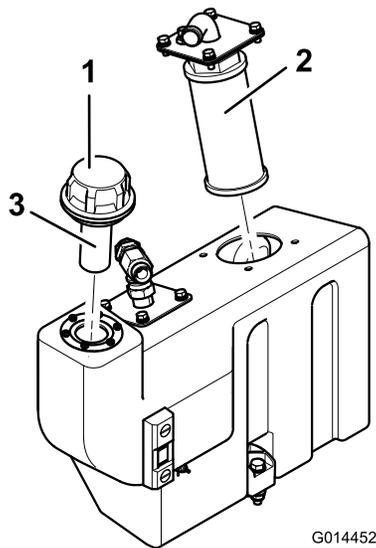


**Figure 61**

1. Oil-tank filler cap
2. Suction strainer
3. Filler strainer

---

## Checking the Hydraulic Oil Overheat Warning System

**Service Interval:** Every 500 hours

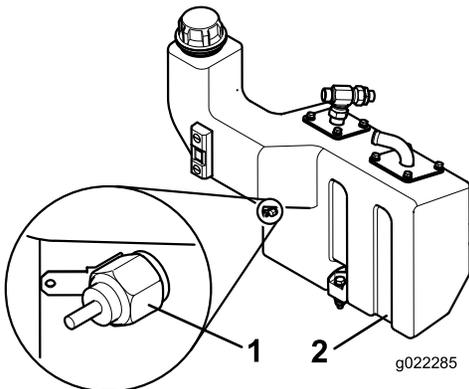

**Figure 62**

1. Temperature switch
2. Hydraulic-oil tank

1. Turn the ignition key to the ignition on position I.
2. Disconnect the red/yellow wire terminal from the hydraulic tank temperature switch.
3. Touch the metal terminal of the wire onto a suitable earth point, ensuring that the metal surfaces make good contact.

The horn will sound and the hydraulic oil temperature warning light will illuminate to confirm correct operation. If necessary, make repairs before operating the mower.

# Cutterheads System Maintenance

## Back Lapping the Cutterheads

### ⚠ WARNING

Contact with the cutterheads or other moving parts can result in personal injury.


- Keep fingers, hands, and clothing away from the cutterheads or other moving parts.
- Never attempt to turn the cutterheads by hand or foot while the engine is running.

This process is recommended for restoring the sharp cutting edges to cylinders and bottom blades which are essential for good quality grass cutting.

This process can only deal with a small amount of metal removal to restore the cutting edges. If the blade edges are seriously worn or damaged it will be necessary to remove the component parts and have them ground again.

1. Ensure that the mower engine is off and that the parking brake is set.
2. Adjust the cutting cylinders to the bottom blades to obtain fleeting contact.
3. Apply a medium-grade detergent-based carborundum paste to the cutting edges of the cylinders with a long-handled brush.

80-grade carborundum paste	
	Part number
0.45 kg (1 lb)	63-07-088
11.25 kg (25 lb)	63-07-086

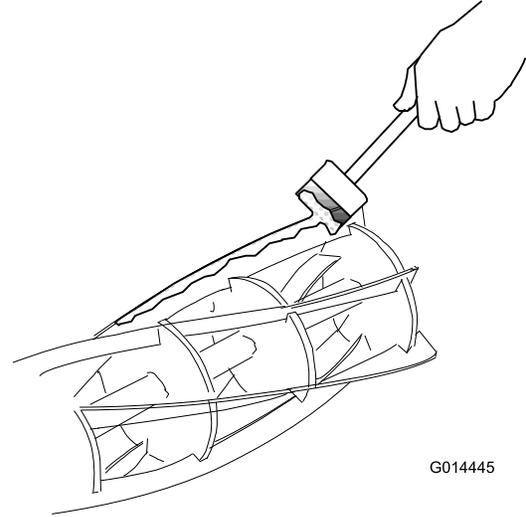

G014445

Figure 63

4. Sit on the operator seat, start the mower engine, and set the engine speed at idle.

### ⚠ WARNING

If you touch the cutterheads when the engine is running, you could be seriously injured.

- Ensure that the area surrounding the cutterheads is clear of people.
  - Keep hands and feet clear of the cutting cylinders during the period when the mower engine is running.
5. Operate the cutterheads drive switch to the reverse/back lap position for a period of time and listen to the grinding action.
  6. Operate the cutterheads drive switch to the off position and switch off the mower engine when the grinding action has stopped.
  7. Thoroughly clean the blade edges and adjust the cutting cylinders to the bottom blades.
  8. Check that a thin piece of paper can be cut cleanly at all points along the cutting edges while rotating the cylinders by hand.
  9. If further back lapping is necessary repeat steps 2 through 8.
  10. Thoroughly remove and wash off all traces of the carborundum paste from the cylinders and bottom blades.

## Grinding the Cutterheads

It will be necessary to carry out a grinding operation to correct cylinder spiral edges or bottom blade edges which have become excessively rounded or distorted. Bottom blades which are nearing the end of their wear life should be replaced. The new blades should be ground on their holders prior to fitting. When grinding operations are necessary it is essential that both the cylinders and the bottom blades are ground at the same time. The only exception to this rule is when a new cylinder is fitted, in which case it is only necessary to grind the bottom blade. All such grinding operations should be carried out by your authorized dealer on a quality, well-maintained cylinder / bottom-blade grinding machine

**Important:** Dispose of hazardous substances correctly. Do not dispose of batteries with a separate collection mark into general waste.

**When disposing of hazardous waste products, take them to an authorized disposal site.**

## Raising The Mower Off The Ground

### **▲ WARNING**

If you go under the machine while the engine is running, you could be seriously injured or killed.

- Never crawl under the machine while the engine is running.
- Never start the engine while someone is under the machine.

**Important:** Before raising the mower ensure that the lifting device to be used is in good condition and capable of supporting the weight of the mower securely.

**Minimum lift capacity: 2000 kg (4409 lb)**

1. Park the mower on level ground.
2. Set the parking brake.
3. Turn the engine switch to off and remove the ignition key.
4. Ensure the ground under the lifting device is level and firm.
5. Align and ensure the lifting device is secure against one of the mowers lifting points; refer to [Locating the Jacking Points \(page 29\)](#).
6. If raising the front of the mower, chock the rear wheels to prevent the mower from rolling away.

**Note:** The parking brake operates only on the front wheels.

## Disposing of Waste

Engine oil, batteries, hydraulic oil, and engine coolant are pollutants to the environment. Dispose of these according to your local regulations.

When disposing of hazardous waste products, take them to an authorized disposal site. Waste products must not be allowed to contaminate surface water, drains, or sewage systems.

# Storage

## Preparing the Traction Unit

1. Thoroughly clean the traction unit, cutting units, and engine.
2. Check the tire pressure. Refer to [Checking the Tire Pressure \(page 23\)](#).
3. Check all fasteners for looseness and tighten them as necessary.
4. Grease all grease fittings and pivot points. Wipe up any excess lubricant.
5. Lightly sand and use touch-up paint on painted areas that are scratched, chipped, or rusted. Repair any dents in the metal body.
6. Service the battery and cables as follows:
  - A. Remove the battery terminals from the battery posts.
  - B. Clean the battery, terminals, and posts with a wire brush and baking soda solution.
  - C. Coat the cable terminals and battery posts with Grafo 112X skin-over grease (Toro part 505-47) or petroleum jelly to prevent corrosion.
  - D. Slowly recharge the battery every 60 days for 24 hours to prevent lead sulfation of the battery.

## Preparing the Engine

1. Drain the engine oil from the oil pan and replace the drain plug.
2. Remove and discard the oil filter. Install a new oil filter.
3. Refill the oil pan with designated quantity of motor oil.
4. Start the engine and run it at idle speed for approximately 2 minutes.
5. Stop the engine.
6. Thoroughly drain all fuel from the fuel tank, lines, and the fuel filter/water separator assembly.
7. Flush the fuel tank with fresh, clean diesel fuel.
8. Secure all fuel system fittings.
9. Thoroughly clean and service the air cleaner assembly.
10. Seal the air-cleaner inlet and the exhaust outlet with weatherproof tape.
11. Check the antifreeze protection and add antifreeze as needed for the expected minimum temperature in your area.

# Troubleshooting

Problem	Possible Cause	Corrective Action
There are areas of uncut grass at the overlap between cutting cylinders.	<ol style="list-style-type: none"> <li>1. You are turning too tightly.</li> <li>2. The machine slides sideways when travelling across the face of a slope.</li> <li>3. There is no ground contact on one end of the cutter because of poorly routed hoses or wrongly positioned hydraulic adaptors.</li> <li>4. There is no ground contact on one end of the cutter because a pivot pin is seizing.</li> <li>5. There is no ground contact on one end of the cutter because of grass buildup under the cutterhead.</li> </ol>	<ol style="list-style-type: none"> <li>1. Increase the turning radius</li> <li>2. Mow up/down the slope.</li> <li>3. Correct the hose routing or the position of the hydraulic adaptors.</li> <li>4. Release and grease the pivot points.</li> <li>5. Clear the grass buildup.</li> </ol>
There are full-width ridge lines in the cut across the direction of travel.	<ol style="list-style-type: none"> <li>1. The forward speed is too high.</li> <li>2. The cylinder speed is too slow.</li> <li>3. The height of cut is too low.</li> </ol>	<ol style="list-style-type: none"> <li>1. Reduce forward speed.</li> <li>2. Increase the mower engine speed.</li> <li>3. Raise the height of cut.</li> </ol>
There are ridge lines in the cut grass, across the direction of travel, over the cutting width of one cylinder.	<ol style="list-style-type: none"> <li>1. A cylinder is running slow.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the cylinder speed; consult your authorized distributor.</li> </ol>
There is a step in the cut grass height at the point of overlap between cutting cylinders.	<ol style="list-style-type: none"> <li>1. There is an inconsistent height of cut setting on one cylinder.</li> <li>2. The raise/lower position control is not in the float position.</li> <li>3. There is no ground contact on one end of the cutter because of poorly routed hoses or wrongly positioned hydraulic adaptors.</li> <li>4. There is no ground contact on one end of the cutter because of pivot pins seizing.</li> <li>5. There is no ground contact on one end of the cutter because of grass buildup under the cutterhead</li> </ol>	<ol style="list-style-type: none"> <li>1. Check and adjust the height of cut setting.</li> <li>2. Set the position control to the float position.</li> <li>3. Correct the hose routing and the position of the hydraulic adaptors.</li> <li>4. Release and grease the pivot points.</li> <li>5. Remove the grass buildup.</li> </ol>
There are some uncut or poorly cut strands of grass.	<ol style="list-style-type: none"> <li>1. A cutting cylinder is partially out of contact with the bottom blade.</li> <li>2. A cutting cylinder is in heavy contact with the bottom blade.</li> <li>3. The height of cut is too high.</li> <li>4. The cutting edges of the cutting cylinders/bottom blades are rounded.</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust the cutting-cylinder-to-bottom-blade contact.</li> <li>2. Adjust the cutting-cylinder-to-bottom-blade contact.</li> <li>3. Lower the height of cut setting.</li> <li>4. Back lap or grind the edges.</li> </ol>

Problem	Possible Cause	Corrective Action
There are lines of uncut or badly cut grass in the direction of travel.	<ol style="list-style-type: none"> <li>1. There is tram lining of the cutting edges due to heavy contact caused by poor cutting-cylinder-to-bottom-blade adjustment.</li> <li>2. The bottom blade is in contact with the ground.</li> <li>3. The bottom blade has a nose-down attitude.</li> <li>4. The cutterheads are bouncing.</li> <li>5. There are worn cylinder bearings/bearing housing pivots.</li> <li>6. There are loose components in the cutterhead.</li> </ol>	<ol style="list-style-type: none"> <li>1. Back lap or grind the edges.</li> <li>2. Raise the height of cut.</li> <li>3. Adjust the cutterhead to position the bottom blade parallel to the ground.</li> <li>4. Reduce the forward speed and reduce the weight transfer.</li> <li>5. Replace any worn parts.</li> <li>6. Check and tighten components as necessary.</li> </ol>
There is scalping of the turf.	<ol style="list-style-type: none"> <li>1. The undulations are too severe for the height of cut setting.</li> <li>2. The height of cut is too low.</li> </ol>	<ol style="list-style-type: none"> <li>1. Use floating cutterheads.</li> <li>2. Raise the height of cut.</li> </ol>
There is excessive bottom blade wear.	<ol style="list-style-type: none"> <li>1. The bottom blade is in heavy contact with the ground.</li> <li>2. The cutting edges of the cutting cylinder and/or bottom blade are rounded.</li> <li>3. The cylinder is in heavy contact with the bottom blade.</li> <li>4. There is a damaged cutting cylinder or bottom blade.</li> <li>5. There are excessively abrasive ground conditions.</li> </ol>	<ol style="list-style-type: none"> <li>1. Raise the height of cut.</li> <li>2. Back lap or grind the edges.</li> <li>3. Adjust the cutting-cylinder-to-bottom-blade contact.</li> <li>4. Grind or replace parts as necessary.</li> <li>5. Raise the height of cut.</li> </ol>
The engine does not start with the ignition key.	<ol style="list-style-type: none"> <li>1. The transmission neutral interlock switch is not energized.</li> <li>2. The parking brake interlock switch is not energized.</li> <li>3. The cutterhead drive interlock switch is not energized.</li> <li>4. There is a malfunctioning electrical connection.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove your foot from the forward/reverse pedals or check the setting of the transmission neutral interlock switch.</li> <li>2. Move the parking brake switch to the On position.</li> <li>3. Move the cutter switch to the Off position.</li> <li>4. Locate and correct the fault in the electrical system.</li> </ol>
The battery has no power.	<ol style="list-style-type: none"> <li>1. A terminal connection is loose or corroded.</li> <li>2. The alternator belt is loose or worn.</li> <li>3. The battery is discharged.</li> <li>4. There is an electrical short circuit.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean and tighten the terminal connections. Charge the battery.</li> <li>2. Adjust the tension or replace the belt; refer to engine operator's manual.</li> <li>3. Charge or replace the battery.</li> <li>4. Locate the short circuit and fix it.</li> </ol>
The hydraulic oil system is overheating.	<ol style="list-style-type: none"> <li>1. There is a blocked screen.</li> <li>2. The oil cooler fins are dirty/blocked.</li> <li>3. The engine radiator is dirty/blocked.</li> <li>4. The relief valve setting is low.</li> <li>5. The oil level is low.</li> <li>6. The brakes are engaged.</li> <li>7. The cutting cylinders tight on the bottom blades.</li> <li>8. There is a malfunctioning fan or fan drive.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the screen.</li> <li>2. Clean the fins.</li> <li>3. Clean the radiator.</li> <li>4. Have the relief valve pressure checked. Consult your authorized distributor.</li> <li>5. Fill the reservoir to the correct level.</li> <li>6. Disengage the brakes.</li> <li>7. Adjust the settings.</li> <li>8. Check the fan operation and service it as required.</li> </ol>

<b>Problem</b>	<b>Possible Cause</b>	<b>Corrective Action</b>
The brake system does not operate correctly.	<ol style="list-style-type: none"> <li>1. There is a malfunctioning wheel motor brake assembly.</li> <li>2. The brake discs are worn.</li> </ol>	<ol style="list-style-type: none"> <li>1. Consult your authorized distributor.</li> <li>2. Replace the brake discs; consult your authorized distributor.</li> </ol>
There is a lack of steering.	<ol style="list-style-type: none"> <li>1. The steering valve is malfunctioning.</li> <li>2. A hydraulic cylinder is malfunctioning.</li> <li>3. A steering hose is damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Service or replace the steering valve.</li> <li>2. Service or replace the hydraulic cylinder.</li> <li>3. Replace the hose.</li> </ol>
There is no machine movement in forward or reverse.	<ol style="list-style-type: none"> <li>1. The parking brake is engaged.</li> <li>2. The oil level is low.</li> <li>3. The reservoir has the wrong kind of oil.</li> <li>4. The drive pedal linkage is damaged.</li> <li>5. The transmission pump is damaged.</li> <li>6. The transmission bypass valve is open.</li> <li>7. There is a broken drive coupling.</li> </ol>	<ol style="list-style-type: none"> <li>1. Release the parking brake.</li> <li>2. Fill the reservoir to the correct level.</li> <li>3. Drain the reservoir and fill it with the correct oil.</li> <li>4. Check the linkage and replace any damaged or worn parts.</li> <li>5. Have the transmission pump overhauled by your authorized distributor.</li> <li>6. Close the bypass valve.</li> <li>7. Replace the drive coupling.</li> </ol>
The machine creeps forward or backward in neutral.	<ol style="list-style-type: none"> <li>1. The transmission neutral adjustment is set incorrectly.</li> </ol>	<ol style="list-style-type: none"> <li>1. Adjust the transmission neutral linkage setting.</li> </ol>
There is excessive noise in the hydraulic system.	<ol style="list-style-type: none"> <li>1. A pump is malfunctioning.</li> <li>2. A motor is malfunctioning.</li> <li>3. Air is leaking into the system.</li> <li>4. A suction strainer is blocked or damaged.</li> <li>5. The oil has excessive viscosity due to cold conditions.</li> <li>6. The relief valve setting is low.</li> <li>7. The hydraulic oil level is low.</li> </ol>	<ol style="list-style-type: none"> <li>1. Identify the noisy pump and service or replace it.</li> <li>2. Identify the noisy motor and service or replace it.</li> <li>3. Tighten or replace the hydraulic fittings, particularly in the suction lines.</li> <li>4. Clean and replace the suction strainer or renew it as necessary.</li> <li>5. Allow the system to warm up.</li> <li>6. Have the relief valve pressure checked. Consult your authorized distributor.</li> <li>7. Fill the hydraulic oil reservoir to the correct level.</li> </ol>
After an initial period of satisfactory operation, the machine loses power.	<ol style="list-style-type: none"> <li>1. A pump or motor is worn.</li> <li>2. The hydraulic oil level is low.</li> <li>3. The oil in the hydraulic system has the wrong viscosity.</li> <li>4. The oil-filter element is blocked.</li> <li>5. The pressure relief valve is malfunctioning.</li> <li>6. The system is overheating.</li> <li>7. There are leaks on the suction hose.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace parts as necessary.</li> <li>2. Fill hydraulic oil tank to correct level</li> <li>3. Replace the oil in the hydraulic tank with the correct viscosity-grade oil; refer to the Specifications section.</li> <li>4. Change the filter element.</li> <li>5. Have the relief valve cleaned and pressure checked. Consult your authorized distributor.</li> <li>6. Check the cylinder-to-bottom-blade adjustment. Reduce the work rate (increase the height of cut or reduce the forward speed).</li> <li>7. Check and tighten the fittings. Replace the hose if necessary.</li> </ol>
A cylinder 'knocks' while rotating.	<ol style="list-style-type: none"> <li>1. There is a high spot on the cylinder or the bottom blade due to contact with a foreign object.</li> <li>2. The cylinder bearings are worn.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove the high spot with a stone and back lap to restore the cutting edges. Severe damage will require grinding.</li> <li>2. Replace the bearings as necessary.</li> </ol>

Problem	Possible Cause	Corrective Action
One cylinder rotates slowly.	<ol style="list-style-type: none"> <li>1. A cutting cylinder bearing is seized.</li> <li>2. A motor with incorrect rotation was installed.</li> <li>3. The motor integral check valve is jammed open.</li> <li>4. The cutting cylinder is tight on the bottom blade.</li> <li>5. The motor is worn.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the bearings as necessary.</li> <li>2. Check the motor and replace it if necessary.</li> <li>3. Have the check valve cleaned and checked.</li> <li>4. Adjust the setting.</li> <li>5. Replace the motor.</li> </ol>
A cutterhead fails to lift out of work.	<ol style="list-style-type: none"> <li>1. There is a lift cylinder seal failure.</li> <li>2. The pressure relief valve is jammed open or wrongly set.</li> <li>3. There is a malfunctioning control valve.</li> <li>4. There is mechanical blockage.</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace the seals.</li> <li>2. Have the relief valve pressure checked. Consult your authorized distributor.</li> <li>3. Overhaul the control valve.</li> <li>4. Remove the blockage.</li> </ol>
The cutterheads do not follow the contours of the ground.	<ol style="list-style-type: none"> <li>1. The hose routing or the orientation of the hydraulic fittings is incorrect.</li> <li>2. The pivot points are too tight.</li> <li>3. The mower is being operated in the 'hold' position.</li> <li>4. The weight transfer is set too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Move the cutterheads throughout the extremes of movement and observe any tightness in the hoses. Correctly route the hoses and orientate the fittings as necessary.</li> <li>2. Release and grease the pivot point as necessary.</li> <li>3. Move the position control switch to 'down / float' position.</li> <li>4. Reduce the weight transfer.</li> </ol>
The cutterheads fail to start up when lowered into work.	<ol style="list-style-type: none"> <li>1. The seat sensor switch is malfunctioning.</li> <li>2. The hydraulic-oil level is low.</li> <li>3. A driveshaft is sheared.</li> <li>4. The pressure relief valve is jammed open or wrongly set.</li> <li>5. A cutting cylinder is jammed.</li> <li>6. A cutting cylinder is tight on the bottom blade.</li> <li>7. A cutterhead control valve is in the 'off' position, caused by malfunctioning control valve.</li> <li>8. A cutterhead control valve is in the 'off' position, caused by an electrical fault.</li> <li>9. The lift arm proximity switch is incorrectly set.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the mechanical and electrical operation of the switch.</li> <li>2. Fill the hydraulic-oil reservoir to the correct level.</li> <li>3. Check the motor and cylinder driveshafts and replace them if necessary.</li> <li>4. Have the relief valve pressure checked. Consult your authorized dealer.</li> <li>5. Clear any jams as necessary.</li> <li>6. Adjust the setting.</li> <li>7. Overhaul the control valve.</li> <li>8. Have the electrical system checked for an electrical fault.</li> <li>9. Check and adjust the proximity switch.</li> </ol>
The cylinders rotate in the wrong direction.	<ol style="list-style-type: none"> <li>1. The hoses are connected wrongly.</li> <li>2. The cutterhead drive switch is connected wrongly.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the hydraulic circuit and connect the hoses correctly.</li> <li>2. Check the electrical connections of the switch.</li> </ol>

**Notes:**

## International Distributor List

Distributor:	Country:	Phone Number:	Distributor:	Country:	Phone Number:
Atlantis Su ve Sulama Sisstemleri Lt	Turkey	90 216 344 86 74	Maquiver S.A.	Colombia	57 1 236 4079
Balama Prima Engineering Equip.	Hong Kong	852 2155 2163	Maruyama Mfg. Co. Inc.	Japan	81 3 3252 2285
B-Ray Corporation	Korea	82 32 551 2076	Agrolanc Kft	Hungary	36 27 539 640
Casco Sales Company	Puerto Rico	787 788 8383	Mountfield a.s.	Czech Republic	420 255 704 220
Ceres S.A.	Costa Rica	506 239 1138	Munditol S.A.	Argentina	54 11 4 821 9999
CSSC Turf Equipment (pvt) Ltd.	Sri Lanka	94 11 2746100	Oslinger Turf Equipment SA	Ecuador	593 4 239 6970
Cyril Johnston & Co.	Northern Ireland	44 2890 813 121	Oy Hako Ground and Garden Ab	Finland	358 987 00733
Equiver	Mexico	52 55 539 95444	Parkland Products Ltd.	New Zealand	64 3 34 93760
Femco S.A.	Guatemala	502 442 3277	Prato Verde S.p.A.	Italy	39 049 9128 128
G.Y.K. Company Ltd.	Japan	81 726 325 861	Prochaska & Cie	Austria	43 1 278 5100
Geomechaniki of Athens	Greece	30 10 935 0054	RT Cohen 2004 Ltd.	Israel	972 986 17979
Guandong Golden Star	China	86 20 876 51338	Riversa	Spain	34 9 52 83 7500
Hako Ground and Garden	Sweden	46 35 10 0000	Sc Svend Carlsen A/S	Denmark	45 66 109 200
Hako Ground and Garden	Norway	47 22 90 7760	Solvret S.A.S.	France	33 1 30 81 77 00
Hayter Limited (U.K.)	United Kingdom	44 1279 723 444	Spypros Stavrinides Limited	Cyprus	357 22 434131
Hydroturf Int. Co Dubai	United Arab Emirates	97 14 347 9479	Surge Systems India Limited	India	91 1 292299901
Hydroturf Egypt LLC	Egypt	202 519 4308	T-Markt Logistics Ltd.	Hungary	36 26 525 500
Irriamc	Portugal	351 21 238 8260	Toro Australia	Australia	61 3 9580 7355
Irrigation Products Int'l Pvt Ltd.	India	0091 44 2449 4387	Toro Europe NV	Belgium	32 14 562 960
Jean Heybroek b.v.	Netherlands	31 30 639 4611			

### European Privacy Notice

#### The Information Toro Collects

Toro Warranty Company (Toro) respects your privacy. In order to process your warranty claim and contact you in the event of a product recall, we ask you to share certain personal information with us, either directly or through your local Toro company or dealer.

The Toro warranty system is hosted on servers located within the United States where privacy law may not provide the same protection as applies in your country.

BY SHARING YOUR PERSONAL INFORMATION WITH US, YOU ARE CONSENTING TO THE PROCESSING OF YOUR PERSONAL INFORMATION AS DESCRIBED IN THIS PRIVACY NOTICE.

#### The Way Toro Uses Information

Toro may use your personal information to process warranty claims, to contact you in the event of a product recall and for any other purpose which we tell you about. Toro may share your information with Toro's affiliates, dealers or other business partners in connection with any of these activities. We will not sell your personal information to any other company. We reserve the right to disclose personal information in order to comply with applicable laws and with requests by the appropriate authorities, to operate our systems properly or for our own protection or that of other users.

#### Retention of your Personal Information

We will keep your personal information as long as we need it for the purposes for which it was originally collected or for other legitimate purposes (such as regulatory compliance), or as required by applicable law.

#### Toro's Commitment to Security of Your Personal Information

We take reasonable precautions in order to protect the security of your personal information. We also take steps to maintain the accuracy and current status of personal information.

#### Access and Correction of your Personal Information

If you would like to review or correct your personal information, please contact us by email at [legal@toro.com](mailto:legal@toro.com).

### Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.



# The Toro Total Coverage Guarantee

## A Limited Warranty

### Conditions and Products Covered

The Toro® Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours\*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

\* Product equipped with an hour meter.

### Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Commercial Products Service Department  
Toro Warranty Company  
8111 Lyndale Avenue South  
Bloomington, MN 55420-1196  
E-mail: commercial.warranty@toro.com

### Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your Operator's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

### Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brakes pads and linings, clutch linings, blades, reels, bed knives, tines, spark plugs, castor wheels, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices,

contamination, use of unapproved coolants, lubricants, additives, fertilizers, water, or chemicals, etc.

- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

### Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

### Note Regarding Deep Cycle Battery Warranty:

Deep cycle batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense.

### Maintenance is at Owner's Expense

Engine tune-up, lubrication cleaning and polishing, replacement of Items and Conditions Not Covered filters, coolant, and completing Recommended Maintenance are some of the normal services Toro products require that are at the owner's expense.

### General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

**Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty.**

All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty. Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

### Countries Other than the United States or Canada

Customers should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.