



Count on it.

Operator's Manual

Reelmaster® 5610 Traction Unit

Model No. 03678—Serial No. 316000001 and Up



⚠ WARNING

CALIFORNIA

Proposition 65 Warning

This product contains a chemical or chemicals known to the State of California to cause cancer, birth defects, or reproductive harm.

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Introduction

Read this information carefully to learn how to operate and maintain your product properly and to avoid injury and product damage. You are responsible for operating the product properly and safely.

Whenever you need service, genuine Toro parts, or additional information, contact an Authorized Service Dealer or Toro Customer Service and have the model and serial numbers of your product ready. The model and serial numbers are on a plate mounted on the left side of the frame under the foot rest. Write the numbers in the space provided.

| | |
|-------------------|--|
| Model No. | |
| Serial No. | |



1. Safety-alert symbol

Important calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Contents

| | | | |
|--|----|---|----|
| Safety | 4 | Bleeding Air from the Fuel Injectors..... | 44 |
| Safe Operating Practices..... | 4 | Electrical System Maintenance | 45 |
| Toro Riding Mower Safety | 6 | Servicing the Battery | 45 |
| Sound Power Level..... | 7 | Accessing the Fuses | 46 |
| Sound Pressure Level..... | 7 | Drive System Maintenance | 46 |
| Vibration Level | 7 | Adjusting the Traction Drive for Neutral..... | 46 |
| Safety and Instructional Decals | 8 | Adjusting the Rear-Wheel Toe-In..... | 47 |
| Setup | 12 | Cooling System Maintenance | 47 |
| 1 Adjusting the Tire Pressure..... | 12 | Removing Debris from the Cooling System | 47 |
| 2 Adjusting the Control-Arm Position | 13 | Brake Maintenance | 48 |
| 3 Installing the Cutting Units..... | 13 | Adjusting the Parking Brakes..... | 48 |
| 4 Adjusting the Turf-Compensation Spring | 16 | Adjusting the Parking-Brake Latch..... | 49 |
| 5 Installing Rear Weights | 17 | Belt Maintenance | 49 |
| 6 Installing the CE Hood Latch | 18 | Checking and Tensioning the Alternator | |
| 7 Using the Cutting-Unit Kickstand..... | 18 | Belt..... | 49 |
| Product Overview | 19 | Hydraulic System Maintenance | 50 |
| Controls | 19 | Changing the Hydraulic Fluid..... | 50 |
| Specifications | 24 | Replacing the Hydraulic Filters | 50 |
| Attachments/Accessories..... | 24 | Checking the Hydraulic Lines and Hoses..... | 51 |
| Operation | 25 | Using the Hydraulic-System Test Ports | 51 |
| Think Safety First..... | 25 | Cutting Unit System Maintenance..... | 52 |
| Checking the Level of the Engine Oil..... | 26 | Backlapping the Cutting Units..... | 52 |
| Checking the Cooling System..... | 26 | Storage | 53 |
| Adding Fuel..... | 27 | Preparing the Traction Unit | 53 |
| Checking the Hydraulic Fluid | 28 | Preparing the Engine | 53 |
| Checking the Reel-to-Bedknife Contact | 29 | | |
| Checking the Torque of the Wheel Nuts..... | 29 | | |
| Breaking-in the Machine..... | 29 | | |
| Bleeding the Fuel System..... | 30 | | |
| Starting and Stopping the Engine..... | 30 | | |
| Adjusting the Lift-Arm Counterbalance..... | 31 | | |
| Adjusting the Lift-Arm Turn-Around Position..... | 31 | | |
| Pushing or Towing the Machine..... | 31 | | |
| Locating the Jacking Points | 32 | | |
| Transporting the Machine..... | 33 | | |
| Loading the Machine | 34 | | |
| Setting the Reel Speed | 35 | | |
| Understanding the Diagnostic Light..... | 36 | | |
| Checking the Interlock Switches | 36 | | |
| Hydraulic Valve Solenoid Functions | 36 | | |
| Operating Tips | 37 | | |
| Maintenance | 38 | | |
| Recommended Maintenance Schedule(s) | 38 | | |
| Daily Maintenance Checklist | 39 | | |
| Service Interval Chart | 40 | | |
| Lubrication | 40 | | |
| Greasing the Bearings and Bushings | 40 | | |
| Engine Maintenance | 42 | | |
| Servicing the Air Cleaner..... | 42 | | |
| Servicing the Engine Oil and Filter..... | 42 | | |
| Adjusting the Throttle..... | 43 | | |
| Fuel System Maintenance | 44 | | |
| Draining the Fuel Tank | 44 | | |
| Checking the Fuel Lines and Connections | 44 | | |
| Servicing the Water Separator | 44 | | |
| Cleaning the Fuel-Intake Screen | 44 | | |

Safety

This machine has been designed in accordance with EN ISO 5395:2013 and ANSI B71.4-2012 and meets or exceeds these standards when equipped with rear weight; refer to the procedure for Installing Rear Weights in the Setup section.

Improper use or maintenance by the operator or owner can result in injury. To reduce the potential for injury, comply with these safety instructions and always pay attention to the safety alert symbol, which means **Caution, Warning, or Danger**—personal safety instruction. Failure to comply with the instruction may result in personal injury or death.

Safe Operating Practices

Training

- Read the operator's manual and other training material carefully. Be familiar with the controls, safety signs, and the proper use of the equipment.
- Never allow children or people unfamiliar with these instructions to use or service the mower. Local regulations may restrict the age of the operator.
- Never mow while people, especially children, or pets are nearby.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- Do not carry passengers.
- All drivers and mechanics should seek and obtain professional and practical instruction. The owner is responsible for training the users. Such instruction should emphasize:
 - the need for care and concentration when working with ride-on machines;
 - control of a ride-on machine sliding on a slope will not be regained by the application of the brake. The main reasons for loss of control are:
 - ◇ insufficient wheel grip;
 - ◇ being driven too fast;
 - ◇ inadequate braking;
 - ◇ the type of machine is unsuitable for its task;
 - ◇ lack of awareness of the effect of ground conditions, especially slopes;
 - ◇ incorrect hitching and load distribution.
- The owner/user can prevent and is responsible for accidents or injuries occurring to himself or herself, other people, or property.

Preparation

- While mowing, always wear substantial, slip-resistant footwear, long trousers, safety glasses, and ear protection. Long hair, loose clothing, or jewelry may get tangled in moving parts.
- Thoroughly inspect the area where the equipment is to be used and remove all objects that may be thrown by the machine.
- Replace faulty silencers/mufflers.
- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Check that the operator's presence controls, safety switches and shields are attached and functioning properly. Do not operate unless they are functioning properly.

Safe Handling of Fuels

- To avoid personal injury or property damage, use extreme care in handling fuel. Fuel is extremely flammable and the vapors are explosive.
- Extinguish all cigarettes, cigars, pipes, and other sources of ignition.
- Use only an approved fuel container.
- Never remove fuel cap or add fuel with the engine running.
- Allow engine to cool before refueling.
- Never refuel the machine indoors.
- Never store the machine or fuel container where there is an open flame, spark, or pilot light such as on a water heater or on other appliances.
- Never fill containers inside a vehicle or on a truck or trailer bed with a plastic liner. Always place containers on the ground away from your vehicle before filling.
- Remove equipment from the truck or trailer and refuel it on the ground. If this is not possible, then add fuel to such equipment with a portable container, rather than from a fuel-dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
- If fuel is spilled on clothing, change clothing immediately.
- Never overfill fuel tank. Replace fuel cap and tighten securely.

Operation

- Do not operate the engine in a confined space where dangerous carbon monoxide and exhaust gases can collect.
- Mow only in daylight or in good artificial light.

- Before attempting to start the engine, disengage all blade attachment clutches, shift into neutral, and engage the parking brake.
- Stay alert for holes in the terrain and other hidden hazards.
- Watch out for traffic when crossing or near roadways.
- Stop the blades rotating before crossing surfaces other than grass.
- When using any attachments, never direct discharge of material toward bystanders nor allow anyone near the machine while in operation.
- Never operate the machine with damaged guards, shields, or without safety protective devices in place. Be sure all interlocks are attached, adjusted properly, and functioning properly.
- Do not change the engine governor settings or over-speed the engine. Operating the engine at excessive speed may increase the hazard of personal injury.
- Before leaving the operator's position:
 - Stop on level ground.
 - Disengage the power take-off and lower the attachments.
 - Change into neutral and set the parking brake.
 - Stop the engine and remove the key.
- Disengage drive to attachments when transporting or not in use.
- Stop the engine and disengage the drive to attachments:
 - Before refuelling
 - Before removing the grass catcher/catchers
 - Before making height adjustment unless adjustment can be made from the operator's position
 - Before clearing blockages
 - Before checking, cleaning or working on the mower
 - After striking a foreign object or if an abnormal vibration occurs. Inspect the mower for damage and make repairs before restarting and operating the equipment.
- Reduce the throttle setting during engine run-out and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing.
- Keep hands and feet away from the cutting units.
- Look behind and down before backing up to be sure of a clear path.
- Slow down and use caution when making turns and crossing roads and sidewalks. Stop cylinders/reels if not mowing.
- Do not operate the mower under the influence of alcohol or drugs.
- Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, do not operate the machine; seek shelter.

- Use care when loading or unloading the machine into a trailer or truck.
- Use care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

Slope Safety

Remember there is no such thing as a safe slope. Travel on grass slopes requires particular care.

- Slow down the machine and use extra care on hillsides. Travel in the recommended direction on hillsides. Turf conditions can affect the stability of the machine.
- Keep machine speeds low on slopes and during tight turns.
- Stay alert for humps and hollows and other hidden hazards.
- Avoid turning the machine on slopes. If you must turn, turn slowly and gradually downhill, if possible. **Do not turn sharply.**
- Use care when reversing.
- Use counterweight(s) or wheel weights when suggested in the operator's manual.
- Avoid starting, stopping, or turning the machine on a slope. If the tires lose traction, disengage the blade(s) and proceed slowly straight down the slope.
- When operating the machine on a slope, always keep all cutting units lowered.
- Use extra care while operating the machine with attachments; they can affect the stability of the machine. Follow the recommendations for using the machine on a slope in this *Operator's Manual*.

Maintenance and Storage

- Keep all nuts, bolts, and screws tight to be sure that the equipment is in safe working condition.
- Never store the equipment with fuel in the tank inside a building where fumes may reach an open flame or spark.
- Allow the engine to cool before storing in any enclosure.
- To reduce the fire hazard, keep the engine, silencer/muffler, battery compartment, and fuel-storage area free of grass, leaves, or excessive grease.
- Check the grass catcher frequently for wear or deterioration.
- Keep all parts in good working condition and all hardware and hydraulic fittings tightened. Replace all worn or damaged parts and decals.
- If you must drain the fuel tank, do this outdoors.
- Be careful while adjusting the machine to prevent entrapment of the fingers between moving blades and fixed parts of the machine.
- On multi-cylinder/multi-reel machines, take care as rotating 1 cylinder/reel can cause other cylinders/reels to rotate.

- Disengage drives, lower the cutting units, set parking brake, stop engine and remove key from ignition. Wait for all movement to stop before adjusting, cleaning, or repairing.
- Clean grass and debris from cutting units, drives, silencers/mufflers, and engine to help prevent fires. Clean up oil or fuel spills.
- Use jack stands to support components when required.
- Carefully release pressure from components with stored energy.
- Disconnect battery before making any repairs. Disconnect the negative terminal first and the positive last. Connect positive first and negative last.
- Use care when checking the cylinders/reels. Wear gloves and use caution when servicing them.
- Keep hands and feet away from moving parts. If possible, do not make adjustments with the engine running.
- Charge batteries in an open well ventilated area, away from spark and flames. Unplug charger before connecting or disconnecting from battery. Wear protective clothing and use insulated tools.

Hauling

- Use care when loading or unloading the machine into a trailer or truck.
- Use full width ramps for loading machine into trailer or truck.
- Tie the machine down securely using straps, chains, cable, or ropes. Both front and rear straps should be directed down and outward from the machine.

Toro Riding Mower Safety

The following list contains safety information specific to Toro products or other safety information that you must know that is not included in the CEN, ISO, or ANSI standard.

This product is capable of amputating hands and feet and throwing objects. Always follow all safety instructions to avoid serious injury or death.

Use of this product for purposes other than its intended use could prove dangerous to user and bystanders.

⚠ WARNING

Engine exhaust contains carbon monoxide, which is an odorless, deadly poison that can kill you.

Do not run the engine indoors or in an enclosed area.

- Know how to stop the engine quickly.
- Do not operate the machine while wearing tennis shoes or sneakers.

- Wearing safety shoes and long pants is advisable and required by some local ordinances and insurance regulations.
- Handle fuel carefully. Wipe up any spills.
- Check the safety interlock switches daily for proper operation. If a switch should fail, replace the switch before operating the machine.
- Before starting the engine, sit on the seat.
- Using the machine demands attention. To prevent loss of control:
 - Do not drive close to sand traps, ditches, creeks, or other hazards.
 - Reduce speed when making sharp turns. Avoid sudden stops and starts.
 - When near or crossing roads, always yield the right-of-way.
 - Apply the service brakes when going downhill to keep forward speed slow and to maintain control of the machine.
- When operating a machine with ROPS (roll over protection system) never remove the ROPS and always use the seat belt.
- Raise the cutting units when driving from one work area to another.
- Do not touch the engine, silencer/muffler, or exhaust pipe while the engine is running or soon after it has stopped because these areas could be hot enough to cause burns.
- If the engine stalls or loses headway and cannot make it to the top of a slope, do not turn the machine around. Always back slowly, straight down the slope.
- When a person or pet appears unexpectedly in or near the mowing area, stop mowing. Careless operation, combined with terrain angles, ricochets, or improperly positioned guards can lead to thrown-object injuries. Do not resume mowing until the area is cleared.

Maintenance and Storage

- Make sure that all hydraulic-line connectors are tight and all hydraulic hoses and lines are in good condition before applying pressure to the system.
- Keep your body and hands away from pin-hole leaks or nozzles that eject hydraulic fluid under high pressure. Use paper or cardboard, not your hands, to search for leaks. Hydraulic fluid escaping under pressure can have sufficient force to penetrate the skin and cause serious injury. Seek immediate medical attention if fluid is injected into skin.
- Before disconnecting or performing any work on the hydraulic system, relieve all pressure in the system by stopping the engine and lowering the cutting units and attachments to the ground.

- Check all fuel lines for tightness and wear on a regular basis. Tighten or repair them as needed.
- If the engine must be running to perform a maintenance adjustment, keep hands, feet, clothing, and any parts of the body away from the cutting units, attachments, and any moving parts. Keep everyone away.
- To ensure safety and accuracy, have your Toro Distributor check the maximum engine speed with a tachometer. Maximum governed engine speed should be 3300 rpm.
- For major repairs, warranty work, updates to systems, or assistance, contact your Toro Distributor.
- To ensure optimum performance and continued safety certification of the machine, use only genuine Toro replacement parts and accessories. Replacement parts and accessories made by other manufacturers could be dangerous, and such use could void the product warranty.

Sound Power Level

This unit has a guaranteed sound power level of 105 dBA, which includes an Uncertainty Value (K) of 1 dBA.

Sound power level was determined according to the procedures outlined in ISO 11094.

Sound Pressure Level

This unit has a sound pressure level at the operator's ear of 84 dBA, which includes an Uncertainty Value (K) of 1 dBA.

Sound pressure level was determined according to the procedures outlined in EN ISO 5395:2013.

Vibration Level

Hand-Arm

Measured vibration level for right hand = 0.84 m/s^2

Measured vibration level for left hand = 0.77 m/s^2

Uncertainty Value (K) = 0.5 m/s^2

Measured values were determined according to the procedures outlined in EN ISO 5395:2013.

Whole Body

Measured vibration level = 0.27 m/s^2


Uncertainty Value (K) = 0.5 m/s^2

Measured values were determined according to the procedures outlined in EN ISO 5395:2013.

Safety and Instructional Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or lost.




93-7272

1. Cutting/dismemberment hazard; fan—stay away from moving parts.

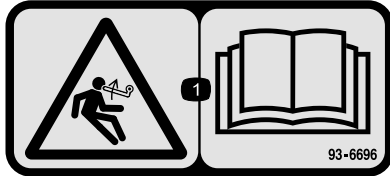


93-6696

1. Stored energy hazard—read the *Operator's Manual*.

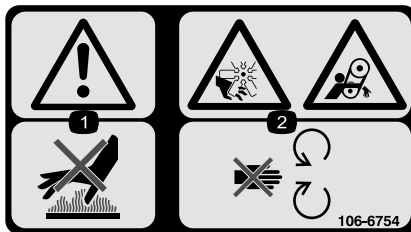


106-6754

1. Warning—do not touch the hot surface.
2. Cutting/dismemberment hazard, fan and entanglement hazard, belt—stay away from moving parts.

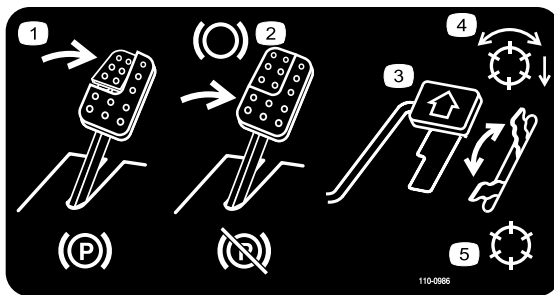


110-0986

1. Press the brake pedal and parking brake pedal to set the parking brake.
2. Press the brake pedal to apply the brake.
3. Press the traction pedal to move the machine forward.
4. Reel enabled mode
5. Transport mode

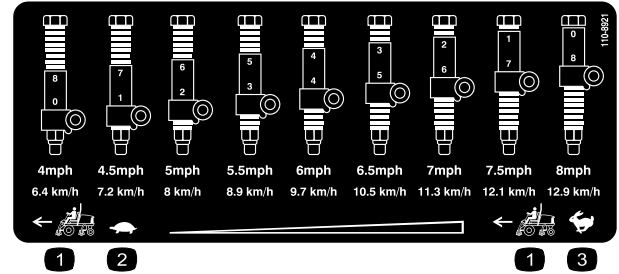

110-8921

1. Traction unit speed
2. Slow
3. Fast

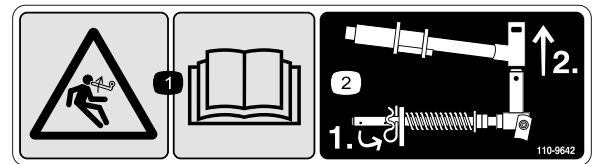


110-9642

1. Stored energy hazard—read the *Operator's Manual*.
2. Move the cotter pin to the hole closest to the rod bracket and then remove the lift arm and pivot yoke.



106-6755

1. Engine coolant under pressure.
2. Explosion hazard—read the *Operator's Manual*.
3. Warning—do not touch the hot surface.
4. Warning—read the *Operator's Manual*.



93-6689

1. Warning—do not carry passengers.

CALIFORNIA SPARK ARRESTER WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements. 117-2718

117-2718



93-6688


1. Warning—read the instructions before servicing or performing maintenance.
2. Cutting hazard of hand or foot—stop the engine and wait for moving parts to stop.



Battery Symbols


Some or all of these symbols are on your battery

1. Explosion hazard
2. No fire, open flame, or smoking.
3. Caustic liquid/chemical burn hazard
4. Wear eye protection
5. Read the *Operator's Manual*.
6. Keep bystanders a safe distance from the battery.
7. Wear eye protection; explosive gases can cause blindness and other injuries
8. Battery acid can cause blindness or severe burns.
9. Flush eyes immediately with water and get medical help fast.
10. Contains lead; do not discard.

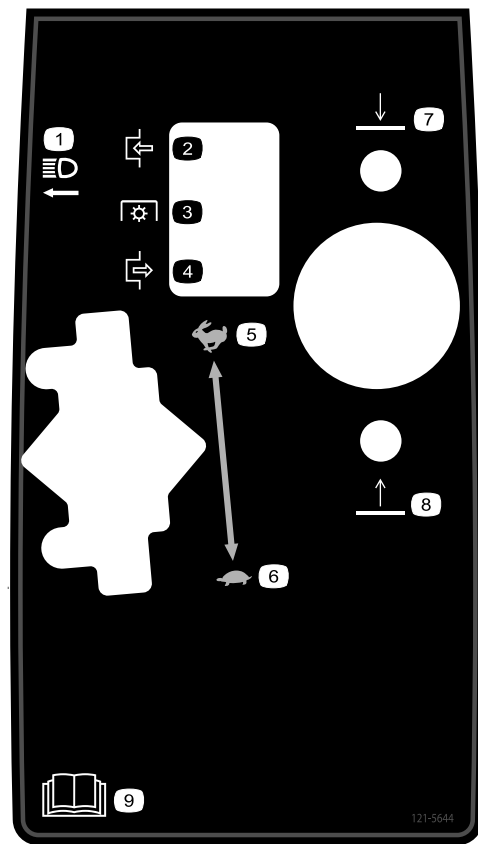


121-5644

1. Light switch
2. Engage
3. Power take-off
4. Disengage
5. Fast
6. Slow
7. Lower
8. Raise
9. Read the *Operator's Manual*.

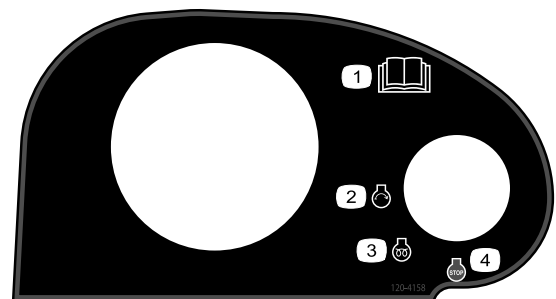


120-4158

1. Read the *Operator's Manual*.
2. Engine—start
3. Engine—preheat
4. Engine—stop

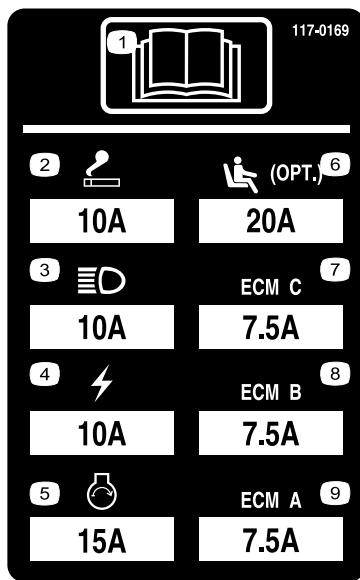

117-0169

1. Read the *Operator's Manual*.
2. Power point—10 A
3. Headlights—10 A
4. Power—10 A
5. Engine start—15 A
6. Optional air ride seat suspension—20 A
7. Engine computer management C—7.5 A
8. Engine computer management B—7.5 A
9. Engine computer management A—7.5 A

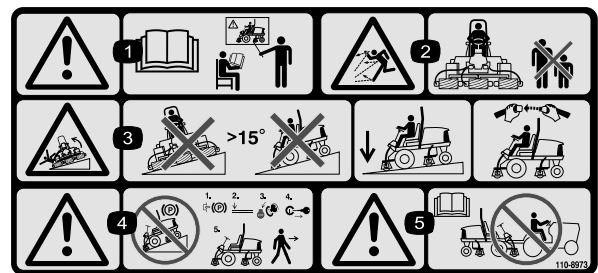


110-8973

(Affix over part no. 110-8869 for CE*)

* This safety decal includes a slope warning required on the machine for compliance to the European Lawn Mower Safety Standard EN ISO 5395:2013. The conservative maximum slope angles indicated for operation of this machine are prescribed by and required by this standard.

1. Warning—read the *Operator's Manual*, do not operate this machine unless you are trained.
2. Thrown object hazard—keep bystanders a safe distance from the machine.
3. Tipping hazard—do not operate on slopes greater than 15°; lower the cutting decks when operating on slopes; wear the safety belt.
4. Warning—do not park the machine on slopes; engage the parking brake, lower the cutting decks, stop the engine and remove the ignition key before leaving the machine
5. Warning—read the *Operator's Manual* before towing the machine.

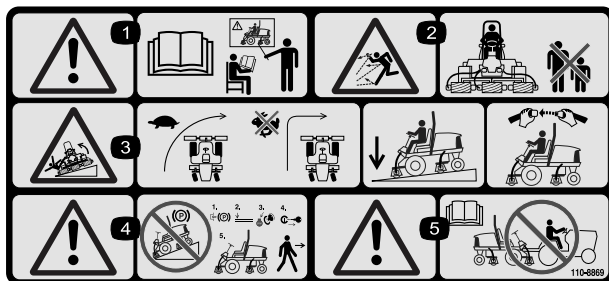

110-8869

1. Warning—read the *Operator's Manual*, do not operate this machine unless you are trained.
2. Thrown object hazard—keep bystanders a safe distance from the machine.
3. Tipping hazard—slow machine before turning, do not turn at high speeds; lower the cutting unit when driving down slopes; use a roll over protection system and wear the seat belt. Always wear a seat belt when a ROPS is in place.
4. Warning—do not park the machine on slopes; engage the parking brake, lower the cutting decks, stop the engine and remove the ignition key before leaving the machine.
5. Warning—read the *Operator's Manual*, do not tow the machine.

REELMASTER 5010-H/ 5410/5510/5610 & GROUNDMASTER 4300 QUICK REFERENCE AID

CHECK/SERVICE (daily)


1. OIL LEVEL, ENGINE
2. OIL LEVEL, HYDRAULIC TANK
3. COOLANT LEVEL, RADIATOR
4. FUEL /WATER SEPARATOR
5. PRECLEANER – AIR CLEANER

6. RADIATOR SCREEN
 7. BRAKE FUNCTION
 8. TIRE PRESSURE
 9. BELTS (FAN, ALT.)
- GREASING -- SEE OPERATOR'S MANUAL

FLUID SPECIFICATIONS/CHANGE INTERVALS

| SEE OPERATOR'S MANUAL FOR INITIAL CHANGES. | FLUID TYPE | CAPACITY | CHANGE INTERVAL | | FILTER PART NO. |
|--|-----------------------------|--|-------------------------|---------------------------|--|
| | | | FLUID | FILTER | |
| A. ENGINE OIL | SAE 15W-40CI-4 | 3.5 QTS.* (5010-H) 5.5 QTS.* | 150 HRS. | 150 HRS. | 104-5167 |
| B. HYD. CIRCUIT OIL | ISO VG 46/68 | 11 GALS.* (5010-H) 15 GALS.* | 800 HRS. | SEE INDICATOR 800 HRS. | 94-2621** 86-3010 |
| C. AIR CLEANER | | | | SEE INDICATOR | 108-3810 (5010-H) (5410) (5510) 108-3812 (5610) (4300) |
| D. WATER SEPARATOR | | | | 400 HRS. | 110-9049 |
| E. FUEL TANK | NO. 2-DIESEL | 14 GALS. | DRAIN AND FLUSH, 2 YRS. | | |
| F. COOLANT | 50/50 ETHYLENE GLYCOL/WATER | 5.5 QTS. (5010-H) 7.0 QTS. (5410) (5510) 10.0 QTS. (5610) (4300) | DRAIN AND FLUSH, 2 YRS. | | |

* INCLUDING FILTER ** EXCLUDES 5010-H

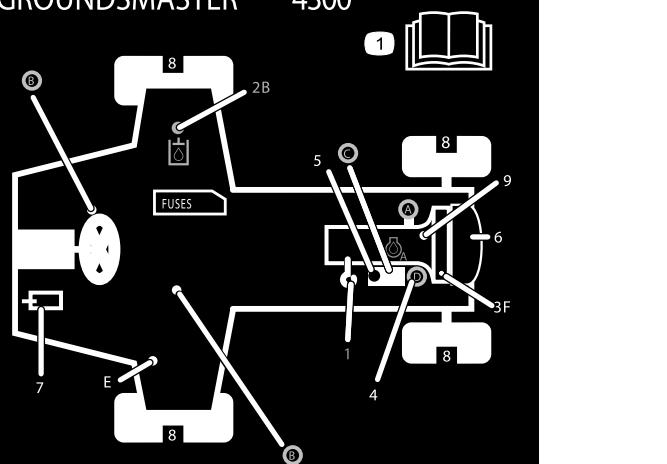

125-8753

125-8753

1. Read the *Operator's Manual* for more maintenance information.

Setup

Loose Parts

Use the chart below to verify that all parts have been shipped.

| Procedure | Description | Qty. | Use |
|-----------|---|--------|--|
| 1 | No parts required | – | Adjust the tire pressure. |
| 2 | No parts required | – | Adjust the control-arm position. |
| 3 | Front hose guide, right Front hose guide, left | 1 1 | Install the cutting units |
| 4 | No parts required | – | Adjust the turf-compensation spring. |
| 5 | Rear weights (size varies with configuration). | Varies | Install the rear weights (order from your Toro Distributor). |
| 6 | Hood-latch assembly Washer | 1 1 | Install the CE hood latch. |
| 7 | Cutting-unit kickstand | 1 | Install the cutting-unit kickstand. |

Media and Additional Parts

| Description | Qty. | Use |
|----------------------------|------|---|
| Operator's Manual | 1 | Read the Operator's Manual before operating the machine. |
| Engine operator's manual | 1 | Read the engine operator's manual for engine information and additional maintenance procedures. |
| Parts Catalog | 1 | Use the Parts Catalog to reference part numbers. |
| Declaration of Conformity | 1 | The Declaration of Conformity serves as confirmation of CE compliance. |
| Operator training material | 1 | Review the training material before operating the machine. |

Note: Determine the left and right sides of the machine from the normal operating position.

Important: Maintain even pressure in all tires to ensure uniform contact with the turf.



Adjusting the Tire Pressure

No Parts Required

Procedure

The tires are over inflated for shipping. Therefore, release some of the air to reduce the pressure. The correct air pressure in the front and rear tires is 83 to 103 kPa (12 to 15 psi).

2

Adjusting the Control-Arm Position

No Parts Required

Procedure

Adjust the position of the control arm as desired.

1. Loosen the 2 bolts securing the control arm to the retaining bracket (Figure 2).

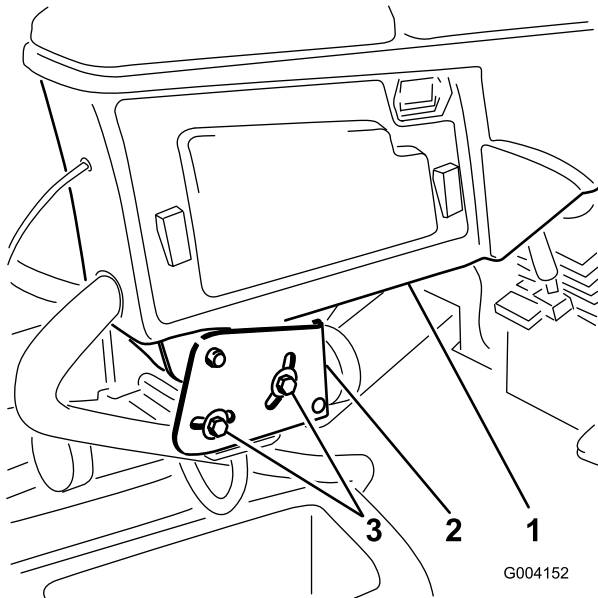


Figure 2

1. Control arm
2. Retaining bracket
3. Bolts (2)

2. Rotate the control arm to the desired position and tighten the 2 bolts.

3

Installing the Cutting Units

Parts needed for this procedure:

| | |
|---|-------------------------|
| 1 | Front hose guide, right |
| 1 | Front hose guide, left |

Procedure

1. Remove the reel motors from the shipping brackets.

2. Remove and discard the shipping brackets.
3. Remove the cutting units from the cartons. Assemble and adjust as described in the cutting unit *Operator's Manual*.
4. Ensure that the counterweight (Figure 3) is installed to the proper end of the cutting unit as described in the counterweight *Installation Instructions*.

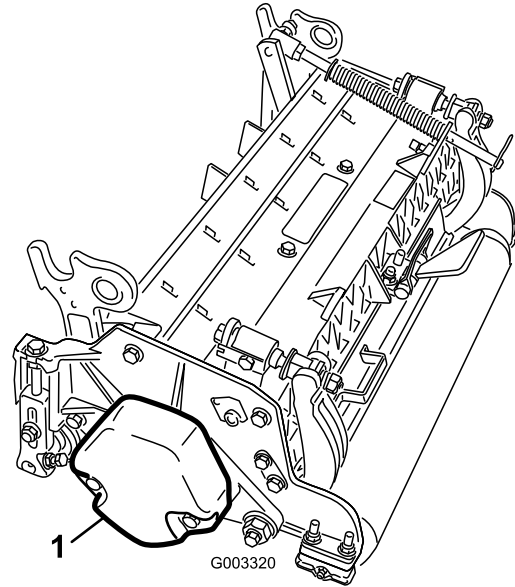


Figure 3

1. Counterweight

5. Mount the turf-compensation spring to the same side of the cutting unit as the reel-drive motor. Position the turf compensation as follows:

- A. Remove the 2 carriage bolts and nuts securing the rod bracket to the cutting-unit tabs (Figure 4).

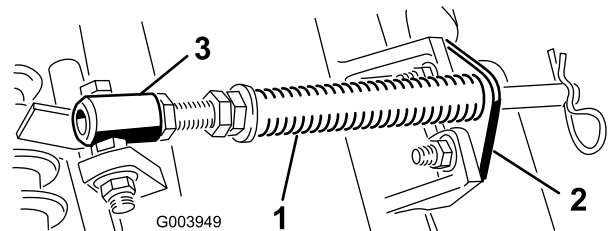


Figure 4

1. Turf-compensation spring
2. Rod bracket
3. Spring tube

- B. Remove the flange nut securing the spring-tube bolt to the carrier-frame tab (Figure 4) Remove the assembly.
- C. Mount the spring-tube bolt to the opposite tab on the carrier frame and secure it with the flange nut. Position the bolt head on the outer side of the tab as shown in Figure 5.

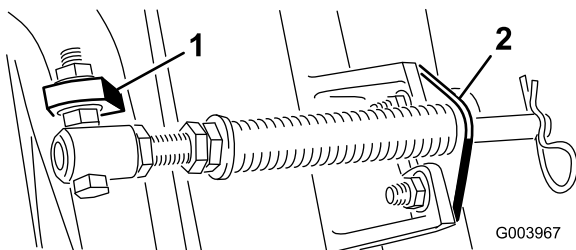


Figure 5

1. Opposite carrier-frame tab 2. Rod bracket

D. Mount the rod bracket to the cutting unit tabs with the carriage bolts and nuts (Figure 5).

Important: On cutting unit 4 (left front) and cutting unit 5 (right front), use the rod-bracket mounting nuts to install the hose guides to the front of the cutting-unit tabs (Figure 6 and Figure 7). Position the hose guides so that they lean toward the center cutting unit (Figure 7 and Figure 8).

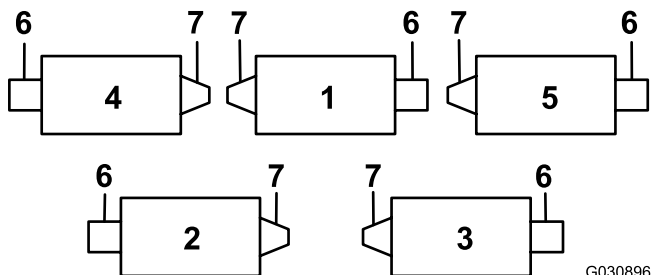


Figure 6

- | | |
|-------------------|-------------------|
| 1. Cutting unit 1 | 5. Cutting unit 5 |
| 2. Cutting unit 2 | 6. Reel motor |
| 3. Cutting unit 3 | 7. Weight |
| 4. Cutting unit 4 | |

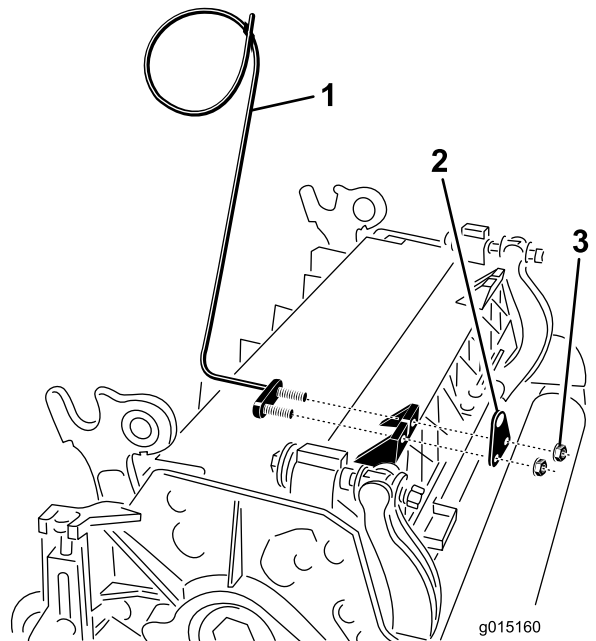


Figure 7

1. Hose guide (cutting unit 4 3. Nuts shown)
2. Rod bracket

Note: When installing or removing the cutting units, ensure that the hairpin cotter is in the spring-rod hole next to the rod bracket. Otherwise, install the hairpin cotter in the hole in the end of the rod.

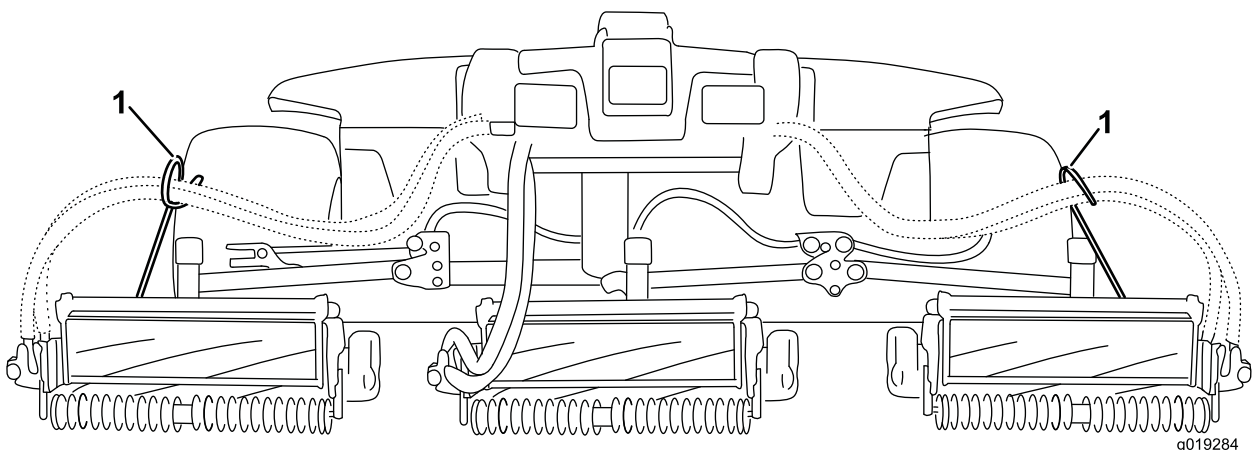


Figure 8

1. Hose guides (each must lean toward the center cutting unit)

- | | |
|--|--|
| 6. Lower all the lift arms completely. | 7. Remove the snapper pin and the cap from the lift-arm-pivot yoke (Figure 9). |
|--|--|

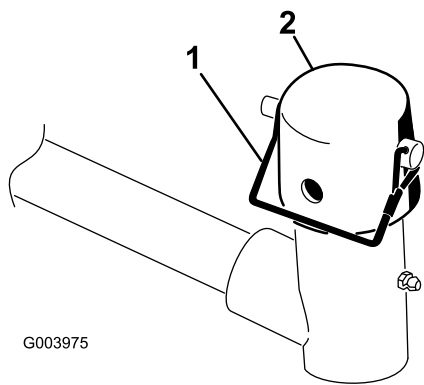


Figure 9

1. Snapper pin
2. Cap

8. For the front cutting units, slide a cutting unit under the lift arm while inserting the carrier-frame shaft up into the lift-arm-pivot yoke (Figure 10).

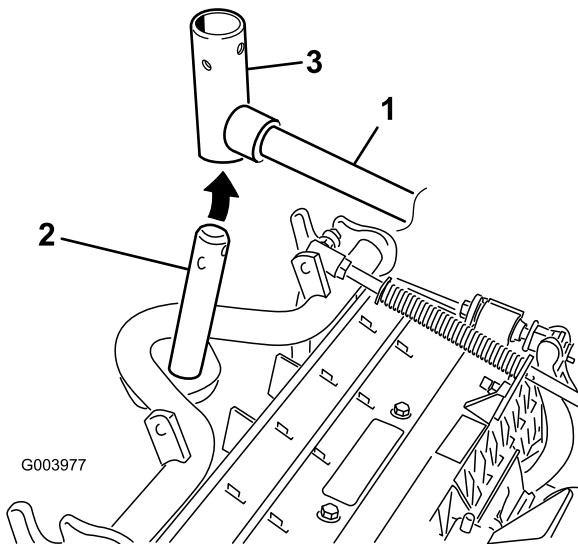


Figure 10

1. Lift arm
2. Carrier-frame shaft
3. Lift-arm-pivot yoke

9. Use the following procedure on the rear cutting units when the height of cut is above 19 mm (3/4 inch).
 - A. Remove the lynch pin and washer securing the lift-arm-pivot shaft to the lift arm and slide the lift-arm-pivot shaft out of the lift arm (Figure 11).

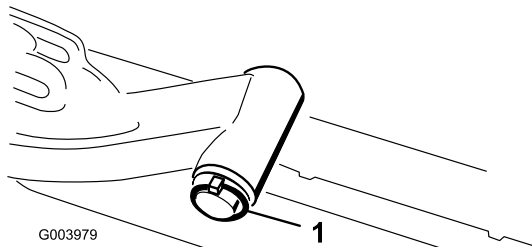


Figure 11

1. Lynch pin and washer

- B. Insert the lift-arm yoke onto the carrier-frame shaft (Figure 10).
- C. Insert the lift-arm shaft into the lift arm and secure it with the washer and lynch pin (Figure 11).

10. Insert the cap over the carrier-frame shaft and lift-arm yoke.
11. Secure the cap and the carrier-frame shaft to the lift-arm yoke with the snapper pin. Use the slot if a steering cutting unit is desired or use the hole if the cutting unit is to be locked in position (Figure 9).
12. Secure the lift-arm chain to the chain bracket with the snapper pin (Figure 12). Use the number of chain links described in the cutting unit *Operator's Manual*.

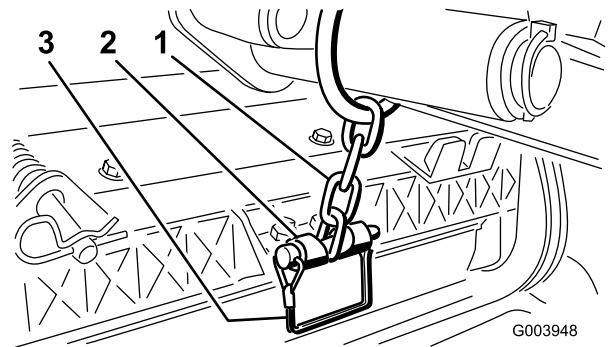


Figure 12

1. Lift-arm chain
2. Chain bracket
3. Pin

13. On cutting unit 4 (left front) and 5 (right front), insert the reel-motor hoses into the respective hose guide.
14. Coat the spline shaft of the reel motor with clean grease.
15. Oil the reel-motor O-ring and install it onto the motor flange.
16. Install the motor by rotating it clockwise so that the motor flanges clear the bolts (Figure 13). Rotate the motor counterclockwise until the flanges encircle the bolts, then tighten the bolts.

Important: Make sure that the reel-motor hoses are not twisted, kinked, or at risk of being pinched.

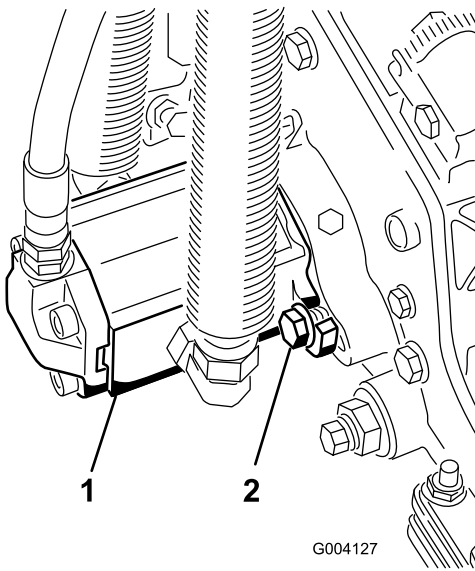


Figure 13

1. Reel-drive motor
2. Mounting bolts

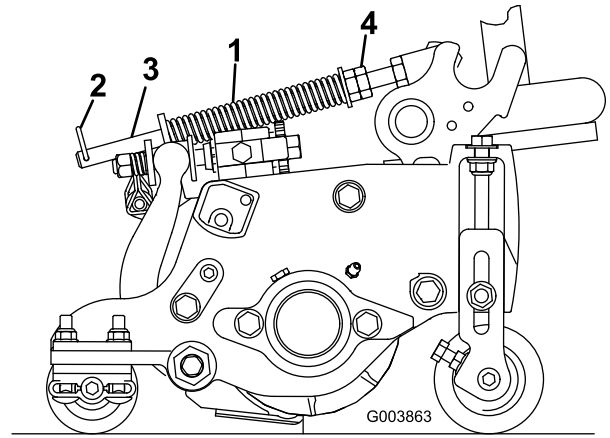


Figure 14

1. Turf-compensation spring
2. Hairpin cotter
3. Spring rod
4. Hex nuts

2. Tighten the hex nuts on the front end of the spring rod until the compressed length of the spring is 15.9 cm (6.25 inches) as shown in [Figure 14](#).

Note: When operating on rough terrain decrease the spring length by 13 mm (1/2 inch) to decrease the ground following slightly.

4

Adjusting the Turf-Compensation Spring

No Parts Required

Procedure

The turf compensation spring ([Figure 14](#)) transfers weight from the front to the rear roller, helping to reduce a wave pattern in the turf, also known as marcelling or bobbing.

Important: Make spring adjustments with the cutting unit mounted to the traction unit, pointing straight ahead, and lowered to the shop floor.

1. Ensure that the hairpin cotter is installed in the rear hole in the spring rod ([Figure 14](#)).

5

Installing Rear Weights

Parts needed for this procedure:

| | |
|--------|--|
| Varies | Rear weights (size varies with configuration). |
|--------|--|


Procedure

The machine complies with EN ISO 5395:2013 and ANSI B71.4-2012 standards when equipped with rear weights and/or 41 kg (90 lb) of calcium chloride ballast in the rear wheels. Use the following charts to determine the combinations of weights required for your configuration. Order parts from your Authorized Toro Distributor.

| Weight P/N 110-8985-03 | | | | |
|--|---|---|---|---------------------------------------|
| Groomers, roller brushes, and/or baskets | Number of weights to meet ANSI (US) standards | Number of weights to meet CE (European) standards | Fasteners (2 each required) for weights | Weight Location |
| No | 0 | 0 | N/A | N/A |
| Yes | 4 | 4 | Carriage bolt (3231-7), nut (104-8301) | 1 on top of bumper and 3 under bumper |

Important: Always install tubes inside the rear tires before adding calcium chloride. If a puncture occurs in a tire with calcium chloride, remove the machine from the turf area as quickly as possible. To prevent possible damage to the turf, immediately soak the affected area with water.

Use the following procedure to mount the appropriate amount of weight to the top or bottom of the rear bumper as shown in [Figure 15](#).

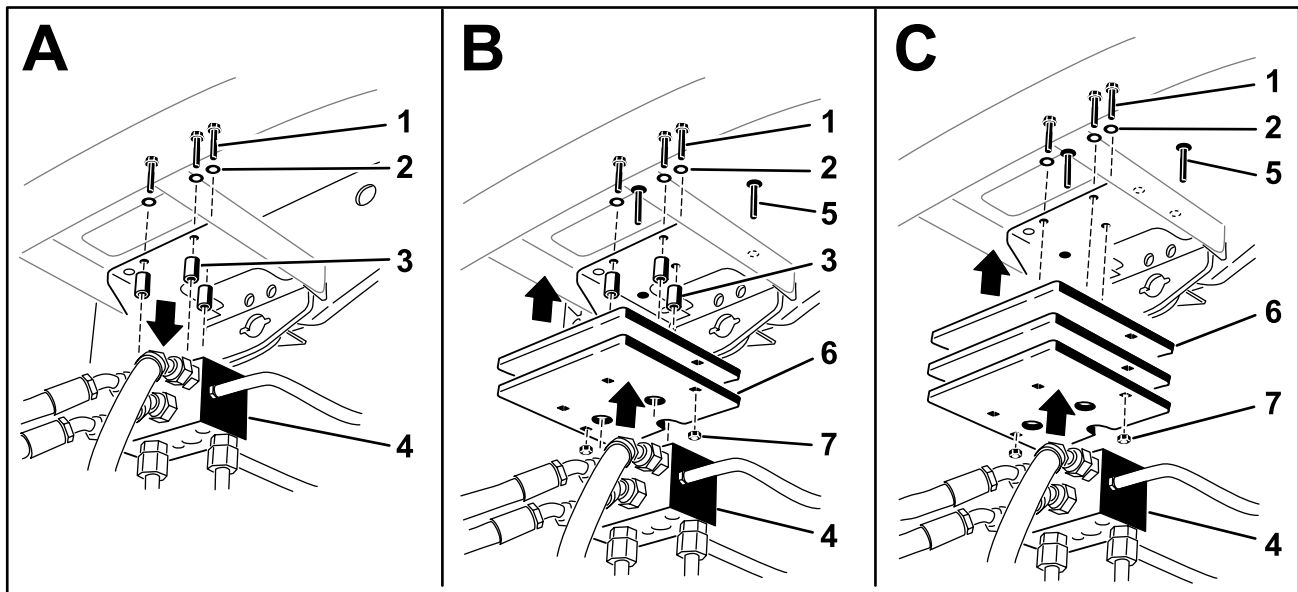

G032857

Figure 15

- | | |
|----------------------|------------------|
| 1. Bolts | 5. Carriage bolt |
| 2. Washers | 6. Weight(s) |
| 3. Spacers | 7. Nut |
| 4. Traction manifold | |

- Remove the 3 bolts, washers, and spacers securing the traction manifold to the bottom of the rear bumper ([Figure 15A](#)).

- Position the appropriate amount of weight on the top and/or bottom of the rear bumper.
- Mount the weight(s) and the traction manifold to the bumper with the 3 bolts, washers, and spacers previously removed (Figure 15B).

Note: Do not use the spacers when installing more than 2 weights **under** the bumper (Figure 15C).

- Secure the outer edges of the weight(s) to the bumper with 2 carriage bolts and nuts (Figure 15C).

6

Installing the CE Hood Latch

Parts needed for this procedure:

| | |
|---|---------------------|
| 1 | Hood-latch assembly |
| 1 | Washer |

Procedure

1. Unlatch and raise the hood.
2. Remove the rubber grommet from the hole in the left side of the hood (Figure 16).

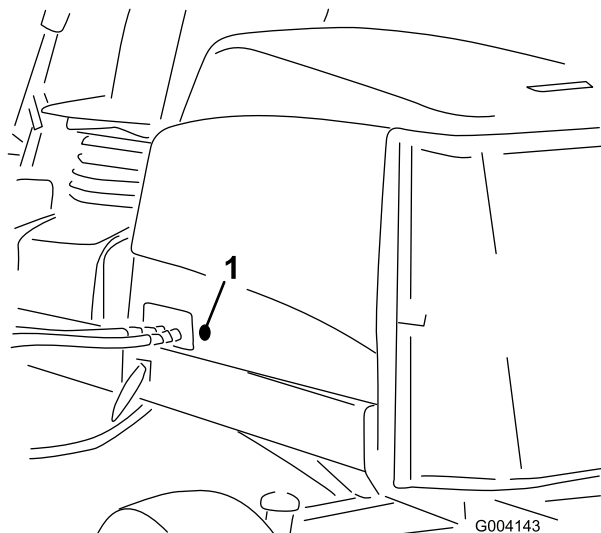


Figure 16

1. Rubber grommet

3. Remove the nut from the hood-latch assembly (Figure 17).

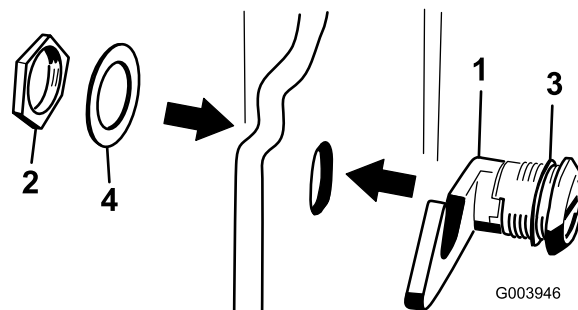


Figure 17

1. Hood latch
2. Nut
3. Rubber washer
4. Metal washer

4. Outside the hood, insert the hook end of the latch through the hole in the hood. Ensure that the rubber sealing washer remains to the outer side of the hood.
5. Inside the hood, insert the metal washer onto the latch and secure with the nut. Ensure that the latch engages the frame catch when it is locked. Use the enclosed hood-latch key to operate the hood latch.

7

Using the Cutting-Unit Kickstand

Parts needed for this procedure:

| | |
|---|------------------------|
| 1 | Cutting-unit kickstand |
|---|------------------------|

Procedure

Whenever the cutting unit has to be tipped to expose the bedknife/reel, prop up the rear of the cutting unit with the kickstand to ensure that the nuts on the back end of the bedbar-adjusting screws are not resting on the work surface (Figure 18).

Product Overview

Controls

Seat-Adjusting Controls

The seat-adjusting lever (Figure 20) allows you to adjust the seat fore and aft. The weight-adjusting knob adjusts the seat for the operator's weight. The weight gauge indicates when the seat is adjusted to the weight of the operator. The height-adjusting knob adjusts the seat for the operator's height.

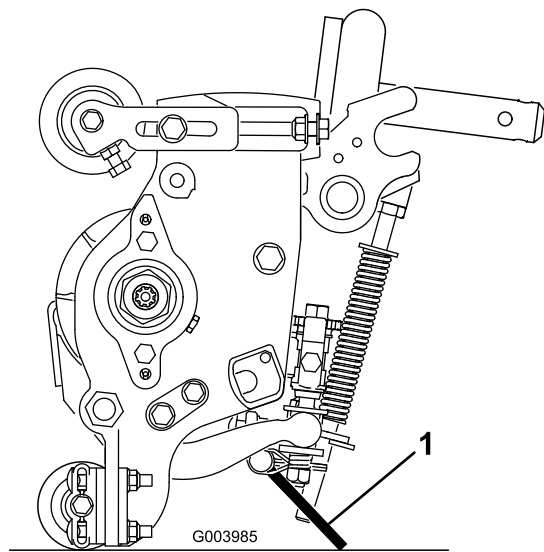


Figure 18

1. Cutting-unit kickstand

Secure the kickstand to the chain bracket with the snapper pin (Figure 19).

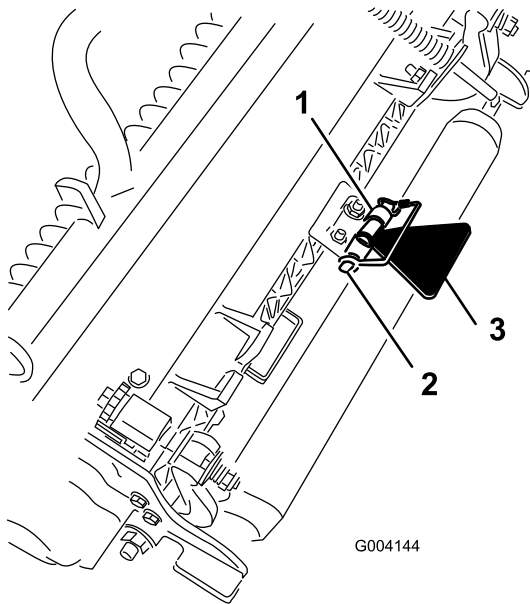


Figure 19

1. Chain bracket
2. Snapper pin
3. Cutting-unit kickstand

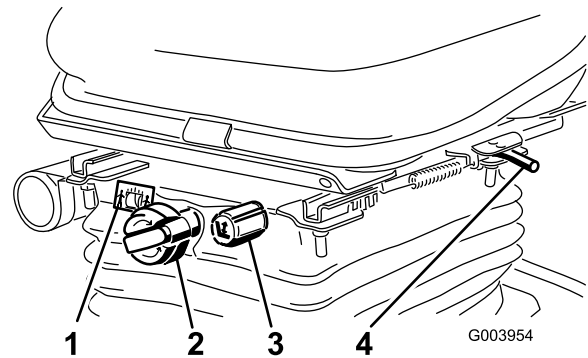


Figure 20

1. Weight gauge
2. Weight-adjusting knob
3. Height-adjusting knob
4. Adjusting lever (fore and aft)

Traction Pedal

The traction pedal (Figure 21) controls the forward and reverse operation. Press the top of the pedal to move forward and the bottom to move rearward. Ground speed depends on how far you press the pedal. For no-load, maximum ground speed, fully press the pedal while the throttle is in the FAST position.

To stop, reduce pressure on the traction pedal and allow it to return to the Neutral position.

Mow-Speed Limiter

When the mow-speed limiter (Figure 21) is flipped up it will control the mow speed and allow the cutting units to be engaged. Each spacer decreases the mowing speed by 0.8 km/h (0.5 mph). The more spacers that there are on the top of the bolt, the slower the machine goes. For maximum transport speed, flip the mow-speed limiter rearward.

Brake Pedal

Press the brake pedal (Figure 21) to stop the machine.

Parking Brake

To engage the parking brake, (Figure 21) push down on the brake pedal and press the top forward to latch. To release the

parking brake, press the brake pedal until the parking brake latch retracts.

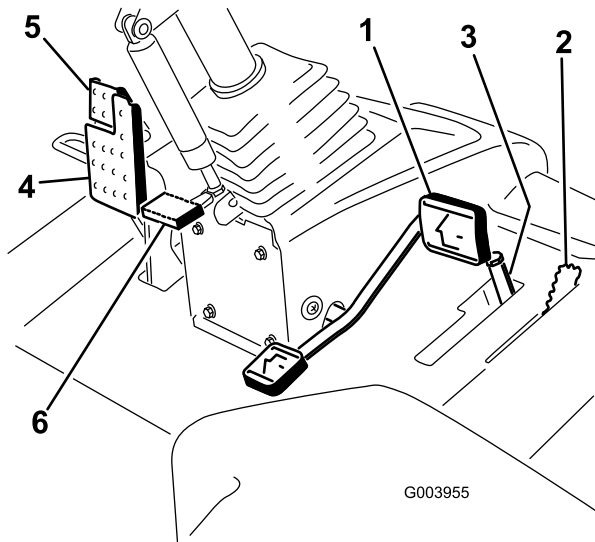


Figure 21

- | | |
|----------------------|------------------------|
| 1. Traction pedal | 4. Brake pedal |
| 2. Mow-speed limiter | 5. Parking brake |
| 3. Spacers | 6. Tilt-steering pedal |

Tilt Steering Pedal

To tilt the steering wheel, press the foot pedal (Figure 21) down and pull or push the steering tower to the most comfortable position and then release the pedal.

Throttle Control

Move the throttle control (Figure 22) forward to increase the engine speed and rearward to decrease speed.

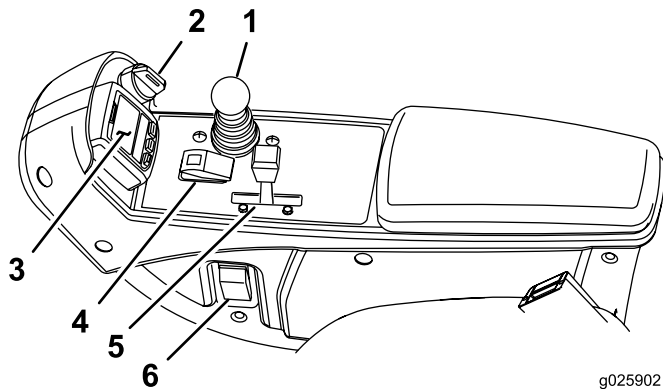


Figure 22

- | | |
|----------------------------------|--------------------------|
| 1. Lower mow/raise control lever | 4. Enable/disable switch |
| 2. Key switch | 5. Throttle control |
| 3. InfoCenter | 6. Headlight switch |

Key Switch

The key switch (Figure 22) has 3 positions: OFF, ON/PREHEAT, and START.

Lower Mow/Raise Control Lever

This lever (Figure 22) raises and lowers the cutting units and also starts and stops the reels when the reels are enabled in the mow mode.

Headlight Switch

Pivot the switch downward to turn on the headlights (Figure 22).

Enable/Disable Switch

Use this switch (Figure 22) in conjunction with the lower mow/raise control lever to operate the reels. It is not possible to lower the reels when the mow/transport lever is in the transport position.

Backlap Levers

Use the backlap levers in conjunction with the lower mow/raise control lever for backlapping the reels (Figure 23).

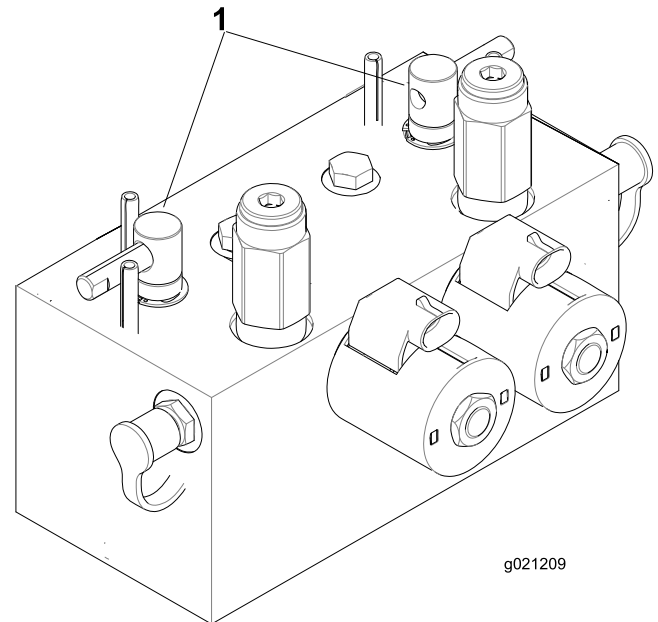


Figure 23

1. Backlap levers

Hydraulic-Filter-Restriction Indicator

With the engine running at normal operating temperature, view the indicator (Figure 24); it should be in the green zone. When the indicator is in the red zone, change the hydraulic filters.

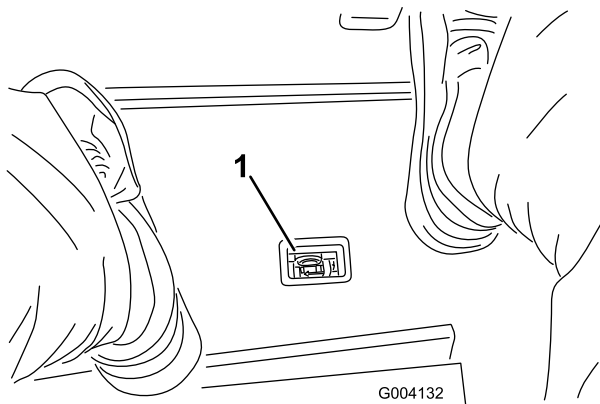


Figure 24

1. Hydraulic-filter-restriction indicator

Power Point

The power point is a 12 volt power supply for electronic devices (Figure 25).

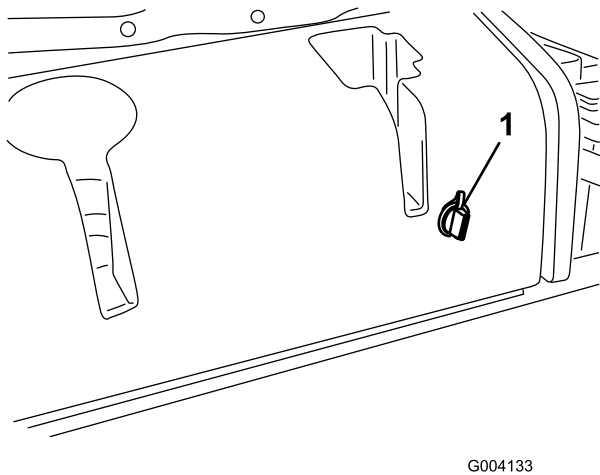


Figure 25

1. Power point

Using the InfoCenter LCD Display

The InfoCenter LCD display shows information about your machine such as the operating status, various diagnostics and other information about the machine (Figure 26). There is a splash screen and main information screen of the InfoCenter. You can switch between the splash screen and main information screen, at any time, by pressing any of the InfoCenter buttons and then selecting the appropriate directional arrow.

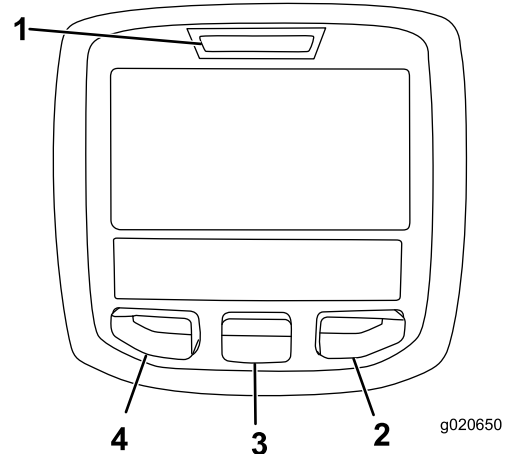


Figure 26

1. Indicator light
2. Right button
3. Middle button
4. Left button























- **LEFT Button, MENU ACCESS/BACK Button**—press this button to access the InfoCenter menus. You can use it to back out of any menu you are currently using.
- **MIDDLE Button**—use this button to scroll down menus.
- **RIGHT Button**—use this button to open a menu where a right arrow indicates additional content.

Note: The purpose of each button may change depending on what is required at the time. Each button will be labeled with an icon displaying its current function.











InfoCenter Icon Description

| | |
|--------------------|--|
| SERVICE DUE | Indicates when scheduled service should be performed |
| | Hour meter |
| | Info icon |
| | Fast |
| | Slow |
| | Fuel level |

InfoCenter Icon Description (cont'd.)

| | |
|---|---|
|  | Glow plugs are active |
|  | Raise cutting units |
|  | Lower cutting units |
|  | Operator must sit in seat |
|  | Parking Brake Indicator—indicates when the parking brake is On |
|  | Identifies the range as High (Transport) |
|  | Neutral |
|  | Identifies the range as Low (Mow) |
|  | Coolant Temperature—indicates the engine coolant temperature in either °C or °F |
|  | Temperature (hot) |
|  | PTO is engaged |
|  | Denied or not allowed |
|  | Engine Start |
|  | Stop or shutdown |
|  | Engine |
|  | Key switch |
|  | Indicates when the cutting units are being lowered |
|  | Indicates when the cutting units are being raised |
|  | PIN passcode |
|  | CAN bus |
|  | InfoCenter |
|  | Bad or failed |

InfoCenter Icon Description (cont'd.)

| | |
|---|---|
|  | Bulb |
|  | Output of TEC controller or control wire in harness |
|  | Switch |
|  | Operator must release switch |
|  | Operator should change to indicated state |
| Symbols are often combined to form sentences. Some examples are shown below | |
|  | Operator should put machine in neutral |
|  | Engine start denied |
|  | Engine shutdown |
|  | Engine coolant too hot |
|  | Sit down or set parking brake |

Using the Menus

To access the InfoCenter menu system, press the menu access button while at the main screen. This will bring you to the main menu. Refer to the following tables for a synopsis of the options available from the menus:

| Main Menu | |
|-----------|---|
| Menu Item | Description |
| FAULTS | The FAULTS menu contains a list of the recent machine faults. Refer to the <i>Service Manual</i> or your Authorized Toro Distributor for more information on the FAULTS menu and the information contained there. |
| SERVICE | The SERVICE menu contains information on the machine such as hours of use, counters, and other similar numbers. |

| | |
|-------------|--|
| DIAGNOSTICS | The DIAGNOSTICS menu displays the state of each machine switch, sensor, and control output. You can use this to troubleshoot certain issues as it will quickly tell you which machine controls are on and which are off. |
| SETTINGS | The SETTINGS menu allows you to customize and modify configuration variables on the InfoCenter display. |
| ABOUT | The ABOUT menu lists the model number, serial number, and software version of your machine. |

| SERVICE | |
|-----------|---|
| Menu Item | Description |
| HOURS | Lists the total number of hours that the machine, engine and PTO have been on, as well as the number of hours the machine has been transported and service due. |
| COUNTS | Lists numerous counts the machine has experienced. |

| DIAGNOSTICS | |
|---------------|---|
| Menu Item | Description |
| CUTTING UNITS | Indicates the inputs, qualifiers, and outputs for raising and lowering the cutting units. |
| HI/LOW RANGE | Indicates the inputs, qualifiers, and outputs for driving in transport mode. |
| PTO | Indicates the inputs, qualifiers, and outputs for enabling the PTO circuit. |
| ENGINE RUN | Indicates the inputs, qualifiers, and outputs for starting the engine. |
| BACKLAP | Indicates the inputs, qualifiers and outputs for operating the backlap function. |

| SETTINGS | |
|---------------|---|
| Menu Item | Description |
| UNITS | Controls the units used on the InfoCenter. The menu choices are English or Metric |
| LANGUAGE | Controls the language used on the InfoCenter*. |
| LCD BACKLIGHT | Controls the brightness of the LCD display. |
| LCD CONTRAST | Controls the contrast of the LCD display. |

| | |
|--------------------------|---|
| FRONT BACKLAP REEL SPEED | Controls the speed of the front reels in backlap mode. |
| REAR BACKLAP REEL SPEED | Controls the speed of the rear reels in backlap mode. |
| PROTECTED MENUS | Allows the superintendant/mechanic to access protected menus by inputting a passcode. |
| BLADE COUNT | Controls the number of blades on the reel for reel speed. |
| MOW SPEED | Controls the ground speed for determining the reel speed. |
| HEIGHT OF CUT (HOC) | Controls the height of cut (HOC) for determining the reel speed. |
| F REEL RPM | Displays the calculated reel speed position for the front reels. The reels can also be manually adjusted. |
| R REEL RPM | Displays the calculated reel speed position for the rear reels. The reels can also be manually adjusted. |

* Only "operator-faced" text is translated. Faults, Service, and Diagnostics screens are "service-faced". Titles will be in the selected language, but menu items are in English.

| ABOUT | |
|-----------------------------|---|
| Menu Item | Description |
| MODEL | Lists the model number of the machine. |
| SN | Lists the serial number of the machine. |
| MACHINE CONTROLLER REVISION | Lists the software revision of the master controller. |
| INFOCENTER REVISION | Lists the software revision of the InfoCenter. |
| CAN BUS | Lists the machine communication bus status. |

PROTECTED Menus

There are 5 operating configuration settings that are adjustable within the SETTINGS menu of the InfoCenter: BLADE COUNT, MOW SPEED, HEIGHT OF CUT (HOC), F REEL RPM, and R REEL RPM. Lock these settings using the PROTECTED menu.

Note: At the time of delivery, the initial password code is programmed by your distributor.

Accessing the Protected Menu Settings

1. From the MAIN menu, scroll down to the SETTINGS menu and press the right button.
2. In the SETTINGS menu, scroll down to the PROTECTED menu and press the right button.
3. To enter the passcode, use the center button to set the first digit then press the right button to move on to the next digit.
4. Use the center button to set the second digit then press the right button to move on to the next digit.
5. Use the center button to set the third digit then press the right button to move on to the next digit.
6. Use the center button to set the fourth digit then press the right button.
7. Press the middle button to enter the code.
8. If the code has been accepted and the protected menu has been “UNLOCKED”, PIN will be displayed in the upper right corner of the display screen.

You can change the ability to view and change the settings in the PROTECTED menu. Once you have accessed the PROTECTED menu, scroll down to PROTECT SETTINGS. Using the right button, change PROTECT SETTINGS to OFF to allow the ability to view and change the settings in the PROTECTED menu without entering the passcode. Change PROTECT SETTINGS to ON to hide the protected options and require a passcode to change the setting in the PROTECTED menu. After the pass code has been set, the key switch must be turned off and back on to enable and save this feature.

Note: If you forget the passcode, please contact your distributor for assistance.

Setting the Blade Count

1. In the SETTINGS menu, scroll down to BLADE COUNT.

Specifications

Note: Specifications and design are subject to change without notice.

| | |
|--------------------|----------------------------|
| Transport Width | 233 cm (92 inches) |
| Width of cut | 254 cm (100 inches) |
| Length | 282 cm (111 inches) |
| Height | 160 cm (63 inches) |
| Weight | 1,276 kg (2,813 lb) |
| Engine | Kubota 44.2 hp (turbo) |
| Fuel-tank capacity | 53 L (14 US gallons) |
| Transport speed | 0 to 16 km/h (0 to 10 mph) |
| Mowing speed | 0 to 13 km/h (0 to 8 mph) |

2. Press the right button to change the blade count between 5, 8, or 11 blade reels.

Setting the Mow Speed

1. In the SETTINGS menu, scroll down to MOW SPEED.
2. Press the right button to select mow speed.
3. Use the center and right button to select the appropriate mow speed set on the mechanical mow speed limiter on the traction pedal.
4. Press the left button to exit mow speed and save the setting.

Setting the Height of Cut (HOC)

1. In the SETTINGS menu, scroll down to HOC.
2. Press the right button to select HOC.
3. Use the center and right button to select the appropriate HOC setting. (If the exact setting is not displayed, select the nearest HOC setting from the list displayed).
4. Press the left button to exit HOC and save the setting.

Setting the Front and Rear Reel Speeds

Although the front and rear reel speeds are calculated by inputting the number of blades, mow speed, and HOC into the InfoCenter, you can manually change the setting to accommodate for different mowing conditions.

1. To change the reel speed settings, scroll down to the F REEL RPM, R REEL RPM, or both.
2. Press the right button to change the reel speed value. As the speed setting is changed, the display will continue to show the calculated reel speed based on blade count, mow speed, and HOC which was previously entered, but the new value will also be displayed.

Attachments/Accessories

A selection of Toro approved attachments and accessories is available for use with the machine to enhance and expand its capabilities. Contact your Authorized Service Dealer or Distributor or go to www.Toro.com for a list of all approved attachments and accessories.

To best protect your investment and maintain optimal performance of your Toro equipment, count on Toro genuine parts. When it comes to reliability, Toro delivers replacement parts designed to the exact engineering specification of our equipment. For peace of mind, insist on Toro genuine parts.

Operation

Note: Determine the left and right sides of the machine from the normal operating position.

⚠ CAUTION

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Lower the cutting units to the ground, set the parking brake and remove the key from the ignition switch before servicing or making adjustments to the machine.

Think Safety First

Please read all safety instructions and symbols in the safety section. Knowing this information could help you or bystanders avoid injury.

⚠ DANGER

Operating the machine on wet grass or steep slopes can cause sliding and loss of control.

- Do not operate on slopes greater than 15 degrees.
- Reduce speed and use extreme caution on slopes.
- Do not operate the machine near water.

⚠ DANGER

Wheels dropping over edges can cause rollovers, which may result in serious injury, death, or drowning.

Do not operate the machine near drop-offs.

⚠ DANGER

Operating the machine while the roll bar is down may lead to serious injury or death in the event of a rollover.

Always keep the roll bar in the fully raised and locked position and use the seat belt.

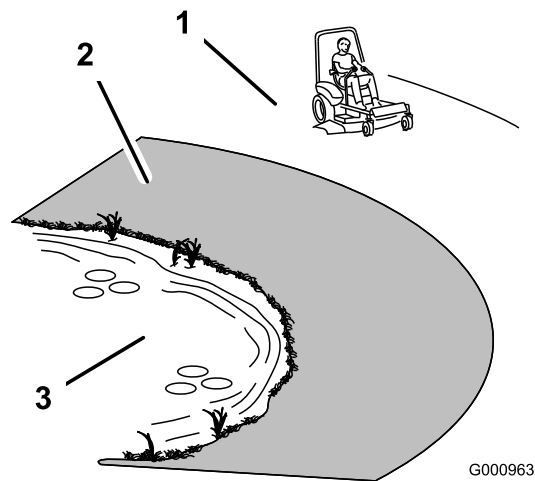


Figure 27

1. Safe zone—use the Z Master here on slopes less than 15 degrees or flat areas.
2. Danger zone—use a walk-behind mower and/or a hand trimmer on slopes greater than 15 degrees, near drop-offs and water.
3. Water

⚠ CAUTION

This machine produces sound levels in excess of 85 dBA at the operator's ear and can cause hearing loss through extended periods of exposure.

Wear hearing protection when operating this machine.

The use of protective equipment for eyes, ears, hands, feet, and head is recommended.

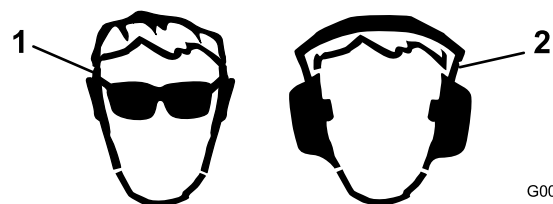


Figure 28

1. Wear safety glasses.
2. Wear hearing protection.

Checking the Level of the Engine Oil

The engine is shipped with oil in the crankcase; however, you must check the oil level before and after first starting the engine.

Crankcase capacity: approximately 5.2 L (5.5 US qt) with the filter.

Use high-quality engine oil that meets the following specifications:

- API Classification Level Required: CH-4, CI-4, or higher
- Preferred oil: SAE 15W-40—above: -17° C (0° F)
- Alternate oil: SAE 10W-30 or 5W-30: all temperatures

Toro Premium Engine oil is available from your distributor in either 15W-40 or 10W-30 viscosity.

1. Park the machine on a level surface, stop the engine, set the parking brake, and remove the key from the ignition switch.
2. Open the hood.
3. Remove the dipstick, wipe it clean, and install it ([Figure 29](#)).

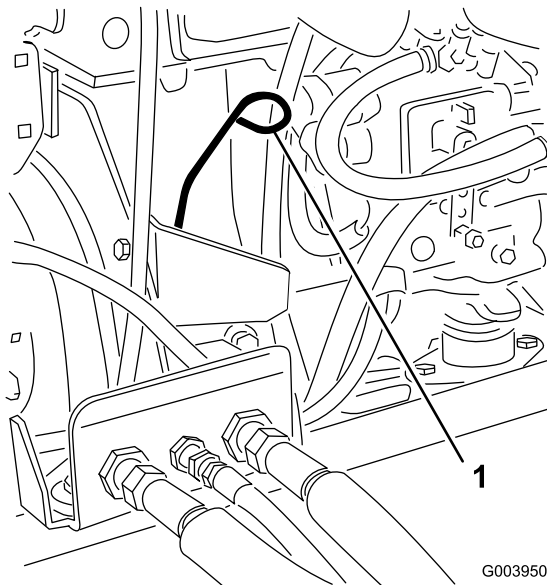


Figure 29

1. Dipstick

4. Remove the dipstick and check the oil level on the dipstick.
The oil level should be up to the Full mark.
5. If the oil level is below the Full mark, remove the fill cap ([Figure 30](#)) and add oil until the level reaches the Full mark on the dipstick.

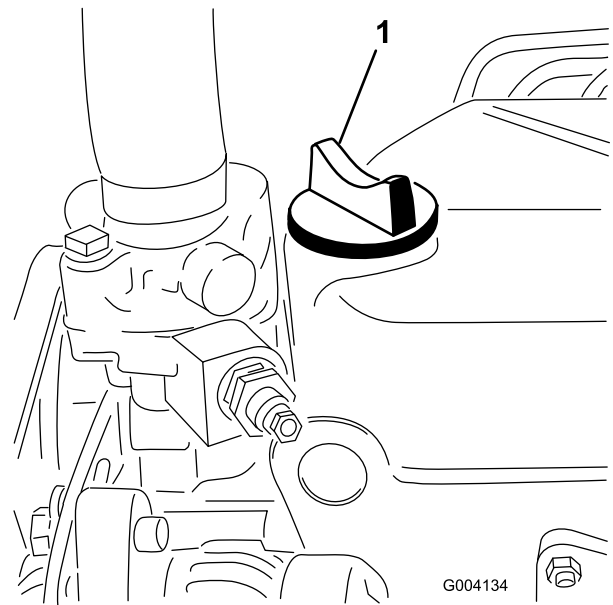


Figure 30

1. Oil-fill cap

Do not overfill the engine.

Important: Be sure to keep the oil level between the upper and lower limits on the oil gauge. Engine failure may occur as a result of overfilling or underfilling the engine oil.

6. Install the oil-fill cap and close the hood.

Checking the Cooling System

Clean debris off of the screen, oil cooler, and front of the radiator daily and more often if conditions are extremely dusty and dirty. Refer to the section on Removing Debris from the Cooling System in [Cooling System Maintenance](#) (page 47).

The cooling system is filled with a 50/50 solution of water and permanent ethylene glycol antifreeze. Check the level of coolant in the expansion tank at the beginning of each day before starting the engine. The capacity of the cooling system is 9.5 L (10.0 US qt).

⚠ CAUTION

If the engine has been running, the pressurized, hot coolant can escape and cause burns.

- Do not open the radiator cap when the engine is running.
- Use a rag when opening the radiator cap, and open the cap slowly to allow steam to escape.

1. Check the level of coolant in the expansion tank ([Figure 31](#)).

The coolant level should be between the marks on the side of the tank.

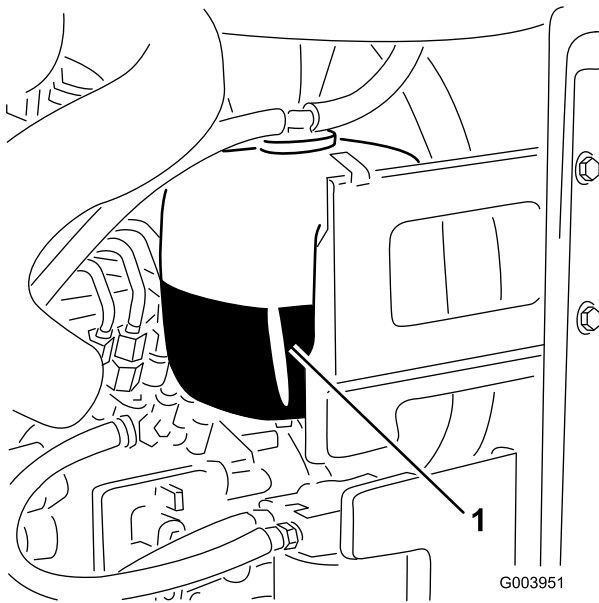


Figure 31

1. Expansion tank
-
2. If the coolant level is low, remove the expansion-tank cap and replenish the system.
- Important: Do not overfill the system.**
3. Install the expansion-tank cap.

Adding Fuel

Use only clean, fresh diesel fuel or biodiesel fuels with low (<500 ppm) or ultra low (<15 ppm) sulfur content. The minimum cetane rating should be 40. Purchase fuel in quantities that can be used within 180 days to ensure fuel freshness.

Fuel-tank capacity: 53 L (14 US gallons)

Use summer-grade diesel fuel (No. 2-D) at temperatures above -7° C (20° F) and winter-grade (No. 1-D or No. 1-D/2-D blend) below that temperature. Use of winter grade fuel at lower temperatures provides lower flash point and cold flow characteristics which will ease starting and reduce fuel filter plugging.

Use of summer-grade fuel above -7° C (20° F) will contribute toward longer fuel-pump life and increased power compared to winter-grade fuel.

Important: Do not use kerosene or gasoline instead of diesel fuel. Failure to observe this caution will damage the engine.

⚠ WARNING

Fuel is harmful or fatal if swallowed. Long-term exposure to vapors can cause serious injury and illness.

- **Avoid prolonged breathing of vapors.**
- **Keep face away from nozzle and gas tank or conditioner opening.**
- **Keep fuel away from eyes and skin.**

Biodiesel Ready

This machine can also use a biodiesel blended fuel of up to B20 (20% biodiesel, 80% petrodiesel). The petrodiesel portion should be low or ultra low sulfur. Observe the following precautions:

- The biodiesel portion of the fuel must meet specification ASTM D6751 or EN14214.
- The blended fuel composition should meet ASTM D975 or EN590.
- Painted surfaces may be damaged by biodiesel blends.
- Use B5 (biodiesel content of 5%) or lesser blends in cold weather.
- Monitor seals, hoses, gaskets in contact with fuel as they may be degraded over time.
- Fuel filter plugging may be expected for a time after converting to biodiesel blended fuel.
- Contact your distributor if you wish for more information on biodiesel.

⚠ DANGER

In certain conditions, fuel is extremely flammable and highly explosive. A fire or explosion from fuel can burn you and others and can damage property.


- Fill the fuel tank outdoors, in an open area, when the engine is cold. Wipe up any fuel that spills.
- Never fill the fuel tank inside an enclosed trailer.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in an approved container and keep it out of the reach of children. Do not buy more than a 30-day supply of fuel.
- Do not operate without entire exhaust system in place and in proper working condition.

⚠ DANGER

In certain conditions during fueling, static electricity can be released causing a spark which can ignite the fuel vapors. A fire or explosion from fuel can burn you and others and can damage property.

- Always place fuel containers on the ground away from your vehicle before filling.
- Do not fill fuel containers inside a vehicle or on a truck or trailer bed because interior carpets or plastic truck bed liners may insulate the container and slow the loss of any static charge.
- When practical, remove equipment from the truck or trailer and fuel the equipment with its wheels on the ground.
- If this is not possible, then fuel such equipment on a truck or trailer from a portable container, rather than from a fuel-dispenser nozzle.
- If you must use a fuel-dispenser nozzle, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete.

1. Park the machine on a level surface.
2. Using a clean rag, clean area around fuel tank cap.
3. Remove the cap from the fuel tank (Figure 32).

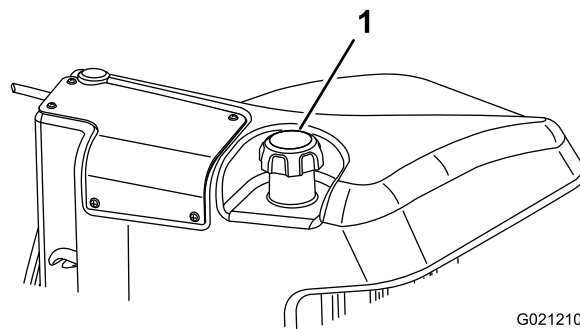

G021210

Figure 32

1. Fuel-tank cap

4. Fill the tank until the level is to the bottom of the filler neck with diesel fuel.
5. Install fuel tank cap tightly after filling tank.

Note: If possible, fill the fuel tank after each use. This will minimize possible buildup of condensation inside the fuel tank.

Checking the Hydraulic Fluid

The hydraulic reservoir holds 56.7 L (15 US gallons) of high-quality hydraulic fluid. **Check the level of the hydraulic fluid before the engine is first started and daily thereafter.**

The best time to check the hydraulic fluid is when the fluid is cold. The machine should be in the transport configuration. If the fluid level is below the 'add' mark on the dipstick, add fluid to bring the level to the middle of the acceptable range. Do not overfill the tank. If the fluid level is between the 'full' and the 'add' marks, no fluid addition is required.

The recommended replacement fluid is **Toro Premium All Season Hydraulic Fluid** (available in 5-gallon pails or 55-gallon drums. See parts catalog or Toro distributor for part numbers).

Alternative fluids: If the Toro fluid is not available, other conventional, petroleum-based fluids may be used, provided that they meet all of the following material properties and industry specifications. Check with your oil supplier to see whether the fluid meets these specifications.

Note: Toro will not assume responsibility for damage caused by improper substitutions, so use only products from reputable manufacturers who will stand behind their recommendation.

High Viscosity Index/Low Pour Point Antiwear Hydraulic Fluid, ISO VG 46 Multigrade

Material Properties:

| | |
|-----------------------------|---|
| Viscosity, ASTM D445 | cSt @ 40°C (104°F) 44 to 48 cSt @ 100°C (212°F) 7.9 to 9.1 |
| Viscosity index, ASTM D2270 | 140 or higher (high viscosity index indicates a multiweight fluid) |
| Pour point, ASTM D97 | -37°C to -45°C (-34°F to -49°F) |
| FZG, fail stage | 11 or better |
| Water content (new fluid) | 500 ppm (maximum) |

Industry Specifications:

Vickers I-286-S, Vickers M-2950-S, Denison HF-0, Vickers 35 VQ 25 (Eaton ATS373-C)

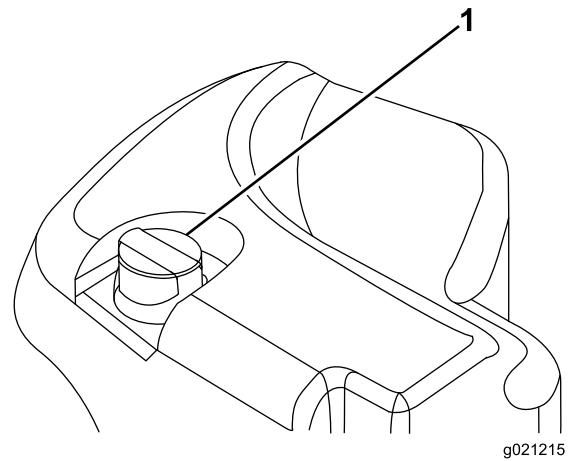


Figure 33

1. Hydraulic-tank cap

3. Remove the cap/dipstick from the filler neck and wipe it with a clean rag.
4. Insert the dipstick into the filler neck; then remove it and check the level of the fluid.

The fluid level should be within the operating range on the dipstick.

Important: Do not overfill the hydraulic system.

5. If the level is low, add the appropriate fluid to raise the level to the full mark.
6. Install the cap/dipstick onto the filler neck.

The proper hydraulic fluids must be specified for mobile machinery (as opposed to industrial plant usage), multiweight-type, with ZnDTP or ZDDP anti-wear additive package (not an ashless-type fluid).

Important: The ISO VG 46 Multigrade fluid has been found to offer optimal performance in a wide range of temperature conditions. For operation in consistently high ambient temperatures, 18° C (65° F) to 49° C (120° F), ISO VG 68 hydraulic fluid may offer improved performance.

Premium Biodegradable Hydraulic Fluid-Mobil EAL EnviroSyn 46H

Important: Mobil EAL EnviroSyn 46H is the only synthetic biodegradable fluid approved by Toro. This fluid is compatible with the elastomers used in Toro hydraulic systems and is suitable for a wide range of temperature conditions. This fluid is compatible with conventional fluids, but for maximum biodegradability and performance the hydraulic system should be thoroughly flushed of conventional fluid. The fluid is available in 19 L (5 US gallon) containers or 208 L (55 US gallon) drums from your Mobil Distributor.

Important: Many hydraulic fluids are almost colorless, making it difficult to spot leaks. A red dye additive for the hydraulic fluid is available in 20 ml (2/3 fl oz) bottles. A bottle is sufficient for 15 to 22 L (4 to 6 US gallons) of hydraulic fluid. Order part 44-2500 from your Authorized Toro Distributor.

1. Position the machine on a level surface, lower the cutting units, and stop the engine.
2. Clean the area around the filler neck and cap of the hydraulic tank (Figure 33).

Checking the Reel-to-Bedknife Contact

Each day before operating, check reel-to-bedknife contact, regardless of whether the quality of cut had previously been acceptable. There must be light contact across the full length of the reel and the bedknife; refer to the cutting unit *Operator's Manual*.

Checking the Torque of the Wheel Nuts

Torque the wheel nuts to 94 to 122 N·m (70 to 90 ft-lb) after **1 to 4 hours** of operation and again after **10 hours** of operation. Torque them every **250 hours** thereafter.

⚠ WARNING

Failure to maintain proper torque of the wheel nuts could result in personal injury.

Keep the wheel nuts properly torqued.

Breaking-in the Machine

To ensure optimum performance of the parking brake system, burnish (break in) the brakes before use. Set the

forward traction speed to 6.4 km/h (4 mph) to match the reverse traction speed (all 8 spacers moved to the top of the mow-speed control). With the engine at high idle, proceed forward with the mow speed control stop engaged and ride the brake for 15 seconds. Proceed backwards at full reverse speed and ride the brake for 15 seconds. Repeat this 5 times, waiting 1 minute between each forward-and-reverse cycle to avoid overheating the brakes. An adjustment to the brakes may be required after break-in; refer to [Adjusting the Parking Brakes](#) (page 48)

Bleeding the Fuel System

Bleed the fuel system before starting the engine if any of the following situations have occurred:

- Initial start-up of a new machine.
- The engine has stopped due to lack of fuel.
- You have performed maintenance upon components of the fuel system (e.g., filter replaced, separator serviced, etc).

▲ DANGER

Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 6 to 13 mm (1/4 to 1/2 inch) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.

1. Park the machine on a level surface and ensure that the fuel tank is at least half full.
2. Open the hood.
3. Open the air-bleed screw on the fuel-injection pump (Figure 34) with a 12 mm wrench.

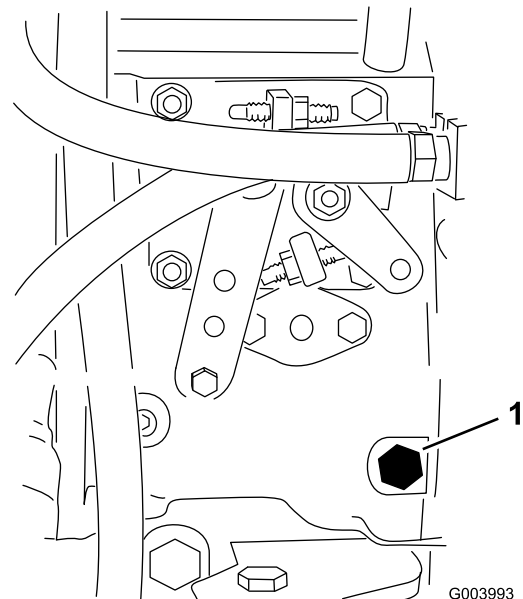


Figure 34

1. Bleed screw

4. Turn the key in the ignition switch to the ON position. The electric fuel pump will begin operation, thereby forcing air out around the air-bleed screw. Leave the key in the ON position until a solid stream of fuel flows out around the screw.
5. Tighten the screw and turn the key to the OFF position.

Note: Normally, the engine should start after the above bleeding procedures are followed. However, if engine does not start, air may be trapped between injection pump and the injectors; refer to [Bleeding Air from the Fuel Injectors](#) (page 44).

Starting and Stopping the Engine

Important: Bleed the fuel system before starting the engine if you are starting the engine for the first time, the engine has stopped due to lack of fuel, or you have performed maintenance on the fuel system; refer to [Bleeding the Fuel System](#) (page 30).

Starting the Engine

1. Sit on the seat, keep your foot off of the traction pedal so that it is in NEUTRAL, engage the parking brake, set the throttle to the FAST position, and ensure that the ENABLE/DISABLE switch is in the DISABLE position.
2. Turn the ignition switch to the ON/PREHEAT position.
An automatic timer will control the glow-plug preheat for a specific amount of time based on the coolant temperature (approximately 3 to 10 seconds).
3. After preheating the glow plugs, turn the key to the START position.

Crank the engine for no longer than 15 seconds. Release the key when the engine starts. If the engine does not start, turn key to the OFF position and then to the ON/PREHEAT position for 6 seconds. Repeat this process as required.

4. Run the engine at low idle speed until it warms up.

Stopping the Engine

1. Move all controls to NEUTRAL, set the parking brake, move the throttle to the low idle position, and allow the engine to reach low idle speed.

Important: Allow the engine to idle for 5 minutes before shutting it off after a full-load operation. Failure to do so may lead to trouble on a turbocharged engine.

2. Turn the key to the OFF position and remove it from the switch.

Adjusting the Lift-Arm Counterbalance

You can adjust the counterbalance on the rear cutting unit lift arms to compensate for different turf conditions and to maintain a uniform height of cut in rough conditions or in areas of thatch build up.

You can adjust each counterbalance spring to one of four settings. Each increment increases or decreases counterbalance on the cutting unit by 2.3 kg (5 lb). The springs can be positioned on the back side of the first spring actuator to remove all counter balance (forth position).

1. Position the machine on a level surface, lower the cutting units, stop the engine, engage the parking brakes, and remove the key from ignition switch.
2. Insert a tube or similar object onto the long spring end and pivot it around the spring actuator to the desired position (Figure 35).

⚠ CAUTION

The springs are under tension.

Use caution when adjusting them.

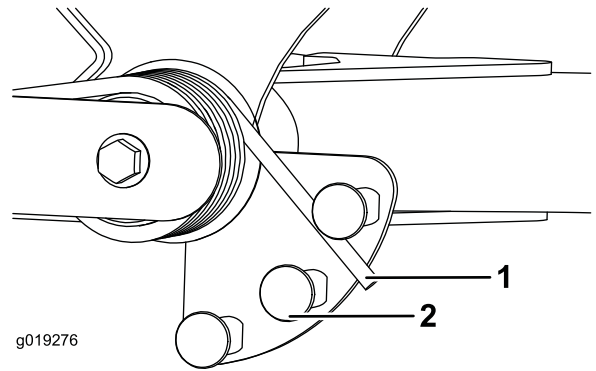


Figure 35

1. Spring
2. Spring actuator

3. Repeat the procedure on the other spring.

Adjusting the Lift-Arm Turn-Around Position

1. Position the machine on a level surface, lower the cutting units, stop the engine, engage the parking brakes, and remove the key from the ignition switch.
2. Loosen the lift-arm-switch mounting screws (Figure 36) and move the switch down to increase the lift-arm turn-around height or move the switch up to decrease it. Tighten the mounting screws.

Note: The switch is located underneath the hydraulic tank behind the front right lift arm (Figure 36).

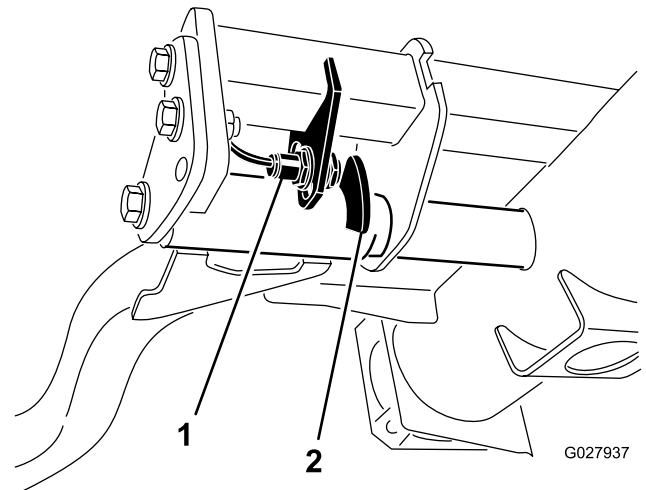


Figure 36

1. Switch
2. Lift-arm sensing device

Pushing or Towing the Machine

In an emergency, you can move the machine by actuating the bypass valve in the variable-displacement hydraulic pump and pushing or towing the machine.

Important: Do not push or tow the machine faster than 3.0 to 4.8 km/h (2 to 3 mph) because internal transmission damage may occur. The bypass valve must be open whenever you push or tow the machine.

1. The bypass valve is located on the left side of the hydrostat (Figure 37). Rotate the bolt 1-1/2 turns to open and allow oil to bypass internally. Because fluid is bypassed, the machine can be moved slowly without damaging the transmission.

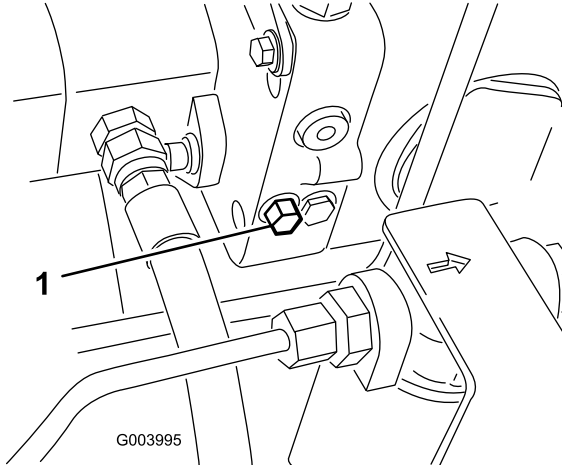


Figure 37

1. Bypass valve

2. Close the bypass valve before starting the engine. However, do not exceed 7 to 11 N·m (5 to 8 ft-lb) torque to close the valve.

Important: Running the engine with the bypass valve open will cause the transmission to overheat.

Locating the Jacking Points

Note: Use jack stands to support the machine when required.

- Front—rectangular pad, under the axle tube, inside each front tire (Figure 38)

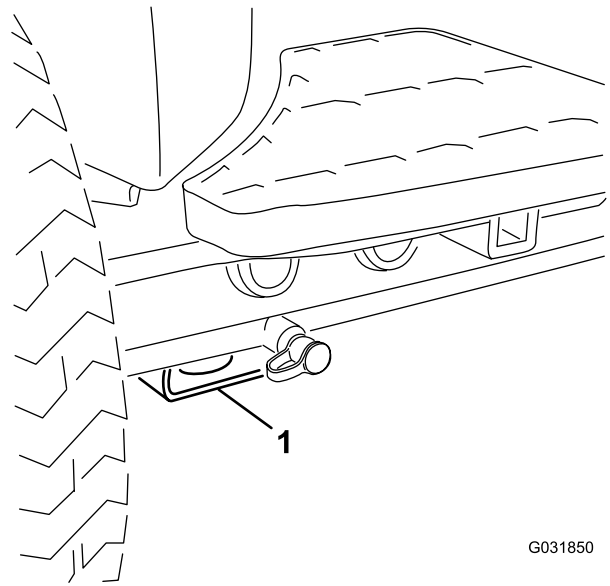


Figure 38

1. Front jacking point

- Rear—rectangular axle tube on the rear axle

Transporting the Machine

Use a heavy-duty trailer or truck to transport the machine. Ensure that the trailer or truck has all necessary brakes, lighting, and marking as required by law. Please carefully read all the safety instructions. Knowing this information could help you, your family, pets, or bystanders avoid injury.

⚠ WARNING

Driving on the street or roadway without turn signals, lights, reflective markings, or a slow-moving vehicle emblem is dangerous and can lead to accidents causing personal injury.

Do not drive the machine on a public street or roadway.

1. If you are using a trailer, connect it to the towing vehicle and connect the safety chains.
2. If applicable, connect the trailer brakes.
3. Load the machine onto the trailer or truck.
4. Stop the engine, remove the key, and set the brake.
5. Use the metal tie-downs on the machine to securely fasten the machine to the trailer or truck with straps, chains, cable, or ropes (Figure 39 and Figure 40).
 - Front—the hole in the rectangular pad, under the axle tube, inside each front tire (Figure 39).

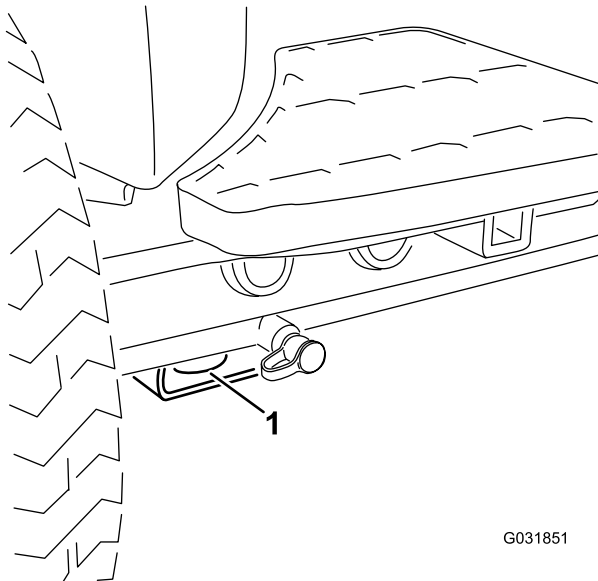


Figure 39

1. Front tie-down

- Rear—each side of the machine on the rear frame (Figure 40).

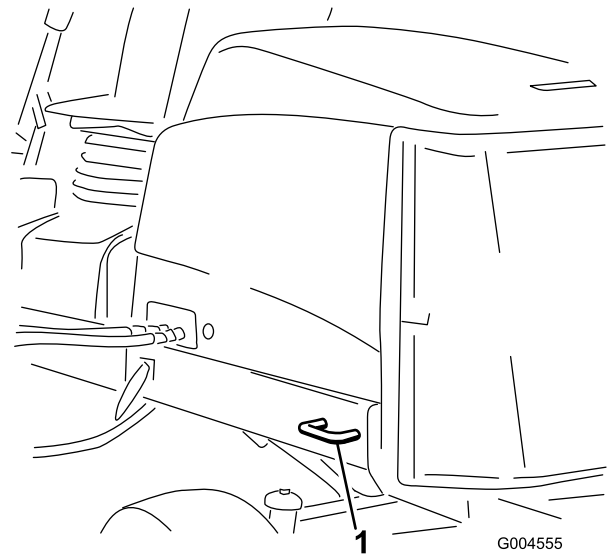


Figure 40

1. Rear tie-down

Loading the Machine

Use extreme caution when loading the machine onto a trailer or a truck. Use a full-width ramp that is wide enough to extend beyond the front tires of the machine instead of individual ramps for each tire (Figure 41). If it is not possible to use a full-width ramp, use enough individual ramps to simulate a full-width continuous ramp.

The ramp should be long enough so that the angles do not exceed 15 degrees (Figure 41). A steeper angle may cause mower components to get caught as the unit moves from the ramp to the trailer or truck. Steeper angles may also cause the machine to tip backward. If loading the machine on or near a slope, position the trailer or truck so that it is on the down side of the slope and the ramp extends up the slope. This will minimize the ramp angle. The trailer or truck should be as level as possible.

Important: Do not attempt to turn the machine while on the ramp; you may lose control and drive off the side.

⚠ WARNING

Loading a machine onto a trailer or truck increases the possibility of tipping over and could cause serious injury or death.

- Use extreme caution when operating a machine on a ramp.
- Use the ROPS (in the up position) while using the seat belt when loading the machine. Ensure that the ROPS clears the top of an enclosed trailer.
- Use only a single, full-width ramp.
- If individual ramps must be used, use enough ramps to create an unbroken ramp surface wider than the machine.
- Do not exceed a 15-degree angle between the ramp and the ground or between the ramp and the trailer or truck.
- Avoid sudden acceleration or deceleration while driving the machine up or down a ramp.

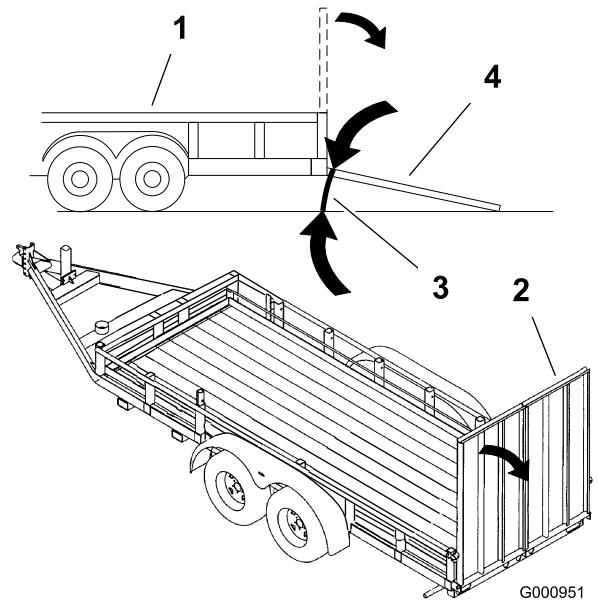


Figure 41

- | | |
|--------------------|--------------------------------|
| 1. Trailer | 3. Not greater than 15 degrees |
| 2. Full-width ramp | 4. Full-width ramp—side view |

Setting the Reel Speed


To achieve a consistent, high quality of cut and a uniform after-cut appearance, it is important that you set the reel speed to the proper setting. Adjust the reel speed as follows:

Note: You may need to increase or decrease the reel speed to compensate for varying turf conditions.

1. In the InfoCenter, under the settings menu, enter the blade count, mow speed, and HOC to calculate the proper reel speed.
2. If further adjustments are required, in the SETTINGS menu, scroll down to the F REEL RPM, R REEL RPM, or both.
3. Press the right button to change the reel-speed value.


Note: As you change the speed setting, the display continues to show the calculated reel speed based on blade count, mow speed and HOC, but the new value is also be displayed.

Note: You may need to increase or decrease the reel speed to compensate for varying turf conditions.

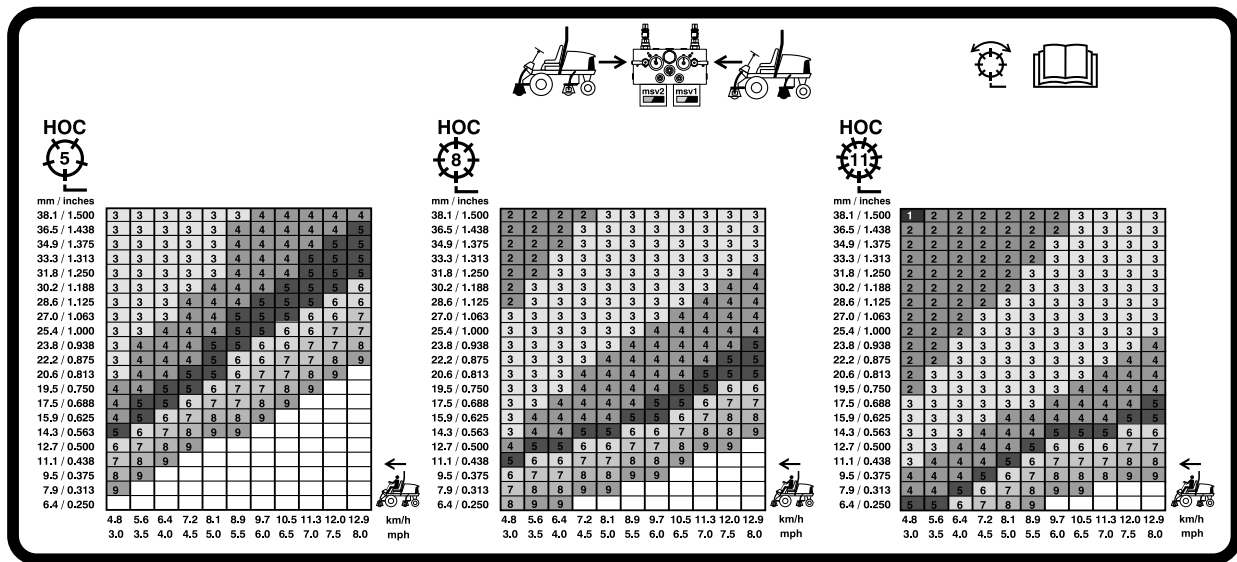

G031995

Figure 42
5 inch (127 mm) Reel Speed Chart

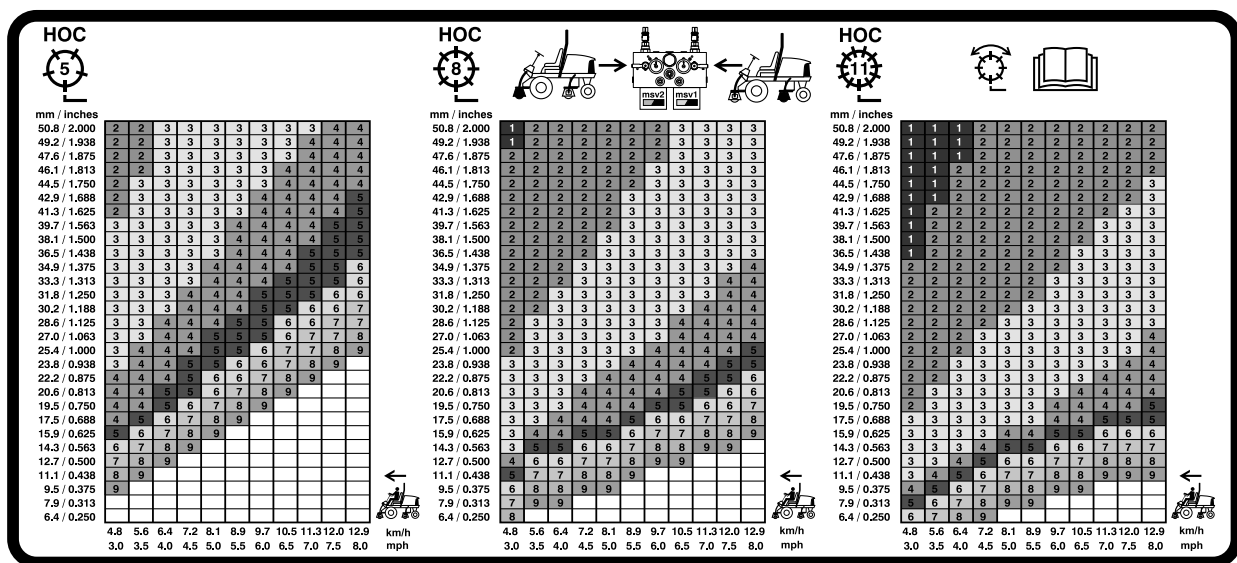

G031996

Figure 43
7 inch (177.8 mm) Reel Speed Chart

Understanding the Diagnostic Light

The machine is equipped with a diagnostic light which indicates if the electronic controller senses an electronic malfunction. The diagnostic light is located on the control arm (Figure 44). When the machine is functioning properly and you move the key switch to the ON/RUN position, the diagnostic light will turn on briefly to indicate the light is working properly. When a machine advisory message is displayed, the light will illuminate when the message is present. When a fault message is displayed, the light will blink until the fault is resolved.

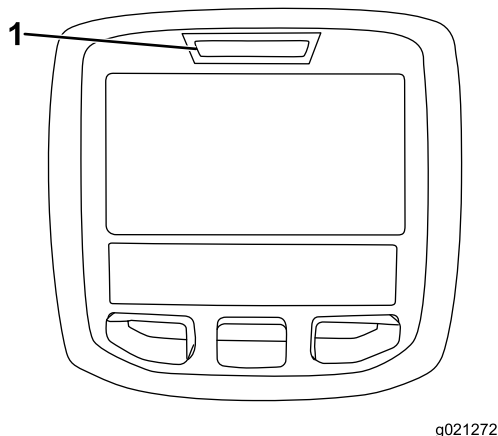


Figure 44

1. Diagnostic light

Checking the Interlock Switches

The purpose of the interlock switches is to prevent the engine from cranking or starting unless the traction pedal is in the NEUTRAL position, the ENABLE/DISABLE switch is in the DISABLE position, and the LOWER MOW/RAISE control is in the NEUTRAL position. In addition, the engine should stop when the traction pedal is pressed with operator off of the seat or if the parking brake is left engaged.

⚠ CAUTION

If safety interlock switches are disconnected or damaged the machine could operate unexpectedly causing personal injury.

- Do not tamper with the interlock switches.
- Check the operation of the interlock switches daily and replace any damaged switches before operating the machine.

Verifying the Interlock Switch Function

1. Park the machine on a level surface, lower the cutting units, stop the engine, and engage the parking brake.

2. Turn the key switch to the ON position, but do not start the machine.
3. Locate the appropriate switch function in the diagnostics menu on the InfoCenter.
4. Individually, change each of the switches from open to closed (i.e., sit on the seat, press the traction pedal, etc.), and note that the appropriate state of the switch changes. Repeat this for all switches that you can change by hand.
5. If a switch is closed and the appropriate indicator does not change, check all the wiring and connections to the switch and/or check the switches with an ohm meter. Replace any defective switches and repair any defective wiring.

Note: The InfoCenter display also has the ability to detect which output solenoids or relays are turned on. This is a quick way to determine if a machine malfunction is electrical or hydraulic.

Verifying Output Function

1. Park the machine on a level surface, lower the cutting units, stop the engine, and engage the parking brake.
2. Turn the key switch to the ON position and start the machine.
3. Locate the appropriate output function in the diagnostics menu on the InfoCenter.
4. Sit on the seat and attempt to operate the desired function of the machine. The appropriate outputs should change state to indicate that the ECM is turning on that function.

Note: If the correct outputs do not illuminate, verify that the required input switches are in the necessary positions to allow that function to occur. Verify correct switch function.

If the output displays are on as specified, but the machine does not function properly, this indicates a non-electrical problem. Repair as necessary.

Hydraulic Valve Solenoid Functions

Use the list below to identify and describe the different functions of the solenoids in the hydraulic manifold. Each solenoid must be energized to allow function to occur.

| Solenoid | Function |
|----------|-------------------------------|
| MSV2 | Front reel circuit |
| MSV1 | Rear reel circuit |
| SVRV | Lift/lower cutting units |
| SV1 | Lift/lower front cutting unit |
| SV3 | Lift/lower rear cutting unit |
| SV2 | Raise any cutting units |

Operating Tips

Familiarization

Before mowing grass, practice operating the machine in an open area. Start and stop the engine. Operate in forward and reverse. Lower and raise the cutting units and engage and disengage the reels. When you feel familiar with the machine, practice operating up and down slopes at different speeds.

Warning System

If a warning light comes on during operation, stop the machine immediately and correct the problem before continuing operation. Serious damage could occur if you operate the machine with a malfunction.

Mowing

Start the engine and move the throttle to the Fast position. Move the ENABLE/DISABLE switch to the ENABLE position and use the Lower Mow/Raise lever to control the cutting units (the front cutting units are timed to lower before the rear cutting units). To move forward and cut grass, press the traction pedal forward.

Note: Allow the engine to idle for 5 minutes before shutting it off after a full load operation. Failure to do so may lead to turbocharger trouble.

Transport

Move the ENABLE/DISABLE switch to the DISABLE position and raise the cutting units to the transport position. Move the Mow/Transport lever to the transport position. Be careful when driving between objects so that you do not accidentally damage the machine or the cutting units. Use extra care when operating the machine on slopes. Drive slowly and avoid sharp turns on slopes to prevent roll overs. Lower the cutting units when going downhill for steering control.

Maintenance

Note: Determine the left and right sides of the machine from the normal operating position.

Recommended Maintenance Schedule(s)

| Maintenance Service Interval | Maintenance Procedure |
|------------------------------|---|
| After the first hour | <ul style="list-style-type: none"> • Torque the wheel lug nuts to 94 to 122 N·m (70 to 90 ft-lb). |
| After the first 8 hours | <ul style="list-style-type: none"> • Check the condition and tension of the alternator belt. |
| After the first 10 hours | <ul style="list-style-type: none"> • Torque the wheel lug nuts to 94 to 122 N·m (70 to 90 ft-lb). |
| After the first 50 hours | <ul style="list-style-type: none"> • Change the engine oil and filter. • Check the engine speed (idle and full throttle). |
| Before each use or daily | <ul style="list-style-type: none"> • Check the level of the engine oil. • Check the cooling system. • Check the level of the hydraulic fluid. • Check the reel-to-bedknife contact. • Check the operation of the interlock switches. • Drain water or other contaminants from the water separator. • Remove debris from the screen, oil coolers, and radiator (more frequently in dirty operating conditions). • Check the hydraulic lines and hoses for leaks, kinked lines, loose mounting supports, wear, loose fittings, weather deterioration, and chemical deterioration. |
| Every 50 hours | <ul style="list-style-type: none"> • Grease the bearings and bushings (grease them immediately after every washing regardless of the interval listed). • Check the condition of and clean the battery. • Check the battery cable connections. |
| Every 100 hours | <ul style="list-style-type: none"> • Inspect the cooling system hoses. • Check the condition and tension of the alternator belt. |
| Every 150 hours | <ul style="list-style-type: none"> • Change the engine oil and filter. |
| Every 200 hours | <ul style="list-style-type: none"> • Drain moisture from the fuel and hydraulic-fluid tanks. • Check the reel-bearing preload. |
| Every 250 hours | <ul style="list-style-type: none"> • Torque the wheel lug nuts to 94 to 122 N·m (70 to 90 ft-lb). |
| Every 400 hours | <ul style="list-style-type: none"> • Service the air cleaner (earlier if the air-cleaner indicator shows red. Service it more frequently in extremely dirty or dusty conditions). • Check the fuel lines and connections for deterioration, damage, or loose connections. • Replace the fuel filter canister. • Check the engine speed (idle and full throttle). |
| Every 800 hours | <ul style="list-style-type: none"> • Drain and clean the fuel tank. • Check the rear-wheel toe-in. • Change the hydraulic fluid. • Change the hydraulic filters (sooner if the service interval indicator is in the red zone). • Pack the rear wheel bearings • Adjust the engine valves; refer to the engine operator's manual. |
| Before storage | <ul style="list-style-type: none"> • Drain and clean the fuel tank. |
| Every 2 years | <ul style="list-style-type: none"> • Flush and replace the cooling system fluid. • Drain and flush the hydraulic tank. • Replace all moving hoses. |

Daily Maintenance Checklist

Duplicate this page for routine use.

| Maintenance Check Item | For the week of: | | | | | | |
|--|------------------|-------|------|--------|------|------|------|
| | Mon. | Tues. | Wed. | Thurs. | Fri. | Sat. | Sun. |
| Check the safety interlock operation. | | | | | | | |
| Check the brake operation. | | | | | | | |
| Check the engine oil and fuel level. | | | | | | | |
| Drain the water/fuel separator. | | | | | | | |
| Check the air filter restriction indicator. | | | | | | | |
| Check the radiator and screen for debris. | | | | | | | |
| Check unusual engine noises. ¹ | | | | | | | |
| Check unusual operating noises. | | | | | | | |
| Check the hydraulic system oil level. | | | | | | | |
| Check the hydraulic filter indicator. ² | | | | | | | |
| Check hydraulic hoses for damage. | | | | | | | |
| Check for fluid leaks. | | | | | | | |
| Check the tire pressure. | | | | | | | |
| Check the instrument operation. | | | | | | | |
| Check the reel-to-bedknife adjustment. | | | | | | | |
| Check the height-of-cut adjustment. | | | | | | | |
| Check all grease fittings for lubrication. ³ | | | | | | | |
| Touch-up damaged paint. | | | | | | | |
| <p>1. Check the glow plug and injector nozzles if you notice hard starting, excess smoke, or rough running.</p> <p>2. Check with the engine running and the oil at operating temperature.</p> <p>3. Immediately after every washing, regardless of the interval listed</p> | | | | | | | |

Notation for Areas of Concern

| Inspection performed by: | | |
|--------------------------|------|-------------|
| Item | Date | Information |
| 1 | | |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |

Important: Refer to your engine operator's manual for additional maintenance procedures.

Note: To obtain an electrical schematic or a hydraulic schematic for your machine, visit www.Toro.com.

Service Interval Chart

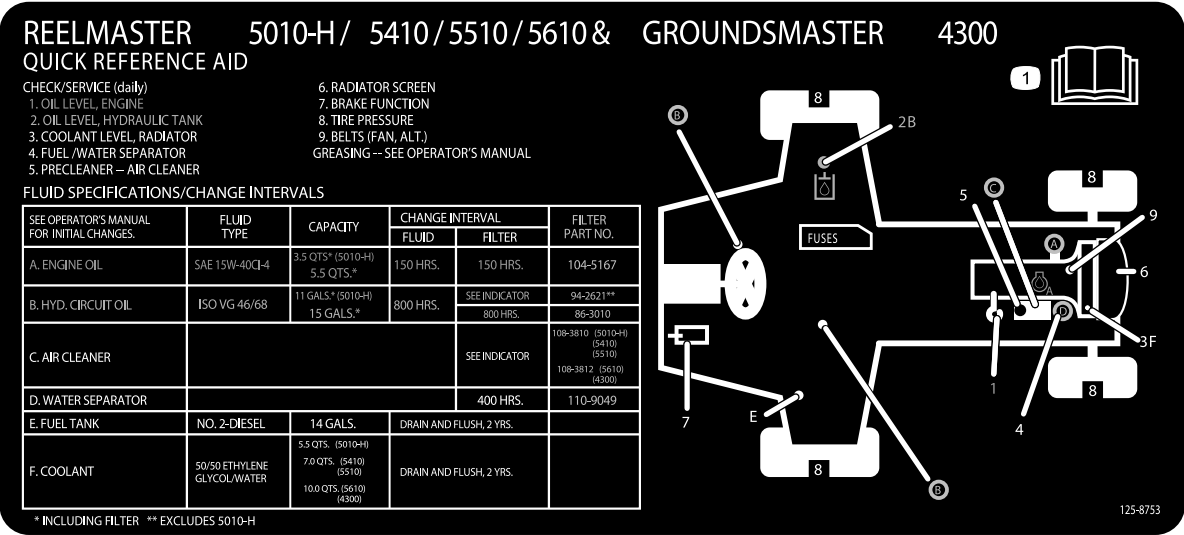


Figure 45

CAUTION

If you leave the key in the ignition switch, someone could accidentally start the engine and seriously injure you or other bystanders.

Remove the key from the ignition before you do any maintenance.

Lubrication

Greasing the Bearings and Bushings

If you operate the machine under normal conditions, lubricate all grease fittings for the bearings and bushings after **every 50 hours of operation** with No. 2 lithium grease. Lubricate the bearings and bushings **immediately** after every washing, regardless of the interval listed.

The grease fitting locations and quantities are as follows:

- Pump the driveshaft U-joint (3) (Figure 46)

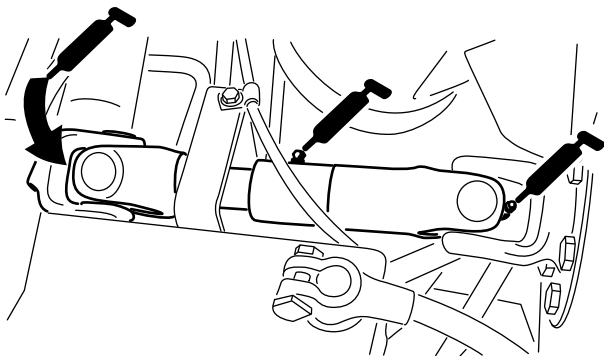


Figure 46

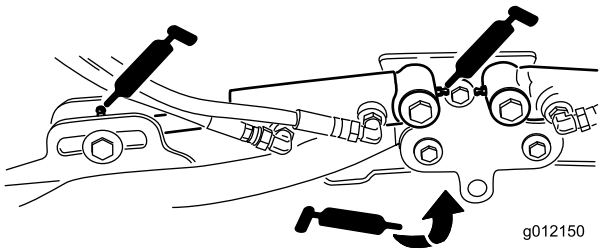


Figure 47

- Cutting-unit lift-arm cylinders (2 each) (Figure 47)

- Lift-arm pivots (1 each) (Figure 47)
- Cutting-unit carrier-frame and pivot (2 each) (Figure 48)

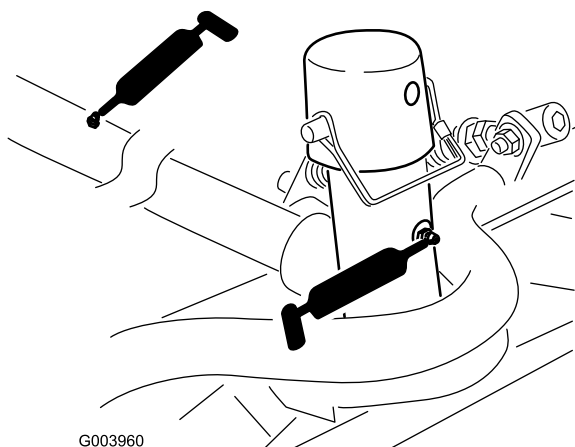


Figure 48

- Lift-arm-pivot shaft (1 each) (Figure 49)

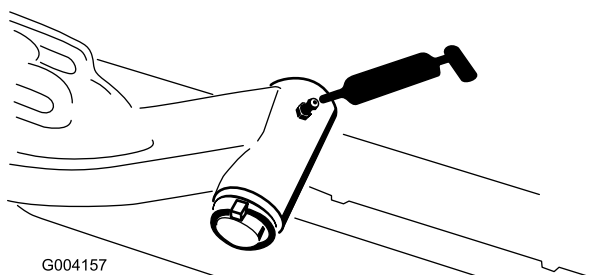


Figure 49

- Rear-axle tie rod (2) (Figure 50)

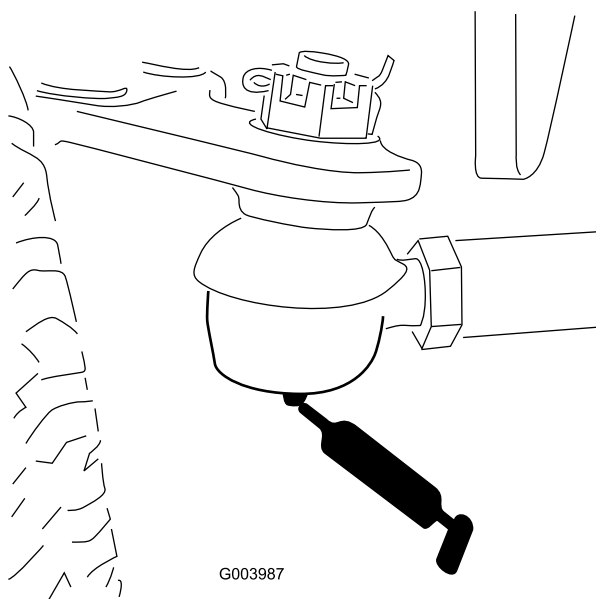


Figure 50

- Axle-steering pivot (1) (Figure 51)

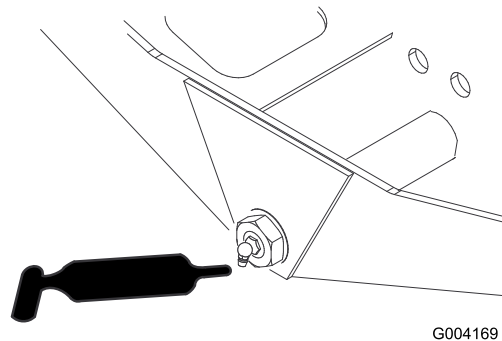


Figure 51

- Steering-cylinder ball joints (2) (Figure 52)

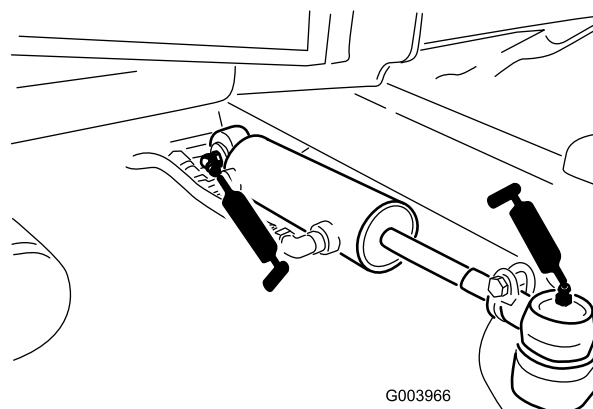


Figure 52

- Brake pedal (1) (Figure 53)

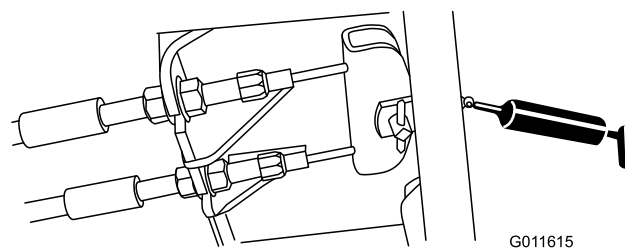


Figure 53

Engine Maintenance

Servicing the Air Cleaner

Check the air-cleaner body for damage which could cause an air leak. Replace it if it is damaged. Check the whole intake system for leaks, damage, or loose hose clamps.

Service the air-cleaner filter only when the service indicator (Figure 54) requires it. Changing the air filter before it is necessary only increases the chance of dirt entering the engine when the filter is removed.

Important: Ensure that the cover is seated correctly and seals with the air-cleaner body.

1. Release the latches securing the air-cleaner cover to the air-cleaner body (Figure 54).

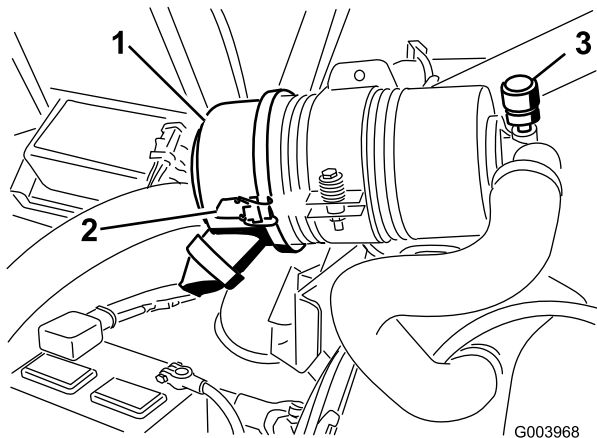


Figure 54

1. Air-cleaner cover
2. Latch
3. Service indicator

2. Remove the cover from the air-cleaner body. Before removing the filter, use low-pressure air (40 psi, clean and dry) to help remove large accumulations of debris packed between outside of the filter and the canister. **Avoid using high-pressure air which could force dirt through the filter into the intake tract.**

This cleaning process prevents debris from migrating into the intake when you remove the filter.

3. Remove and replace the filter (Figure 55).

Cleaning of the used element is not recommended due to the possibility of damage to the filter media. Inspect the new filter for shipping damage, checking the sealing end of the filter and the body. **Do not use a damaged element.** Insert the new filter by applying pressure to the outer rim of the element to seat it in the canister. **Do not apply pressure to the flexible center of the filter.**

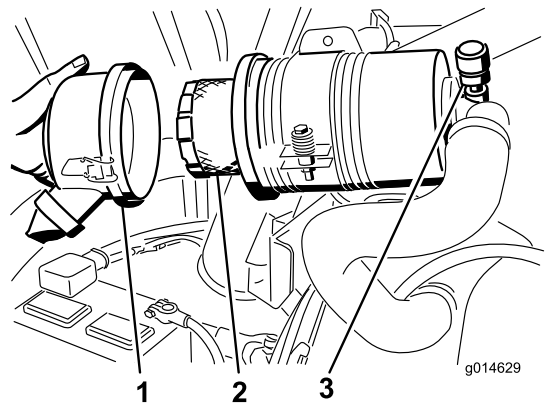


Figure 55

1. Cover
2. Filter
3. Service indicator

4. Clean the dirt-ejection port located in the removable cover. Remove the rubber outlet valve from the cover, clean the cavity, and install the outlet valve.
5. Install the cover, orienting the rubber outlet valve in a downward position—between approximately 5:00 to 7:00 when viewed from the end.
6. Secure the latches.

Servicing the Engine Oil and Filter

Change the engine oil and filter initially after the first 50 hours of operation and every 150 hours thereafter.

1. Remove the drain plug (Figure 56) and let the oil flow into a drain pan.

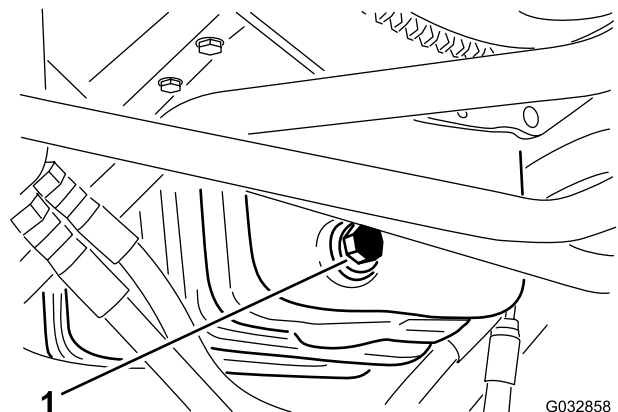


Figure 56

1. Oil drain plug
2. When the oil stops, install the drain plug.
3. Remove the oil filter (Figure 57).

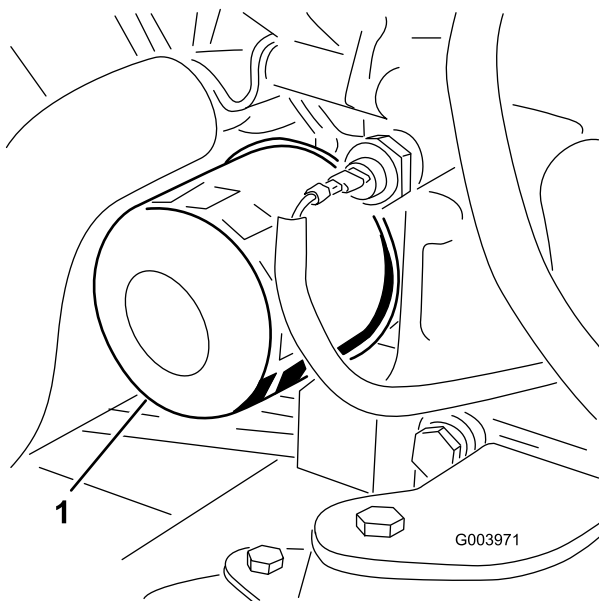


Figure 57

1. Oil filter

4. Apply a light coat of clean oil to the new filter seal.
5. Install the replacement oil filter to the filter adapter. Turn the oil filter clockwise until the rubber gasket contacts the filter adapter, then tighten the filter an additional 1/2 turn.

Important: Do not overtighten the filter.

6. Add oil to the crankcase; refer to [Checking the Level of the Engine Oil](#) (page 26).

Adjusting the Throttle

1. Position the throttle lever forward so that it is approximately 3 mm (1/8 inch) from the front of the control-arm slot.
2. Loosen the throttle-cable connector, on the throttle cable, next to the injection pump lever ([Figure 58](#)).

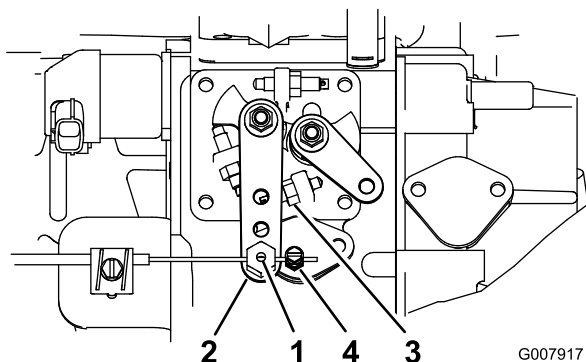


Figure 58

1. Throttle-cable pivot
2. Injection-pump lever
3. High-idle stop
4. Throttle-cable connector

3. Hold the injection-pump lever against the high idle stop ([Figure 58](#)).

Fuel System Maintenance

⚠ DANGER

Under certain conditions, diesel fuel and fuel vapors are highly flammable and explosive. A fire or explosion from fuel can burn you and others and can cause property damage.

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is off and is cold. Wipe up any fuel that spills.
- Do not fill the fuel tank completely full. Add fuel to the fuel tank until the level is 6 to 13 mm (1/4 to 1/2 inch) below the bottom of the filler neck. This empty space in the tank allows the fuel to expand.
- Never smoke when handling fuel, and stay away from an open flame or where fuel fumes may be ignited by a spark.
- Store fuel in a clean, safety-approved container and keep the cap in place.

Draining the Fuel Tank

Service Interval: Every 800 hours

Before storage

Drain and clean the fuel tank if the fuel system becomes contaminated or if the machine is to be stored for an extended period. Use clean fuel to flush out the tank.

Checking the Fuel Lines and Connections

Service Interval: Every 400 hours/Yearly (whichever comes first)

Inspect the fuel lines for deterioration, damage, or loose connections.

Servicing the Water Separator

Service Interval: Before each use or daily—Drain water or other contaminants from the water separator.

Every 400 hours—Replace the fuel filter canister.

1. Place a clean container under the fuel filter.
2. Loosen the drain plug on the bottom of the filter canister.

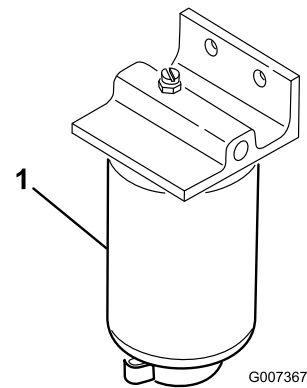


Figure 59

1. Water-separator/filter canister
3. Clean the area where the filter-canister mounts.
4. Remove the filter canister and clean the mounting surface.
5. Lubricate the gasket on the filter canister with clean oil.
6. Install the filter canister by hand until the gasket contacts mounting surface, then rotate it an additional 1/2 turn.
7. Tighten the drain plug on the bottom of the filter canister.

Cleaning the Fuel-Intake Screen

The fuel-intake tube, located inside the fuel tank, is equipped with a screen to help prevent debris from entering the fuel system. Remove the fuel-intake tube and clean the screen as required.

Bleeding Air from the Fuel Injectors

Use this procedure only if you have purged the fuel system of air through normal priming procedures and the engine does not start; refer to [Bleeding the Fuel System \(page 30\)](#).

1. Loosen the pipe connection to the first nozzle and holder assembly ([Figure 60](#)).

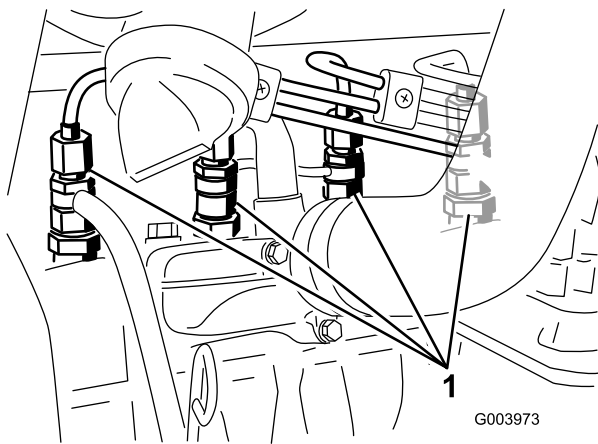


Figure 60

1. Fuel injectors
-
2. Turn the key in the key switch to the ON position and watch the fuel flow around the connector. When you observe a solid flow of fuel, turn the key to the Off position.
 3. Tighten the pipe connector securely.
 4. Repeat steps 1 through 3 on the remaining nozzles.

Electrical System Maintenance

Important: Before welding on the machine, disconnect both cables from the battery, both wire harness plugs from the electronic control module, and the terminal connector from the alternator to prevent damage to the electrical system.

Servicing the Battery

WARNING

CALIFORNIA Proposition 65 Warning

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.
Wash hands after handling.

⚠ DANGER

Battery electrolyte contains sulfuric acid which is a deadly poison and causes severe burns.

- Do not drink electrolyte and avoid contact with skin, eyes, or clothing. Wear safety glasses to shield your eyes and rubber gloves to protect your hands.
- Fill the battery where clean water is always available for flushing the skin.

⚠ WARNING

Charging the battery produces gasses that can explode.

Never smoke near the battery and keep sparks and flames away from it.

Check the battery condition weekly or after every 50 hours of operation. Keep the terminals and the entire battery case clean because a dirty battery will discharge slowly. To clean the battery, wash the entire case with a solution of baking soda and water. Rinse it with clear water.

Accessing the Fuses

There are 8 fuses in the electrical system. The fuse block (Figure 61) is located behind the control arm access panel.

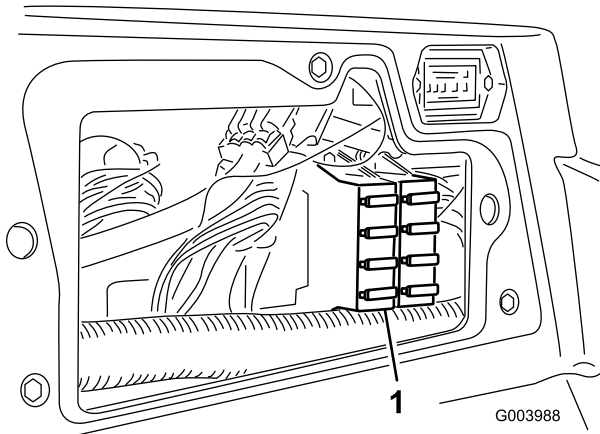


Figure 61

- 1. Fuse block

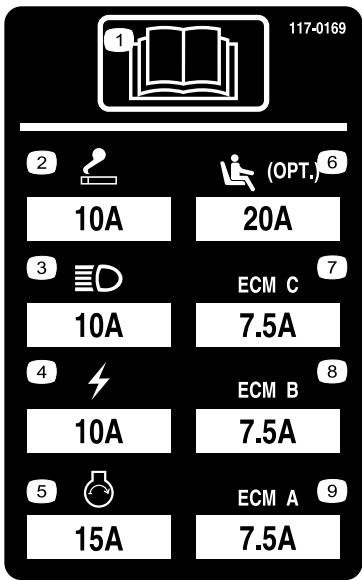


Figure 62

Drive System Maintenance

Adjusting the Traction Drive for Neutral

The machine must not creep when the traction pedal is released. If it does creep, adjust it as follows:

1. Park the machine on a level surface, stop the engine, and lower the cutting units to the floor.
2. Jack up the front of the machine until the front tires are off the shop floor. Support the machine with jack stands to prevent it from falling accidentally.

Note: The rear tires must also be off the shop floor

3. On the right side of the hydrostat, loosen the locknut on the traction adjustment cam (Figure 63).

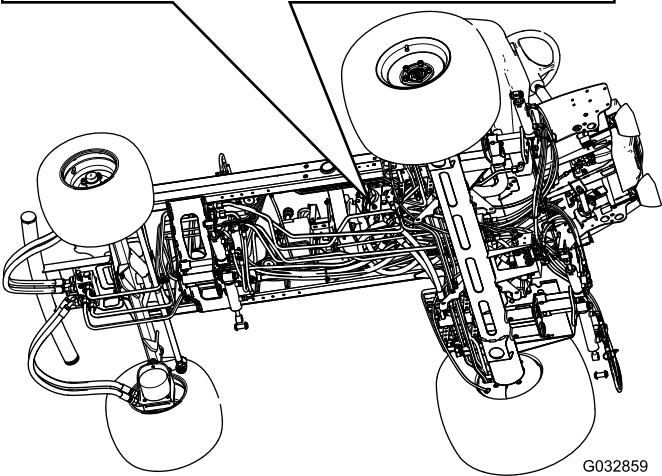
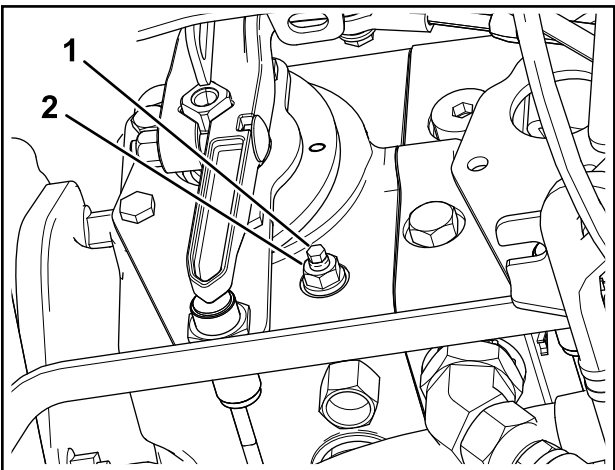


Figure 63

Some parts not shown

- 1. Traction-adjustment cam 2. Locknut

⚠ WARNING

The engine must be running so that the final adjustment of the traction adjustment cam can be performed. This could cause personal injury.

Keep hands, feet, face, and other body parts away from the muffler, other hot parts of the engine, and any rotating parts.

4. Start the engine and rotate the cam hex in either direction until the wheels cease rotation.
5. Tighten the locknut to secure the adjustment.
6. Stop the engine.
7. Remove the jack stands and lower the machine to the shop floor.
8. Test drive the machine to make sure that it does not creep.

Adjusting the Rear-Wheel Toe-In

1. Rotate the steering wheel so that the rear wheels are straight ahead.
2. Loosen the jam nut on each end of the tie rod (Figure 64).

Note: The end of the tie rod with the external groove is a left-hand thread.

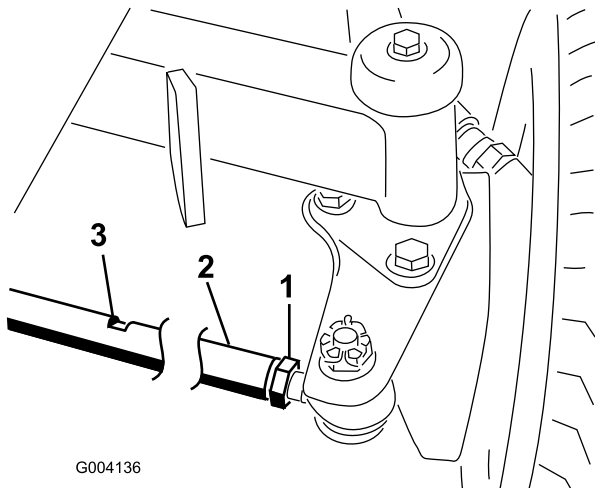


Figure 64

1. Jam nut
2. Tie rod
3. Wrench slot

3. Using the wrench slot, rotate the tie rod.
4. Measure the distance at the front and rear of the rear wheels at axle height. The distance at the front of the rear wheels should be less than 6 mm (1/4 inch) of the distance measured at the rear of the wheels.
5. Repeat this procedure as required.

Cooling System Maintenance

Removing Debris from the Cooling System

Service Interval: Before each use or daily—Remove debris from the screen, oil coolers, and radiator (more frequently in dirty operating conditions).

1. Turn the engine off and remove the key from the ignition switch.
2. Thoroughly clean all debris out of the engine area.
3. Unlatch the clamp and pivot open the rear screen (Figure 65).

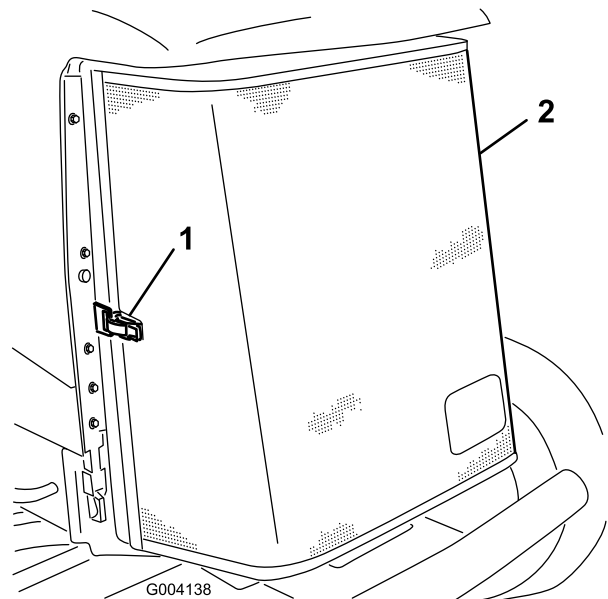


Figure 65

1. Rear-screen latch
2. Rear screen

4. Clean the screen thoroughly with compressed air.
5. Pivot the latches inward to release the oil cooler (Figure 66).

Brake Maintenance

Adjusting the Parking Brakes

Adjust the brakes when there is more than 2.5 cm (1 inch) of free travel (Figure 68) of the brake pedal, or when more holding force is required. Free travel is the distance the brake pedal moves before you feel braking resistance.

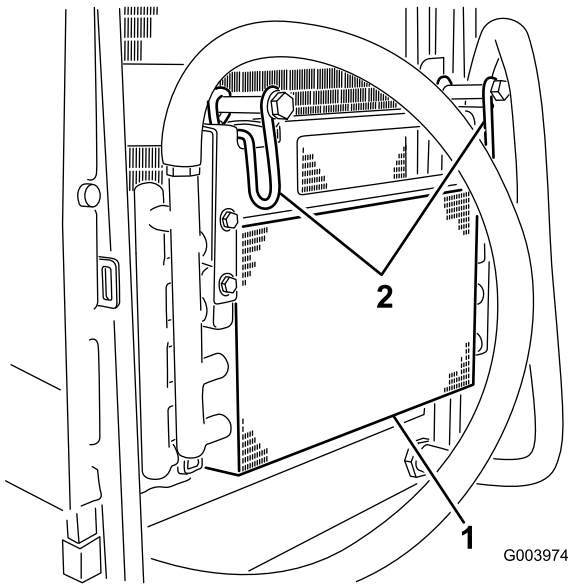


Figure 66

1. Oil cooler
2. Oil-cooler latches

6. Thoroughly clean both sides of the oil cooler and the radiator (Figure 67) with compressed air.

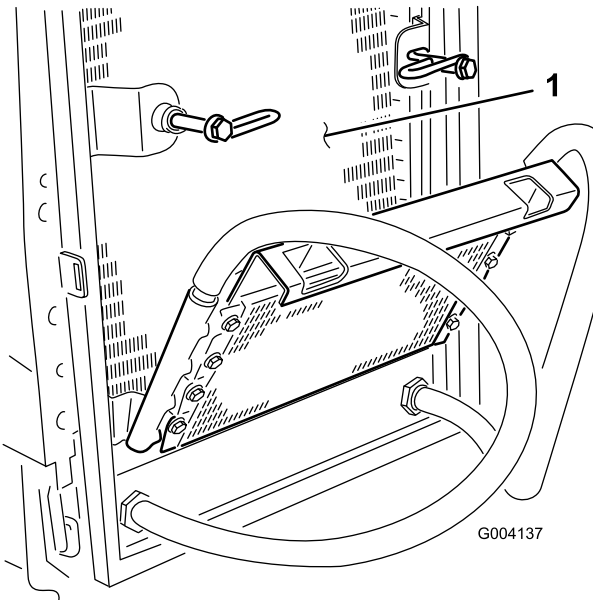


Figure 67

1. Radiator

7. Pivot the oil cooler back into position and secure the latches.
8. Close the screen and secure the latch.

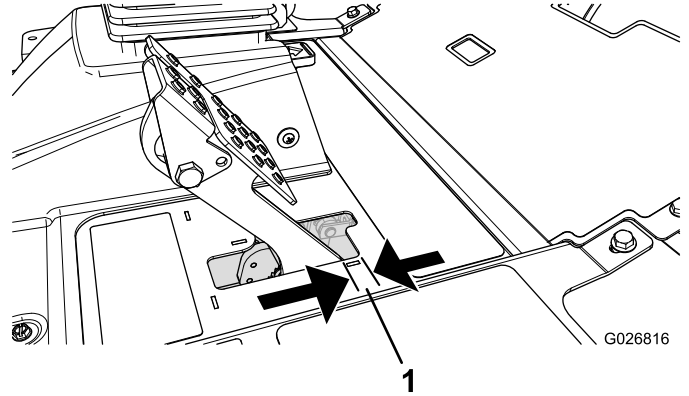


Figure 68

1. Free travel

Note: Use the wheel motor backlash to rock the drums back and forth to ensure that the drums are free prior to and after adjustment.

1. To reduce free travel of the brake pedals, tighten the brakes by loosening the front nut on the threaded end of the brake cable (Figure 69).

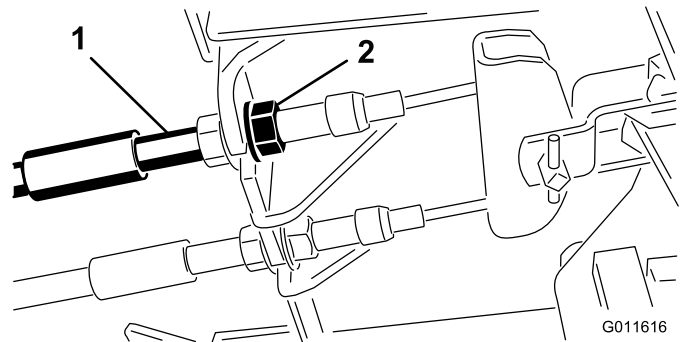


Figure 69

1. Brake cable
2. Front nut

2. Tighten the rear nut to move the cable backward until brake pedals have 6.3 to 12.7 mm (1/4 to 1/2 inch) of free travel (Figure 68), before wheel lock-up is achieved.
3. Tighten the front nuts, ensuring that both cables actuate the brakes simultaneously.

Important: Ensure that the cable conduit does not rotate during the tightening procedure.

Adjusting the Parking-Brake Latch

If the parking brake fails to engage and latch, adjust the brake pawl.

1. Loosen the 2 screws securing the parking-brake pawl to the frame (Figure 70).

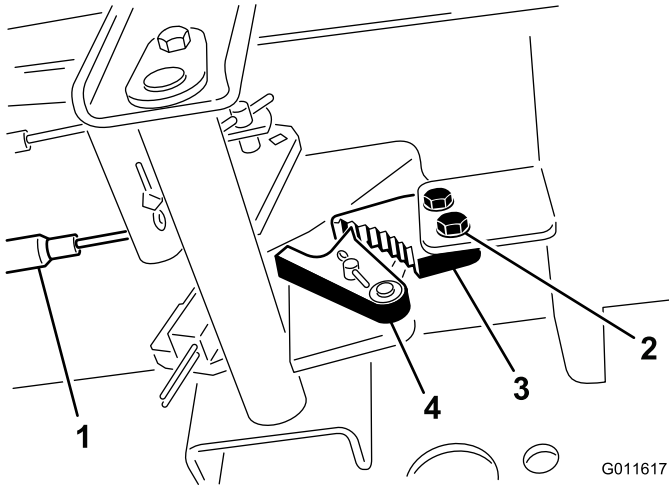


Figure 70

- | | |
|-----------------|-----------------------|
| 1. Brake cables | 3. Parking-brake pawl |
| 2. Screws (2) | 4. Brake detent |

2. Press the parking-brake pedal forward until the brake detent completely engages on the brake pawl (Figure 70).
3. Tighten the 2 screws locking the adjustment.
4. Press the brake pedal to release the parking brake.
5. Check the adjustment and adjust it as required.

Belt Maintenance

Checking and Tensioning the Alternator Belt

Service Interval: After the first 8 hours

Every 100 hours

1. Open the hood.
2. Check the tension of the alternator belt by pressing it (Figure 71) midway between the alternator and the crankshaft pulleys with 10 kg (22 lb) of force.

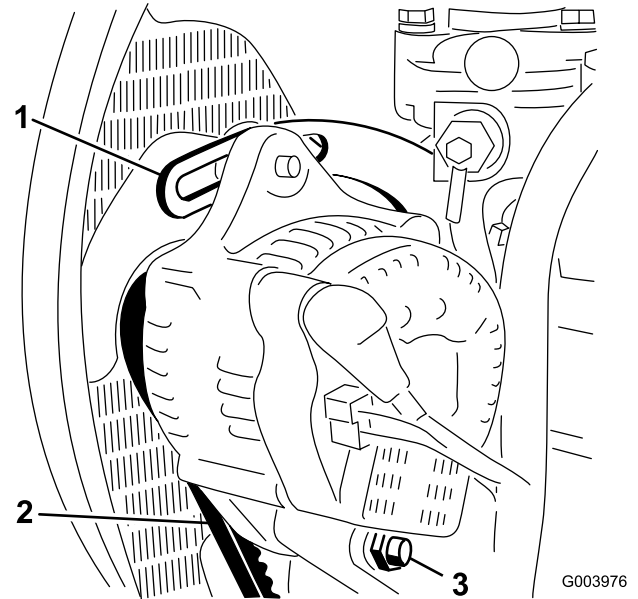


Figure 71

- | | |
|--------------------|---------------|
| 1. Brace | 3. Pivot bolt |
| 2. Alternator belt | |

The belt should deflect 11 mm (7/16 inch). If the deflection is incorrect, proceed to step 3. If correct, continue operation.

3. Loosen the bolt securing the brace to the engine (Figure 71), the bolt securing the alternator to the brace and the pivot bolt.
4. Insert a pry bar between the alternator and the engine and pry out on the alternator.
5. When you achieve the proper tension, tighten the alternator, brace, and pivot bolts to secure the adjustment.

Hydraulic System Maintenance

Changing the Hydraulic Fluid

Change hydraulic fluid after every 800 operating hours, in normal conditions. If the fluid becomes contaminated, contact your Authorized Toro Distributor to flush the system. Contaminated fluid looks milky or black when compared to clean oil.

1. Stop the engine and raise the hood.
2. Place a large drain pan under the fitting secured to the bottom of the hydraulic-fluid reservoir (Figure 72).

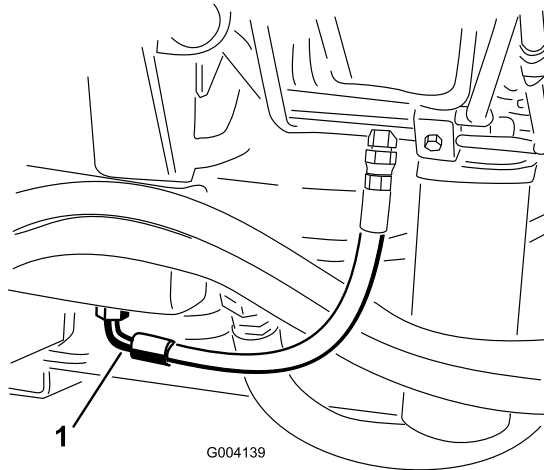


Figure 72

1. Hose

3. Disconnect the hose from the bottom of the fitting and let the hydraulic fluid flow into the drain pan.
4. Install the hose when hydraulic fluid stops draining.
5. Fill the system with approximately 56.7 L (15 US gallons) of hydraulic fluid; refer to [Checking the Hydraulic Fluid](#) (page 28).

Important: Use only hydraulic fluids specified. Other fluids could cause system damage.

6. Install the reservoir cap.
7. Start the engine and use all of the hydraulic controls to distribute hydraulic fluid throughout the system. Also check for leaks.
8. Stop the engine.
9. Check the level of the hydraulic fluid and add enough to raise level to the FULL mark on the dipstick.

Important: Do not overfill the hydraulic system.

Replacing the Hydraulic Filters

The hydraulic system is equipped with a service-interval indicator (Figure 73). With the engine running at operating temperature, view the indicator, it should be in the green zone. When the indicator is in the red zone, change the hydraulic filters.

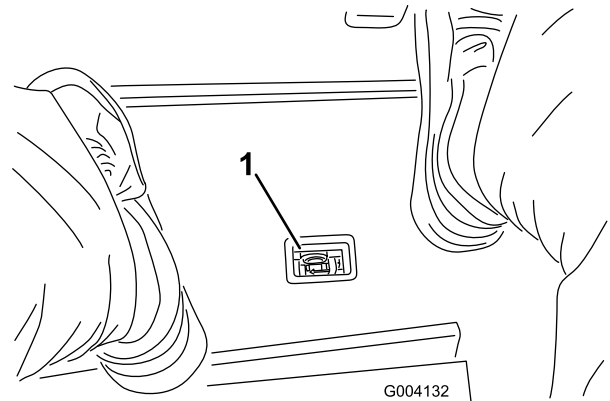


Figure 73

1. Hydraulic-filter-restriction indicator

Important: Use of any other filters may void the warranty on some components.

1. Position the machine on a level surface, lower the cutting units, stop the engine, set the parking brake, and remove the key from the ignition switch.
2. Clean the area around the filter mounting area and place a drain pan under the filter (Figure 74) and (Figure 75).

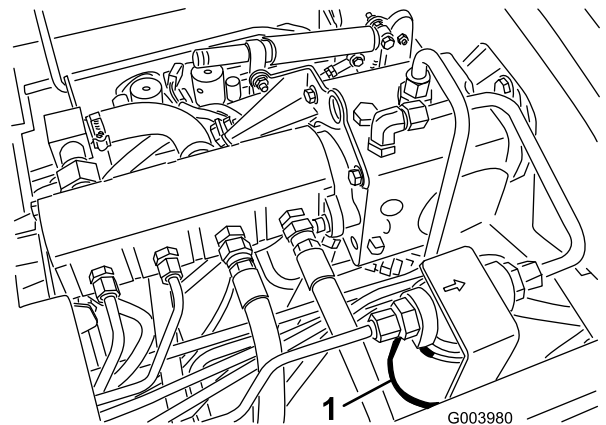


Figure 74

1. Hydraulic filter

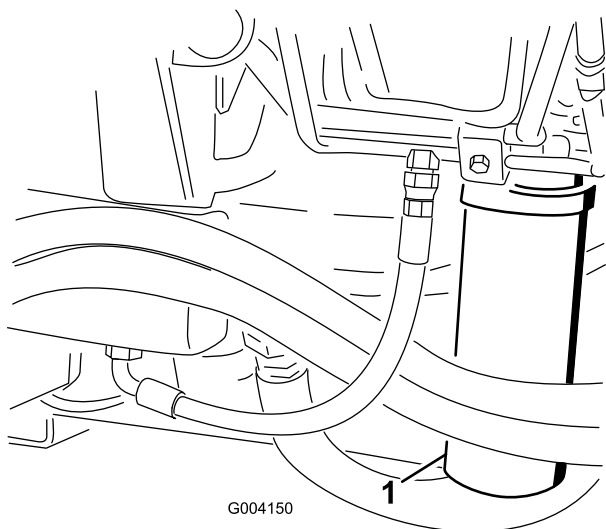


Figure 75

1. Hydraulic filter

3. Remove the filter.
4. Lubricate the gasket on the new filter with hydraulic oil.
5. Ensure that the filter mounting area is clean.
6. Install the filter by hand until the gasket contacts the mounting surface, then rotate it an additional 1/2 turn.
7. Repeat the procedure on the other filter.
8. Start the engine and let it run for about 2 minutes to purge air from the system.
9. Stop the engine and check for leaks.

Checking the Hydraulic Lines and Hoses

Service Interval: Before each use or daily—Check the hydraulic lines and hoses for leaks, kinked lines, loose mounting supports, wear, loose fittings, weather deterioration, and chemical deterioration.

⚠ WARNING

Hydraulic fluid escaping under pressure can penetrate skin and cause injury.

- Ensure that all hydraulic-fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to the hydraulic system.
- Keep your body and hands away from pin-hole leaks or nozzles that eject high-pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.
- Safely relieve all pressure in the hydraulic system before performing any work on the hydraulic system.
- Get immediate medical help if fluid is injected into skin.

Using the Hydraulic-System Test Ports

Use the hydraulic-system test ports to test the pressure in the hydraulic circuits. Contact your local Toro distributor for assistance.

Use the test ports on the front hydraulic tubes ([Figure 76](#)) to assist in troubleshooting the traction circuit.

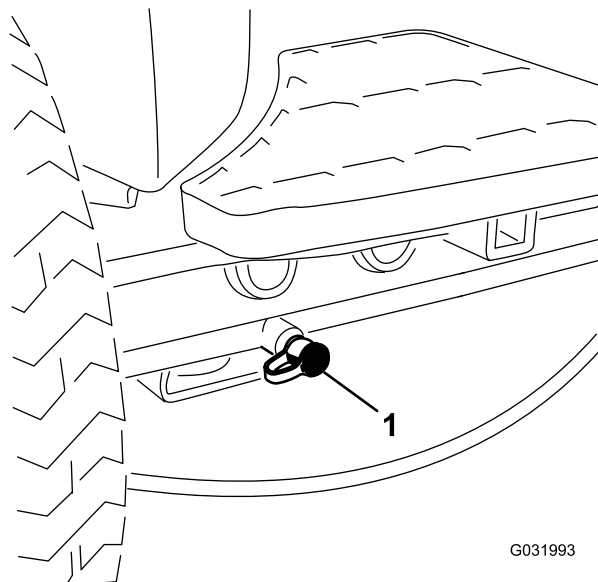


Figure 76

1. Traction-circuit test port

Use the test ports on the mow-manifold block ([Figure 77](#)) to assist in troubleshooting the mow circuit.

Cutting Unit System Maintenance

Backlapping the Cutting Units

⚠ WARNING

Contact with the reels or other moving parts can result in personal injury.

- Keep fingers, hands, and clothing away from the reels or other moving parts.
- Never attempt to turn the reels by hand or foot while the engine is running.

Note: When backlapping, the front units all operate together, and the rear units operate together.

1. Position the machine on a level surface, lower the cutting units, stop the engine, engage the parking brake, and move the ENABLE/DISABLE switch to DISABLE position.
2. Unlock and raise the seat to expose the backlap levers (Figure 79).
3. Make initial reel to bedknife adjustments appropriate for backlapping on all cutting units which are to be backlapped; refer to the cutting unit *Operator's Manual*.
4. Start the engine and run at low idle speed.

⚠ DANGER

Changing the engine speed while backlapping may cause the reels to stall.

- Never change the engine speed while backlapping.
 - Only backlap at idle engine speed.
5. Select either front, rear, or both backlap levers to determine which units to backlap (Figure 79).

⚠ DANGER

Contact with the reels or other moving parts can result in personal injury.

To avoid personal injury, be certain that you are clear of the cutting units before proceeding.

6. With the MOW/TRANSPORT lever in the MOW position, move the ENABLE/DISABLE switch to the ENABLE position. Move the Lower Mow/Lift control forward to start the backlapping operation on the designated reels.
7. Apply lapping compound with a long-handled brush. Never use a short-handled brush.

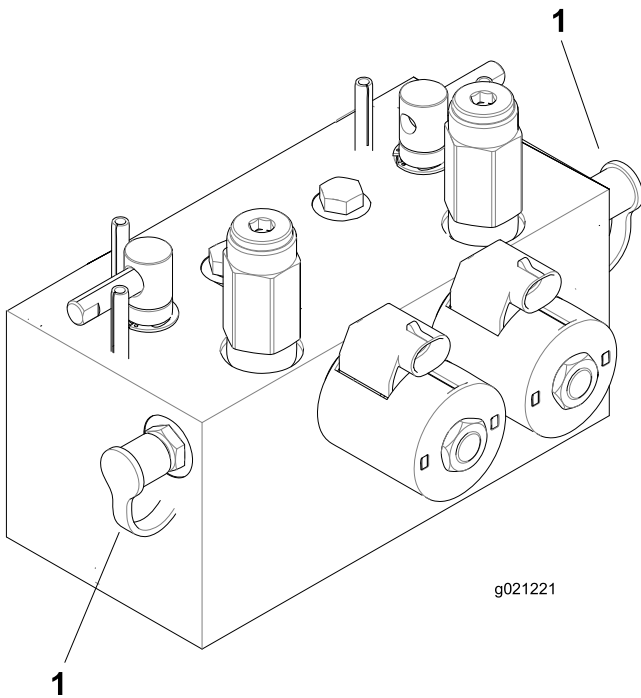


Figure 77

1. Mow-circuit test ports (2)

Use the test port on the lift-manifold block (Figure 78) to assist in troubleshooting the lift circuit.

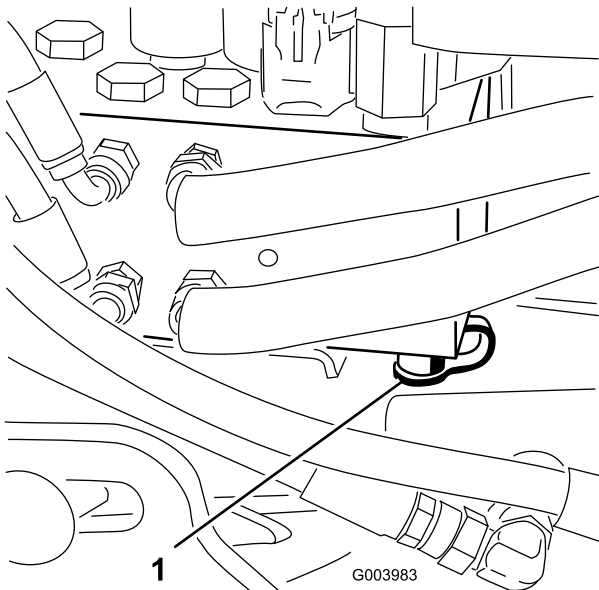


Figure 78

1. Lift-circuit test port

8. If the reels stall or become erratic while backlapping, select a higher reel-speed setting until the speed stabilizes, then return the reel speed to your desired speed.
9. To make an adjustment to the cutting units while backlapping, turn the reels off by moving the LOWER MOW/RAISE lever rearward; the ENABLE/DISABLE switch to the DISABLE position, and stop the engine. After completing adjustments, repeat steps 4 through 8.

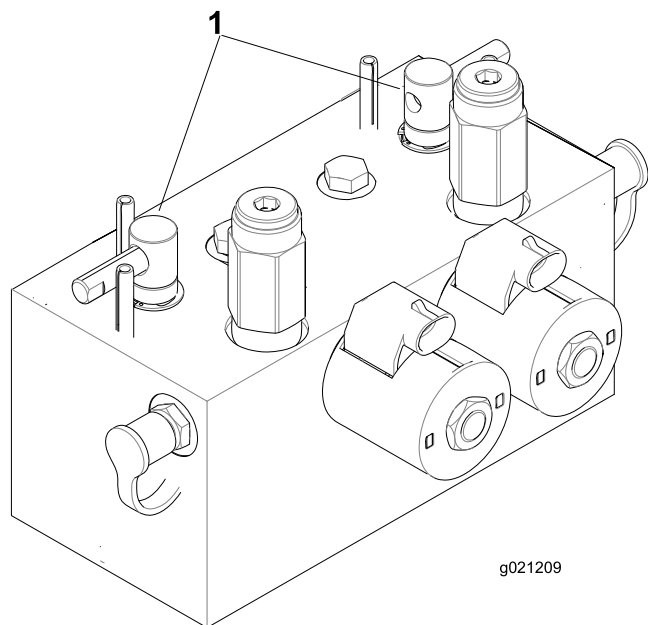


Figure 79

1. Backlap levers

10. Repeat the procedure for all cutting units that you want to backlap.
11. When finished, return the BACKLAP levers to the MOW position, lower the seat, and wash all lapping compound off of the cutting units. Adjust the cutting-unit reel-to-bedknife contact as needed. Adjust the cutting-unit reel speed to the desired mowing setting.

Important: If you do not return the BACKLAP levers to the OFF position after backlapping, the cutting units will not raise or function properly.

Note: For a better cutting edge, run a file across the front face of the bedknife after lapping. This will remove any burrs or rough edges that may have built up on the cutting edge.

Storage

Preparing the Traction Unit

1. Thoroughly clean the machine, cutting units, and engine.
2. Check the tire pressure. Inflate all tires to 83 to 103 kPa (12 to 15 psi).
3. Check all fasteners for looseness and tighten them as necessary.
4. Grease all grease fittings and pivot points. Wipe up any excess lubricant.
5. Lightly sand and use touch-up paint on painted areas that are scratched, chipped, or rusted. Repair any dents in the metal body.
6. Service the battery and cables as follows:
 - A. Remove the battery terminals from the battery posts.
 - B. Clean the battery, terminals, and posts with a wire brush and baking-soda solution.
 - C. Coat the cable terminals and battery posts with Grafo 112X skin-over grease (Toro Part No. 505-47) or petroleum jelly to prevent corrosion.
 - D. Slowly recharge the battery every 60 days for 24 hours to prevent lead sulfation of the battery.

Preparing the Engine

1. Drain the engine oil from the oil pan and install the drain plug.
2. Remove and discard the oil filter. Install a new oil filter.
3. Fill the oil pan with the designated quantity of motor oil.
4. Start the engine and run it at idle speed for approximately 2 minutes.
5. Stop the engine.
6. Thoroughly drain all fuel from the fuel tank, lines, and the fuel filter/water separator assembly.
7. Flush the fuel tank with fresh, clean diesel fuel.
8. Secure all fuel system fittings.
9. Thoroughly clean and service the air-cleaner assembly.
10. Seal the air cleaner inlet and the exhaust outlet with weatherproof tape.
11. Check the antifreeze protection and add coolant as needed for expected minimum temperature in your area.

Notes:

International Distributor List

| Distributor: | Country: | Phone Number: | Distributor: | Country: | Phone Number: |
|------------------------------------|----------------------|----------------------|------------------------------|-----------------|----------------------|
| Agrolanc Kft | Hungary | 36 27 539 640 | Maquiver S.A. | Colombia | 57 1 236 4079 |
| Asian American Industrial (AAI) | Hong Kong | 852 2497 7804 | Maruyama Mfg. Co. Inc. | Japan | 81 3 3252 2285 |
| B-Ray Corporation | Korea | 82 32 551 2076 | Mountfield a.s. | Czech Republic | 420 255 704 220 |
| Brisa Goods LLC | Mexico | 1 210 495 2417 | Mountfield a.s. | Slovakia | 420 255 704 220 |
| Casco Sales Company | Puerto Rico | 787 788 8383 | Munditol S.A. | Argentina | 54 11 4 821 9999 |
| Ceres S.A. | Costa Rica | 506 239 1138 | Norma Garden | Russia | 7 495 411 61 20 |
| CSSC Turf Equipment (pvt) Ltd. | Sri Lanka | 94 11 2746100 | Oslinger Turf Equipment SA | Ecuador | 593 4 239 6970 |
| Cyril Johnston & Co. | Northern Ireland | 44 2890 813 121 | Oy Hako Ground and Garden Ab | Finland | 358 987 00733 |
| Cyril Johnston & Co. | Republic of Ireland | 44 2890 813 121 | Parkland Products Ltd. | New Zealand | 64 3 34 93760 |
| Fat Dragon | China | 886 10 80841322 | Perfetto | Poland | 48 61 8 208 416 |
| Femco S.A. | Guatemala | 502 442 3277 | Pratoverde SRL. | Italy | 39 049 9128 128 |
| FIVEMANS New-Tech Co., Ltd | China | 86-10-6381 6136 | Prochaska & Cie | Austria | 43 1 278 5100 |
| ForGarder OU | Estonia | 372 384 6060 | RT Cohen 2004 Ltd. | Israel | 972 986 17979 |
| G.Y.K. Company Ltd. | Japan | 81 726 325 861 | Riversa | Spain | 34 9 52 83 7500 |
| Geomechaniki of Athens | Greece | 30 10 935 0054 | Lely Turfcare | Denmark | 45 66 109 200 |
| Golf international Turizm | Turkey | 90 216 336 5993 | Lely (U.K.) Limited | United Kingdom | 44 1480 226 800 |
| Hako Ground and Garden | Sweden | 46 35 10 0000 | Solvart S.A.S. | France | 33 1 30 81 77 00 |
| Hako Ground and Garden | Norway | 47 22 90 7760 | Spypros Stavrinides Limited | Cyprus | 357 22 434131 |
| Hayter Limited (U.K.) | United Kingdom | 44 1279 723 444 | Surge Systems India Limited | India | 91 1 292299901 |
| Hydroturf Int. Co Dubai | United Arab Emirates | 97 14 347 9479 | T-Markt Logistics Ltd. | Hungary | 36 26 525 500 |
| Hydroturf Egypt LLC | Egypt | 202 519 4308 | Toro Australia | Australia | 61 3 9580 7355 |
| Irrimac | Portugal | 351 21 238 8260 | Toro Europe NV | Belgium | 32 14 562 960 |
| Irrigation Products Int'l Pvt Ltd. | India | 0091 44 2449 4387 | Valtech | Morocco | 212 5 3766 3636 |
| Jean Heybroek b.v. | Netherlands | 31 30 639 4611 | Victus Emak | Poland | 48 61 823 8369 |

European Privacy Notice

The Information Toro Collects

Toro Warranty Company (Toro) respects your privacy. In order to process your warranty claim and contact you in the event of a product recall, we ask you to share certain personal information with us, either directly or through your local Toro company or dealer.

The Toro warranty system is hosted on servers located within the United States where privacy law may not provide the same protection as applies in your country.

BY SHARING YOUR PERSONAL INFORMATION WITH US, YOU ARE CONSENTING TO THE PROCESSING OF YOUR PERSONAL INFORMATION AS DESCRIBED IN THIS PRIVACY NOTICE.

The Way Toro Uses Information

Toro may use your personal information to process warranty claims, to contact you in the event of a product recall and for any other purpose which we tell you about. Toro may share your information with Toro's affiliates, dealers or other business partners in connection with any of these activities. We will not sell your personal information to any other company. We reserve the right to disclose personal information in order to comply with applicable laws and with requests by the appropriate authorities, to operate our systems properly or for our own protection or that of other users.

Retention of your Personal Information

We will keep your personal information as long as we need it for the purposes for which it was originally collected or for other legitimate purposes (such as regulatory compliance), or as required by applicable law.

Toro's Commitment to Security of Your Personal Information

We take reasonable precautions in order to protect the security of your personal information. We also take steps to maintain the accuracy and current status of personal information.

Access and Correction of your Personal Information

If you would like to review or correct your personal information, please contact us by email at legal@toro.com.

Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.



The Toro Warranty

A Two-Year Limited Warranty

Conditions and Products Covered

The Toro Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Toro Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196

952-888-8801 or 800-952-2740
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your *Operator's Manual*. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent, or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brake pads and linings, clutch linings, blades, reels, rollers and bearings (sealed or greasable), bed knives, spark plugs, castor wheels and bearings, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Conditions considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved fuels, coolants, lubricants, additives, fertilizers, water, or chemicals, etc.
- Failure or performance issues due to the use of fuels (e.g. gasoline, diesel, or biodiesel) that do not conform to their respective industry standards.

- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Deep Cycle and Lithium-Ion Battery Warranty:

Deep cycle and Lithium-Ion batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense. Note: (Lithium-Ion battery only): A Lithium-Ion battery has a part only prorated warranty beginning year 3 through year 5 based on the time in service and kilowatt hours used. Refer to the *Operator's Manual* for additional information.

Maintenance is at Owner's Expense

Engine tune-up, lubrication, cleaning and polishing, replacement of filters, coolant, and completing recommended maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty. All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty.

Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Note regarding engine warranty:

The Emissions Control System on your Product may be covered by a separate warranty meeting requirements established by the U.S. Environmental Protection Agency (EPA) and/or the California Air Resources Board (CARB). The hour limitations set forth above do not apply to the Emissions Control System Warranty. Refer to the Engine Emission Control Warranty Statement supplied with your product or contained in the engine manufacturer's documentation for details.

Countries Other than the United States or Canada

Customers who have purchased Toro products exported from the United States or Canada should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer.