



Flashing Beacon Kit

LT-F3000 Heavy-Duty Triple Turf Flail Mower

Model No. 02920—Serial No. 316000001 and Up

Installation Instructions

Preparing the Machine

1. Park the machine on a level surface, set the parking brake, shut off the engine, remove the key from the ignition switch, and apply the cutting-unit transport latches.
2. Open the engine cover.
3. Disconnect the battery as follows:

⚠ WARNING

CALIFORNIA Proposition 65 Warning

Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm.
Wash hands after handling.

- A. Disconnect the negative (black) ground cable from the negative (-) battery post.

⚠ WARNING

Incorrect battery cable routing could damage the machine and cables, causing sparks. Sparks can cause the battery gases to explode, resulting in personal injury.

- Always disconnect the negative (black) battery cable before disconnecting the positive (red) cable.
- Always connect the positive (red) battery cable before connecting the negative (black) cable.

⚠ WARNING

Battery terminals or metal tools could short against metal machine components, causing sparks. Sparks can cause the battery gases to explode, resulting in personal injury.

- When disconnecting or connecting the battery, do not allow the battery terminals to touch any metal parts of the machine.
- Do not allow metal tools to short between the battery terminals and metal parts of the machine.

- B. Disconnect the positive (red) cable from the positive (+) battery post.

4. Remove the bulkhead to enable access to the main wiring loom by removing the 4 screws.

Installing the Kit

Installing the Brackets

1. Ensure that the ROPS pivot bolts and clamp bolts are in place and tight.
2. On the same side of the ROPS on which you plan to install the kit, remove the nut, bolt, and washer from the ROPS and discard the nut and bolt; refer to [Figure 1](#).

Note: Retain the washer.



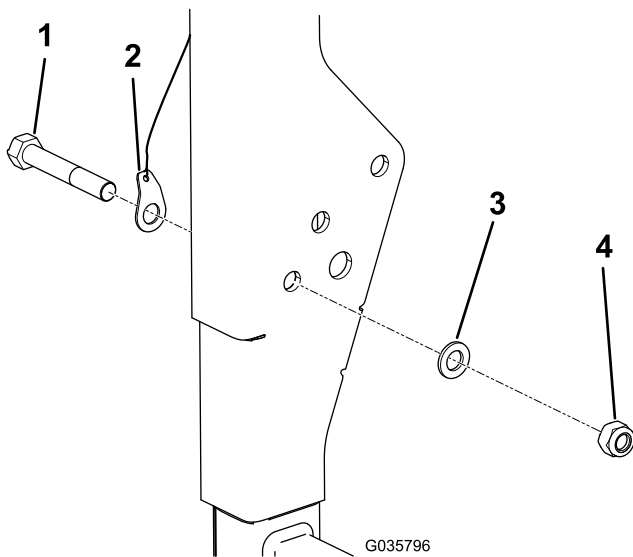


Figure 1

- | | |
|-------------------|----------------------|
| 1. Bolt (discard) | 3. Washer (retain) |
| 2. Lanyard washer | 4. Locknut (discard) |

3. Align the hole in the ROPS bracket with the hole in the ROPS and install the new bolt with the existing washer (Figure 2).

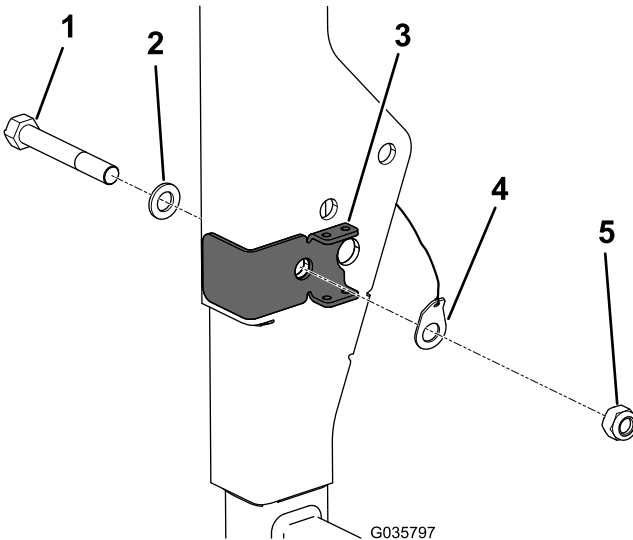


Figure 2

- | | |
|----------------------|-------------------|
| 1. Large bolt | 4. Lanyard washer |
| 2. Washer (existing) | 5. Large locknut |
| 3. ROPS bracket | |

4. Install the new large locknut and the existing lanyard washer, and tighten the locknut to a torque of 15 N·m (11 ft-lb).

Note: Do not overtighten them, as this will make the ROPS difficult to fold.

5. Align the small holes in the beacon bracket with the upper holes in the ROPS bracket (Figure 3), and secure the brackets with the 2 small bolts, 4 small washers, and 2 small locknuts.

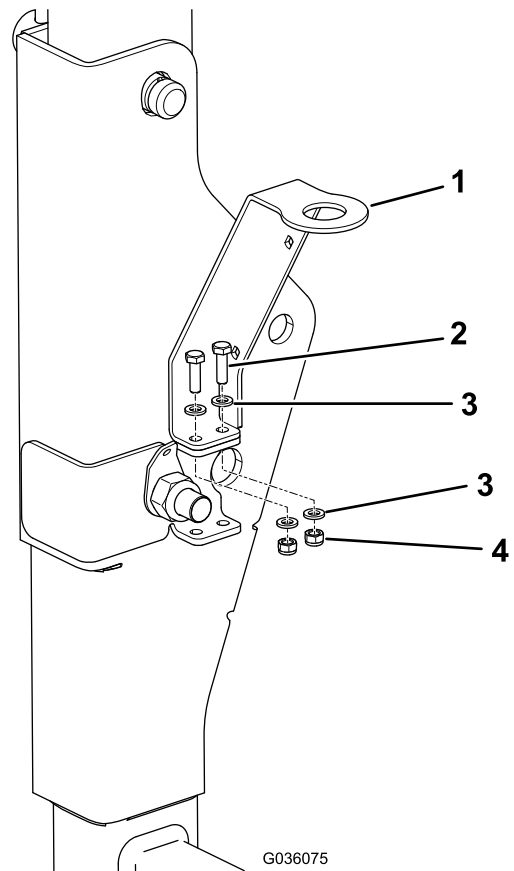


Figure 3

- | | |
|-------------------|----------------------|
| 1. Beacon bracket | 3. Small washer (4) |
| 2. Small bolt (2) | 4. Small locknut (2) |

Installing the Beacon

1. Install the beacon stand to the beacon bracket (Figure 4).

Note: Rotate the cable as you screw in the connector. This prevents the cable from being twisted.

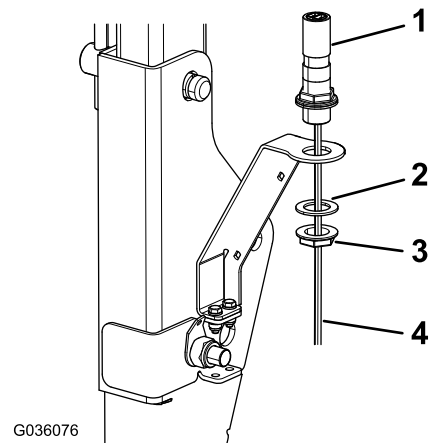


Figure 4

- | | |
|-----------------|-----------------|
| 1. Beacon stand | 3. Nut |
| 2. Seal | 4. Beacon cable |

2. To fit the beacon cable, start by removing the fitting in the top of the beacon stand and feed the beacon cable through the bottom and out through the top.
3. Connect the beacon cable, ensuring that the red connector is fitted to the central positive terminal of the beacon stand fitting, and the black connector to the outer terminal. Screw the fitting back into the beacon stand.
4. Loosen the wing nut on the beacon (Figure 5).

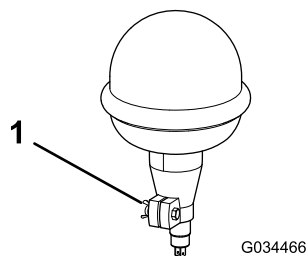


Figure 5

1. Wing nut

5. Plug the beacon onto the top of the beacon stand (Figure 6).

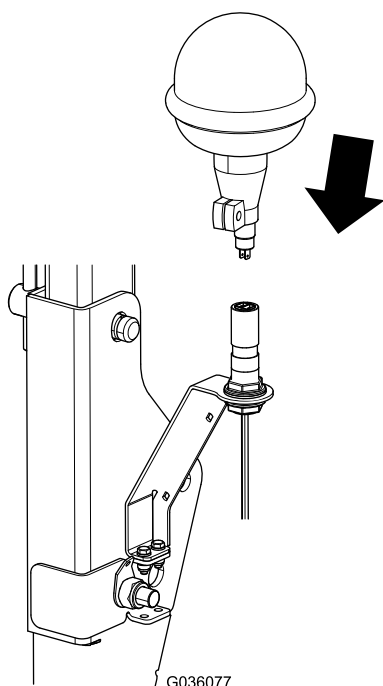


Figure 6

6. Tighten the wing nut on the clamp (Figure 7).

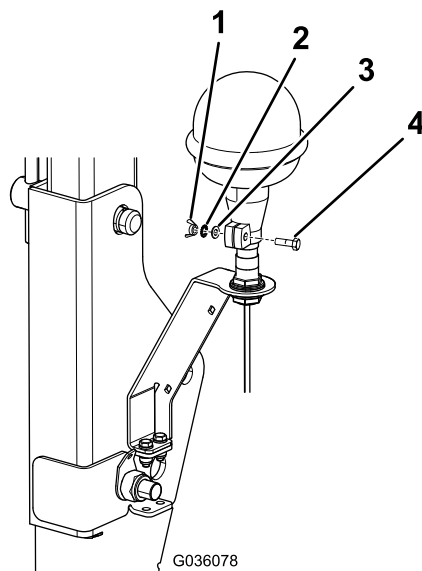


Figure 7

7. Route the cable down the front of the ROPS frame, ensuring that it cannot be trapped or chafed.
8. Connect the cable to the mating connector on the main wiring loom, situated near the horn, with the orange and black wires.
9. Insert a cable tie through each of the 2 holes in the beacon bracket (Figure 8), and secure the cable.

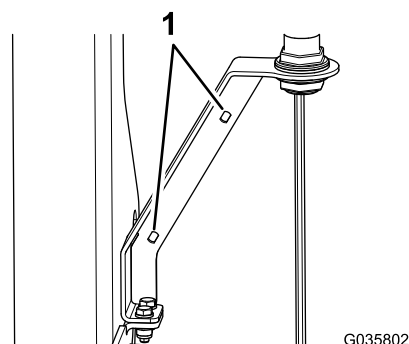


Figure 8

Installing the Switch

1. On the main control panel at the rear of the control pad, remove and discard the blanking plug.
2. Pull out the switch connector containing orange and red / orange and black wires and plug in the switch.
3. Press the switch into the cutout until it clicks into place (Figure 9).

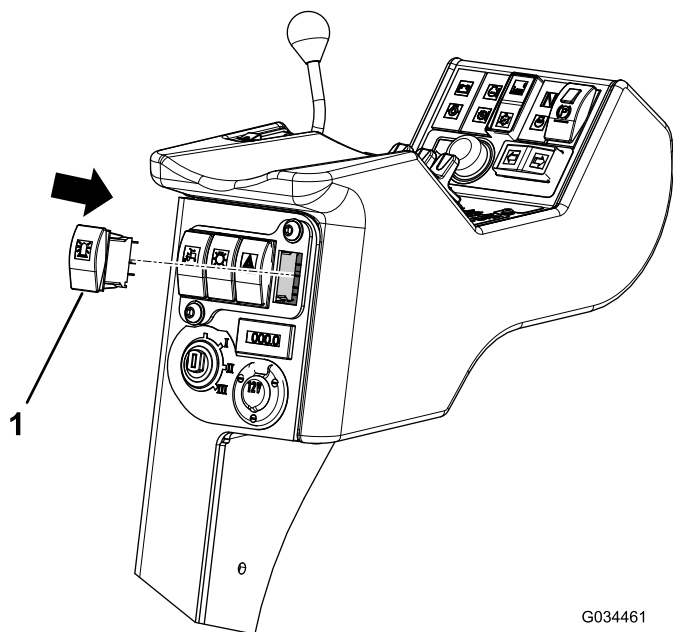


Figure 9

1. Switch

Important: Always use a fuse of the same type and amperage as the one you are replacing; otherwise, you could damage the electrical system.

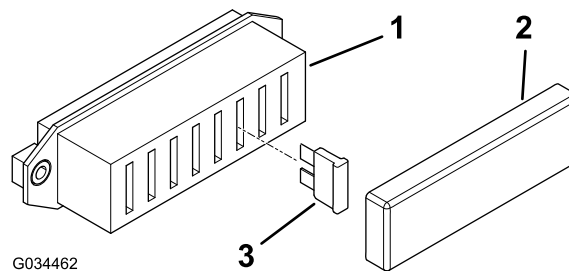


Figure 10

1. Fuse block
2. Cover
3. Fuse

Completing the Installation

1. Install the bulkhead.
2. Apply the serial label adjacent to the machine serial label.
3. Install the positive (red) battery cable to the positive (+) battery terminal.
4. Install the negative (black) ground cable to the negative (-) battery terminal.
5. Lower and latch the engine cover.

Operation

Using the Beacon

To turn on the beacon, press the bottom of the switch.

To shut off the beacon, press the top of the switch.

Note: The ignition switch must be in position 1 for the beacon to work.

Maintenance

Replacing the Fuse

The beacon fuse is located in the main fuse box of the machine. It is a 10 A fuse located in the third position from the right ([Figure 10](#)).

To replace the fuse, remove it by simply pulling it out from the fuse block, and install a new fuse.

Notes:

Notes:

International Distributor List

Distributor:	Country:	Phone Number:	Distributor:	Country:	Phone Number:
Agrolanc Kft	Hungary	36 27 539 640	Maquiver S.A.	Colombia	57 1 236 4079
Asian American Industrial (AAI)	Hong Kong	852 2497 7804	Maruyama Mfg. Co. Inc.	Japan	81 3 3252 2285
B-Ray Corporation	Korea	82 32 551 2076	Mountfield a.s.	Czech Republic	420 255 704 220
Brisa Goods LLC	Mexico	1 210 495 2417	Mountfield a.s.	Slovakia	420 255 704 220
Casco Sales Company	Puerto Rico	787 788 8383	Munditol S.A.	Argentina	54 11 4 821 9999
Ceres S.A.	Costa Rica	506 239 1138	Norma Garden	Russia	7 495 411 61 20
CSSC Turf Equipment (pvt) Ltd.	Sri Lanka	94 11 2746100	Oslinger Turf Equipment SA	Ecuador	593 4 239 6970
Cyril Johnston & Co.	Northern Ireland	44 2890 813 121	Oy Hako Ground and Garden Ab	Finland	358 987 00733
Cyril Johnston & Co.	Republic of Ireland	44 2890 813 121	Parkland Products Ltd.	New Zealand	64 3 34 93760
Fat Dragon	China	886 10 80841322	Perfetto	Poland	48 61 8 208 416
Femco S.A.	Guatemala	502 442 3277	Pratoverde SRL.	Italy	39 049 9128 128
FIVEMANS New-Tech Co., Ltd	China	86-10-6381 6136	Prochaska & Cie	Austria	43 1 278 5100
ForGarder OU	Estonia	372 384 6060	RT Cohen 2004 Ltd.	Israel	972 986 17979
G.Y.K. Company Ltd.	Japan	81 726 325 861	Riversa	Spain	34 9 52 83 7500
Geomechaniki of Athens	Greece	30 10 935 0054	Lely Turfcare	Denmark	45 66 109 200
Golf international Turizm	Turkey	90 216 336 5993	Lely (U.K.) Limited	United Kingdom	44 1480 226 800
Hako Ground and Garden	Sweden	46 35 10 0000	Solvart S.A.S.	France	33 1 30 81 77 00
Hako Ground and Garden	Norway	47 22 90 7760	Spypros Stavrinides Limited	Cyprus	357 22 434131
Hayter Limited (U.K.)	United Kingdom	44 1279 723 444	Surge Systems India Limited	India	91 1 292299901
Hydroturf Int. Co Dubai	United Arab Emirates	97 14 347 9479	T-Markt Logistics Ltd.	Hungary	36 26 525 500
Hydroturf Egypt LLC	Egypt	202 519 4308	Toro Australia	Australia	61 3 9580 7355
Irrimac	Portugal	351 21 238 8260	Toro Europe NV	Belgium	32 14 562 960
Irrigation Products Int'l Pvt Ltd.	India	0091 44 2449 4387	Valtech	Morocco	212 5 3766 3636
Jean Heybroek b.v.	Netherlands	31 30 639 4611	Victus Emak	Poland	48 61 823 8369

European Privacy Notice

The Information Toro Collects

Toro Warranty Company (Toro) respects your privacy. In order to process your warranty claim and contact you in the event of a product recall, we ask you to share certain personal information with us, either directly or through your local Toro company or dealer.

The Toro warranty system is hosted on servers located within the United States where privacy law may not provide the same protection as applies in your country.

BY SHARING YOUR PERSONAL INFORMATION WITH US, YOU ARE CONSENTING TO THE PROCESSING OF YOUR PERSONAL INFORMATION AS DESCRIBED IN THIS PRIVACY NOTICE.

The Way Toro Uses Information

Toro may use your personal information to process warranty claims, to contact you in the event of a product recall and for any other purpose which we tell you about. Toro may share your information with Toro's affiliates, dealers or other business partners in connection with any of these activities. We will not sell your personal information to any other company. We reserve the right to disclose personal information in order to comply with applicable laws and with requests by the appropriate authorities, to operate our systems properly or for our own protection or that of other users.

Retention of your Personal Information

We will keep your personal information as long as we need it for the purposes for which it was originally collected or for other legitimate purposes (such as regulatory compliance), or as required by applicable law.

Toro's Commitment to Security of Your Personal Information

We take reasonable precautions in order to protect the security of your personal information. We also take steps to maintain the accuracy and current status of personal information.

Access and Correction of your Personal Information

If you would like to review or correct your personal information, please contact us by email at legal@toro.com.

Australian Consumer Law

Australian customers will find details relating to the Australian Consumer Law either inside the box or at your local Toro Dealer.



The Toro Warranty

A Limited Warranty

Conditions and Products Covered

The Toro® Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your Operator's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brakes pads and linings, clutch linings, blades, reels, bed knives, tines, spark plugs, castor wheels, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.
- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices,

contamination, use of unapproved coolants, lubricants, additives, fertilizers, water, or chemicals, etc.

- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Note Regarding Deep Cycle Battery Warranty:

Deep cycle batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense.

Maintenance is at Owner's Expense

Engine tune-up, lubrication cleaning and polishing, replacement of Items and Conditions Not Covered filters, coolant, and completing Recommended Maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty.

All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty. Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Countries Other than the United States or Canada

Customers should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.