



Engine Conversion Kit

Serial Number 280000001 and After Kawasaki-Powered
Walk-Behind Greensmaster® 1000, 1600, 2000 and 2600 Mowers

Model No. 120-2736

Installation Instructions

Introduction

Important: These installation instructions contain engine operation and maintenance information that supersedes the engine information in your machine *Operator's Manual*.

Before operating or maintaining the machine or engine, always refer to the safety in your *Operator's Manual*.

Save these instructions.

Important: This engine's warranty is provided by the engine manufacturer. Please refer to the engine manufacturer's warranty and emissions system warranty included in the literature packet. That warranty applies only to the engine. It does not expand or otherwise alter any express or implied warranty terms or warranty period that may apply to the product into which the engine is installed.

⚠ WARNING


CALIFORNIA Proposition 65 Warning

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

Opening and Closing the Fuel-Shut-Off Valve	9
Maintenance	10
Recommended Maintenance Schedule(s)	10
Preparing the Machine for Maintenance	10
Servicing the Air Cleaner	11
Engine Oil Specification	12
Checking the Engine-Oil Level	12
Changing the Engine Oil	12
Servicing the Spark Plug	14

Contents

Introduction	1
Safety	2
Safety and Instructional Decals	2
Installation	3
1 Removing the Old Engine	3
2 Installing the New Engine	3
Product Overview	8
Controls	8
Operation	8
Fuel Specification	8
Using Stabilizer/Conditioner	8
Filling the Fuel Tank	9

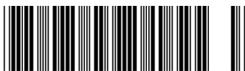

Safety

Safety and Instructional Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.



decal115-1614

115-1614


1. Warning—read the *Operator's Manual*.
2. Warning—do not operate the machine unless you are trained.
3. Thrown object hazard—keep bystanders away.
4. Warning—stay away from moving parts; keep all guards and shields in place.

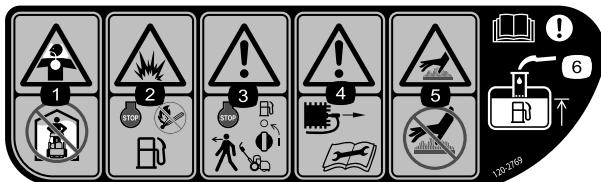

120-2769

decal120-2769


1. Poisonous fumes or toxic gases, asphyxiation hazard—do not run the engine in an enclosed space.
2. Explosion hazard—shut off the engine before adding fuel; no fire, open flames, or smoking when adding fuel.
3. Warning—shut off the engine and close the fuel shutoff valve before leaving the machine.
4. Warning—disconnect the spark plug wire before performing maintenance.
5. Hot surface hazard—do not touch the hot surface.
6. Attention—read the *Operator's Manual* for information about filling the fuel tank.

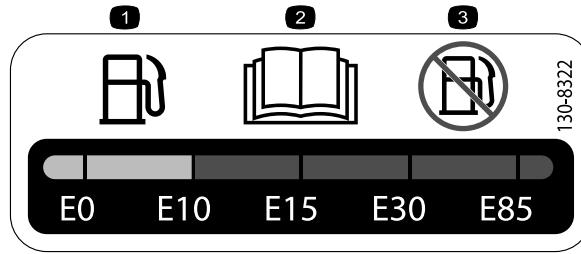

130-8322

decal130-8322

1. Only use fuel with an alcohol content by volume under 10%.
2. Read the *Operator's Manual* for more information on fuel.
3. Do not use fuel with an alcohol content by volume greater than 10%.

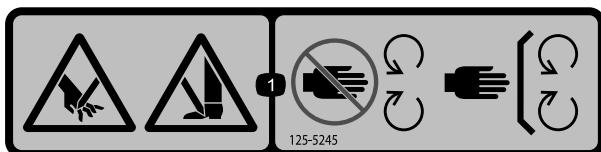

125-5245

decal125-5245

1. Cutting hazard of hand or foot—keep away from moving parts; keep all guards and shields in place.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

For more information, please visit www.tccoCAProp65.com

CALIFORNIA SPARK ARRESTER WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

125-5245

decal133-8062

133-8062

Installation

For models 04034, 04035, 04036, 04037, 04052 (TE), and 04060 (TE) made in 2008 or newer.

Note: If the machine is equipped with an incandescent light kit, you may need to order a new kit; contact your local Toro dealer for more information.

1

Removing the Old Engine

No Parts Required

Procedure

Important: Save all fasteners that you removed for reuse unless otherwise noted.

1. Prepare the machine; refer to [Preparing the Machine for Maintenance \(page 10\)](#).
2. Remove the old bellcrank cover and keep the 1/4 turn stud, 2 washers, mounting bracket, and the mounting bracket screws and washers.
Note: Discard the bellcrank cover.
3. Remove the V-belts from the driver pulley.
4. Remove and discard the wiring harness.
5. Remove the brake and traction lever grips, and console cover.
6. Remove and discard the throttle control cable.
7. Disconnect the traction cable from the clutch assembly on the engine.
8. Disconnect the brake cable from the brake lever.
9. Remove and discard the throttle lever, but retain the spring and mounting hardware.
10. Remove the traction lever and traction cable from the old traction bracket.
11. Remove the handle assembly.
12. Remove and discard the old traction bracket, but retain the proximity switch and mounting hardware.
13. Remove the old engine and mounting bolts and nuts.
14. Remove and discard the old engine mounting bracket, but retain the engine and engine mounting bracket bolts.
15. Clean the frame and check for damage or wear.

2

Installing the New Engine

Parts needed for this procedure:

1	Engine
1	Engine conversion mounting bracket
1	Wire harness plate
1	Interlock module
1	Wiring harness
1	Throttle lever
1	Traction bracket
1	Throttle cable
1	Key
1	Washer
4	Short bolt
1	Drive pulley input
1	Clutch bracket
1	Clutch lever
1	Lock washer
1	Long bolt
1	Flange-head bolt
1	Engine switch
2	Clip
1	Bellcrank cover
4	Cable tie
1	Idler pulley assembly
1	Belt guide
2	Locknut
1	Flat washer
1	Cotter pin

Procedure

Note: If the machine does not have an engine switch on the console, add a space for one using the dimensions in [Figure 1](#).

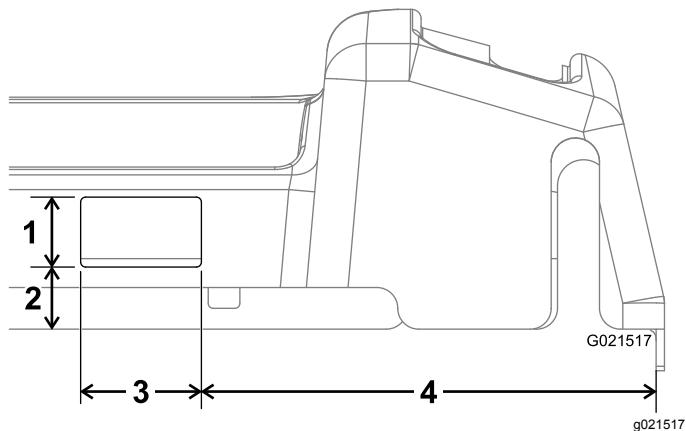


Figure 1

1. 2.13 cm (0.84 inches)	3. 3.68 cm (1.45 inches)
2. 1.90 cm (0.75 inches)	4. 13.97 cm (5.50 inches)

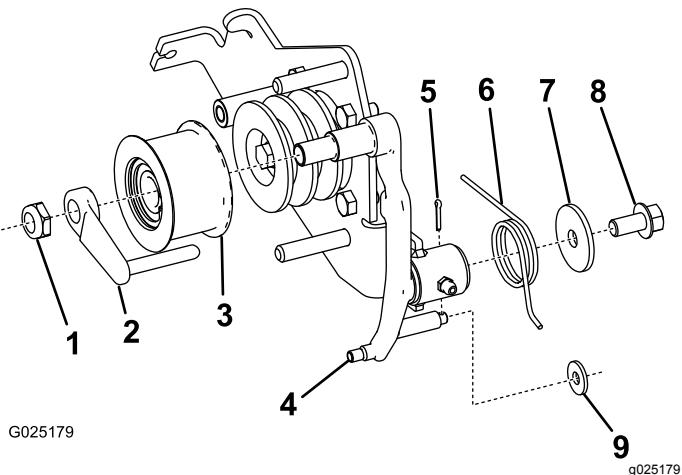


Figure 2

1. Lock nut	6. Torque spring
2. Belt guide	7. Washer
3. Idler pulley assembly	8. Bolt
4. Clutch lever	9. Cable link
5. Cotter pin	

5. Install the old cable link to the clutch lever and secure it using the washer and cotter pin.
6. Install the new idler pulley assembly, belt guide, and locknut to the clutch lever.
7. Remove the traction lever assembly and necessary parts from the old clutch bracket and install them on the new clutch bracket ([Figure 3](#)).

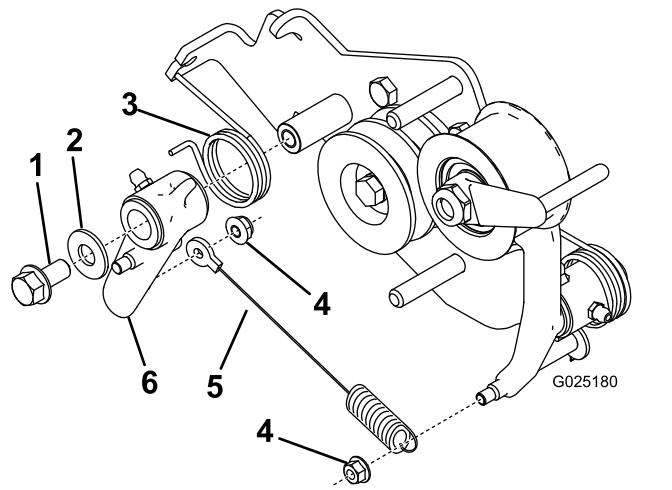


Figure 3

1. Bolt	4. Nut
2. Washer	5. Cable link
3. Torsion spring	6. Traction lever assembly

8. Attach the wiring harness bracket to the fuel tank using the 2 rear flange nuts securing the tank to the engine ([Figure 6](#)).
9. Install the interlock module to the wiring harness bracket with the new flange-head bolt.

10. Install the engine conversion mounting bracket to the machine with the previously removed bolts.

Note: To make installing the engine to the frame easier, tighten the bolts 90% of the way.

11. Mount the engine onto the engine conversion mounting bracket using 3 of the existing bolts and nuts, leaving the front right mounting hole open.

Note: To make installing the engine to the frame easier, tighten the bolts 90% of the way.

12. Install the new traction bracket to the handle using the previously removed hardware.

Note: If the original traction bracket was attached to the machine through 2 holes in the handle, order Part Nos. 112-9318 and 110-2415 to complete the installation.

13. Install the previously removed handle assembly.

14. Install the previously removed traction lever and cable.

15. Install and adjust the interlock switch according to the instructions in your *Operator's Manual*.

16. Install the new throttle lever and cable using the previously removed hardware.

Note: Ensure that you are using the correct cable for your model.

Note: Tighten the nut on the throttle spring until the spring is fully compressed, then back off 1/2 turn. At high idle the throttle lever should not move; if it moves, tighten the nut on the throttle spring slightly.


17. Connect the brake cable to the brake lever.

18. Install the previously removed console cover and handle grips.

Note: Trim the slot in the console cover if the throttle lever makes contact with the plastic at full throttle.

19. Install the traction cable to the clutch bracket.

20. Using the old throttle cable clip, attach the new throttle cable to the rear of the differential housing (Figure 4).

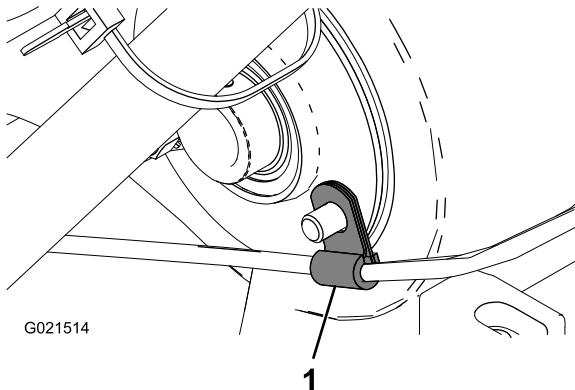


g021514

Figure 4

1. Old clip

21. Attach the new clip to the throttle cable and bolt it to the engine conversion mounting bracket with the remaining bolt (Figure 5).

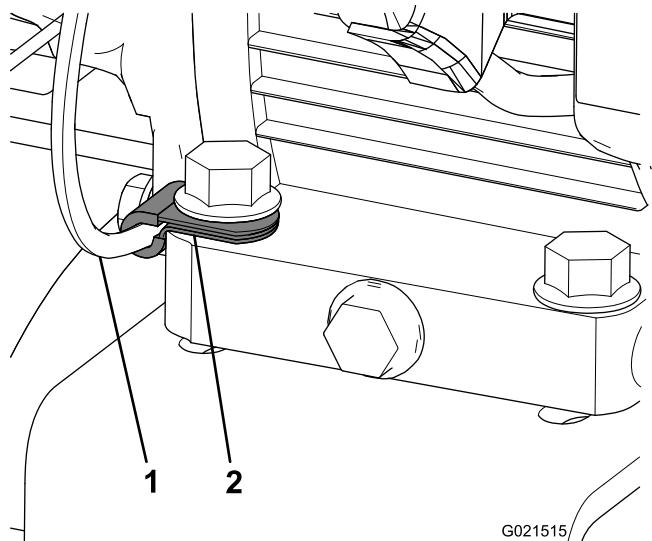

g021515

Figure 5

1. Throttle cable

2. New clip

22. Connect the traction cable to the engine and adjust it according to the instructions in your *Operator's Manual*.

Note: If the traction cable cannot be adjusted properly, replace the cable.


23. Install and adjust the V-belts; refer to your *Operator's Manual*.

24. Tighten all of the engine mounting bracket and engine conversion bracket bolts.

25. Connect the wiring harness to the interlock module, and route the harness up the left side of the handle.

26. Install the engine switch in the console and connect it to the wiring harness.
Note: Connect the wiring harness to the hour meter if the machine is equipped with one.
27. Snap the wiring harness into place under the console cover.
Note: You may need to drill holes for the wiring harness clips to snap through.
28. Mount the green ground wire using the cowling bolt under the fuel tank, and connect the red wire to the engine.
Note: Apply skin-over grease to the bolt and ground lug terminal.
29. Clip the wiring harness to the mounting bracket.
30. Install the 1/4 turn stud and 2 washers to the bellcrank cover, and install the cover assembly, mounting bracket, and mounting bracket screws and washers.
31. Attach the cables and wiring harness to the handles using the 4 new cable-ties.
32. Lubricate the machine according to the instructions in your *Operator's Manual*.
33. Fill the engine crankcase with oil according to the instructions in your *Operator's Manual*.
34. Adjust the engine speed to the following specifications:

High idle (no load)	3375 \pm 100 rpm
Low idle (no load)	1565 \pm 150 rpm

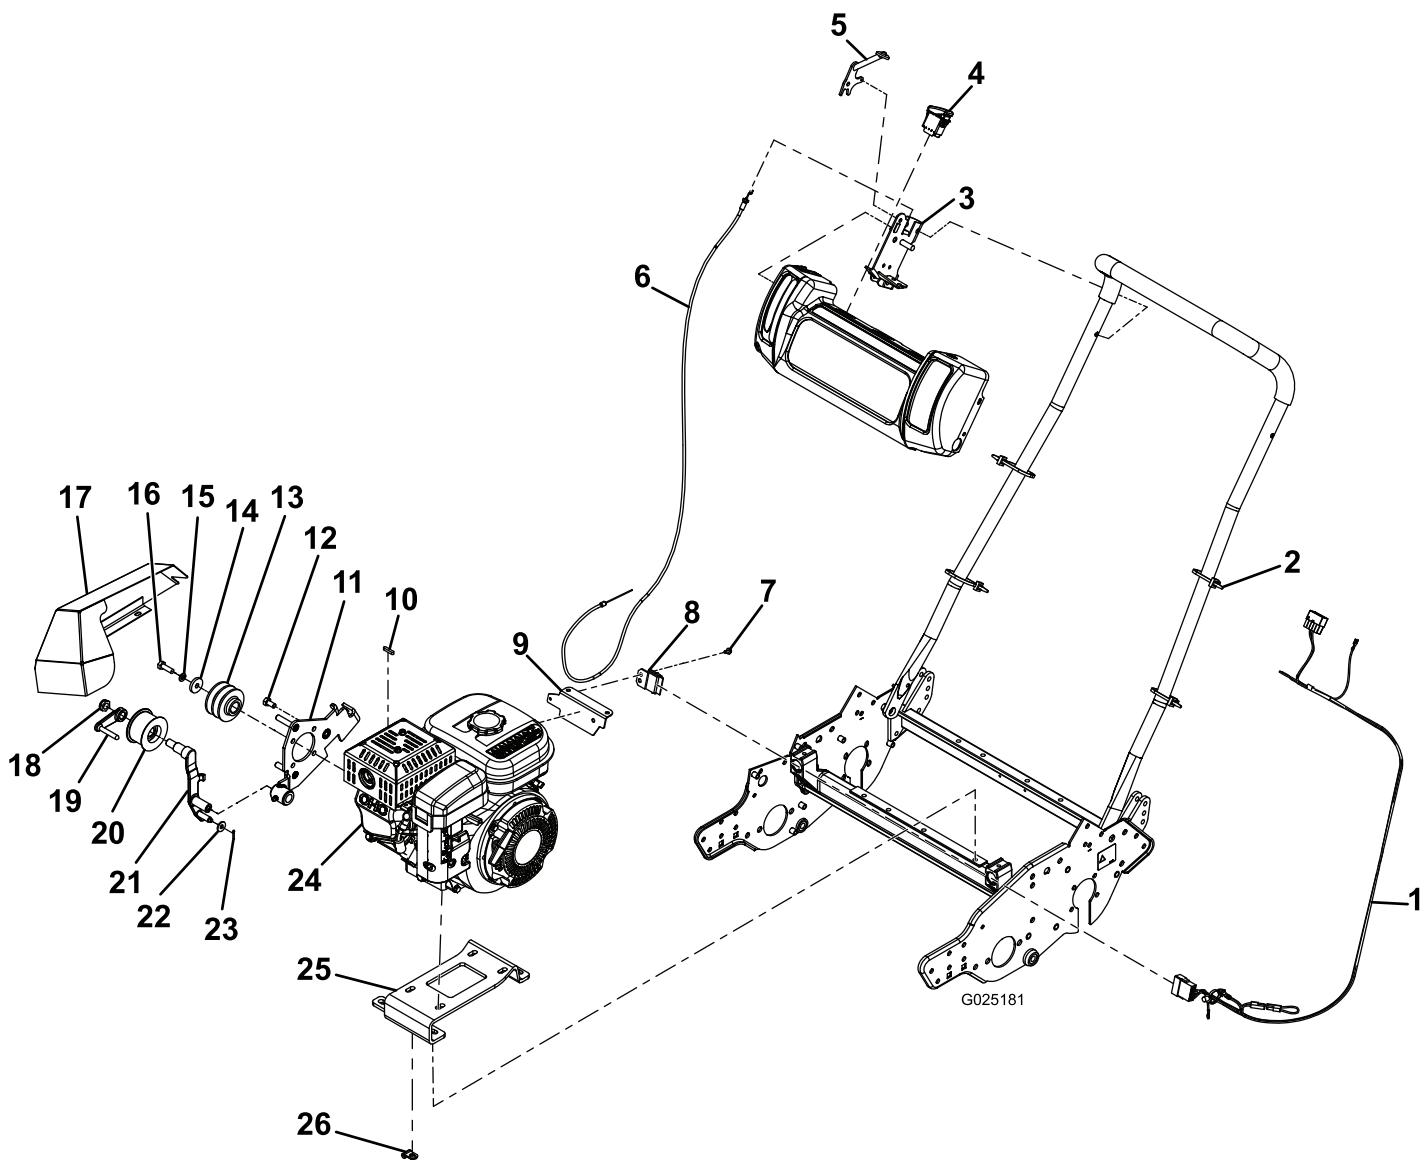

g025181

Figure 6

1. wiring harness	14. Washer
2. Cable tie	15. Lock washer
3. Traction bracket	16. Long bolt
4. Engine switch	17. Bellcrank cover
5. Throttle lever	18. Locknut
6. Throttle cable	19. Belt guide
7. Flange-head bolt	20. Idler pulley assembly
8. Interlock module	21. Clutch lever
9. Wire harness plate	22. Flat washer
10. Key	23. Cotter pin
11. Clutch bracket	24. Engine
12. Short bolt	25. Engine conversion mounting bracket
13. Drive pulley input	26. Clip

Product Overview

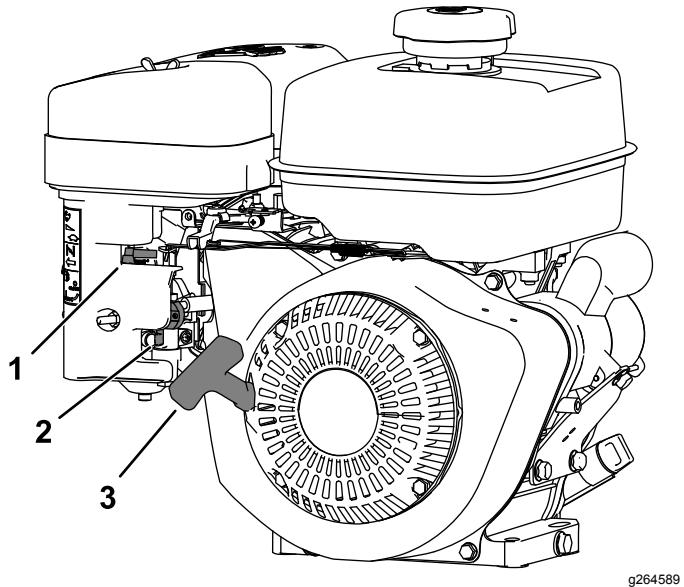


Figure 7

1. Choke lever	3. Recoil starter handle
2. Fuel-shutoff valve	

Operation

Fuel Specification

Petroleum fuel	Use unleaded gasoline with an octane rating of 87 or higher ((R+M)/2 rating method).
Ethanol blended fuel	<p>Use an unleaded-gasoline blend with up to 10% ethanol (gasohol) or 15% MTBE (methyl tertiary butyl ether) by volume is acceptable. Ethanol and MTBE are not the same.</p> <p>Gasoline with 15% ethanol (E15) by volume is not approved for use. Never use gasoline that contains more than 10% ethanol by volume, such as E15 (contains 15% ethanol), E20 (contains 20% ethanol), or E85 (contains up to 85% ethanol). Using unapproved gasoline may cause performance problems and/or engine damage which may not be covered under warranty.</p>

Important: For best results, use only clean, fresh fuel (less than 30 days old).

- Do not use gasoline containing methanol.
- Do not store fuel either in the fuel tank or fuel containers over the winter unless you use a fuel stabilizer.
- Do not add oil to gasoline.

Controls

Choke Control

The choke control is located at the left side of the control console; you use it to help start a cold engine (Figure 7).

Note: Do not start or run a warm engine with the choke in the ON position.

- Pull up on the choke control to set the choke to the ON position.
- Push down on the choke control to set the choke to the OFF position.

Fuel-Shut-Off Valve

The fuel-shut-off valve is located at the front, right side of the engine below the fuel tank (Figure 7).

Note: Close the fuel-shut-off valve when the machine is not used for a few days, during transport to and from the job site, or when the machine is parked inside a building; refer to [Opening and Closing the Fuel-Shut-Off Valve \(page 9\)](#).

Using Stabilizer/Conditioner

Use a fuel stabilizer/conditioner in the machine to provide the following benefits:

Important: Do not use fuel additives containing methanol or ethanol.

Add the correct amount of fuel stabilizer/conditioner to the gasoline.

Note: A fuel stabilizer/conditioner is most effective when mixed with fresh gasoline. To minimize the chance of varnish deposits in the fuel system, use fuel stabilizer at all times.

Filling the Fuel Tank

Fuel tank capacity: 2.7 L (0.71 US gallons)

1. Park the machine on a level surface and shut off the engine.
2. Allow the engine to cool.
3. Clean around the fuel-tank cap and remove it (Figure 8).

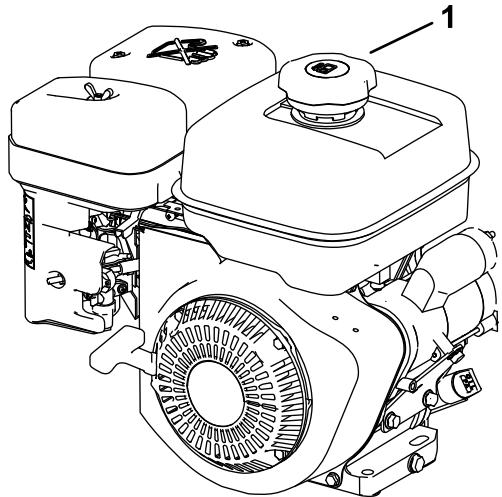


Figure 8

g264553

1. Fuel-tank cap
4. Fill the tank with fuel (Figure 8) to within 6 to 13 mm (1/4 to 1/2 inch) from the top of the tank. **Do not fill into the filler neck of the tank.**



Important: Do not fill the tank more than 6 mm (1/4 inch) from the top of the tank because the fuel needs room to expand.

5. Install the fuel-tank cap securely.
6. Wipe up any spilled fuel.

Opening and Closing the Fuel-Shut-Off Valve

Control fuel flow to the engine with the fuel-shut-off valve as follows:

- Rotate the handle for the fuel-shut-off valve 90 degrees clockwise to the open the valve.
- Rotate fuel-shut-off valve handle 90 degrees counterclockwise to close the valve.

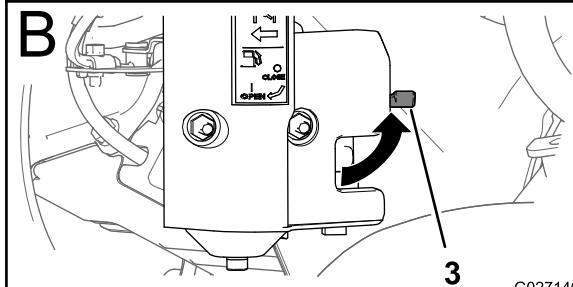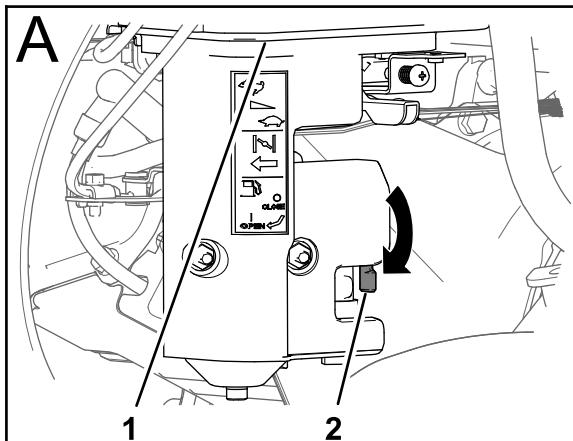

g027146

Figure 9

1. Fuel tank
2. Fuel-shutoff valve (open position)
3. Fuel-shutoff valve (closed position)

Maintenance

Important: Refer to your engine owner's manual for additional maintenance procedures.

Recommended Maintenance Schedule(s)

Maintenance Service Interval	Maintenance Procedure
After the first 20 hours	<ul style="list-style-type: none">Change the engine oil.
Before each use or daily	<ul style="list-style-type: none">Check the engine-oil level.
Every 50 hours	<ul style="list-style-type: none">Clean the foam air-cleaner element (More often under severe conditions).
Every 100 hours	<ul style="list-style-type: none">Change the engine oilCheck and gap the spark plug.
Every 200 hours	<ul style="list-style-type: none">Replace the dual element air filter.

Preparing the Machine for Maintenance

⚠ WARNING

While you are maintaining or adjusting the machine, someone could start the engine. Accidentally starting the engine could seriously injure you or other bystanders.

Remove the key from the ignition, engage parking brake, and pull the wire(s) off the spark plug(s) before you do any maintenance. Also push the wire(s) aside so it does not accidentally contact the spark plug(s).

Perform the following before servicing, cleaning, or making any adjustments to the machine.

1. Park the machine on a level surface.
2. Shut off the engine and remove the key from the machine (if equipped).
3. Engage the parking brake.
4. Wait for all moving parts to stop allow the engine to cool before servicing, storing, or making repairs.
5. Disconnect the spark-plug wire ([Figure 10](#)).

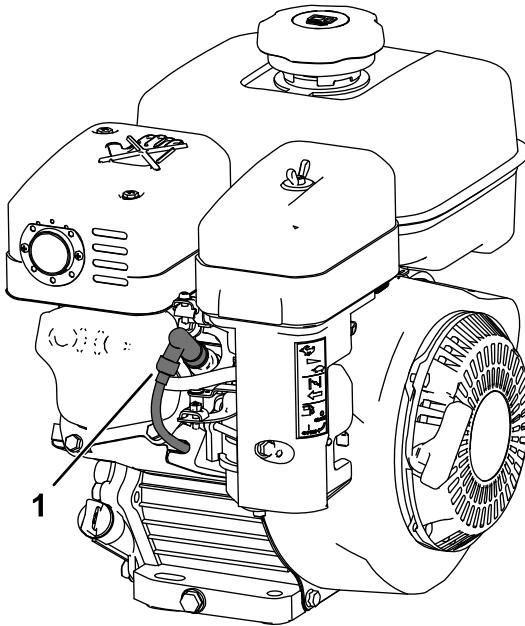


Figure 10

1. Spark-plug wire

g259487

Servicing the Air Cleaner

Service Interval: Every 200 hours

Important: Do not apply oil to the foam or paper element.

Removing the Foam and Paper Elements

1. Prepare the machine for maintenance; refer to [Preparing the Machine for Maintenance \(page 10\)](#).
2. Clean around the air cleaner to prevent dirt from getting into the engine and causing damage ([Figure 11](#)).

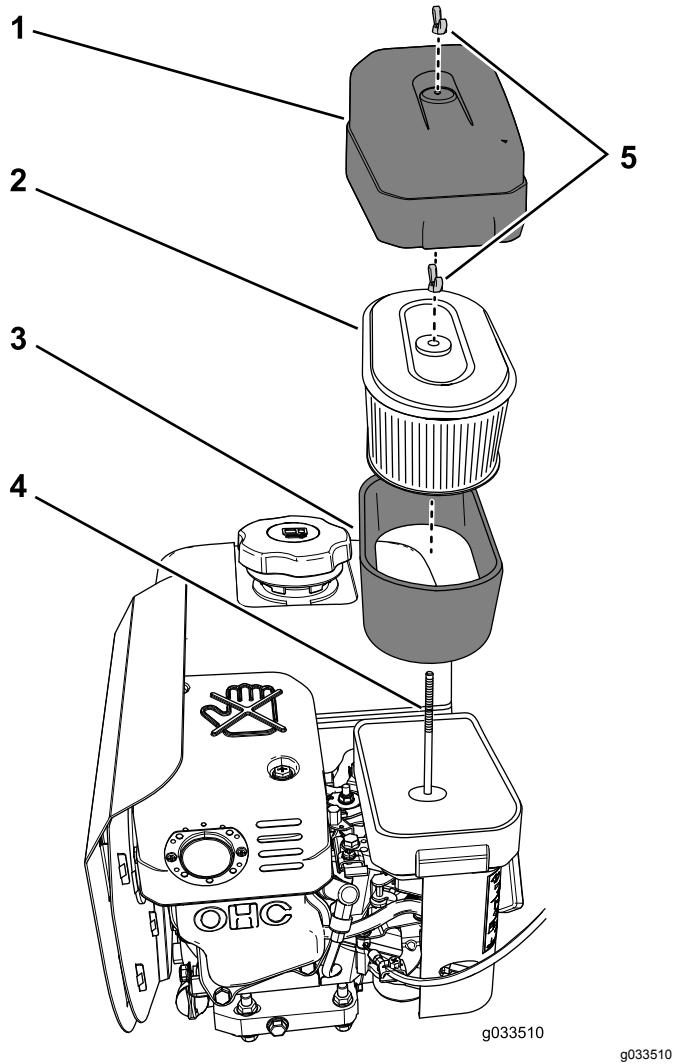


Figure 11

1. Air-cleaner cover
2. Paper-filter element
3. Foam element
4. Hold-down rod
5. Wing nuts

3. Rotate the wing nut that secures the air-cleaner cover counterclockwise and remove the air-cleaner cover ([Figure 11](#)).

4. Rotate the wing nut that secures the paper and foam-filter elements counterclockwise and remove the filter elements from the hold-down rod ([Figure 11](#)).
5. Carefully pull the foam element off the paper element ([Figure 11](#)).

Note: Inspect the paper and foam-filter elements for damage or an excessive accumulation of dirt. Replace the damaged filters. Clean the foam-filter element if it is dirty. Replace the paper-filter element if it is dirty.

Servicing the Foam Filter Element

Service Interval: Every 50 hours

1. Inspect the element for tears, an oily film, or damaged ([Figure 11](#)).

Important: Replace the foam element if it is worn or damaged.

2. Wash the foam element in liquid soap and warm water. When the element is clean, rinse it thoroughly.
3. Dry the element by squeezing it in a clean cloth.
4. Air dry the foam-filter element.

Installing the Foam and Paper-Filter Elements

Important: To prevent engine damage, always operate the engine with the complete foam and paper air-cleaner assembly installed.

1. Carefully slide the foam-filter element onto the paper-filter element ([Figure 11](#)).
2. Align the hole in the top plate of the paper-filter element with the hold-down rod of the carburetor ([Figure 11](#)).
3. Secure the filter elements to the carburetor with the wing nut ([Figure 11](#)) that you removed in step 4 of [Removing the Foam and Paper Elements \(page 11\)](#).
4. Align the hole in the air-cleaner cover with the hold-down rod ([Figure 11](#)) and secure the cover to the rod with the wing nut that you removed in step 3 of [Removing the Foam and Paper Elements \(page 11\)](#).

Engine Oil Specification

Oil Type: Detergent oil (API service SJ or higher)

Oil viscosity: Refer to the table below.

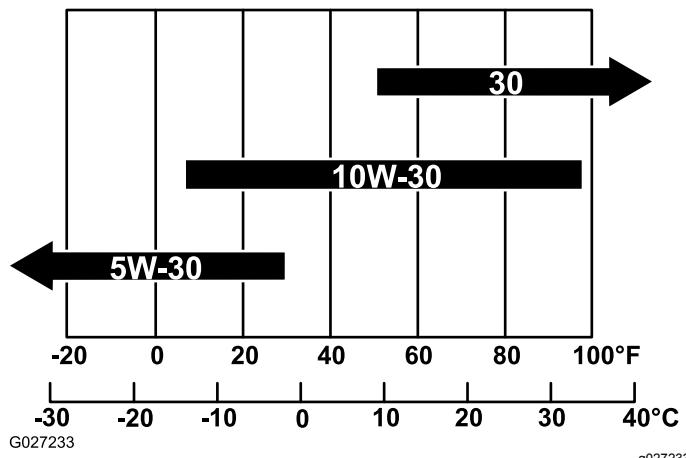


Figure 12

Checking the Engine-Oil Level

Service Interval: Before each use or daily

Important: Do not operate the engine with the oil level below the Low (or Add) mark on the dipstick, or over the Full mark.

1. Move the machine to a level surface.
2. Prepare the machine for maintenance; refer to [Preparing the Machine for Maintenance \(page 10\)](#).
3. Allow the engine to cool.
4. Remove the dipstick from the engine and wipe the dipstick with a clean rag ([Figure 13](#)).

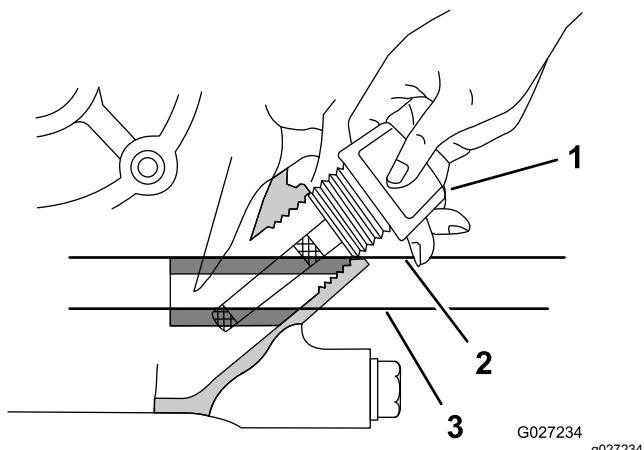


Figure 13

1. Dipstick
2. Maximum oil level
3. Minimum oil level

5. Insert the dipstick from the engine as shown in [Figure 13](#).

Note: Do not thread the dipstick into the filler neck when checking the engine oil level.

6. Remove the dipstick from the filler neck and look at the oil level in the dipstick ([Figure 13](#)).

Note: The engine oil level must cover between the hatch marked areas on the dipstick ([Figure 13](#)).

7. If the oil level is low, wipe off the area around the filler neck and add the specified oil until the oil level is between the hatch marked areas on the dipstick.

Important: Do not overfill the engine with oil.

8. Hand tighten the dipstick into the filler neck ([Figure 13](#)).

Changing the Engine Oil

Service Interval: After the first 20 hours
Every 100 hours

Draining the Engine Oil

Important: Do not operate the engine with the oil level below the Low (or Add) mark on the dipstick, or over the Full mark.

1. Start and run the engine for a few minutes to warm the engine oil.
2. Prepare the machine for maintenance; refer to [Preparing the Machine for Maintenance \(page 10\)](#).
3. At the rear of the machine, place a drain pan under the drain plug.

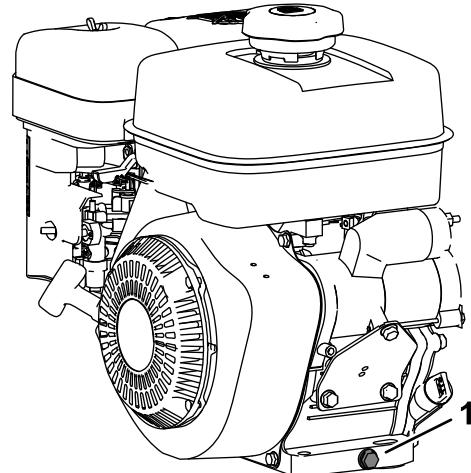


Figure 14

1. Drain plug

4. Remove the drain plug from the engine and allow the oil to drain completely.
5. Push down on the handle to tip the machine and engine backward, allowing all the oil to run into the drain pan.

Important: Do not tip the machine at an angle greater than 25°. Tipping the machine beyond 25° leads to oil leaking into the combustion chamber and/or fuel leaking out of the fuel-tank cap.

6. Install the drain plug and refill the crankcase with the specified oil; refer to [Adding Oil to the Engine \(page 13\)](#).
7. Torque the drain plug to 20 to 23 N·m (15 to 17 ft-lbs).
8. Wipe up any spilled oil and dispose of the used oil properly.

Adding Oil to the Engine

Engine Oil Capacity: 0.6 L (20 fl oz)

Important: Do not operate the engine with the oil level below the Low (or Add) mark on the dipstick, or over the Full mark.

1. Remove the dipstick from the filler neck of the engine and wipe clean the dipstick with a rag ([Figure 15](#)).

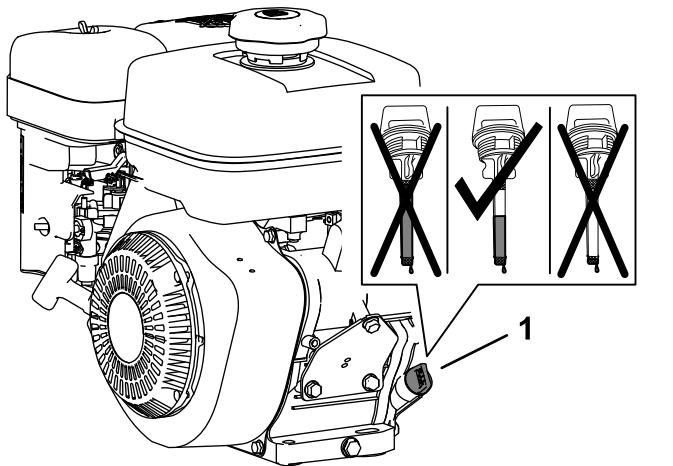


Figure 15

1. Dipstick in filler neck
2. Slowly pour 0.6 L (20 fl oz) of the specified oil into the crank case of the engine through the filler neck ([Figure 15](#)).
3. Insert the dipstick from the engine as shown in [Figure 16](#).

Note: Do not thread the dipstick into the filler neck when checking the engine oil level.

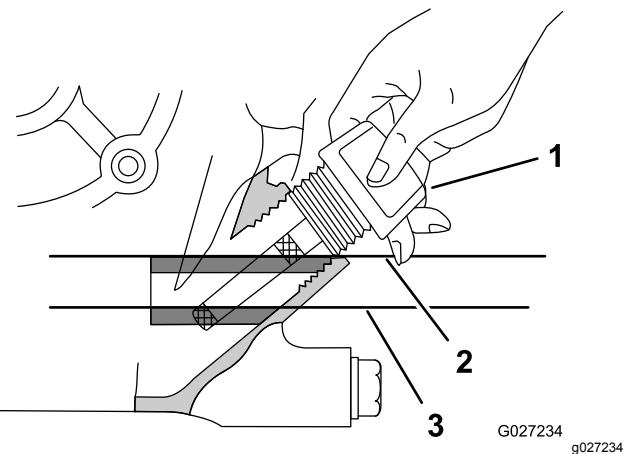


Figure 16

1. Dipstick	3. Minimum oil level
2. Maximum oil level	

4. Remove the dipstick from the filler neck and look at the oil level in the dipstick ([Figure 15](#)).

Note: The engine oil level must cover between the hatch marked areas on the dipstick ([Figure 15](#)).

5. If the oil level is low, add the specified oil into the engine until the oil level is between the hatch marked areas on the dipstick.

Note: Do not overfill the engine with oil.

6. Hand tighten the dipstick into the filler neck ([Figure 15](#)).

Servicing the Spark Plug


Service Interval: Every 100 hours

Spark Plug Specification

Spark Plug Type: NGK BR6HS, Champion RTL86C, or equivalent

Removing the Spark Plug

1. Prepare the machine for maintenance; refer to [Preparing the Machine for Maintenance \(page 10\)](#).
2. Remove the spark plug as shown in [Figure 17](#).

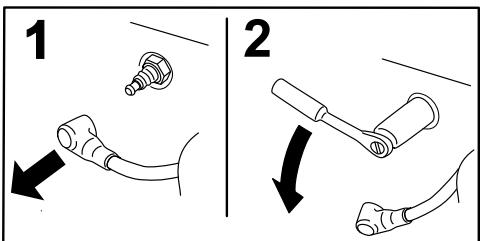

G008791


g008791

Figure 17

Installing the Spark Plug

Tighten the spark plug as follows:

- New spark plug—12 to 15 N·m (8.7 to 10.8 ft-lb)
- In-service spark plug—23 to 27 N·m (16.6 to 19.5 ft-lb)

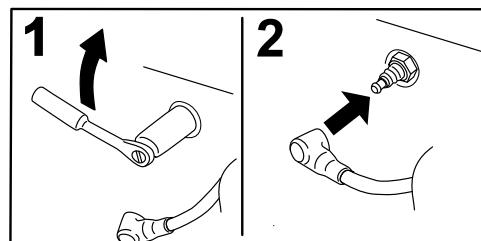

G008795

g008795

Figure 19


Checking the Spark Plug

Air Gap: 0.6 to 0.7 mm (0.02 to 0.03 inch)

Important: Do not clean the spark plug(s). Always replace the spark plug(s) when it has a black coating, worn electrodes, an oily film, or cracks.

If you see light brown or gray on the insulator, the engine is operating properly. A black coating on the insulator usually means the air cleaner is dirty.

Use a gapping tool/feeler gauge to check and adjust the air gap to 0.6 to 0.7 mm (0.02 to 0.03 inch).

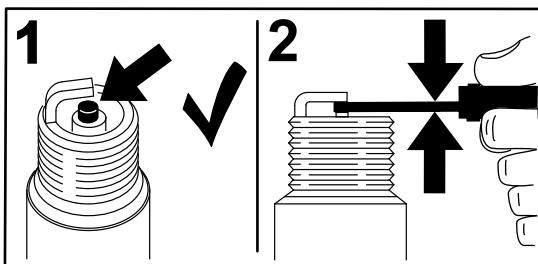

G008794

g008794

Figure 18

California Proposition 65 Warning Information

What is this warning?

You may see a product for sale that has a warning label like the following:



What is Prop 65?

Prop 65 applies to any company operating in California, selling products in California, or manufacturing products that may be sold in or brought into California. It mandates that the Governor of California maintain and publish a list of chemicals known to cause cancer, birth defects, and/or other reproductive harm. The list, which is updated annually, includes hundreds of chemicals found in many everyday items. The purpose of Prop 65 is to inform the public about exposure to these chemicals.

Prop 65 does not ban the sale of products containing these chemicals but instead requires warnings on any product, product packaging, or literature with the product. Moreover, a Prop 65 warning does not mean that a product is in violation of any product safety standards or requirements. In fact, the California government has clarified that a Prop 65 warning “is not the same as a regulatory decision that a product is ‘safe’ or ‘unsafe.’” Many of these chemicals have been used in everyday products for years without documented harm. For more information, go to <https://oag.ca.gov/prop65/faqs-view-all>.

A Prop 65 warning means that a company has either (1) evaluated the exposure and has concluded that it exceeds the “no significant risk level”; or (2) has chosen to provide a warning based on its understanding about the presence of a listed chemical without attempting to evaluate the exposure.

Does this law apply everywhere?

Prop 65 warnings are required under California law only. These warnings are seen throughout California in a wide range of settings, including but not limited to restaurants, grocery stores, hotels, schools, and hospitals, and on a wide variety of products. Additionally, some online and mail order retailers provide Prop 65 warnings on their websites or in catalogs.

How do the California warnings compare to federal limits?

Prop 65 standards are often more stringent than federal and international standards. There are various substances that require a Prop 65 warning at levels that are far lower than federal action limits. For example, the Prop 65 standard for warnings for lead is 0.5 µg/day, which is well below the federal and international standards.

Why don't all similar products carry the warning?

- Products sold in California require Prop 65 labelling while similar products sold elsewhere do not.
- A company involved in a Prop 65 lawsuit reaching a settlement may be required to use Prop 65 warnings for its products, but other companies making similar products may have no such requirement.
- The enforcement of Prop 65 is inconsistent.
- Companies may elect not to provide warnings because they conclude that they are not required to do so under Prop 65; a lack of warnings for a product does not mean that the product is free of listed chemicals at similar levels.

Why does Toro include this warning?

Toro has chosen to provide consumers with as much information as possible so that they can make informed decisions about the products they buy and use. Toro provides warnings in certain cases based on its knowledge of the presence of one or more listed chemicals without evaluating the level of exposure, as not all the listed chemicals provide exposure limit requirements. While the exposure from Toro products may be negligible or well within the “no significant risk” range, out of an abundance of caution, Toro has elected to provide the Prop 65 warnings. Moreover, if Toro does not provide these warnings, it could be sued by the State of California or by private parties seeking to enforce Prop 65 and subject to substantial penalties.



Count on it.