



53 cm Recycler[®]
Walk Power Lawn Mower
Model No. 20779—200000001 and Up

Operator's Manual



Contents


	Page
Introduction	2
Safety	3
General Lawn Mower Safety	3
Sound Pressure	5
Sound Power	5
Vibration Level	5
Symbol Glossary	5
Assembly	7
Unpacking the Lawn Mower	7
Installing the Handle	7
Installing the Starter Rope	8
Installing the Discharge Tunnel Plug	8
Before Starting	9
Filling the Crankcase with Oil	9
Filling the Fuel Tank with Gasoline	9
Operation	10
Controls	10
Starting the Engine	10
Stopping the Engine	11
Self-propelled Drive	11
Adjusting the Cutting Height	11
Using the Grass Bag	12
Operating Tips	14
Maintenance	15
Recommended Maintenance Schedule	15
Checking the Engine Oil Level	16
Changing the Engine Oil	16
Cleaning the Underside of the Lawn Mower Housing	16
Servicing the Air Filter	17
Maintaining the Cutting Blade	18
Adjusting the Self-propelled Drive Cable	19
Lubricating the Wheels	19
Cleaning Under the Belt Cover	20
Replacing the Spark Plug	20
Cleaning the Cooling System	20
Cleaning the Plug and Discharge Tunnel	20
Emptying the Fuel Tank	20
Troubleshooting	21
Storage	22
Preparing the Fuel System	22
Preparing the Engine	22
General	22
Folding the Handle	22
Removing From Storage	23
Accessories	23

Introduction

Thank you for choosing a Toro product. We want you to be completely satisfied with your new purchase.

Read this manual carefully to learn how to operate and maintain your product properly. The information in this manual can help you and others avoid injury and product damage. Although Toro designs and produces safe products, you are responsible for operating the product properly and safely.

Whenever you contact your Authorized Service Dealer or the factory for help with service, genuine Toro parts, or additional information, have the model number and the serial number of your product handy. You will find the model number and serial number decal on the product as illustrated in Figure 1.

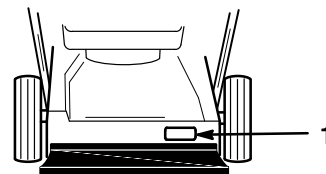

1064

Figure 1

1. Model number and serial number decal

Write the product model number and serial number in the space below:

Model No. _____

Serial No. _____

This manual identifies potential hazards and has special safety messages that help you and others avoid personal injury and even death. **DANGER**, **WARNING**, and **CAUTION** are words used to identify the level of hazard.


DANGER signals an extreme hazard that will cause serious injury or death if you do not follow the recommended precautions.

WARNING signals a hazard that may cause serious injury or death if you do not follow the recommended precautions.

CAUTION signals a hazard that may cause minor or moderate injury if you do not follow the recommended precautions.

This manual uses two other words to highlight information. **Important** calls attention to special mechanical information and **Note** emphasizes general information worthy of special attention.

Safety

To ensure maximum safety, best performance, and to gain knowledge of the product, it is essential that you and any other operator of the lawn mower read and understand the contents of this manual before the motor is ever started. Pay particular attention to the safety alert symbol  which means CAUTION, WARNING, OR DANGER — “personal safety instruction.” Read and understand the instruction because it has to do with safety. Failure to comply with instruction may result in personal injury.

General Lawn Mower Safety

The following instructions have been adapted from the ANSI/OPEI standard B71.1—1998 and ISO standard 5395:1990(E). Information or terminology specific to Toro lawn mowers is enclosed in parenthesis.

This cutting machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

Training

- Read the instructions carefully. Be familiar with the controls and the proper use of the equipment before starting.
- See manufacturer’s instructions for proper operation and installation of accessories. Only use accessories approved by the manufacturer.
- Never allow children or people unfamiliar with these instructions to use the mower. Local regulations may restrict the age of the operator.
- Never mow while people, especially children, or pets are nearby. Stop mower if anyone enters the area.

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the mower and the mowing activity. **Never** assume that children will remain where you last saw them.

- Keep children out of the mowing area and under the watchful care of a responsible adult.
- Be alert and turn mower off if children enter the area.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.

Preparation

- While mowing, always wear substantial footwear and long trousers.
- Do not operate the equipment when barefoot or wearing open sandals.
- Always wear safety goggles or safety glasses with side shields when operating mower.
- Thoroughly inspect the area where the equipment is to be used and remove all stones, sticks, wires, bones, and other foreign objects.
- **Warning: Gasoline is highly flammable.** Take the following precautions:
 - Store fuel in containers specifically designed for this purpose.
 - Refuel outdoors only and do not smoke while refuelling.
 - Add fuel before starting the engine. Never remove the cap of the fuel tank or add gasoline while the engine is running or when the engine is hot.
 - If gasoline is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until gasoline vapors have dissipated.
 - Replace all fuel tank and container caps securely.
 - If the fuel tank has to be drained, do this outdoors.
- Replace faulty mufflers.
- Before using, always visually inspect to see that the blades, blade bolts, and cutter assembly are not worn or damaged. Replace worn or damaged blades and bolts in sets to preserve balance.
- On multibladed machines, take care as rotating one blade can cause other blades to rotate.

Operation

- Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect.
- Mow only in daylight or in good artificial light.
- Always be sure of your footing on slopes.
- Walk; never run.
- Keep a firm hold on the handle.
- Mow across the face of slopes, never up and down.

- Exercise extreme caution when changing direction on slopes.
- Do not mow excessively steep slopes.
- Use extreme caution when reversing or pulling the mower towards you.
- Before and while moving backwards, look behind and down for small children.
- Stop the blade(s) if the mower has to be tilted for transportation when crossing surfaces other than grass and when transporting the mower to and from the area to be mowed.
- Never operate the mower with damaged or missing guards or shields, or without safety devices; for example, deflectors and/or grass catchers in place.
- Do not change the engine governor settings or overspeed the engine.
- Disengage all blade and drive clutches before starting the engine.
- Start the engine or switch on the motor carefully according to instructions and with feet well away from the blade(s).
- Do not tilt when starting the engine or switching on the motor, unless the mower has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator.
- Do not start the engine when standing in front of the discharge chute.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- Never pick up or carry a mower while the engine is running.
- Stop the engine and disconnect the spark plug lead
 - before clearing blockages or unclogging chute;
 - before checking, cleaning, or working on the mower;
 - after striking a foreign object. Inspect the mower for damage and make repairs before restarting and operating the mower;
 - if mower starts to vibrate abnormally. Check immediately for the cause. Vibration is generally a warning of trouble.
- Stop the engine
 - whenever you leave the mower;
 - before refuelling.

- Reduce the throttle setting during engine run-out and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing.
- Stop the blade(s) when crossing gravel drives, walks, or roads.
- Shut the engine (motor) off and wait until the blade comes to complete stop before removing grass catcher.
- Do not operate the mower while under the influence of alcohol or drugs.

Slopes are a major factor related to slip and fall accidents which can result in severe injury. All slopes require extra caution feel uneasy on a slope, do not mow it.

- Watch for holes, ruts, or bumps. Tall grass can hide obstacles.
- **Do not** mow near drop-offs, ditches, or embankments. The operator could lose footing or balance.
- **Do not** mow on wet grass. Reduced footing could cause slipping.

Maintenance and Storage

- Keep all nuts, bolts (especially blade attachment bolts), and screws tight to be sure the equipment is in safe working condition.
- Never store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark.
- Allow the engine to cool before storing in any enclosure.
- To reduce the fire hazard, keep the engine, muffler, battery compartment, and gasoline storage area free of grass, leaves, or excessive grease.
- Replace worn or damaged parts for safety.
- Use extra care when handling gasoline; vapors are explosive.
- Never tamper with safety devices. Check their proper operation regularly.
- Keep the mower free of grass, leaves, or other debris build-up. Clean up oil or fuel spillage.
- Never attempt to make wheel height adjustments while the engine (motor) is running.
- Always disconnect electric mowers (live operated) before cleaning, repairing, or adjusting.
- Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts when necessary.

- Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Do not change the engine governor setting or overspeed the engine.

Sound Pressure

This unit has an equivalent continuous A-weighted sound pressure at the operator ear of 84.2 dB(A), based on measurements of identical machines per ANSI B71.5-1984 procedures.

Sound Power


This unit has a sound power level of 97 LwA, based on measurements of identical machines per Directive 84/538/EEC and amendments.

Vibration Level

This unit has a maximum hand-arm vibration level of 6.61 m/s², based on measurement of identical machines per ISO 5349 procedures.

Symbol Glossary

Safety alert triangle — symbol within triangle indicates a hazard.

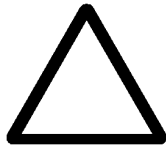

Safety alert symbol




Read operator's manual.




Consult technical manual for proper service procedures.



Stay a safe distance from the machine.

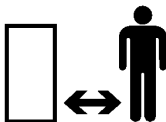


Stay a safe distance from the mower.

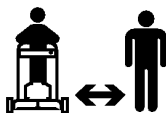

Throw or flying objects — Whole body exposure




Do not open or remove safety shields while engine is running.

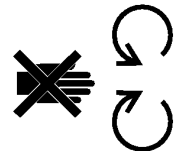


Rotating blade can cut off toes or fingers. Stay clear of mower blade as long as engine is running.



To avoid blade failure when mulching, use blade stiffener when mower is equipped with mulching plug.

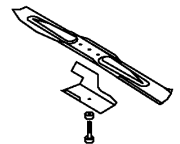

Transmission

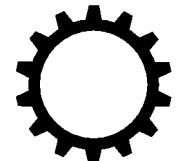


Oil



On/Run



Engage

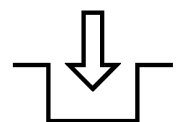


Thrown or flying objects
— Rotary side-mounted
mower. Keep deflector
shield in place.



Stop engine before
leaving operator position.



Hourmeter/elapsed
operating hours

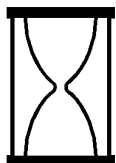

Fast



Slow




Decreasing/Increasing



Grease lubrication point




Engine start

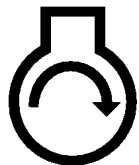


Engine stop




Choke

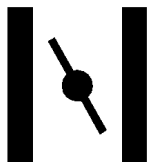

Disengage

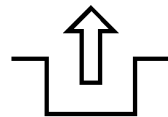

Battery charging
condition

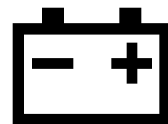

Fuel



Neutral



First gear



Second gear




Third gear



Cutting element — basic
symbol




Cutting element — height
adjustment

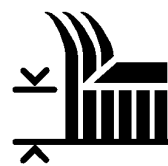


Turn key in ignition
switch.



Primer (start aid)

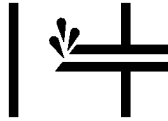


Push primer three times.

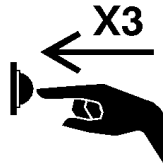

Properly dispose of batteries.



Insert key in ignition switch.

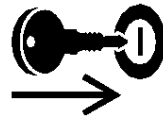

Move control.




Pull rope.



Wheel



Wheel traction

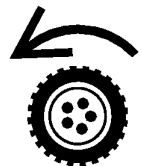


Assembly

Note: Determine the left and right sides of the lawn mower by standing in the operating position.

Unpacking the Lawn Mower

IMPORTANT: Be extremely careful when unpacking and handling the lawn mower and upper handle so that you do not pull, crimp, or damage the cables.

1. Remove the fillers from the box, and allow the upper handle to rest on the top of the lawn mower.
2. Remove the lawn mower from the box.
3. Lay the upper handle on the ground behind the lawn mower with the handle label facing up and the control cables routed between the handle mounting brackets.

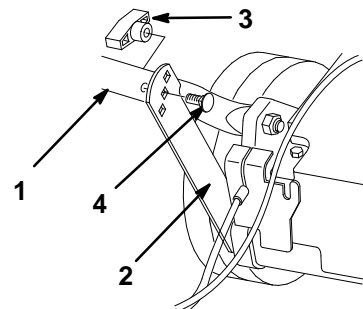

m-4272

Figure 2

Installing the Handle

1. Remove the four handle bolts (two bolts have a flat cap and two have a contoured cap to fit the handle) and knobs in the lower handle (Fig. 2).

3. Knob
4. Flat handle bolt

2. Swing the lower handle back and the support brackets up, aligning the brackets with the holes in the handle (Fig. 2).
3. Secure the handle to the support brackets with the two flat handle bolts and two knobs, using the height adjustment holes on the brackets that best fit your height (Fig. 2).

IMPORTANT: Keep the cables from pinching or stretching.

Note: You can adjust the handle height by installing the handle bolt and knob through a different set of holes.

4. Slide the upper handle section ends over the lower handle so that the sections nest together (Fig. 3).

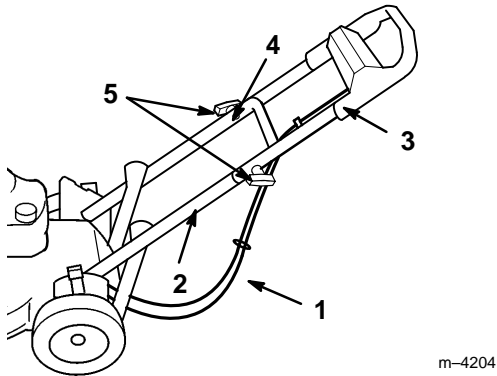


Figure 3

- | | |
|-----------------|---|
| 1. Cables | 4. Contoured handle bolt (only one shown) |
| 2. Lower handle | 5. Knobs |
| 3. Upper handle | |

5. Make sure that the cables are routed below and behind the lower handle as illustrated in Figure 3.
6. Secure the upper handle to the lower handle using two contoured handle bolts and two knobs (Fig. 3).

Installing the Starter Rope

Pull the starter rope through the rope guide on the handle (Fig. 4).

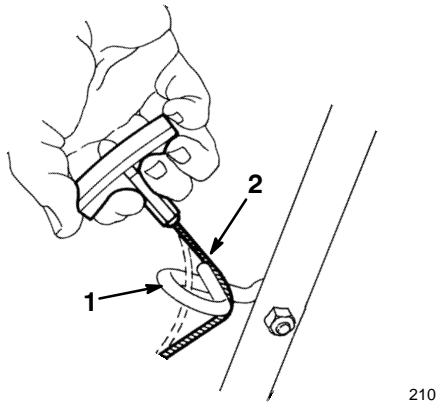


Figure 4

- | | |
|---------------|-----------------|
| 1. Rope guide | 2. Starter rope |
|---------------|-----------------|

Note: To make the rope easier to install, squeeze the control bar on the handle.

Installing the Discharge Tunnel Plug

1. Stop the engine and wait for all moving parts to stop.
2. Open the discharge door by moving it rearward (Fig. 5).

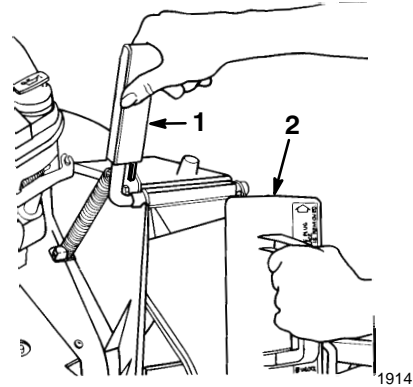


Figure 5

- | | |
|--------------------------|-----------------------------|
| 1. Discharge door handle | 2. Plug (rotated clockwise) |
|--------------------------|-----------------------------|

3. Hold the discharge door handle to prevent the spring-loaded door from closing while you insert the plug.
4. Rotate the plug clockwise slightly while inserting it (Fig. 5).

Make sure that the arrow on the plug decal points upward.

5. Push the plug all the way in until the spring clip on the bottom of the plug clicks into place (Fig. 6).

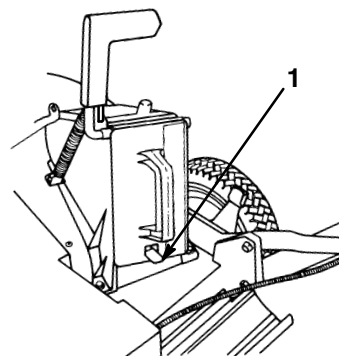


Figure 6

- | |
|----------------|
| 1. Spring clip |
|----------------|

6. Release the discharge door handle to lock the top of the plug.

Before Starting

Filling the Crankcase with Oil

The crankcase can hold 20 ounces (0.59 liters) of oil. Use only high-quality, SAE 30 or 10W30 weight detergent oil that has the American Petroleum Institute (API) “service classification” — SF, SG, SH, or SJ.

Before each use, make sure that the oil level is between the *Add* and the *Full* marks on the dipstick (Fig. 7).

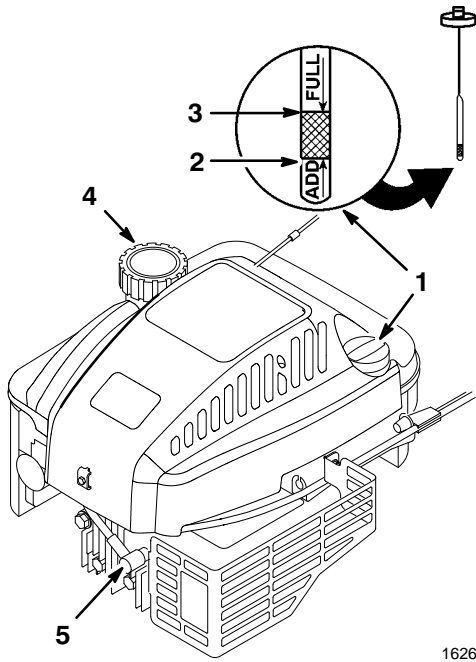


Figure 7

- | | |
|--------------|--------------------|
| 1. Dipstick | 4. Fuel tank cap |
| 2. Add mark | 5. Spark plug wire |
| 3. Full mark | |

To add oil:

1. Move the lawn mower to a level surface.
2. Clean around the dipstick (Fig. 7).
3. Remove the dipstick by rotating the cap counterclockwise 1/4 turn and pulling it out.
4. Wipe the dipstick clean with a clean cloth.
5. Fully insert the dipstick into the filler neck, then remove it.

Note: To ensure an accurate oil level reading, you must fully install the dipstick.

6. Read the oil level on the dipstick (Fig. 7).

7. If the oil level reading is below the *Add* mark on the dipstick, **slowly** pour only enough oil into the filler hole to raise the oil level to the *Full* mark on the dipstick.

IMPORTANT: Do not overfill the crankcase with oil and run the engine; engine damage will result. Drain the excess oil until the oil level on the dipstick reads *Full*.

8. Insert the dipstick into the filler neck and rotate the cap clockwise 1/4 turn.

Filling the Fuel Tank with Gasoline

For best results, use clean, fresh, lead-free gasoline, including *oxygenated* or *reformulated* gasoline, with an octane rating of 87 or higher. To ensure freshness, purchase only the quantity of gasoline that you expect to use in 30 days. Using unleaded gasoline results in fewer combustion deposits and longer spark plug life. Leaded gasoline may be used if unleaded gasoline is unavailable.

IMPORTANT: Do not add oil to the gasoline.

IMPORTANT: Do not use methanol, gasoline containing methanol, gasohol containing more than 10% ethanol, premium gasoline, or white gas. Using these fuels can damage the engine's fuel system.

IMPORTANT: Do not use gasoline that has been stored since the last mowing season or longer.

DANGER

POTENTIAL HAZARD

- In certain conditions gasoline is extremely flammable and highly explosive.

WHAT CAN HAPPEN

- A fire or explosion from gasoline can burn you, others, and cause property damage.

HOW TO AVOID THE HAZARD

- Use a funnel and fill the fuel tank outdoors, in an open area, when the engine is cold. Wipe up any gasoline that spills.
- Do not fill the fuel tank completely full. Add gasoline to the fuel tank until the level is 1/4 to 1/2 in. (6 mm to 13 mm) below the bottom of the filler neck. This empty space in the tank allows gasoline to expand.
- Never smoke when handling gasoline, and stay away from an open flame or where gasoline fumes may be ignited by a spark.
- Store gasoline in an approved container and keep it out of the reach of children.
- Never buy more than a 30-day supply of gasoline.

DANGER

POTENTIAL HAZARD

- When fueling, under certain circumstances, a static charge can develop, igniting the gasoline.

WHAT CAN HAPPEN

- A fire or explosion from gasoline can burn you and others and cause property damage.

HOW TO AVOID THE HAZARD

- Always place gasoline containers on the ground away from your vehicle before filling.
- Do not fill gasoline containers inside a vehicle or on a truck or trailer bed because interior carpets or plastic truck bed liners may insulate the container and slow the loss of any static charge.
- When practical, remove gas-powered equipment from the truck or trailer and refuel the equipment with its wheels on the ground.
- If this is not possible, then refuel such equipment on a truck or trailer from a portable container, rather than from a gasoline dispenser nozzle.
- If a gasoline dispenser nozzle must be used, keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete.

Use a fuel stabilizer/conditioner regularly during operation and storage. A stabilizer/conditioner cleans the engine during operation and prevents gum-like varnish deposits from forming in the engine during periods of storage.

IMPORTANT: Do not use fuel additives other than a fuel stabilizer/conditioner. Do not use fuel stabilizers with an alcohol base such as ethanol, methanol, or isopropanol.

1. Remove the wire from the spark plug (Fig. 7).
2. Clean around the fuel tank cap (Fig. 7).
3. Remove the cap from the tank (Fig. 7).
4. Fill the fuel tank with unleaded gasoline to within 1/4 to 1/2 in. (6 to 13 mm) from the top of the tank. **Do not fill into the filler neck.**
5. Install the fuel tank cap and wipe up any spilled gasoline.

Operation

Each time before you mow, make sure that the self-propelled drive and the control bar operates properly. When you release the control bar, the engine and the self-propelled drive should stop. If they do not, contact an Authorized Service Dealer.

Controls

The starter handle and the blade control bail are on the upper handle as shown in Figure 8.

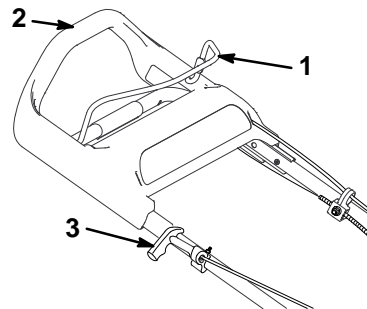


Figure 8

1. Blade control bail
2. Upper handle
3. Starter handle

Starting the Engine

1. Insert the spark plug wire onto the spark plug.
2. Push the primer three times, waiting two seconds between each push (Fig. 9).

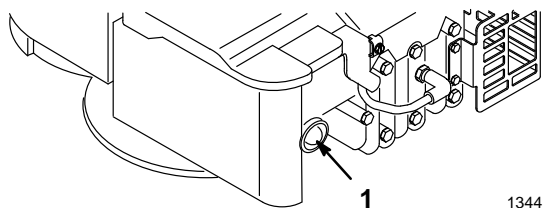


Figure 9

1. Primer

Note: If the temperature is 55°F (13°C) or below, push the primer five times, waiting two seconds between each push.

Note: Do not use the primer to start a warm engine after a brief shutdown. However, cool weather may require you to prime the engine again.

3. Hold the blade control bail against the upper handle (Fig. 10).

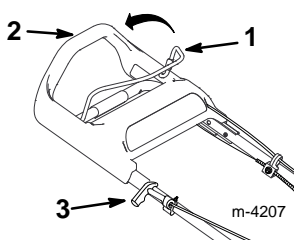


Figure 10

1. Blade control bail
2. Upper handle
3. Starter handle

4. Pull the starter handle lightly until you feel resistance, then pull it sharply (Fig. 10). Allow the rope to return to the handle slowly.

Note: Allow the engine to warm up for at least one minute; longer in cooler temperatures.

Note: If the engine fails to start after three attempts, repeat steps 2 through 4.

Stopping the Engine

Release the blade control bail. Both the engine and the blade should stop. If they do not stop properly, contact your Authorized Service Dealer.

Self-propelled Drive

To operate the self-propelled drive, simply walk forward with your hands on the upper handle. As you move forward, the upper handle will slide toward the lawn

mower, activating the self-propelled drive. The faster you walk, the farther the handle will slide and the faster the lawn mower will propel (Fig. 11).

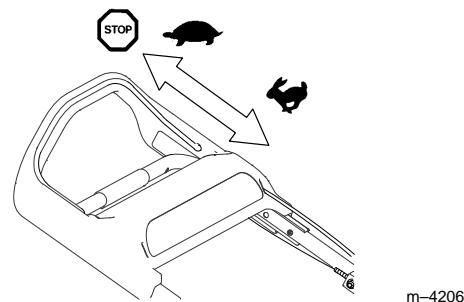


Figure 11

Note: The lawn mower propels at the maximum speed when you push in the upper handle as far forward as possible.

To slow down the drive, simply slow your walking speed; to stop the drive, stop walking (Fig. 11).

Note: If, when backing up after self-propelling, the lawn mower does not roll backward freely, nudge the lawn mower forward about an inch without engaging the self-propelled drive, then pull the lawn mower backward.

Adjusting the Cutting Height

The *SmartWheel* has two cutting scales: *SPARSE/NORMAL* and *LUSH* — to ensure the best height-of-cut setting in any mowing condition (Fig. 12). Use the *SPARSE/NORMAL* scale during the warm summer season for the majority of your mowing. The *LUSH* scale is for thick, moist, succulent grass that grows most often in the spring.

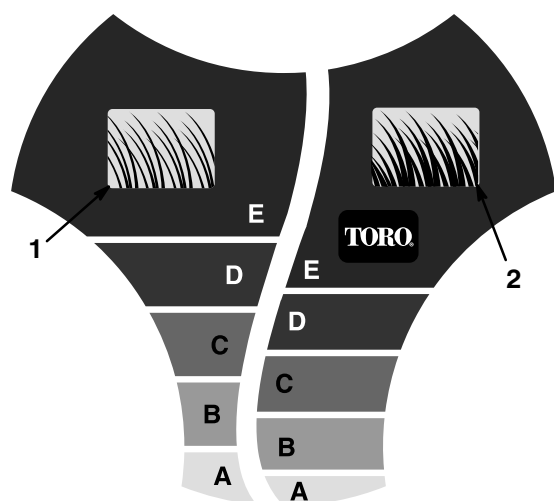


Figure 12

1. Sparse/normal grass cutting scale
2. Lush grass cutting scale

We recommend the following:

- Cut the grass at the *C*, *D*, or *E* settings or keep the grass between 2 to 3 in. (5.1 to 7.6 cm) high.
- Do not cut below the *C* setting unless the grass is sparse or it is late fall when grass growth begins to slow down. When you cut long grass, use a higher height-of-cut setting and walk slower; then cut the grass again at a normal setting. Mowing the grass when it is too long can plug the lawn mower and cause the engine to stall.

Note: The *SmartWheel* calculates the proper setting to ensure that you cut no more than 1/3 of the grass blade.



DANGER

POTENTIAL HAZARD

- Adjusting height-of-cut levers could bring hands into contact with moving blade.

WHAT CAN HAPPEN

- Contact with moving blade could cause serious personal injury.

HOW TO AVOID THE HAZARD

- Do not adjust height-of-cut settings when engine is running and blade is rotating.
- Do not put fingers under housing to lift lawn mower when adjusting height-of-cut levers.

1. Before starting the engine, push the lawn mower into the grass. Stop moving the lawn mower when the letters on the *SmartWheel*™ design on the rear left wheel are upright (Fig. 12).
2. Use the *SmartWheel* design (Fig. 12) to compare the tips of the grass blades to the letters on the wheel. The letter on the *SmartWheel* that matches the tips of the grass blades is the proper cutting height.
3. Squeeze the lawn mower's height-of-cut lever toward the wheel and move it to the corresponding letter on the lawn mower housing (Fig. 13).

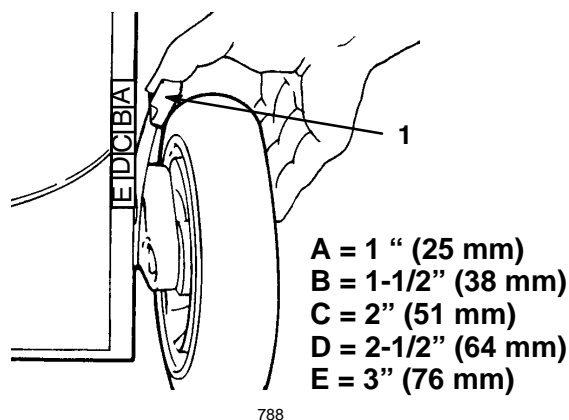


Figure 13

1. Height-of-cut lever

Note: For easier adjustment, lift up the housing so that the wheel is off the ground. **Do not put your fingers under the housing when you lift the lawn mower.**

4. Make sure that the pin on the height-of-cut lever engages the slot in the housing.
5. Adjust all the wheels to the same letter setting.

Note: You can adjust the front wheels to 1/2 in. (1.3 cm). Move the height-of-cut lever past *A* and release the pin into the slot in the housing.

Using the Grass Bag

Occasionally, you may want to use the grass bag for bagging long grass, lush grass, or leaves.

Installing the Grass Bag

1. Stop the engine and wait for all moving parts to stop.

2. Make sure that the discharge door handle is fully forward and the pin is contacting the catch (Fig. 14).

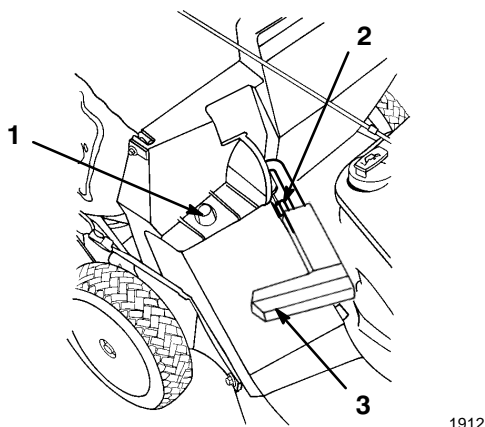


Figure 14

1. Bag frame on retaining post
2. Pin contacting catch
3. Handle fully forward and discharge door closed

3. Slide the hole in the bag frame onto the retaining post on the housing (Fig. 14).
4. Set the rear of the grass bag frame onto the lower handle.
5. Pull the discharge door handle forward and move the handle rearward until the pin locks in the bag notch (Fig. 15).

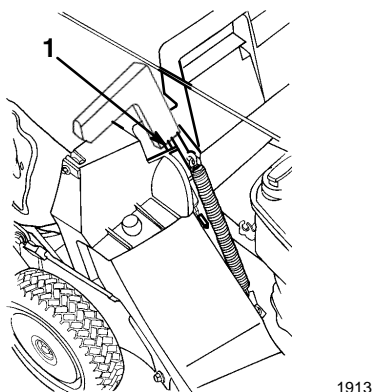


Figure 15

1. Pin locked in bag notch

The discharge door in the lawn mower housing is now open.

Mowing with the Grass Bag



DANGER



POTENTIAL HAZARD

- A worn grass bag could allow small stones and other similar debris to be thrown in operator's or bystander's direction.

WHAT CAN HAPPEN

- Thrown objects can cause serious personal injury or death to the operator or bystanders.

HOW TO AVOID THE HAZARD

- Check the grass bag frequently. If it is damaged, install a new Toro replacement bag.

Cut the grass until the bag is full.

IMPORTANT: Do not overfill the bag.

Removing the Grass Bag

1. Stop the engine and wait for all moving parts to stop.
2. Raise the discharge door handle and move it forward until the locking pin contacts the catch (Fig. 14).
3. Grasp the handle at the front and the rear of the bag and lift the bag off the lawn mower.
4. Gradually tip the bag forward to empty the clippings.
5. To install the bag, refer to steps 3 through 5 of *Installing the Grass Bag* earlier in this section.



DANGER



POTENTIAL HAZARD

- Thrown objects may result if the discharge door does not close completely.

WHAT CAN HAPPEN

- Thrown objects can cause serious personal injury or death.

HOW TO AVOID THE HAZARD

- If the discharge door cannot be closed because grass clippings clog the discharge area, stop the engine and gently move the discharge door handle back and forth until the door can be closed completely. If door still cannot be closed, remove the obstruction with a stick, not your hand.



DANGER

POTENTIAL HAZARD

- Grass clippings and other objects can be thrown from an open discharge tunnel.

WHAT CAN HAPPEN

- Objects thrown with enough force could cause serious personal injury or death to operator or bystander.

HOW TO AVOID THE HAZARD

- Never open door on discharge tunnel when engine is running.

Operating Tips

- Review the safety instructions and read this manual carefully before operating the lawn mower.
- Clear the area of sticks, stones, wire, branches, and other debris that the lawn mower could pick up or the blade could hit and throw objects.
- Keep everyone, especially children and pets, away from the area of operation.
- Avoid striking trees, walls, curbs, or other solid objects. Never deliberately mow over any object.
- If the lawn mower strikes an object or starts to vibrate, immediately stop the engine, disconnect the spark plug wire, and examine the lawn mower for damage.
- Maintain a **sharp blade** throughout the cutting season. Periodically file down nicks on blade.
- Replace the blade when necessary with an original Toro replacement blade.
- Mow only dry grass or leaves. Wet grass and leaves tend to clump on the yard and may cause the lawn mower to plug or the engine to stall.



WARNING

POTENTIAL HAZARD

- Wet grass or leaves can cause you to slip and contact the blade.

WHAT CAN HAPPEN

- Blade contact can seriously injure you.

HOW TO AVOID THE HAZARD

- Mow only in dry conditions.

- Clean clippings or leaves from the underside of the lawn mower deck after each mowing. See *Cleaning the Underside of the Lawn Mower Housing* on page 16.

- Keep the engine in good running condition.
- Clean the air filter frequently. Mulching stirs up more clippings and dust which clogs the air filter and reduces engine performance.

Cutting Grass

- Grass grows at different rates at different times of the year. In the summer heat, it is best to cut grass at the *C*, *D*, or *E* height-of-cut settings. Cut only about 1/3 of the grass blade at a time. Cutting below the *C* setting is not recommended unless grass is sparse or it is late fall when grass growth begins to slow down.
- When cutting grass over six inches tall, first mow using the highest height-of-cut setting and walking slower; then mow again at a lower setting for best lawn appearance. If grass is too long and leaves clumps on top of the lawn, the lawn mower may plug and cause engine to stall.
- Alternate the mowing direction. This helps disperse the clippings over the lawn for even fertilization.

If the finished cut lawn appearance is unsatisfactory, try one or more of the following:

- Sharpen the blade.
- Walk at a slower pace while mowing.
- Raise the height-of-cut setting on your lawn mower.
- Cut the grass more frequently.
- Overlap the cutting swaths instead of cutting a full swath with each pass.
- Mow across the marginal areas a second time.
- Set the height-of-cut on the front wheels one notch lower than the rear wheels. For example, set the front wheels at the *C* setting and the rear wheels at the *D* setting.

Cutting Leaves

- After cutting the lawn, make sure that half of the lawn shows through the cut leaf cover. You may need to make one or more passes over the leaves.
- For light leaf coverage, set all the wheels at the same height-of-cut setting.
- If there are more than 5 in. (12.7) cm of leaves on the lawn, set the front wheels one or two notches higher than the rear wheels. This makes it easier to feed the leaves under the lawn mower deck.
- Slow down your mowing speed if the lawn mower does not cut the leaves finely enough.

- If you cut up a lot of oak leaves, you can add lime to your grass in the spring to reduce the acidity of the oak leaves.

Maintenance

Recommended Maintenance Schedule

Service Item	Service Operation	Each Use	5 Hours	25 Hours	50 Hours	100 Hours
Engine Oil—Check	Check the engine oil before each use.	X				
Engine Oil—Change	Drain and refill the engine crankcase with fresh oil after the first five hours of operation. Thereafter, change every 50 hours (25 hours in dusty conditions or in high temperatures) or yearly.				X	
Housing	Remove built-up grass clippings and dirt.	X				
Fasteners	Check the blade and the engine mounting fasteners. Tighten loose fasteners.		X			
Air Filter—Cartridge	Clean or replace the cartridge every 25 hours or each mowing season. Replace it more frequently in dusty or dirty conditions.			X		
Blade	Sharpen or replace the blade; maintain it more frequently if the edge dulls quickly in rough or sandy conditions.				X	
Blade Brake	Check the stopping time every 50 hours or before each mowing season. The blade must stop within three seconds of releasing the bail; if it does not, see your Authorized Service Dealer for repair.				X	
Self-propelled Drive	Adjust the cable and grease the rear-height adjustor brackets.			X		
Fuel System	Check for leaks and/or a deteriorating fuel hose. Replace parts if necessary.				X	
Belt Cover	Remove grass clippings and debris from under the belt cover.				X	
Spark Plug	Inspect and clean. Replace the spark plug if necessary.					X
Cooling System	Clean debris from the engine air cooling fins and the starter. Clean more frequently in dirty conditions.					X
Fuel Tank	Empty the fuel tank before repairs as directed or before storage.					



CAUTION



POTENTIAL HAZARD

- If you leave the wire on the spark plug, someone could start the engine.

WHAT CAN HAPPEN

- Someone accidentally starting the engine could seriously injure you or other bystanders.

HOW TO AVOID THE HAZARD

- Remove the wire from the spark plug before you do any maintenance. Push wire aside so it does not accidentally contact the spark plug.

Checking the Engine Oil Level

Before you use the lawn mower, make sure that the oil level between the *Add* and the *Full* marks as shown on the dipstick (Fig. 7). If the oil level is below the *Add* mark, add oil. Refer to *Filling the Crankcase Oil* on page 9.

Changing the Engine Oil

Change the oil after the first five operating hours and then after every 50 hours or every season. Run the engine just before changing the oil to warm the oil. Warm oil flows better and carries more contaminants.

Note: Change the oil after every 25 hours when operating under heavy load or in high temperatures.

1. If the grass bag is on the lawn mower, close the door in the lawn mower housing and remove the bag.
2. Drain the gasoline from the fuel tank; refer to steps 1 through 4 of *Emptying the Fuel Tank* on page 20.
3. Remove the wire from the spark plug (Fig. 7).
4. Remove the dipstick from oil fill tube and place a drain pan next to left side of the lawn mower.
5. Tip the lawn mower onto its left side, allowing the oil to drain into the drain pan (Fig. 16).

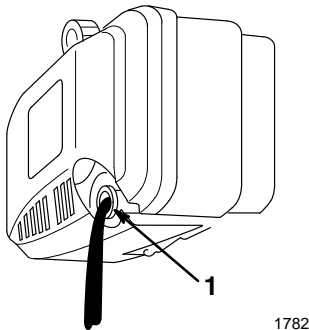


Figure 16

1. Oil fill tube

6. Recycle the used oil according to local codes.

7. Turn the lawn mower upright.
8. Fill the crankcase with fresh oil to the *Full* mark on the dipstick. Refer to *Filling the Crankcase with Oil* on page 9.
9. Install the dipstick.
10. Wipe up any spilled oil.
11. Install the wire onto the spark plug.

Cleaning the Underside of the Lawn Mower Housing

Keep the underside of the lawn mower housing clean. Be especially careful to keep the kickers free of debris (Fig. 17).


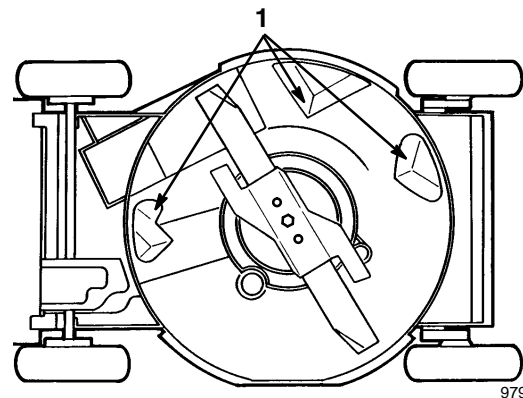


Figure 17

1. Kicker plate

Washing Method

1. Move the mower onto a flat surface near a garden hose.
2. Attach a quick disconnect coupling (sold separately) to the end of the garden hose. Attach the coupling to the lawn mower washout fitting and turn the water on high (Fig. 18).

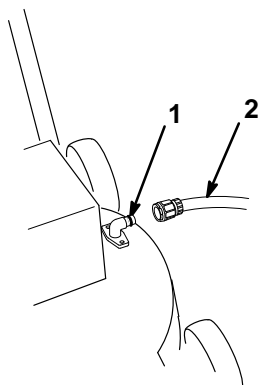

M-3044

Figure 18

1. Washout fitting 2. Hose

3. Start the engine.
4. Let the lawn mower run for two minutes.
5. Stop the engine and wait for all moving parts to stop.
6. Turn the water off and remove the coupling from the washout fitting.
7. Start the lawn mower and let it run for one minute to dry out the lawn mower and its components.

If the underside of the lawn mower deck has excessive grass buildup, do the following steps:

1. Connect the hose to the washout fitting.
2. Turn the water on high.
3. Start the lawn mower and run it for two minutes.
4. Stop the engine and wait for all moving parts to stop.
5. Turn off the water.
6. Let the lawn mower soak for 30 minutes.
7. Turn the water on high again.
8. Run the lawn mower for another two minutes.
9. Stop the engine and wait for all moving parts to stop.

! WARNING

POTENTIAL HAZARD

- A broken or missing washout fitting could expose you and others to thrown objects or blade contact.

WHAT CAN HAPPEN

- Contact with thrown debris or blade contact will cause injury or death.

HOW TO AVOID THE HAZARD

- Replace a broken or missing washout fitting immediately before using the lawn mower again.
- Plug any hole(s) in the lawn mower with bolts and locknuts.
- Never put your hands or feet under the lawn mower or through openings in the lawn mower.

Scraping Method

If washing does not remove all the debris from under the deck, tip the lawn mower and scrape it clean.

1. Remove the wire from the spark plug (Fig. 7).
2. Drain the gasoline from the fuel tank. Refer to steps 1 through 4 of *Emptying the Fuel Tank* on page 20.
3. If the grass bag is on the lawn mower, close the door in the lawn mower housing and remove the grass bag.
4. Tip the lawn mower onto its left side (Fig. 17).
5. Remove the dirt and grass clippings with a hardwood scraper. Avoid burrs and sharp edges.

IMPORTANT: Move the blade as little as possible to avoid future starting problems.

6. Turn the lawn mower upright.
7. Fill the fuel tank.
8. Install the wire on the spark plug.

Servicing the Air Filter

Normally, replace the air filter after every 25 operating hours. Replace the air filter more frequently when you operate the lawn mower in dusty or dirty conditions. See your Authorized Service Dealer for replacement parts.

1. Stop the engine and wait for all moving parts to stop.
2. Remove the wire from the spark plug (Fig. 7).
3. Loosen the screw that secures the air filter cover to the engine (Fig. 19). Tilt the air cleaner cover down and clean the cover thoroughly.

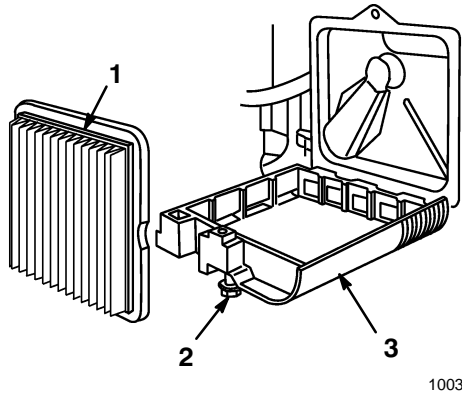


Figure 19

- | | |
|---------------|----------|
| 1. Air filter | 3. Cover |
| 2. Screw | |

4. Remove and discard the paper air cleaner filter (Fig. 19).
5. Insert a new paper air cleaner filter.
6. Install the air cleaner cover and secure it with a screw.

IMPORTANT: Do not operate the engine without the air filter element; extreme engine wear and damage can occur.

Maintaining the Cutting Blade

Always mow with a sharp blade. A sharp blade cuts cleanly and without tearing or shredding the grass blades like a dull blade.

1. Drain the gasoline from the fuel tank; refer to steps 1 through 4 of *Emptying the Fuel Tank* on page 20.
2. Remove the wire from the spark plug (Fig. 7).
3. If a grass bag is on the lawn mower, close the door in the lawn mower housing and remove the bag.
4. Tip the lawn mower onto its left side (Fig. 20).

IMPORTANT: Move the blade as little as possible to avoid future starting problems.

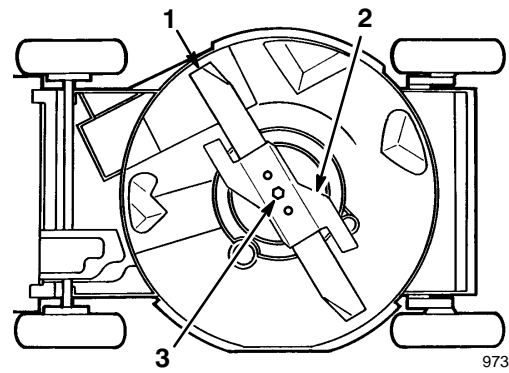


Figure 20

- | | |
|----------------|---------------|
| 1. Blade | 3. Blade bolt |
| 2. Accelerator | |

Inspecting the Blade

Carefully examine the blade for sharpness and wear, especially where the flat and the curved parts meet (Fig. 21A). Because sand and abrasive material can wear away the metal that connects the flat and curved parts of the blade, check the blade before using the lawn mower. If you notice a slot or wear (Figs. 21B and 21C), replace the blade; refer to *Removing the Blade* on page 19.

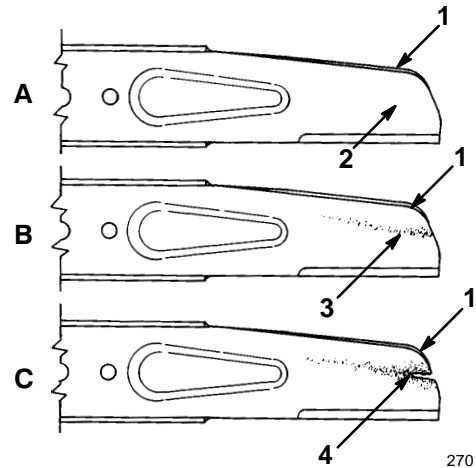


Figure 21

- | | |
|-----------------------|----------------|
| 1. Sail | 3. Wear |
| 2. Flat part of blade | 4. Slot formed |

Note: For the best performance, install a new blade before the cutting season begins. During the year, file down any small nicks to maintain the cutting edge.

Removing the Blade

Grasp the end of the blade using a rag or thickly padded glove. Remove the blade bolt, the lock washer, the accelerator, and the blade (Fig. 20).



DANGER

POTENTIAL HAZARD

- A worn or damaged blade could break and a piece of blade could be thrown into operator's or bystander's area.

WHAT CAN HAPPEN


- A thrown piece of blade could cause serious personal injury or death to operator or bystanders.

HOW TO AVOID THE HAZARD

- Inspect blade periodically for wear or damage.
- Replace a worn or damaged blade.

Sharpening the Blade

File the top side of the blade to maintain its original cutting angle (Fig. 22). The blade will remain balanced if you remove the same amount of material from both cutting edges.

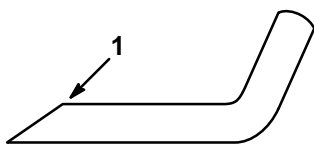

153

Figure 22

1. Sharpen at this angle only

IMPORTANT: Check the balance of the blade by putting it on a blade balancer. You can buy an inexpensive balancer at a hardware store. A balanced blade is level horizontally, while an unbalanced blade drops toward the heavy side. If the blade is not balanced, file more metal off of the cutting edge on the heavy end of the blade.

Installing the Blade

1. Install a sharp, balanced Toro blade, an accelerator, a lock washer and a blade bolt. The blade's sail must point toward the top of the lawn mower housing for proper installation. Torque the blade bolt to 50 ft-lb (68 N·m).
2. Return the lawn mower to its upright position.
3. Install the wire onto the spark plug.

Adjusting the Self-propelled Drive Cable

If the top speed begins to slow on the lawn mower, adjust the self-propelled drive cable.

1. With the engine turned off, remove the two bolts that secure the belt cover (Fig. 26).
2. Remove the cover.
3. Loosen the cable support nut (Fig. 23).

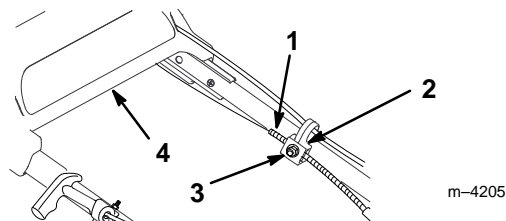


Figure 23

- | | |
|------------------|-----------------|
| 1. Cable jacket | 3. Nut |
| 2. Cable support | 4. Upper handle |

4. Push the drive bracket down until it contacts the lawn mower, then hold it in place (Fig. 24).

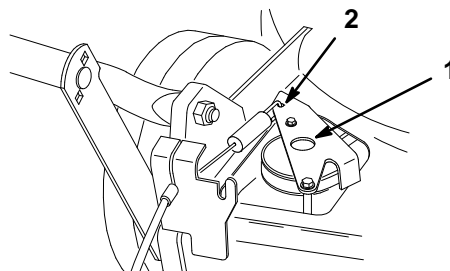


Figure 24

- | | |
|------------------|--------------|
| 1. Drive bracket | 2. Push here |
|------------------|--------------|

5. With the upper handle pulled and held back as far as possible and while holding the drive bracket down, pull the cable jacket down (toward the lawn mower) to remove all the slack in the cable (Fig. 23).
6. Tighten the nut on the cable support (Fig. 23).
7. Release the drive bracket.
8. Install the belt cover.

Lubricating the Wheels

After every 25 operating hours or at the end of the season, lubricate the front and the rear wheels.

1. Apply two or three drops of light oil on the inside of the front wheels and the outside of all the wheel bolts.

2. Spin the wheels to distribute the oil into the bushings.
3. Wipe up any excess oil.
4. Move the rear wheel height-of-cut levers to the *C* setting.
5. Wipe the grease fittings with a clean rag (Fig. 25).
6. Install a grease gun onto each fitting and gently apply two or three pumps of #2 Multi-Purpose Lithium Base Grease.

IMPORTANT: Applying grease using excess pressure may damage the seals.

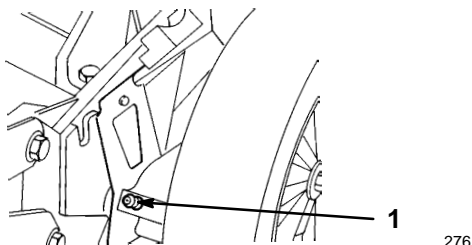


Figure 25

1. Grease fitting

Cleaning Under the Belt Cover

Keep the area under the belt cover free of debris.

1. Stop the engine and wait for all moving parts to stop.
2. Remove the bolts that secure the belt cover to the lawn mower housing (Fig. 26).

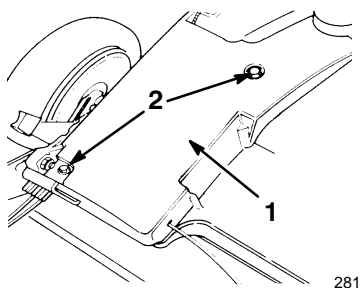


Figure 26

1. Belt cover
2. Bolts

3. Lift off the cover and brush out all the debris from the belt area.
4. Install the belt cover.

Replacing the Spark Plug

Check the spark plug after every 25 operating hours. Use a *Champion RJ19LM* spark plug or equivalent.

1. Stop the engine and wait for all moving parts to stop.
 2. Remove the wire from the spark plug (Fig. 7).
 3. Clean around the spark plug.
 4. Remove the spark plug from the cylinder head.
- IMPORTANT:** Replace a cracked, fouled, or dirty spark plug. Do not clean the electrodes because grit entering the cylinder can cause engine damage.
5. Set the gap on the new plug to 0.030 in. (0.76 mm) (Fig. 27).

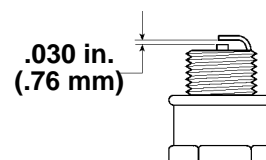


Figure 27

1. 0.030 in. (.76 mm)

6. Install the spark plug and the gasket seal.
7. Torque the spark plug to 20 N·m (15 ft-lb).
8. Install the wire to the spark plug.

Cleaning the Cooling System

After every 100 operating hours or every season, clean the dirt and the chaff from the cylinder, the cylinder head fins, and around the carburetor and the linkage. Remove debris from the air intake slots on the recoil housing. This will ensure proper cooling and the best engine performance.

Cleaning the Plug and Discharge Tunnel

To ensure the best performance, clean the discharge tunnel plug after each use. When the grass is thick and lush, clippings may collect on and around the plug, making plug removal difficult.

Always be sure that discharge tunnel door locks closed when you release the handle. If debris prevents the discharge door from locking closed, clean the inside of the discharge tunnel and the door thoroughly.

Emptying the Fuel Tank

1. Stop the engine and wait for it to cool.
 2. Remove the wire from the spark plug (Fig. 7).
- Note:** Drain the gasoline from a cold engine only.
3. Remove the cap from the fuel tank (Fig. 7).

4. Use a pump-type syphon to drain the fuel into a clean approved gasoline container.
5. Install the wire onto the spark plug.
6. Run the engine until it stops.
7. Start the engine again to make sure that all the gasoline is out of the carburetor.

Troubleshooting

Your lawn mower was designed and built for trouble-free operation. Check the following components and items carefully. If a problem continues, see your Authorized Service Dealer.

Problem	Corrective Action
Engine will not start	<ol style="list-style-type: none"> 1. Fill the fuel tank with fresh gasoline 2. Move the throttle lever to the <i>Fast</i> position 3. Press the primer three times 4. Spark plug <ul style="list-style-type: none"> • Install the spark plug wire • Clean the spark plug, check the spark plug gap, and replace the spark plug if it is damaged
Engine starts hard or loses power	<ol style="list-style-type: none"> 1. Drain and fill the fuel tank with fresh gasoline 2. Replace the air filter element 3. Clean the underside of the lawn mower deck 4. Clean the spark plug, check the spark plug gap, and replace the spark plug if it is damaged 5. Check the engine oil
Engine runs rough	<ol style="list-style-type: none"> 1. Install the spark plug wire 2. Clean the spark plug, check the spark plug gap, and replace the spark plug if it is damaged 3. Move the throttle lever from the <i>Slow</i> to the <i>Fast</i> position 4. Replace the air filter element
Mower or engine vibrates excessively	<ol style="list-style-type: none"> 1. Balance the blade. If the blade is bent, replace it. 2. Tighten the blade mounting bolt 3. Clean the underside of the lawn mower deck 4. Tighten the engine mounting bolts
Uneven cutting pattern	<ol style="list-style-type: none"> 1. Place all four wheels at the same height 2. Sharpen and balance the blade 3. Change the mowing pattern 4. Clean the underside of the lawn mower deck



Problem	Corrective Action
Discharge chute plugs	<ol style="list-style-type: none"> 1. Move throttle lever from the <i>Slow</i> to the <i>Fast</i> position 2. Raise the cutting height 3. Slow down 4. Allow the grass to dry before mowing 5. Clean the underside of the lawn mower deck
Mower will not self-propel	<ol style="list-style-type: none"> 1. Adjust the self-propelled drive cable 2. Clean the debris from under the belt cover.

Storage

To prepare the lawn mower for off-season storage, perform the recommended maintenance procedures. Refer to *Maintenance* on page 15.

Store the lawn mower in a cool, clean, dry place. Cover the lawn mower to keep it clean and protected.

Preparing the Fuel System


WARNING


POTENTIAL HAZARD

- Gasoline can vaporize if stored over long periods of time.

WHAT CAN HAPPEN

- Vaporized fuel can explode if it comes into contact with open flame.

HOW TO AVOID THE HAZARD

- Do not store gasoline (fuel) over long periods of time.
- Do not store lawn mower with fuel in the tank in an enclosure with an open flame. (Example: a furnace or water heater pilot light.)
- Allow the engine to cool before storing in any enclosure.

Empty the fuel tank when mowing the last time before storing the lawn mower.

1. Run the lawn mower until the engine stops from running out of fuel.
2. Prime the engine and start it again.
3. Allow the engine to run until it stops. When you can no longer start the engine, it is sufficiently dry.

Preparing the Engine

1. While the engine is still warm, drain the oil from the crankcase. Refer to *Changing the Engine Oil* on page 16.
2. Remove the spark plug (Fig. 7).
3. Using an oil can, add about one tablespoon of oil to the crankcase through the spark plug hole.
4. Slowly rotate the engine several times, using the starter rope, to distribute the oil.
5. Install the spark plug but **do not** install the spark plug wire.

General

1. Clean the lawn mower housing. Refer to *Cleaning the Underside of the Lawn Mower Housing* on page 16.
2. Clean any dirt and chaff from the cylinder, cylinder head fins, and blower housing.
3. Remove grass clippings, dirt, and grime from the external parts of the engine, the shrouding, and the top of the lawn mower housing.
4. Check the condition of the blade. Refer to *Maintaining the Cutting Blade* on page 18.
5. Tighten all nuts, bolts, and screws.
6. Lubricate the wheels. Refer to *Lubricating the Self-propelled Drive* on page 19.
7. Touch up all rusted or chipped paint surfaces with paint available from an Authorized Service Dealer.

Folding the Handle

IMPORTANT: Fold the handle carefully so that you do not pull, crimp, or in any way damage the cables.

IMPORTANT: Do not remove or loosen the knobs that secure the lower handle to the swing bracket. Do not fold the upper handle backward.

1. Loosen the knobs that secure the upper handle.
2. Carefully swing the upper handle forward until it rests on the engine (Fig. 28).

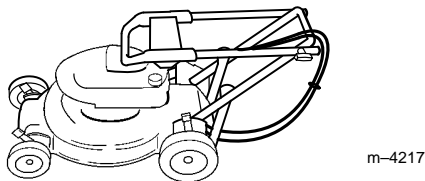


Figure 28

Removing From Storage

1. Carefully unfold the upper handle until it nests with the lower handle, then tighten the knobs.

IMPORTANT: Be extremely careful when unfolding the handle so that you do not pull, crimp, or in any way damage the control cables.

2. Check and tighten all fasteners.
3. Remove the spark plug (Fig. 7) and spin the engine rapidly using the starter to remove the excess oil from the cylinder.
4. Clean the spark plug or replace it if it is cracked, broken, or if the electrodes are worn.
5. Install the spark plug and torque it to 15 ft-lb (20 N·m).
6. Perform the recommended maintenance procedures; refer to *Maintenance* on page 15.
7. Fill the fuel tank (Fig. 7) with fresh gasoline.
8. Check the engine oil level. Refer to *Checking the Engine Oil Level* on page 16.
9. Install the wire onto the spark plug.

Accessories

You may purchase the following accessories from your Authorized Service Dealer:

- Side Discharge Kit
- Spark Arrestor
- Dethatcher Kit

